

Bunk bed

SAFETY WARNINGS

1. Follow the information on the warnings appearing on the upper bunk end structure and on the carton.
2. Always use the recommended size mattress or mattress support, or both, to help prevent the likelihood of entrapment or falls.
3. Surface of mattress must be at least 5 inches (127mm) below the upper edge of guardrails.
4. Do not allow children under 6 years of age to use the upper bunk.
5. Prohibit more than one person on the upper bunk.
6. Periodical, check and ensure that the guardrail, ladder, and other components are in their proper position, free from damage, and that all connectors are tight.
7. Do not allow horseplay on or under the bed and prohibit jumping on the bed.
8. Always use the ladder for entering and leaving the upper bunk.
9. Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.
10. Use of a nightlight may provide added safety precaution for a child using the upper bunk.
11. Always use guardrails on both long sides of the upper bunk. If bunk bed will be placed next to the wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.
12. The use of water or sleep flotation mattresses is prohibited.
13. Keep these instructions for future reference.

STRANGULATION HAZARD – Never attached or hang items to any part of the bunk bed that are not designed for use with the bed; for example, but not limited to, hooks, belts and jump ropes.






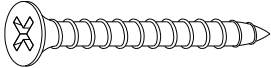
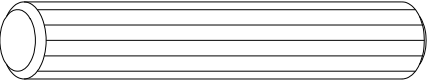
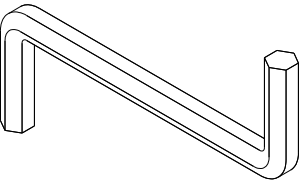
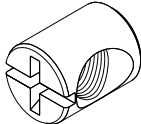
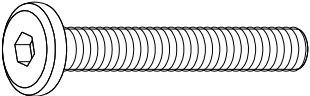
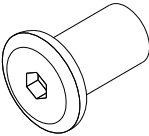

SIZE OF MATTRESS AND FOUNDATION

Use only mattress which is 74" - 75" long and 37 ½" - 38 ½" wide on twin upper bunk

Ensure thickness of mattress and foundation combined doesn't exceed 8" and mattress is at least 5" below upper edges of guardrails.



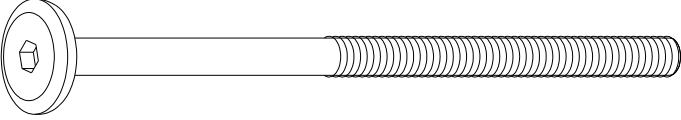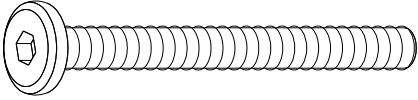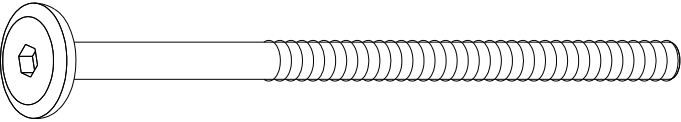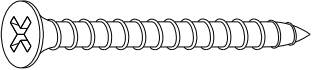



BUNK BED ASSEMBLY MANUAL


HARDWARE LIST

1	 <p>◆1/4" x 100mm</p> <p>JOINT CONNECTOR (4mm HEX HEAD) 16 PCS</p>		2	 <p>◆6.5mm x 48mm</p> <p>WOOD JOINT CONNECTOR (4mm HEX HEAD) 20 PCS</p>	
3	 <p>◆6.5mm x 100mm</p> <p>WOOD JOINT CONNECTOR (4mm HEX HEAD) 24 PCS</p>		4	 <p>◆4mm x 35mm</p> <p>FLAT HEAD SCREW 52 PCS</p>	
5	 <p>◆10mm x 100mm</p> <p>METAL DOWEL 4 PCS</p>		6	 <p>◆4mm x 30mm</p> <p>FLAT HEAD SCREW 6 PCS</p>	
7	 <p>◆10mm x 50mm</p> <p>WOOD DOWEL 40 PCS</p>		8	 <p>HEX KEY 1 PC</p>	
9	 <p>◆11.8mm x 15mm</p> <p>BARREL NUT 16 PCS</p>		10	 <p>◆1/4" x 32mm</p> <p>JOINT CONNECTOR (4mm HEX HEAD) 2 PCS</p>	
11	 <p>◆9mm x 17mm</p> <p>HEX CAP 2 PCS</p>		12	 <p>◆3.5mm x 19mm</p> <p>FLAT HEAD SCREW 2 PCS</p>	

BUNK BED ASSEMBLY MANUAL



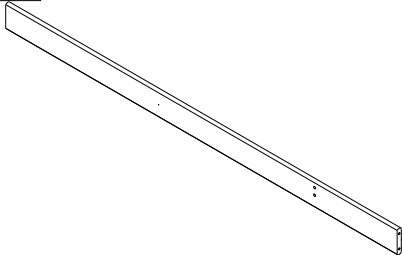
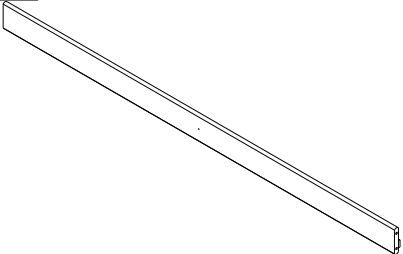
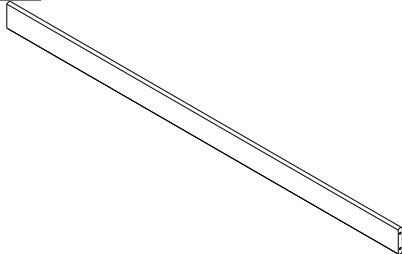
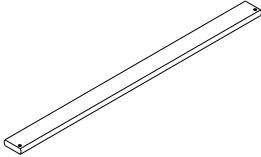
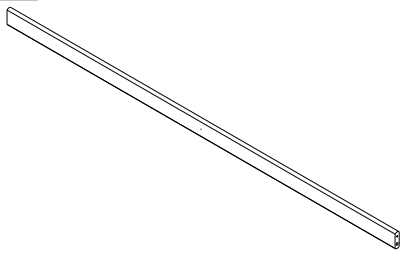
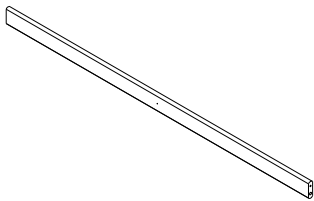




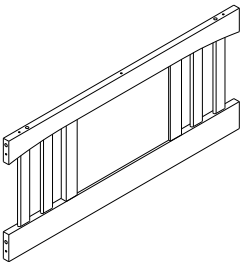
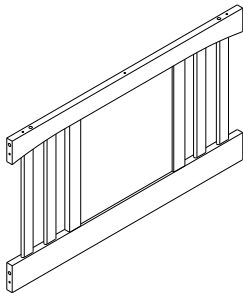

PARTS LIST

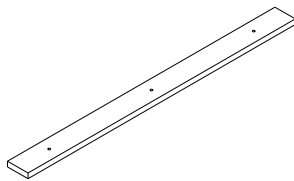A 	B 	C 
TOP POST 2 PCS	TOP POST 1 PC	TOP POST 1 PC
D 	E 	F 
BOTTOM POST 2 PCS	BOTTOM POST 2 PCS	UPPER HEADBOARD TOP CAP 2 PCS

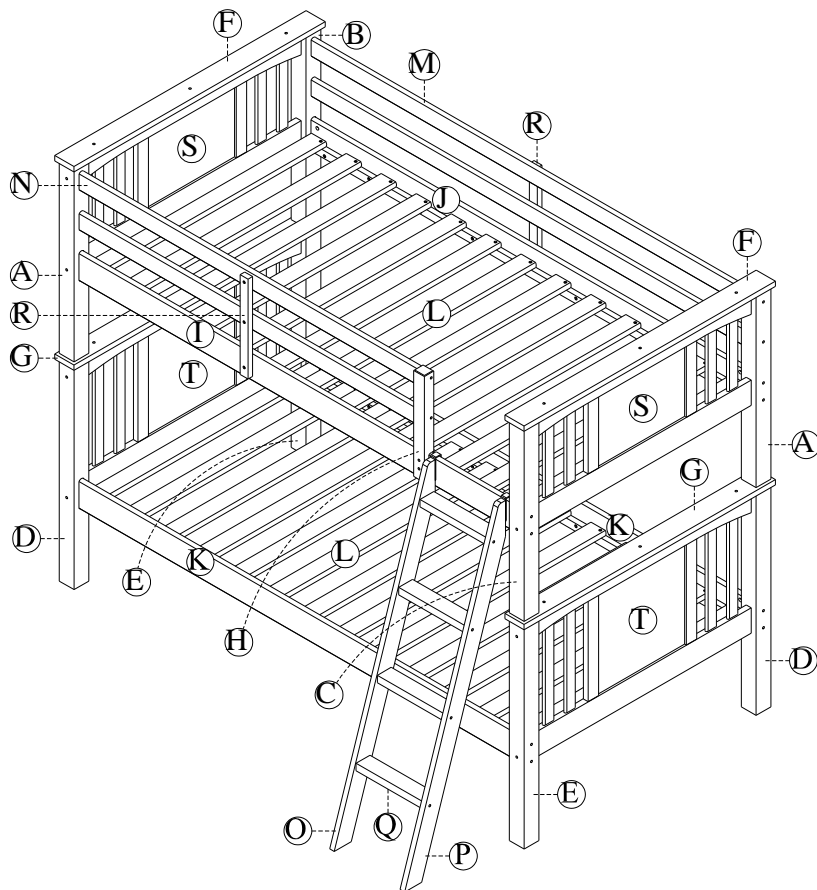


BUNK BED ASSEMBLY MANUAL

PARTS LIST

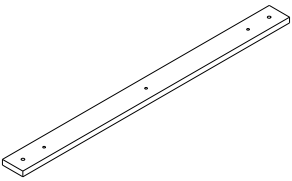G 	H 	I 
LOWER HEADBOARD TOP CAP 2 PCS	SHORT GUARDRAIL POST 1 PC	TOP FRONT SIDE RAIL 1 PC
J 	K 	L 
TOP BACK SIDE RAIL 1 PC	BOTTOM SIDE RAIL 2 PCS	SLAT 26 PCS
M 	N 	O 
LONG GUARDRAIL 2 PCS	SHORT GUARDRAIL 2 PCS	LEFT LADDER END 1 PC
P 	Q 	R 
RIGHT LADDER END 1 PC	LADDER STEP 4 PCS	GUARDRAIL LEG 2 PCS
S 	T 	U 
TOP HEADBOARD ASSEMBLY 2 PCS	BOTTOM HEADBOARD ASSEMBLY 2 PCS	SPACE BLOCK 3 1/4 2 PCS

BUNK BED ASSEMBLY MANUAL

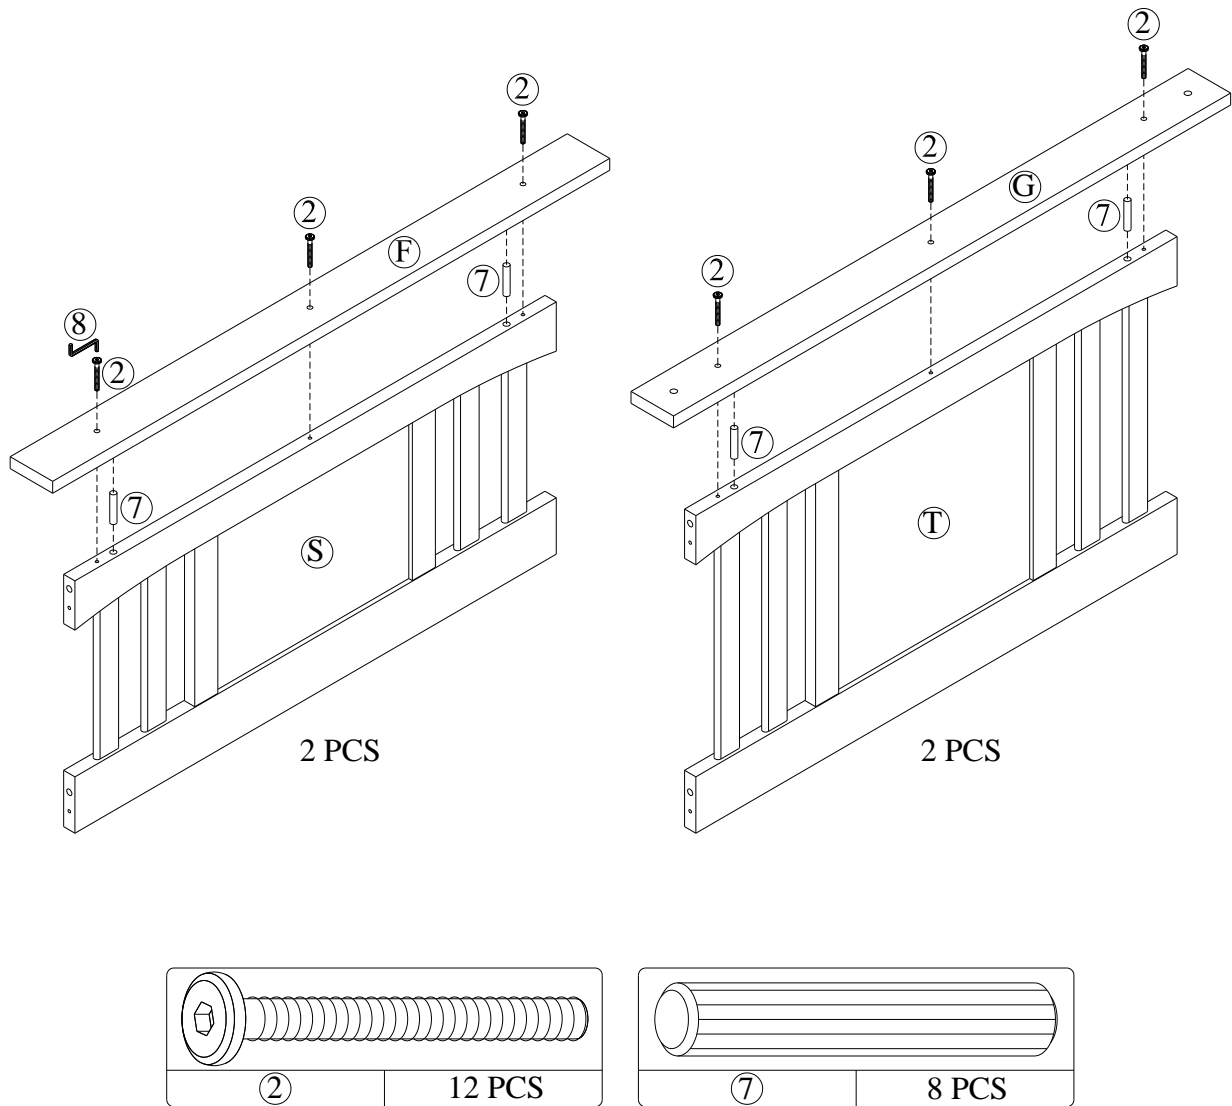


STEP 1

Insert wood dowels (7) into the large holes of the top headboard assembly (S), Attach upper headboard top cap (F) to top headboard assembly (S) using wood joint connectors (2) as shown. Tighten the wood joint connectors (2) with the hex key (8).

Insert wood dowels (7) into the large holes of the bottom headboard assembly (T), Attach lower headboard top cap (G) to bottom headboard assembly (T) using wood joint connectors (2) as shown. Tighten the wood joint connectors (2) with the hex key (8).

BUNK BED ASSEMBLY MANUAL

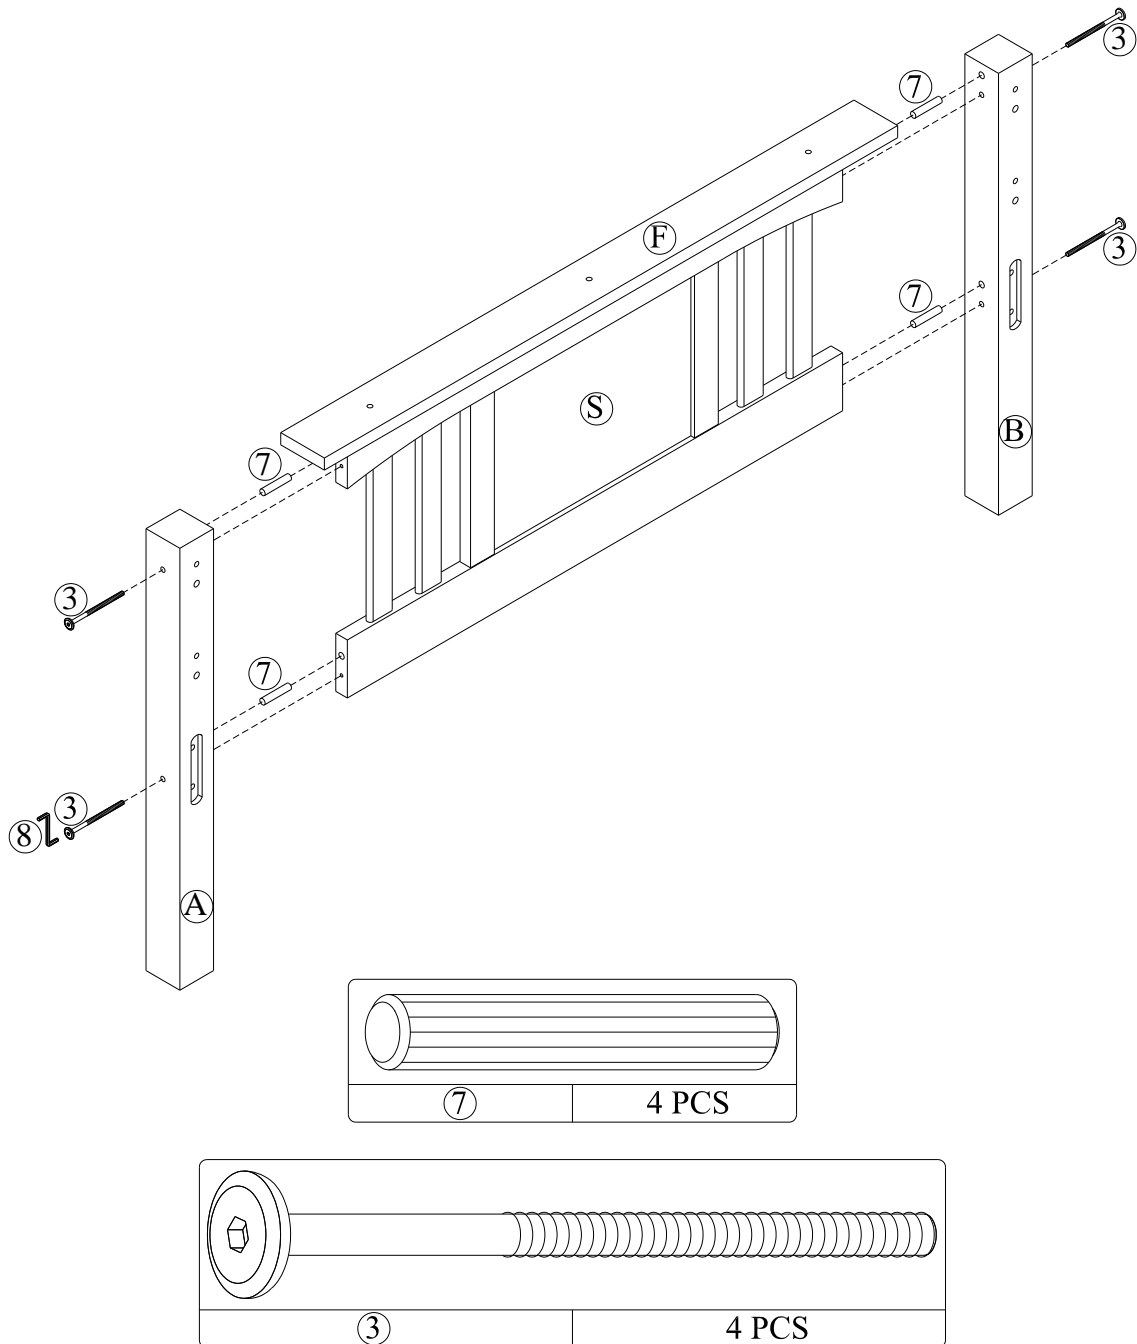


STEP 2

Insert wood dowels (7) into the end holes of the top headboard assembly (S). Attach top posts (A) and (B) to the top headboard assembly (S) using wood joint connectors (3) as shown. Tighten the wood joint connectors (3) with the hex key (8).

One of the top headboard assembly (S) has a warning label on it, do not use it in this step.

BUNK BED ASSEMBLY MANUAL



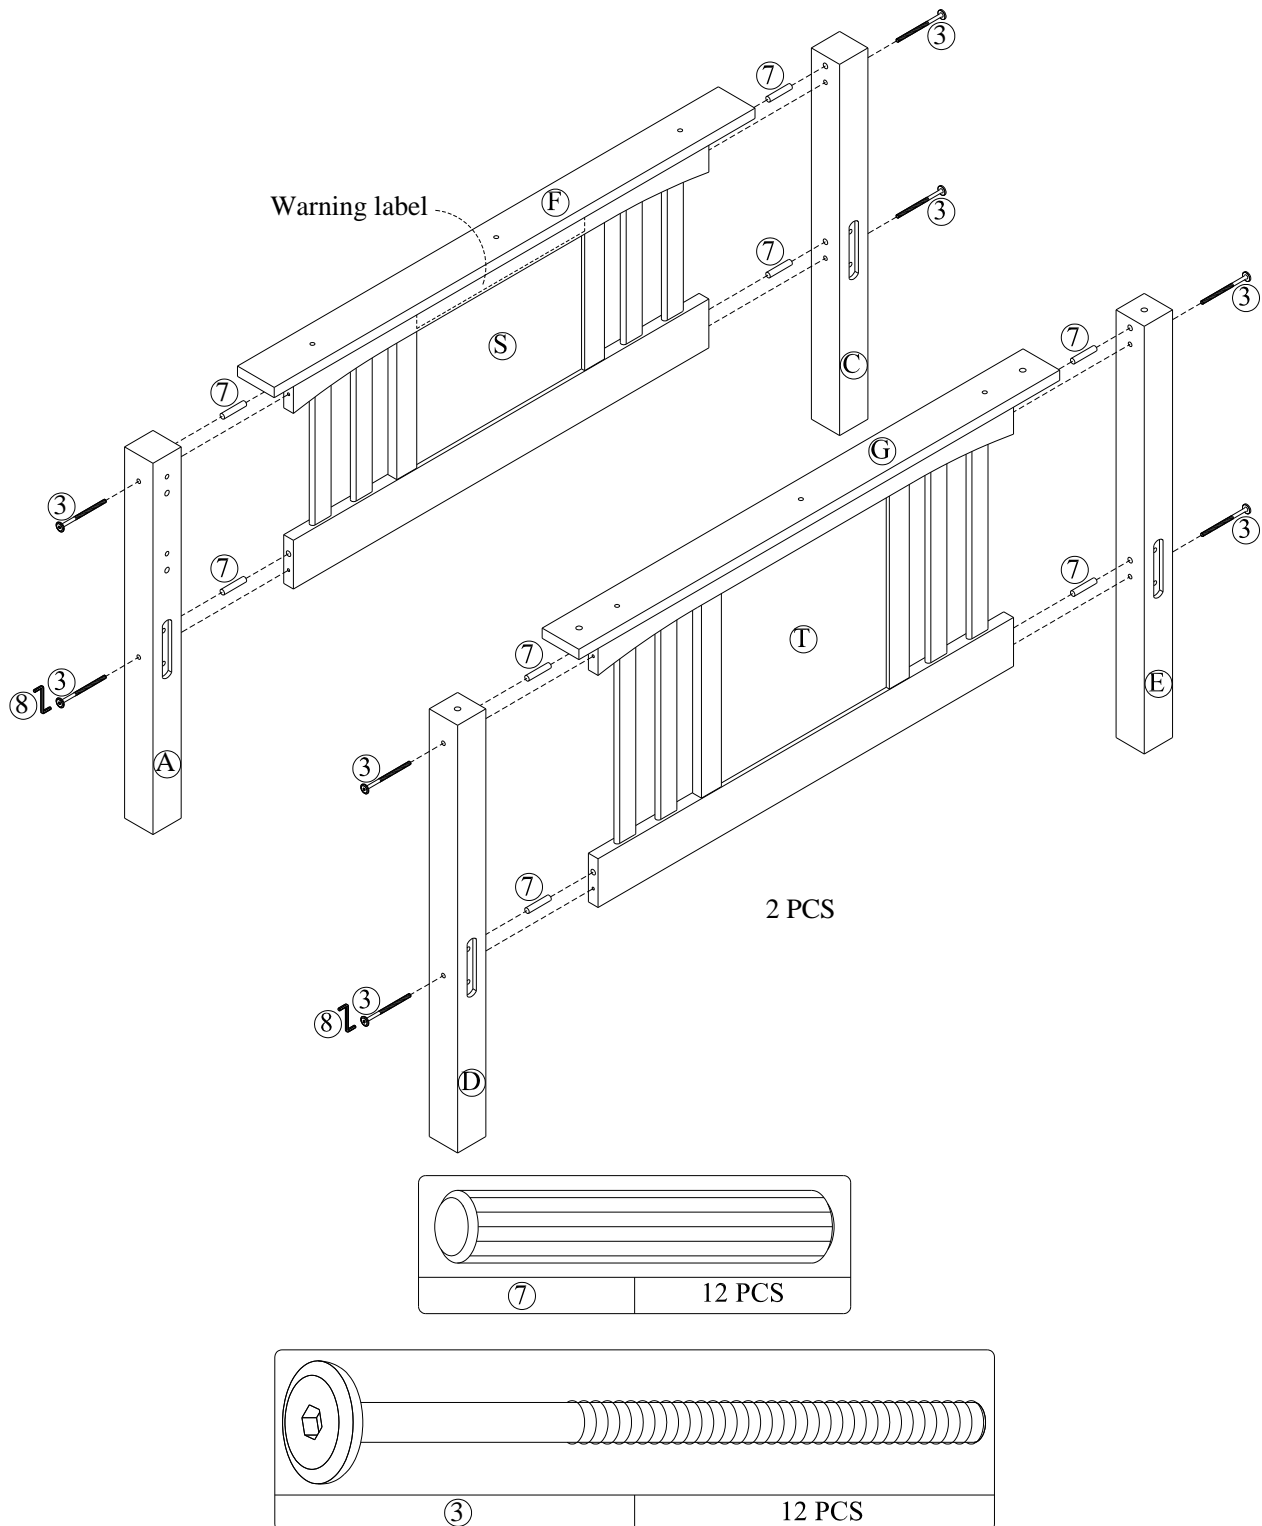


STEP 3

Repeat the previous step to assemble the remaining three sets of headboards. Be sure to pair the bottom posts (D) and (E) for one pair; (E) and (D) for another; and the top posts (C) and (A) for the last pair.

NOTE: Be sure to use top headboard assembly (S) with warning label attached to it between top posts (A) and (C). See illustration for label orientation.

BUNK BED ASSEMBLY MANUAL

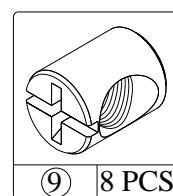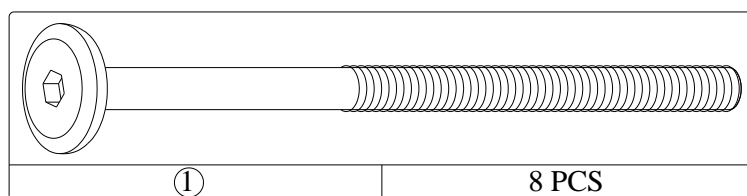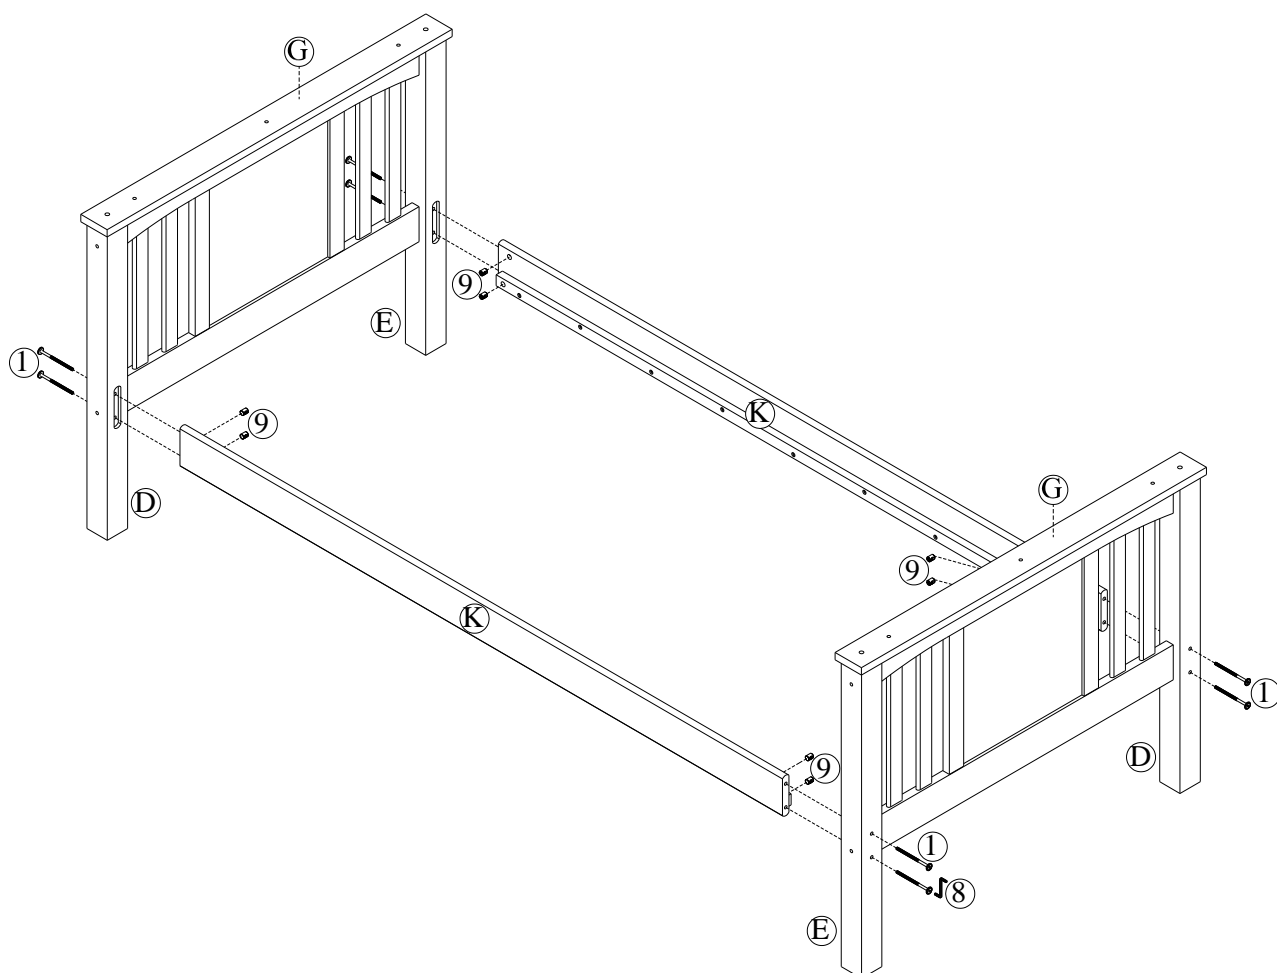


STEP 4

Attach the two headboards with bottom posts (D and E) to bottom side rails (K) using joint connectors (1) and barrel nuts (9) as shown. Tighten the joint connectors (1) with the hex key (8).

Note: This is the lower bunk.


BUNK BED ASSEMBLY MANUAL

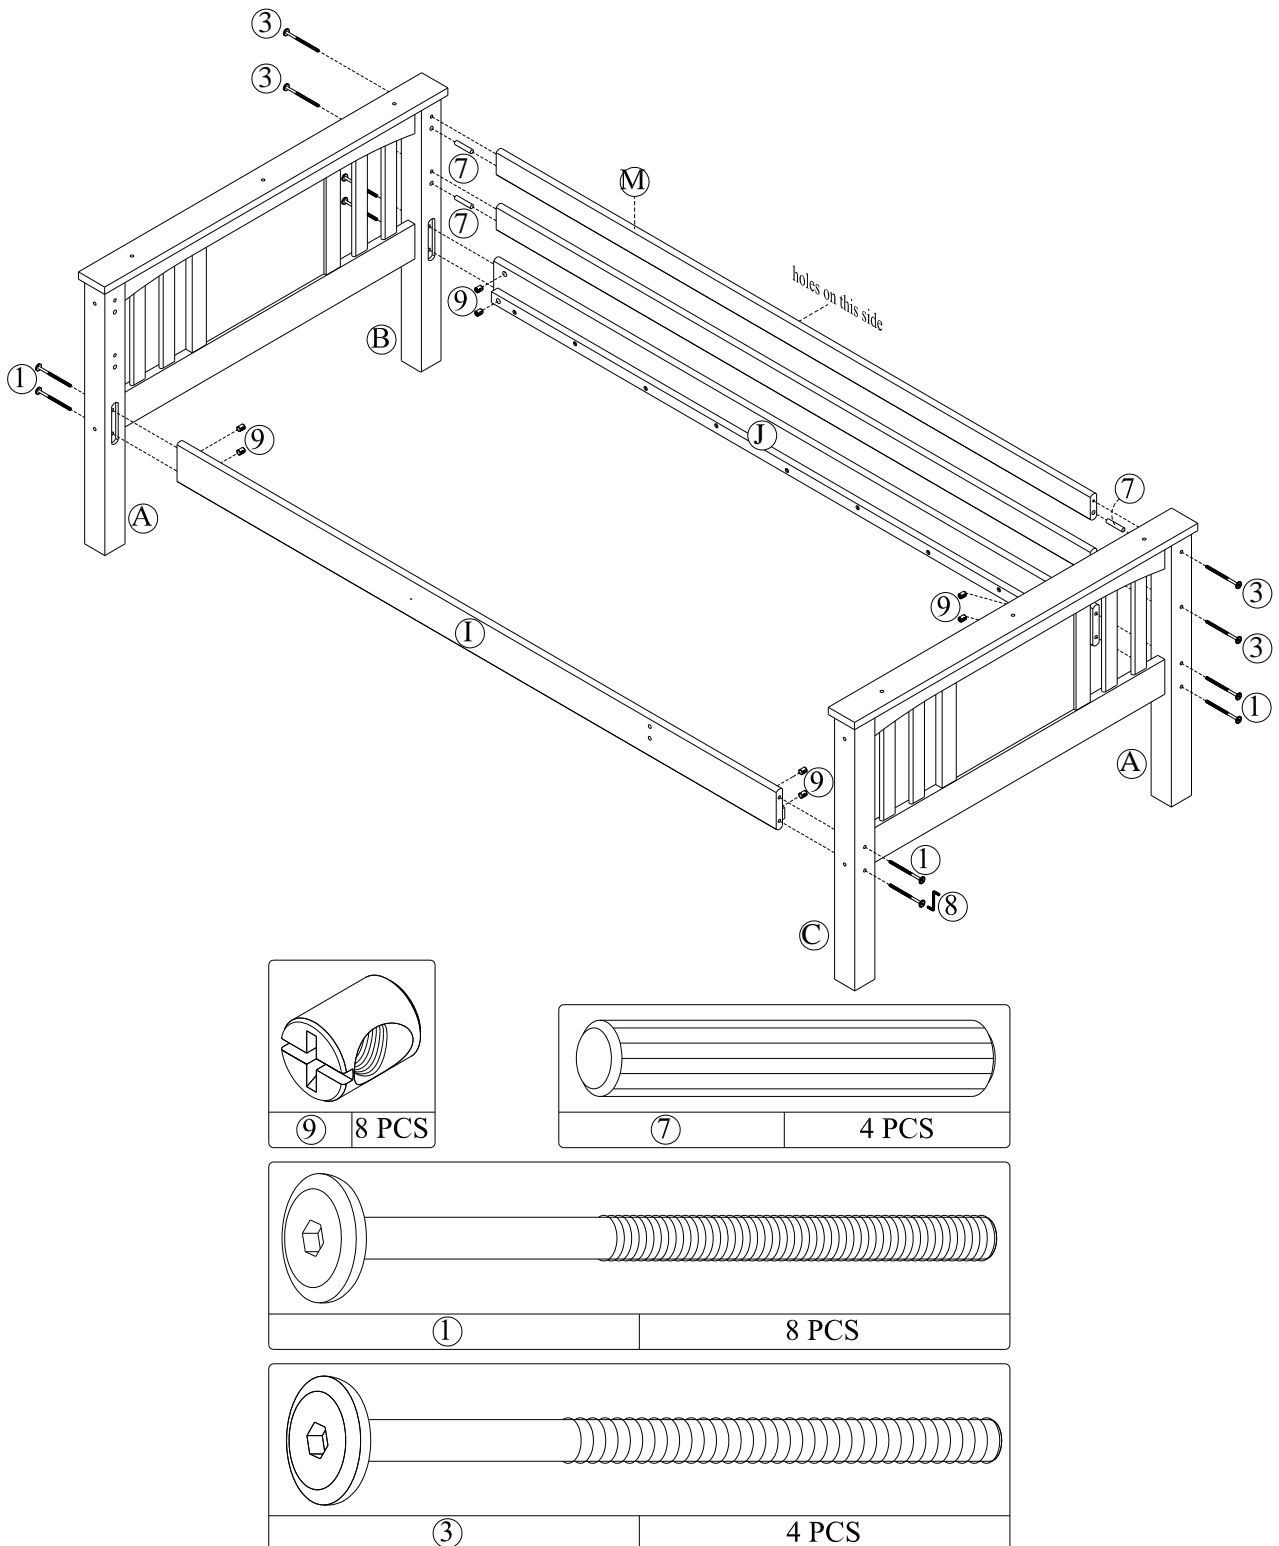

STEP 5

Insert a wood dowel (7) into each end of the long guardrails (M). Attach two long guardrails (M) and two top side rails (I and J) to top posts (A and B) & (A and C) as shown. Fasten top side rails (I and J) with joint connectors (1) and barrel nuts (9). Fasten long guardrails (M) with wood joint connectors (3). Tighten the joint connectors (1) and wood joint connectors (3) with the hex key (8).

BUNK BED ASSEMBLY MANUAL

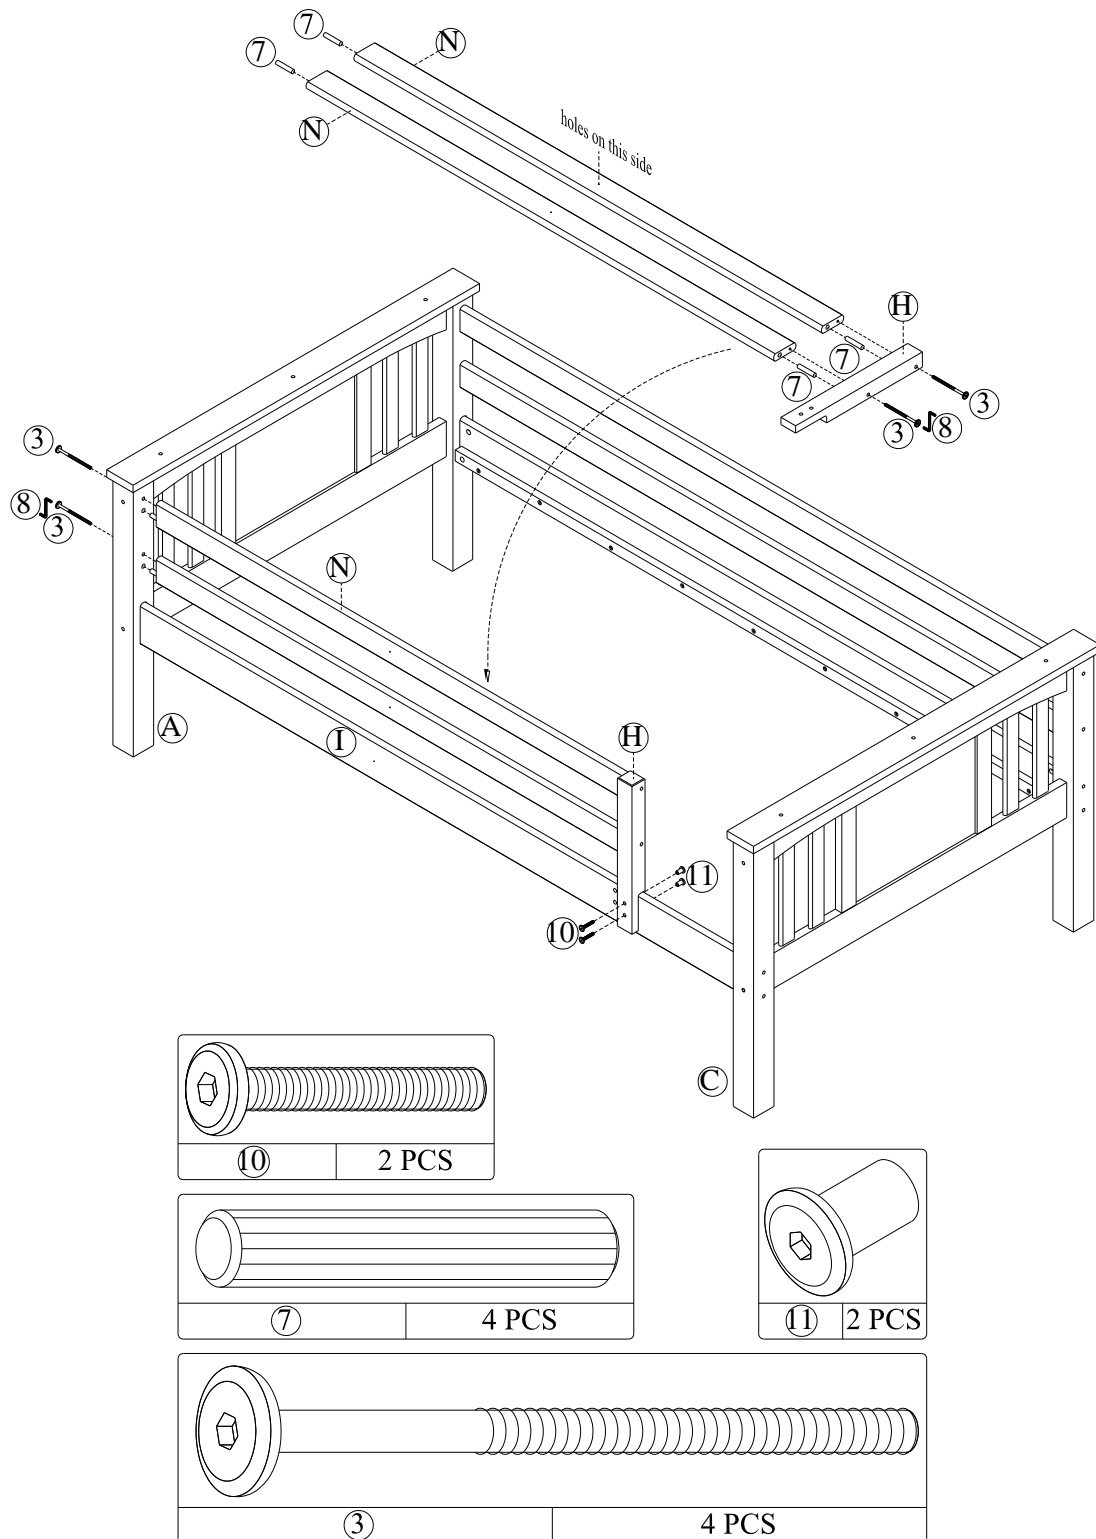


STEP 6

Insert wood dowel (7) into each end of the short guardrails (N). Attach two short guardrails (N) to short guardrail post (H) with wood joint connectors (3) as shown.


Fasten two short guardrails (N) to top post (A) with wood joint connectors (3). Fasten the short guardrail post (H) to top front side rail (I) with joint connectors (10) and hex cap (11) as shown.

BUNK BED ASSEMBLY MANUAL

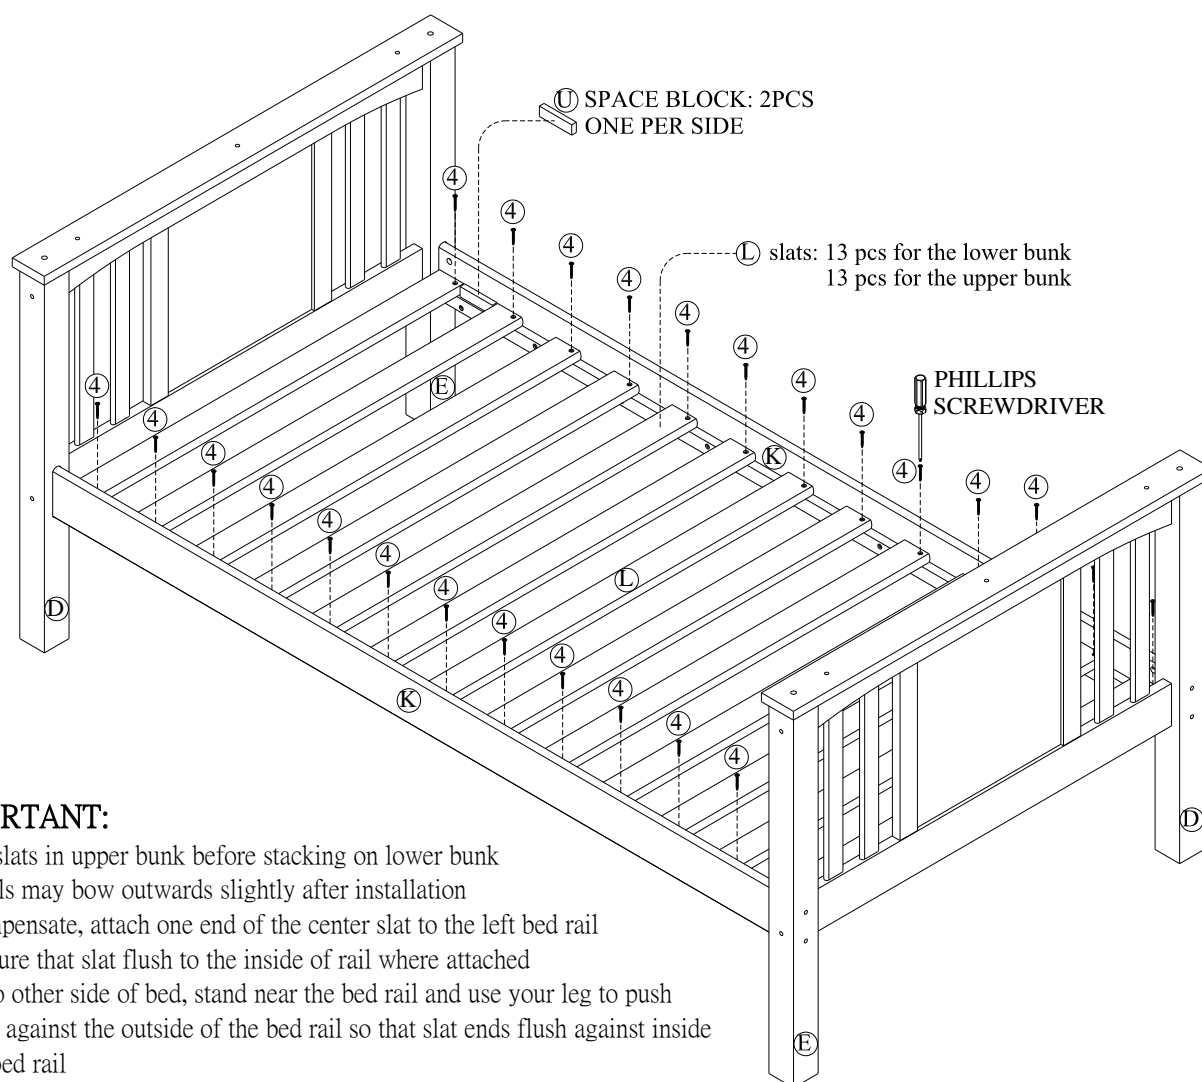

IMPORTANT:

Install slats in upper bunk before stacking on lower bunk
 Bed rails may bow outwards slightly after installation
 To compensate, attach one end of the center slat to the left bed rail
 Make sure that slat flush to the inside of rail where attached
 Walk to other side of bed, stand near the bed rail and use your leg to push slightly against the outside of the bed rail so that slat ends flush against inside of the bed rail
 Insert screw through slat and attach while keeping the gap flush with your leg

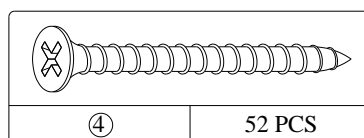


STEP 7

Attach a slat (L) onto bottom side rails (K) of the bottom bunk with flat head screws (4). Make sure the slat touches the corner posts (as close to the headboard as possible). Attach the other slats (L) onto the bottom side rails (K) with flat head screws (4). Use space block (U) to space them out evenly. Use Phillips screwdriver (not included) to tighten flat head screws.

Repeat this process for the top bunk.

NOTE: If you notice that any of the slats (L) are not perfectly flat, be sure to assemble them so that the slats (L) curves up in the middle and down on the ends.




BUNK BED ASSEMBLY MANUAL

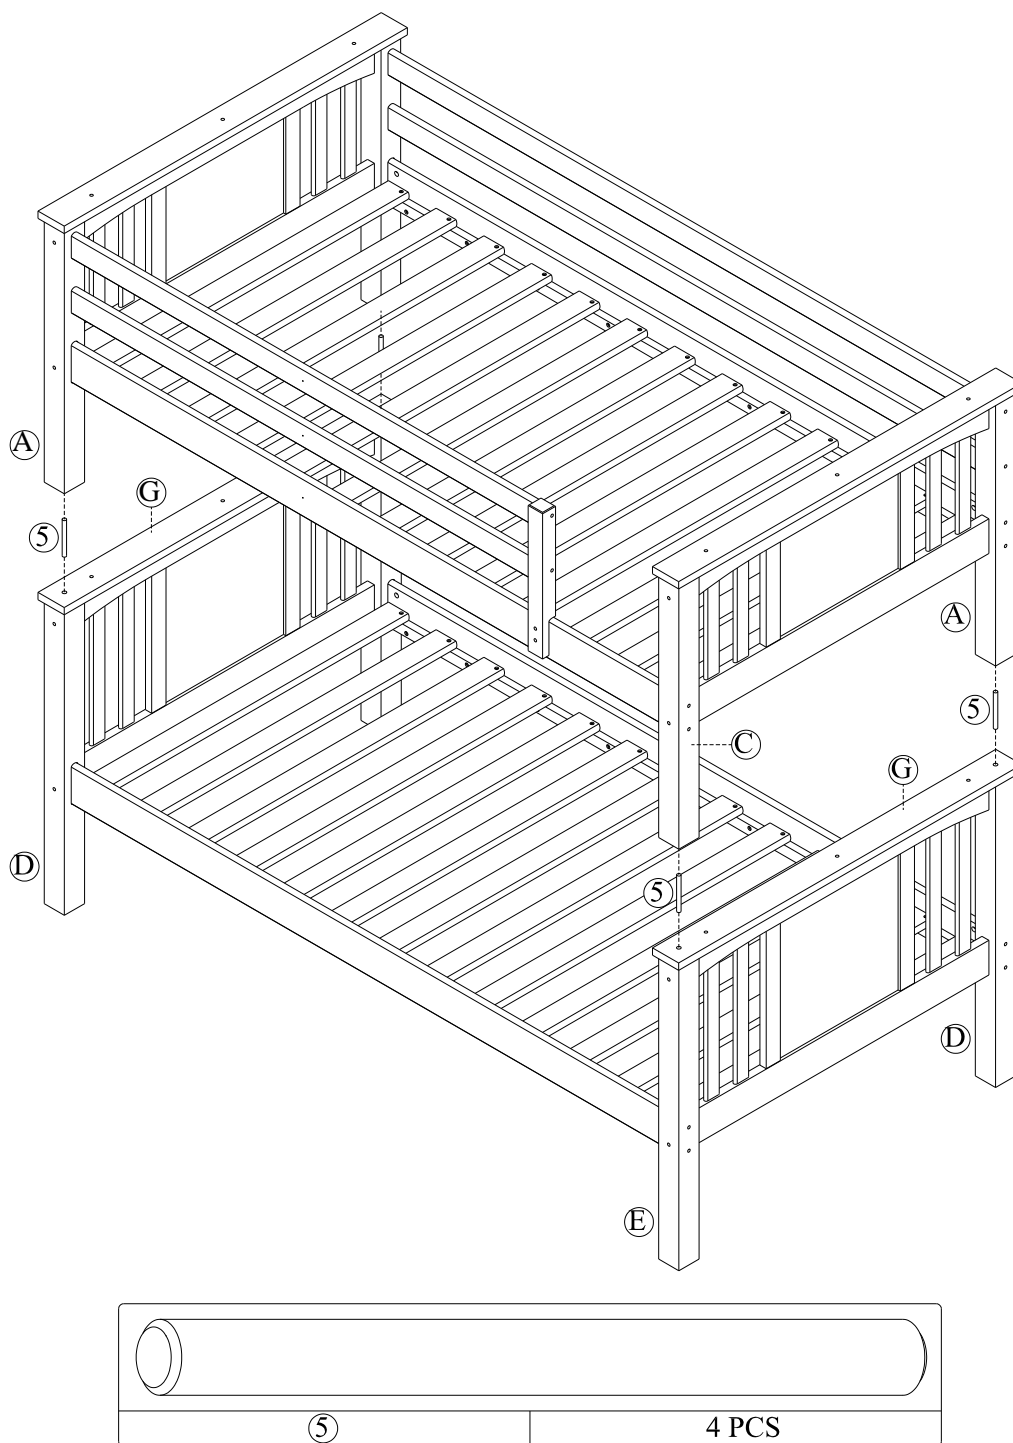

STEP 8

Place four metal dowels (5) into the holes in the lower headboard top cap (G). Stack the top bunk onto the bottom bunk with the help of another person.


BUNK BED ASSEMBLY MANUAL

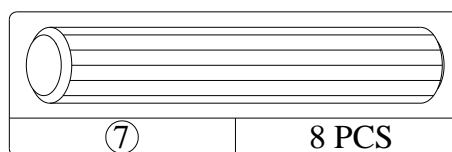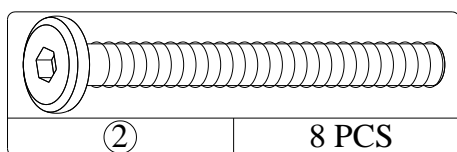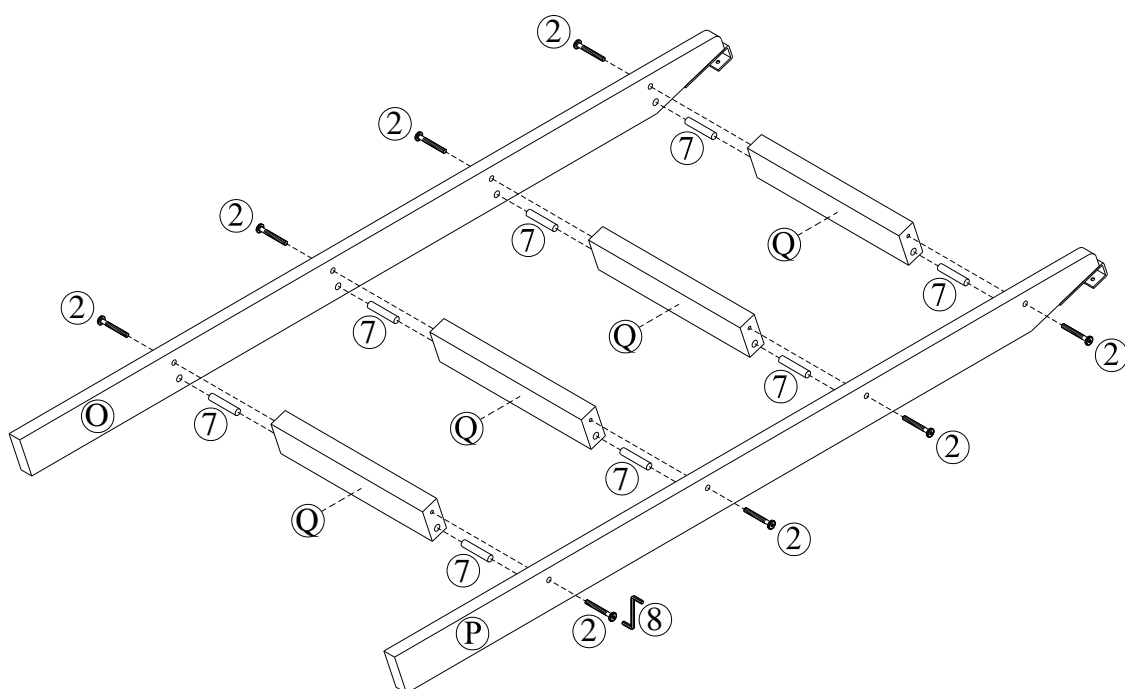

STEP 9

To assemble the ladder, insert wood dowels (7) into the end of the ladder steps (Q). Attach left ladder end (O) and right ladder end (P) to ladder steps (Q) with wood joint connectors (2). Tighten the wood joint connectors (2) with the hex key (8).

BUNK BED ASSEMBLY MANUAL

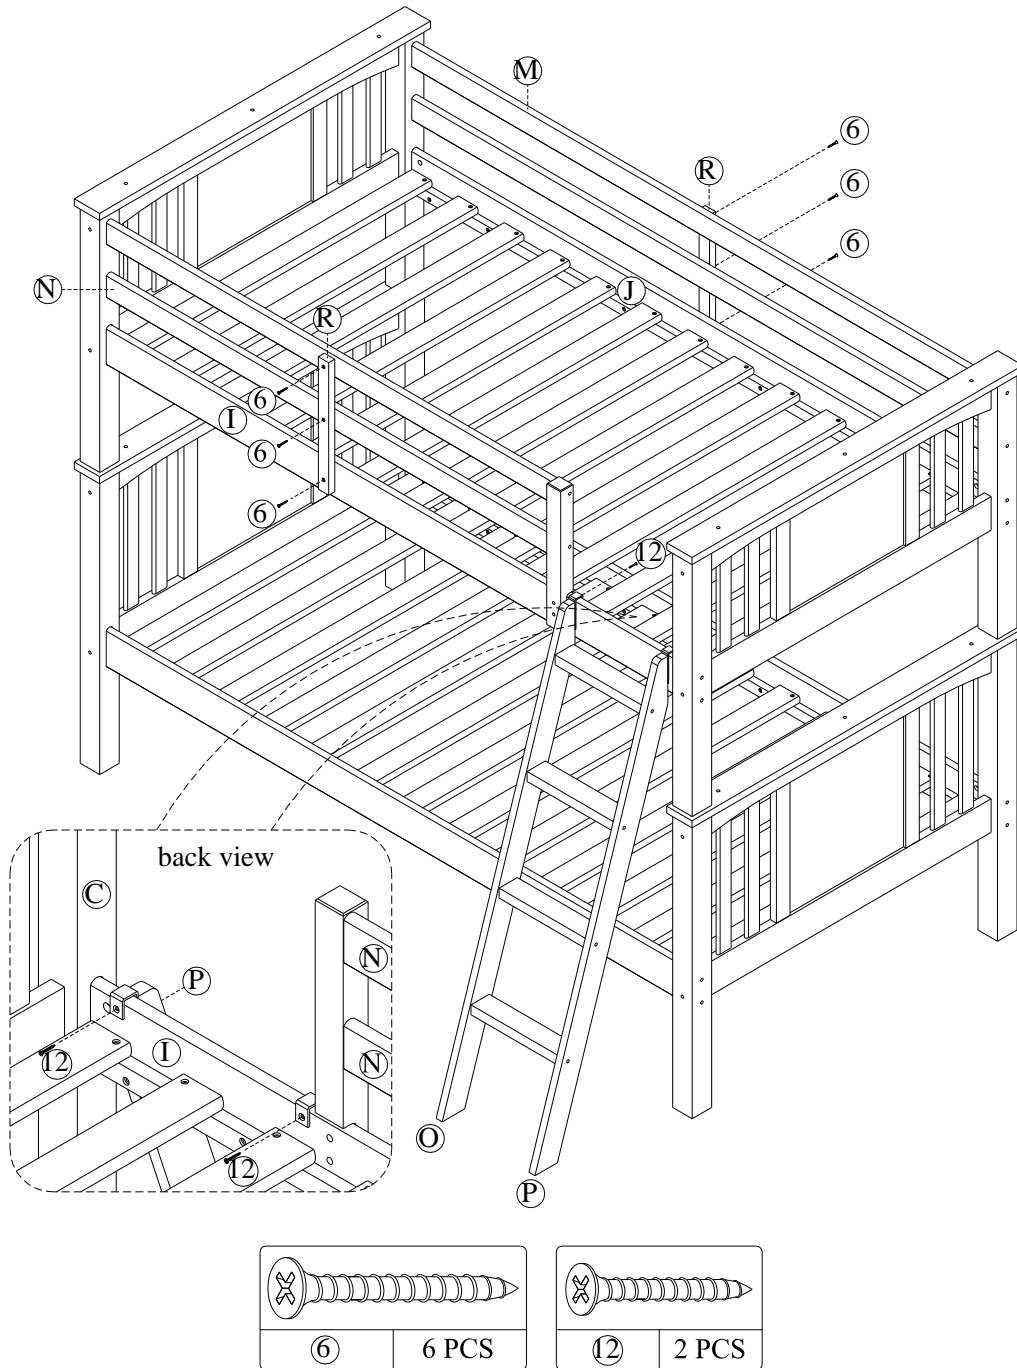


STEP 10

Attach the guardrail leg (R) to the short guardrails (N) and top front side rail (I) with flat head screws (6). Attach another guardrail leg (R) (on the other side of the bed) to long guardrails (M) and top back side rail (J) with flat head screws (6) as shown. Use Phillips screwdriver (not included) to tighten flat head screws.

Attach the ladder to the top front side rail (I) with flat head screw (12) as shown.

Instructions for Converting the bunk bed into two single beds

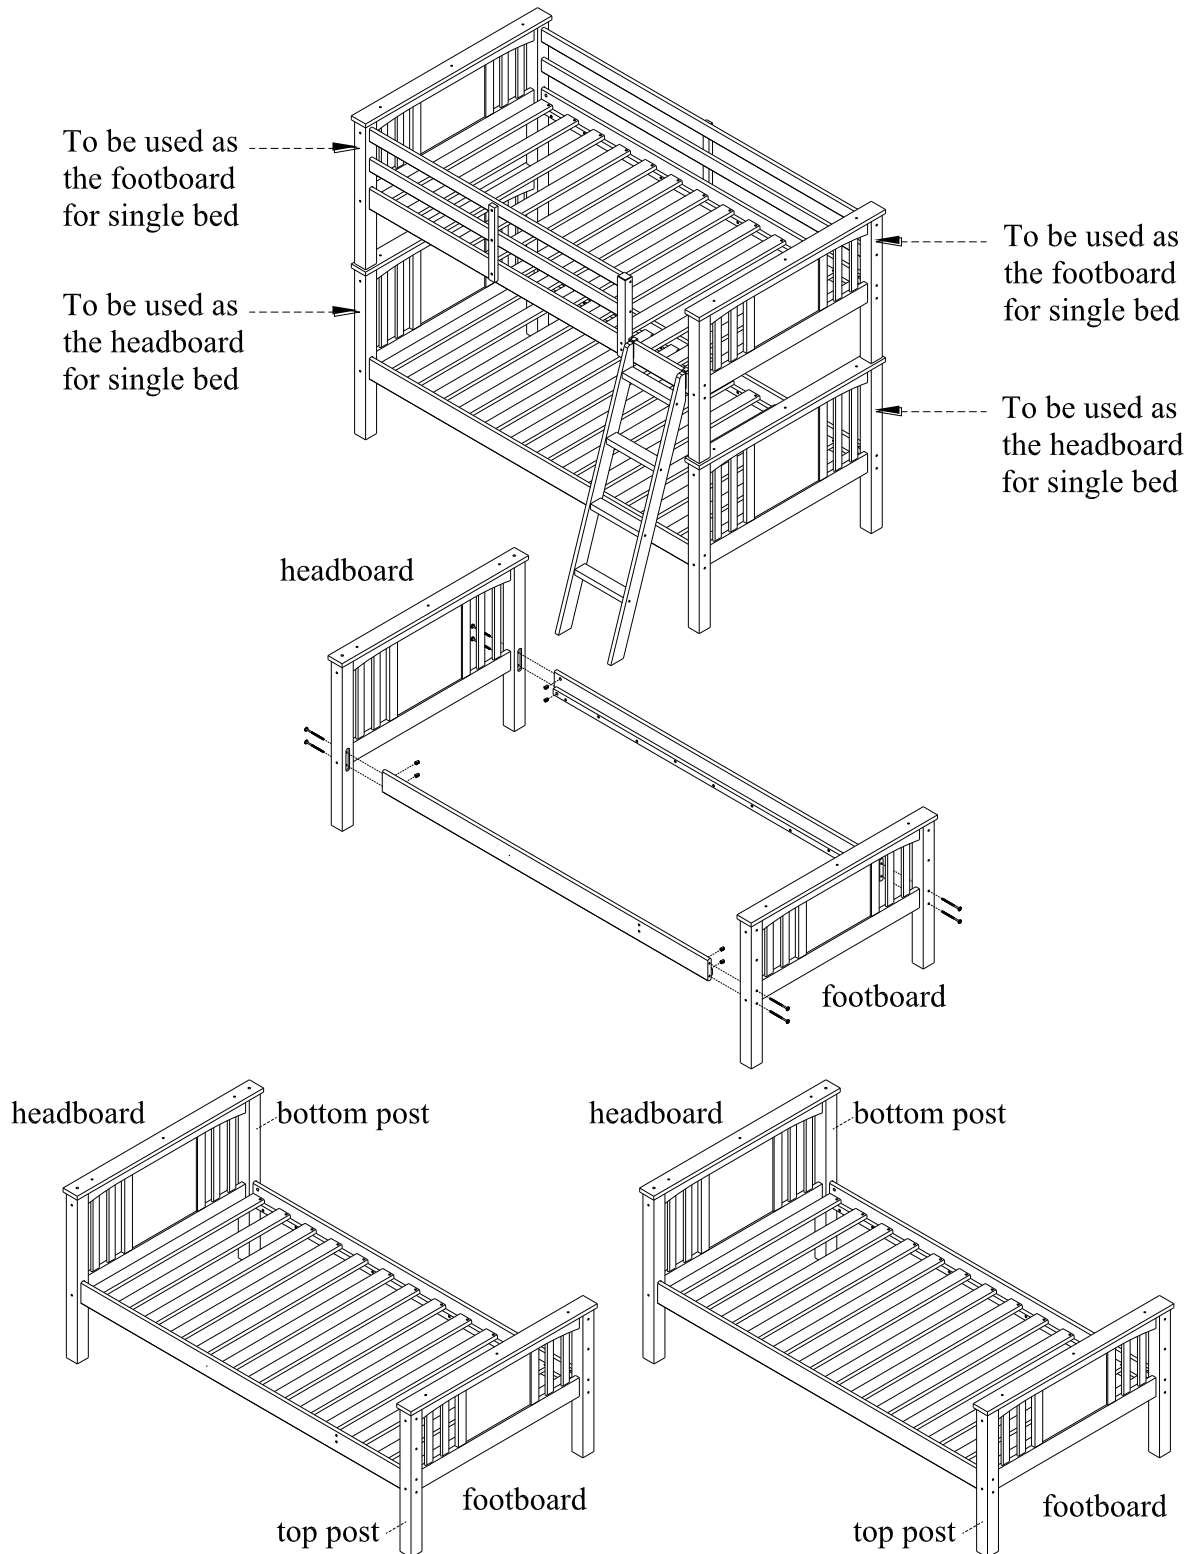

Remove the ladder and all the guardrails.

With the help of another person, remove the top bunk from the lower bunk.

Disassemble the side rails from all headboards (top and lower bunks).

Re-assemble the headboards (with tall posts) and footboards (with short posts) to side rails.

Note: Switching the headboards will allow the two single beds to be identical (the headboards will have taller posts and the footboards will have the shorter posts).