
ASSEMBLY INSTRUCTIONS
BATH VANITY-CABINET

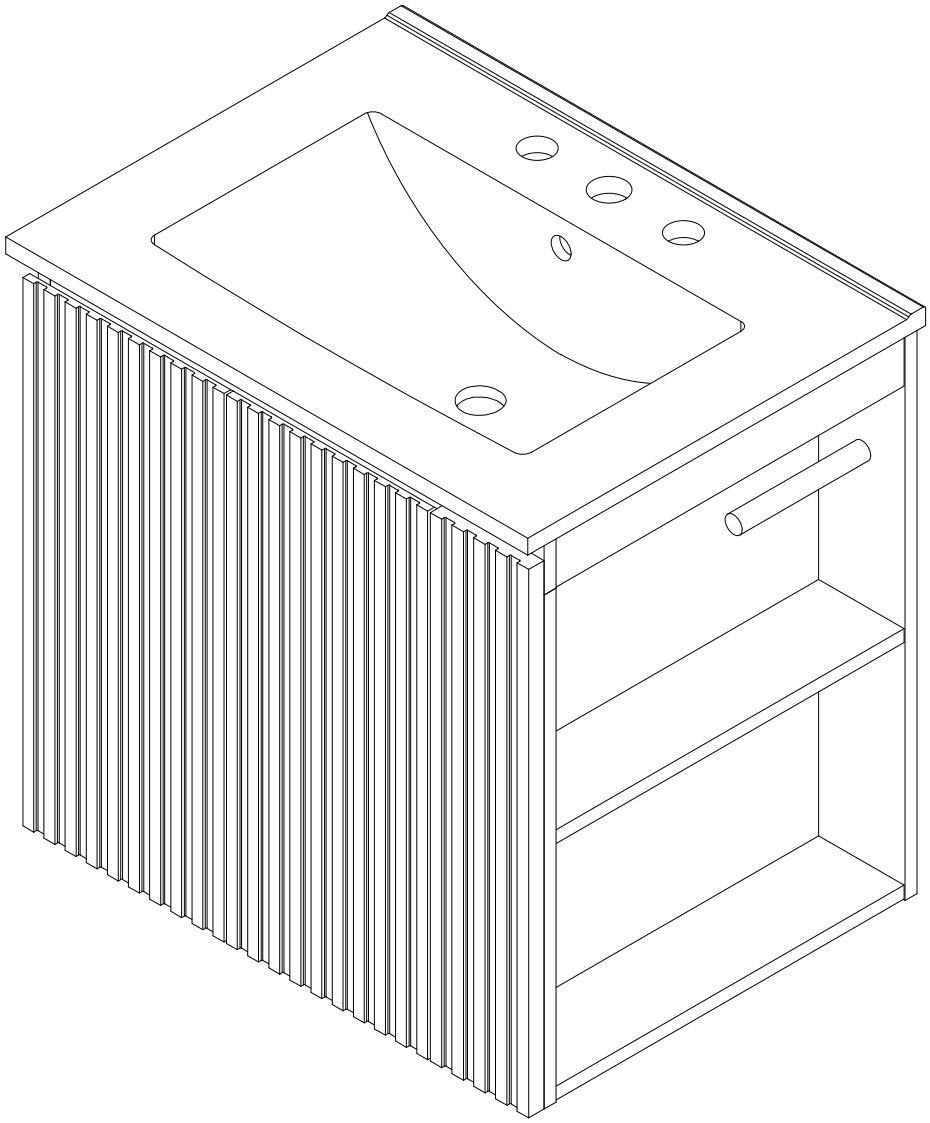

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.
Compare with the parts list to be sure all parts are present.
DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED

* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.







Tools Required


(Not included)


(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE



Please do not return this product to the retailer!!
We are able to assist you in ANY way

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Before Installation

Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly,and follow the assembly steps to assemble your newly purchased product correctly and efficently.

Cam Lock Assembly Instructions





Diagram A

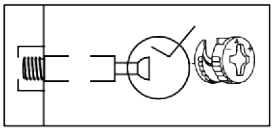

Insert Cam Bolt into hole as shown in diagram A.





Diagram B

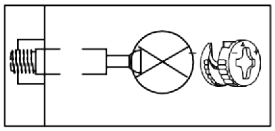

Make sure not to insert the Cam Bolt:
Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.







Diagram C

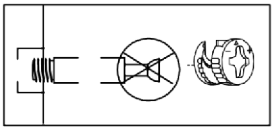


Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.

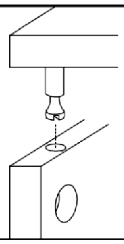

Connect the panels together.

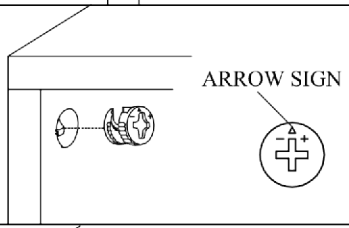


Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.

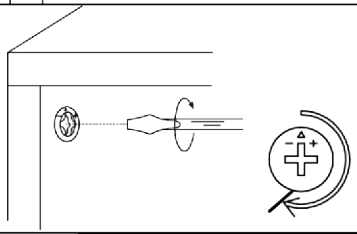


















To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver.
**Do not use an automatic screwdriver as it may bend or break if too much power is imposed.*

Detail View

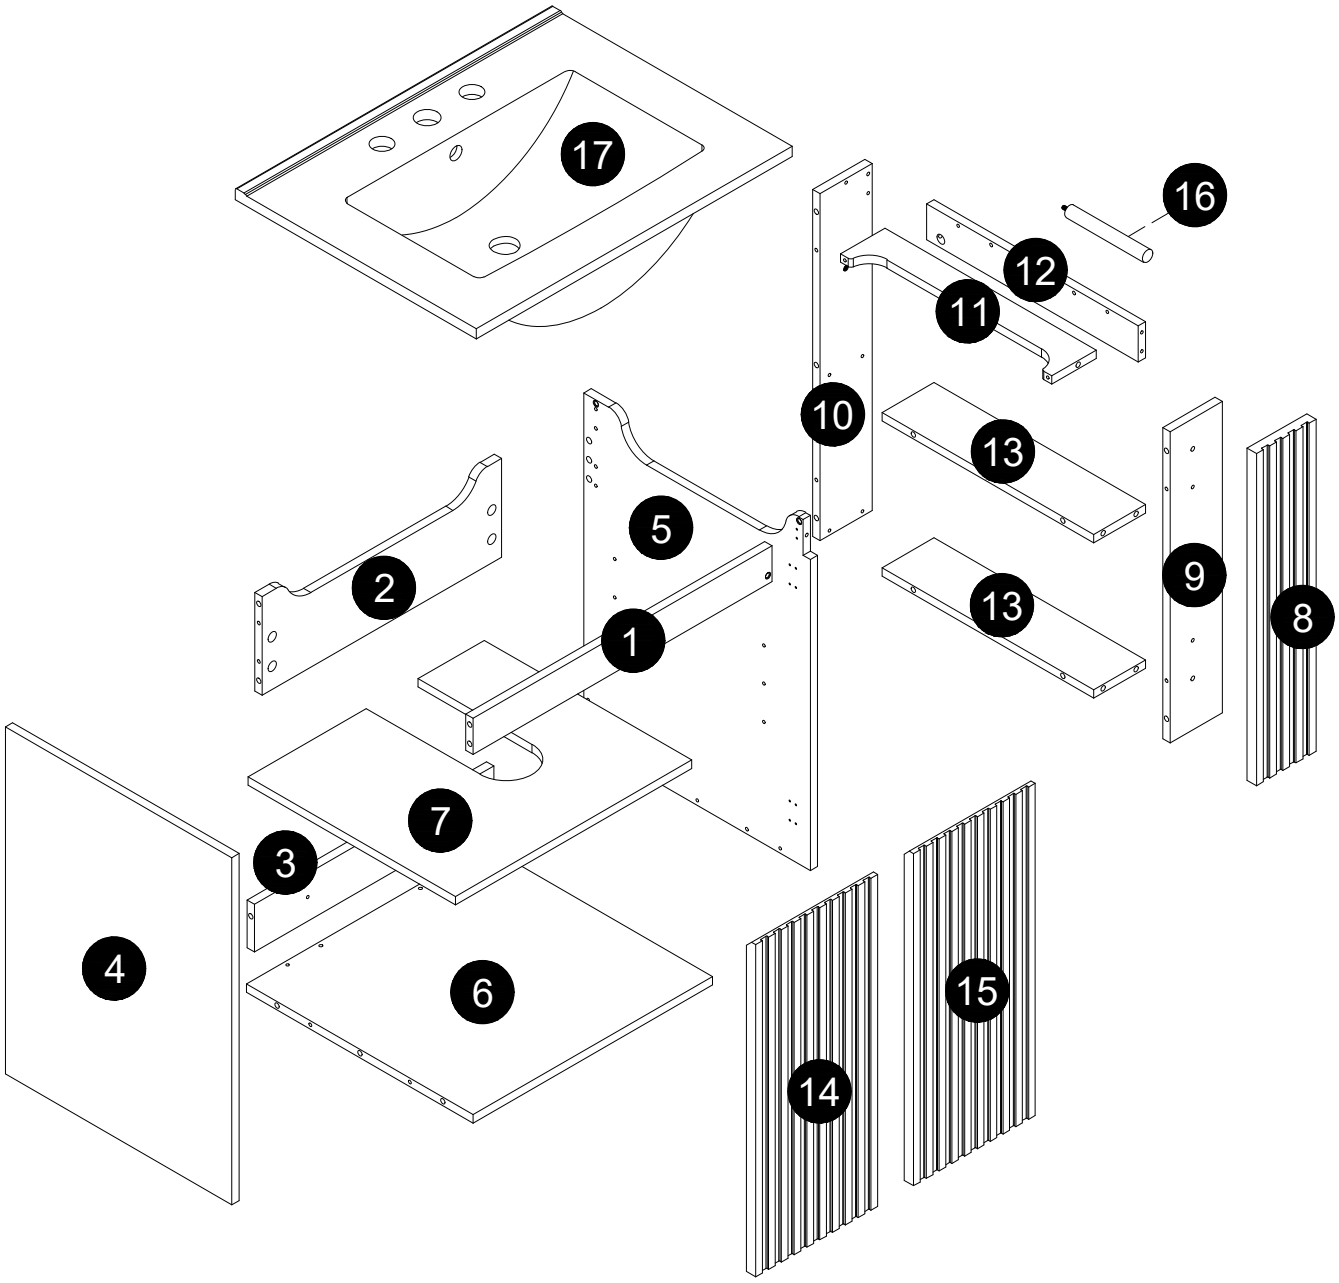


Note:Don't tighten all screws during installation.


Part Lists

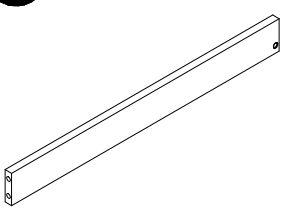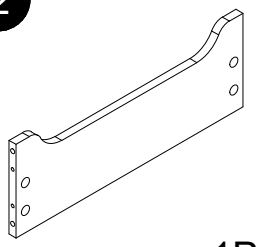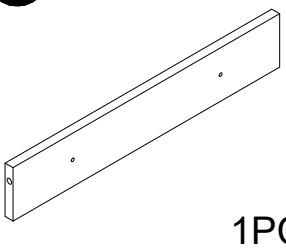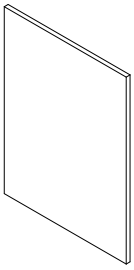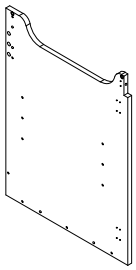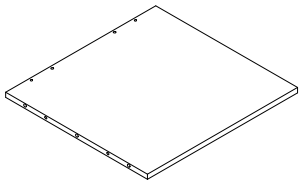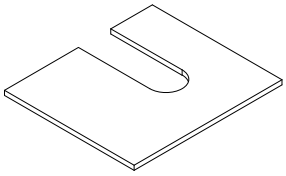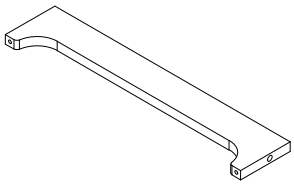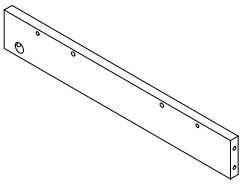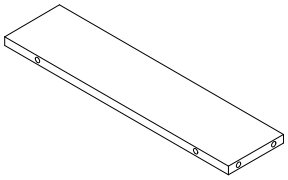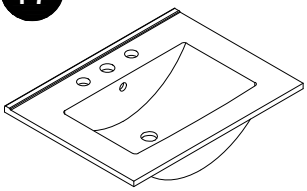1  1PC	2  1PC	3  1PC	4  1PC
5  1PC	6  1PC	7  1PC	8  1PC
9  1PC	10  1PC	11  1PC	12  1PC
13  2PCS	14  1PC	15  1PC	16  1PC
17  1PC			


Hardware Lists


A	X38+1
	
Ø6x34mm	

B	X38+1
	
Ø15x9.5mm	


C	X19
	
Ø6x30mm	


D	X2
	
Ø6x20mm	

E	X2
	
Ø35mm	


F	X2
	
Ø35mm	


G	X24+1
	
Ø8x15mm	


H	X3
	
Ø6x40mm	

I	X2
	
Ø1/4"*25mm	


J	X1
	


K	X1
	


L	X4
	

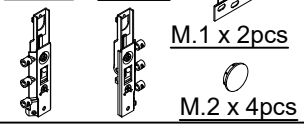
M	X1SET
Rx1pc Lx1pc  M.1 x 2pcs M.2 x 4pcs	


N	X10
	
Ø8x12mm	

O	X6
	
Ø5x40mm	


P	X8
	
Ø8*40mm	

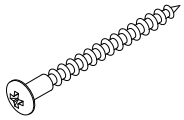Q	X2
	
Ø5x55mm	


R	X1
	

S	X1
	


Step 1

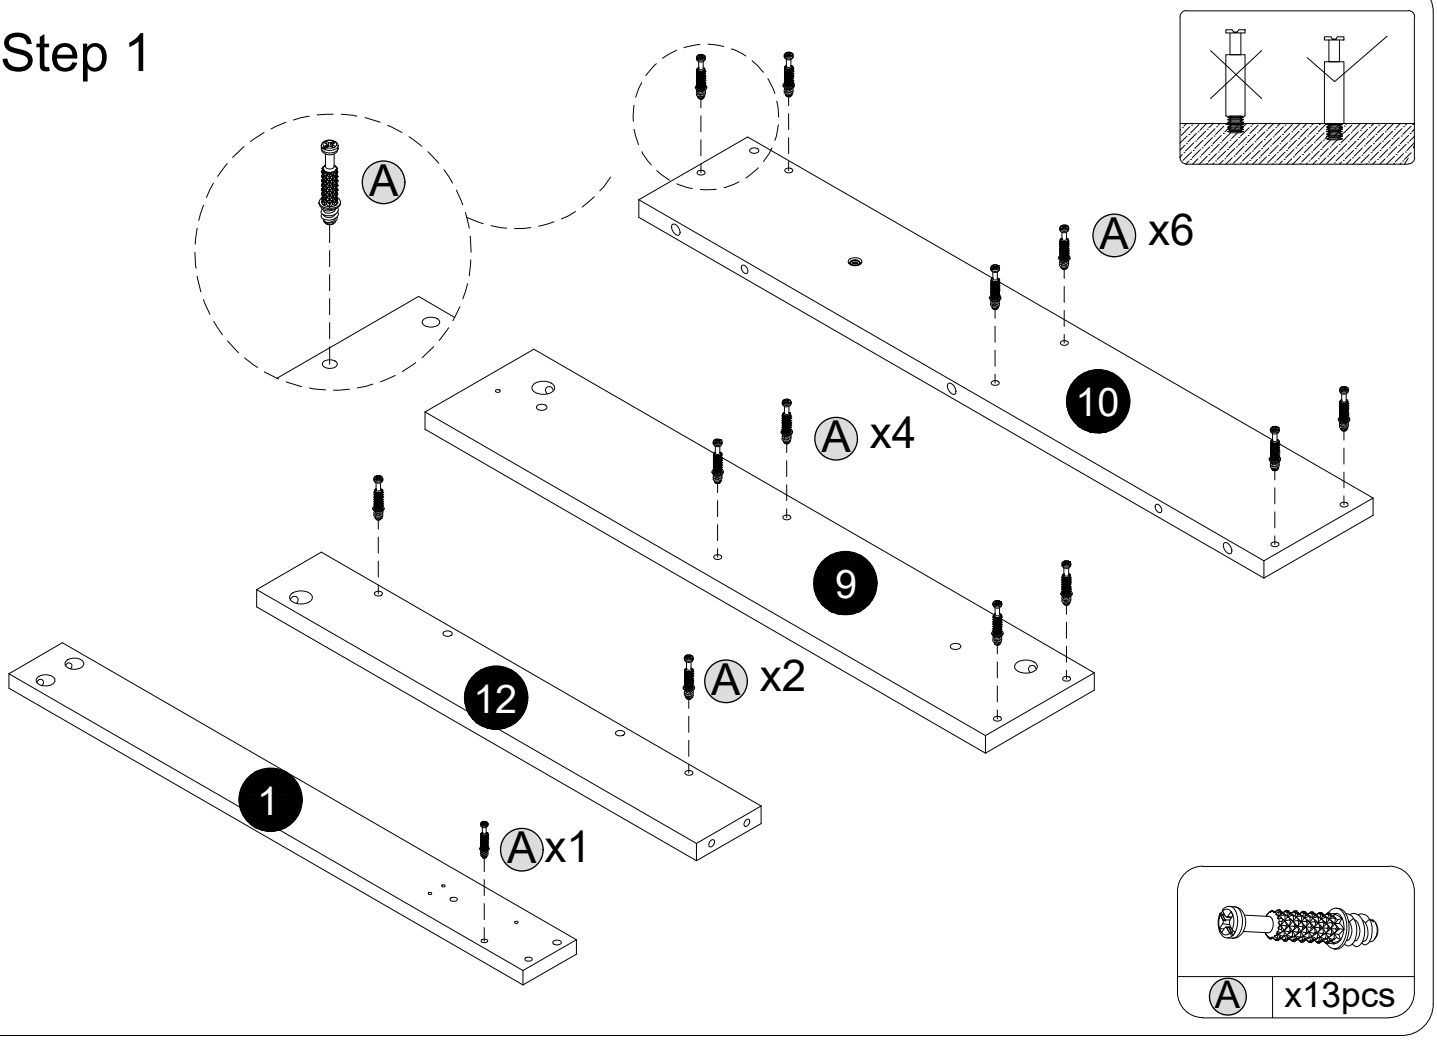



Step 2

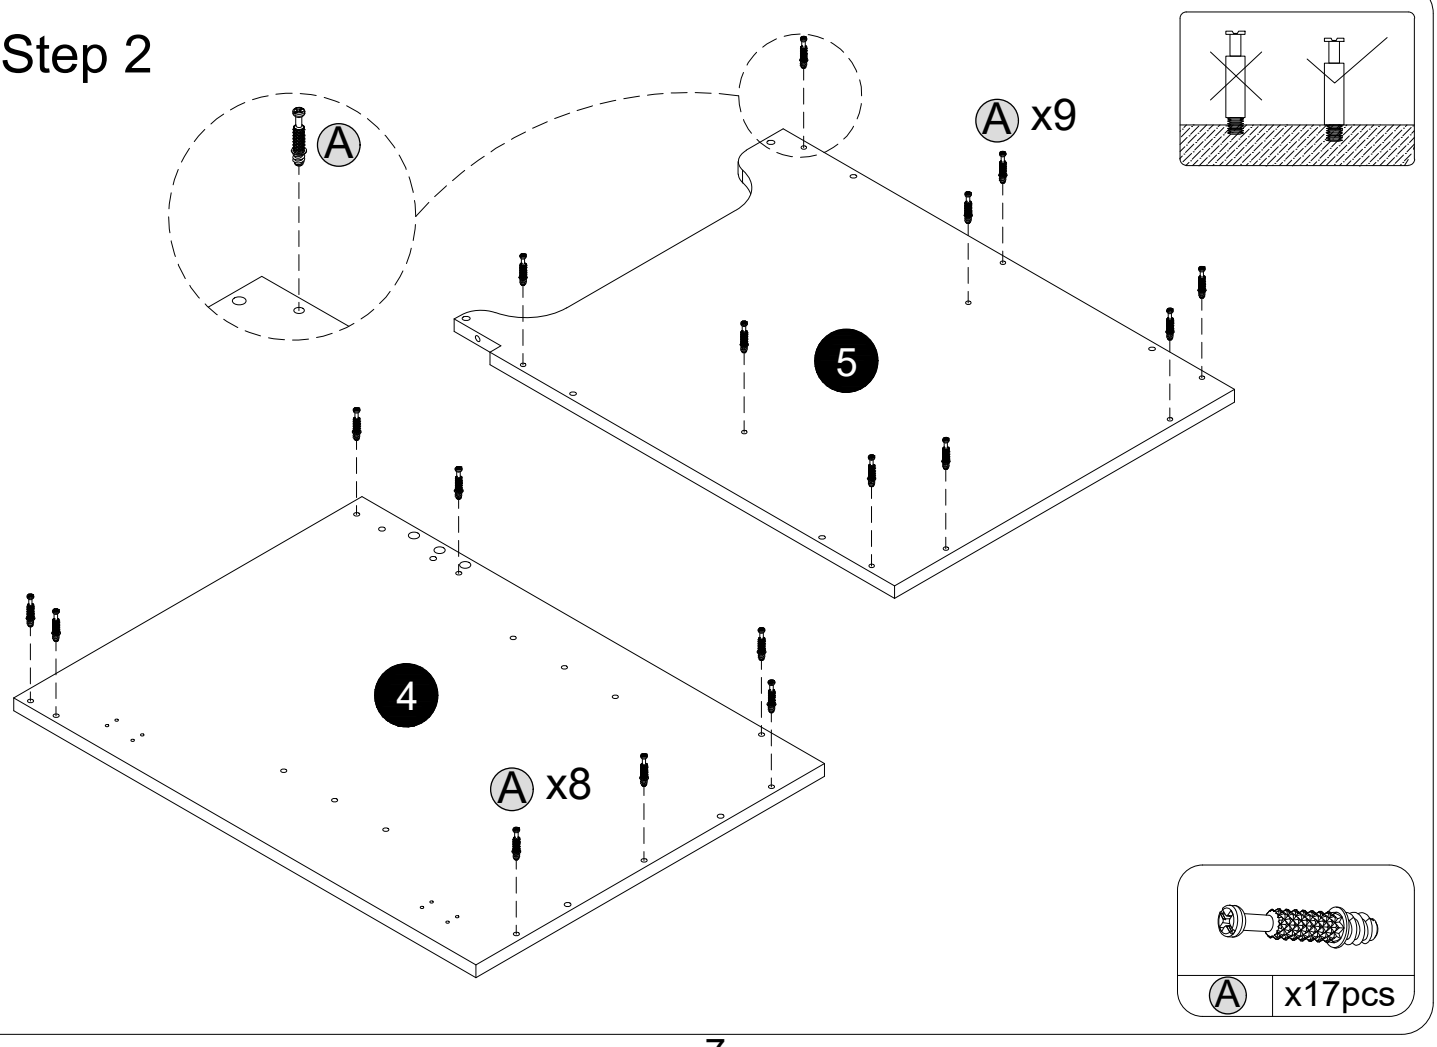


Step 3

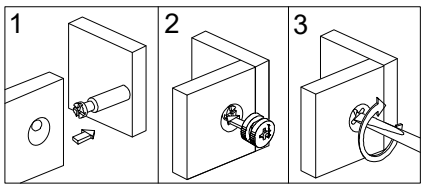

1
2
3

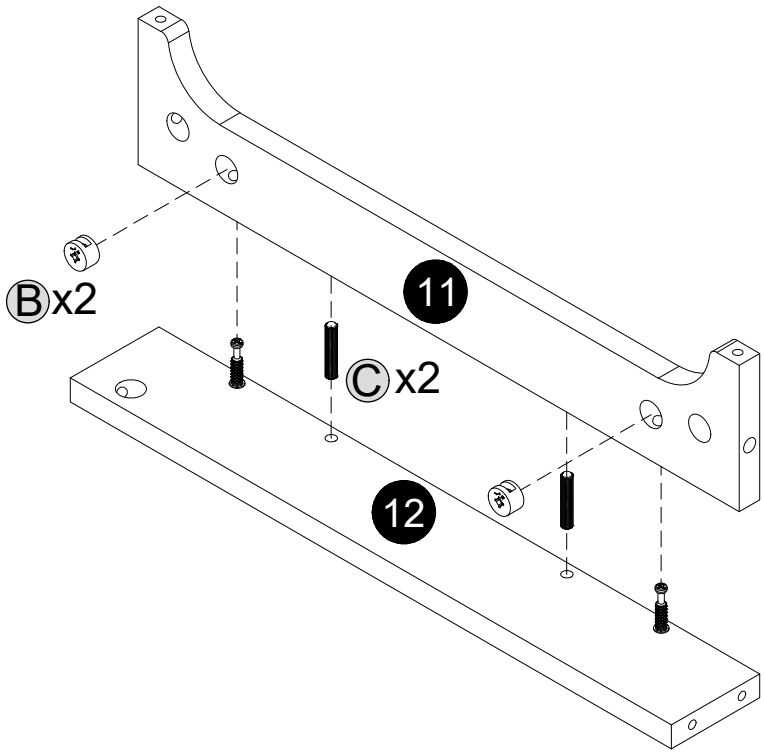

Bx2
11
Cx2
12

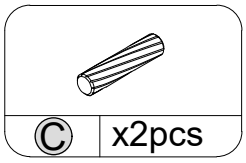

C
x2pcs

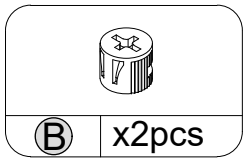

B
x2pcs

Step 4

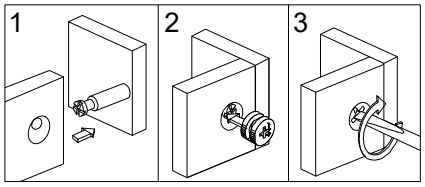

1
2
3

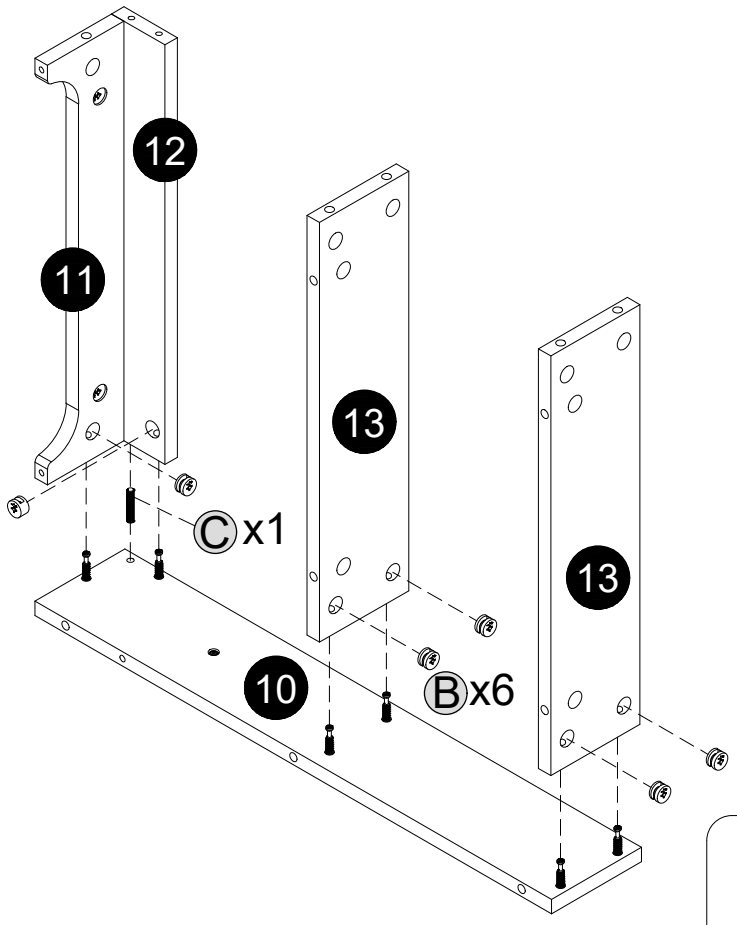

12
11
13
Cx1
13
10
Bx6

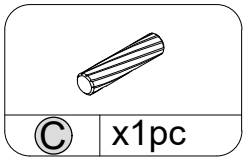

C
x1pc

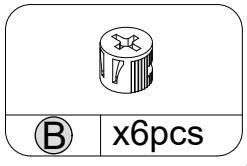
B
x6pcs


Step 5

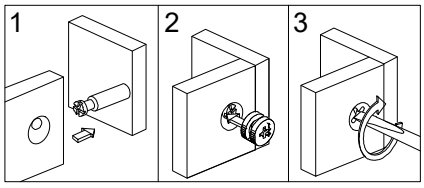

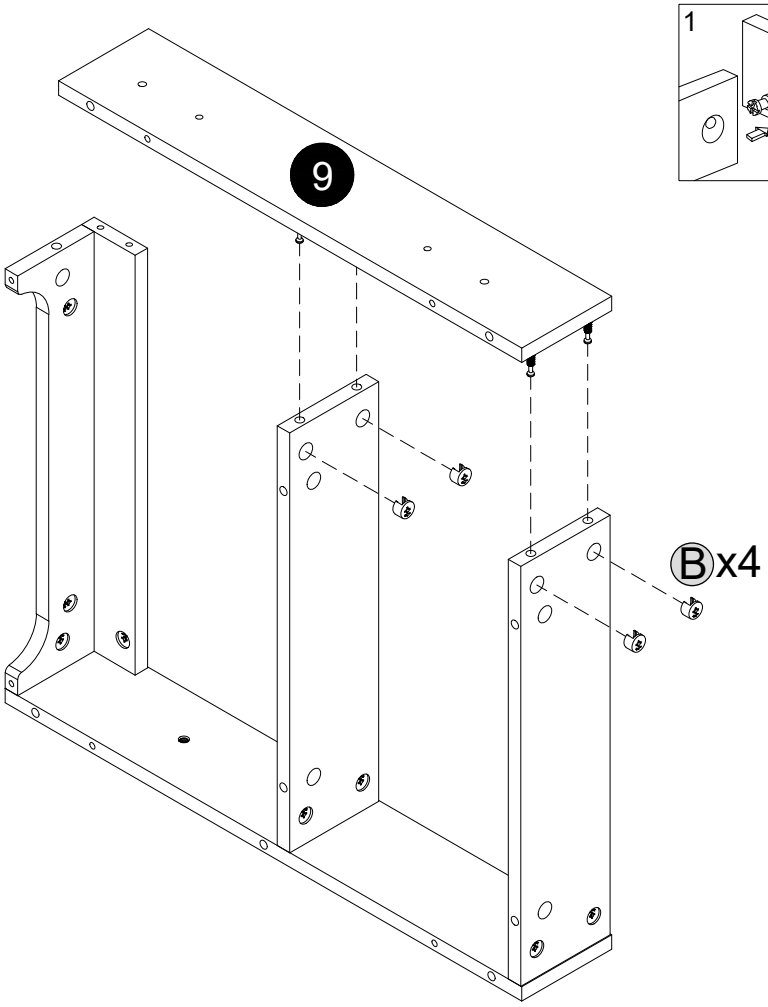


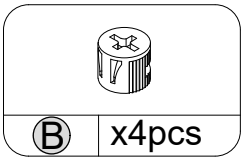



Step 6

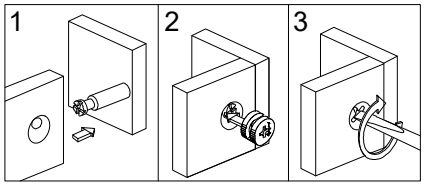


Note: When moving the side frame, do not touch the accessory 12.

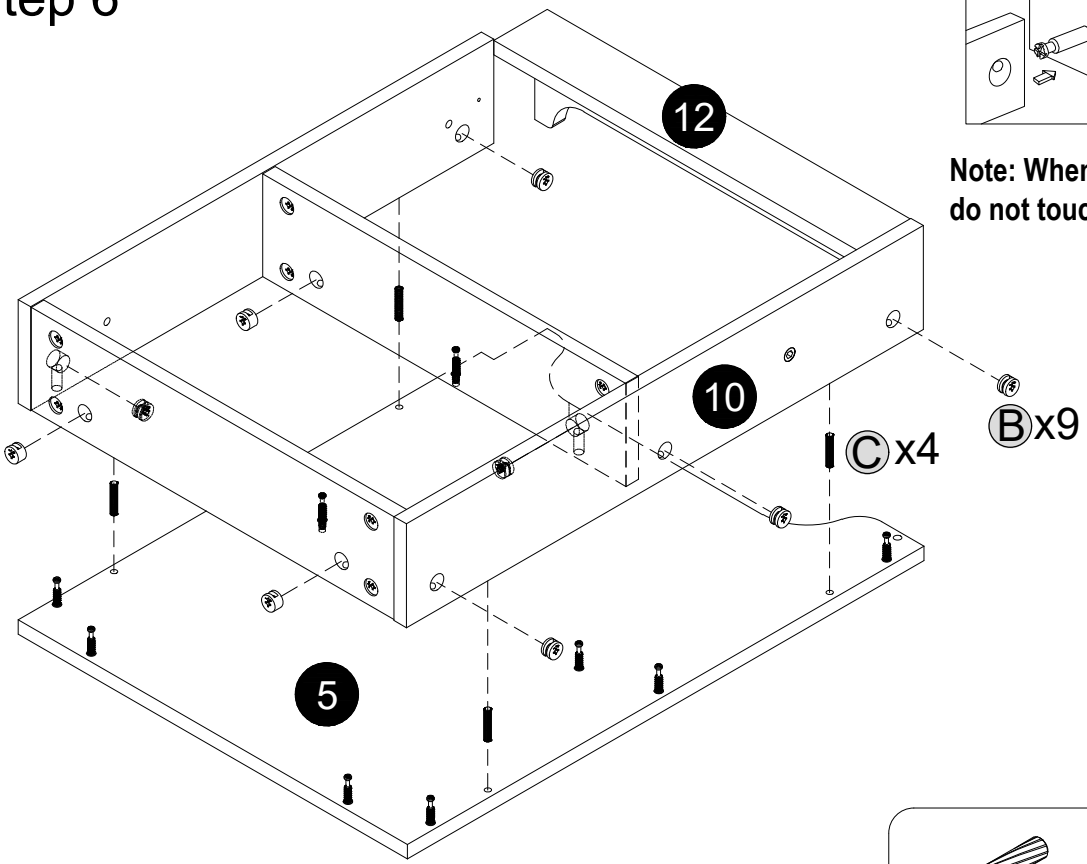


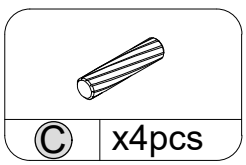


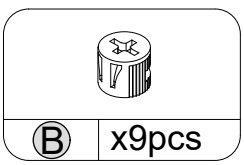


Step 7

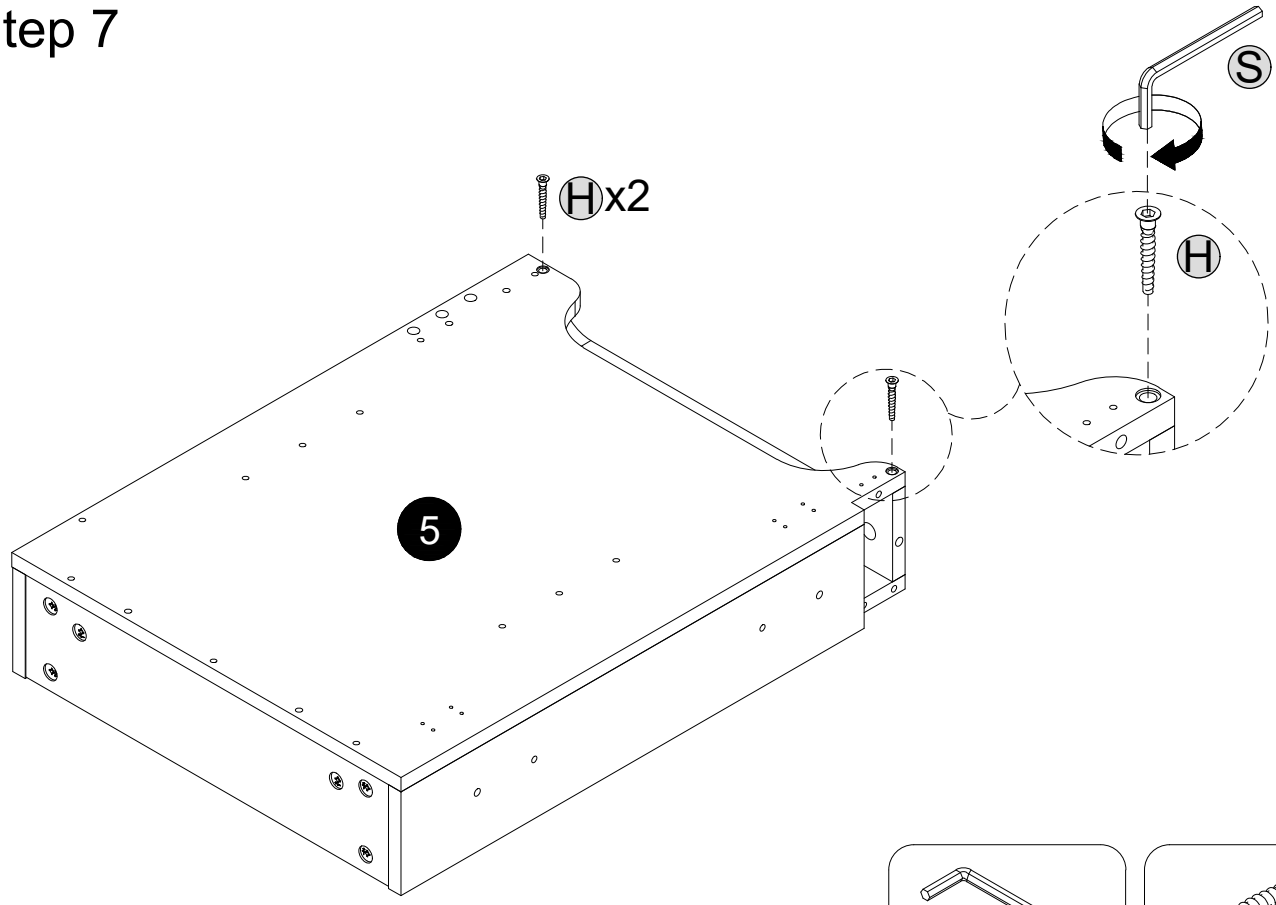


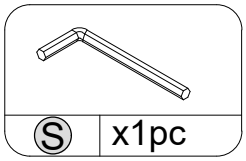

S x1pc

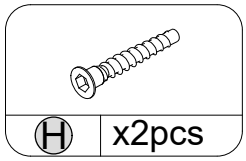
H x2pcs


Step 8

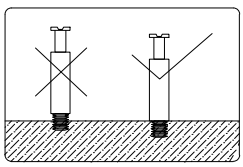

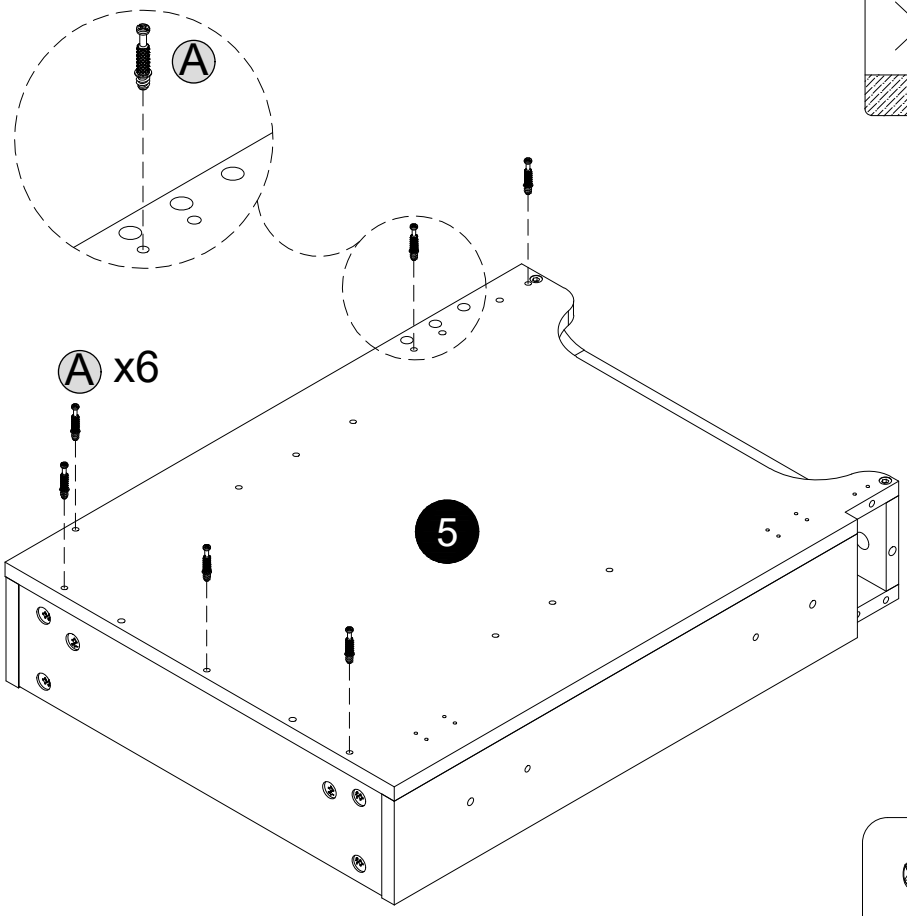


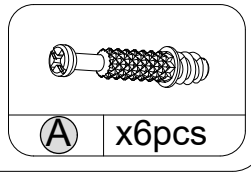
A x6pcs

Step 9

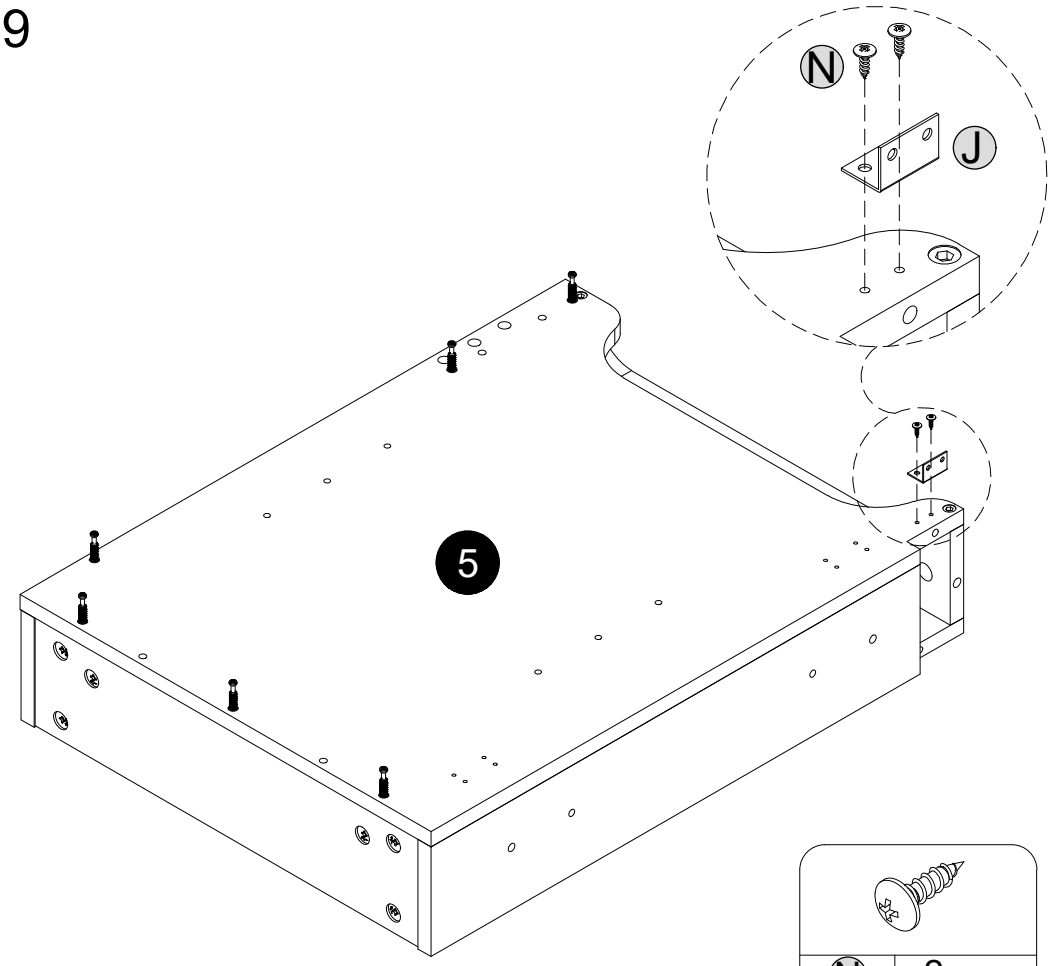



N x2pcs




J x1pc

Step 10

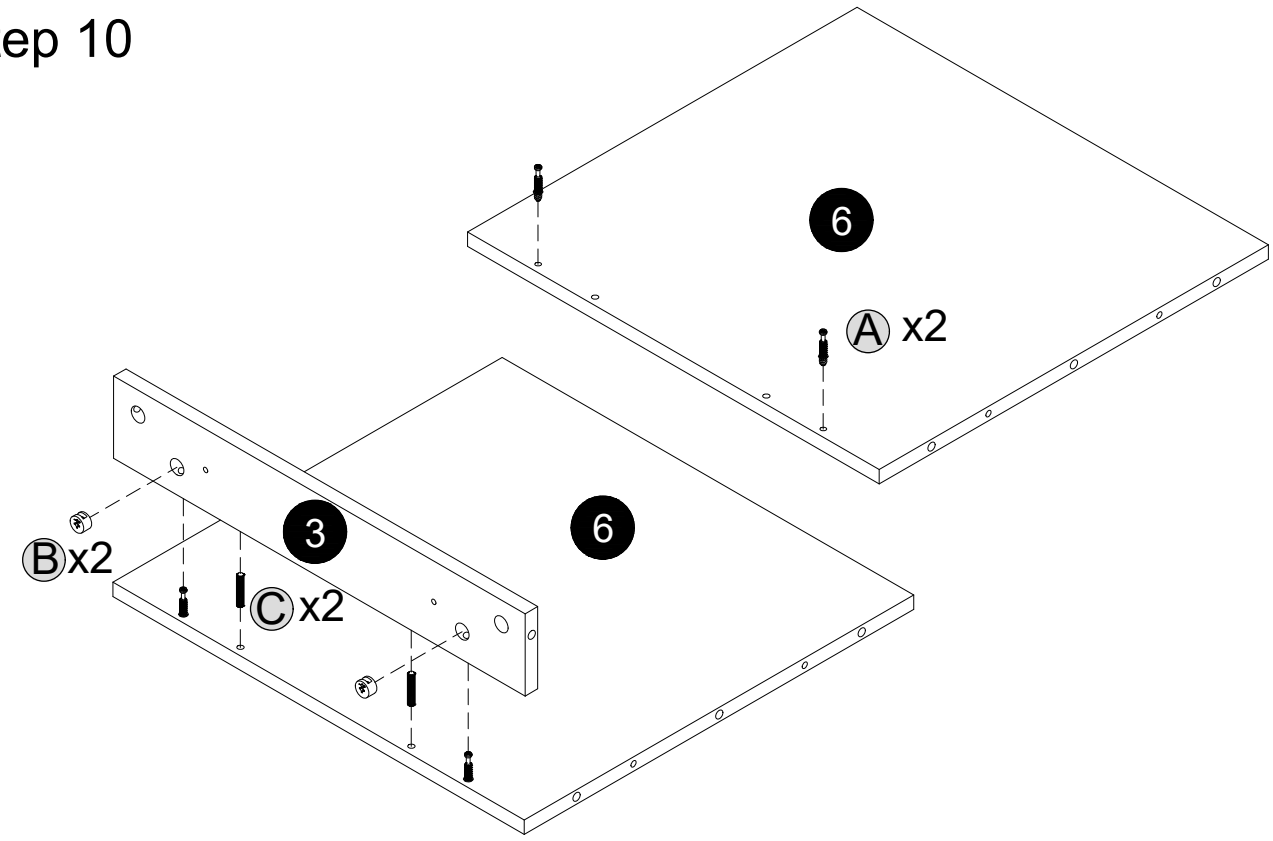




C x2pcs









B x2pcs




A x2pcs

Step 11

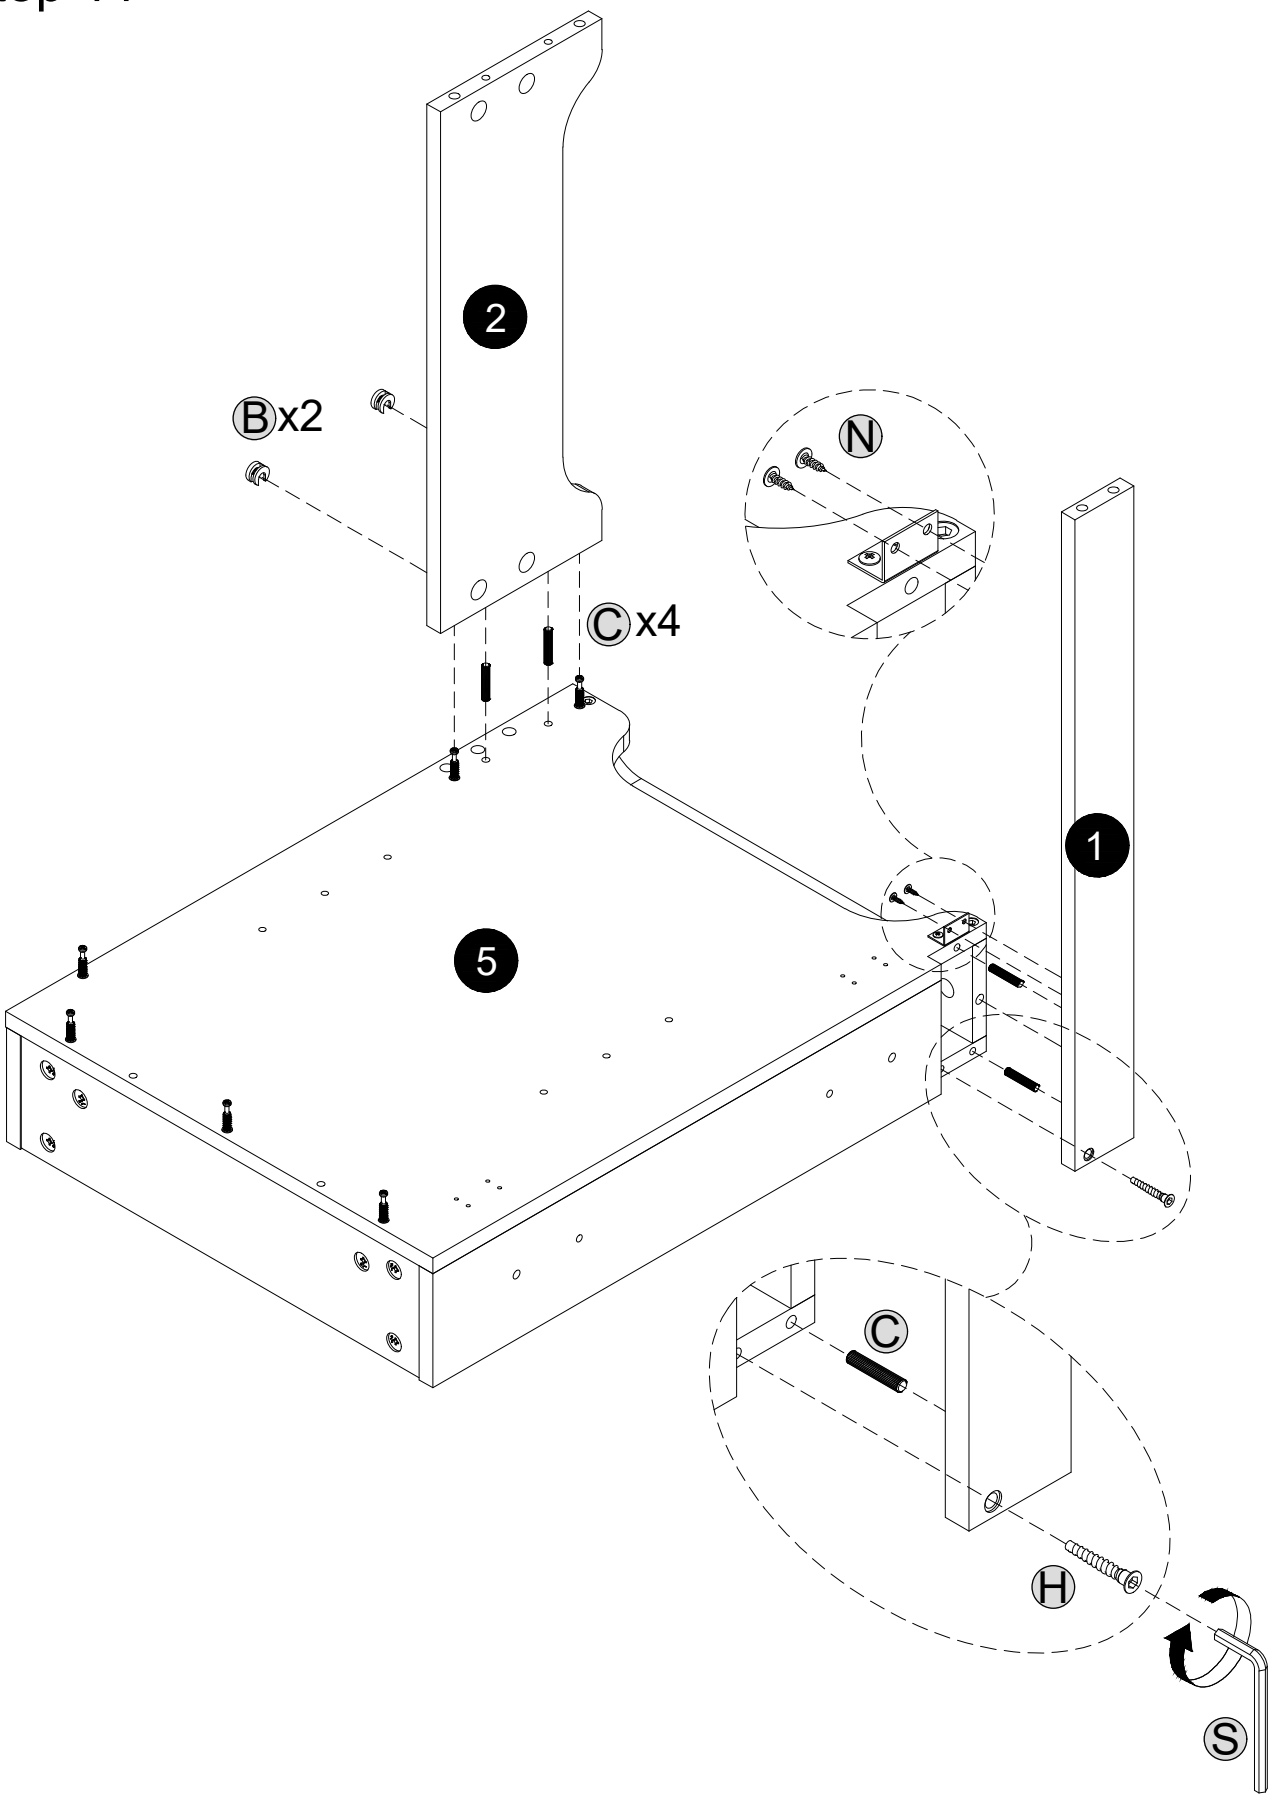


				
S x1pc	N x2pcs	H x1pc	C x4pcs	B x2pcs


Step 12

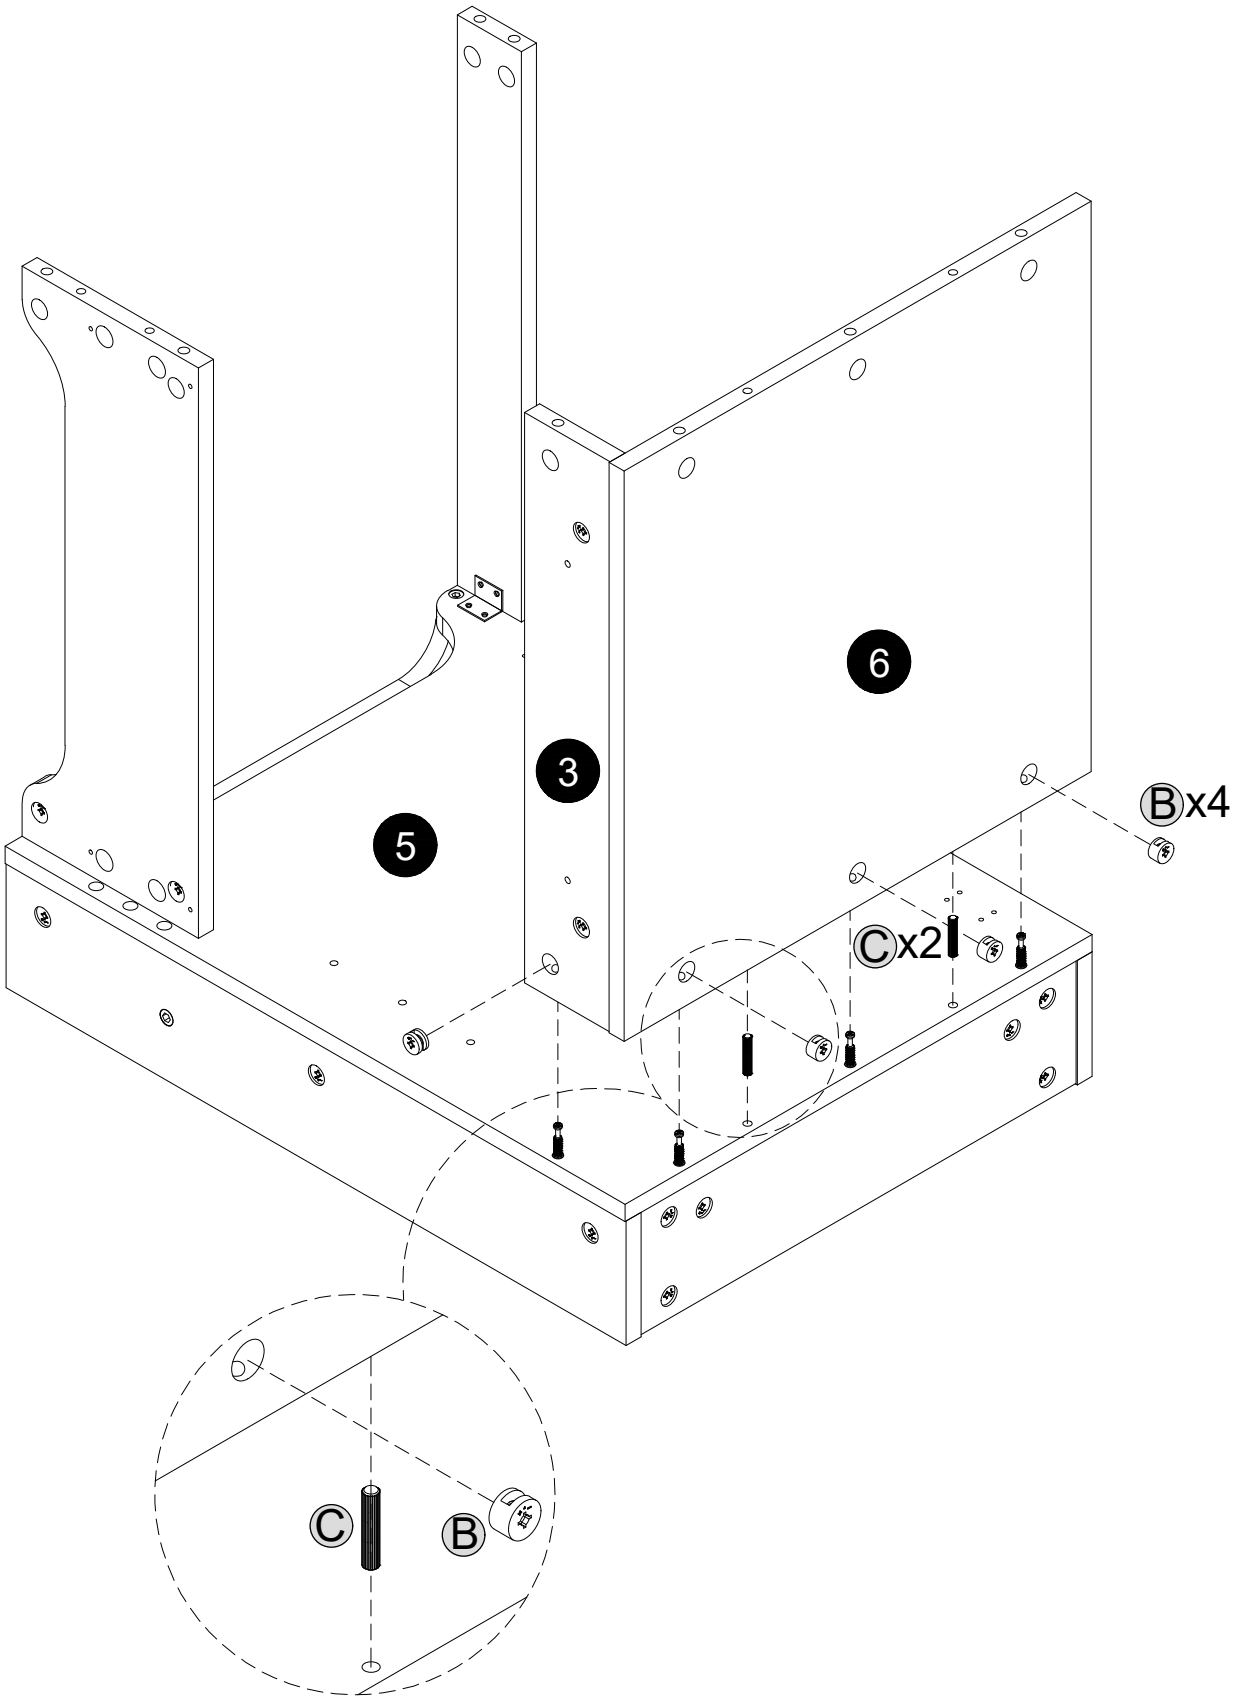


C	x2pcs
B	x4pcs

Step 13

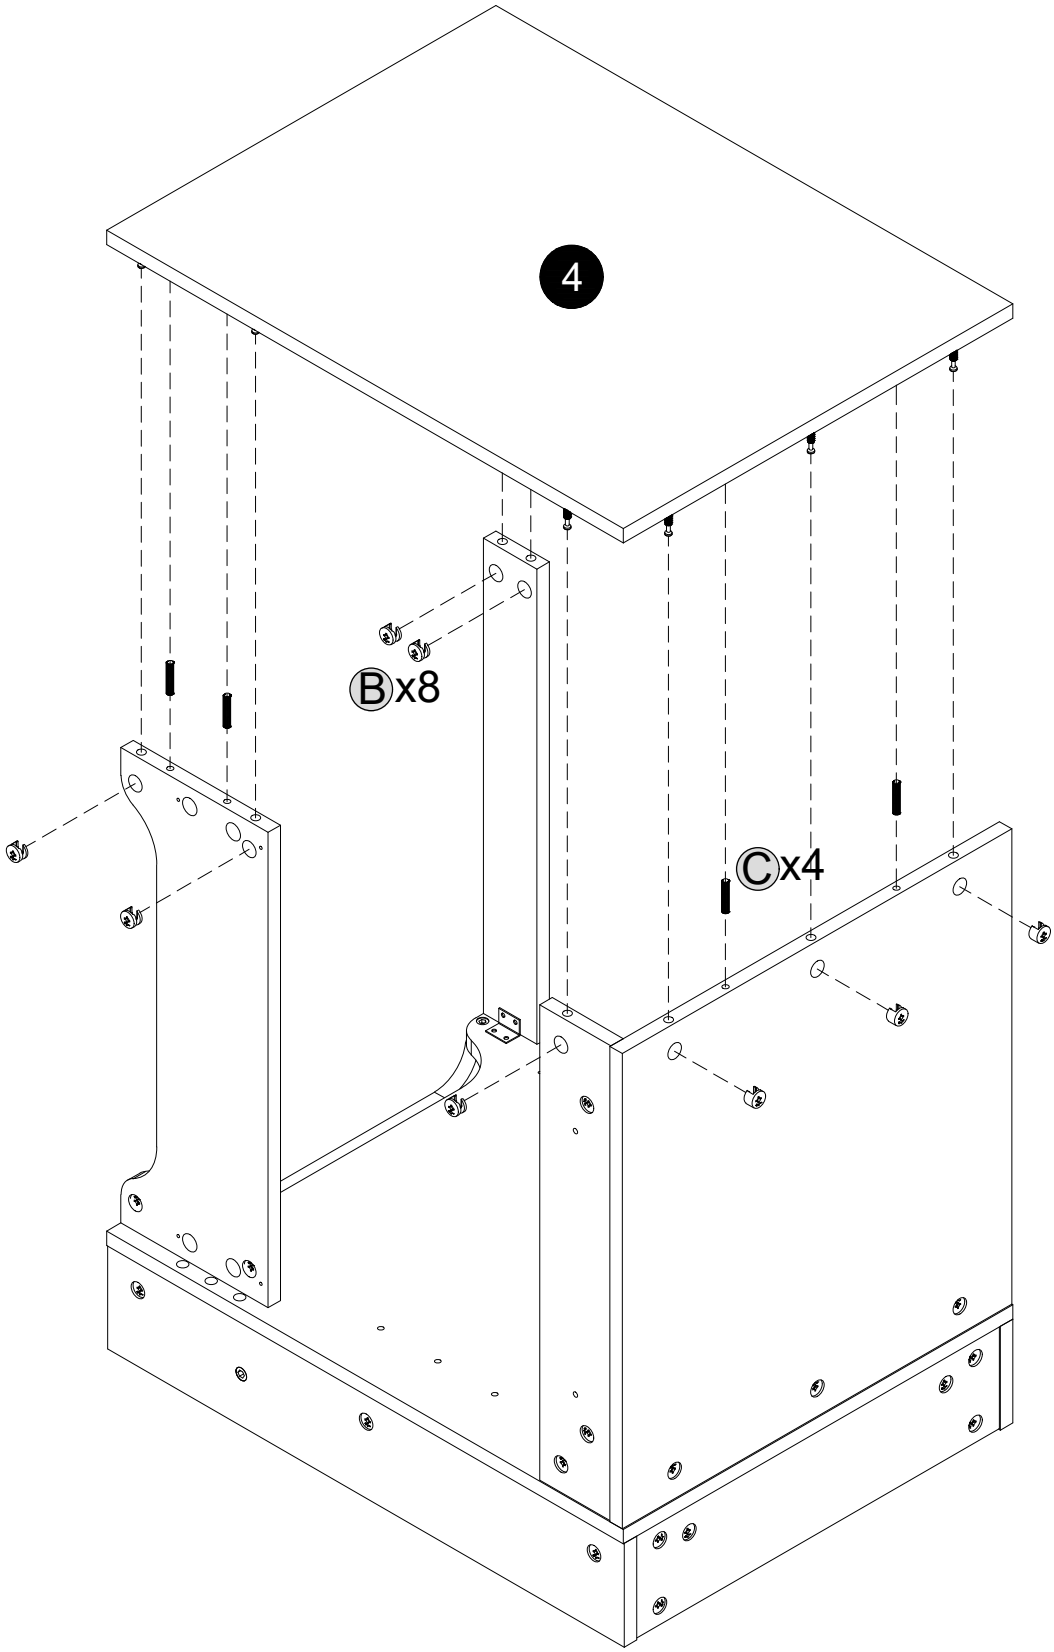

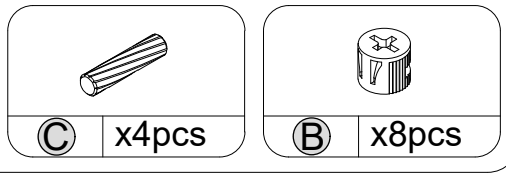


Step 14

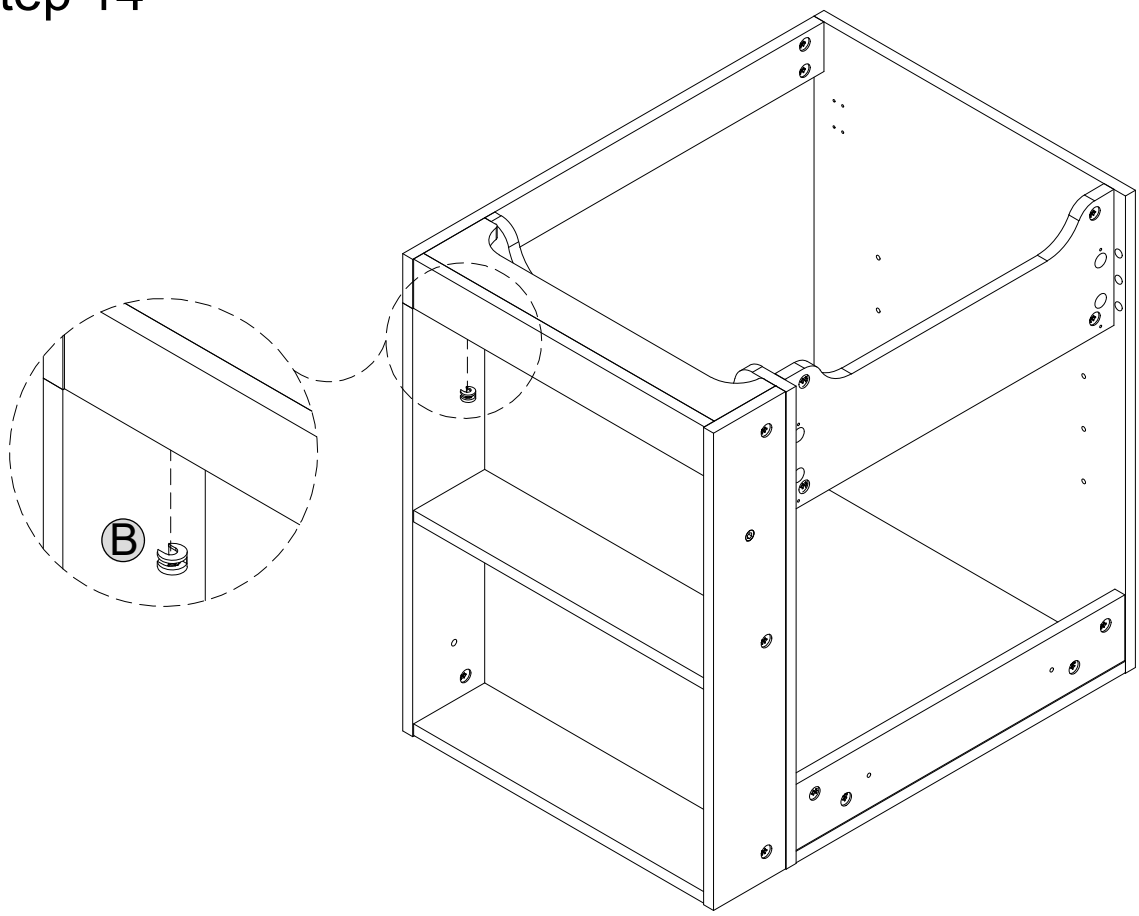


 B	x1pc


Step 15

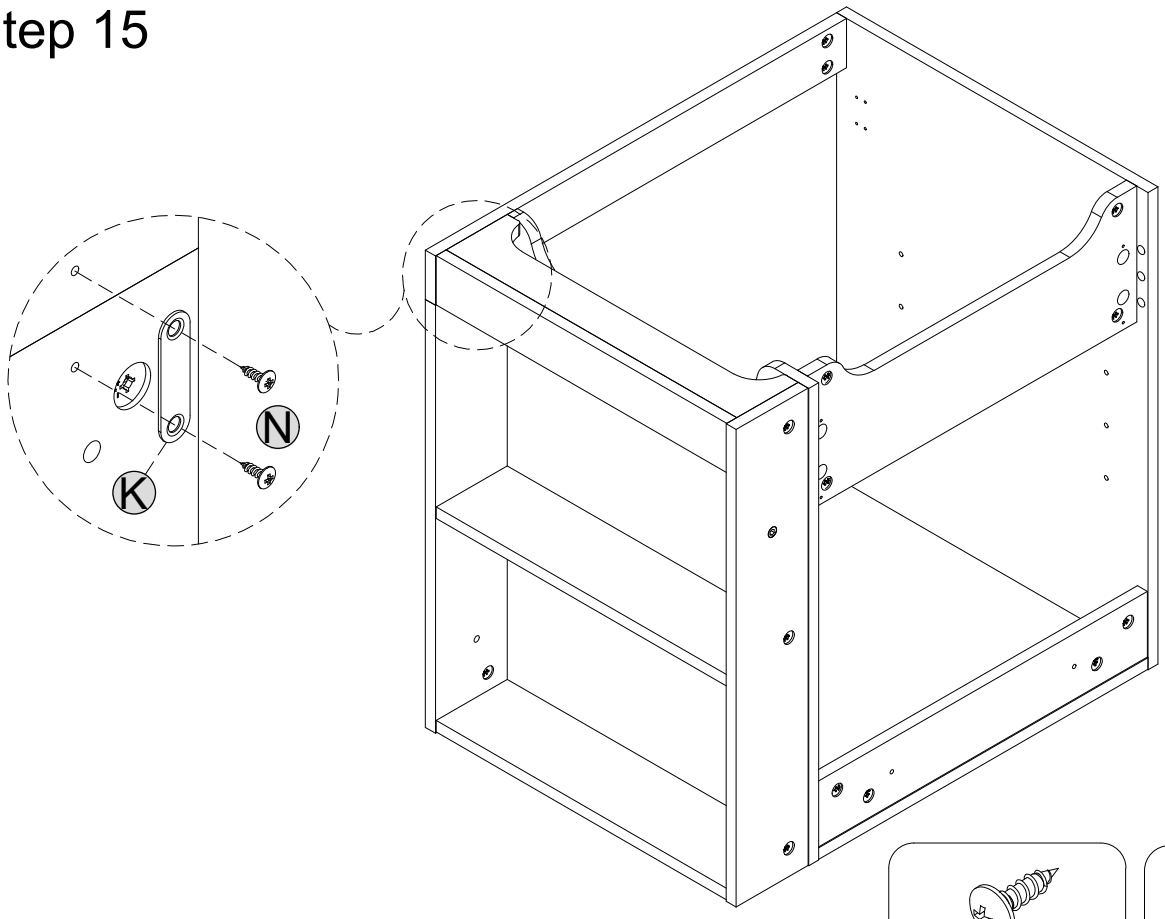

N	x2pcs


 K	x1pc

Step 16

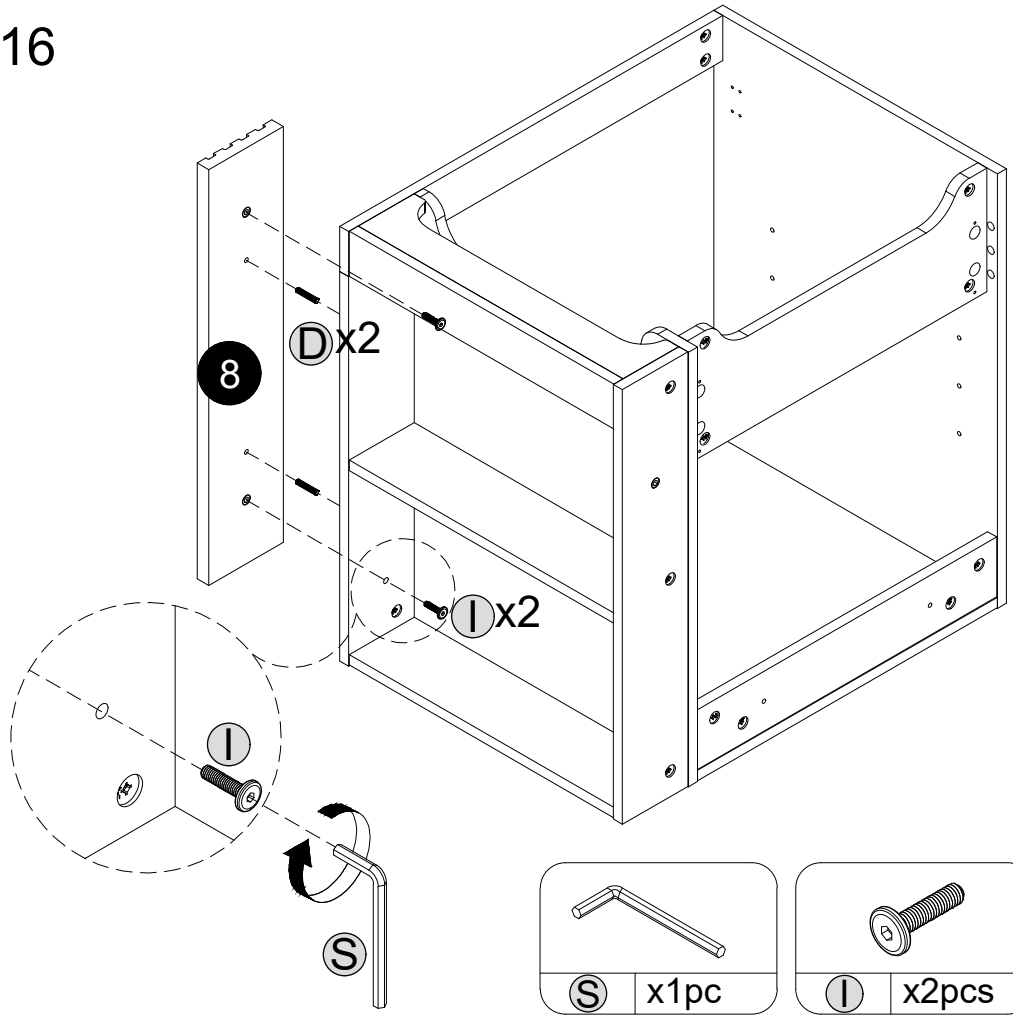


S	x1pc
I	x2pcs
D	x2pcs


Step 17

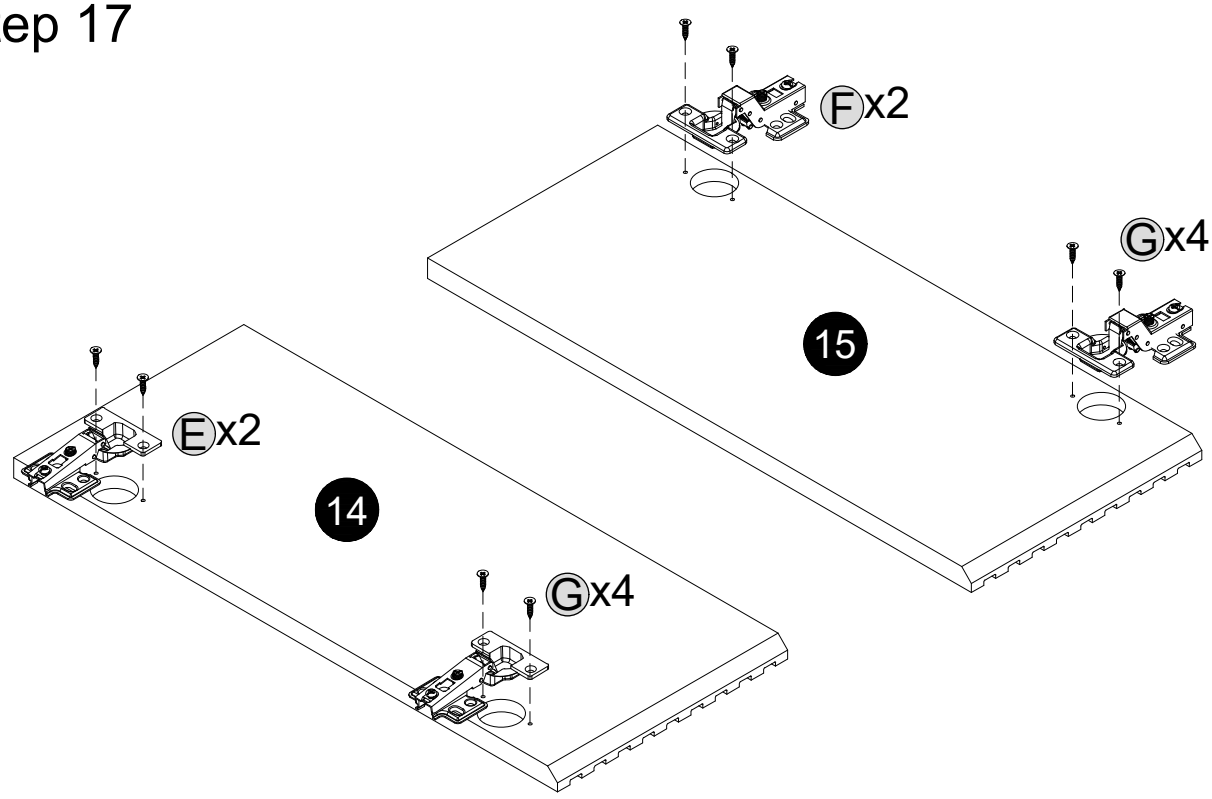


G	x8pcs
F	x2pcs
E	x2pcs


Step 18

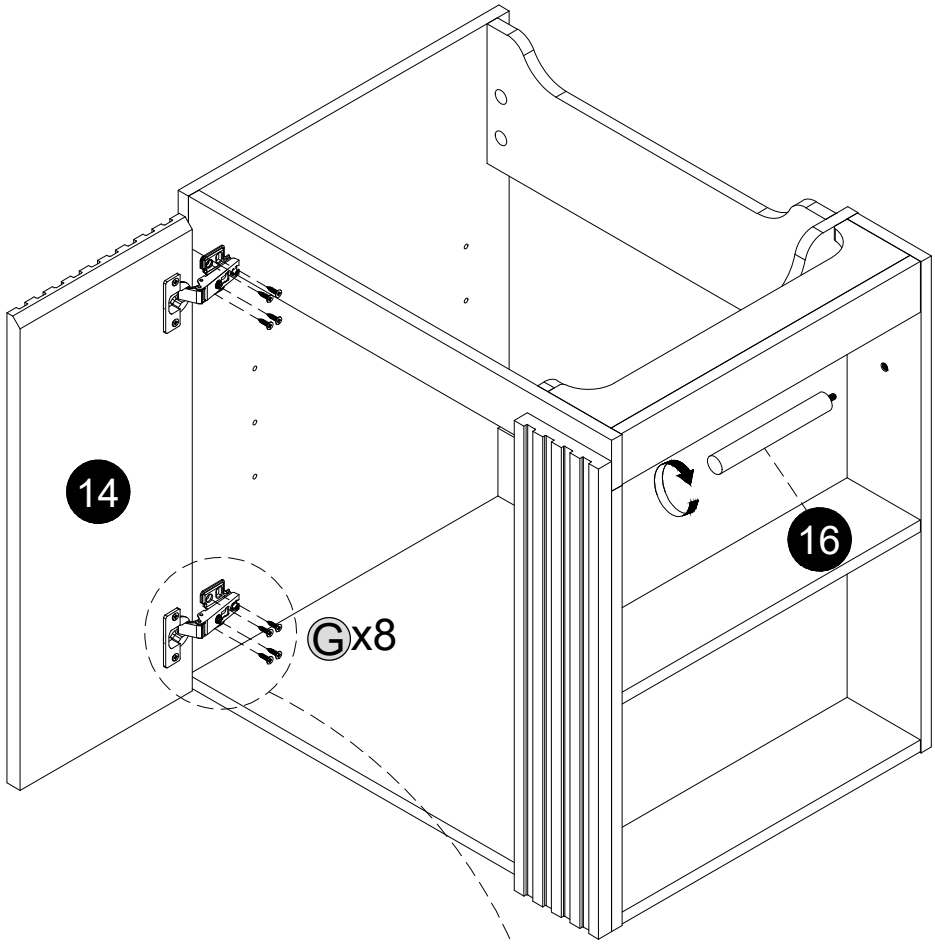

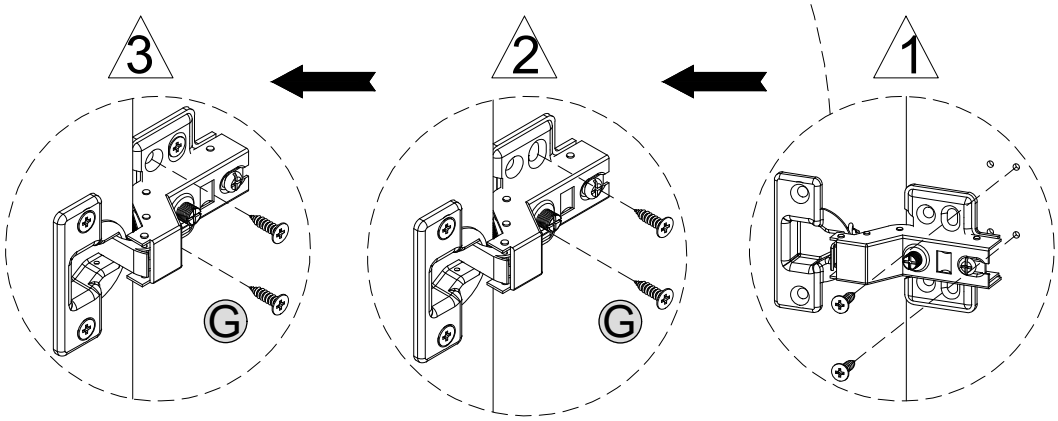

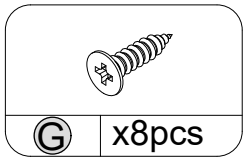



When the hinges are installed, you can refer to the pictures to adjust crevice of the doors till it's perfect

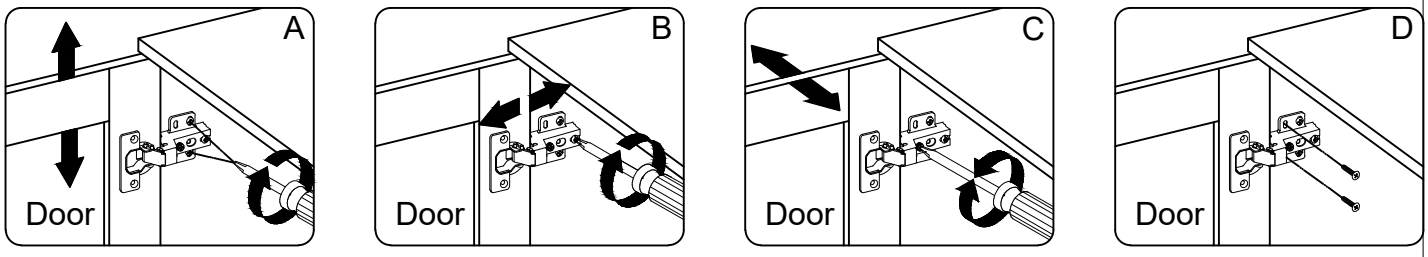


1. To adjust the doors up and down, please refer to step (A)
2. To adjust the distance between the doors and side panels, please refer to (B)
3. To adjust the gap between two doors, please refer to step (C)
4. After the adjustment finished, please tight the screws, refer to step (D)

Step 19

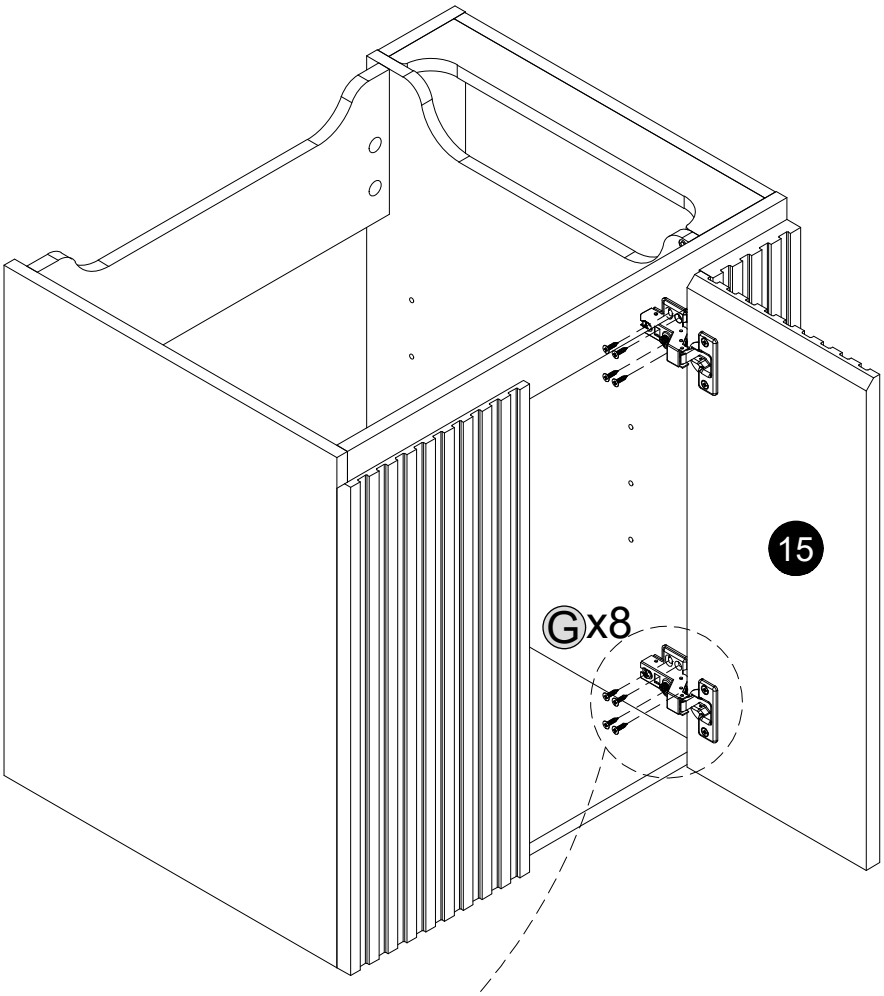

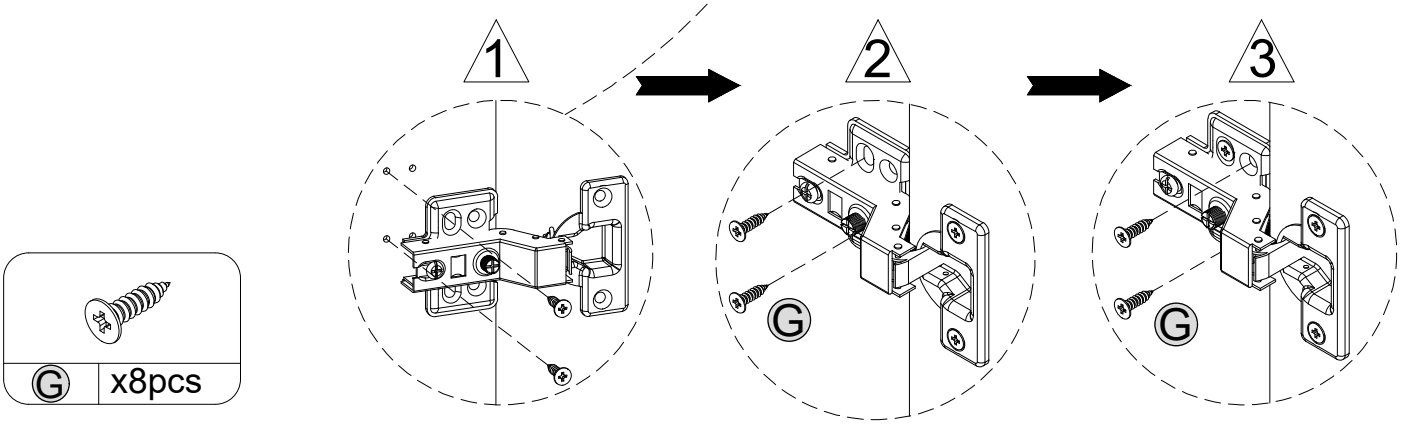



When the hinges are installed, you can refer to the pictures to adjust crevice of the doors till it's perfect

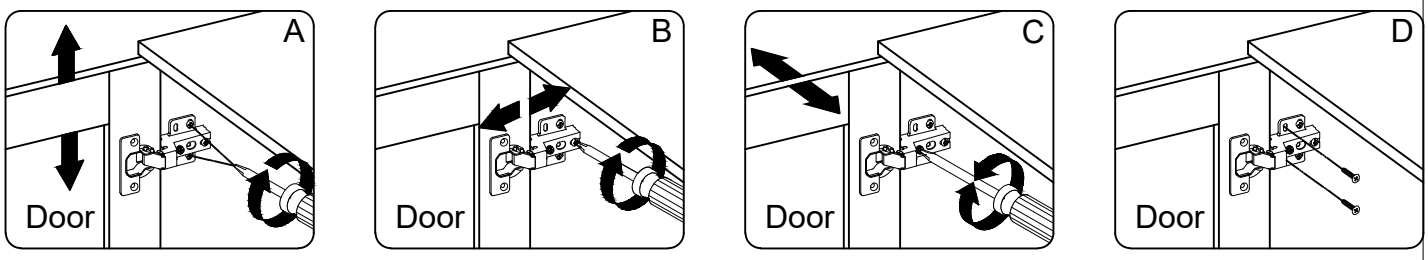


1. To adjust the doors up and down, please refer to step (A)
2. To adjust the distance between the doors and side panels, please refer to (B)
3. To adjust the gap between two doors, please refer to step (C)
4. After the adjustment finished, please tight the screws, refer to step (D)

Step 20

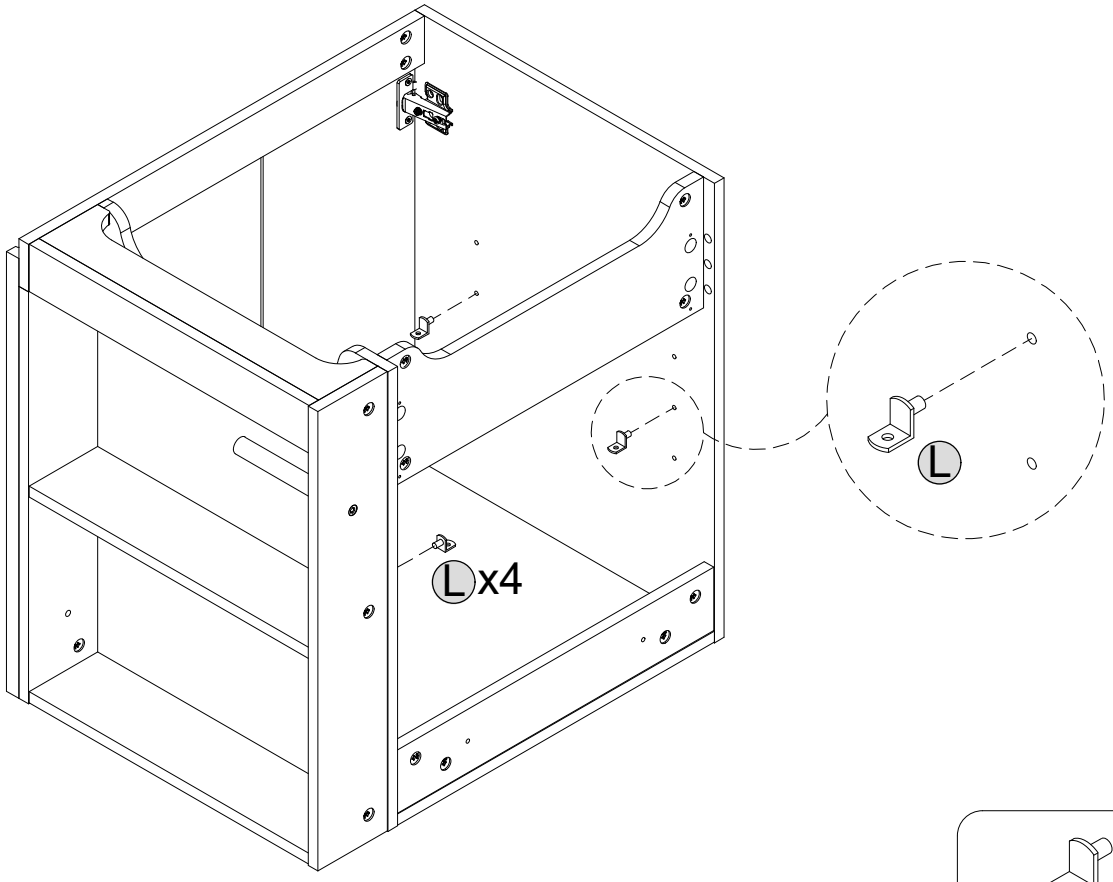


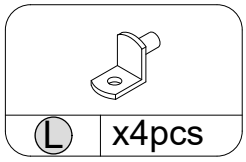


Step 21

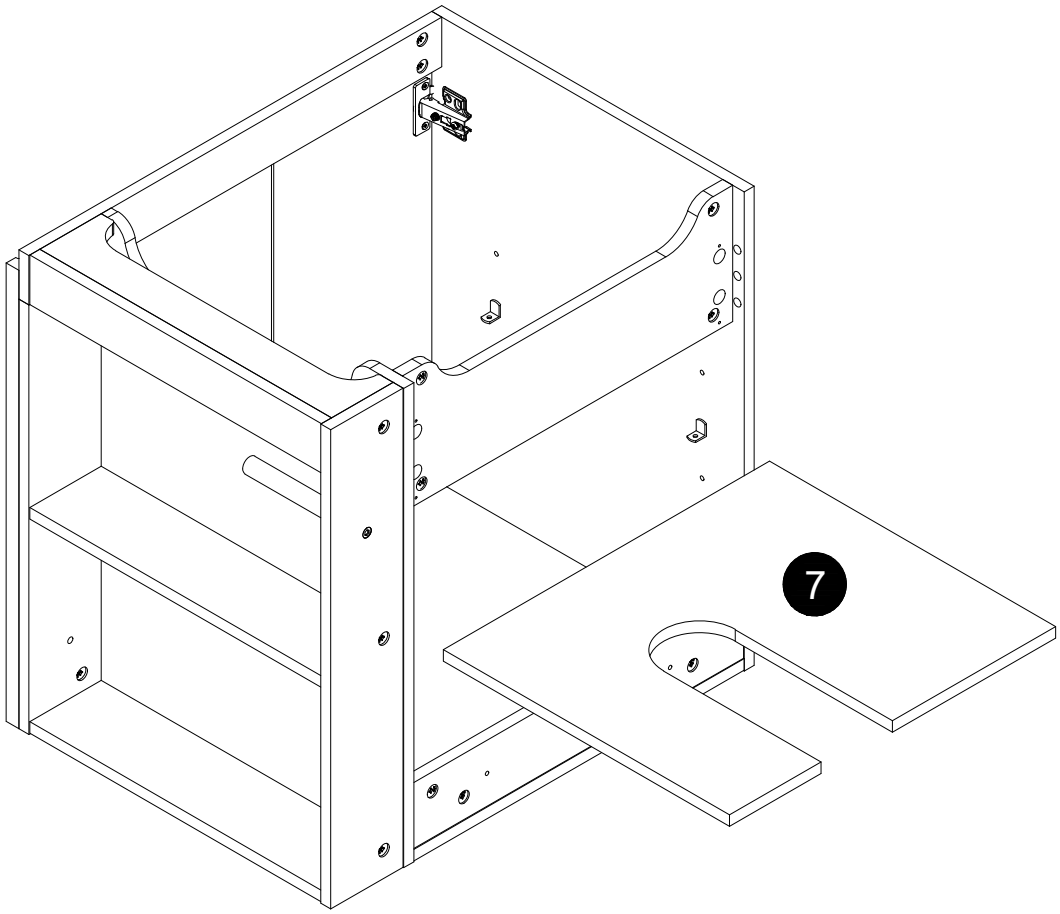

Step 22

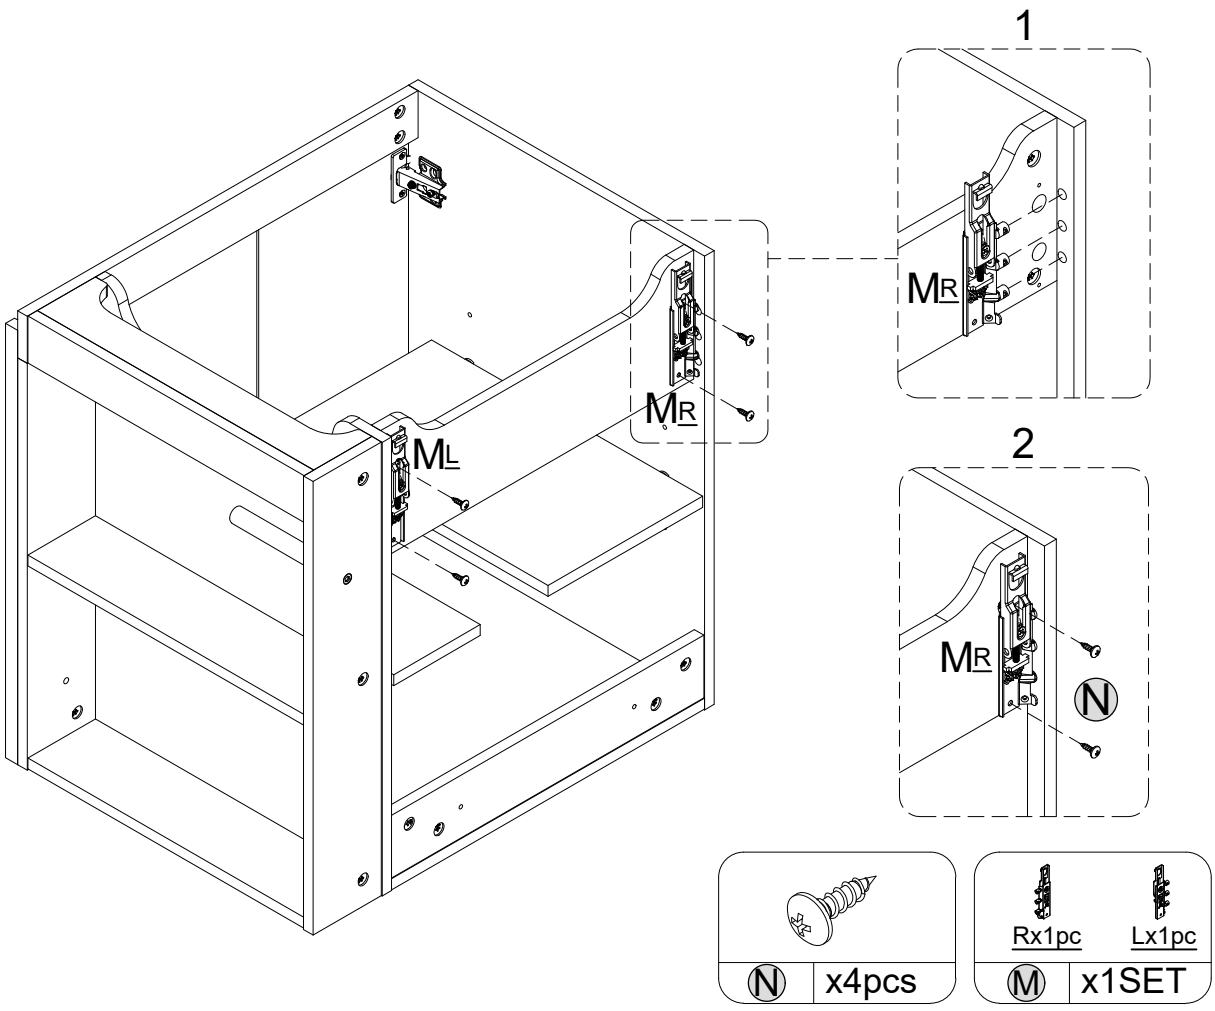


Step 23

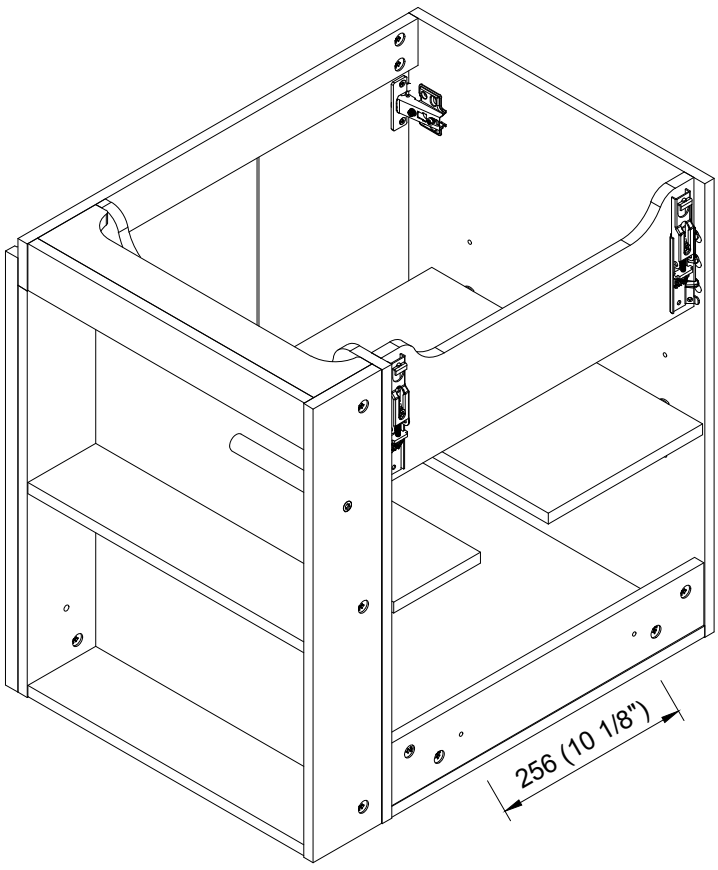


Step 24

WALL

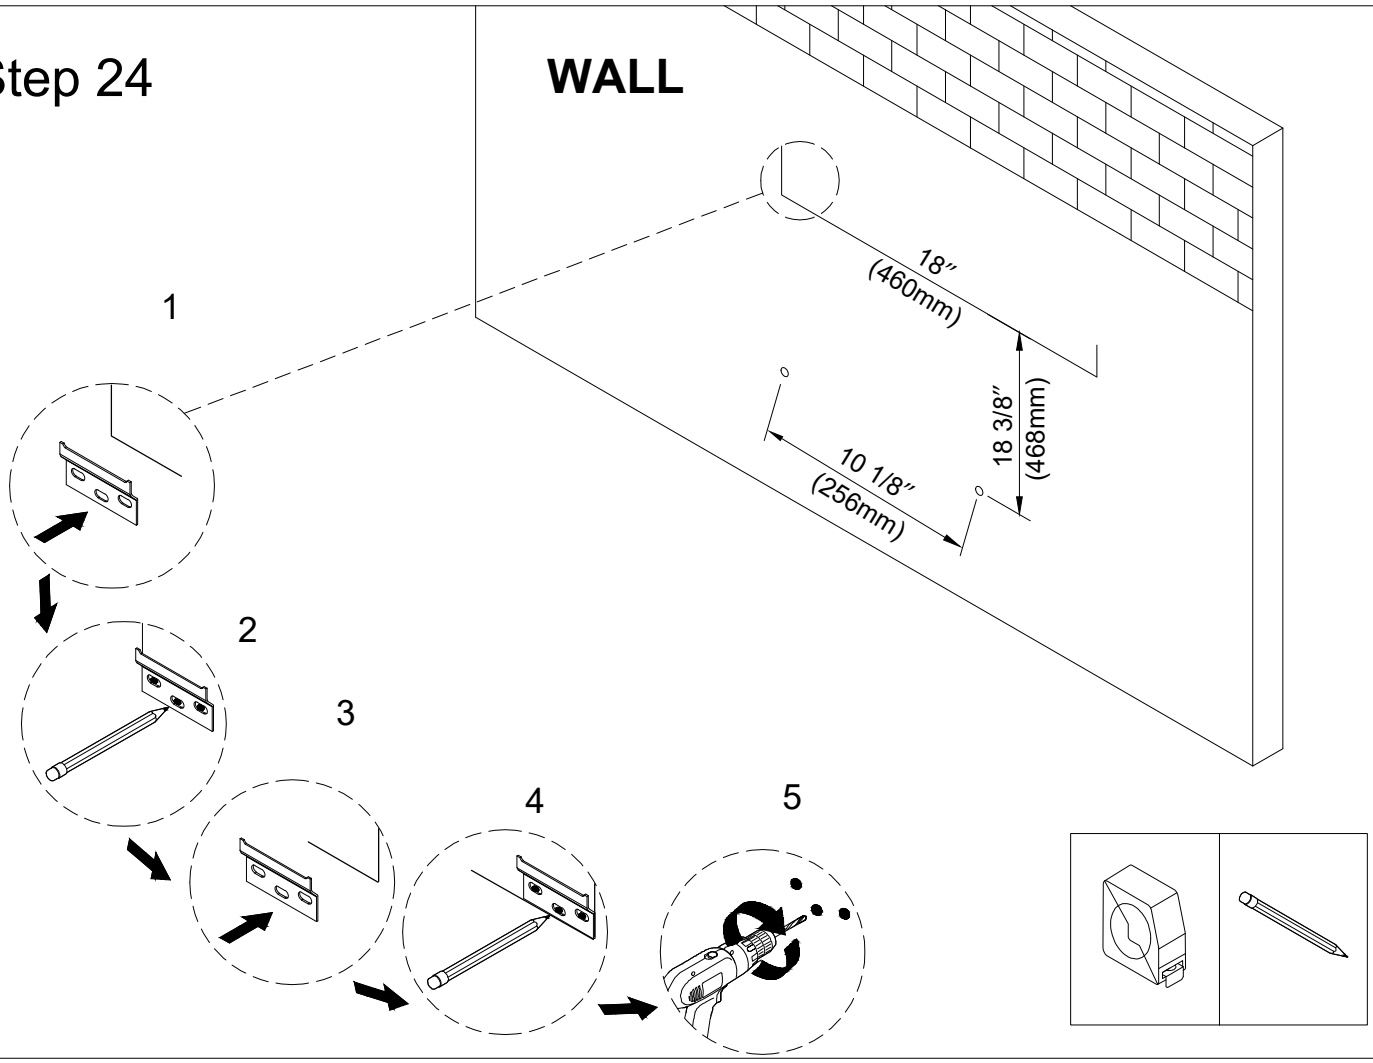


Step 25

WALL

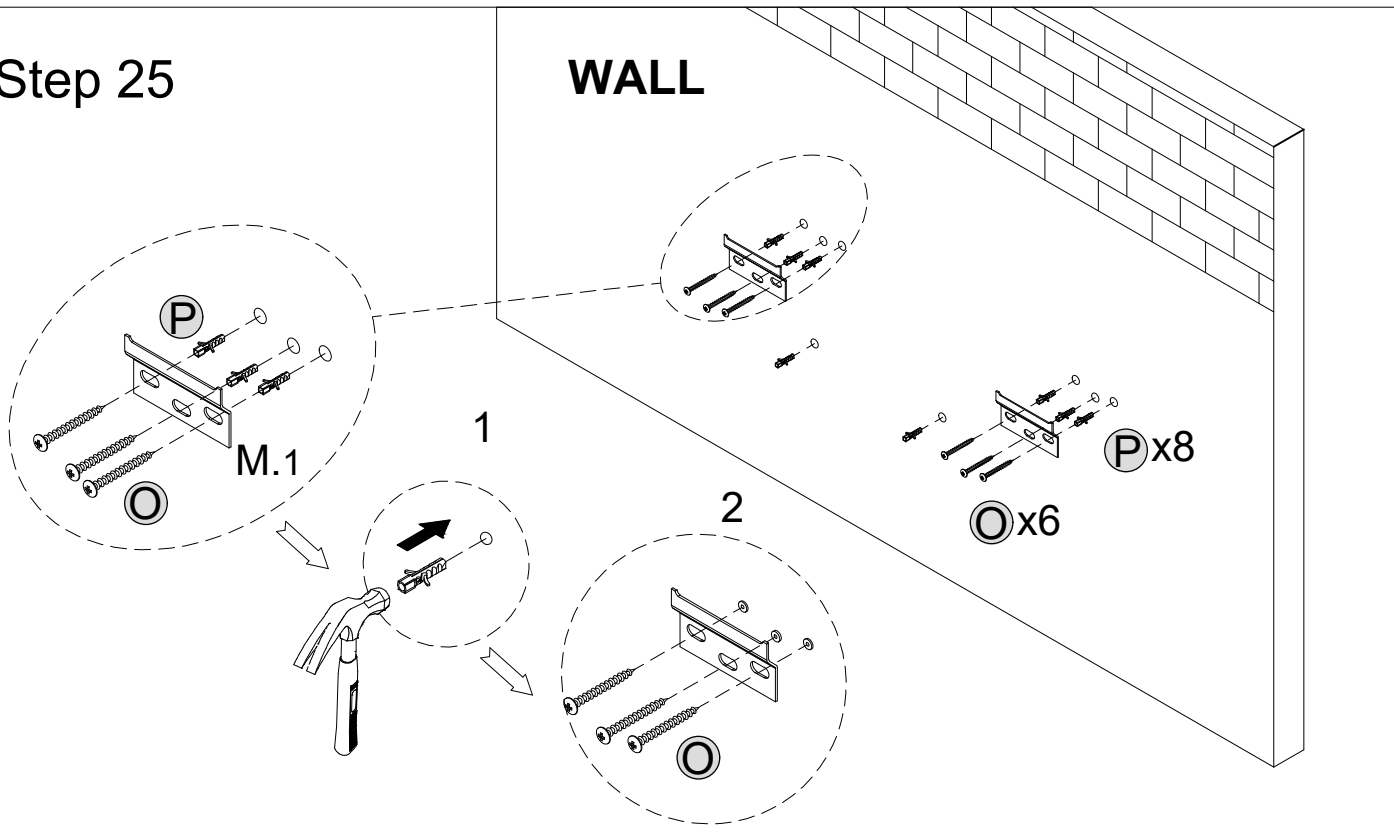


P	x8pcs
O	x6pcs
M.1	x2pcs


Step 26

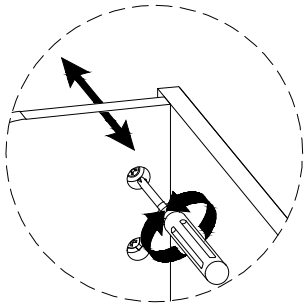


To adjust in or out

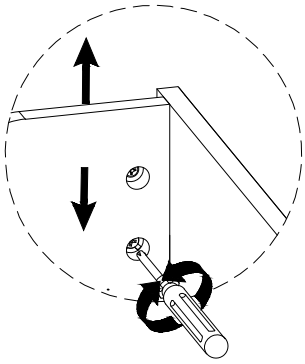



To adjust up or down

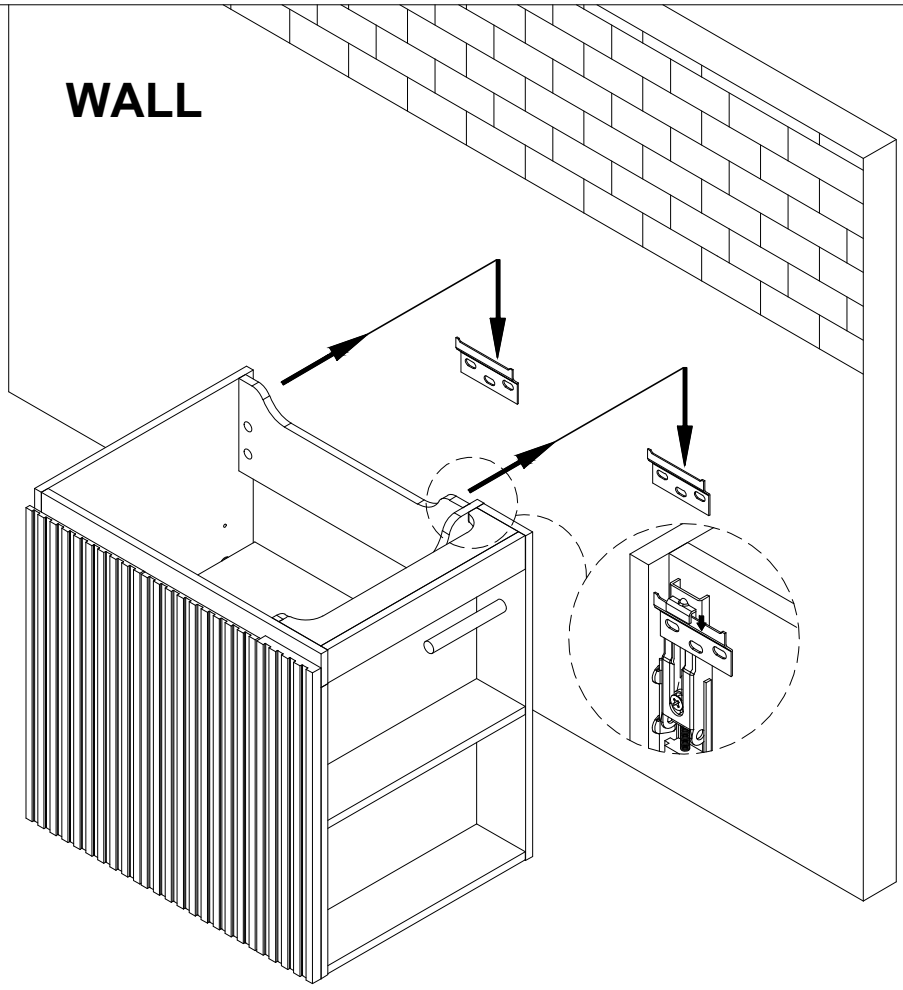


Step 27

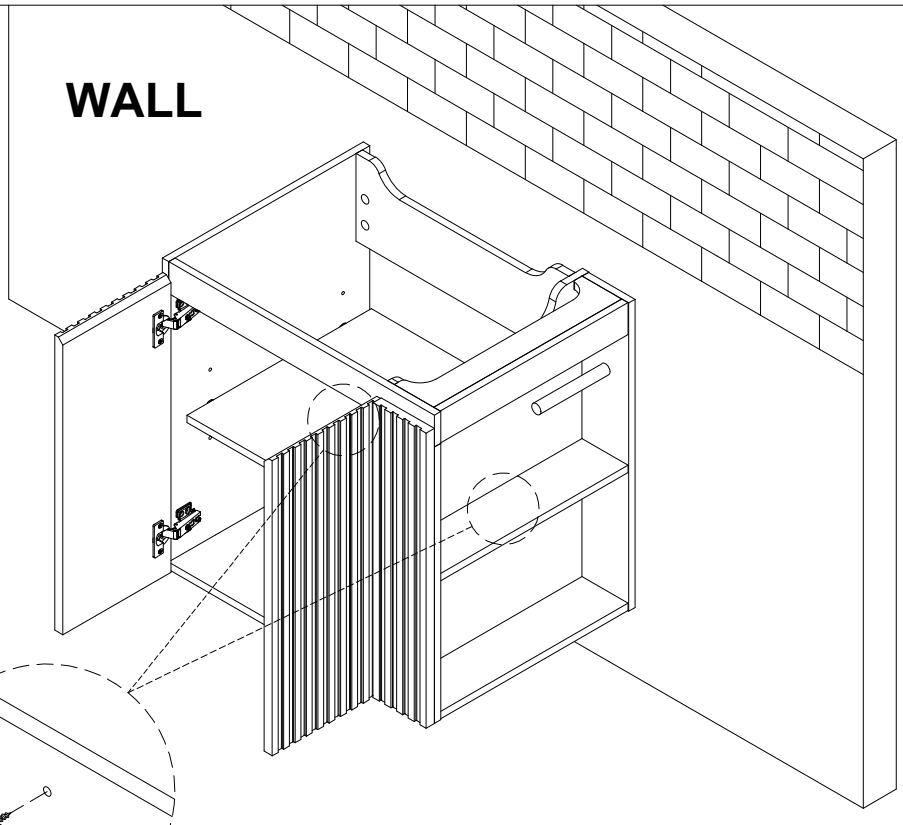


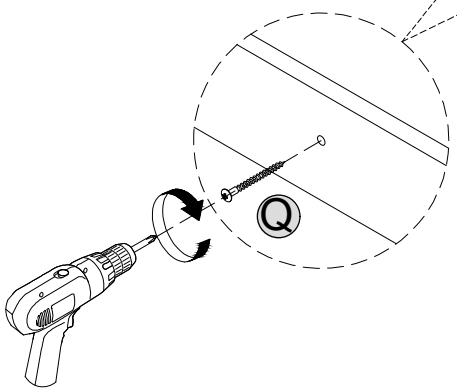

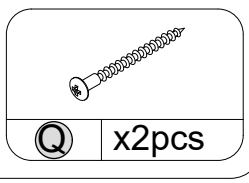


Step 28

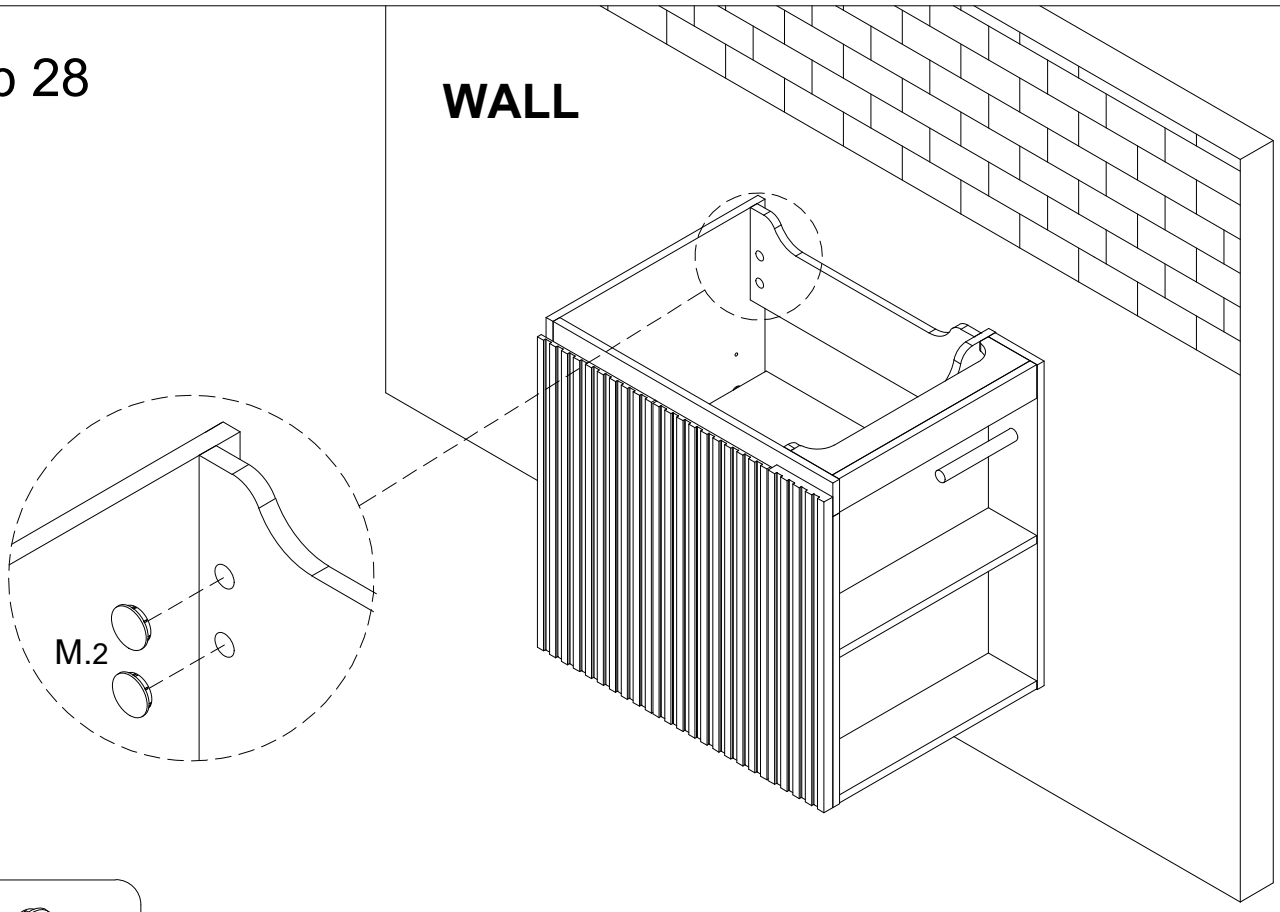

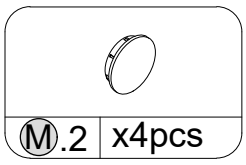


Step 29

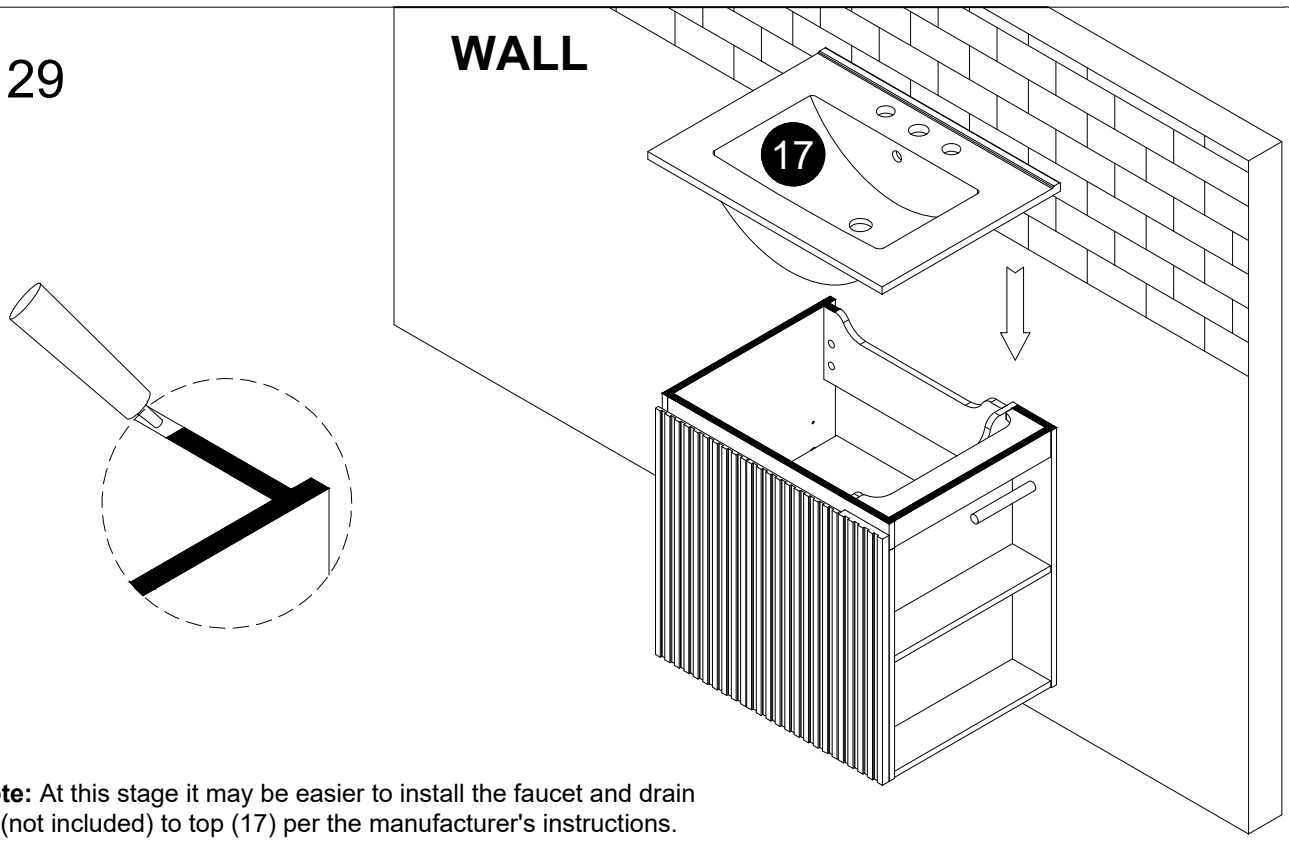


Note: At this stage it may be easier to install the faucet and drain kit (not included) to top (17) per the manufacturer's instructions.
* Apply stain free silicone or latex silicone caulk (not included) to the top edge of vanity. With the help of another adult, gently lower top (17) onto the vanity. Wipe away any excess caulk with a soft cloth, and wait approximately 24 hours for it to dry.

Step 30

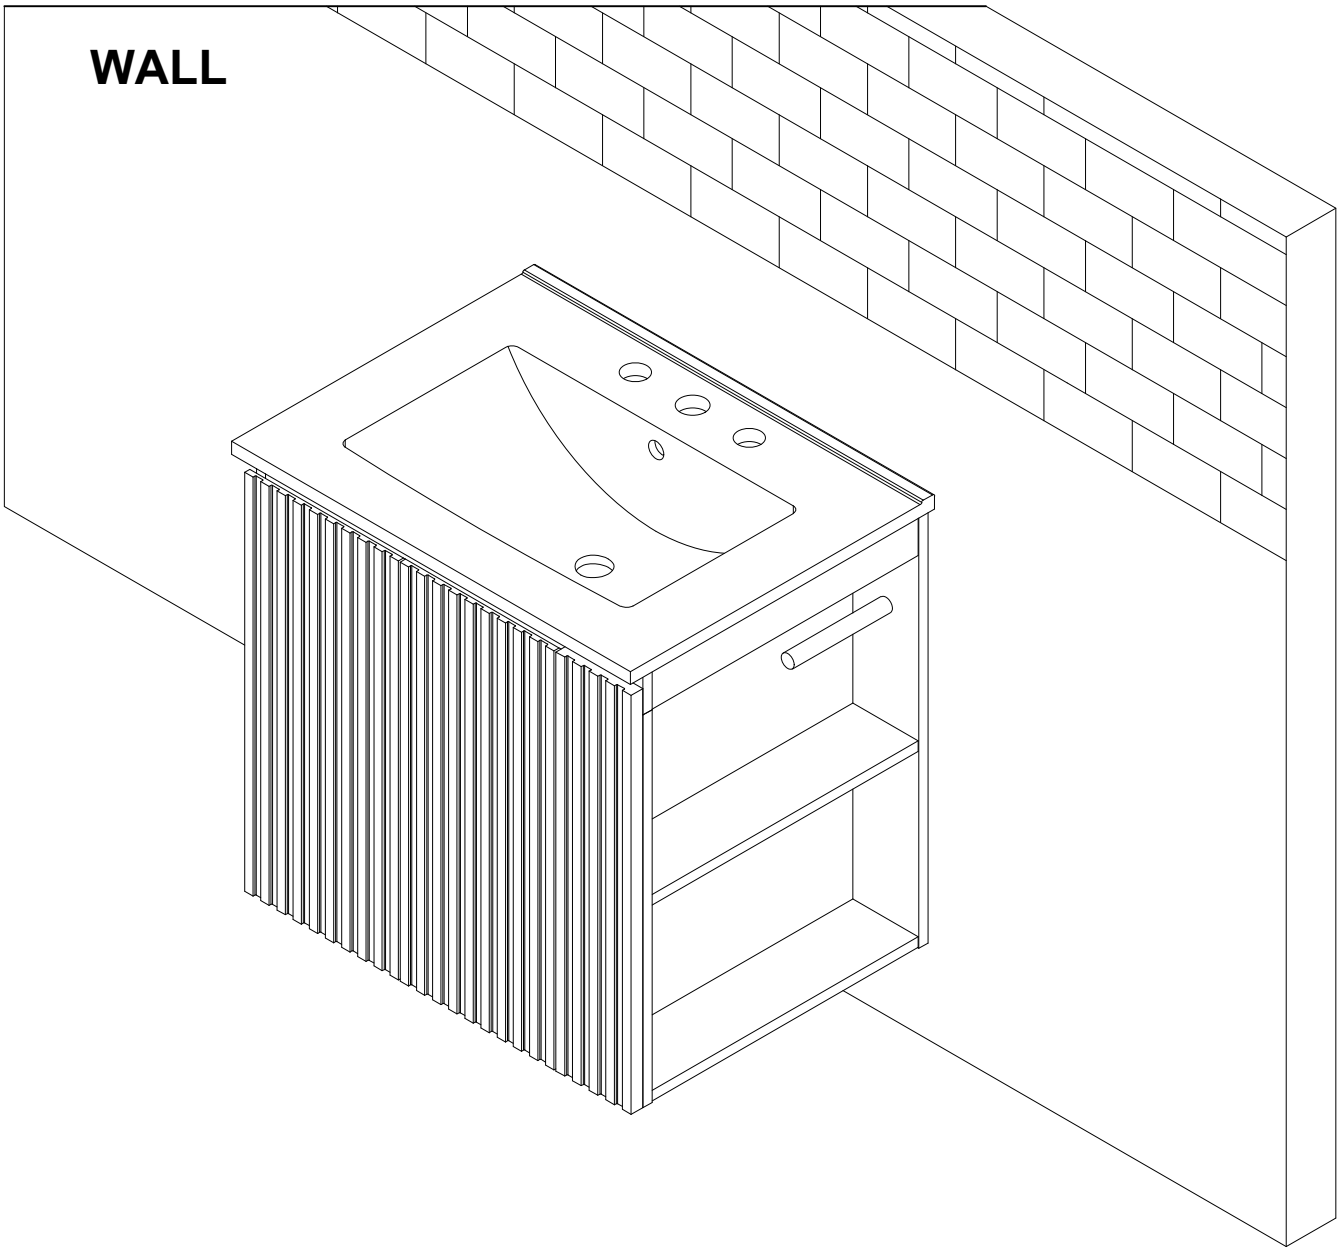




HINGE ADJUSTMENTS

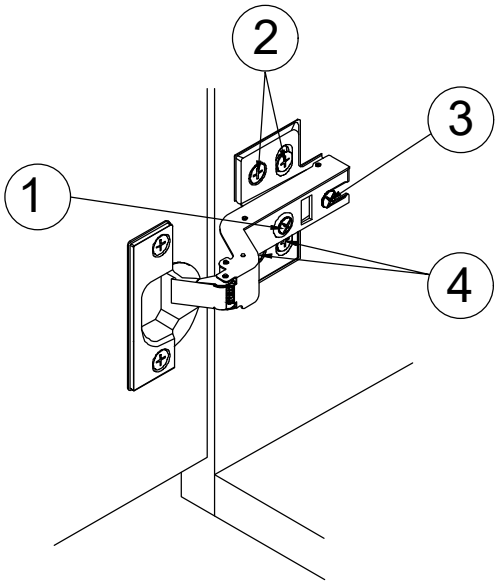


1 Sideways / Tilt adjustment

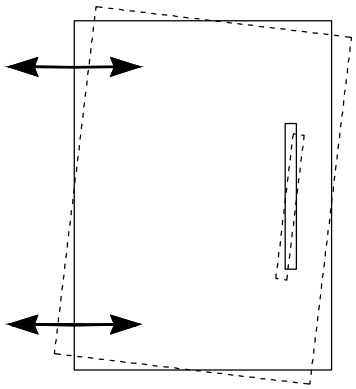


Turn the screw
clockwise to move the door further away from the side of the cabinet
anticlockwise to move the door closer to the side of the cabinet

2 4 Height adjustment

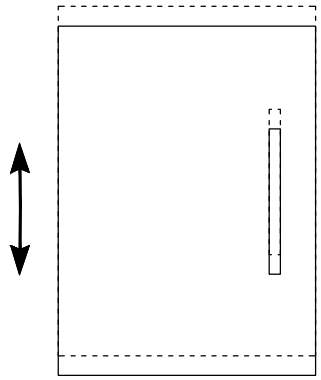

While supporting the weight of the door, turn the screws
clockwise to move the door up
anticlockwise to move the door down

3 Forward and back adjustment

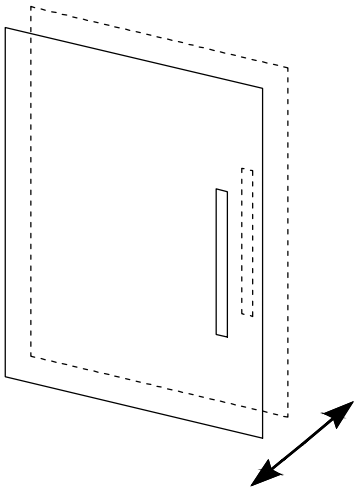

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw
clockwise to decrease the gap between the door and the cabinet
anticlockwise to increase the gap between the door and the cabinet