





ASSEMBLY INSTRUCTIONS

HIGH QUALITY MIRROR




STEP 1

As shown in the figure, check that all accessories are complete.

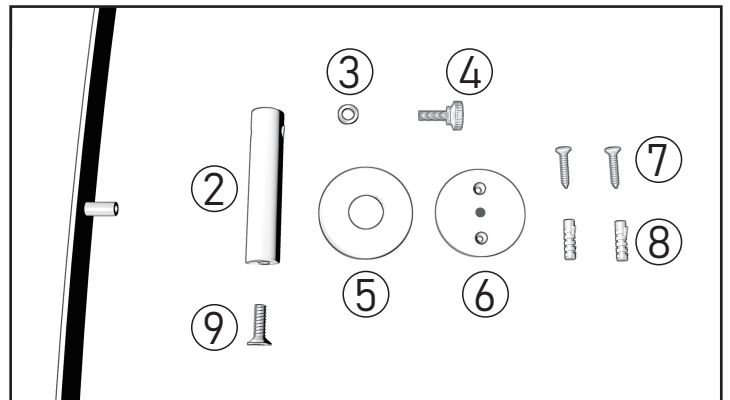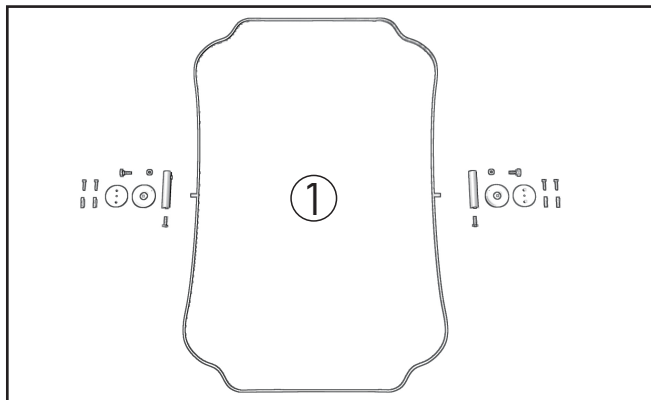


STEP 2

As shown in the figure, assemble accessories No.4, No.2, and No.3 onto the mirror in the corresponding order.

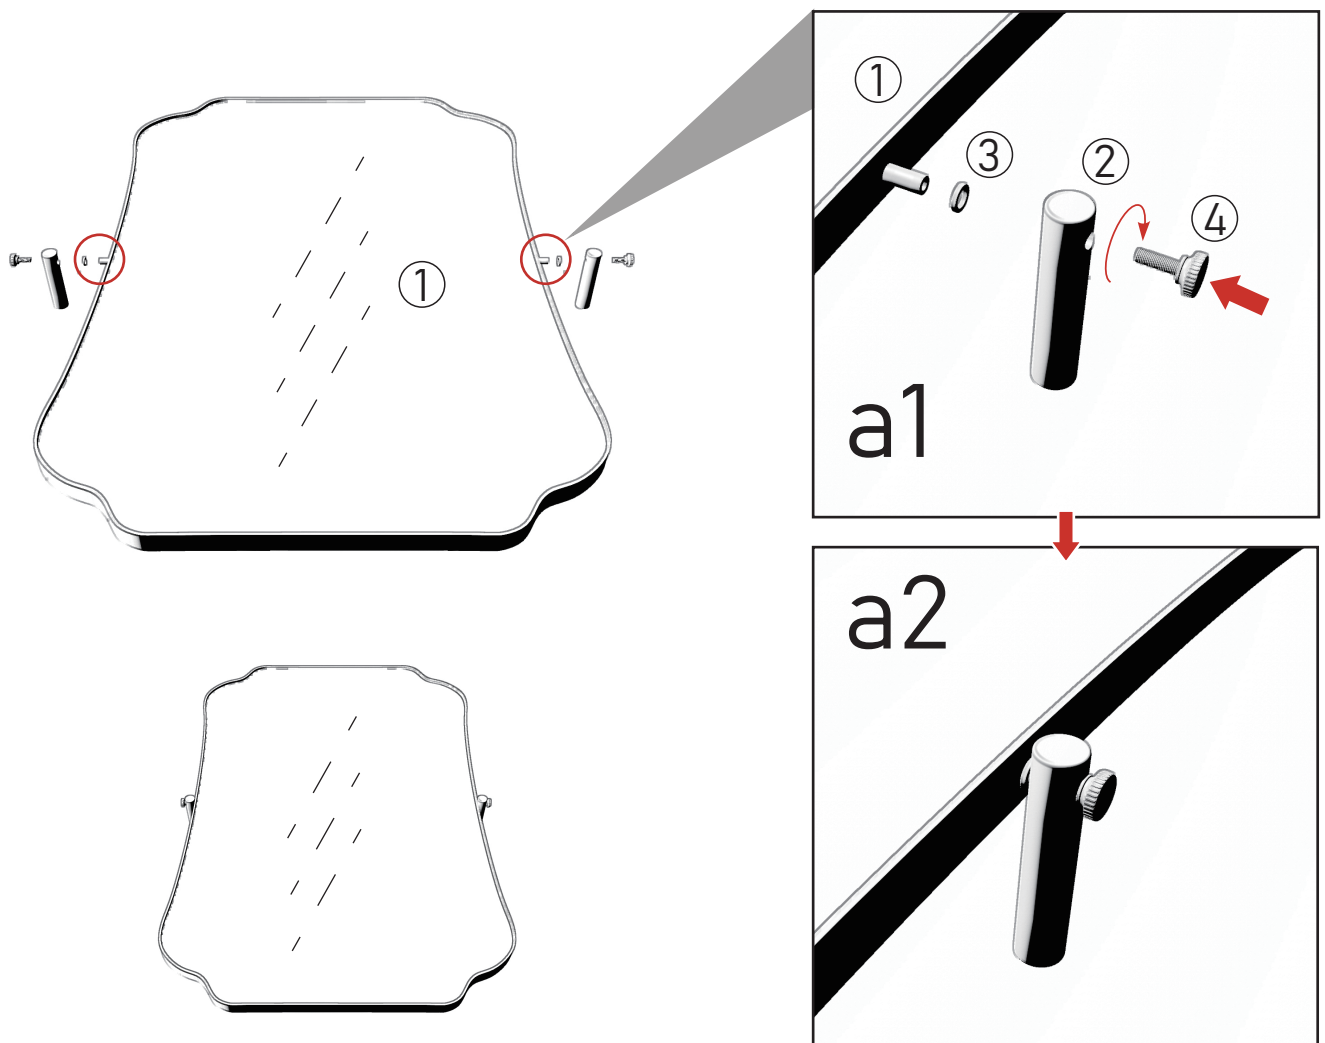


STEP 3

Refer to the illustration. Measure the distance between the center holes of the two No.2 accessories (X1), and mark the wall accordingly. Ensure that H1 and H2 are at the same height, or use a level to keep X1 horizontal.

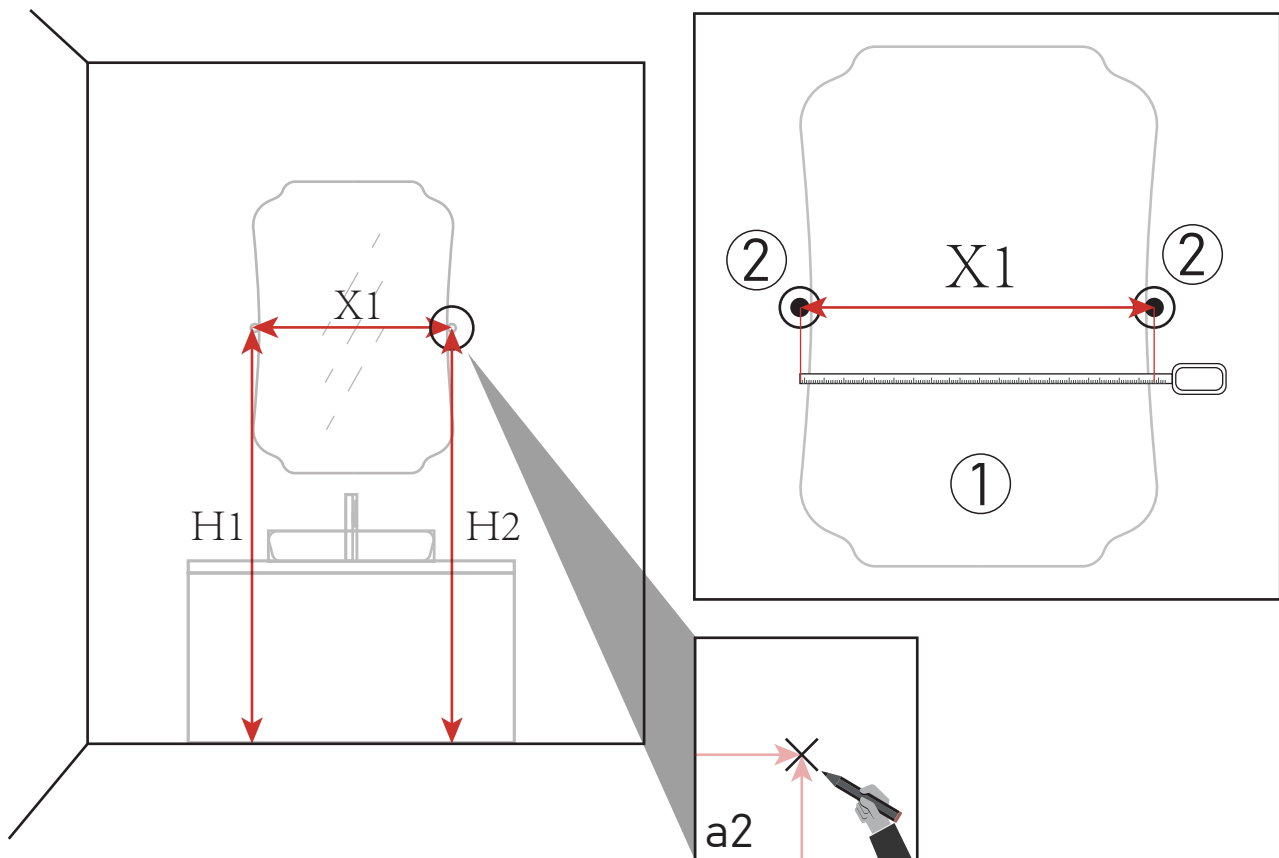


STEP 4

As shown in the figure, place the center hole of accessory No.6 on the marked position, and mark the upper and lower hole positions (Note: ensure the marks are vertically aligned). Drill holes at the upper and lower marked positions, then drive accessory No.8 into the holes.

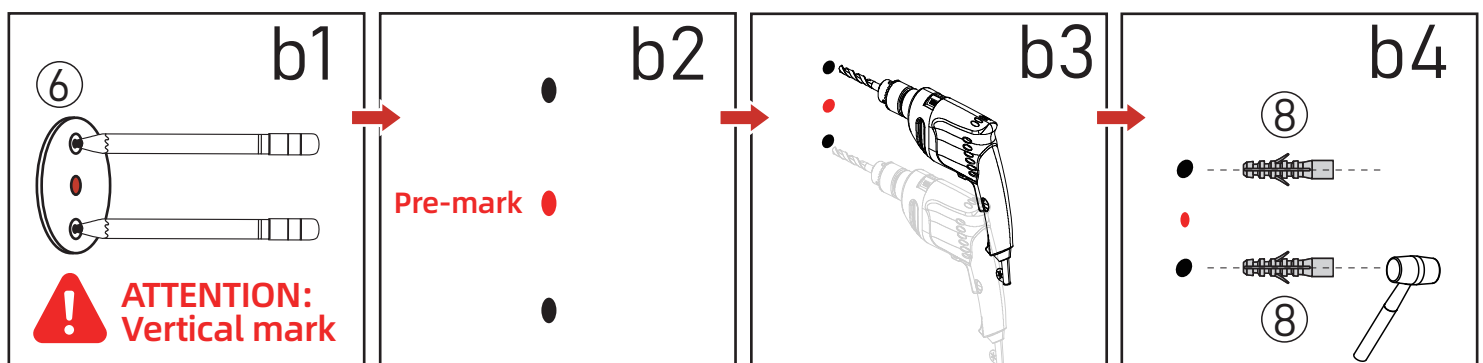

STEP 5

As shown in the figure, assemble accessories No.5, No.6, and No.9 with accessory No.2 in the corresponding order.”

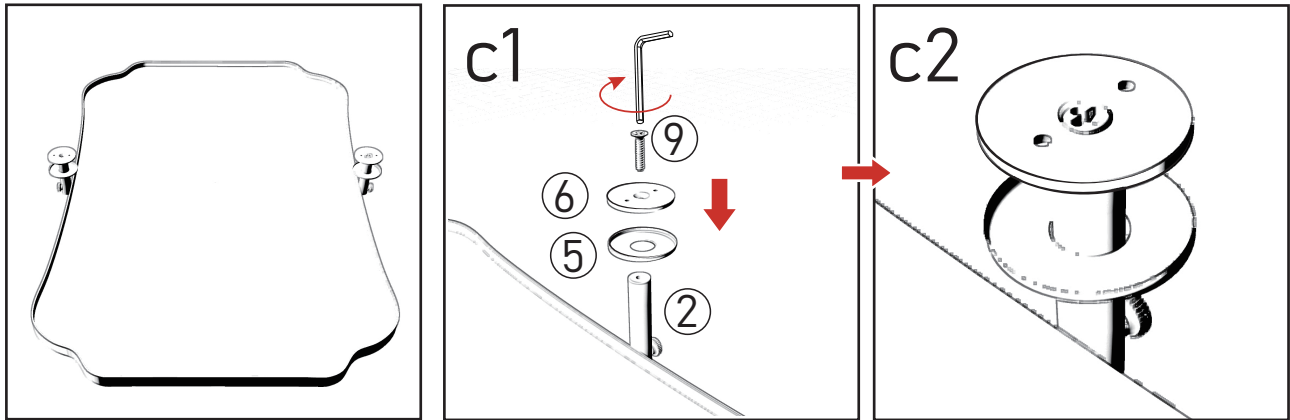

STEP 6

As shown in the figure, use accessory No.7 to secure the mirror to the wall, and finally attach the decorative cover (accessory No.5).

