




96029 Product Installation Instructions

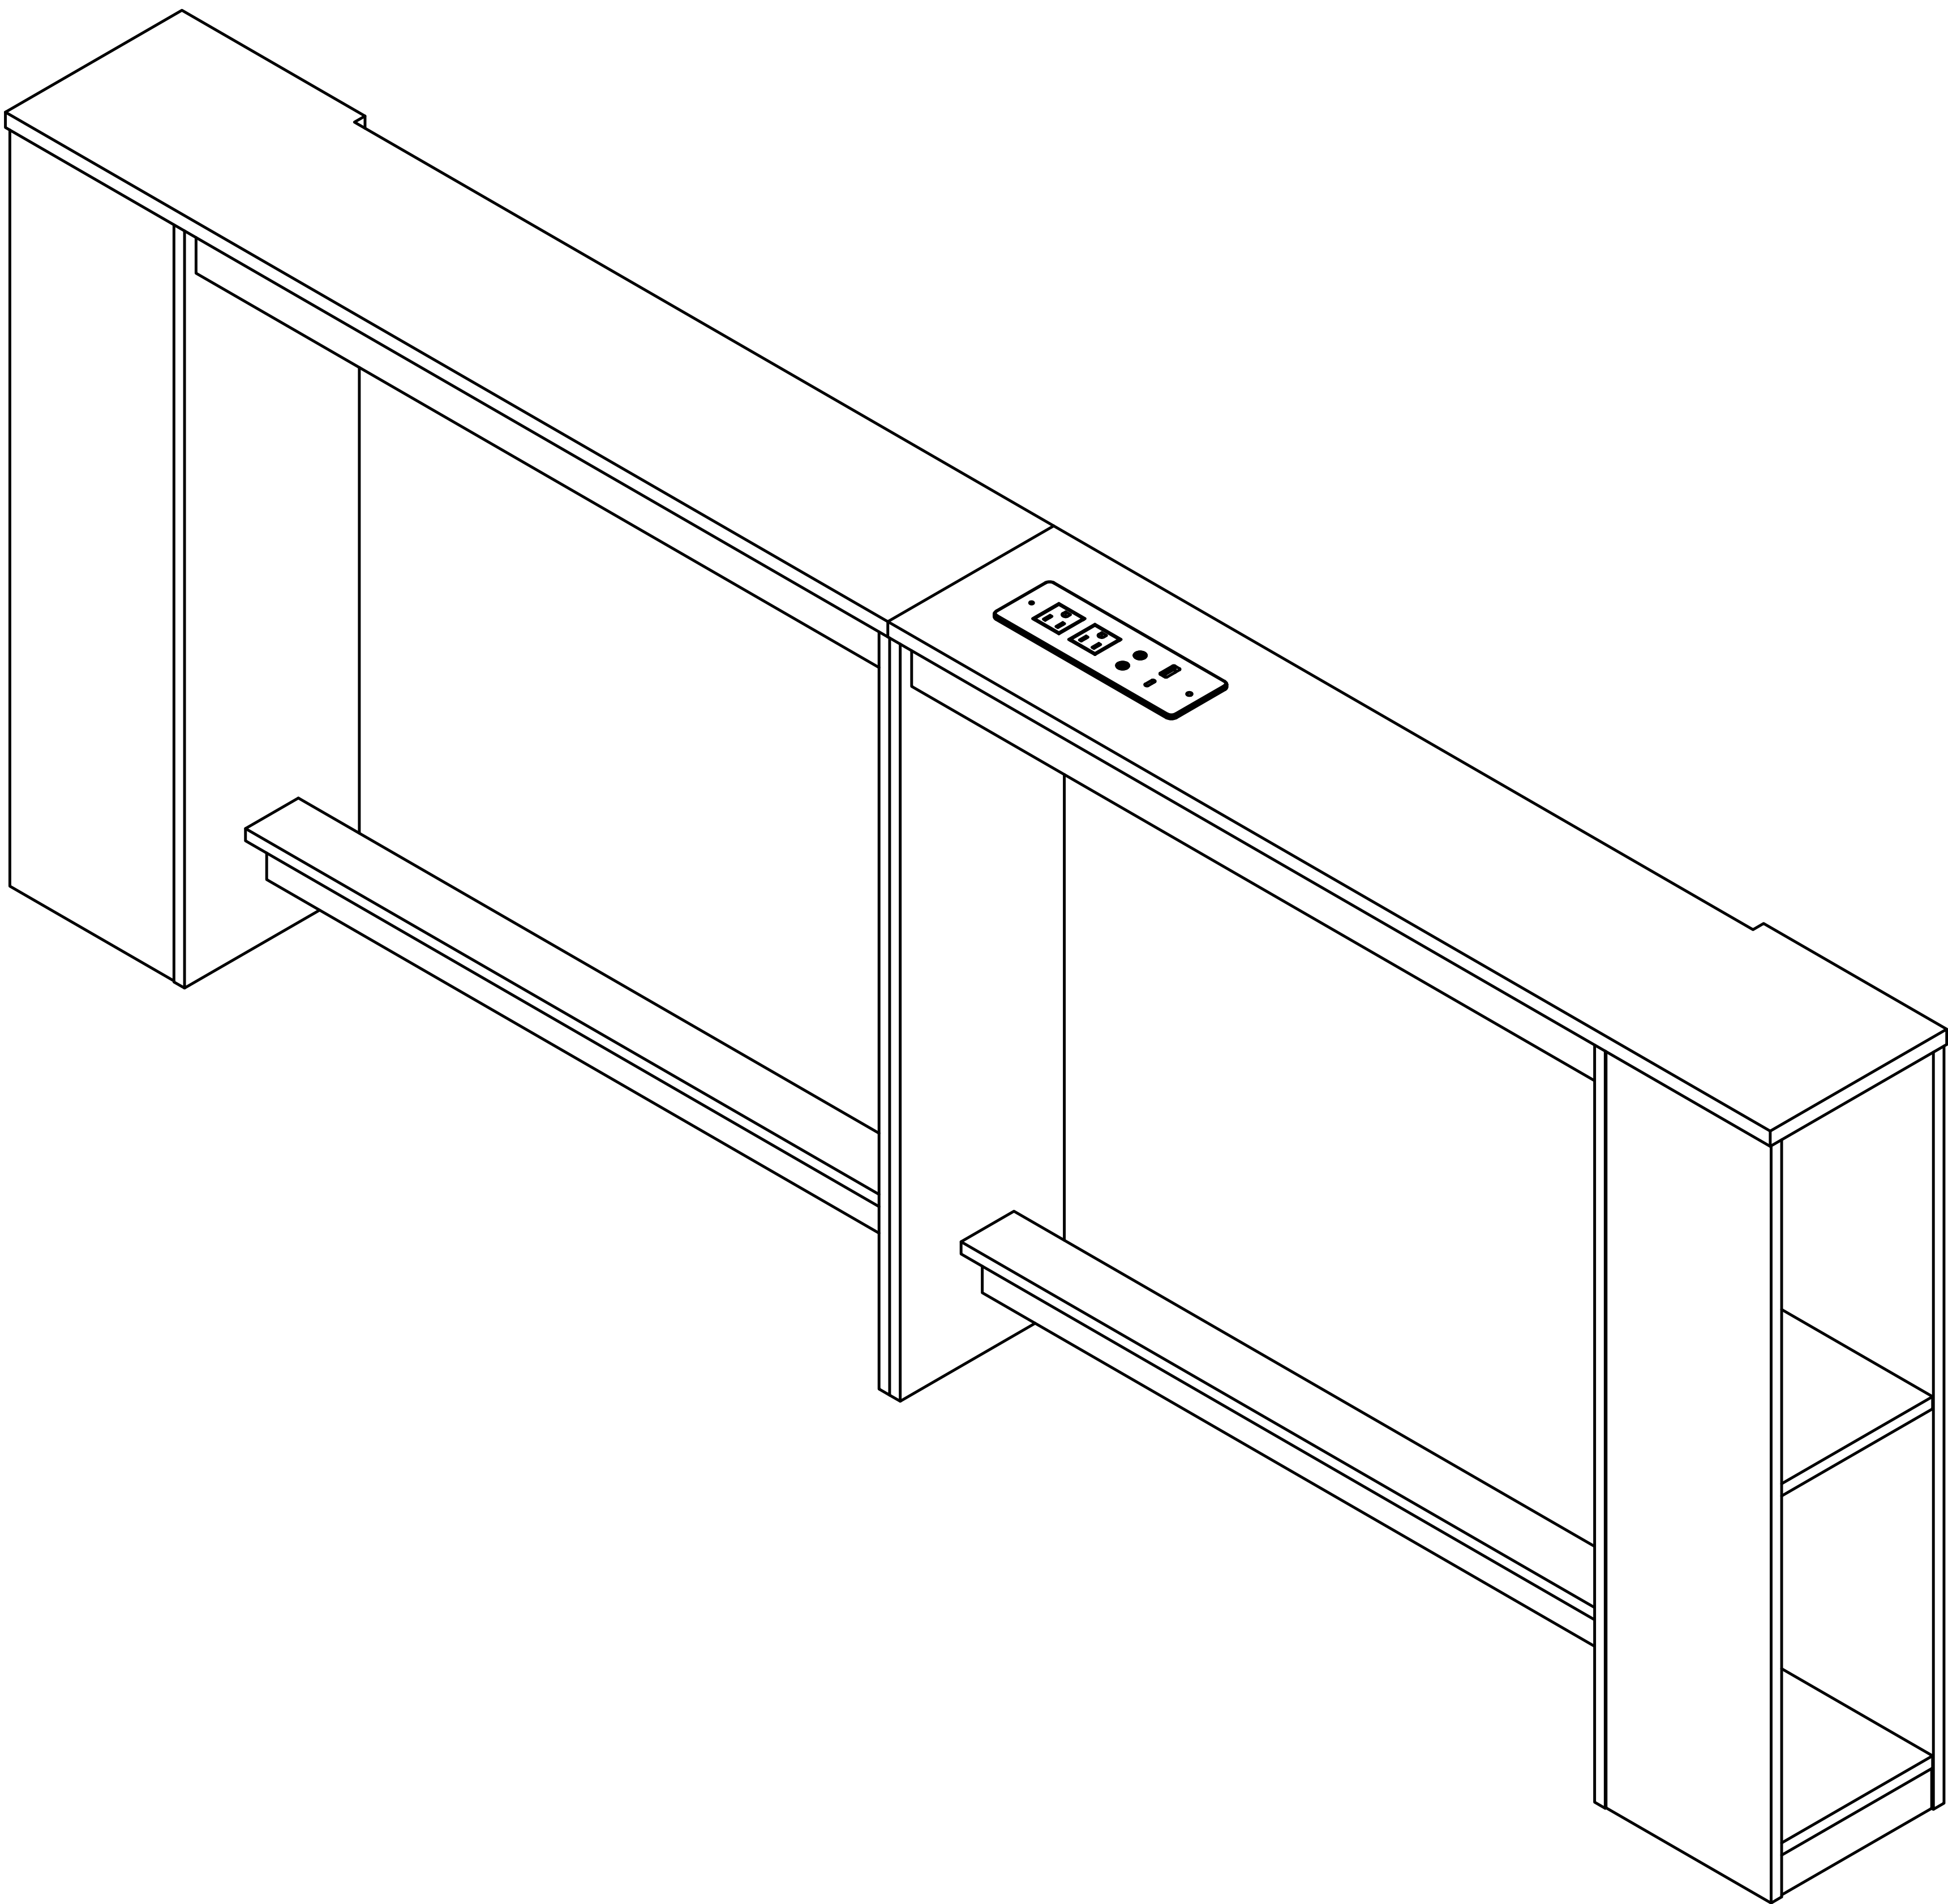


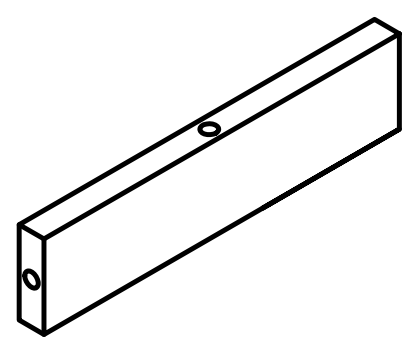


Ax2

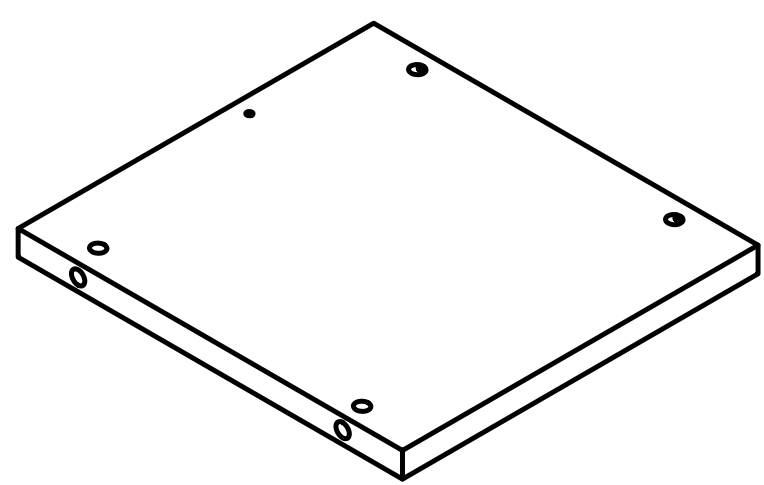


Bx2

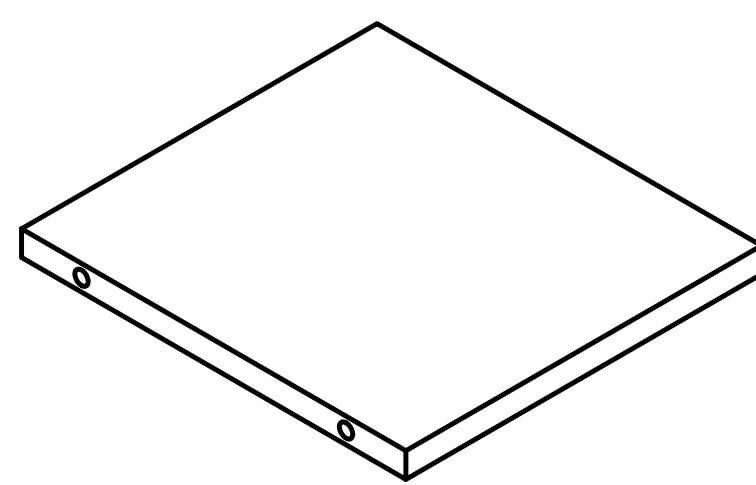


Cx2

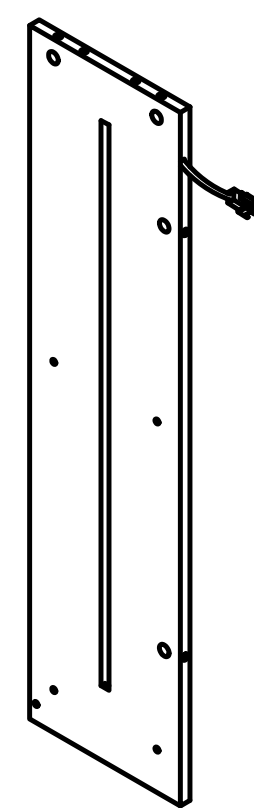


Dx1

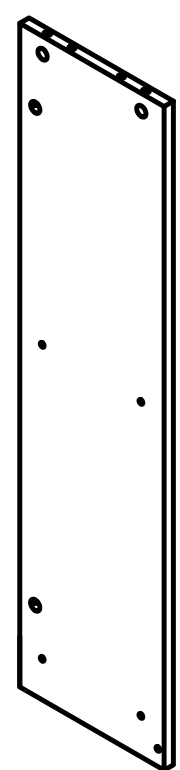


Ex1

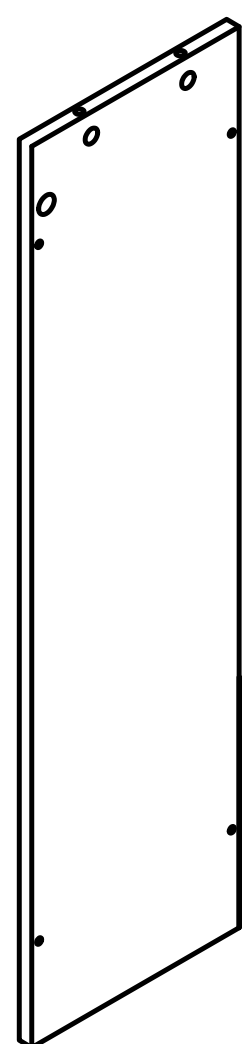


Fx1

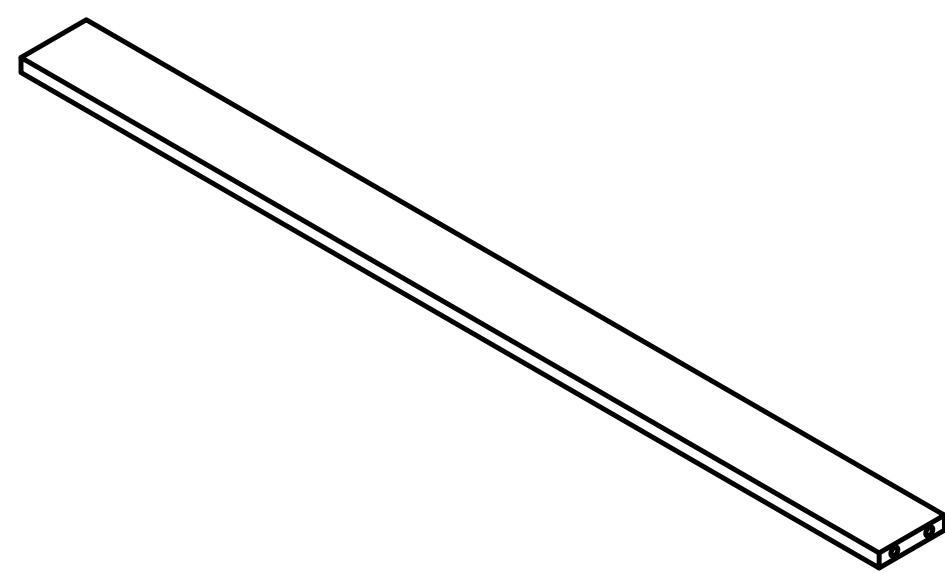


Gx2

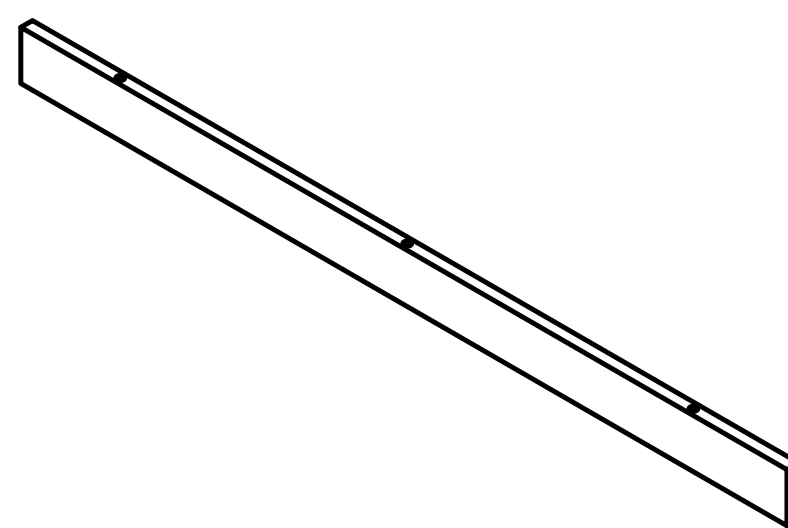


Hx4

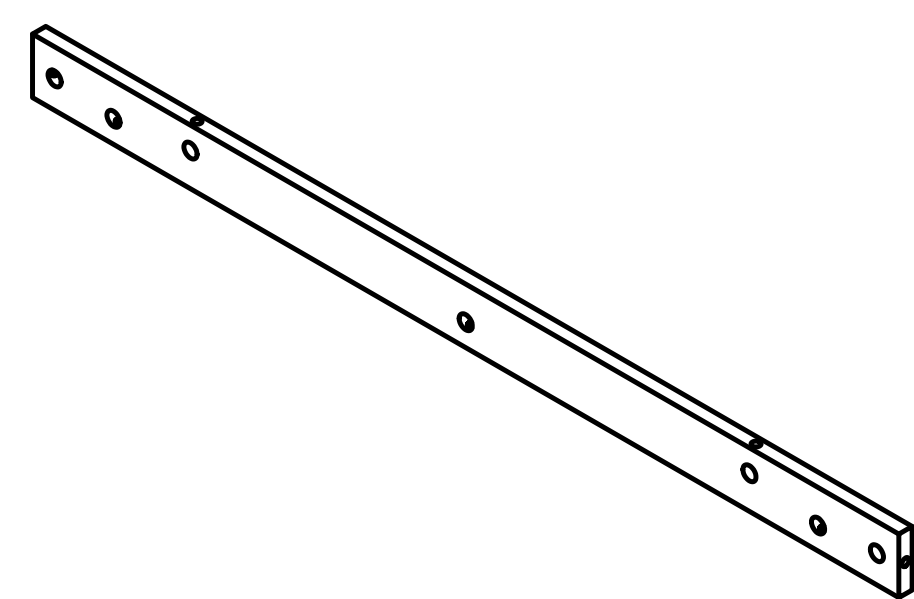


Ix2

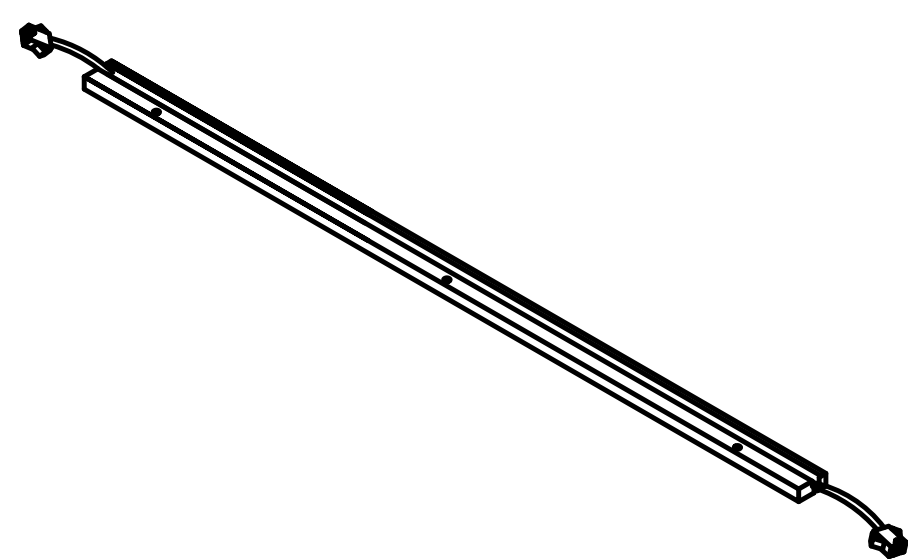


Jx2

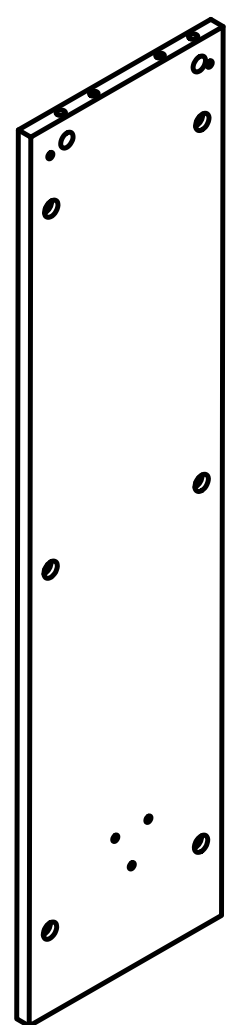


Kx1

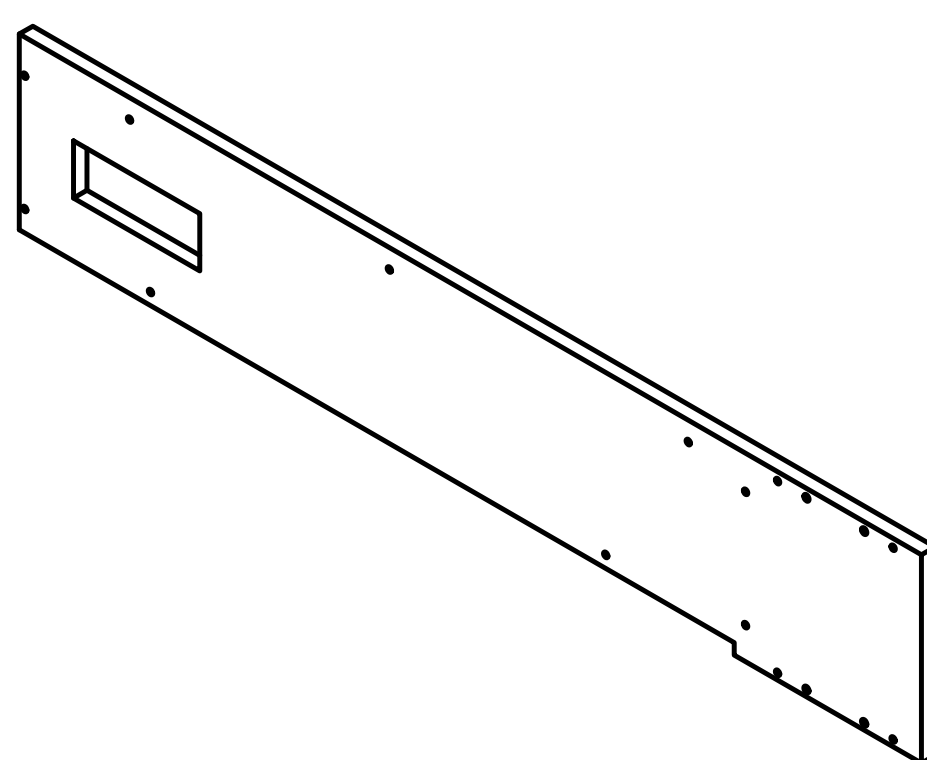


Lx1

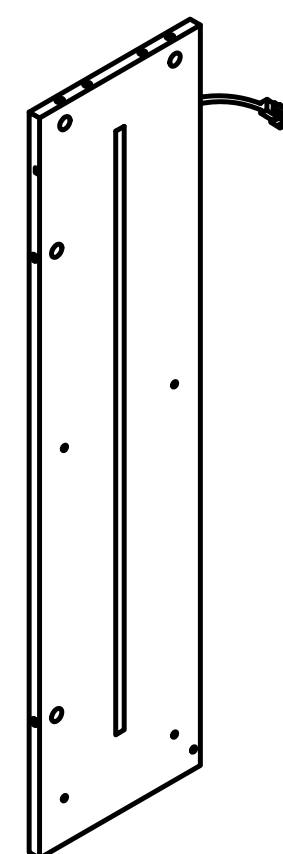


Mx1

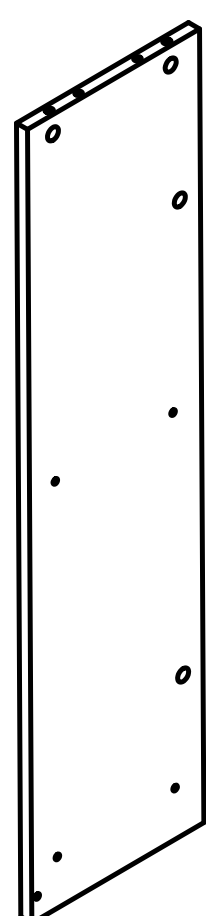


Nx1

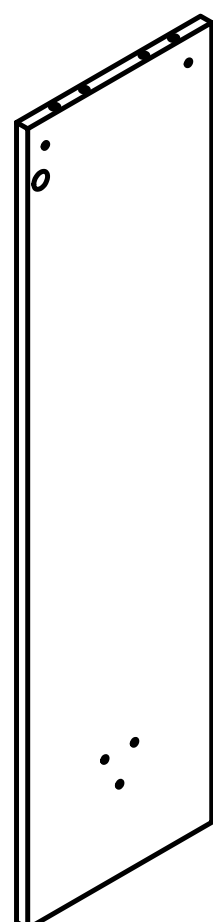

Ox1








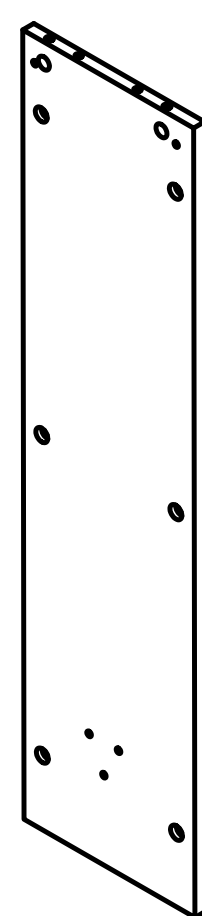



Px1

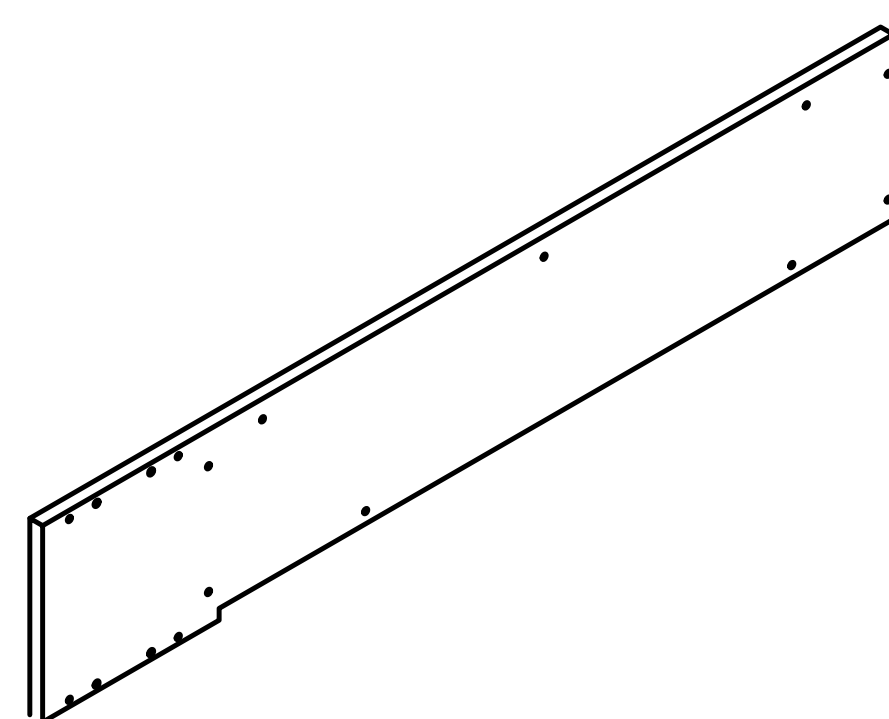


Qx1

Accessories list

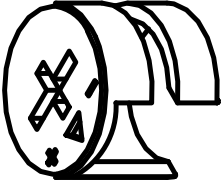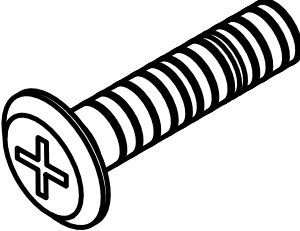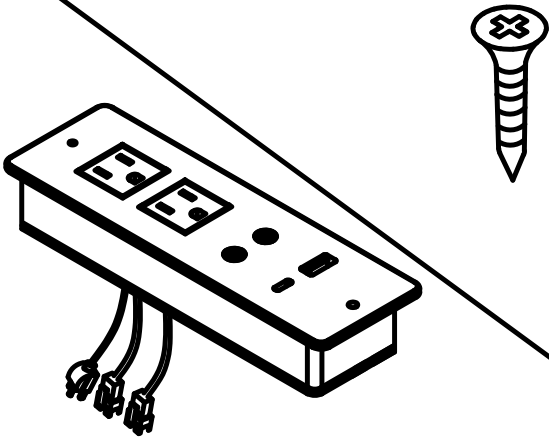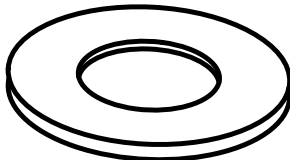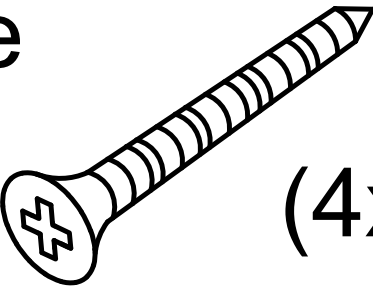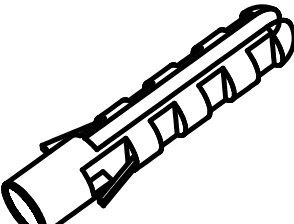①		Two In One Screw (6x28mm)	88pcs +6pcs
②		Two In One Nut (10x12mm)	88pcs +6pcs
③		Wood Chipping (6x30mm)	8pcs +2pcs
④		Screw (6x20mm)	6pcs +1pcs
⑤		Non-slip pads (50x10x2mm)	12pcs +2
⑥		Power strip screw (3x10mm)	2pcs +1 1pcs
⑦	Anti tipping hardware		
	 x2	 x2 (3.5x12mm)	 x4
		 x2 (4x45mm)	 x2

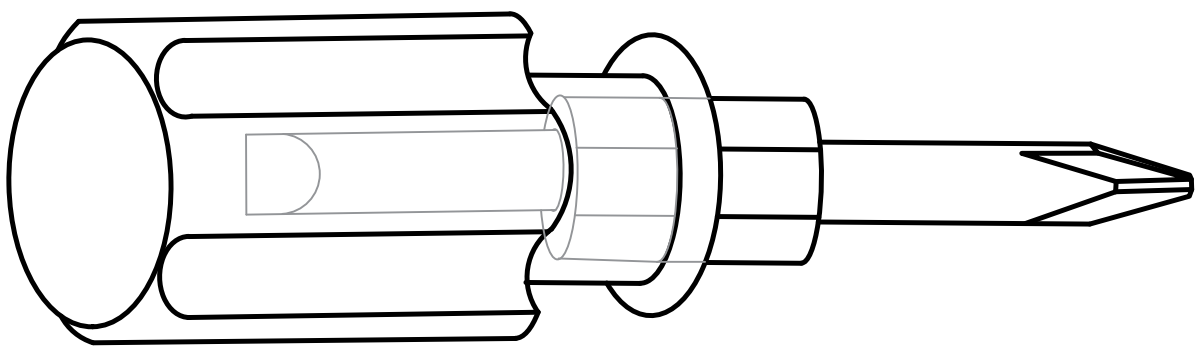


1pcs

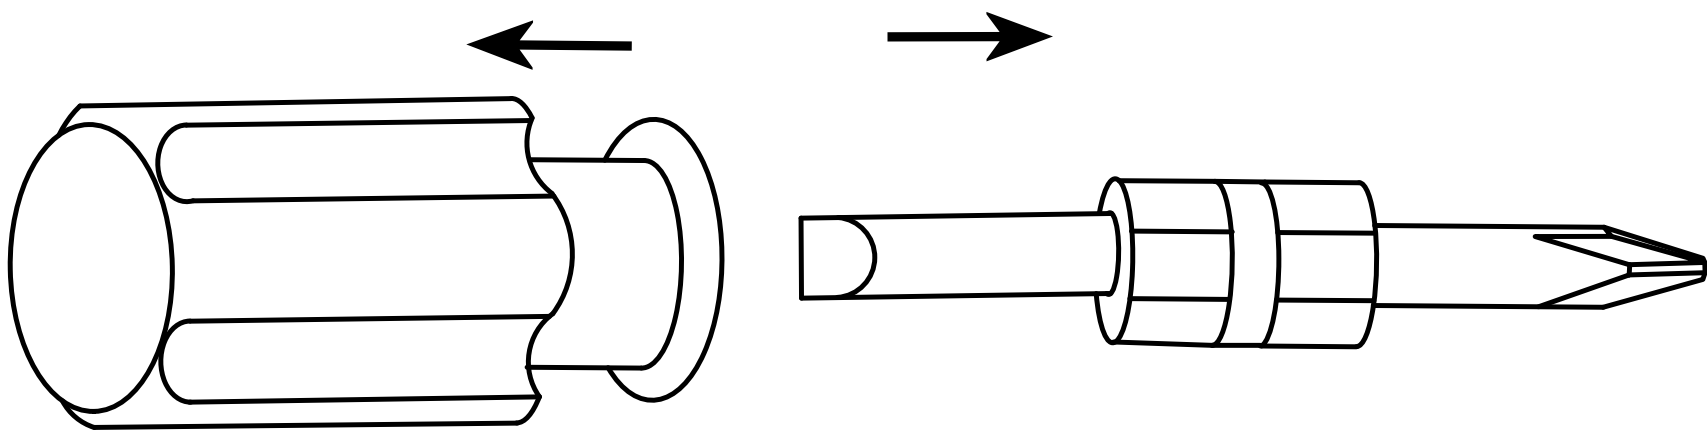


Double-head screwdriver, use as required

Product structure decomposition

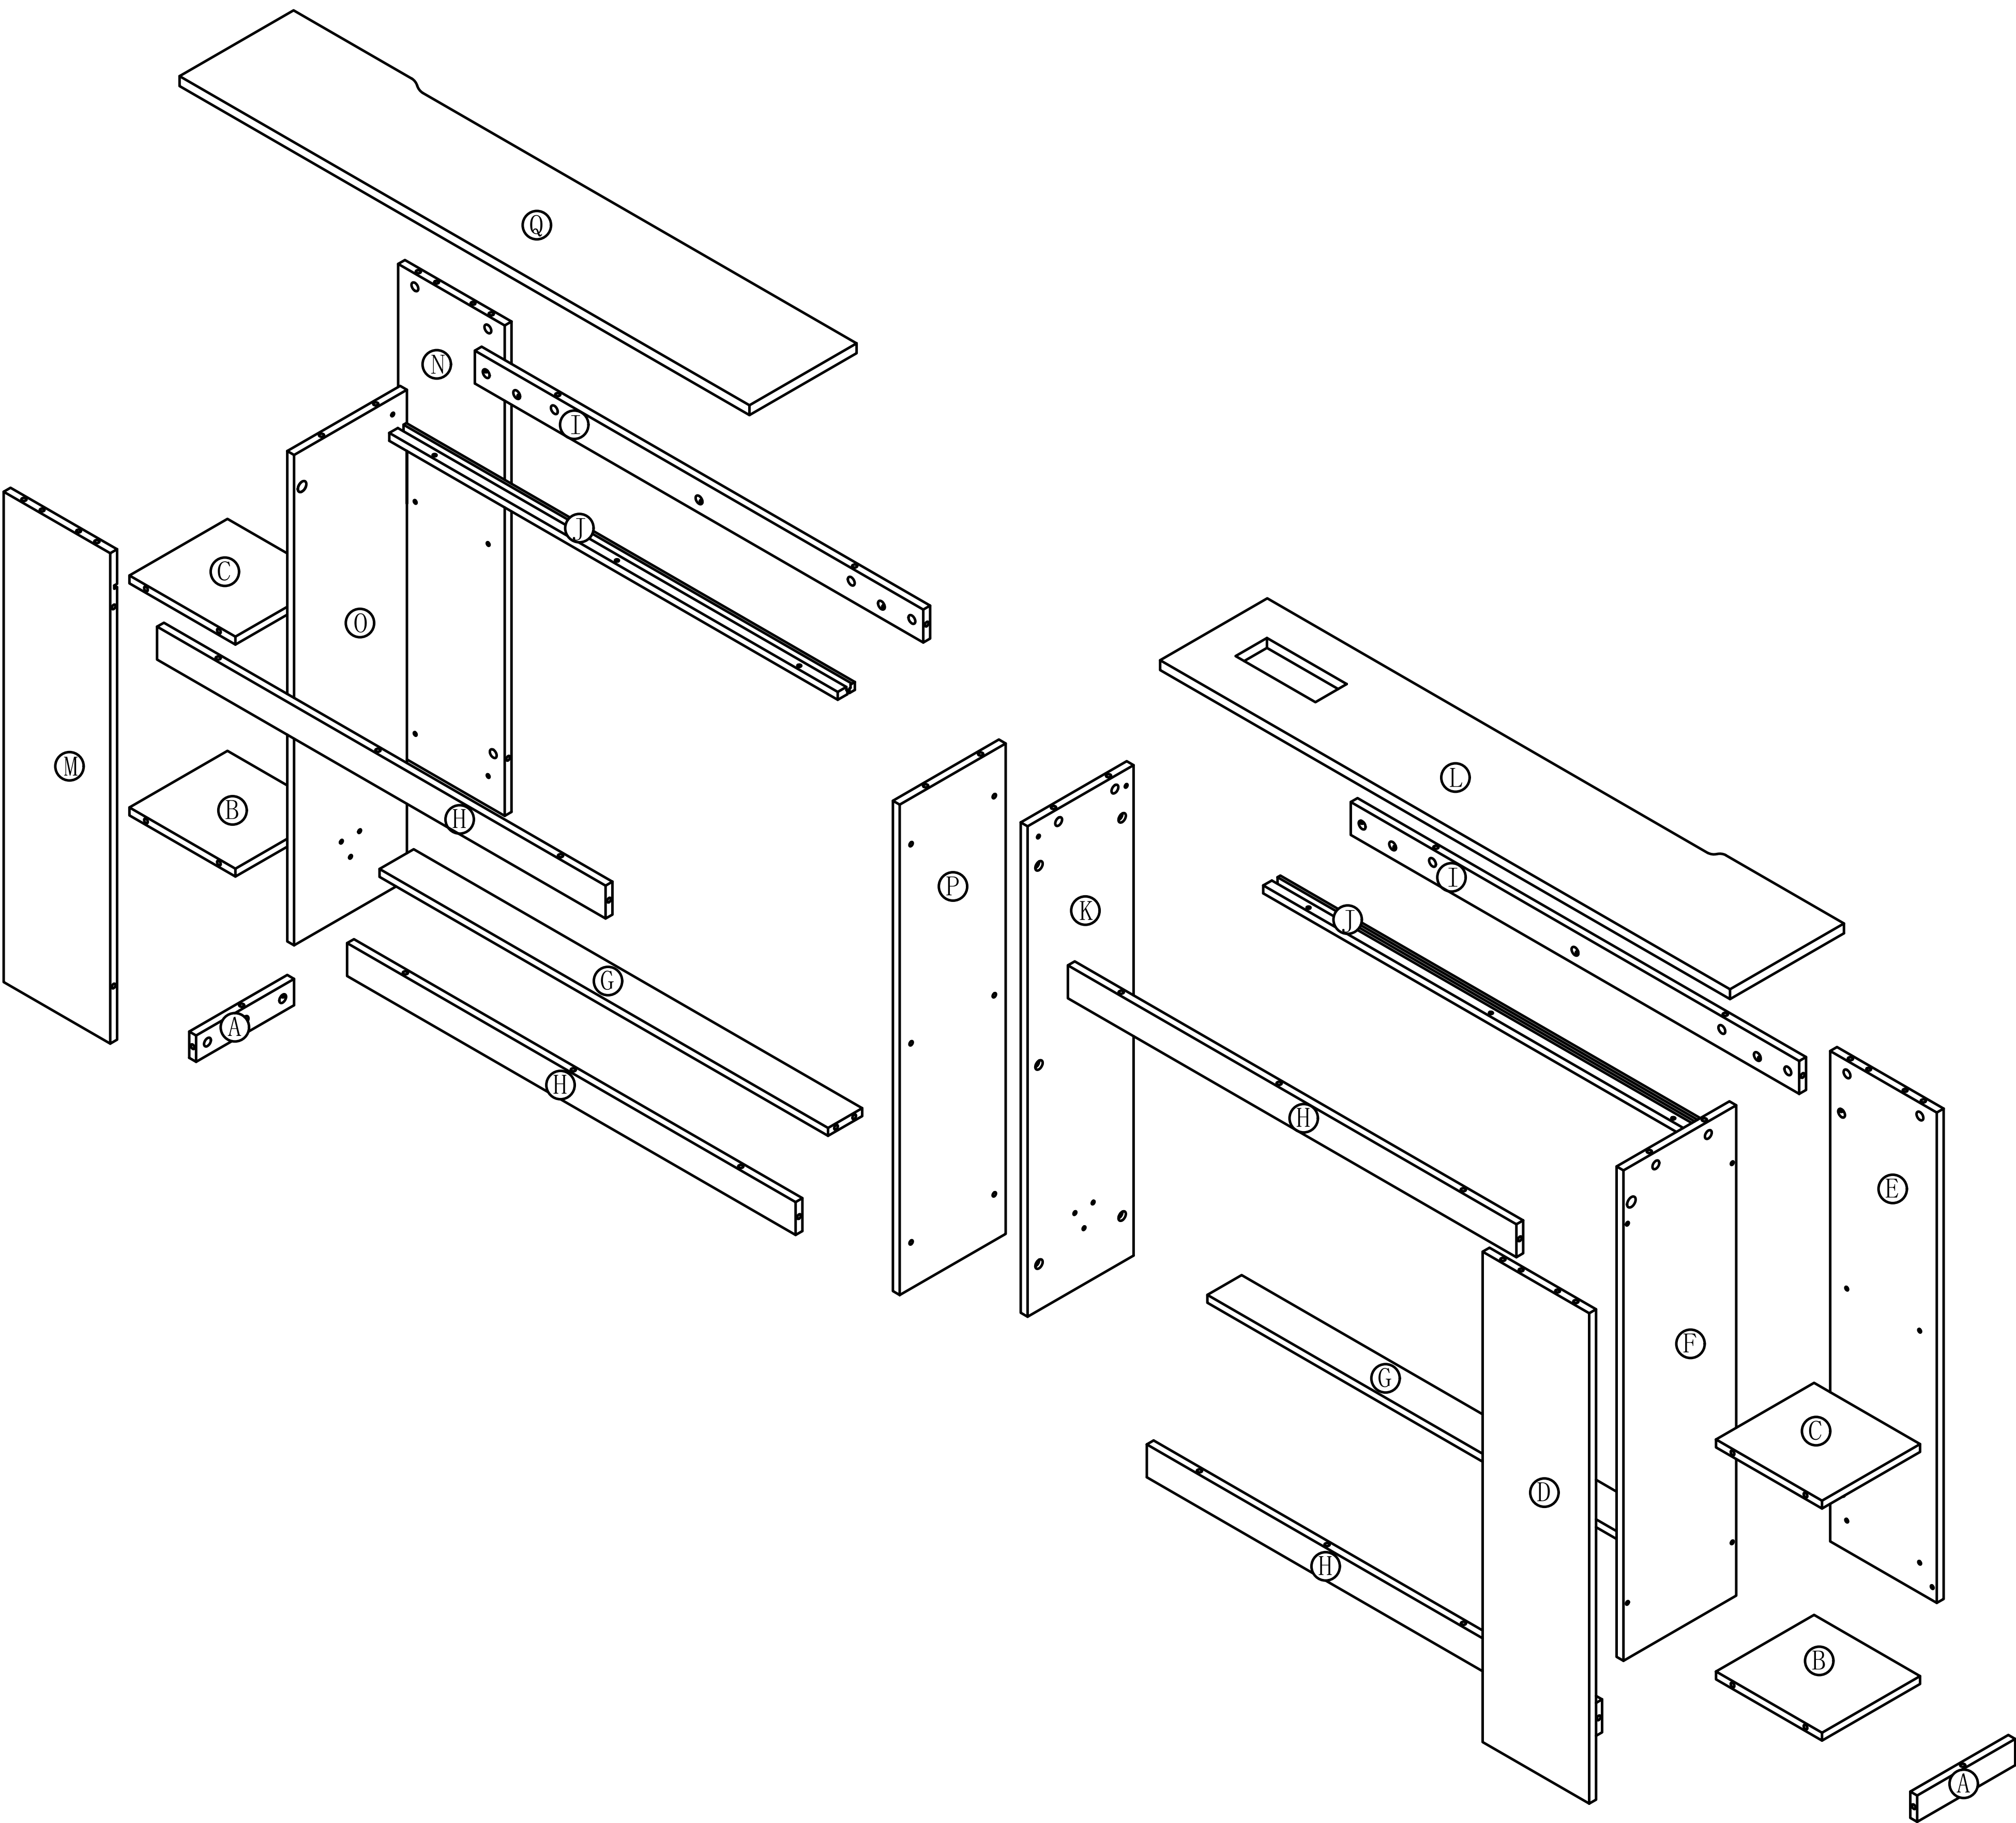


Use parts ① and ②



Step1

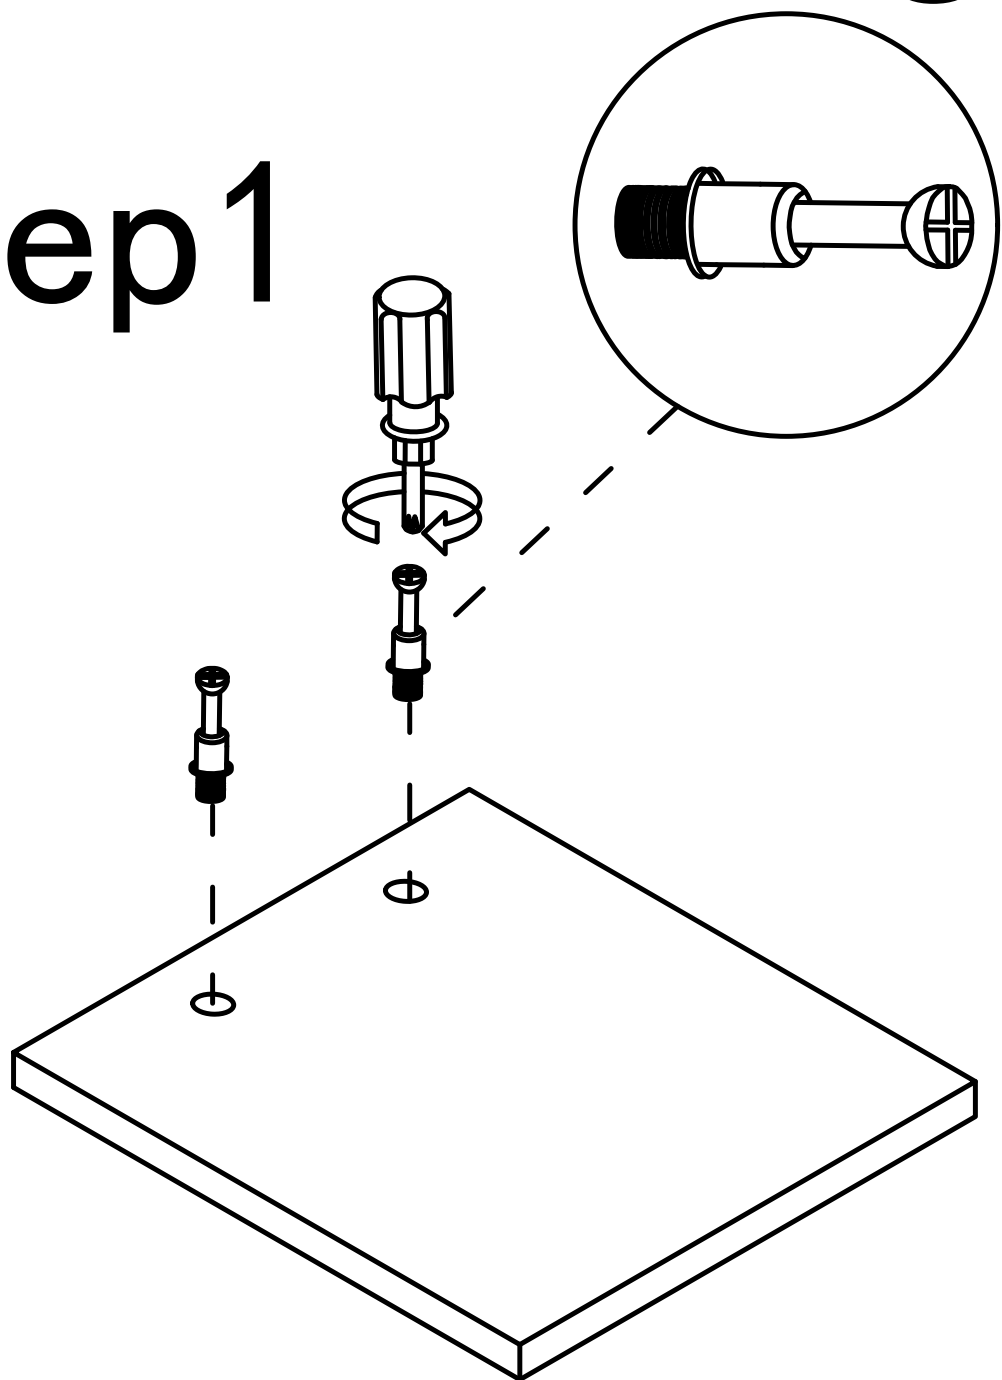


Step2

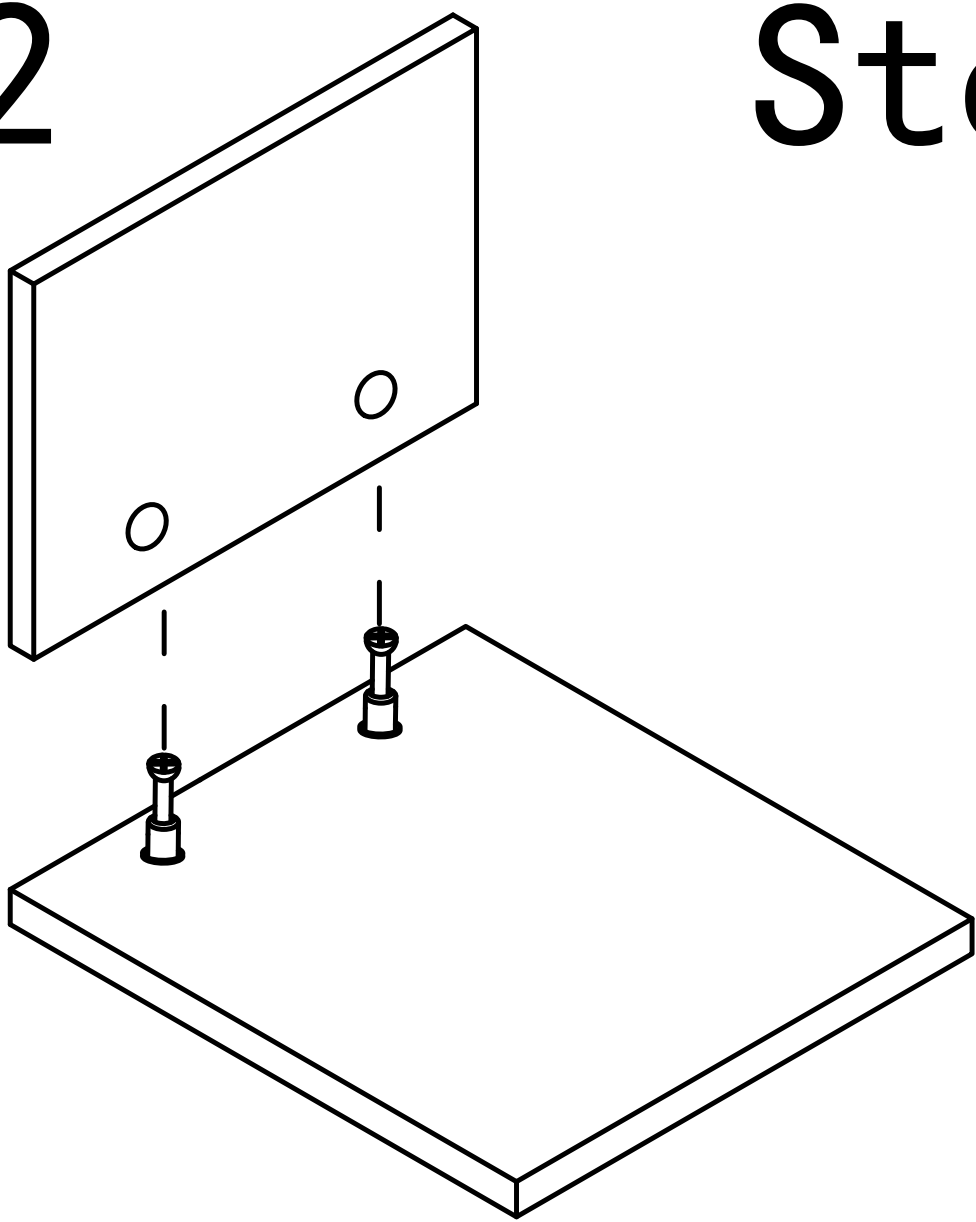

Step3

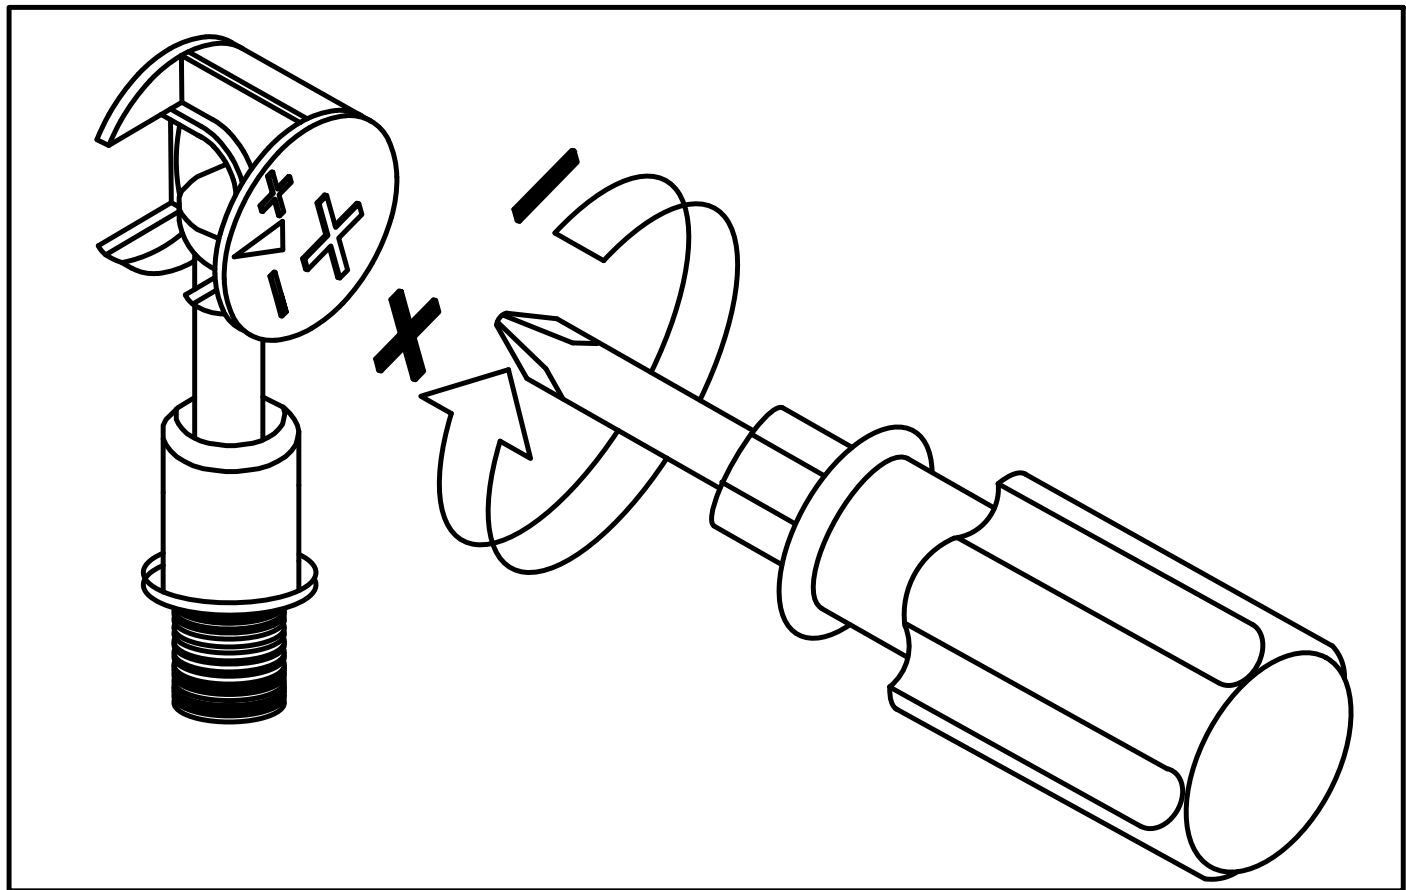
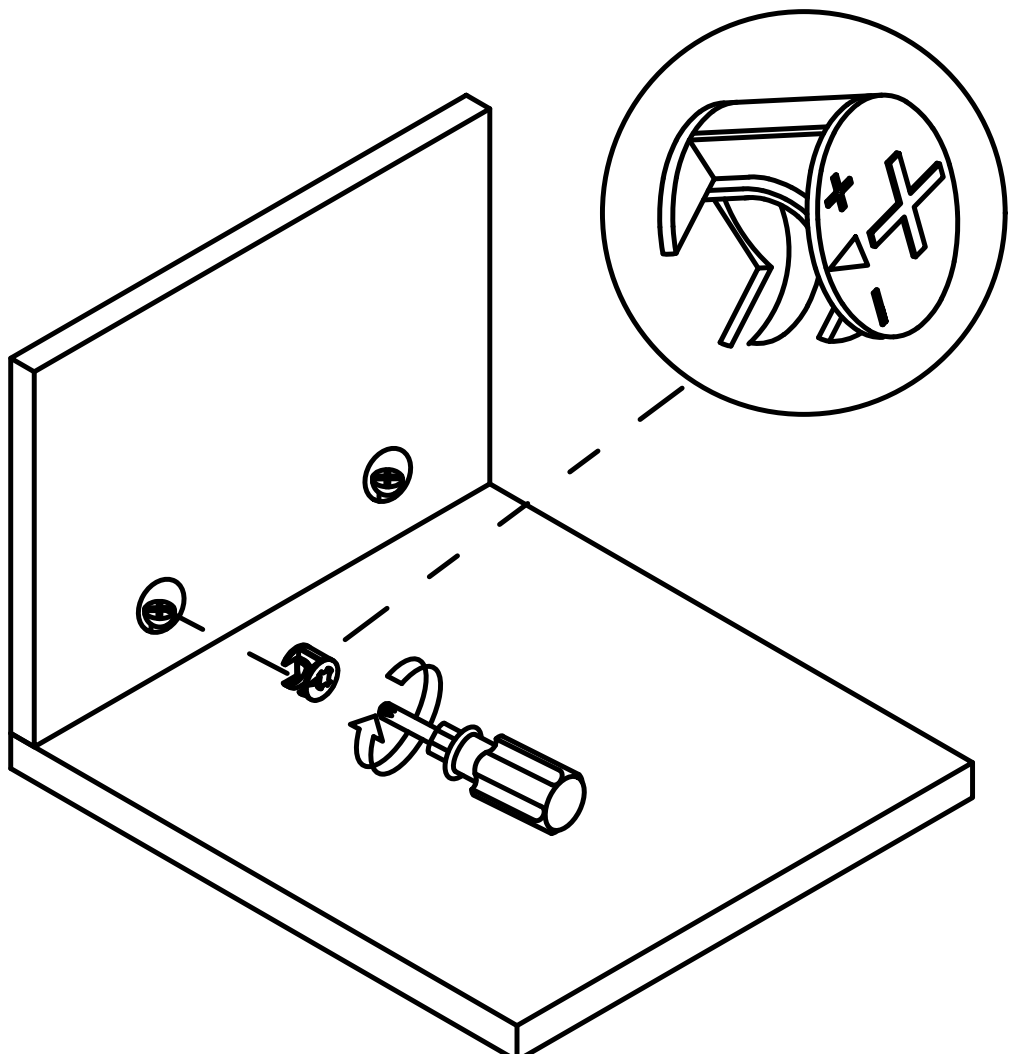


Use a screwdriver to lock in the direction of the "+" sign

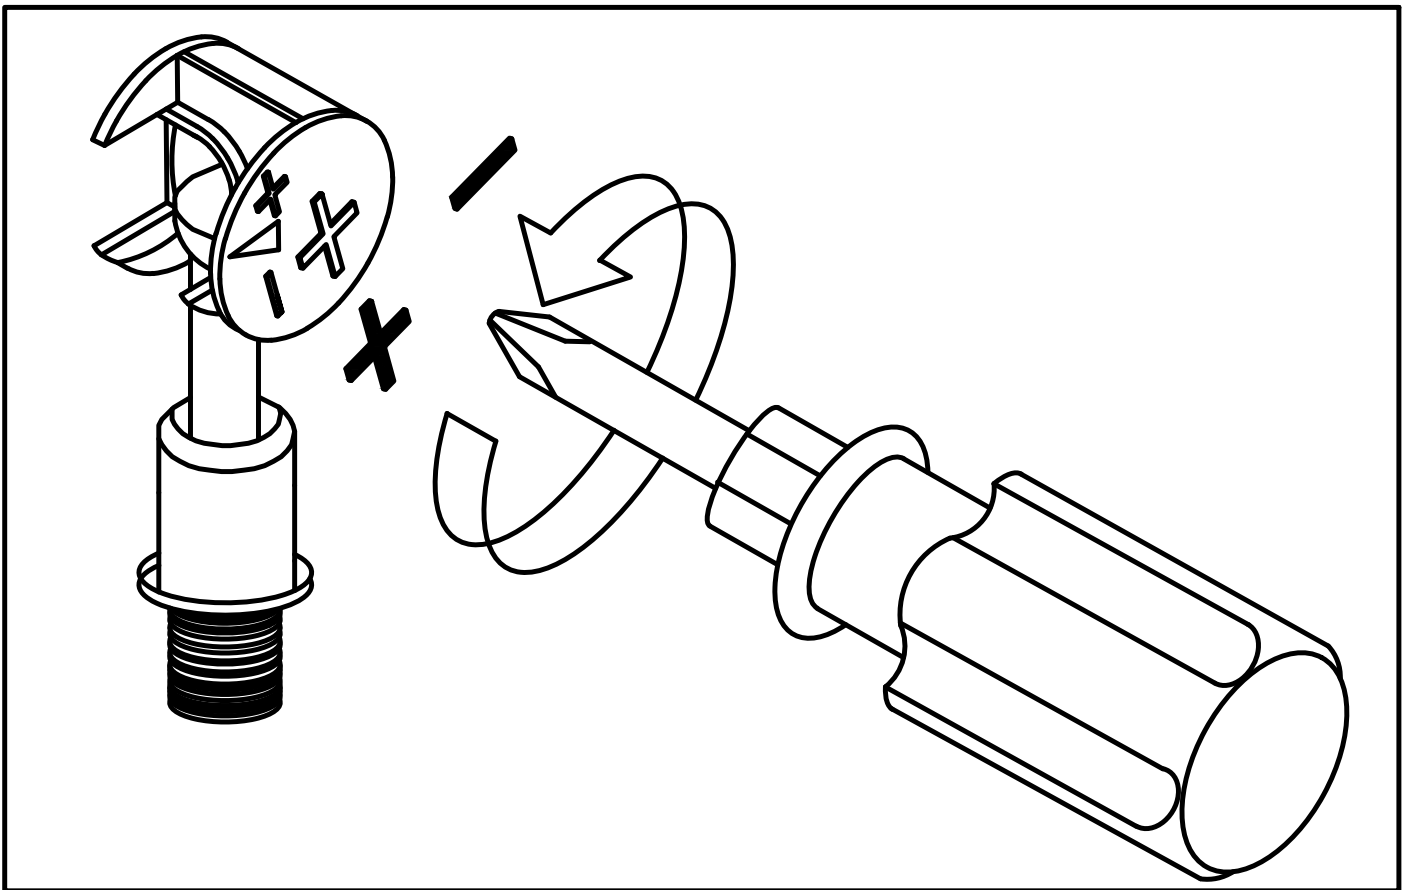


Disassemble along the direction of "-" sign

Step 1

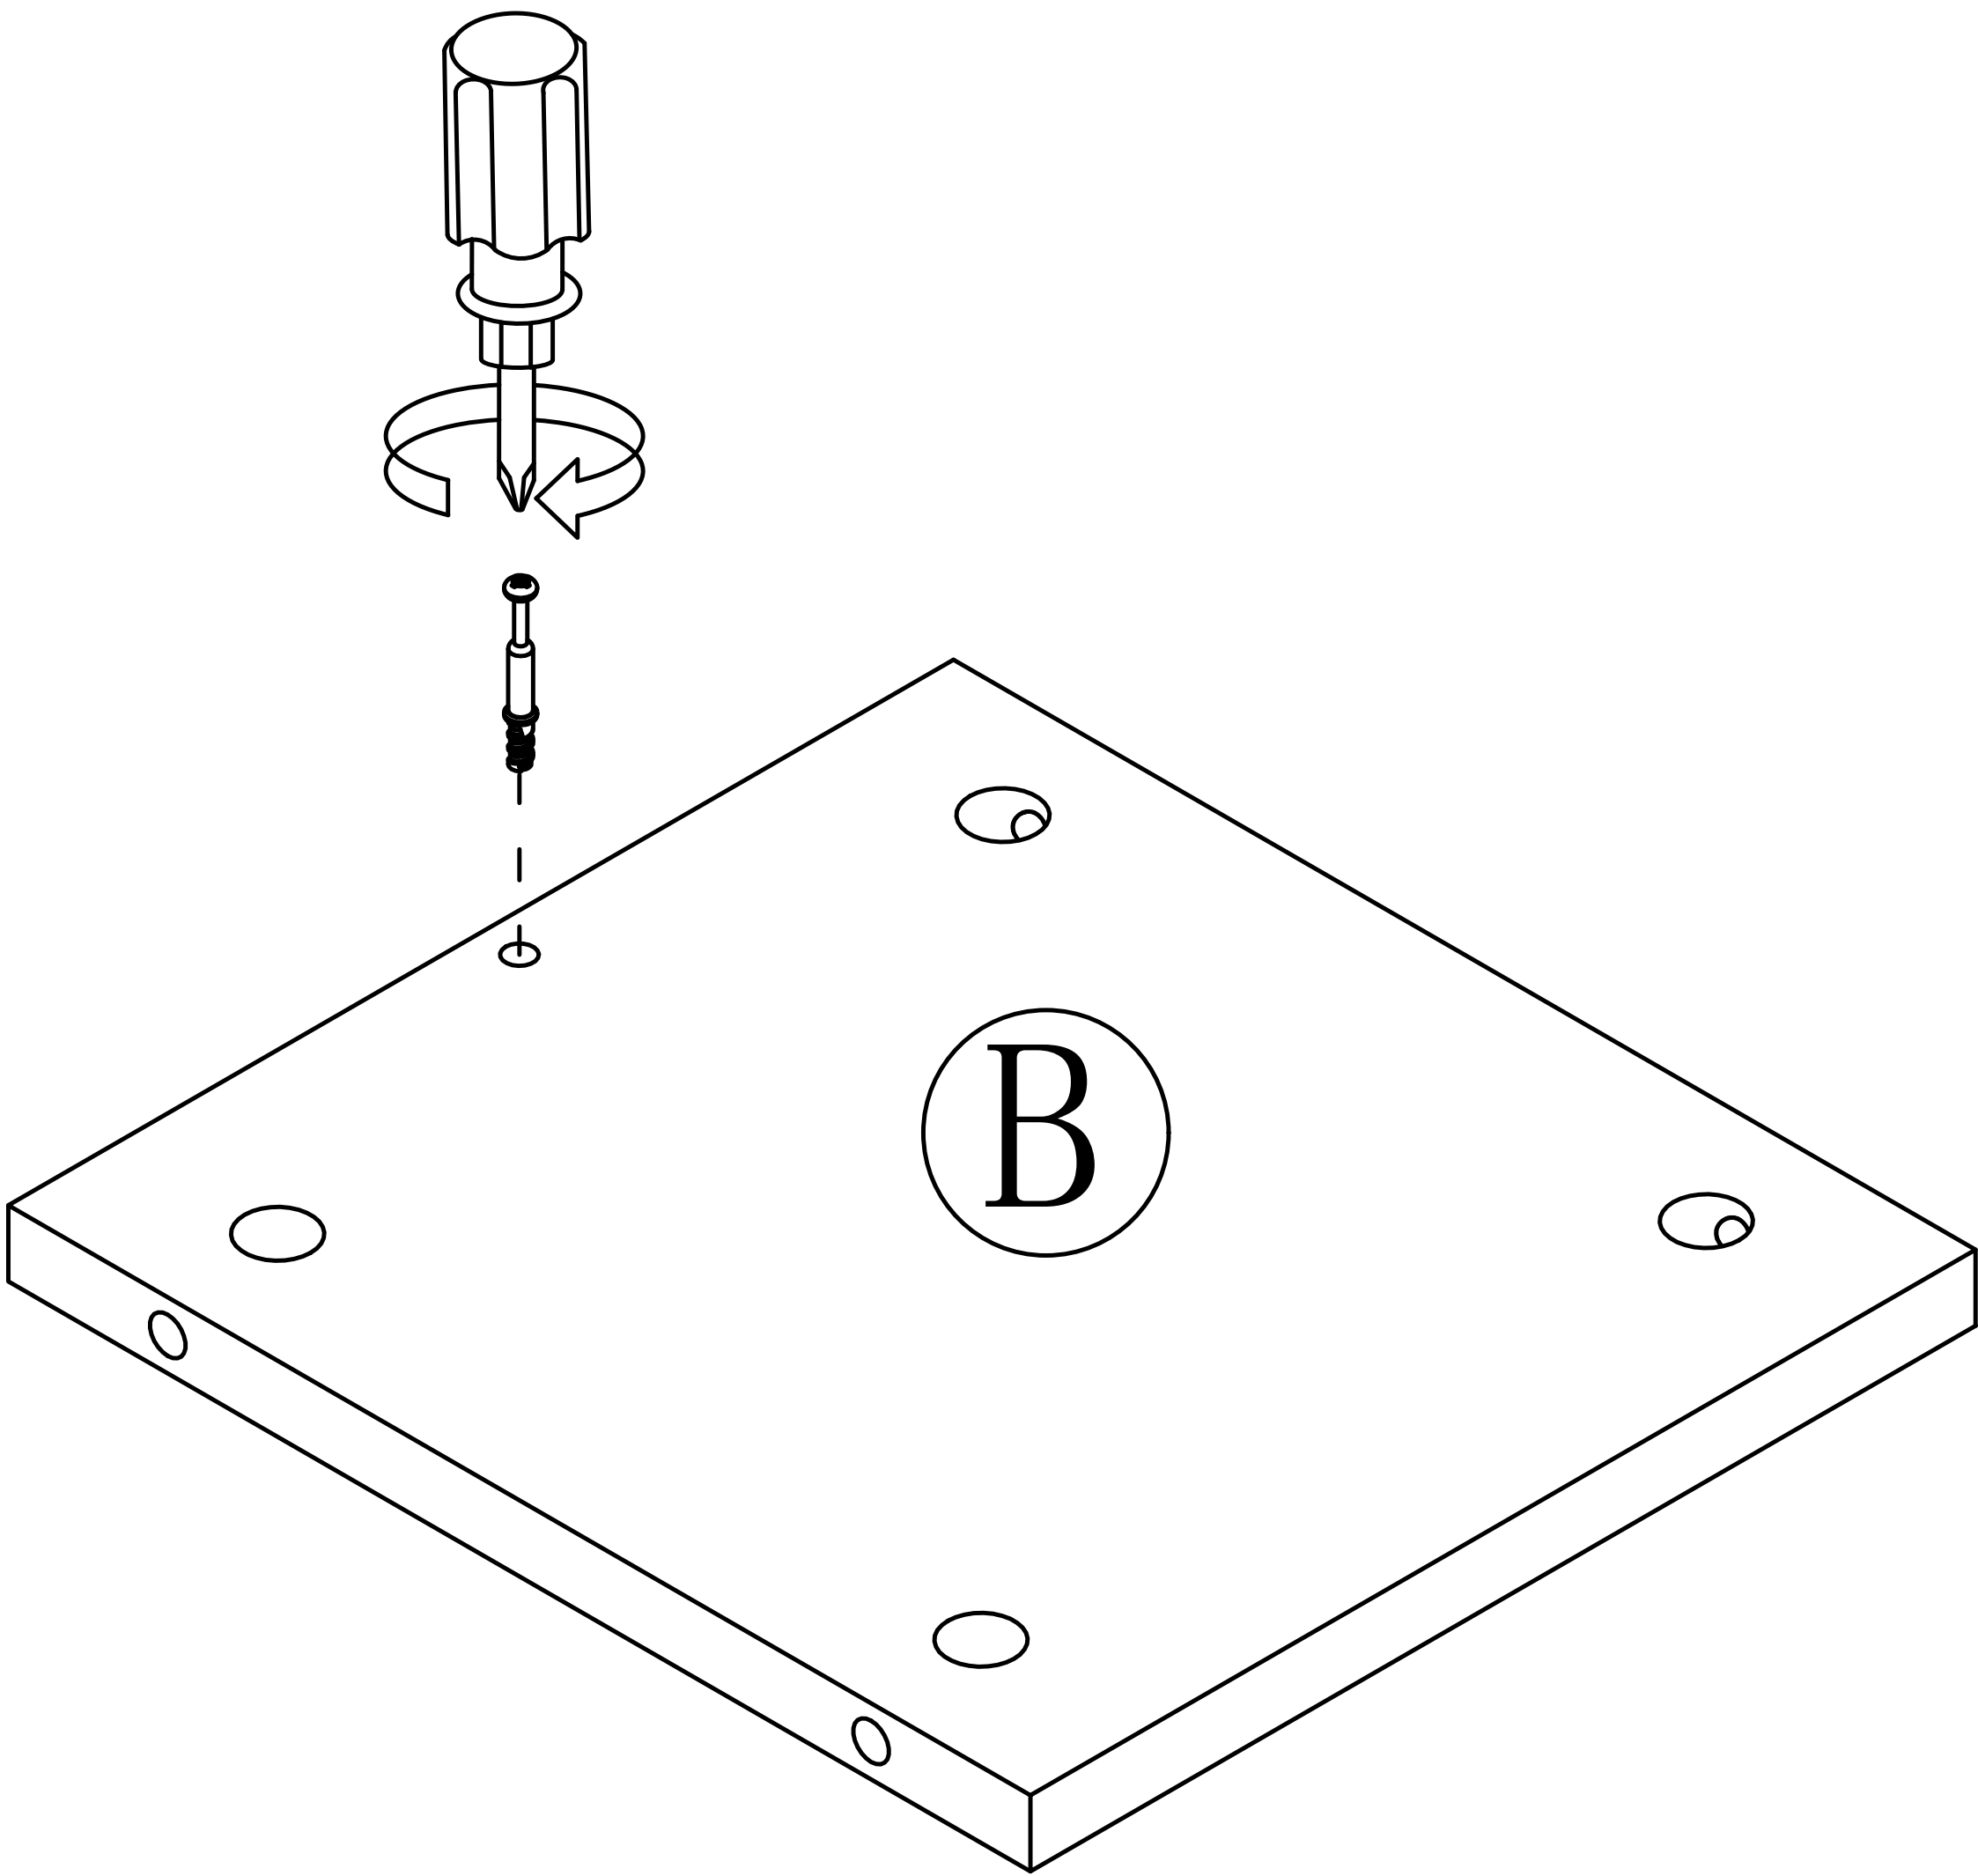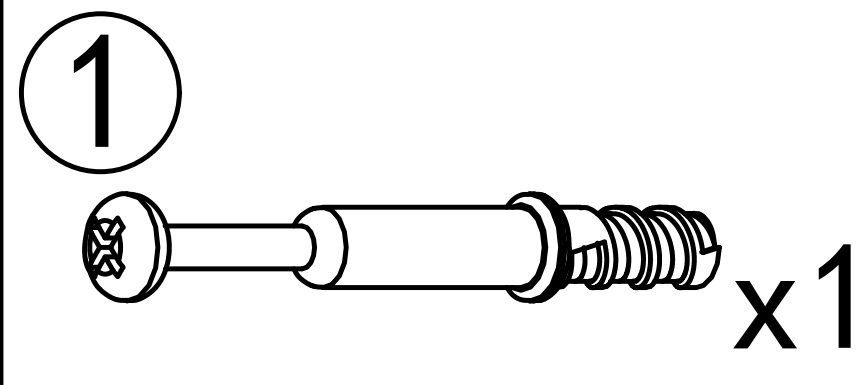


Step 2

②

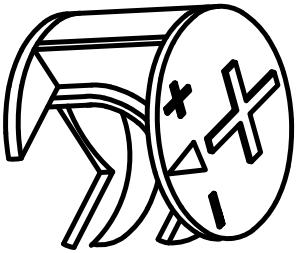


x1

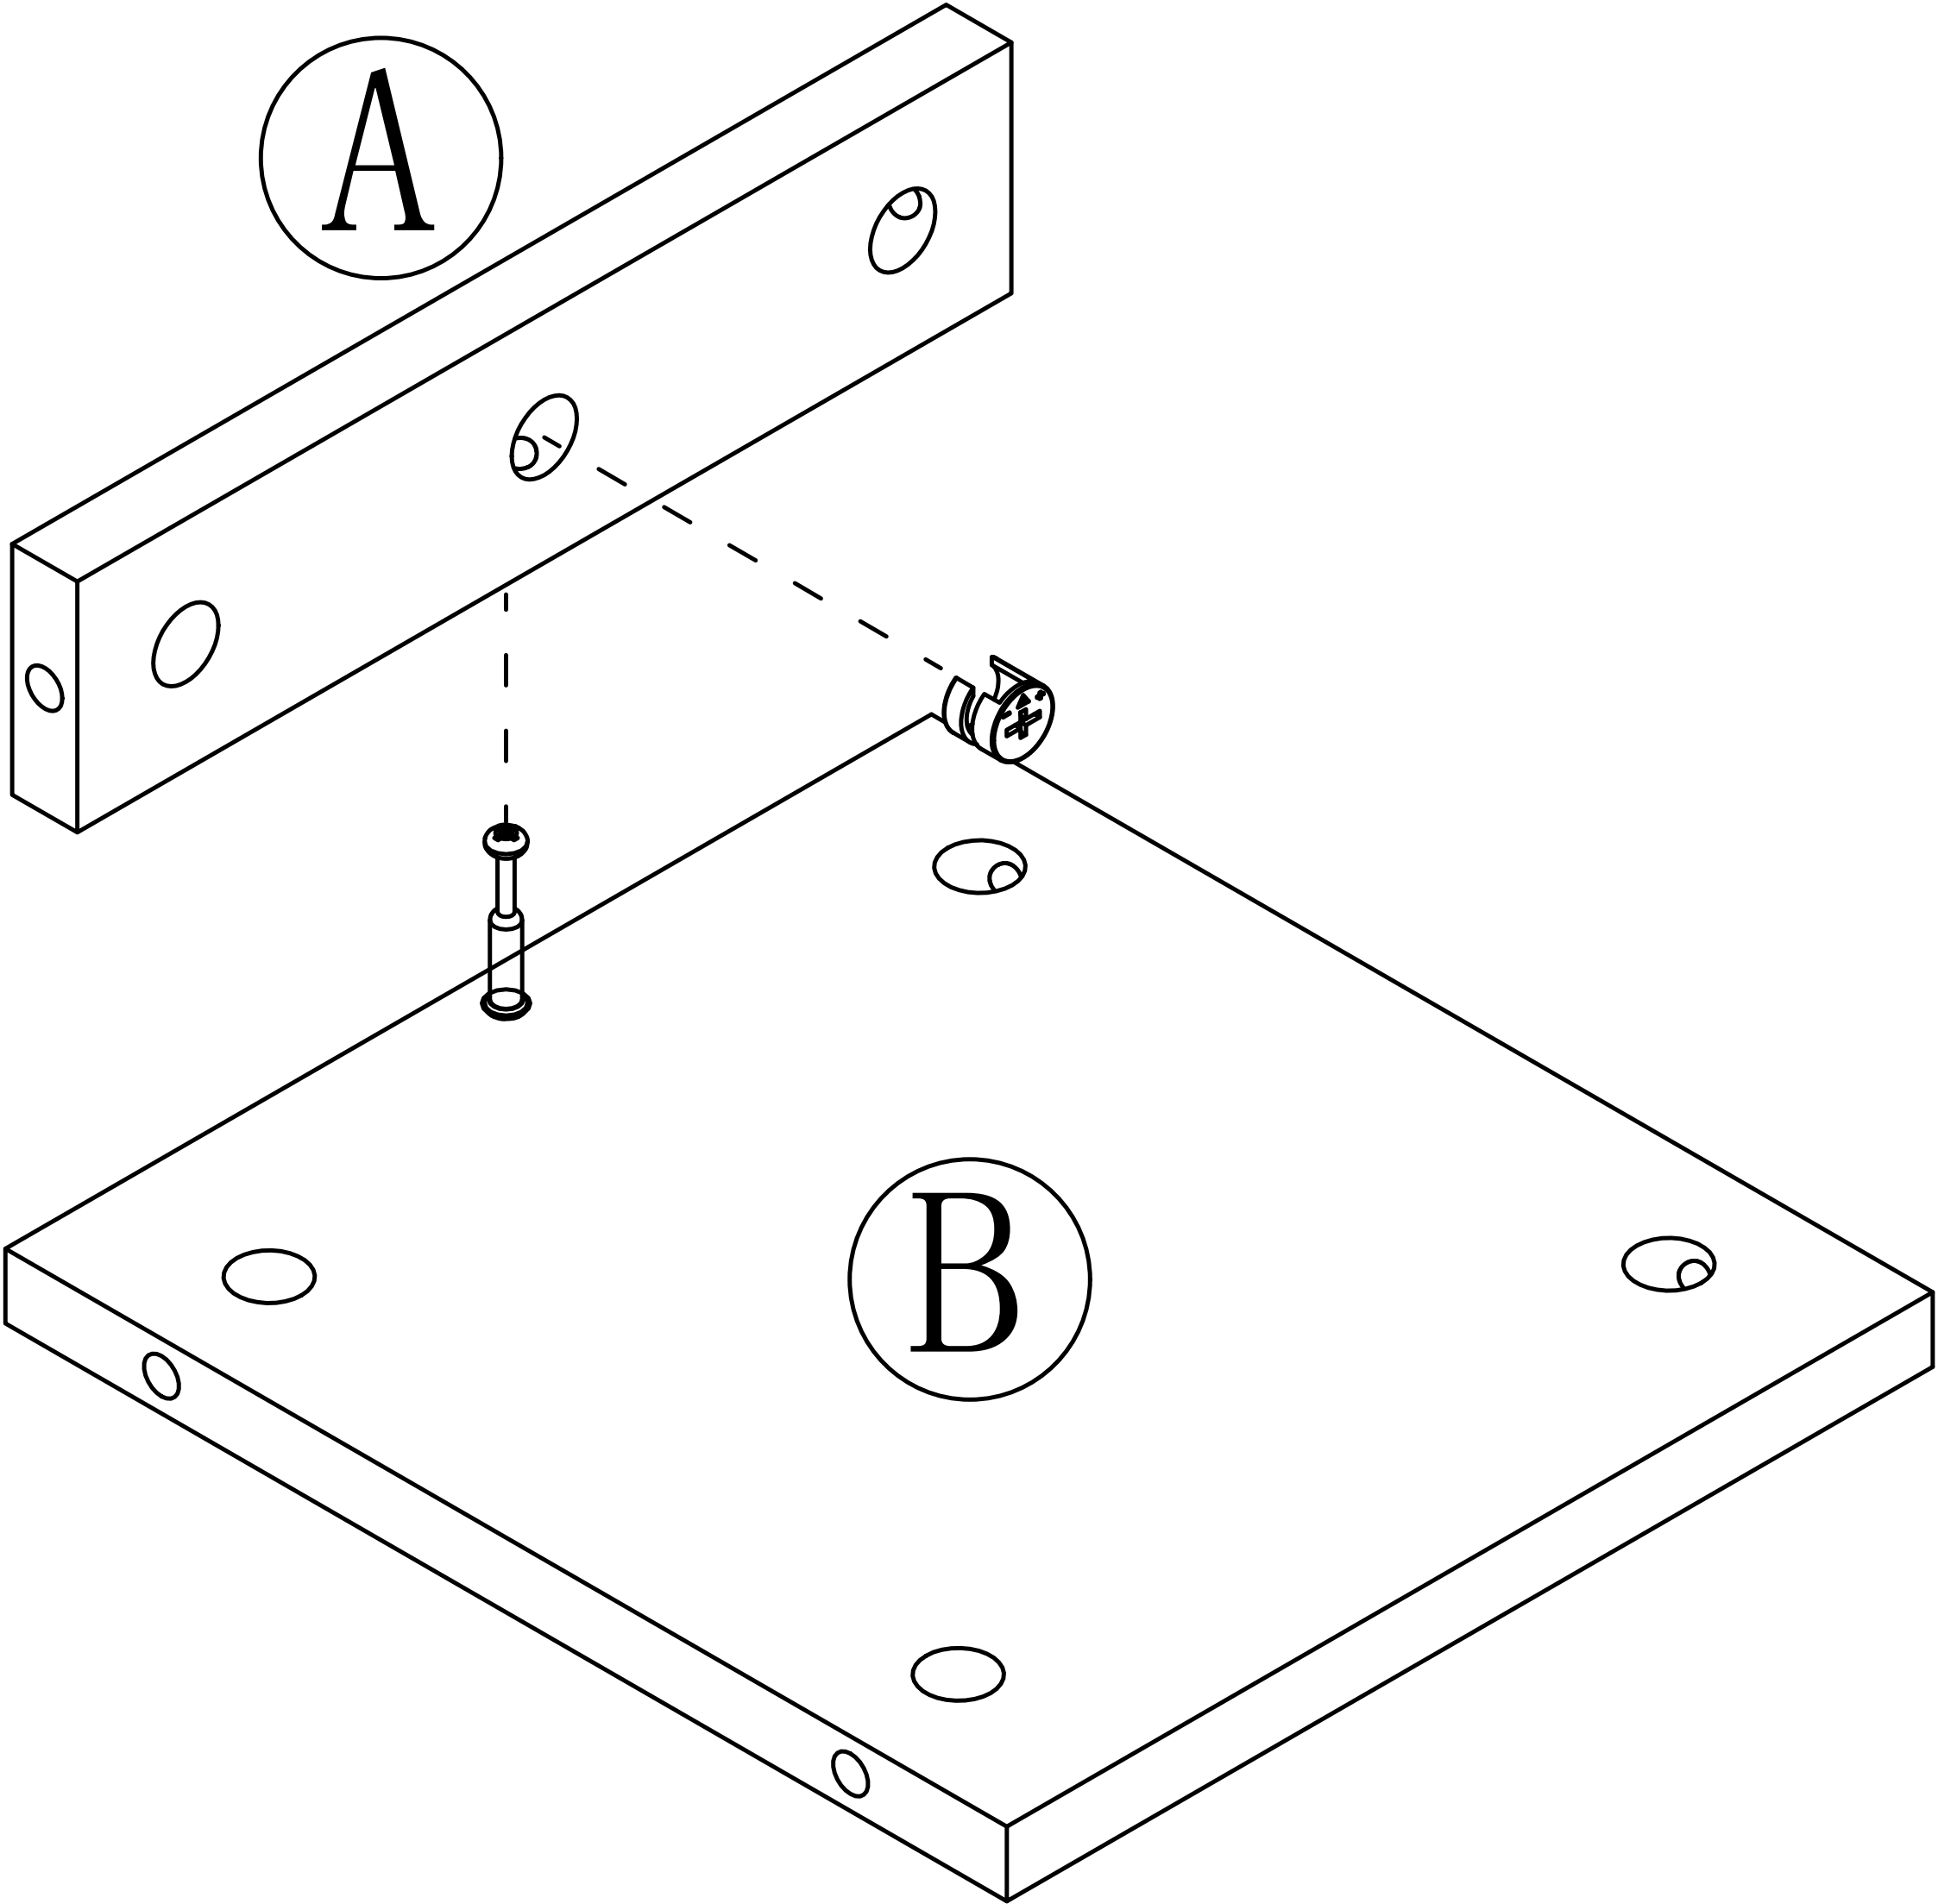


Step 3

①

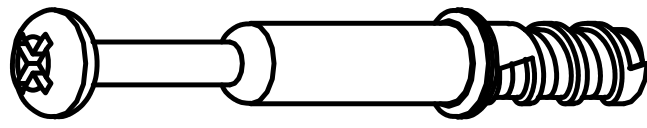


x5

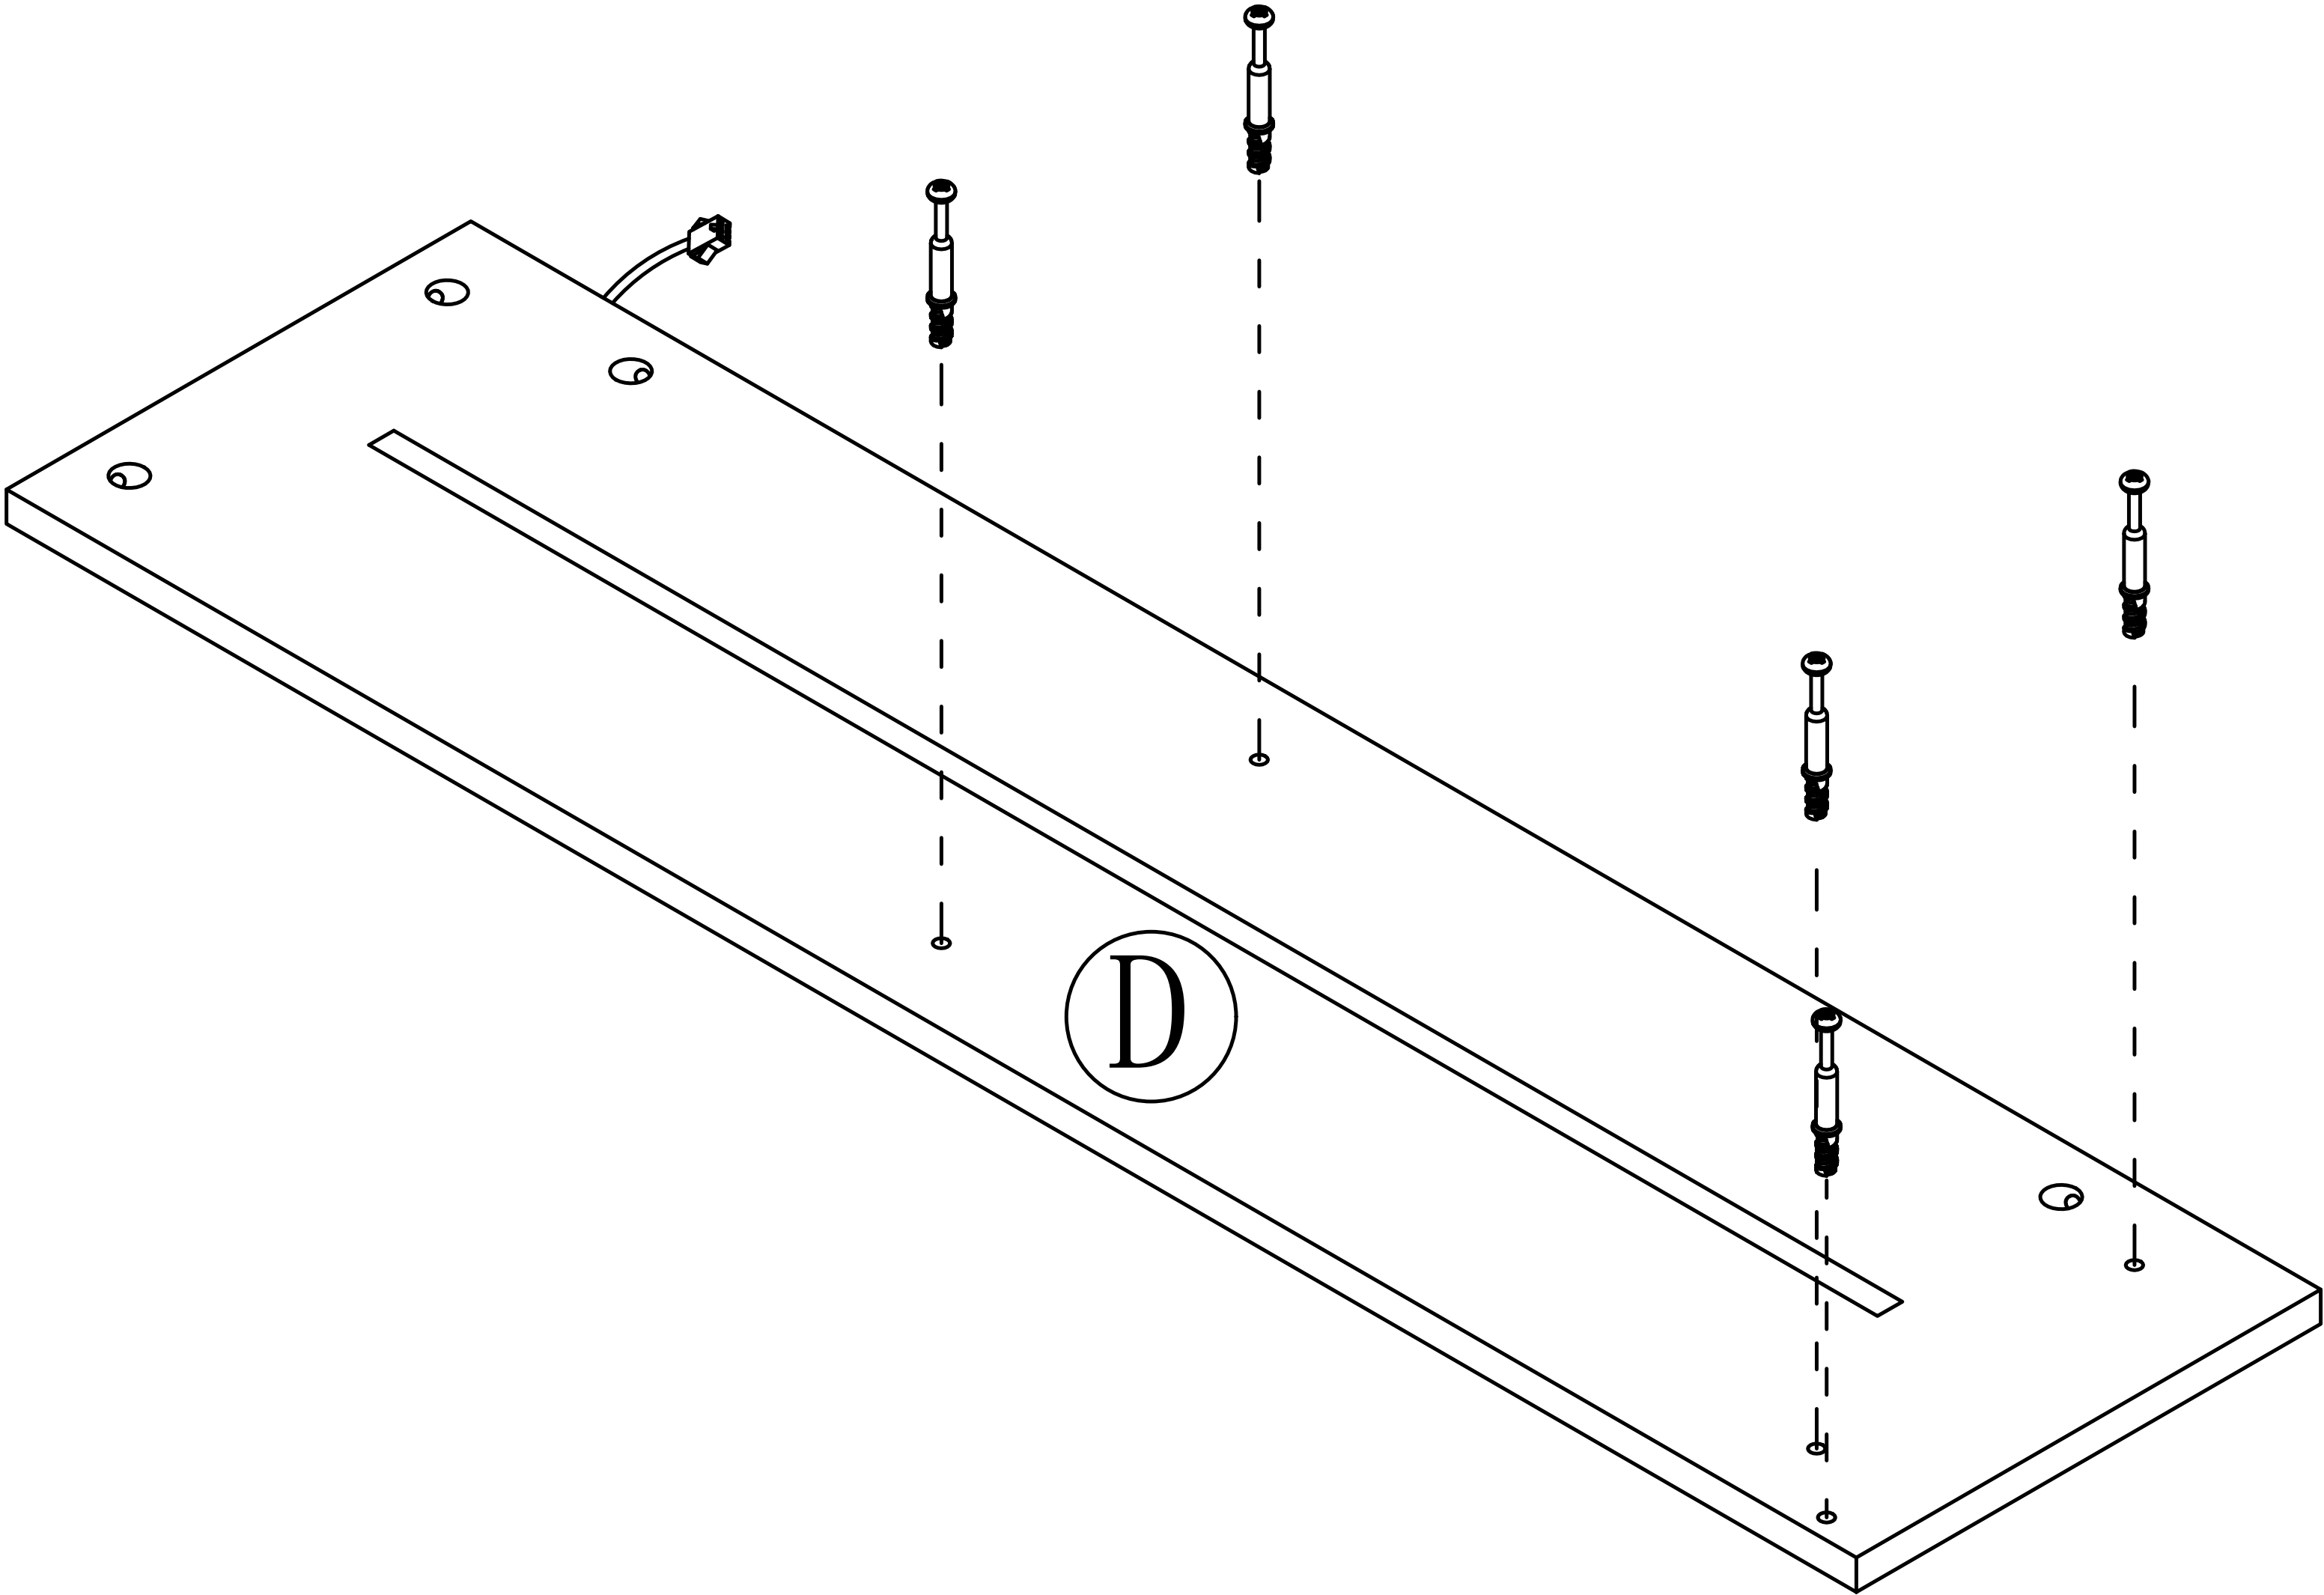


Step 6

2

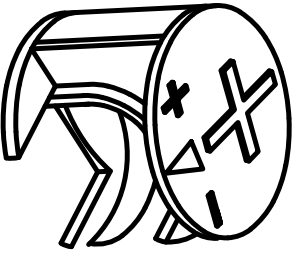


x5

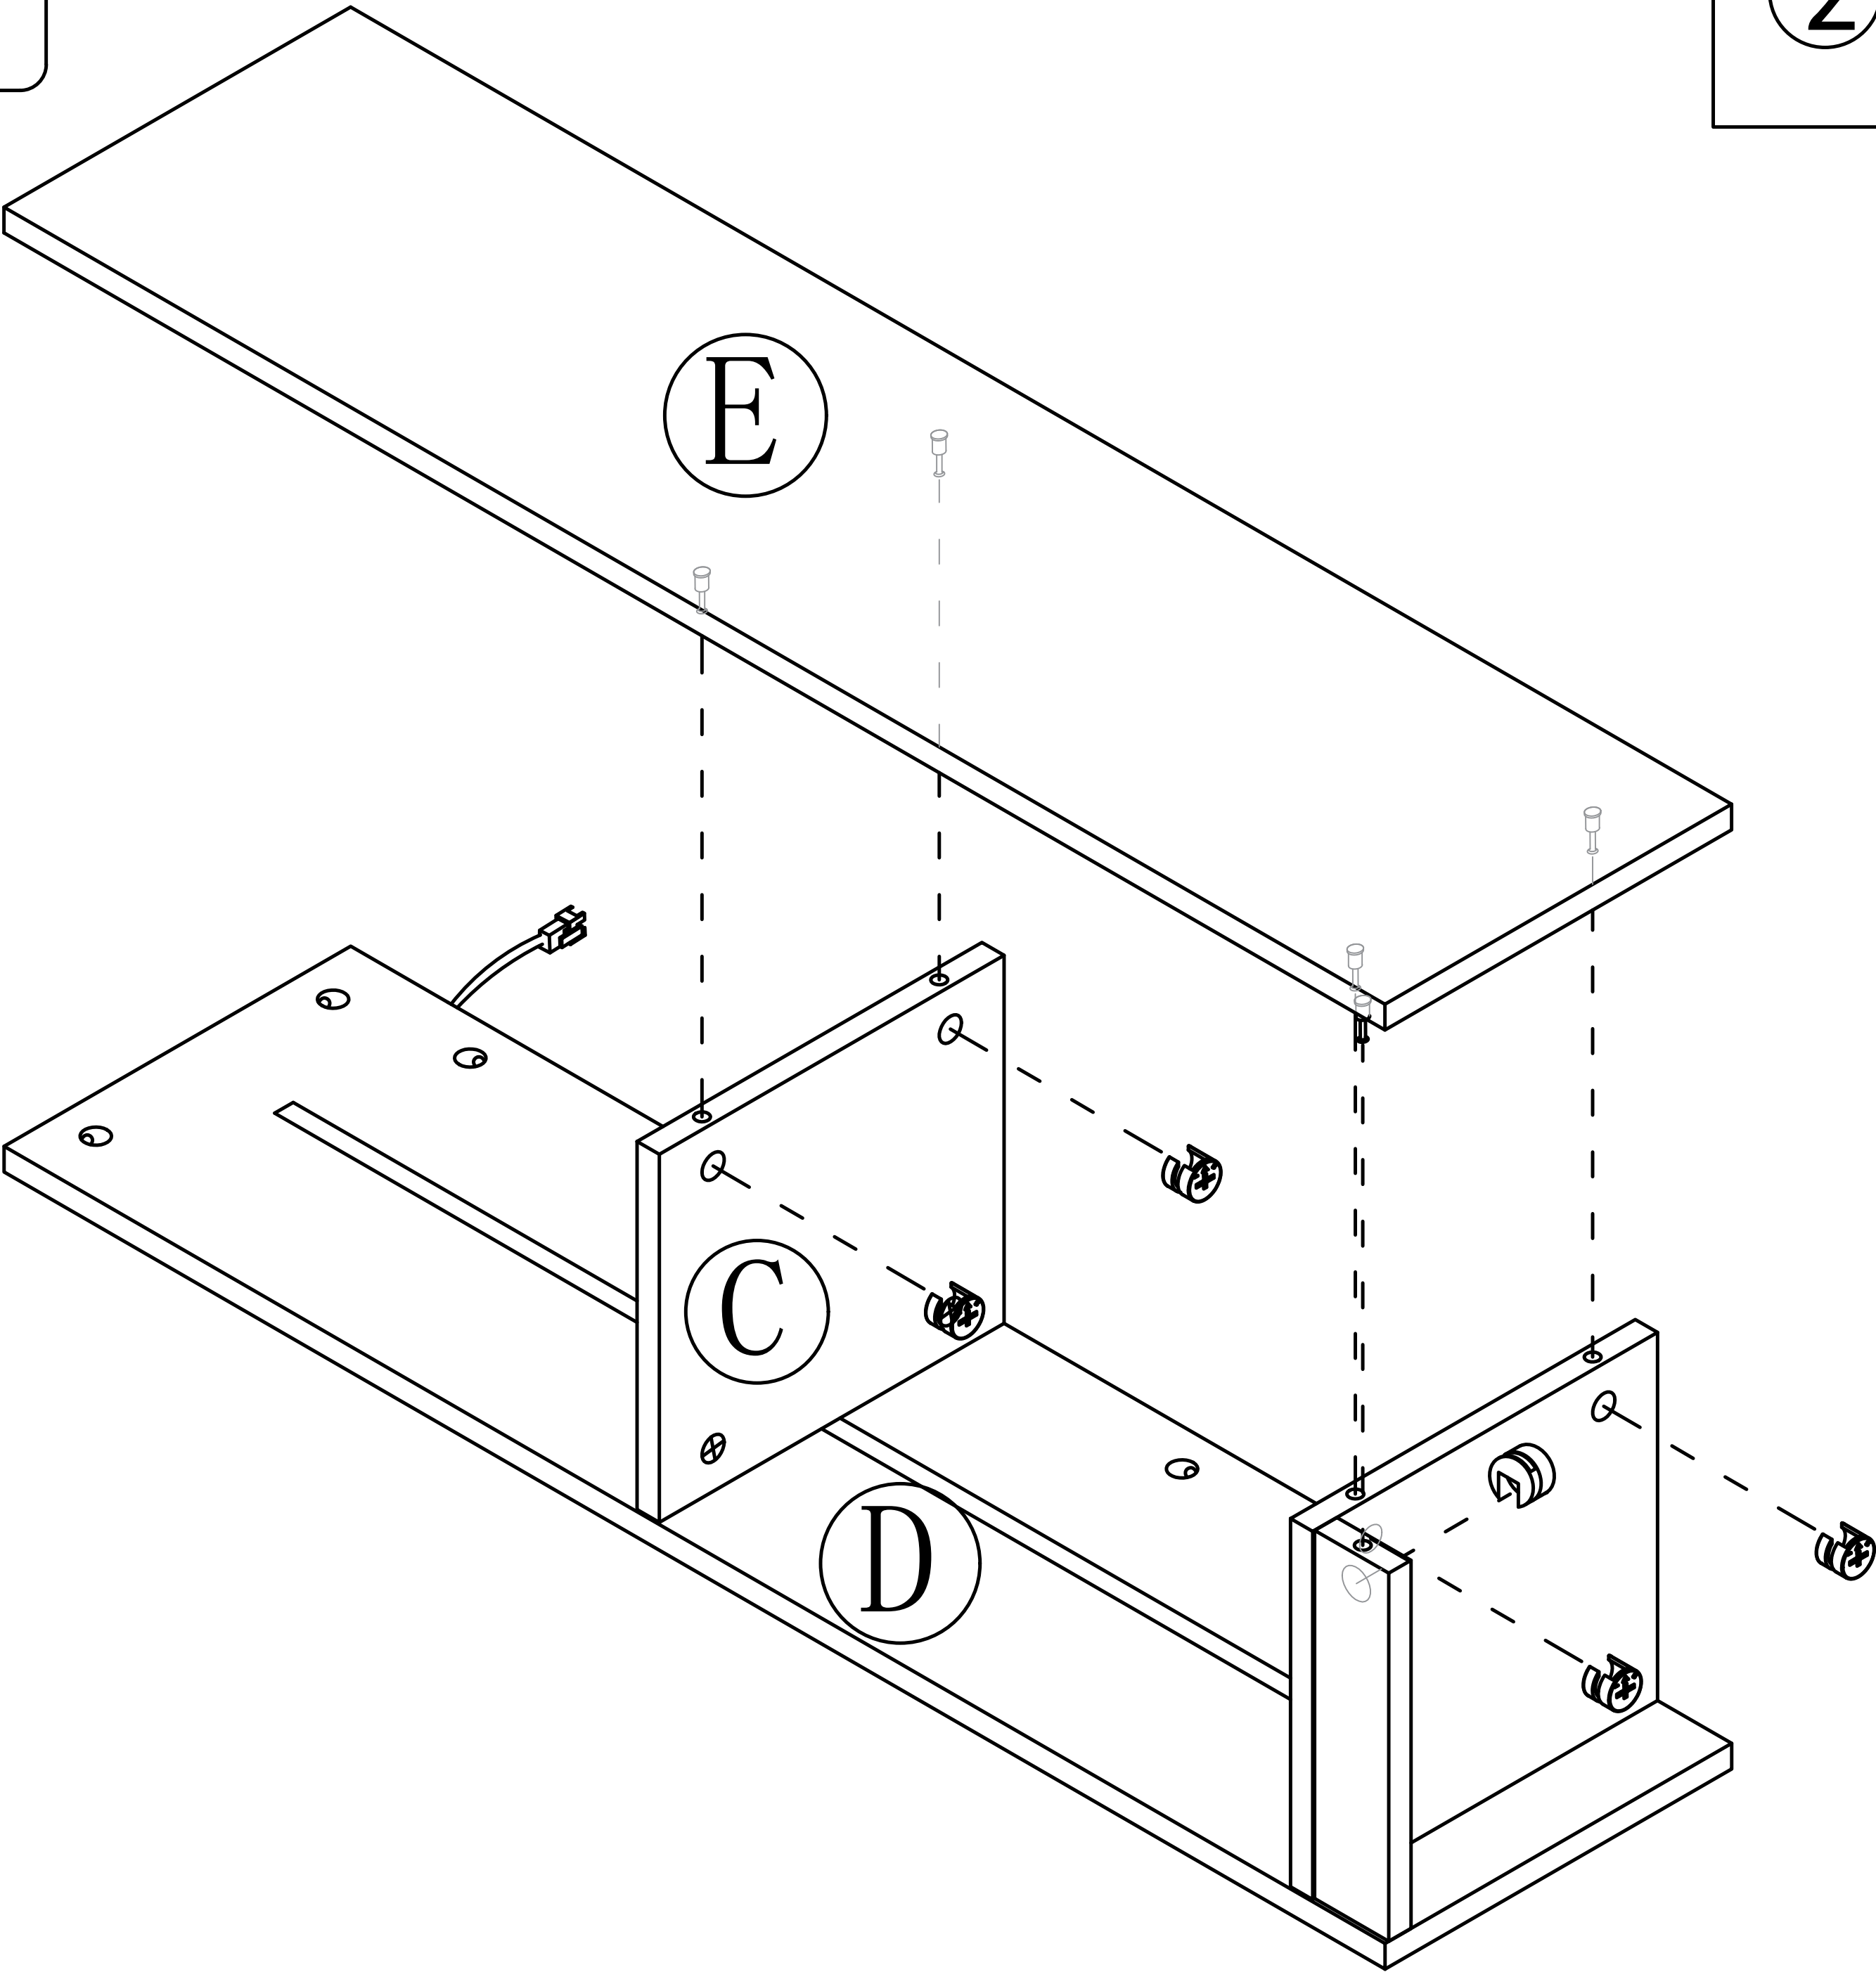


Step 7



1

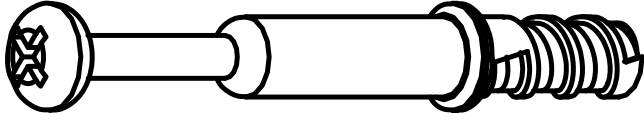


x4

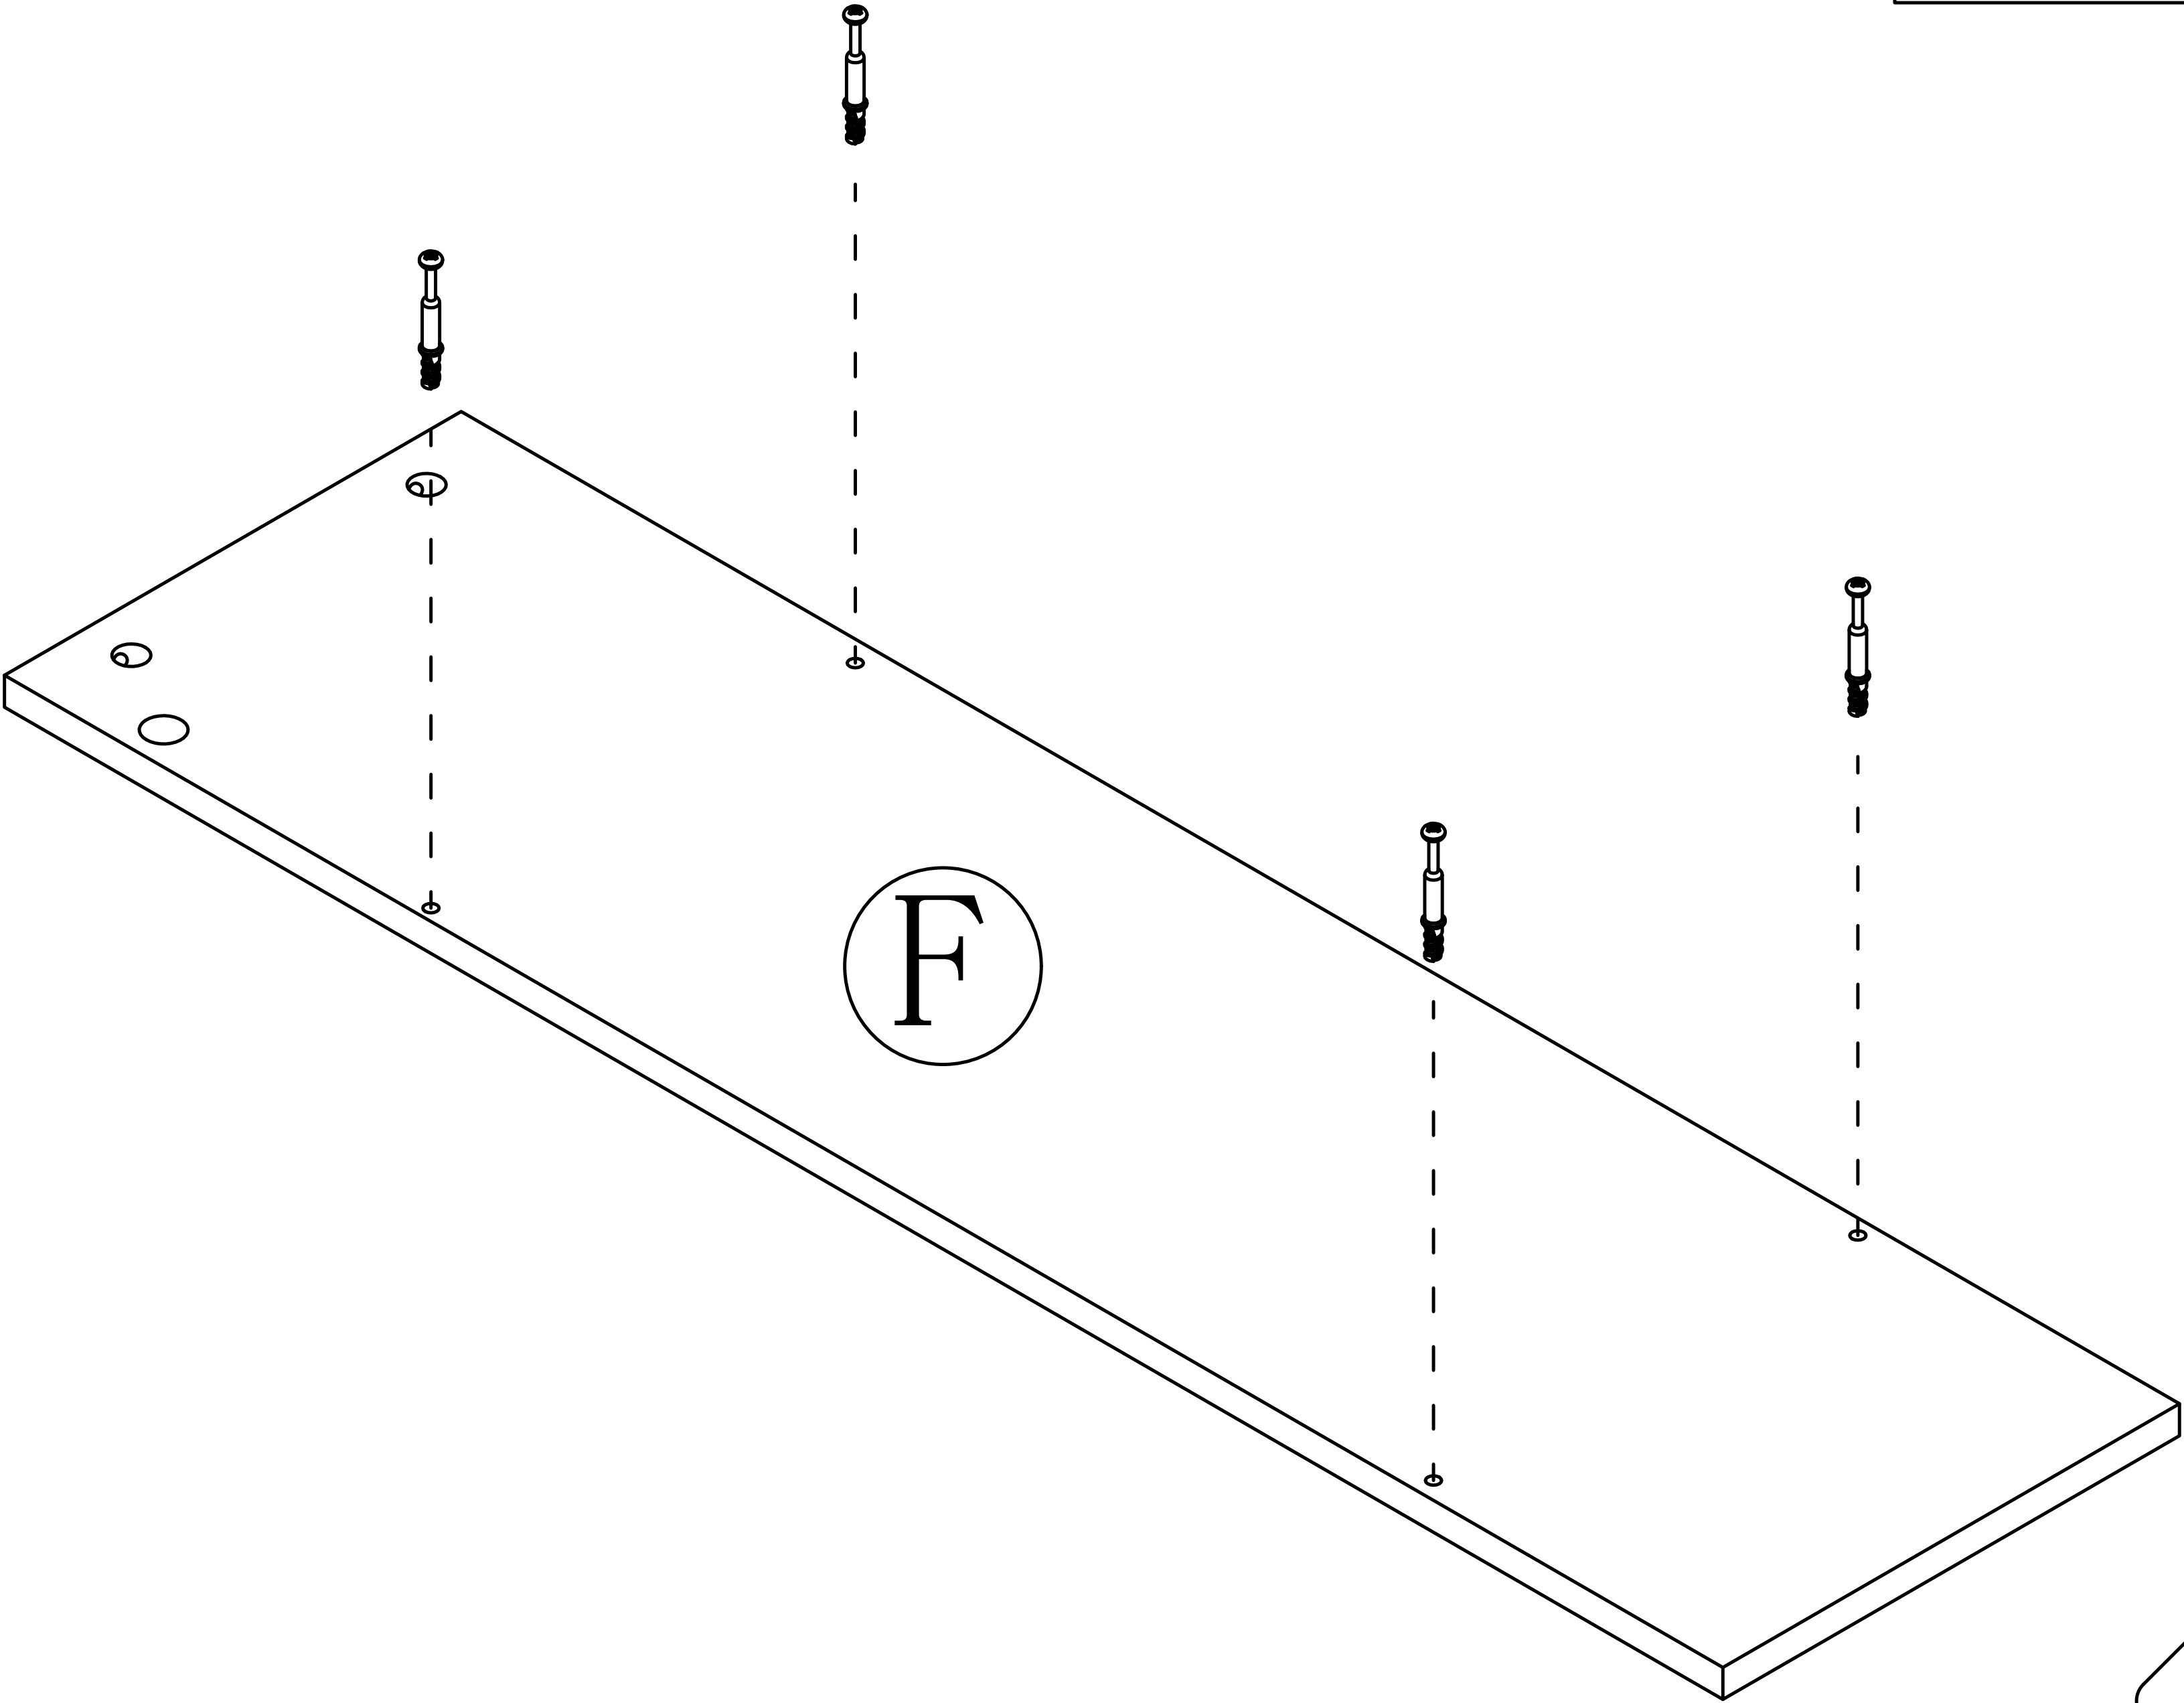


Step 15

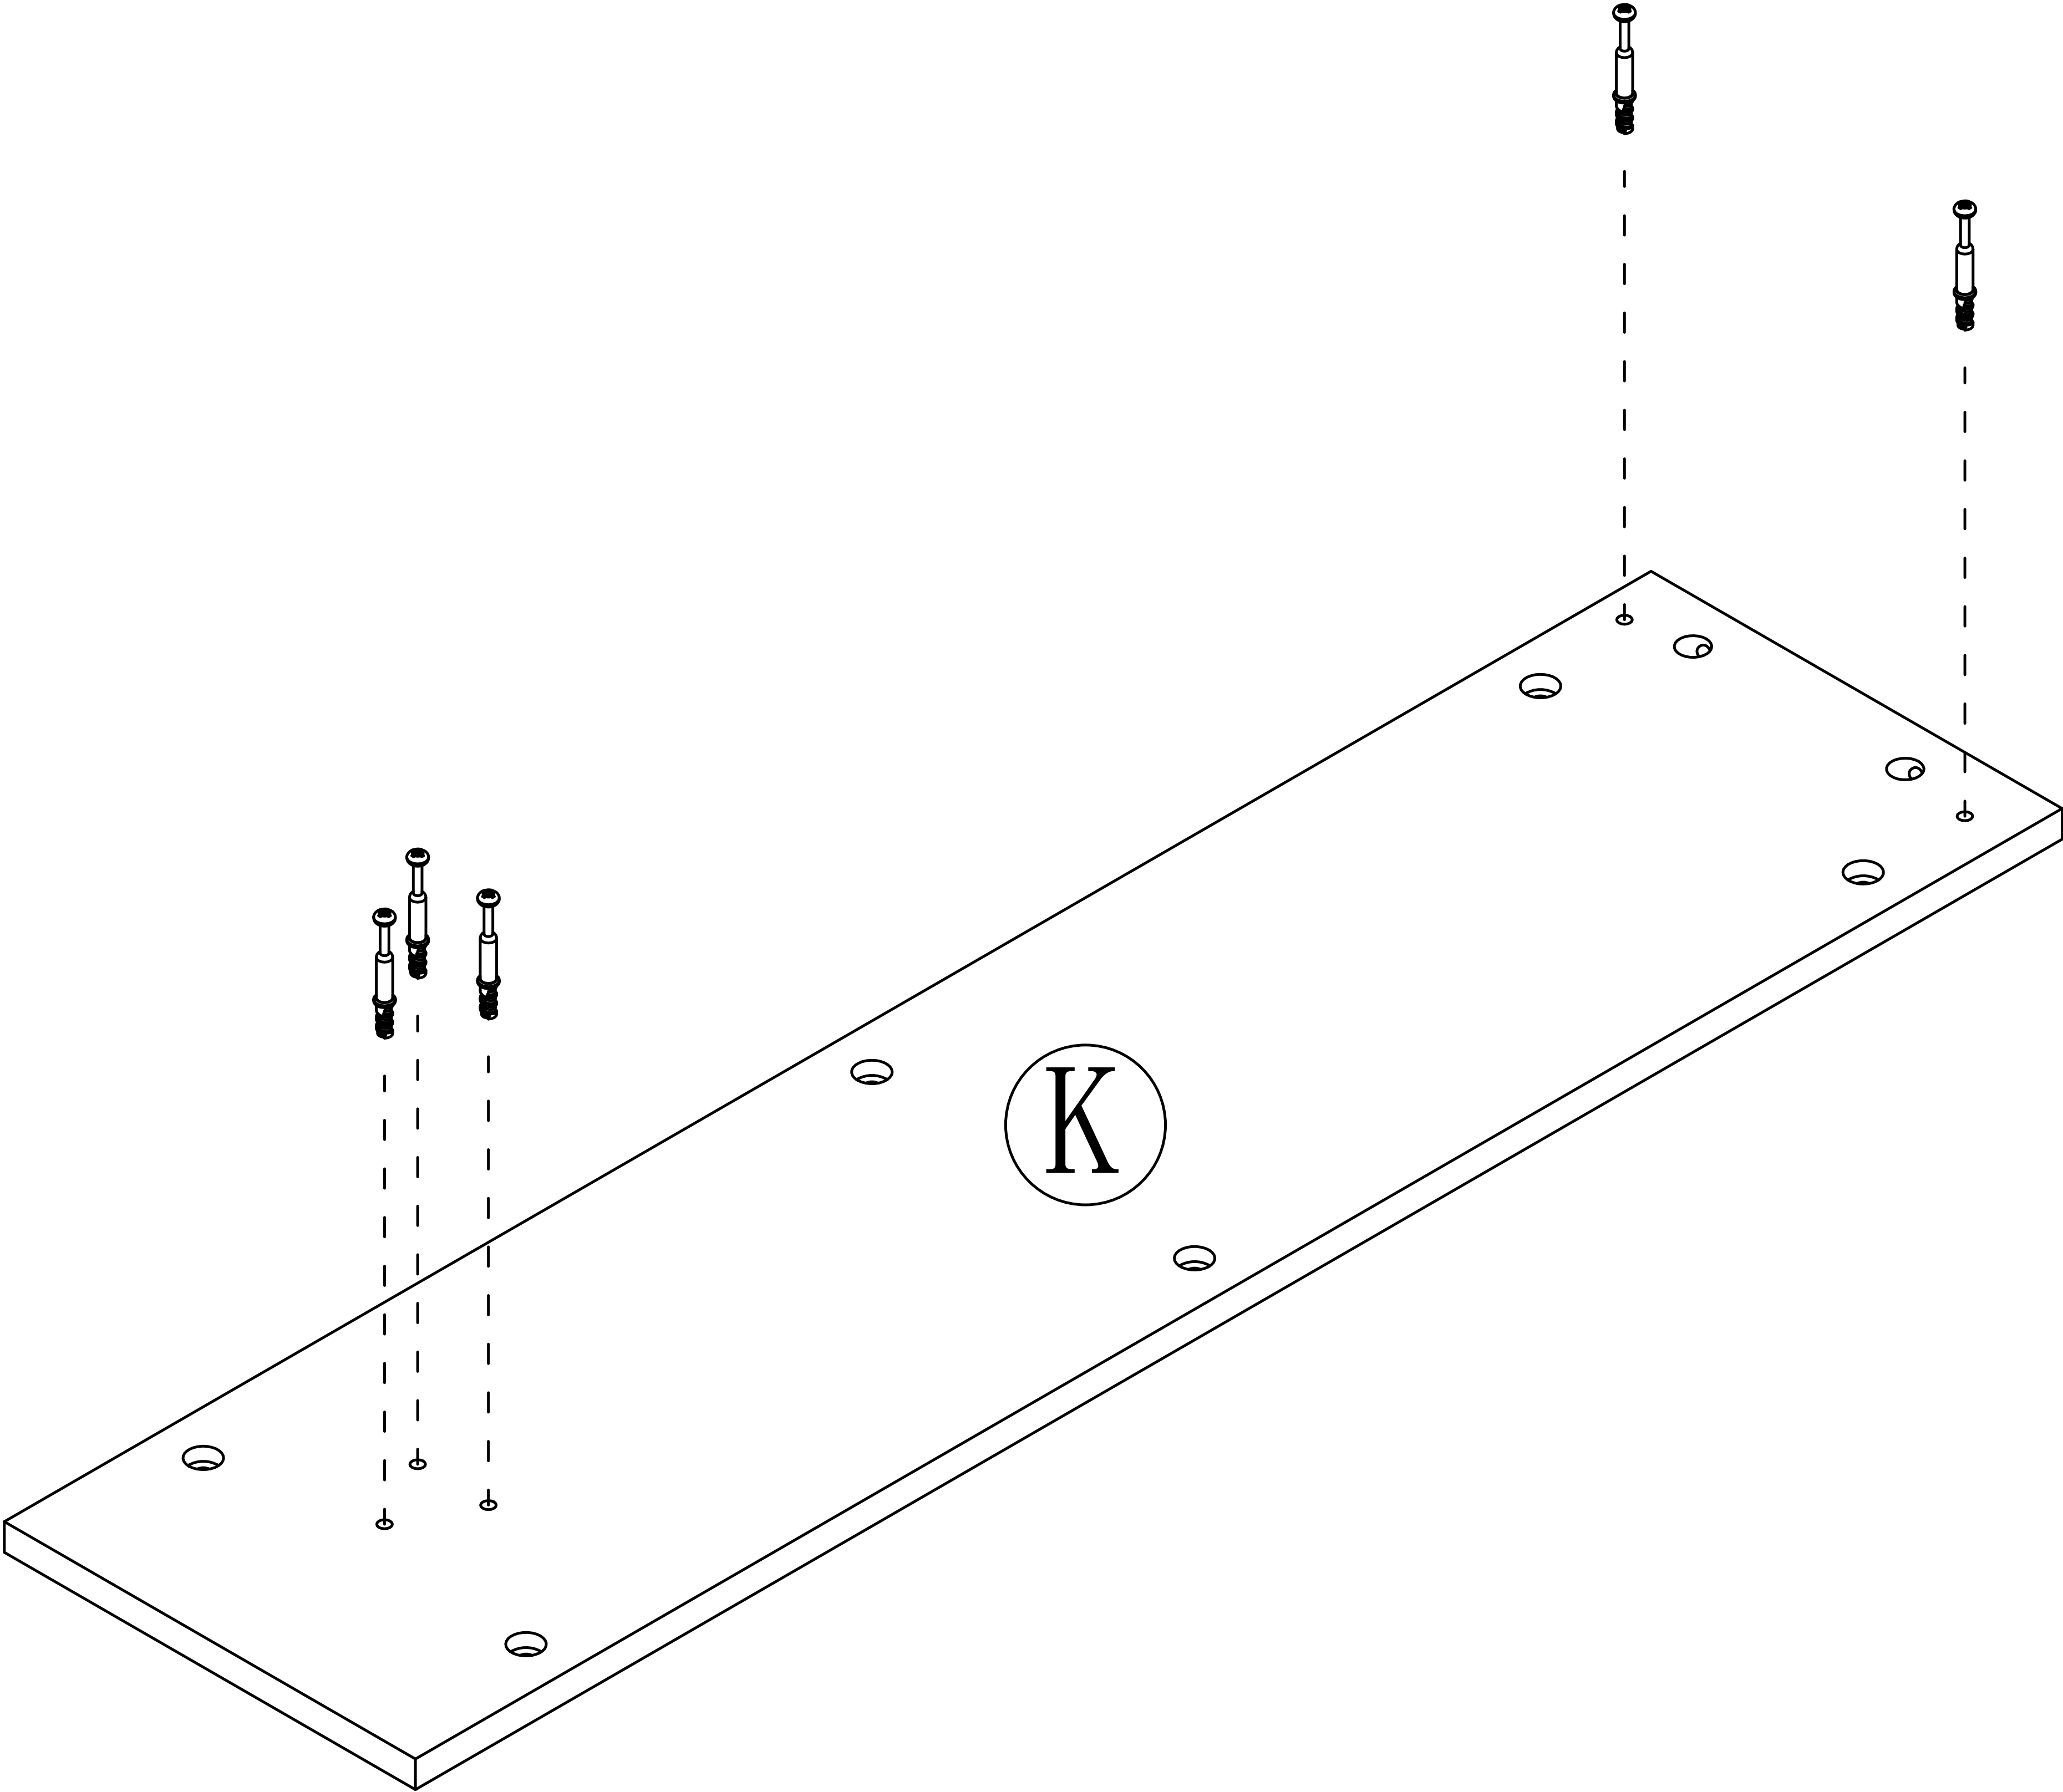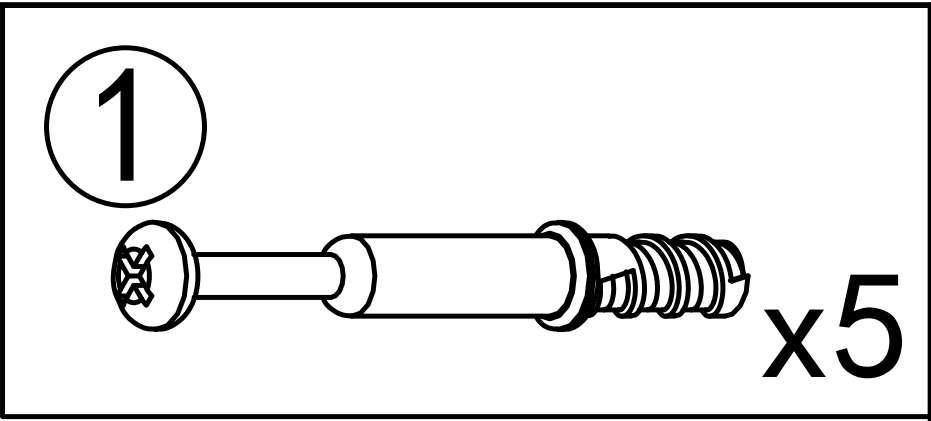


Step 16

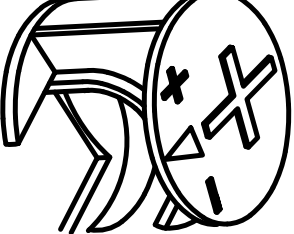2  x5

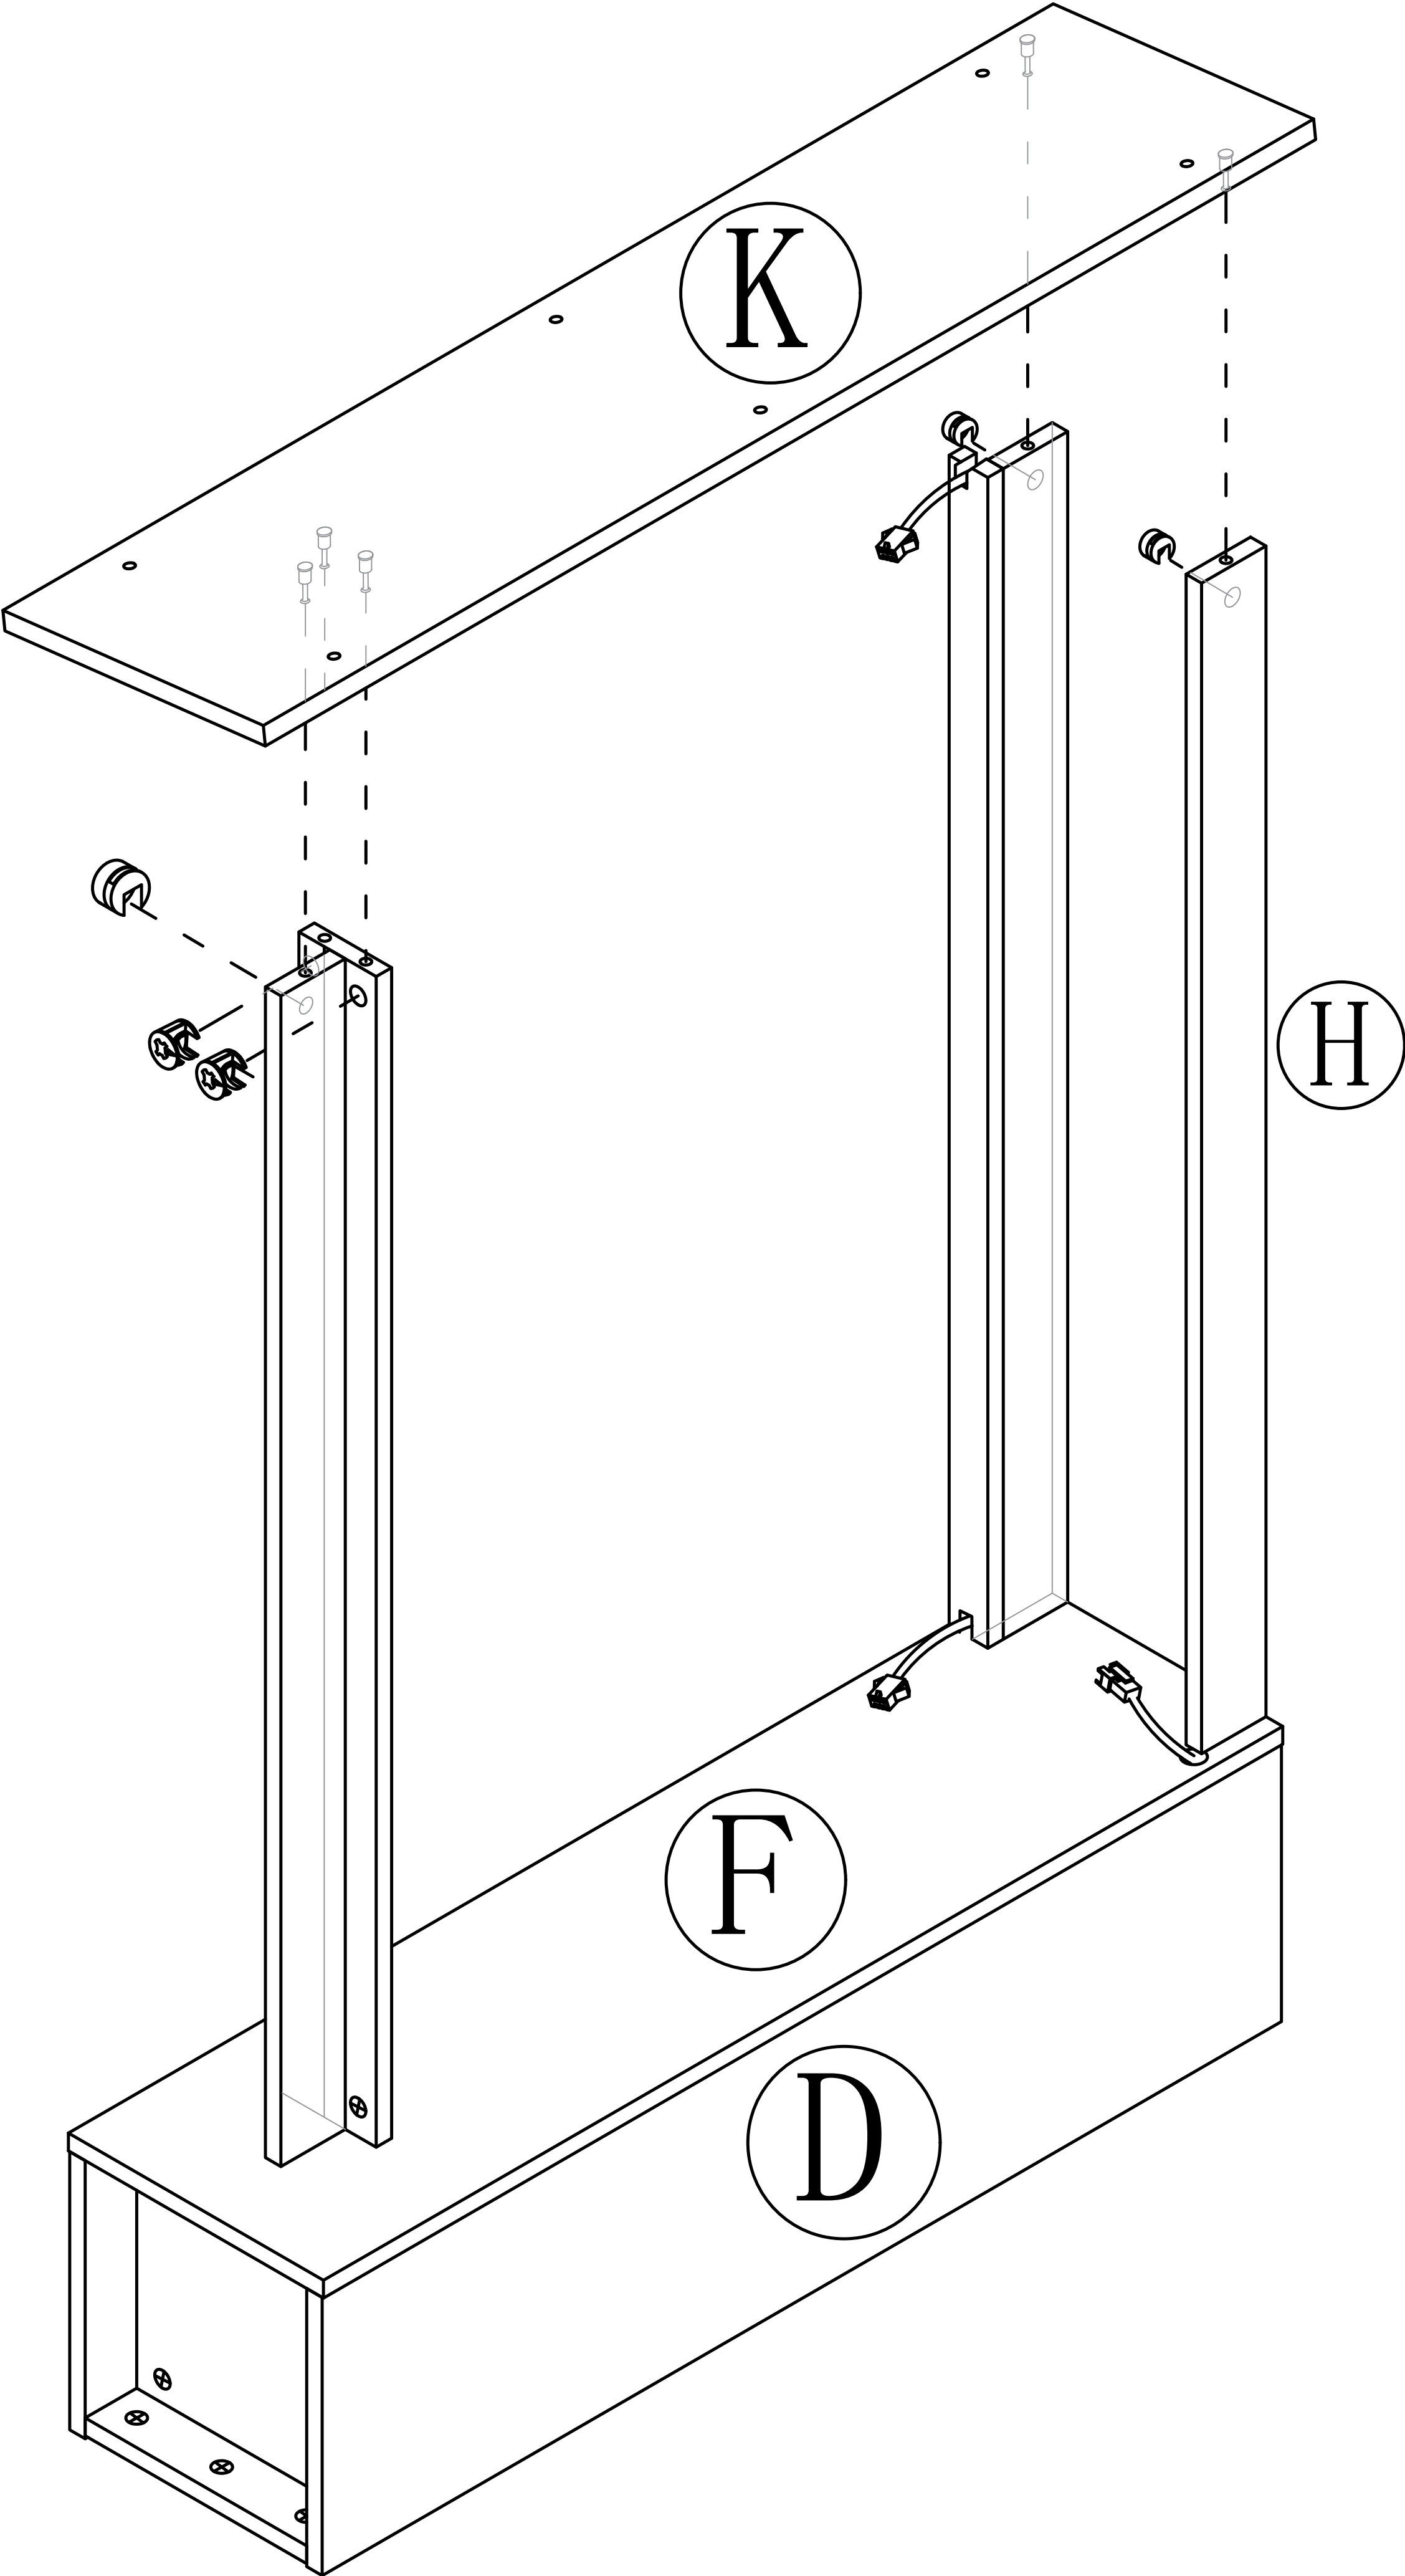


Step 17

5

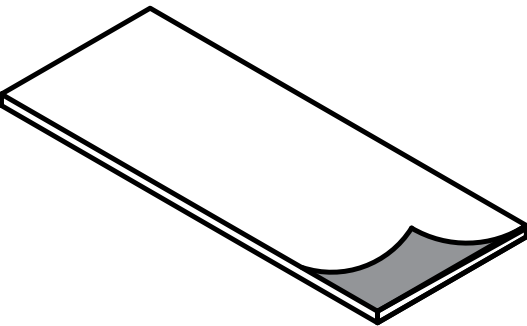

x6

Tear off release paper and stick the black foot pad on the board

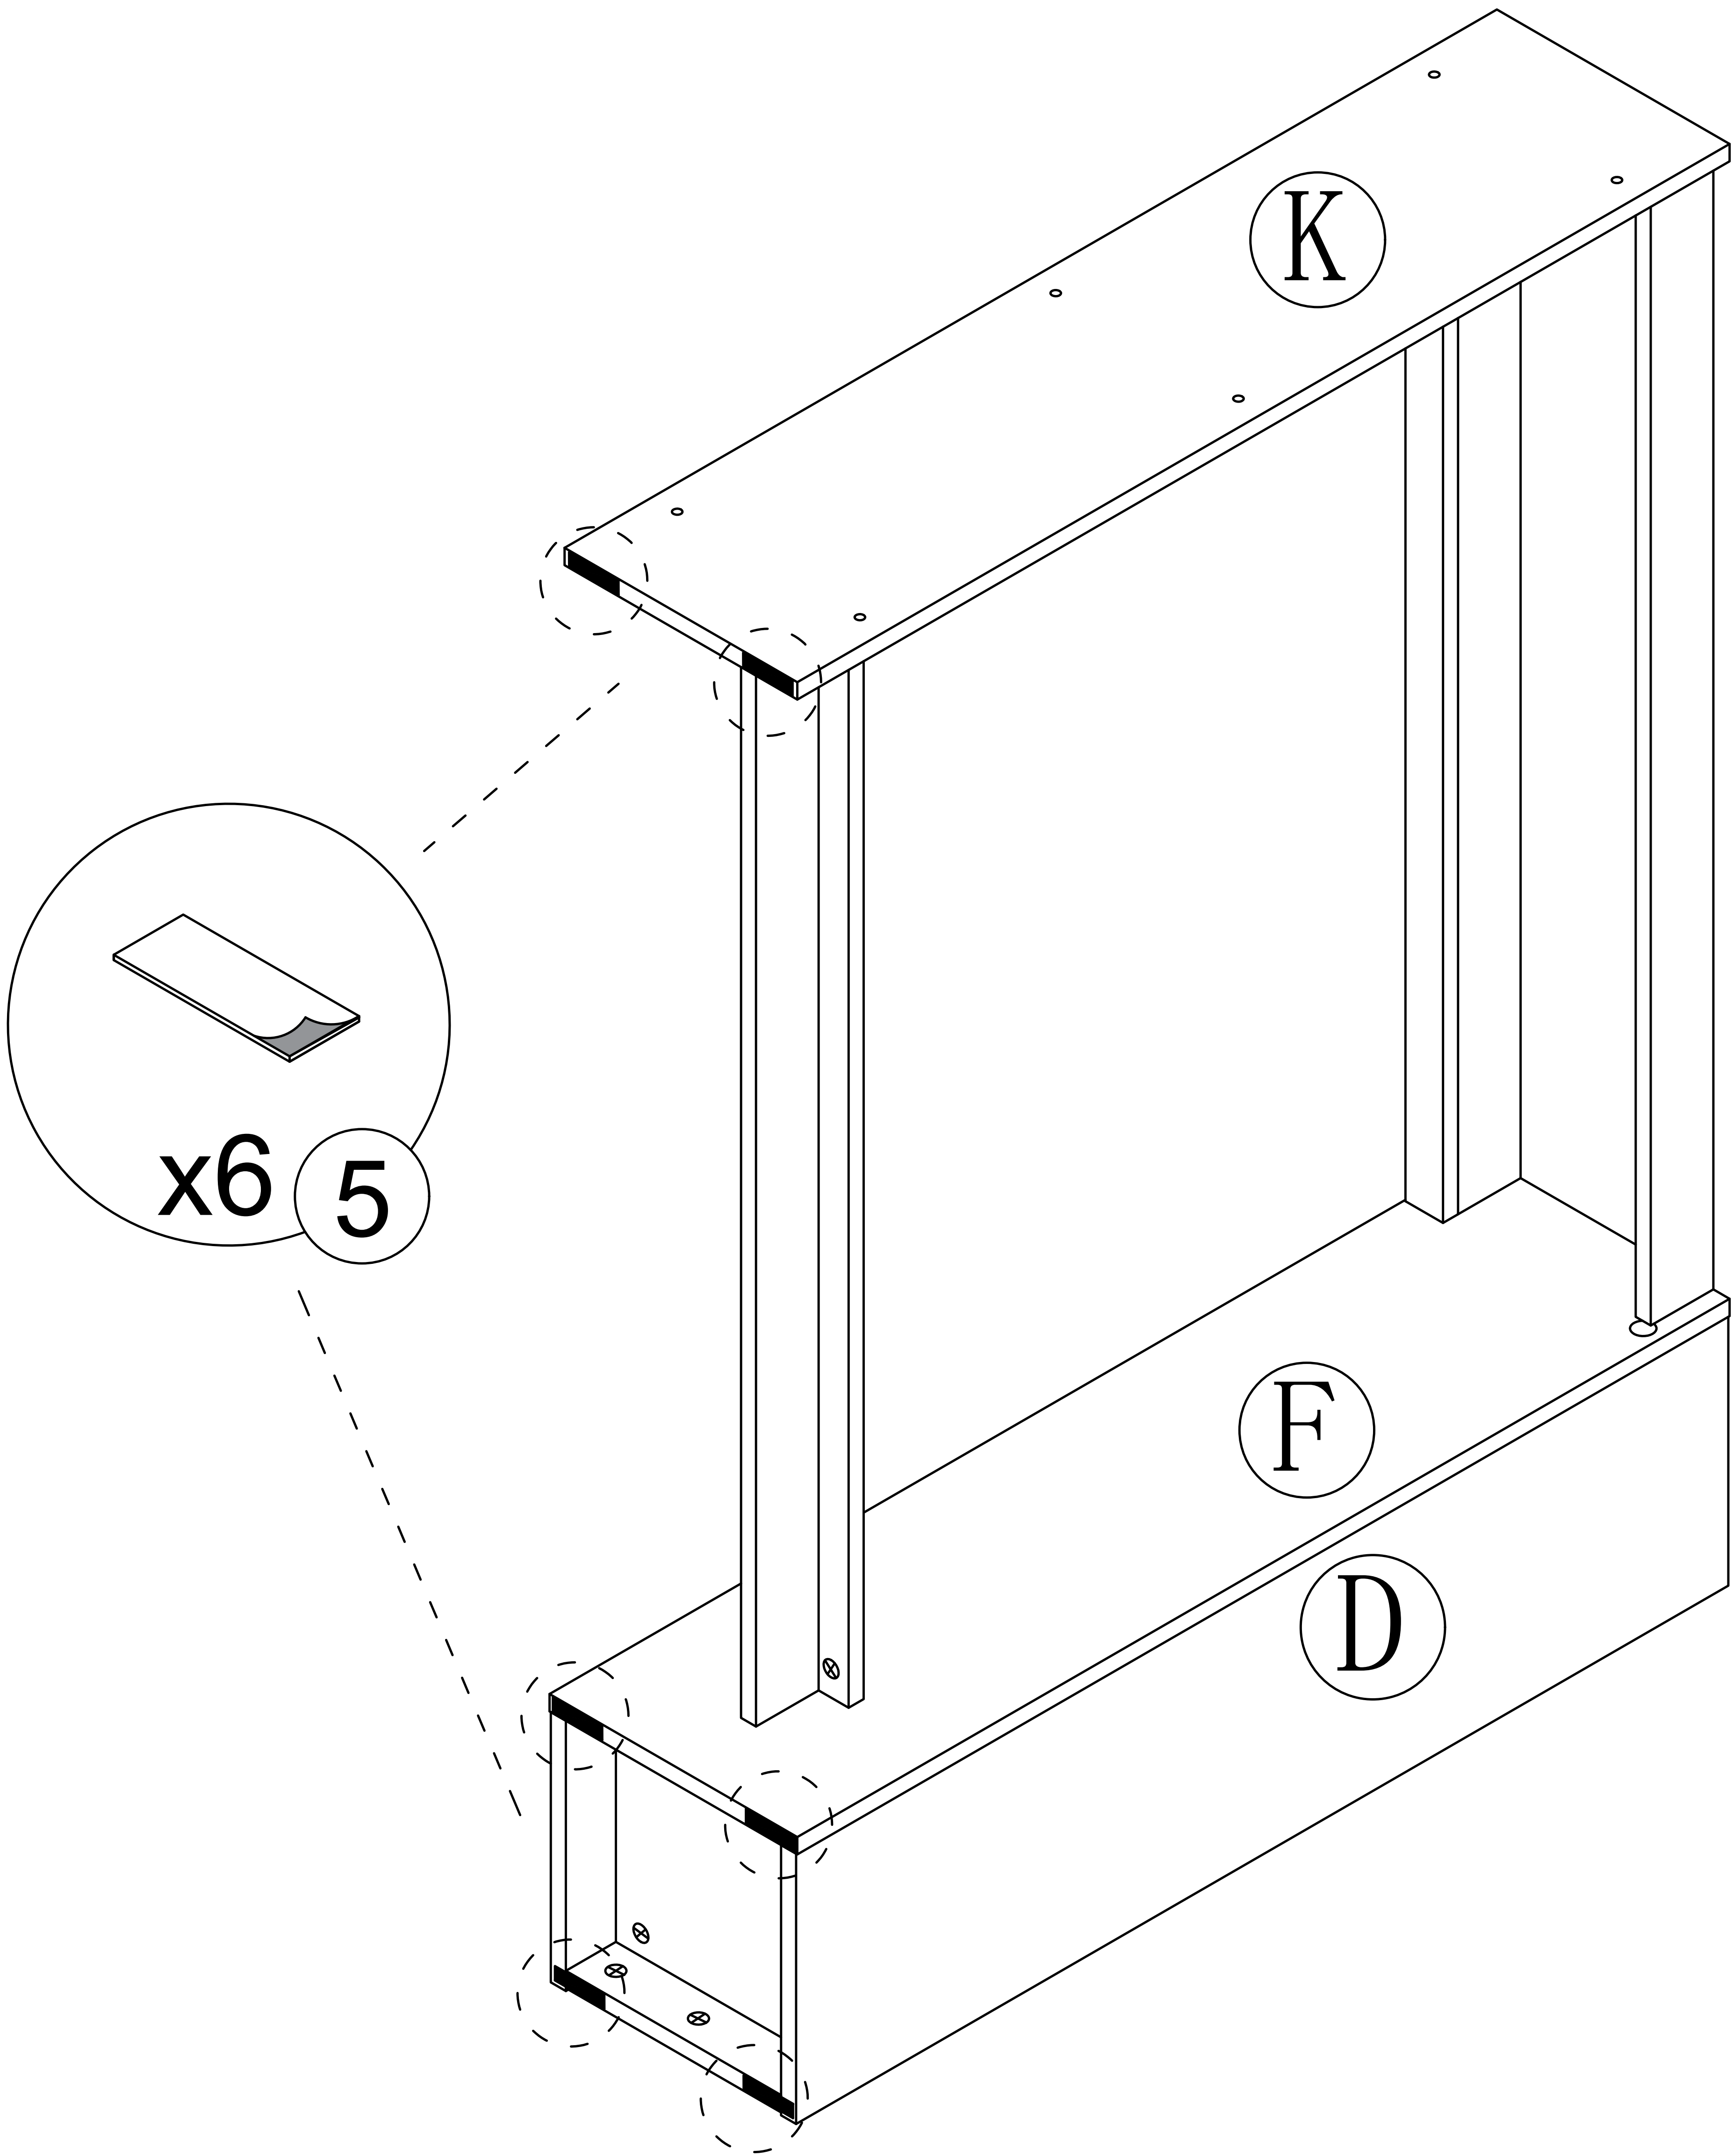

Step 19

1

x13

