



Assembly Instruction


A	X56	B	X56	C	X8	D	X32	E	X1	F	X10	G	X20	H	X8
															
M6x35mm		Ø15x9mm				M3x14mm		4mm		M5x40mm		Ø8x30mm		M4x20mm	
I	X8	J	X8	K	X18	M	X2	N	X2	O	X2	P	X26	Q	X4
															
				M4x35mm		M4x14mm		Ø6x30mm				M3x14			
S	X4	T	X1	L	X4	R	X4								
															
				CL DL		DR CR									

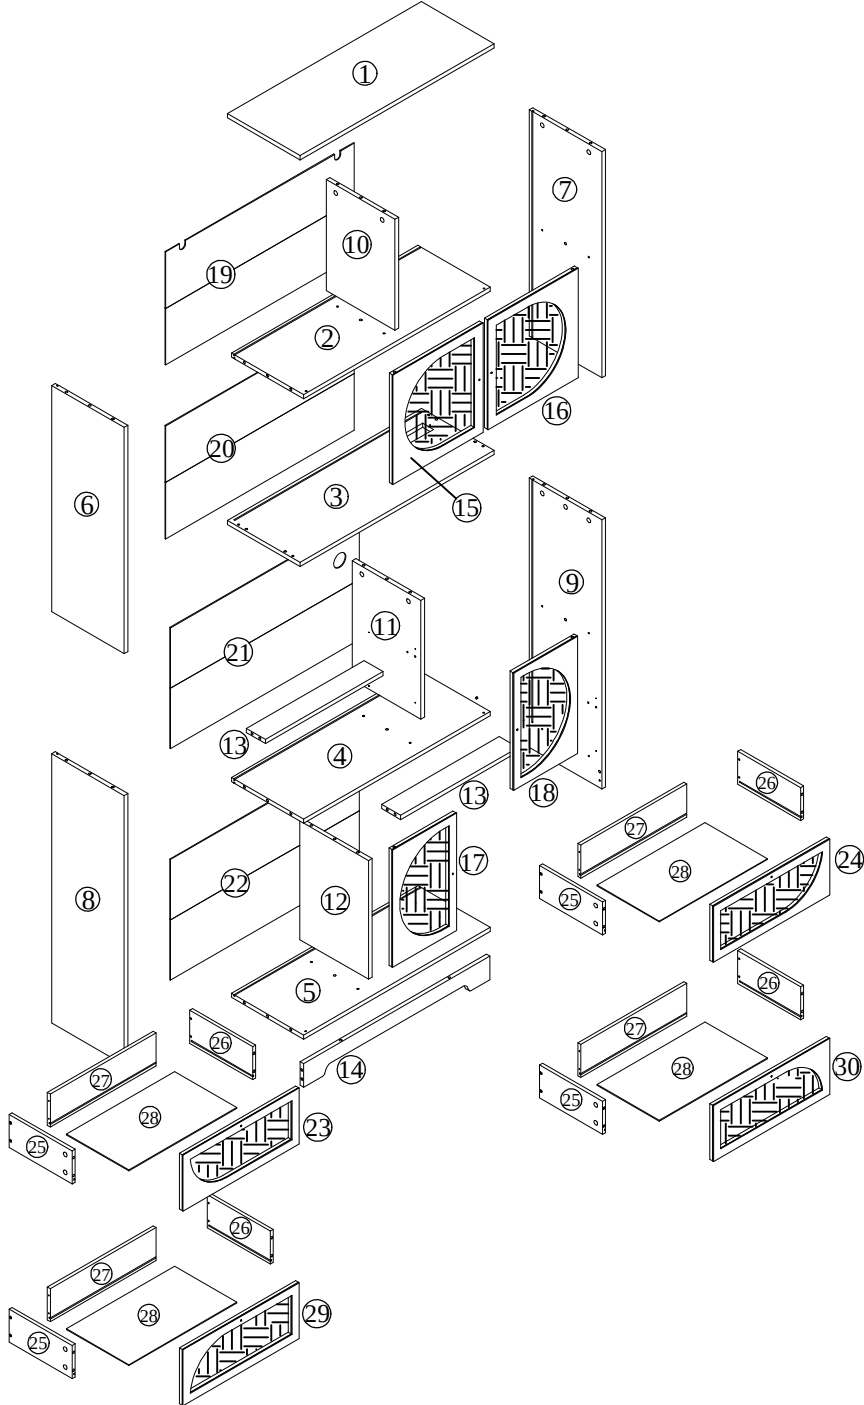


1

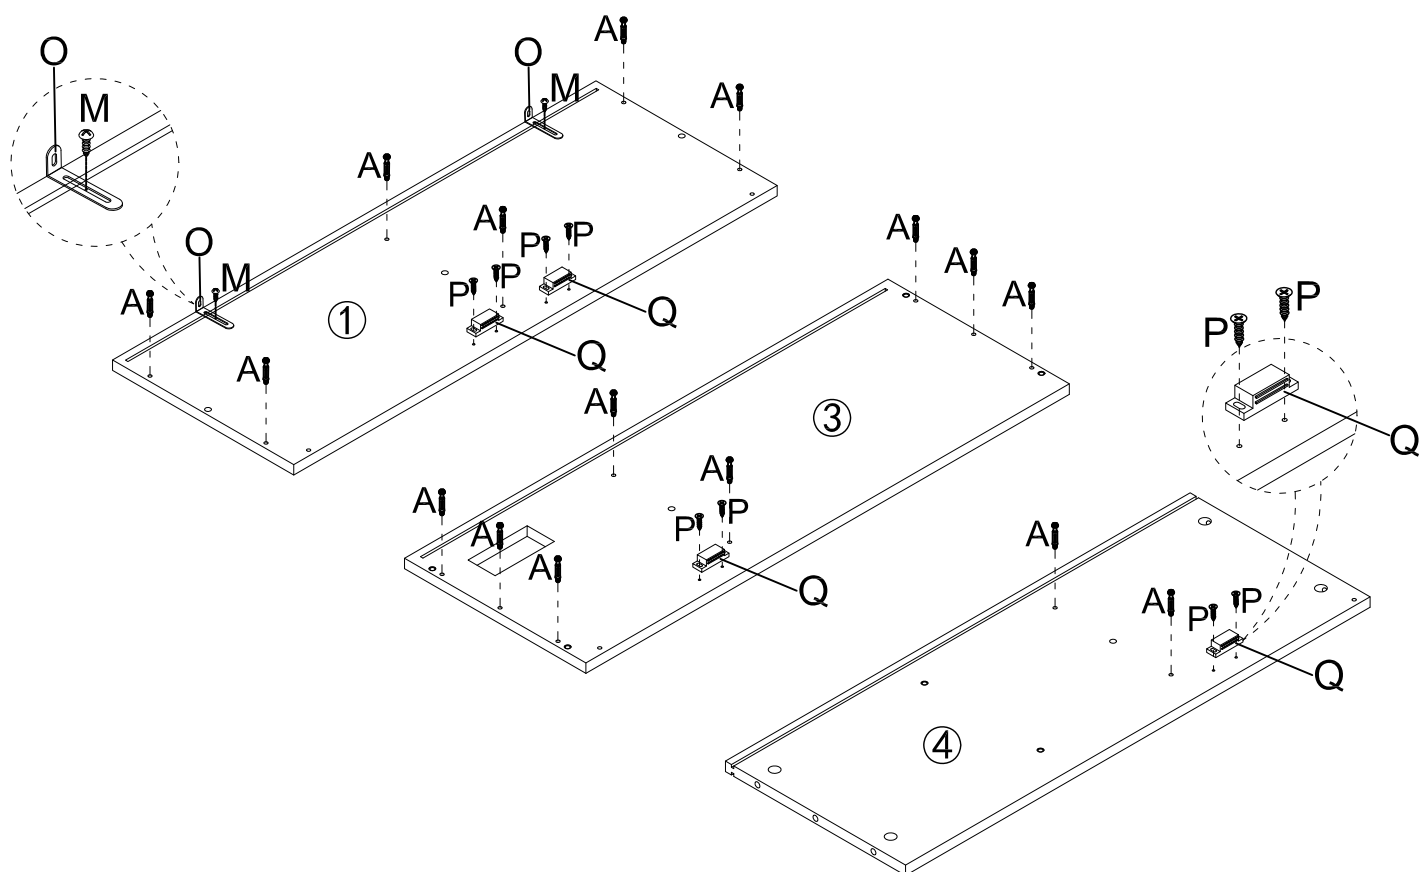

2

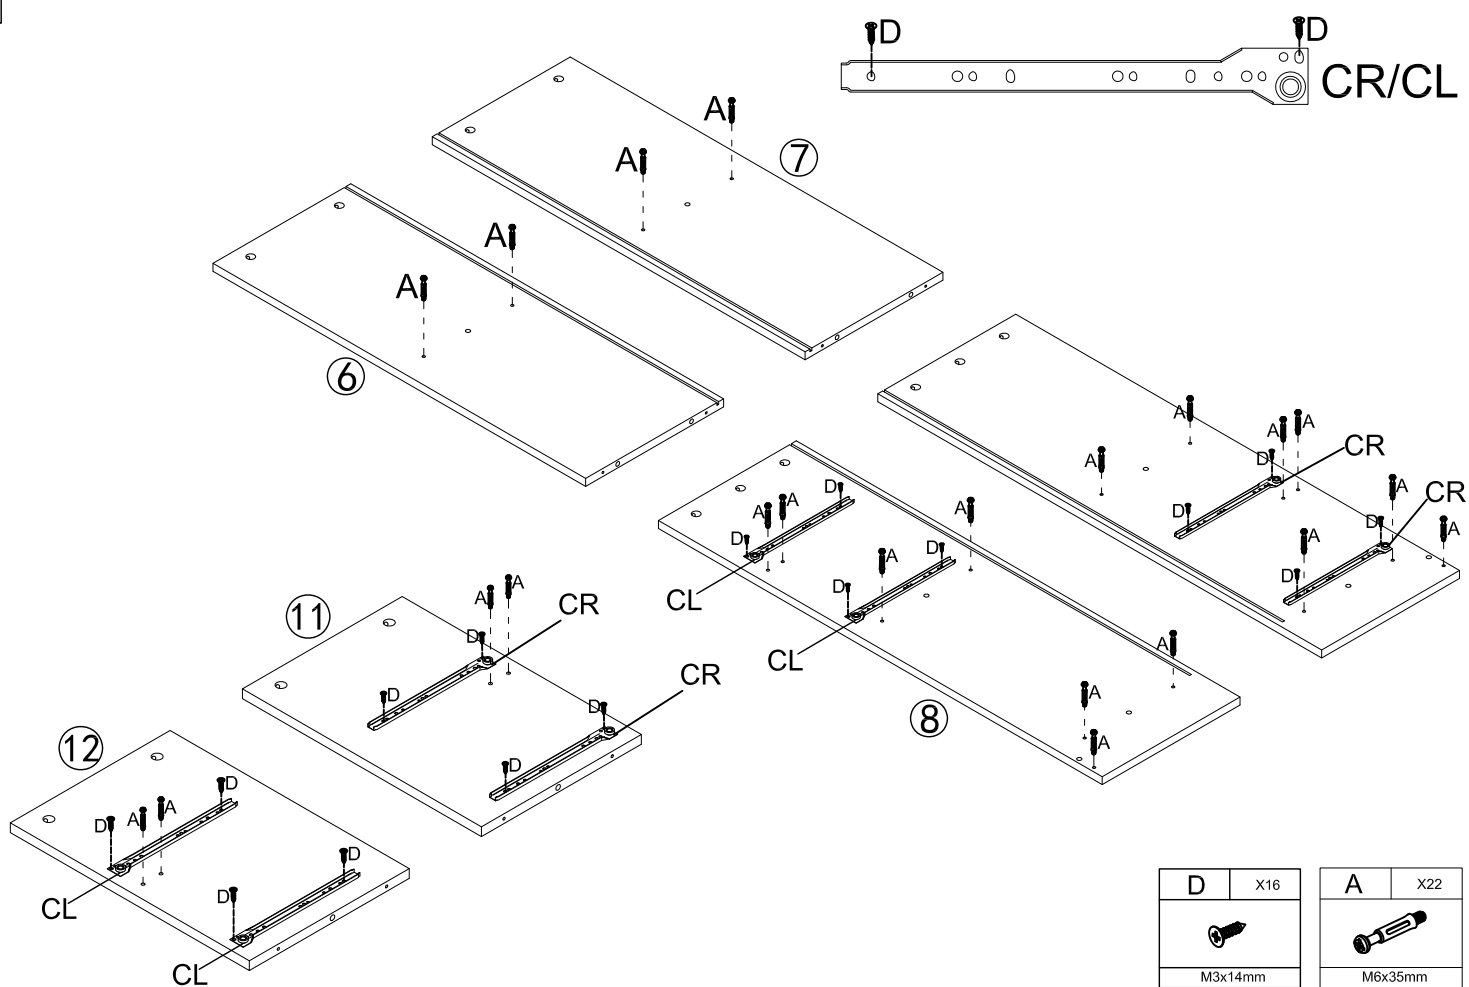


3

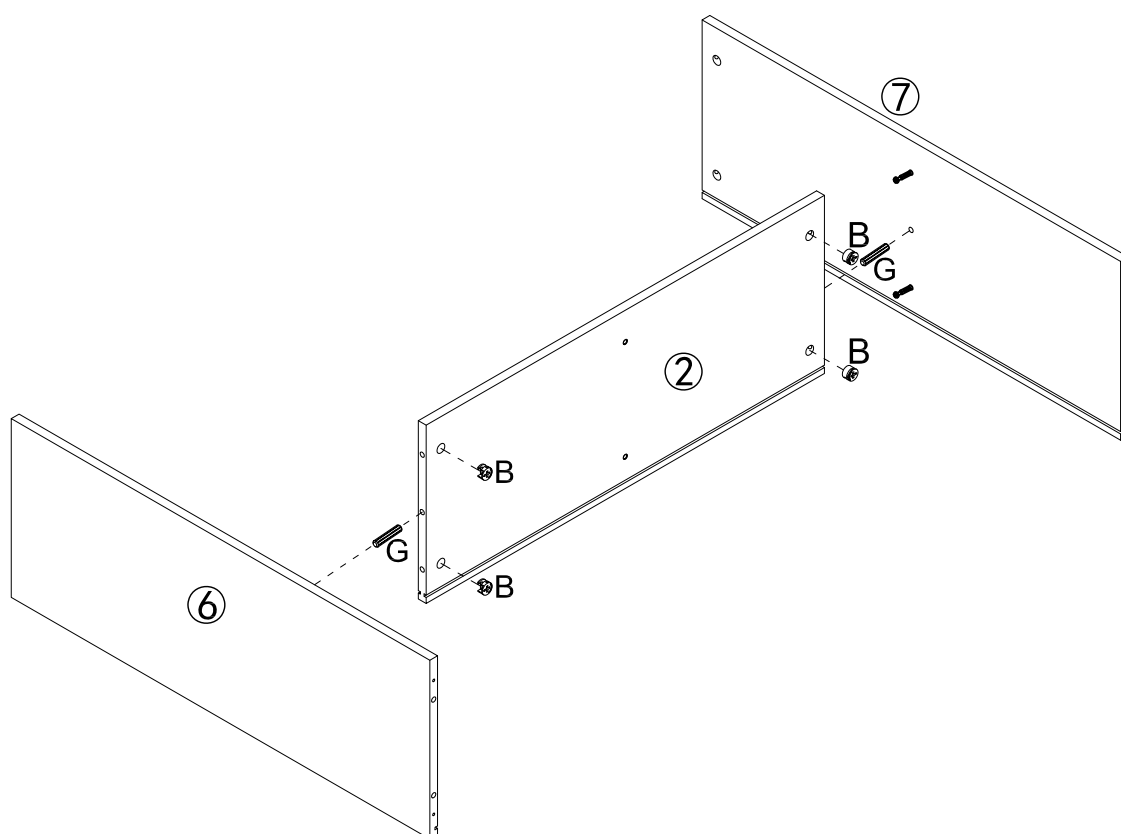


G	X2	B	X4
			
Ø6x30mm		Ø15x9mm	

4

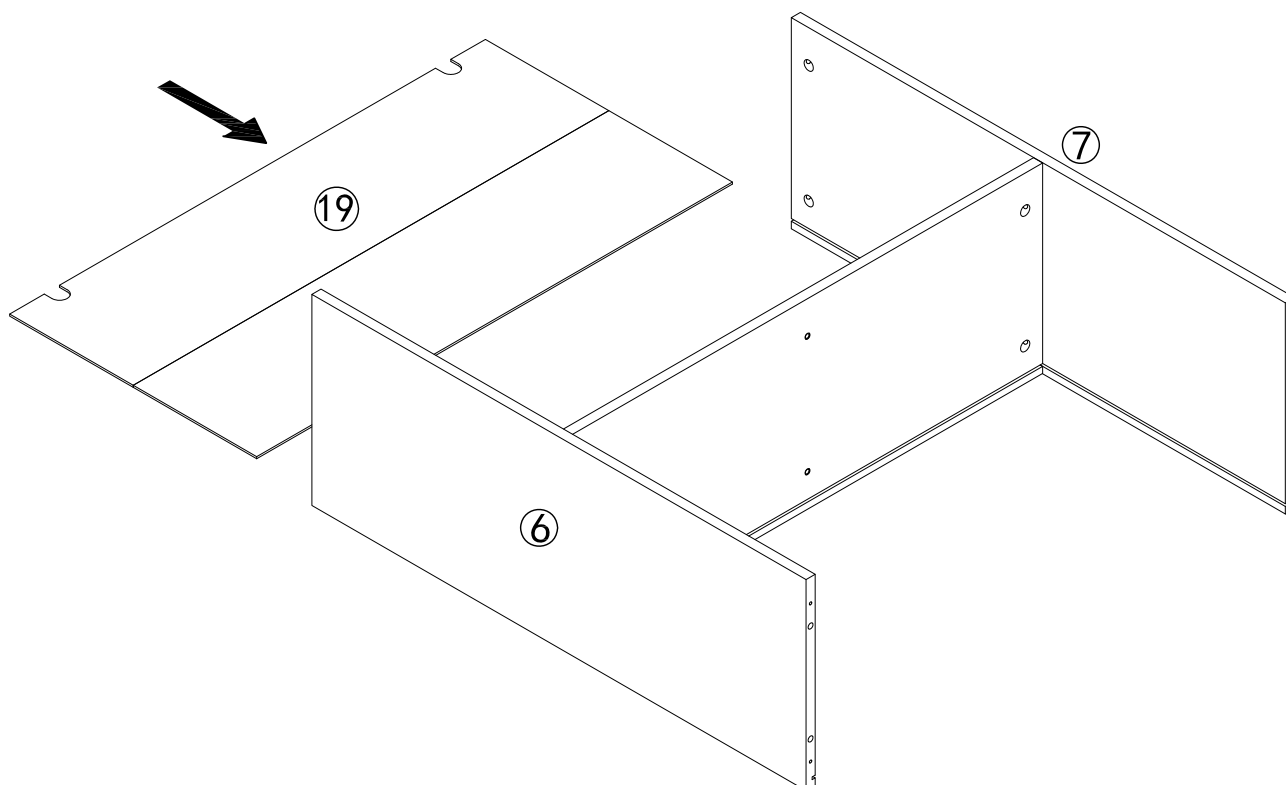


5

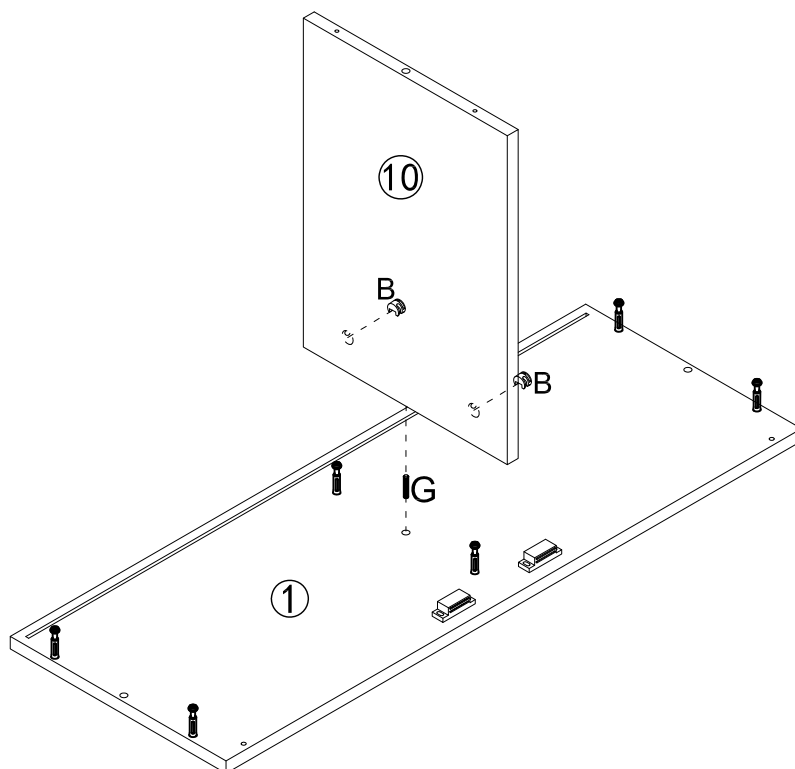

G	X1
Ø6x30mm	

B	X2
Ø15x9mm	

6

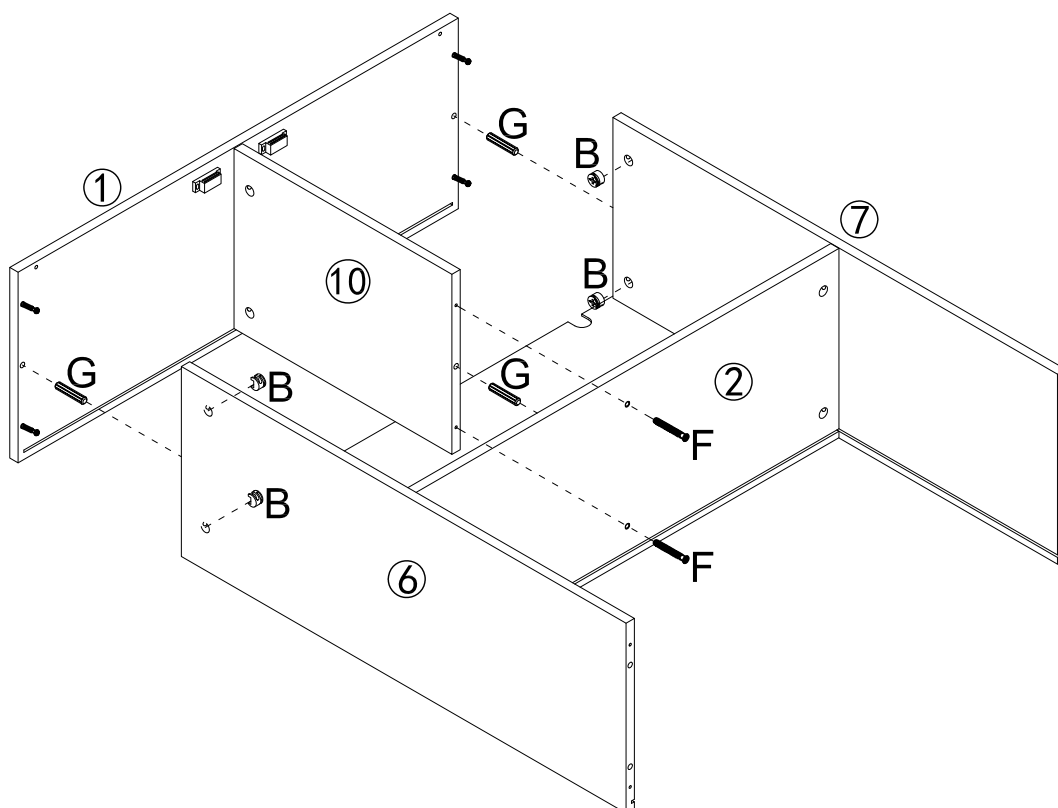


B	X4
Ø15x9mm	


F	X2
M5x40mm	

G	X3
Ø8x30mm	

7

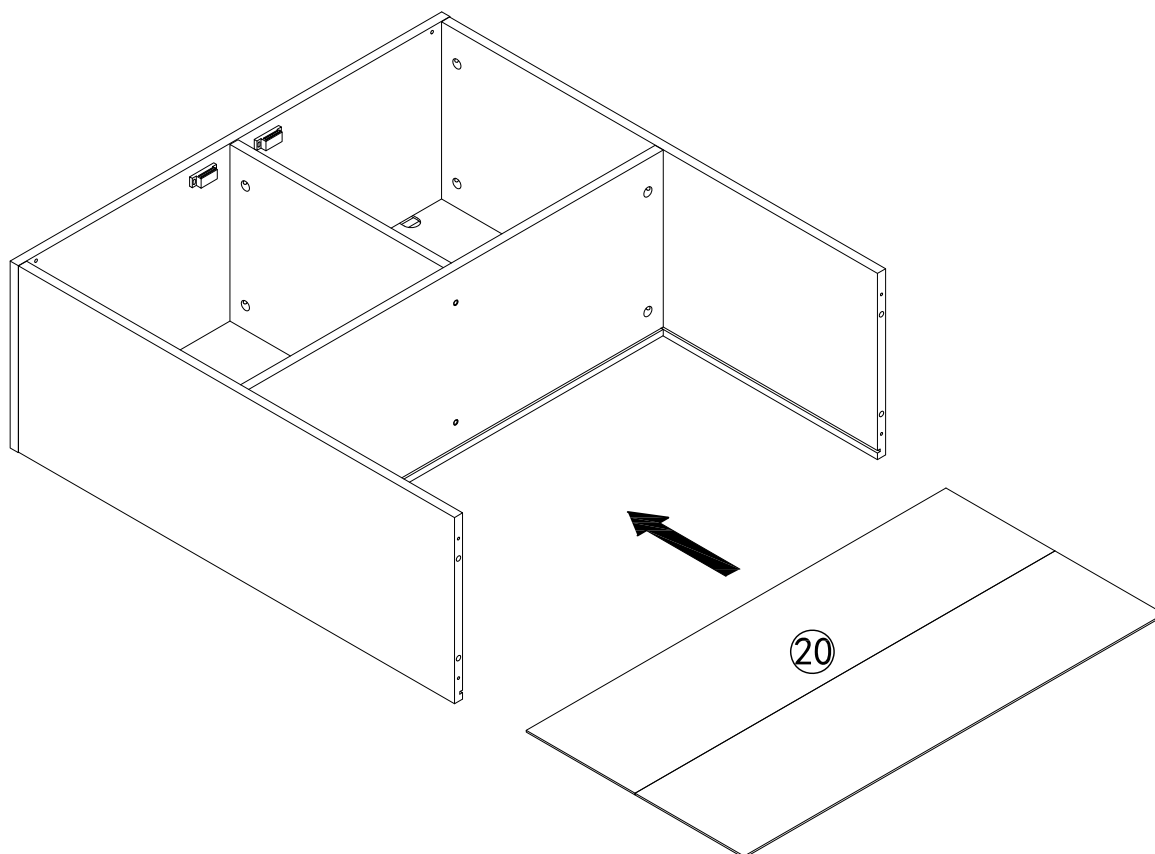


8

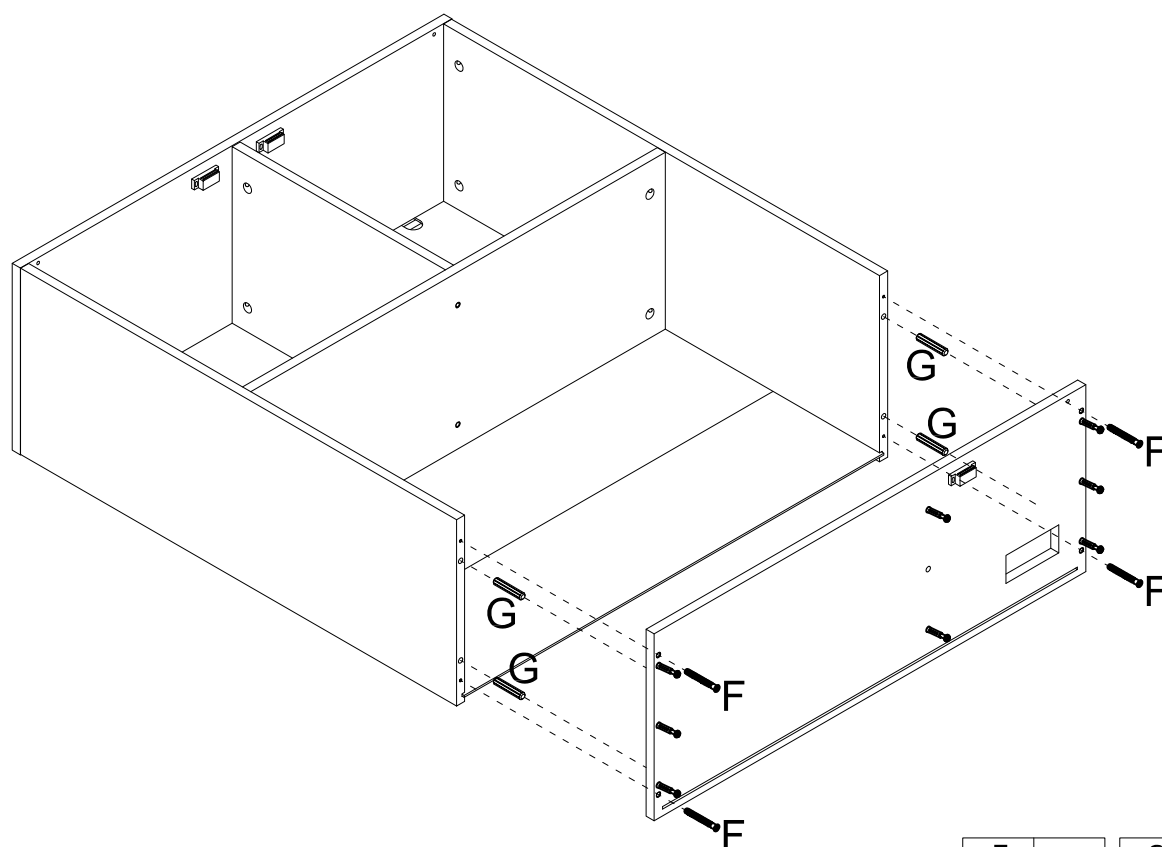


F	X4	G	X4
			
M5x40mm		Ø8x30mm	

9

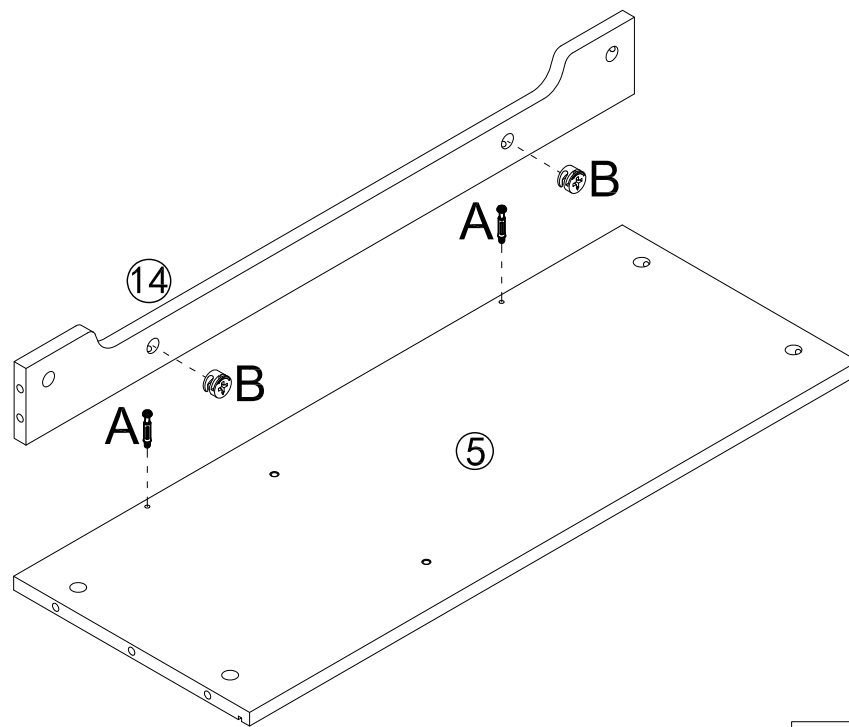


A	X2	B	X2
			
M6x35mm		Ø15x9mm	

10

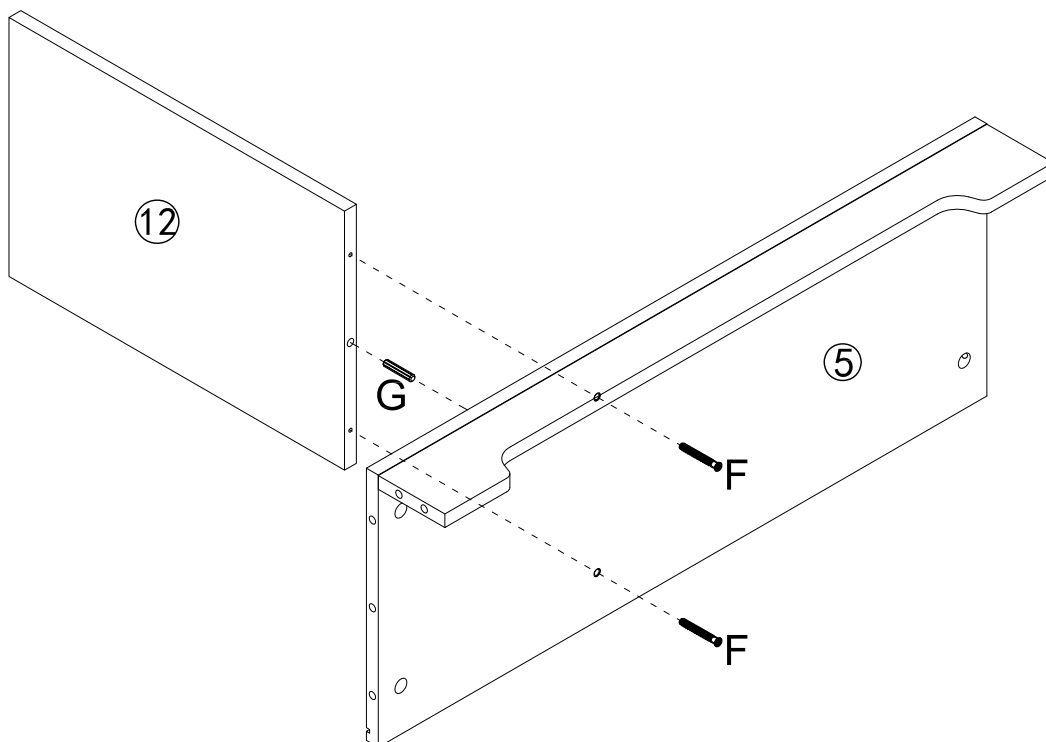


F	X2	G	X1
			
M5x40mm		Ø8x30mm	

11

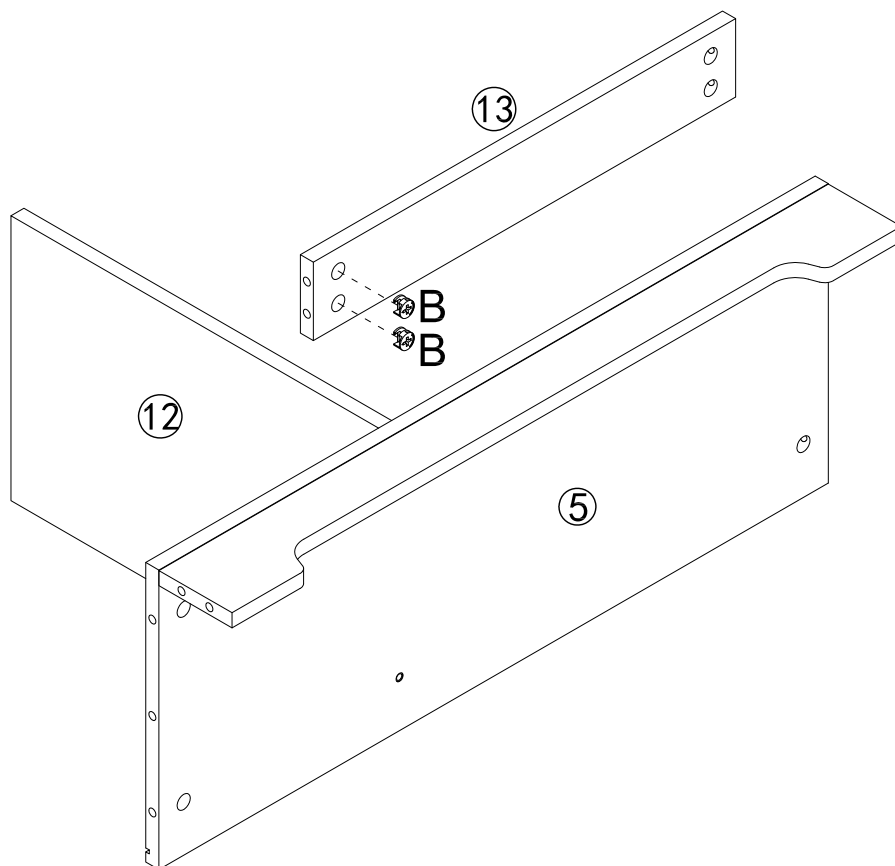

B	X2
	
Ø15x9mm	


12

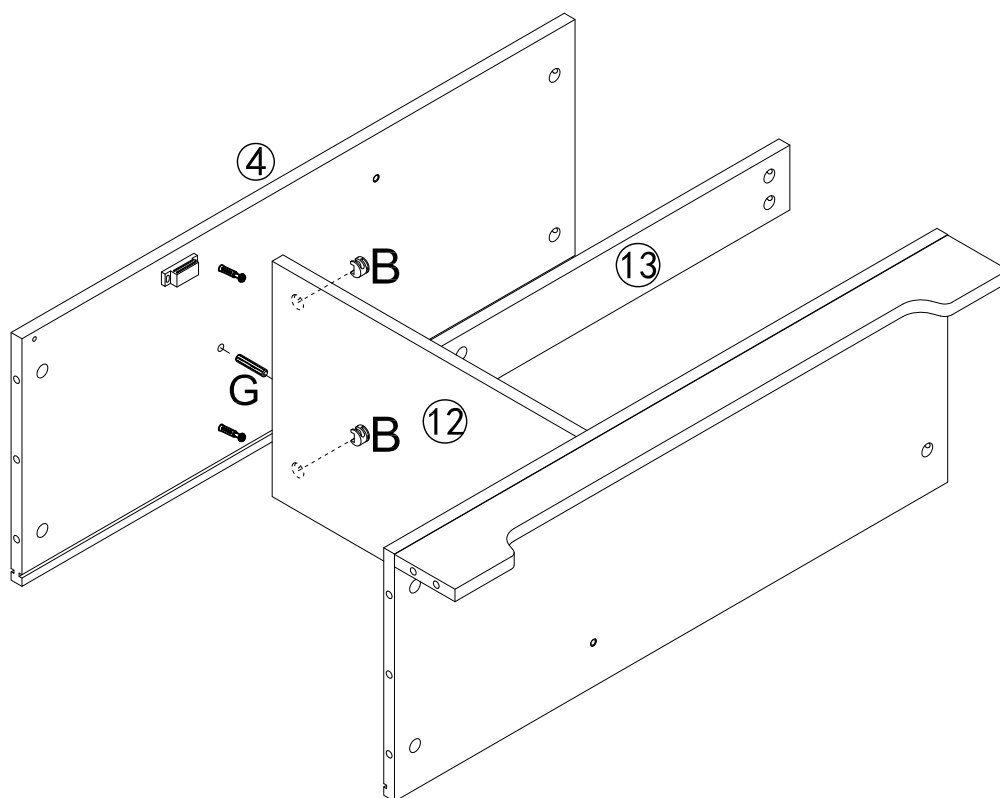

G	X1
	
Ø8x30mm	


B	X2
	
Ø15x9mm	

13

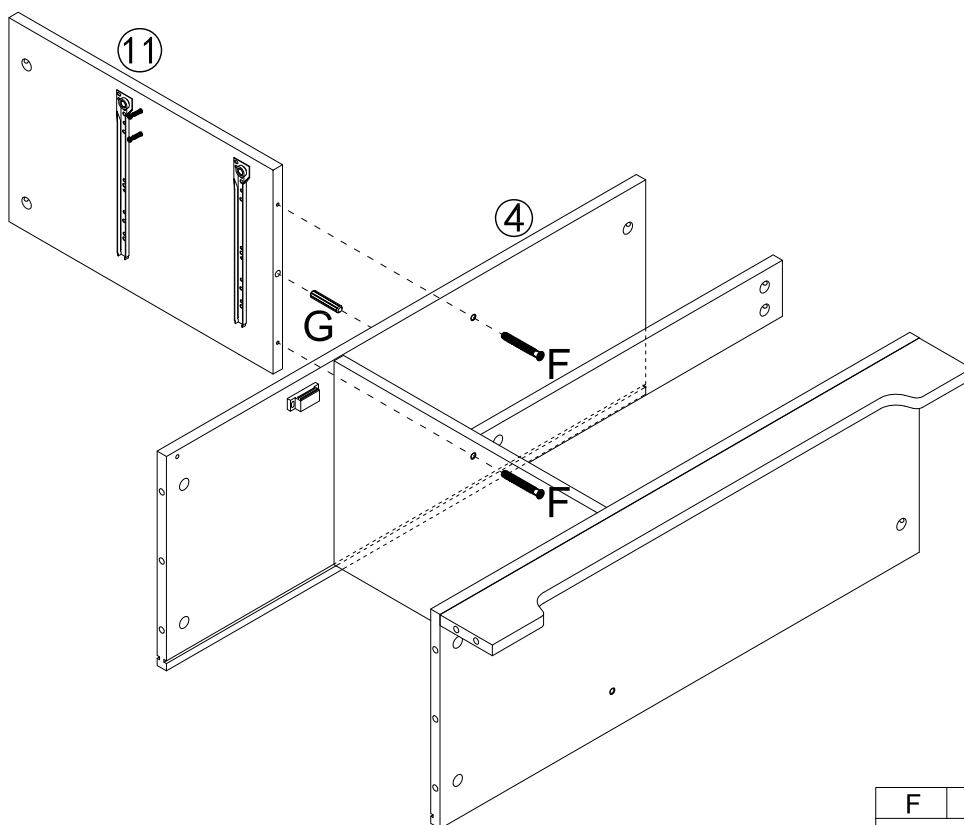


F	X2	G	X1
			
M5x40mm		Ø8x30mm	

14

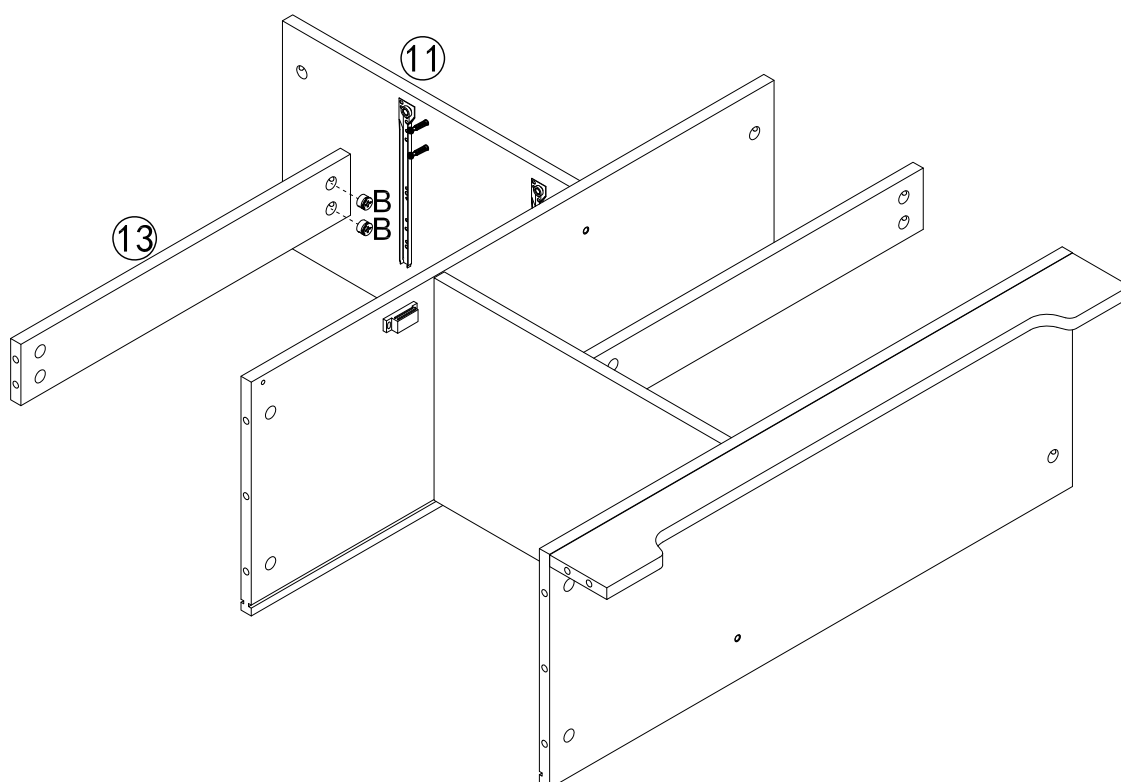


B	X2
	
Ø15x9mm	

15

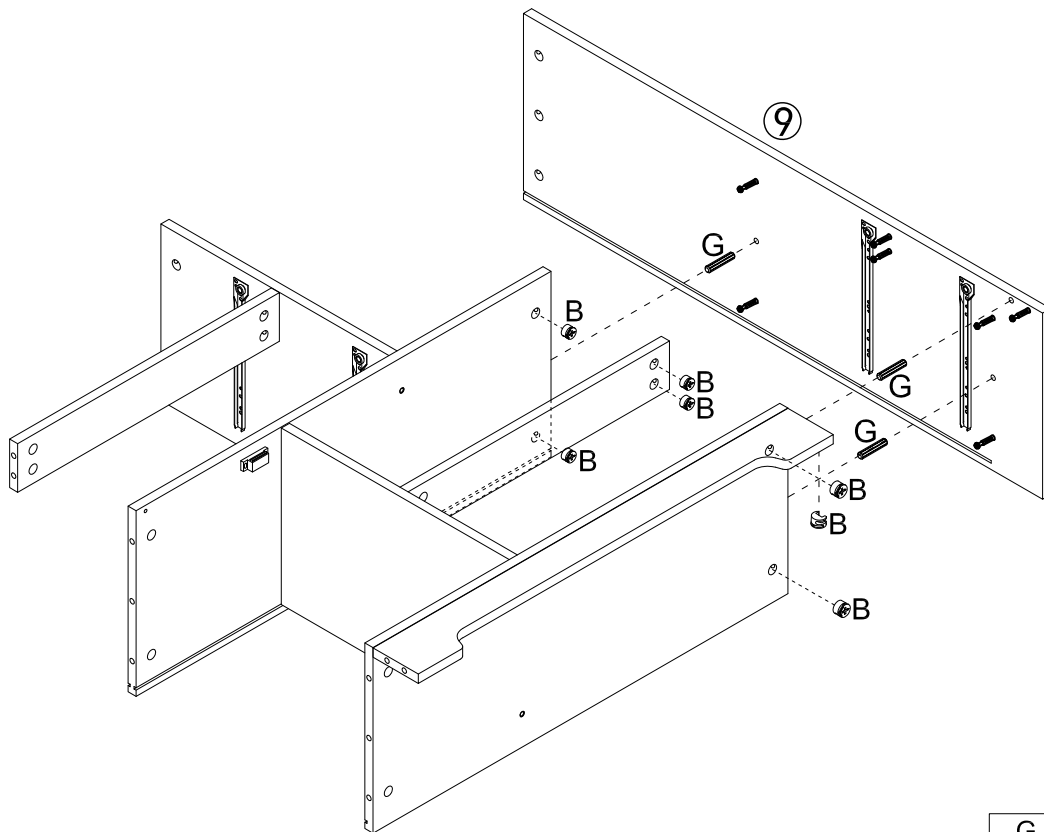


G	X3	B	X7
			
Ø8x30mm		Ø15x9mm	

16

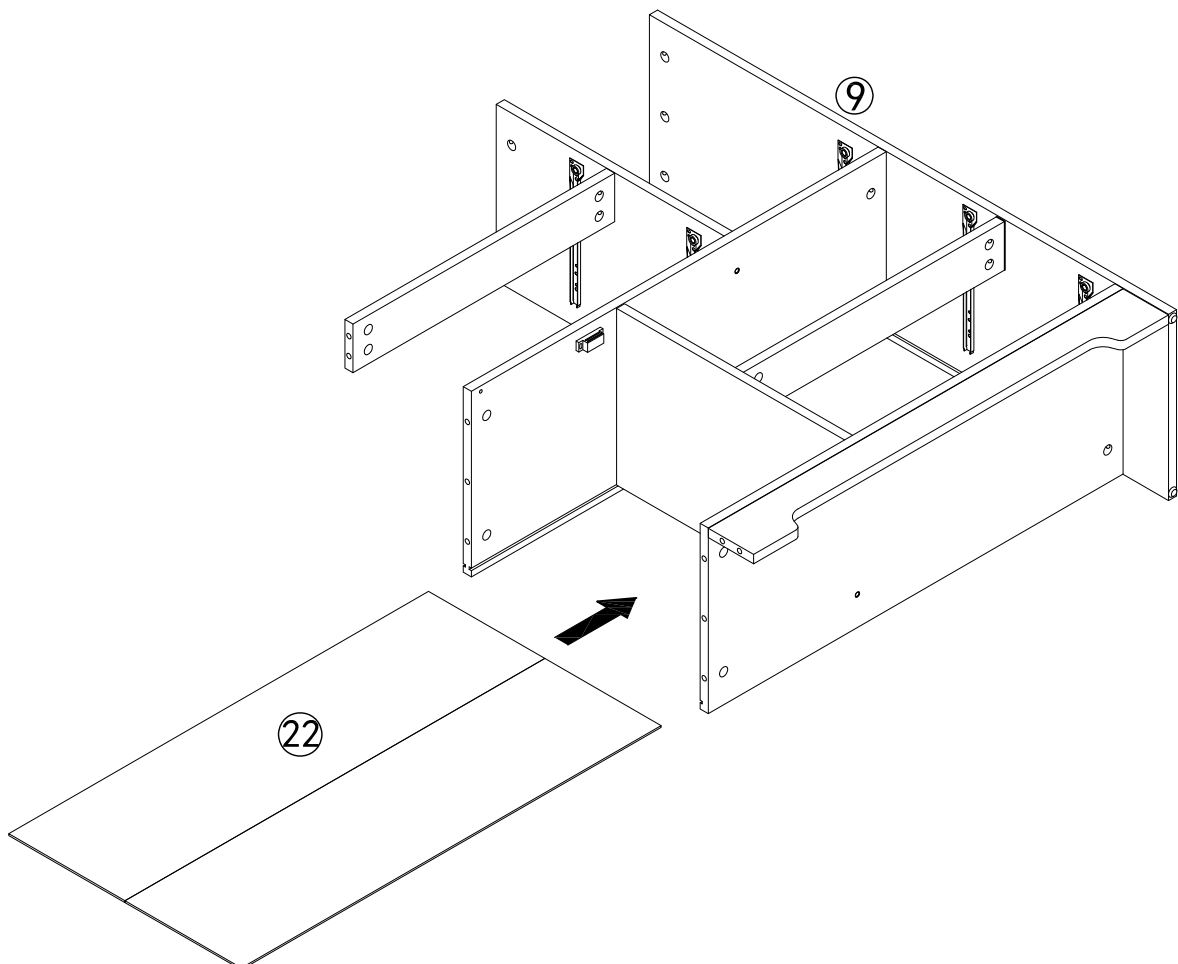


17

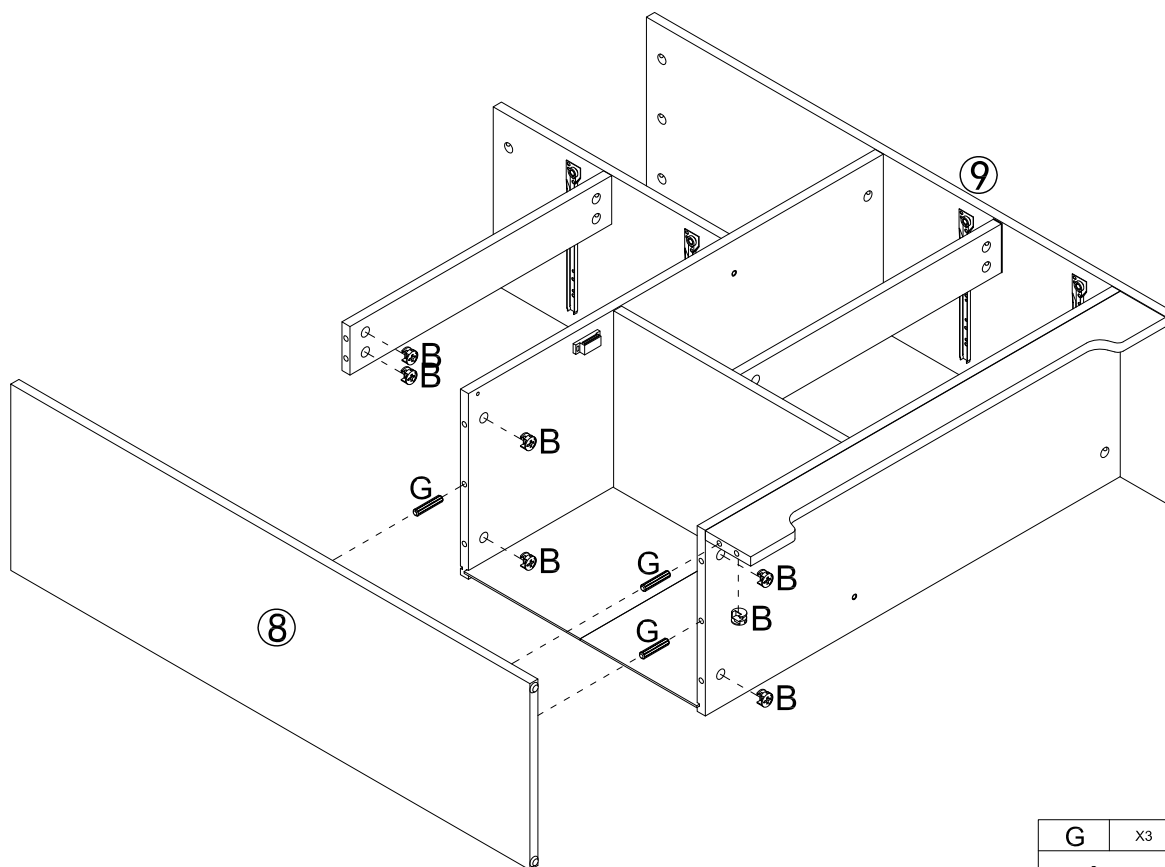


G	X3	B	X7
			
Ø8x30mm		Ø15x9mm	

18

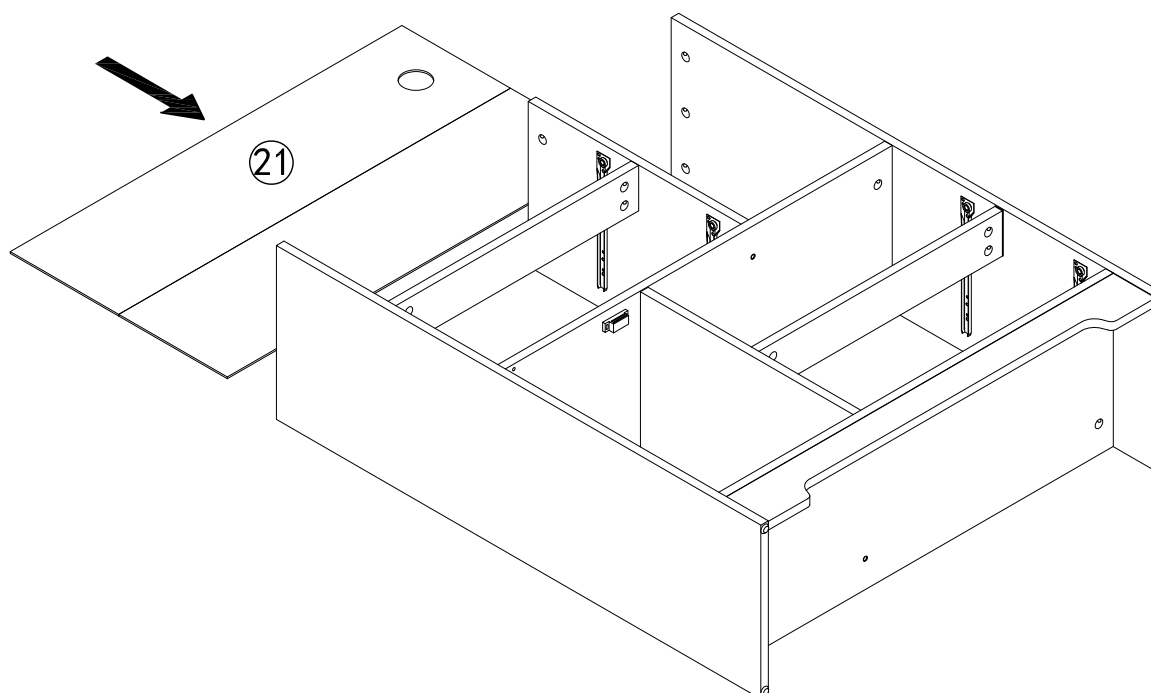


19

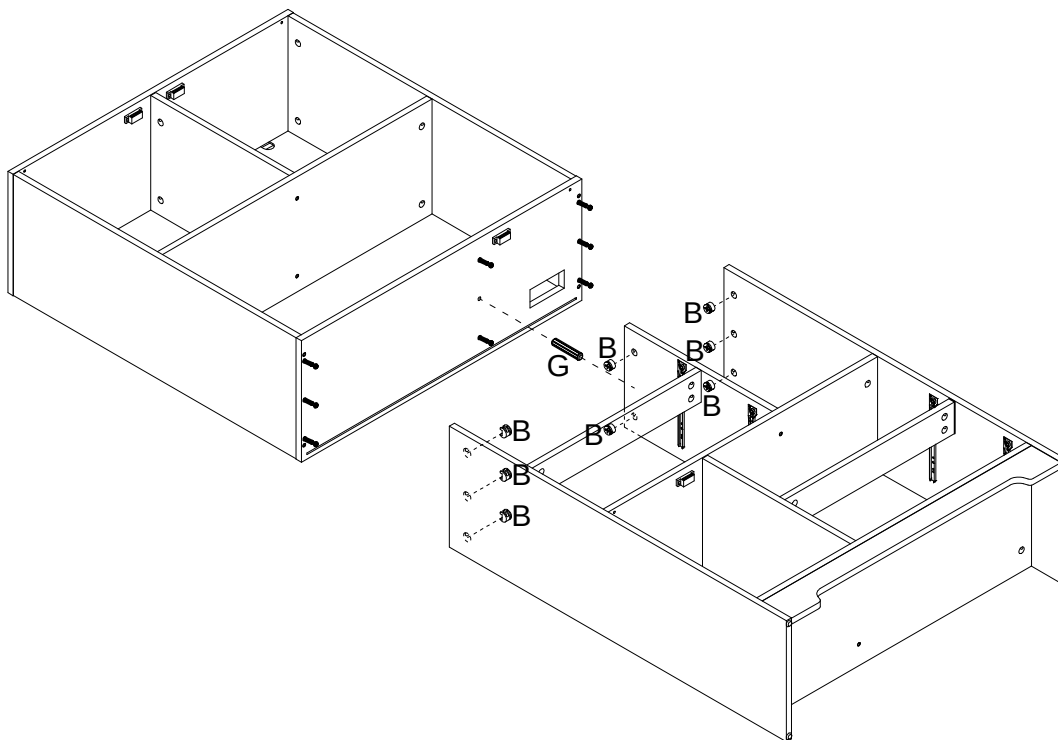

G	x1
	
Ø8x30mm	

B	x8
	
Ø15x9mm	

20

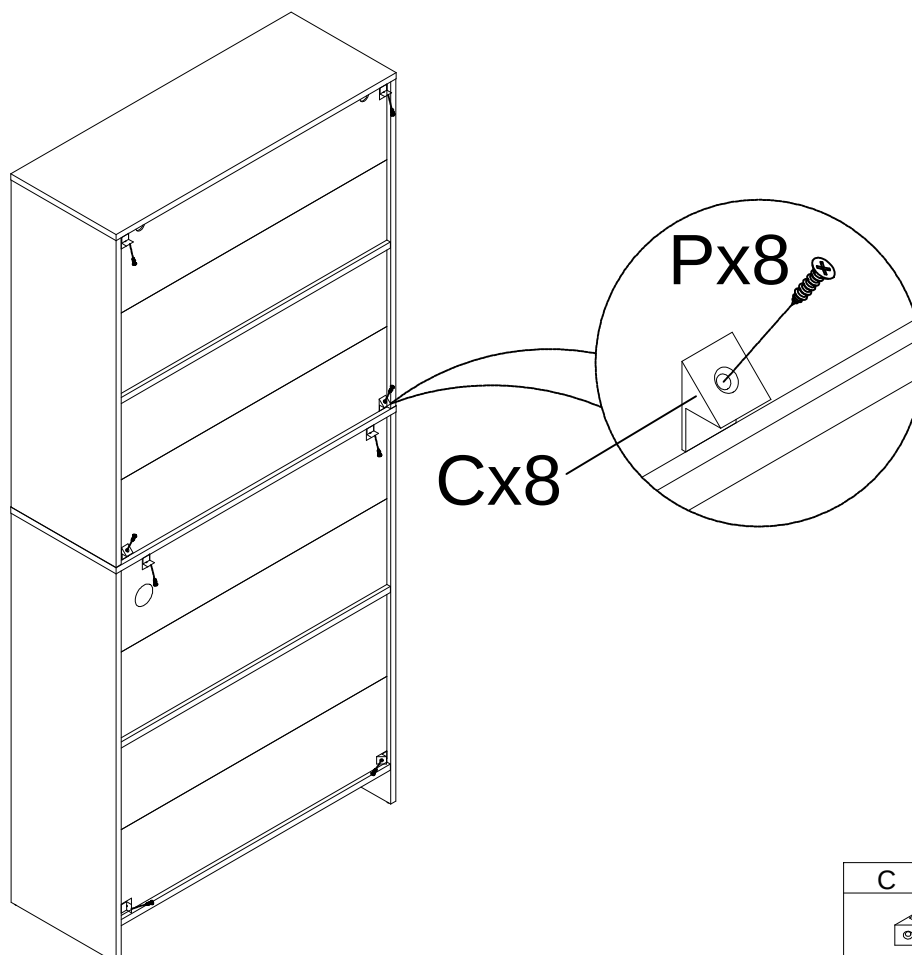

C	x8
	

P	x8
	
M3x14mm	

Diagram illustrating the wall mounting of the KUBO storage unit. The unit is shown being attached to a wall using three different types of fasteners: P (screws), T (anchors), and N (corner brackets). A detailed view shows the unit's back panel with pre-drilled holes and the placement of these fasteners. A legend at the bottom identifies the parts:


P	X2
M3x14mm	

T	X1


N	X2
Ø6x30mm	

K	X2

P	X8	S	X4	J	X8	H	X4	I	X4
									
M3X14						M4x18mm			

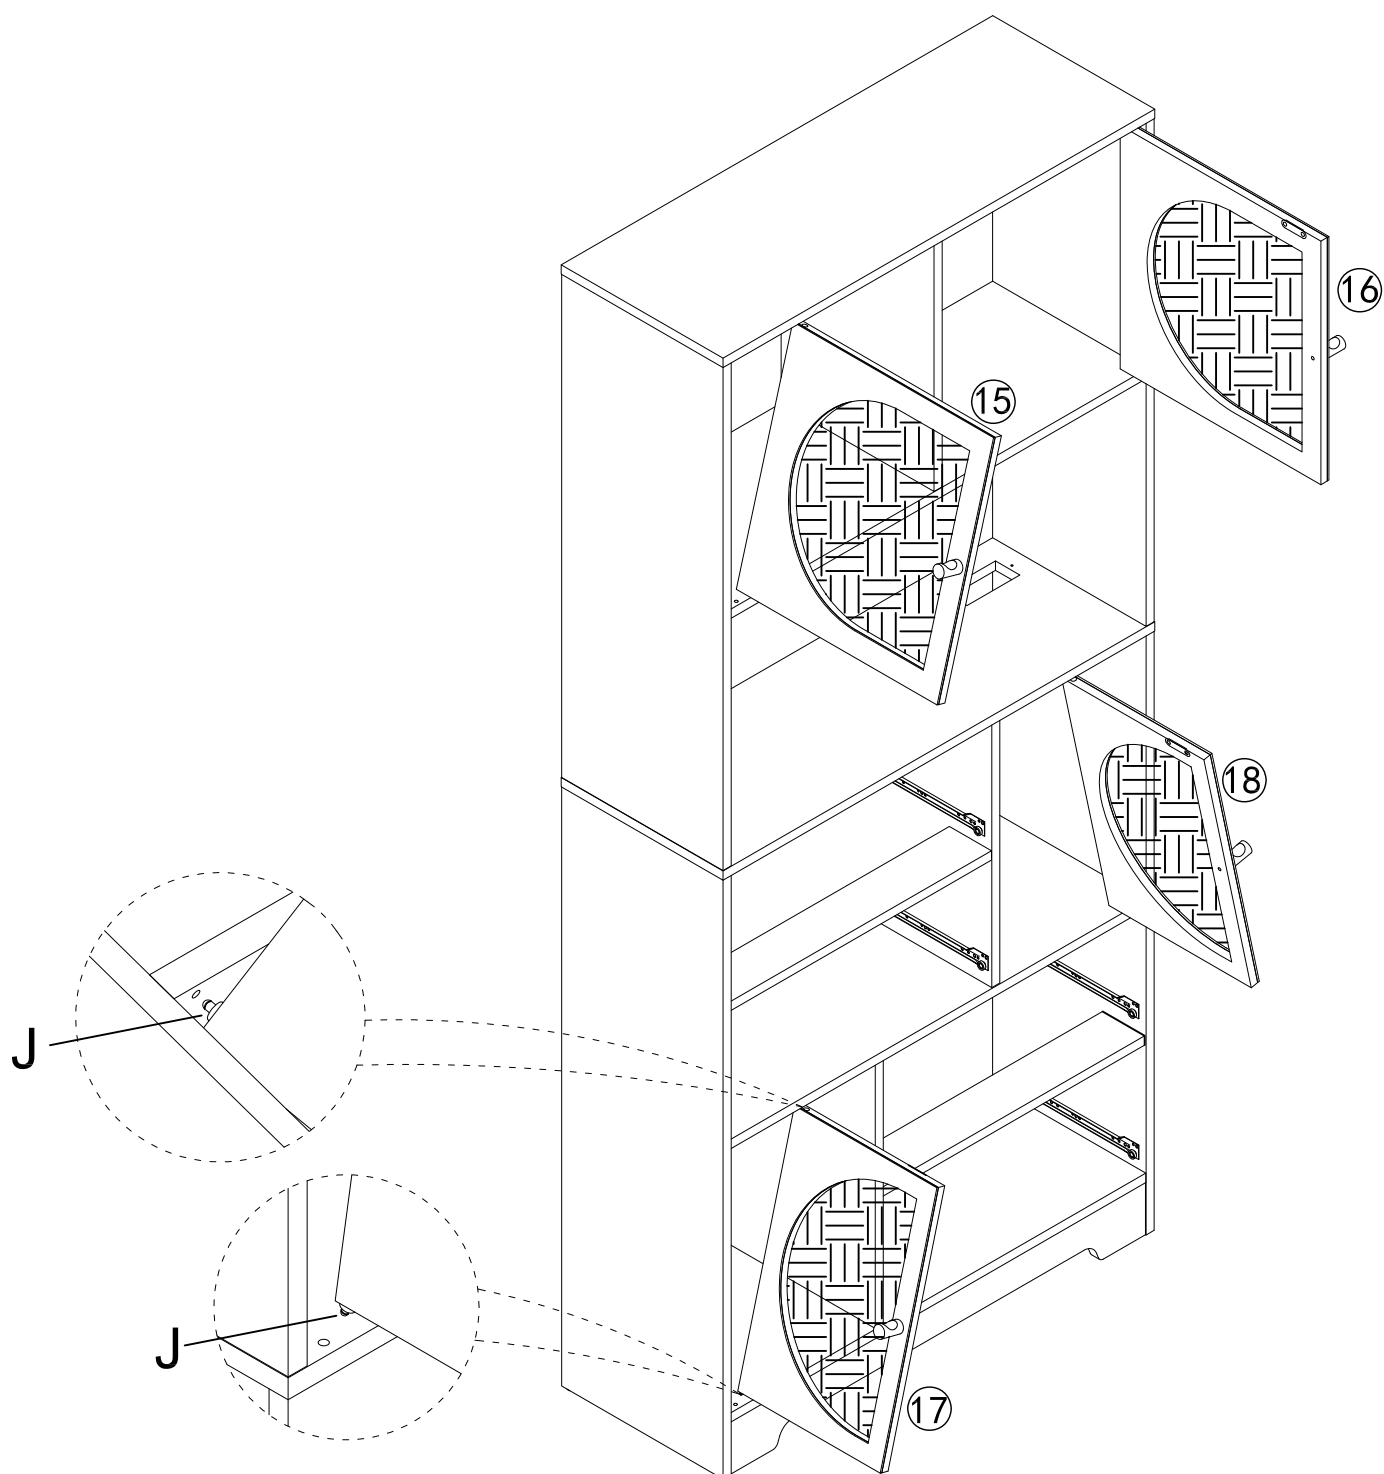


24

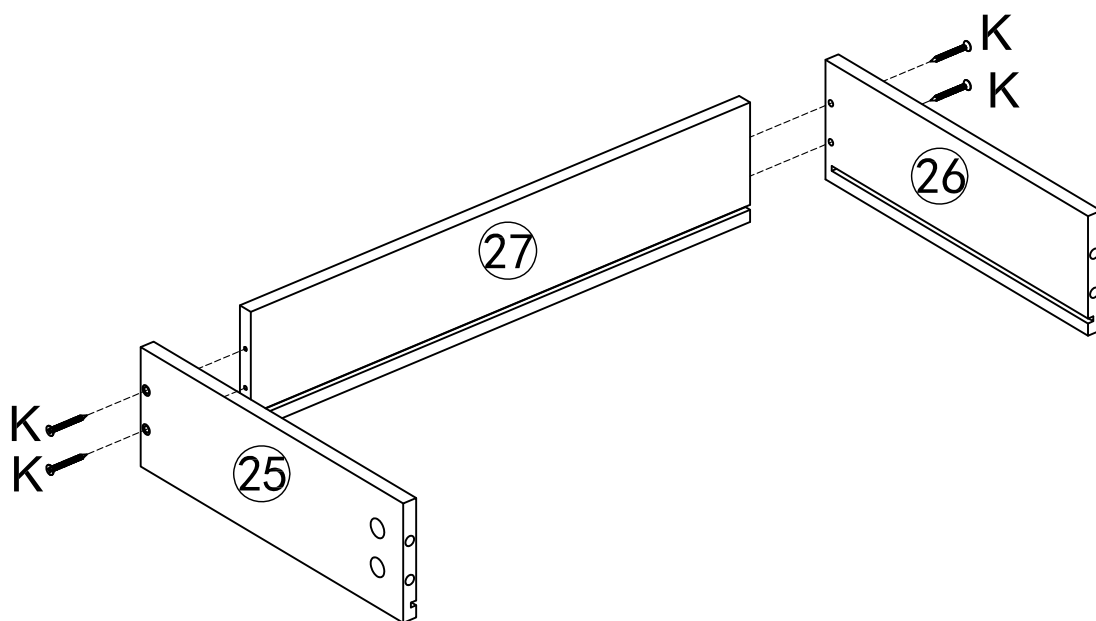


X4

K	X16
	
M4x35mm	


25

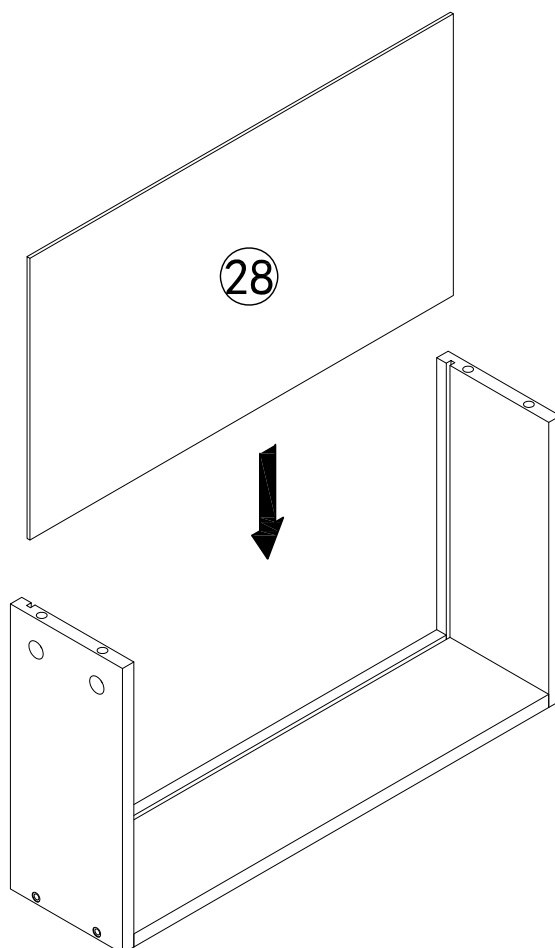


X4

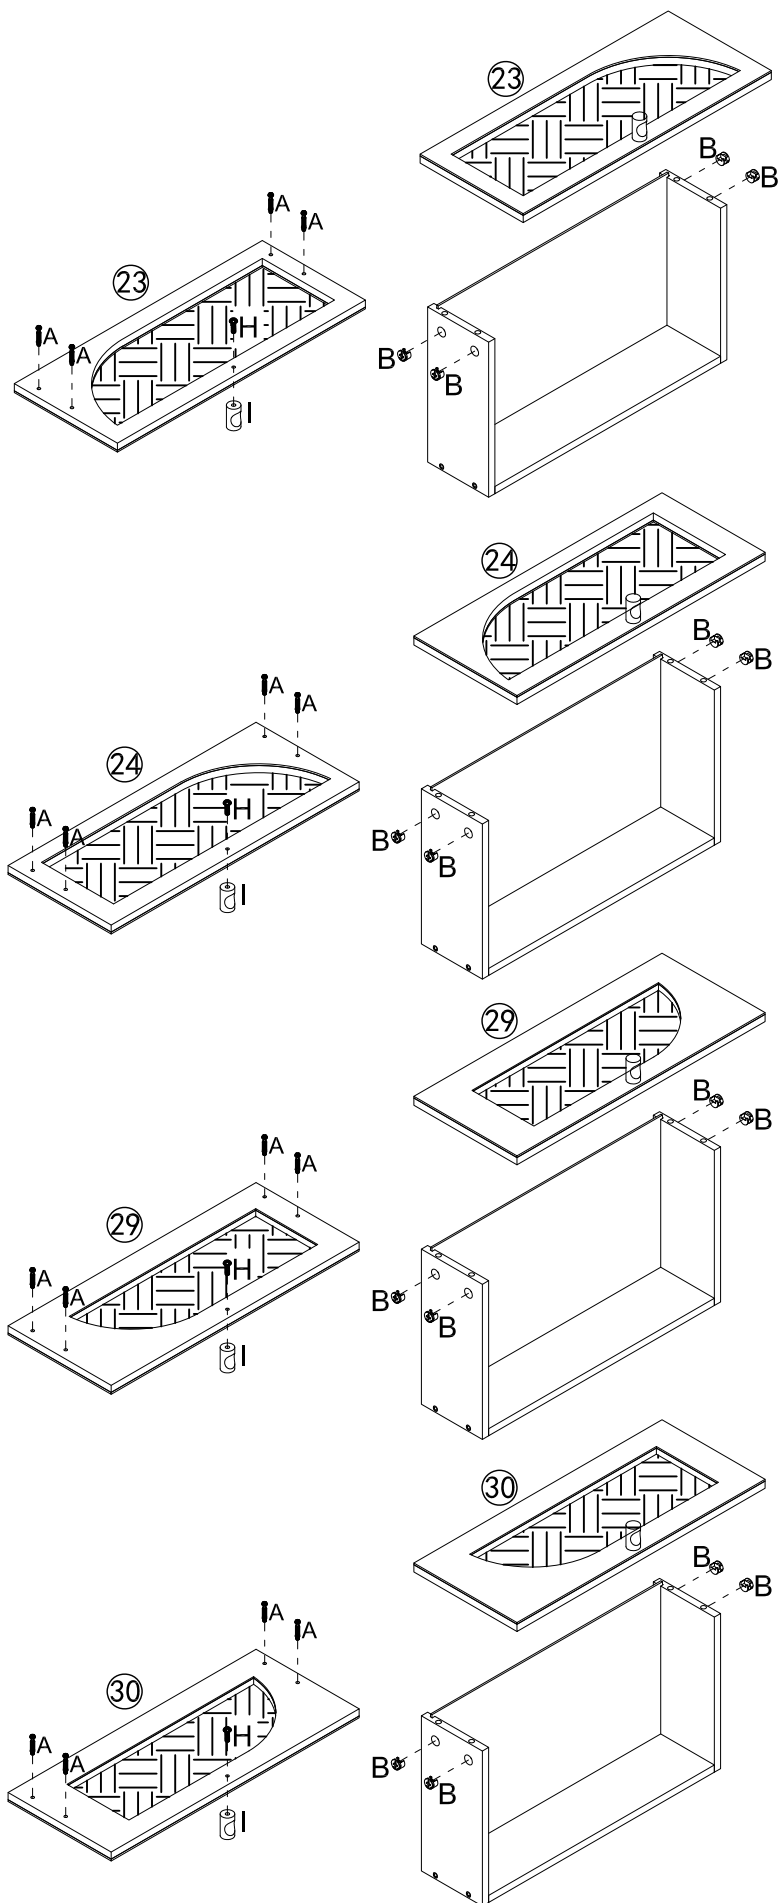


H	X4	I	X4	A	X16	B	X16
							
M4x20mm				M6x35mm		Ø15x9mm	

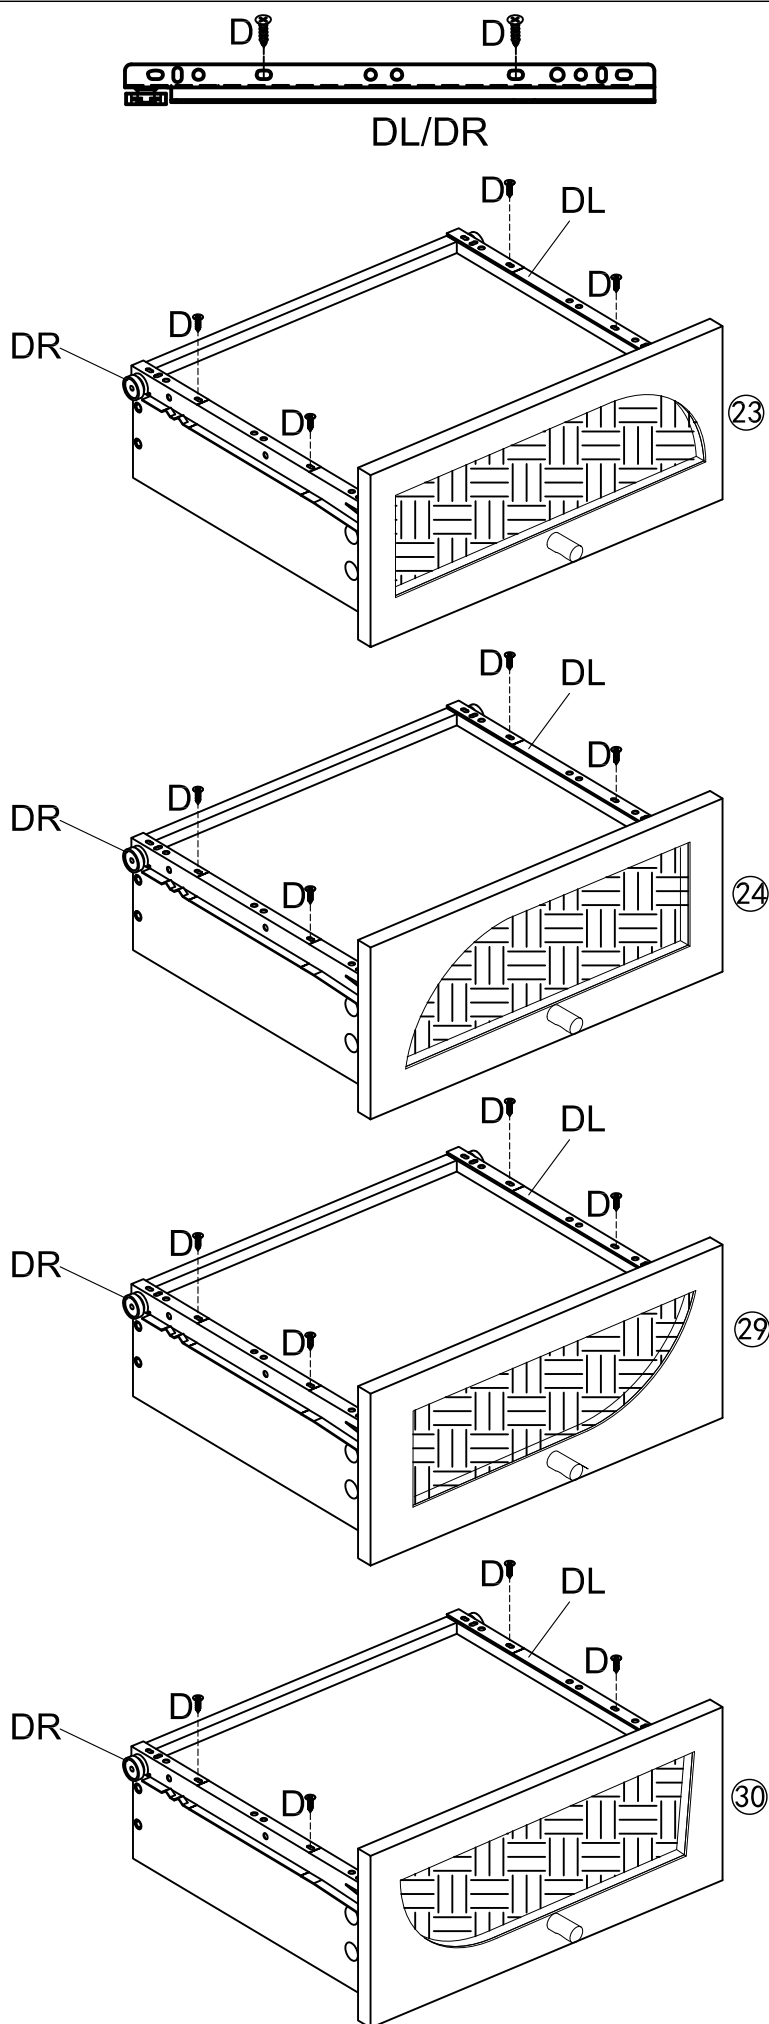

D	X16
	
M3x14mm	

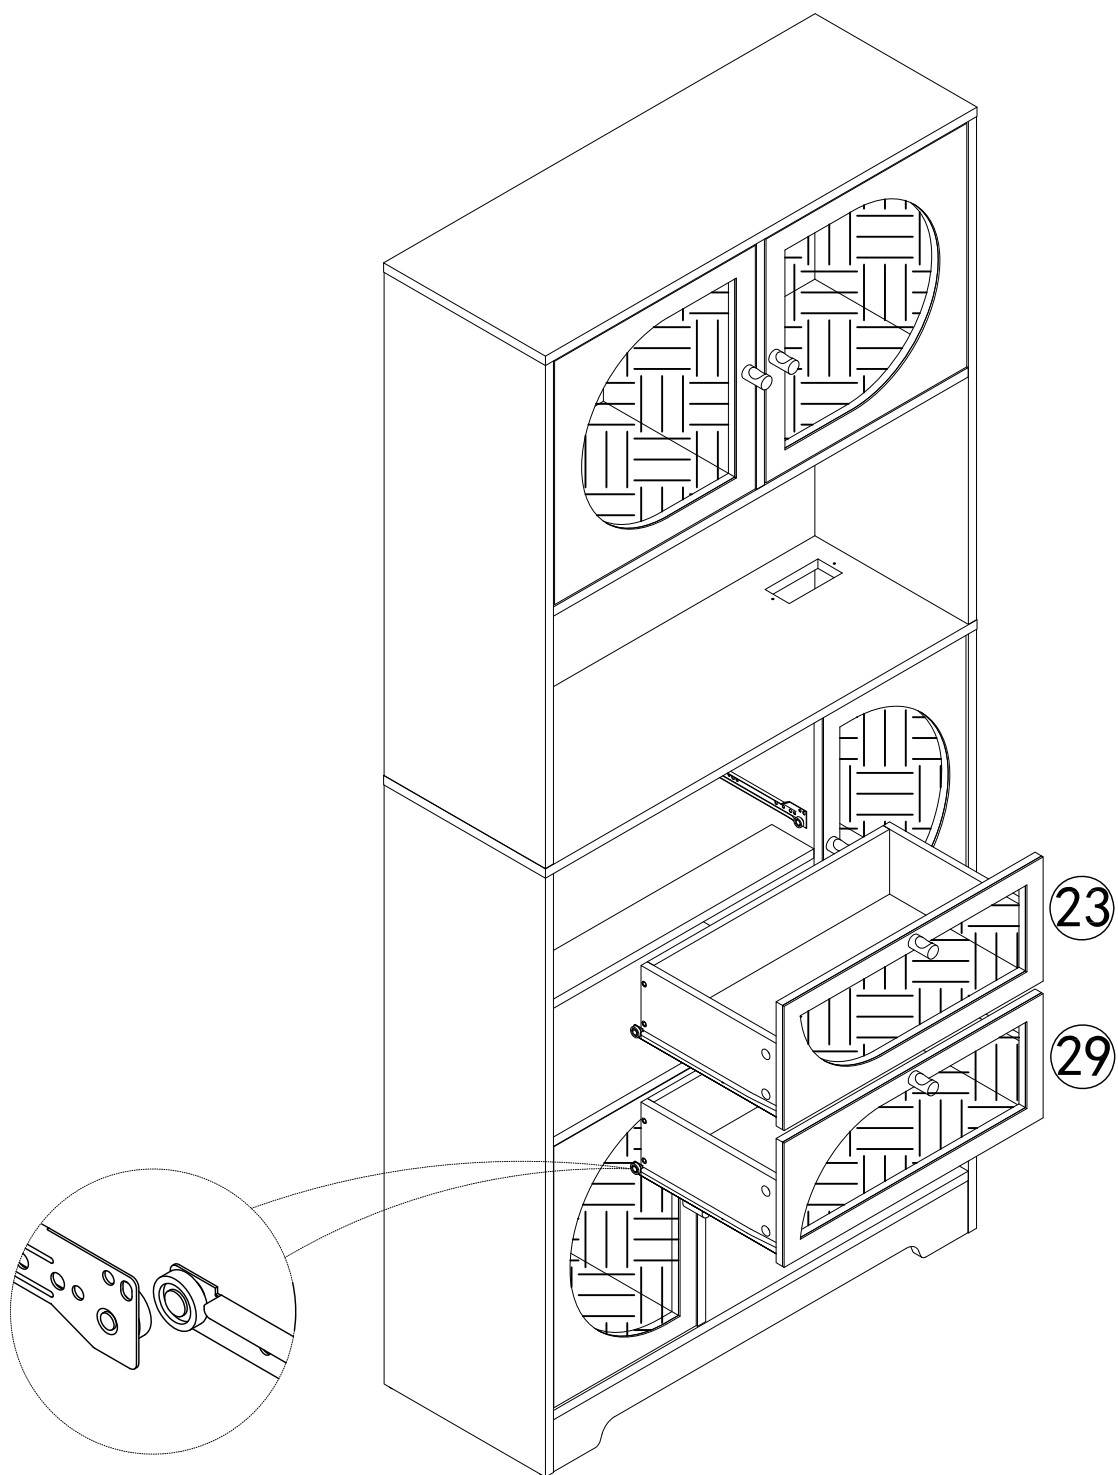

29

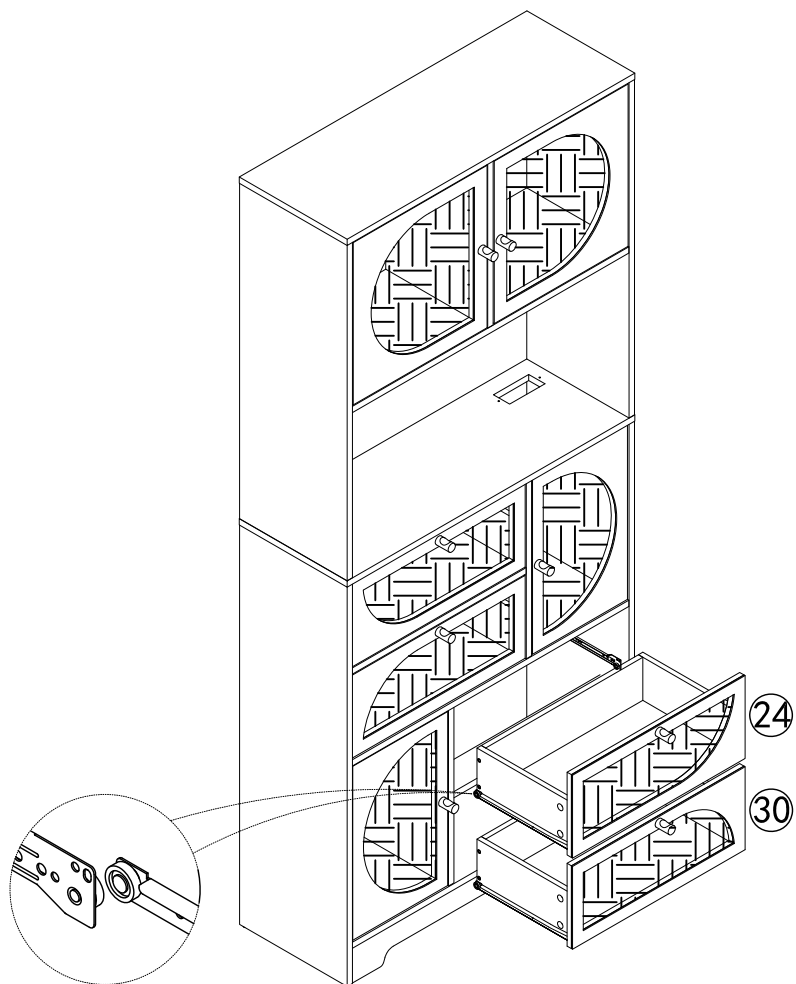

30

