



B2503-7

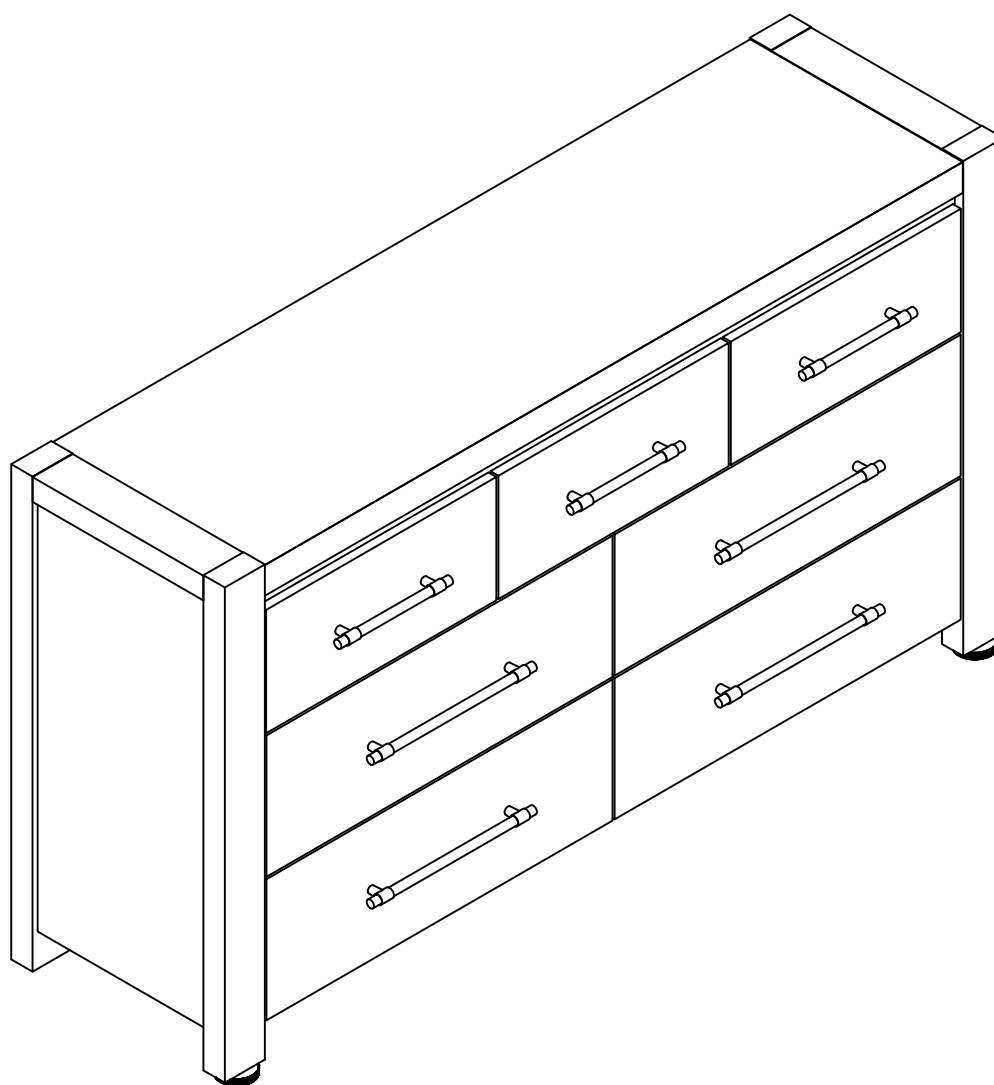

Part Identification

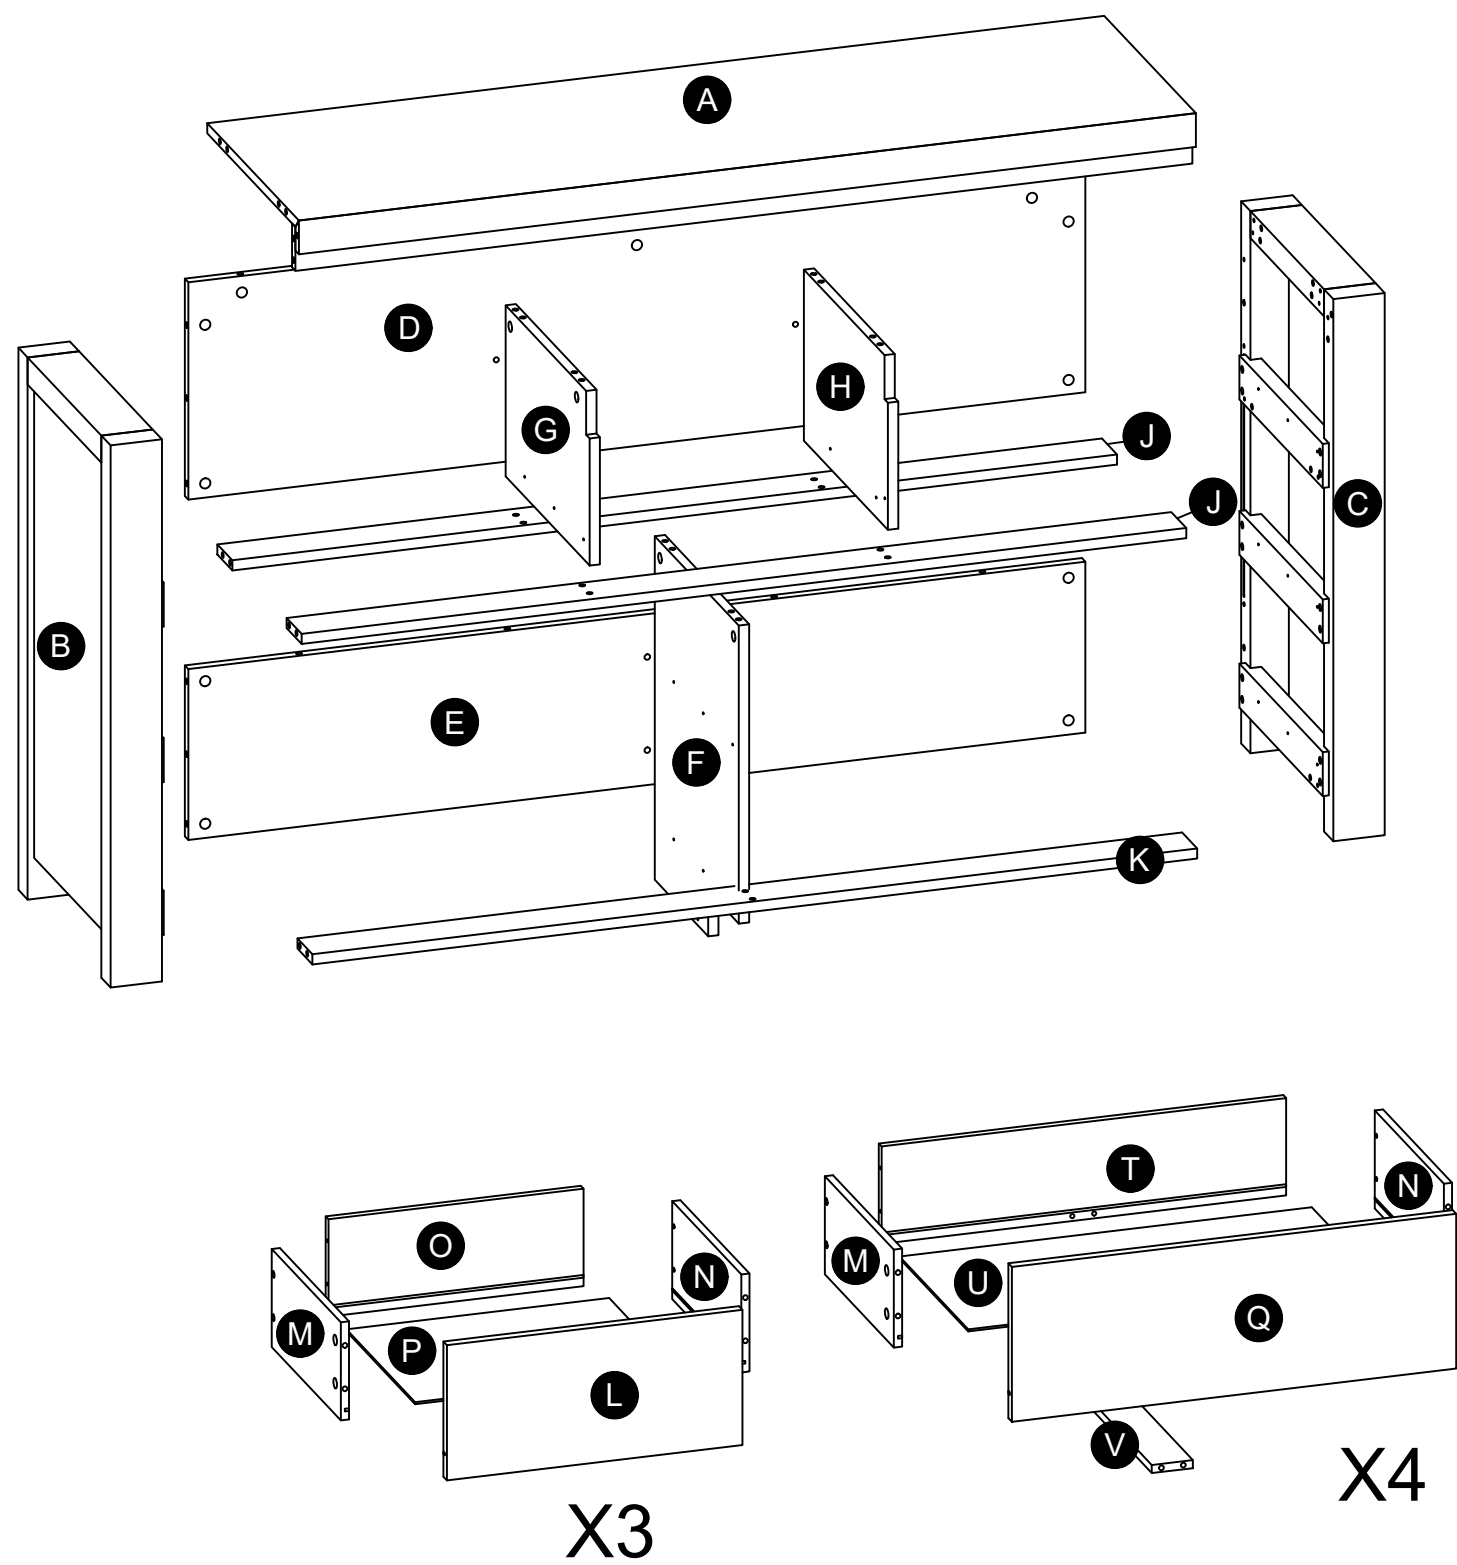


Hardware Identiflcation

1 HIDDEN
CAM A -29




2 CAM
SCREW A -29




3 WOOD
DOWELØ8x30mm - 31




4 HIDDEN
CAM A -36

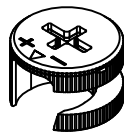

5 CAM
SCREW A -36



6 ANTI TIPPING
HARDWARE -2




7 BIG HANDLE A -4




8 LITTLE PULL
HANDLE A -3




9 SHACKLES A -2

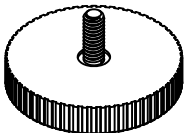

10 INDICES A -1



11 SHACKLES A - 1




12 SHACKLES A -4



L=12"
7x CABINET LEFT
(CL)



L=12"
7x CABINET RIGHT
(CR)



L=12"
7x DRAWER RIGHT
(DR)




L=12"
7x DRAWER LEFT
(DL)

13 FLAT HEAD SCREW-84
#6.5x1/2"




14 FLAT HEAD SCREW-36
#10x1-1/2"



15 Bolt M7x50mm-9




16 PAN HEAD BOLTS -14
5*22"x7/8"



17 WOOD
DOWELØ8x40mm - 4




18 SPARE-1



19 ROUND HEAD SCREW-10
#8*9x16"



20 ALLEN KEY -1






STEP 1

2 CAM SCREW A - 7




3 WOOD DOWEL Ø8x30mm - 2

1 HIDDEN CAM A - 3

19 ROUND HEAD SCREW - 4 #8*9x16"



12 SHACKLES A - 4

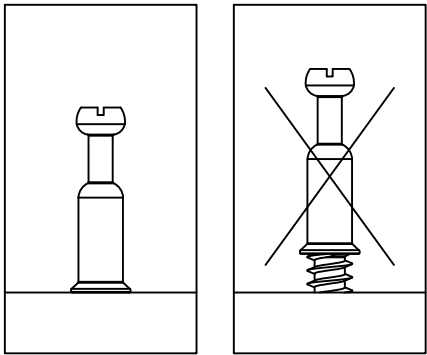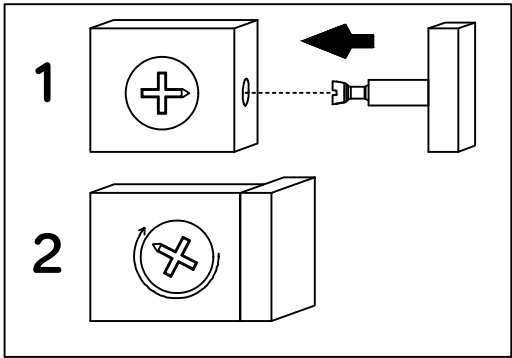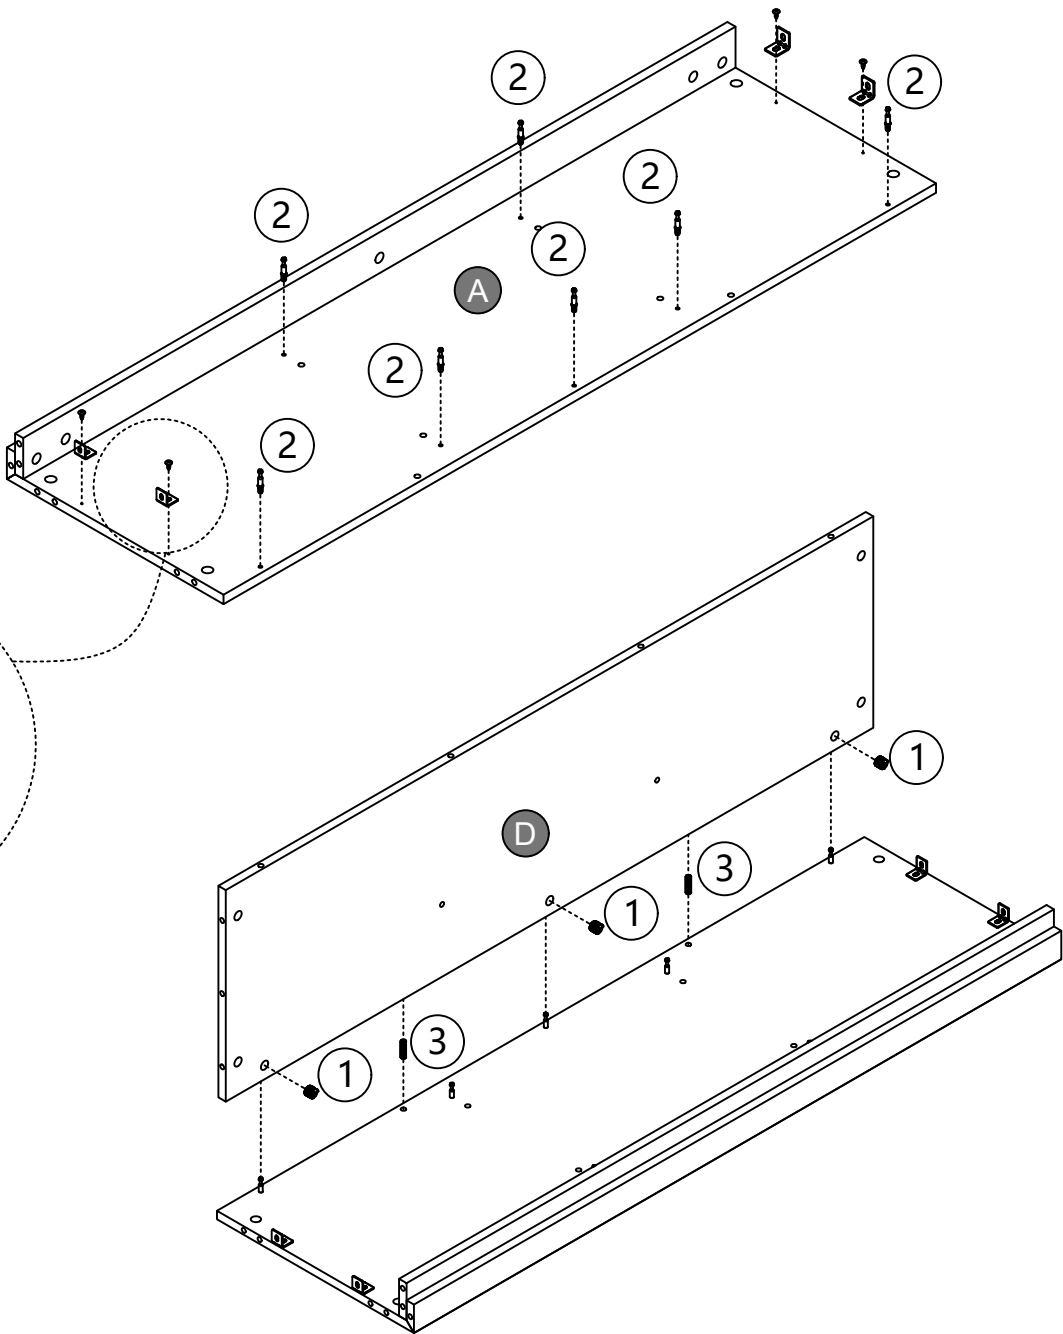

STEP 2


13 FLAT HEAD SCREW-6
#6.5x1/2"



L=12"
1x CABINET LEFT
(CL)



L=12"
1x CABINET RIGHT
(CR)

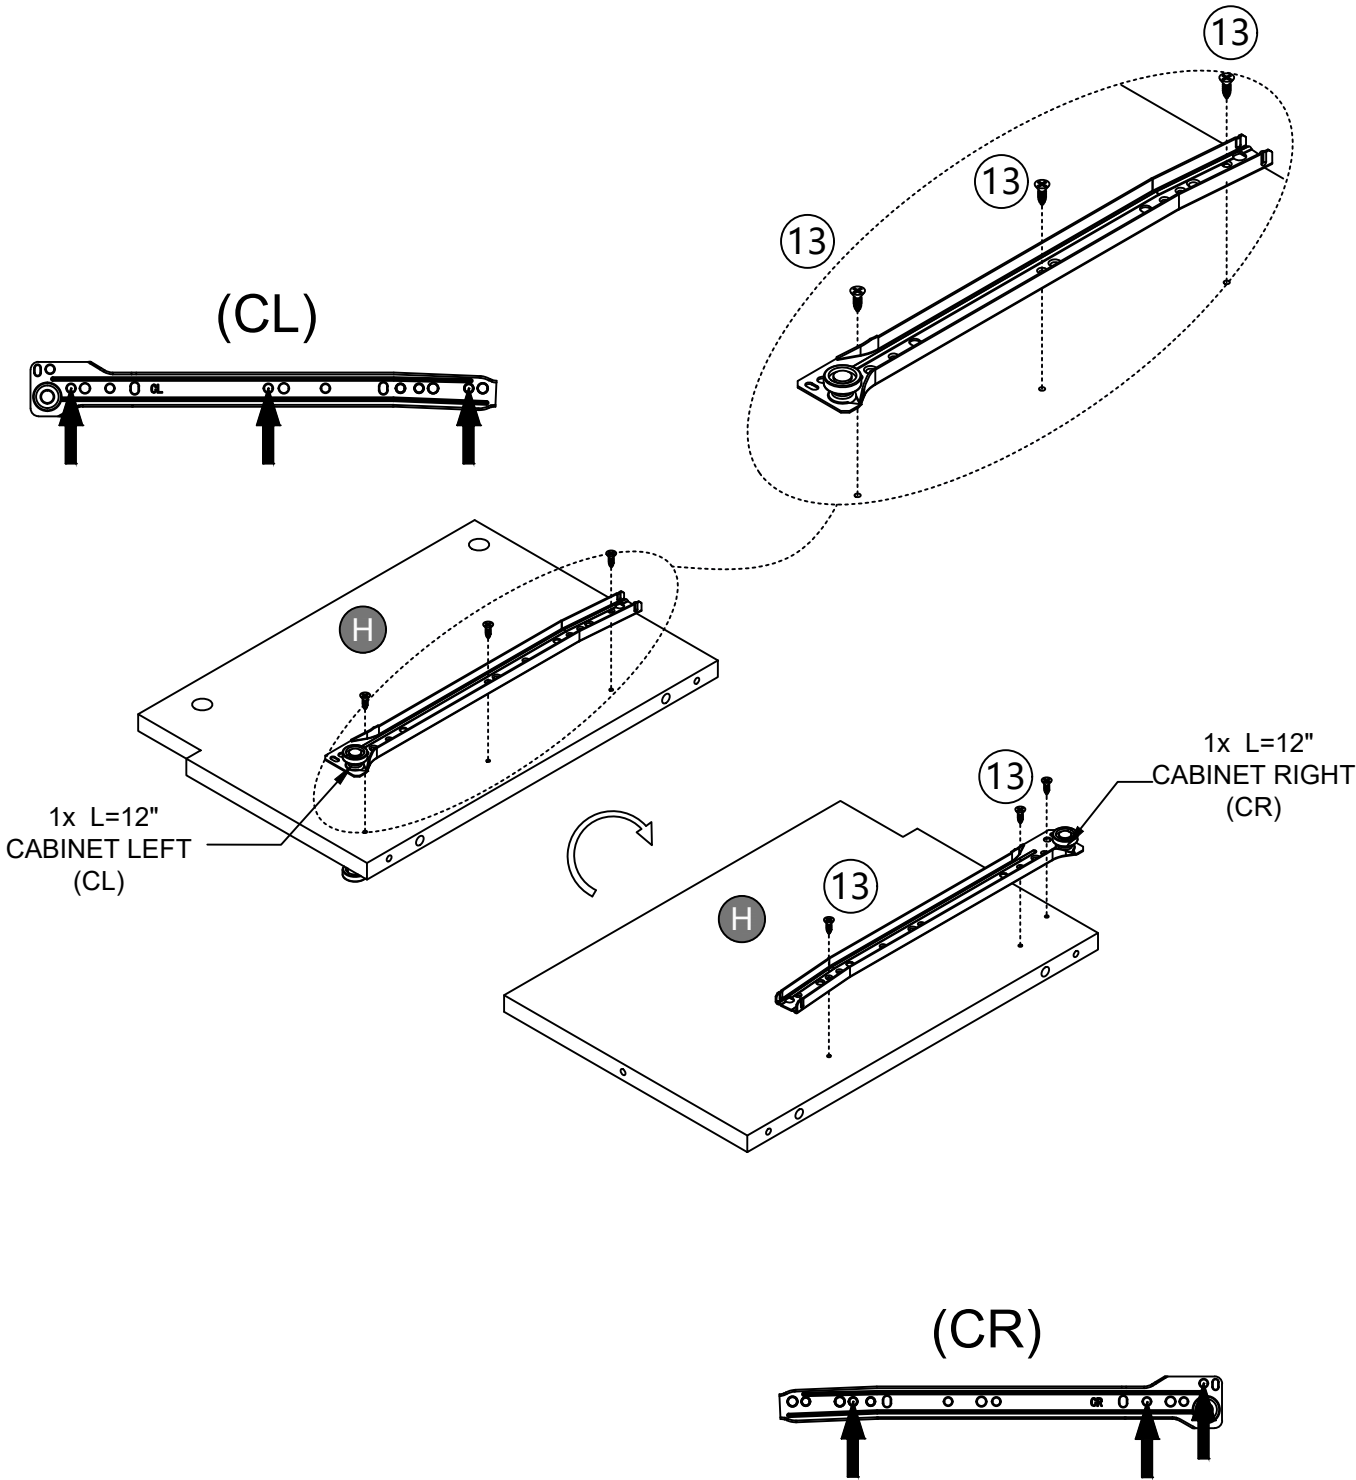

STEP 3




13 FLAT HEAD SCREW-6
#6.5x1/2"



L=12"
1x CABINET LEFT
(CL)



L=12"
1x CABINET RIGHT
(CR)

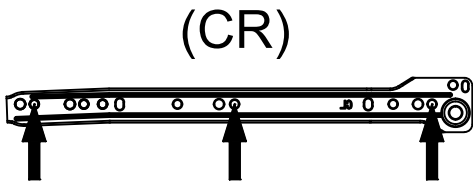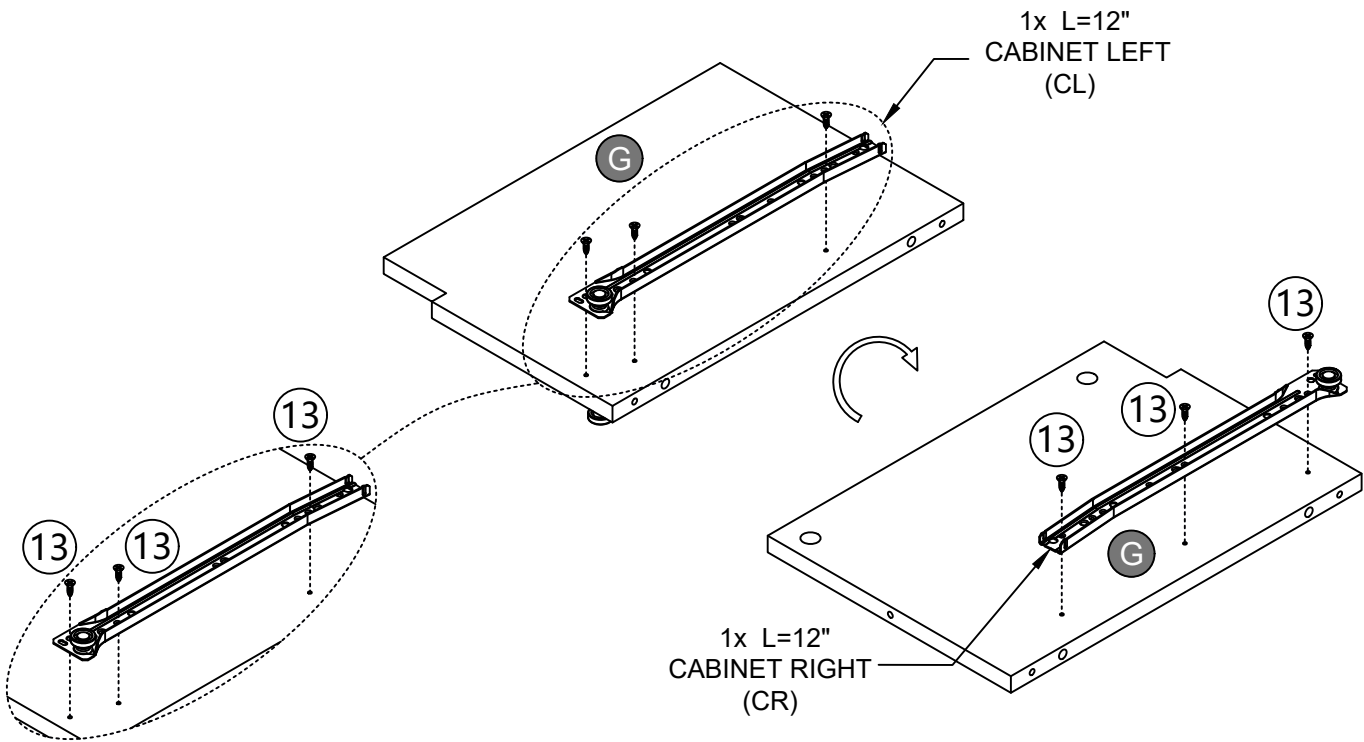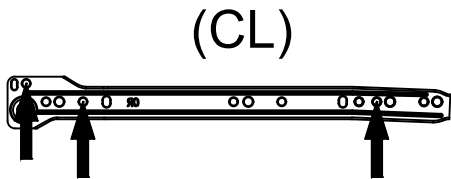


STEP 4





1 HIDDEN
CAM A - 4



2 CAM
SCREW A - 2



3 WOOD
DOWEL Ø8x30mm - 4

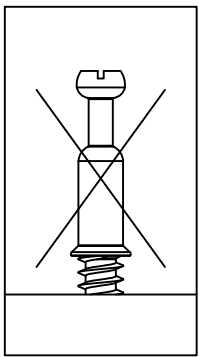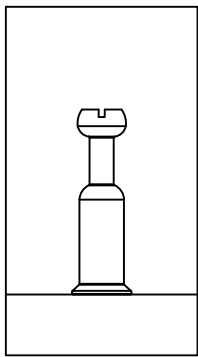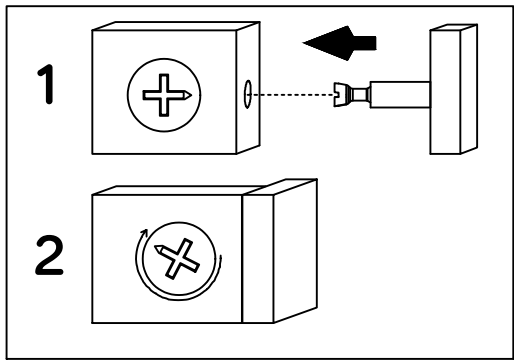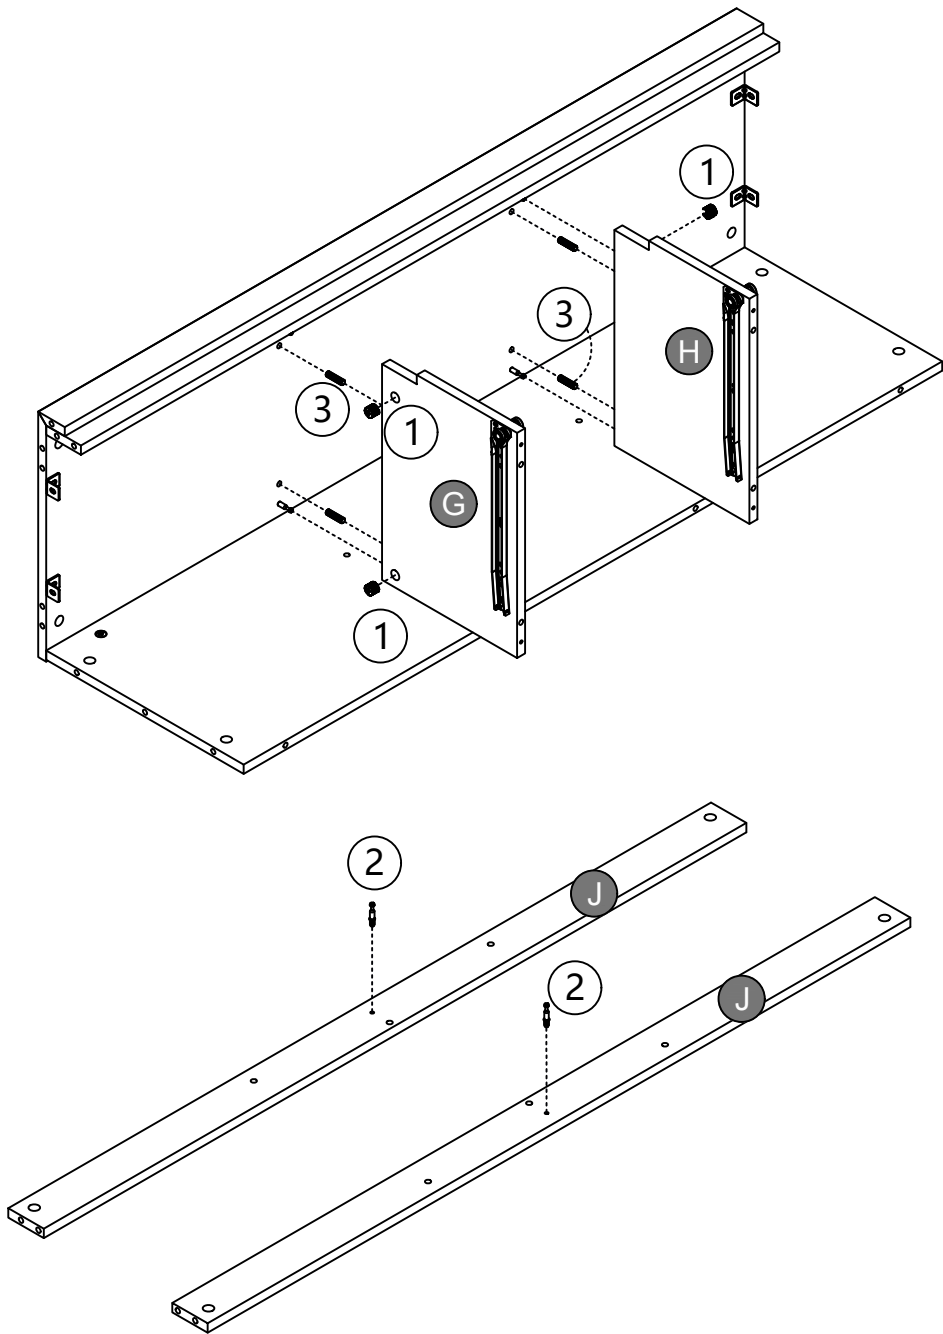

STEP 5

15 Bolt M7x50mm-4







3 WOOD
DOWELØ8x30mm - 4



17 WOOD
DOWELØ8x40mm - 4



20 ALLEN KEY -1

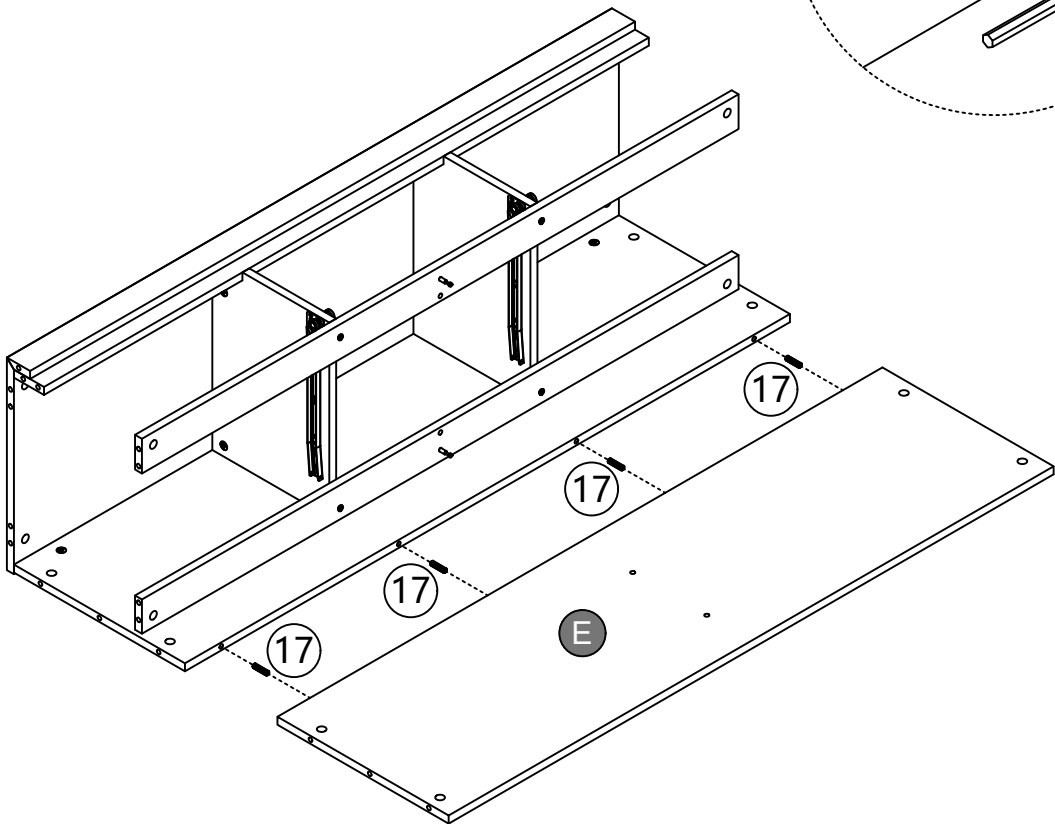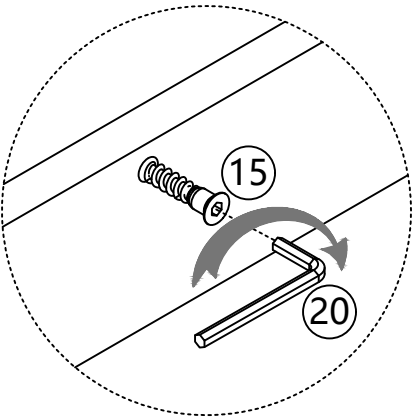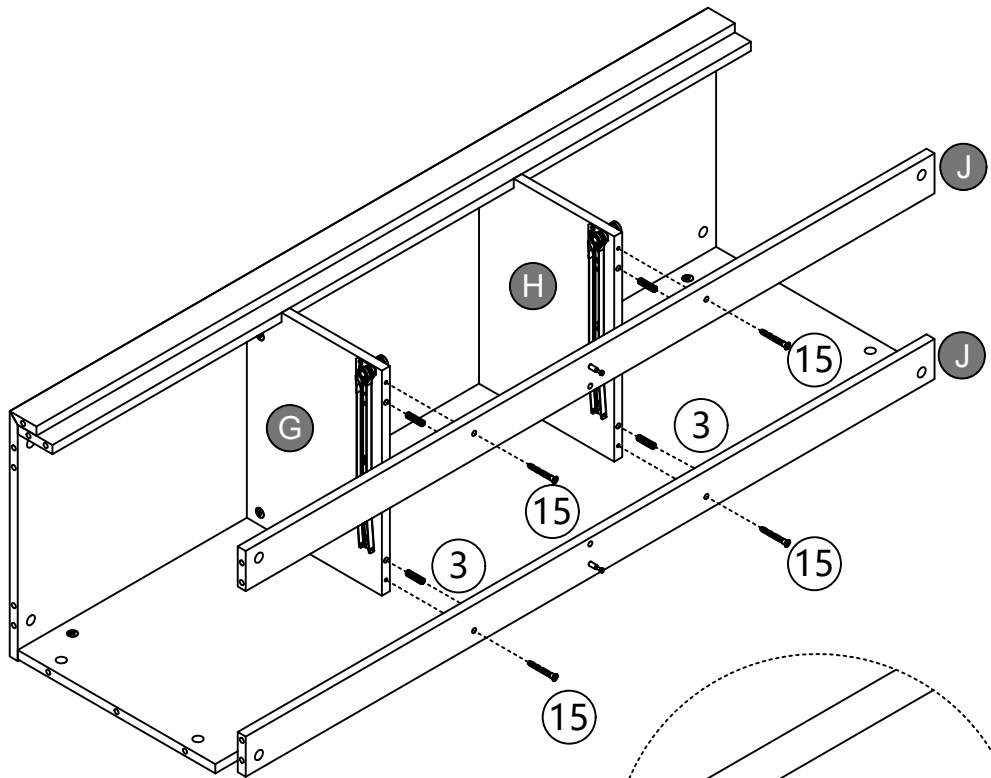

STEP 6

13 FLAT HEAD SCREW-12
#6.5x1/2"






L=12"
2x CABINET LEFT
(CL)




L=12"
2x CABINET RIGHT
(CR)

(CR)

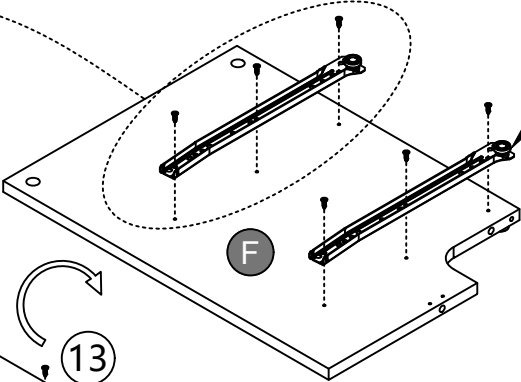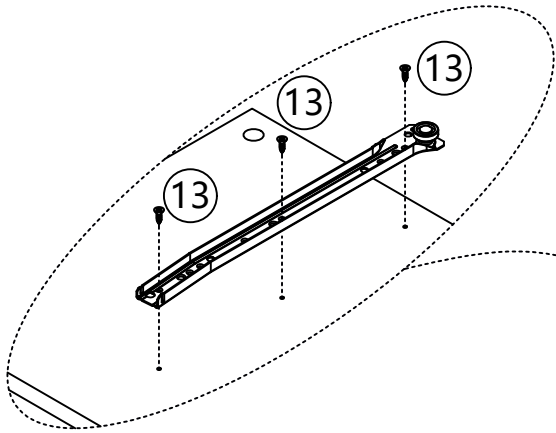


2x L=12"
CABINET RIGHT
(CR)

2x L=12"
CABINET LEFT
(CL)

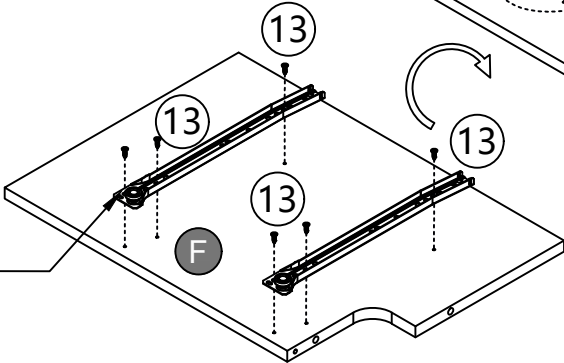

(CL)



STEP 7




- 3

WOOD
DOWELØ8x30mm - 3
- 1

HIDDEN
CAM A - 2
- 15

Bolt M7x50mm-1
- 20

ALLEN KEY -1

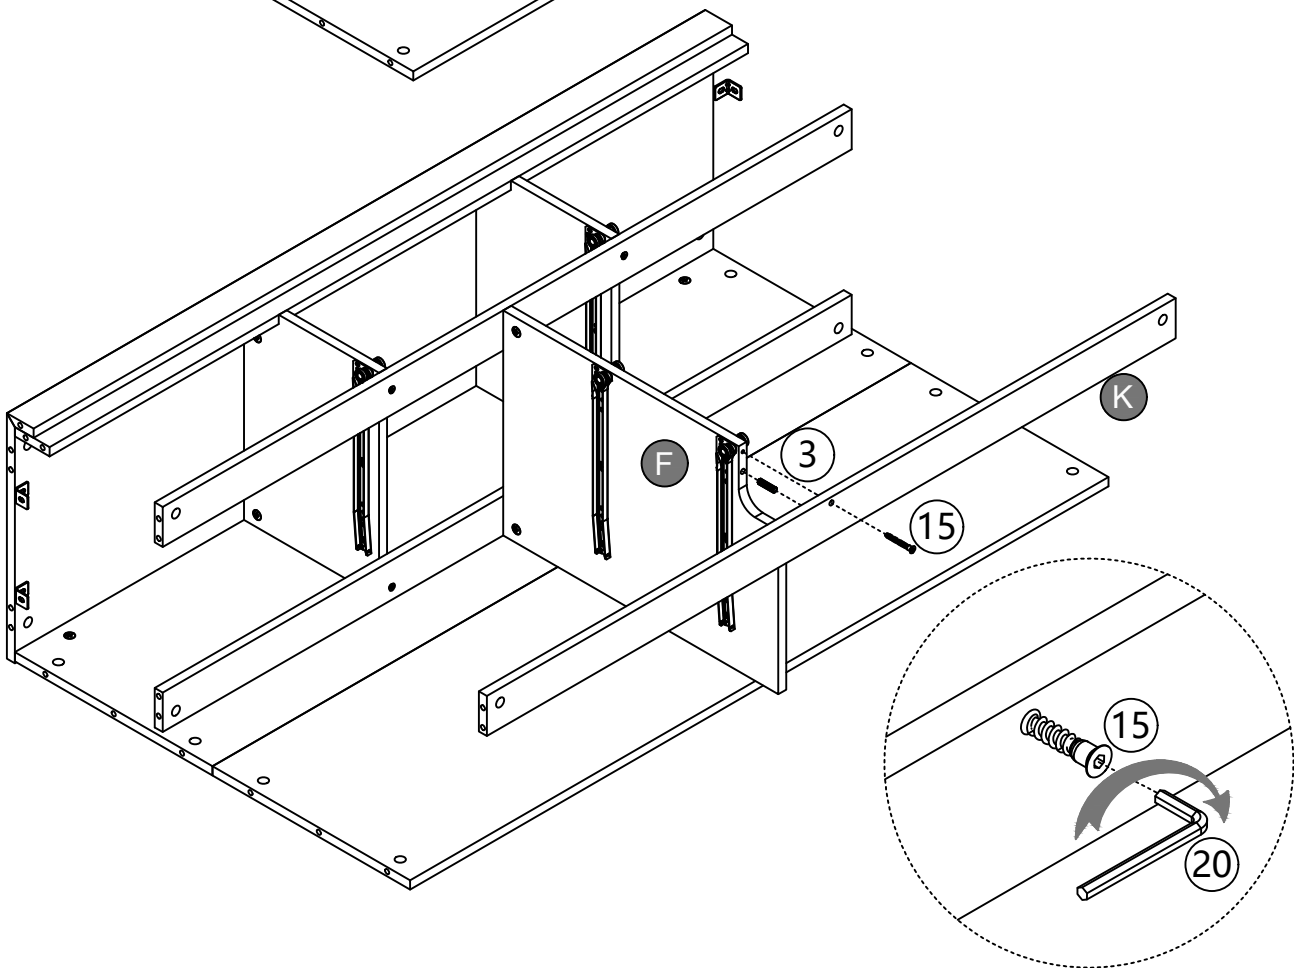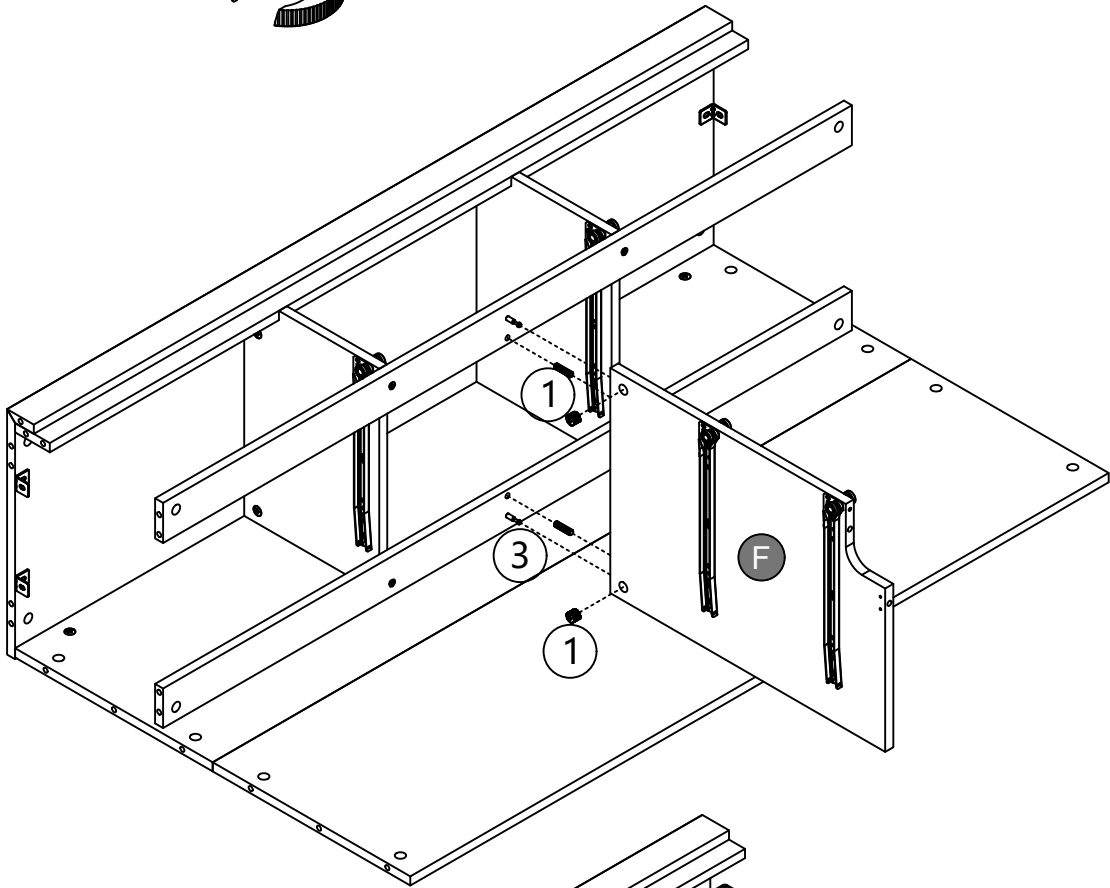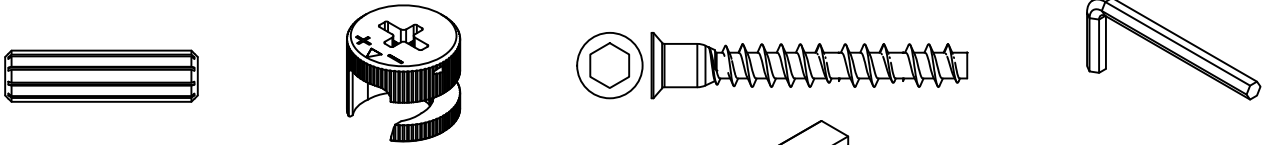






STEP 8

- 19

ROUND HEAD SCREW - 2
#8*9x16"
- 10


INDICES A - 1
- 11

SHACKLES A - 1

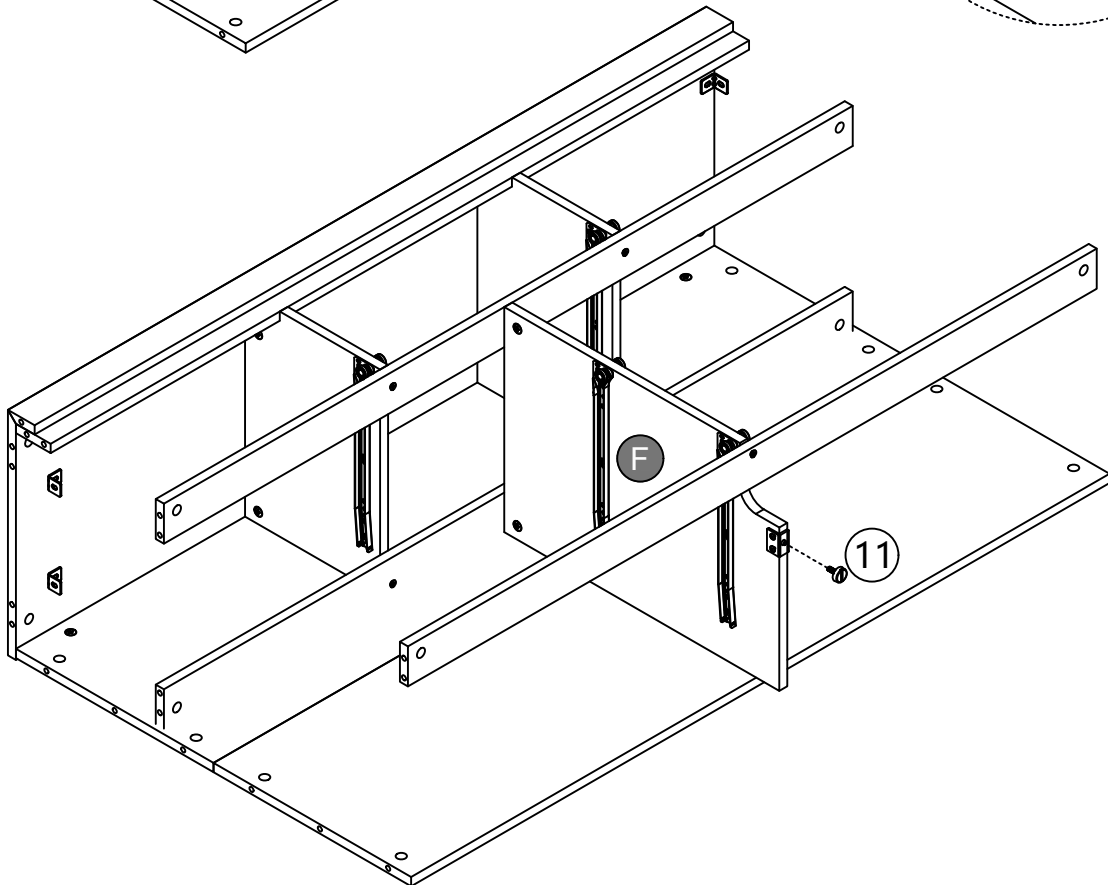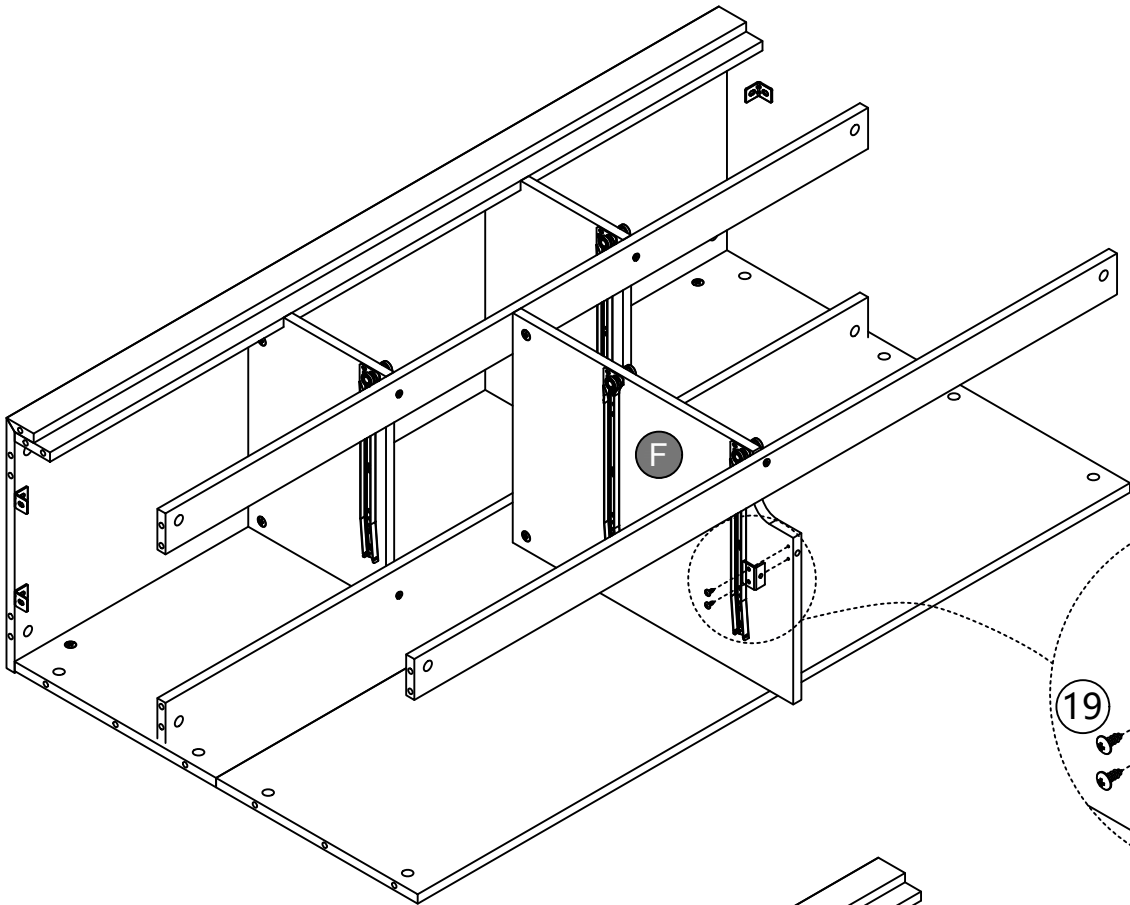

STEP 9

2 CAM
SCREW A - 10





13 FLAT HEAD SCREW-9
#6.5x1/2"



L=12"
3x CABINET LEFT
(CL)



9 SHACKLES A -1

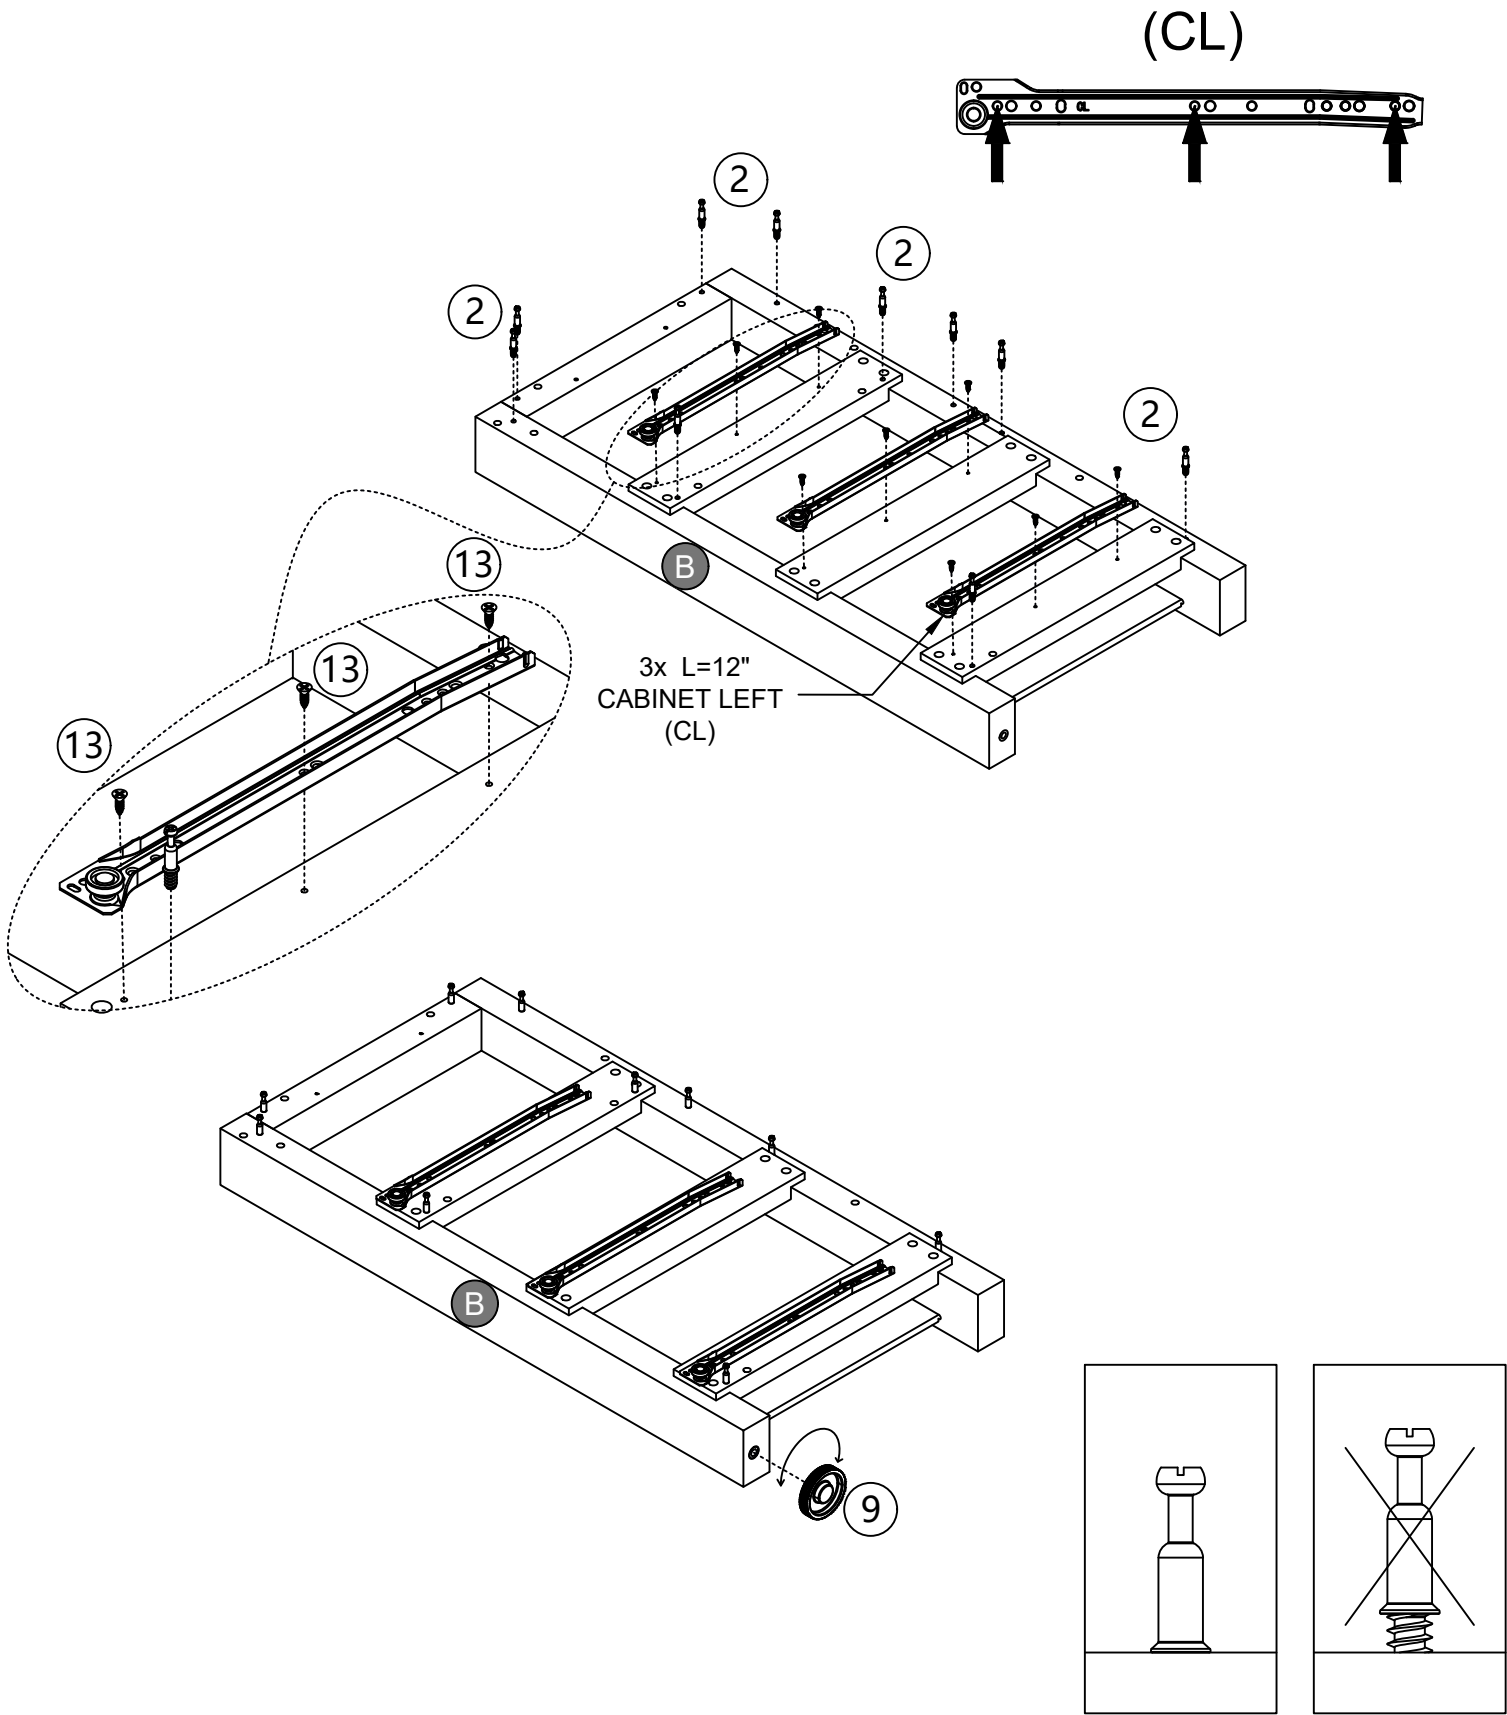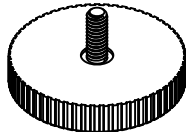

STEP 10


1 HIDDEN
CAM A - 10

3 WOOD
DOWEL Ø8x30mm -9

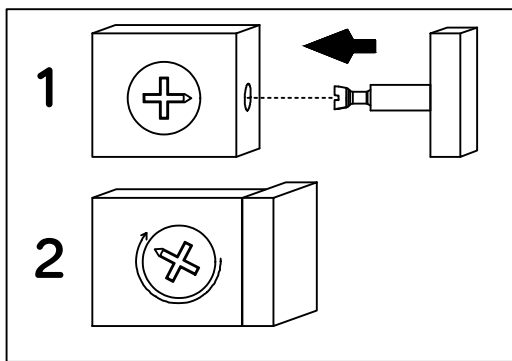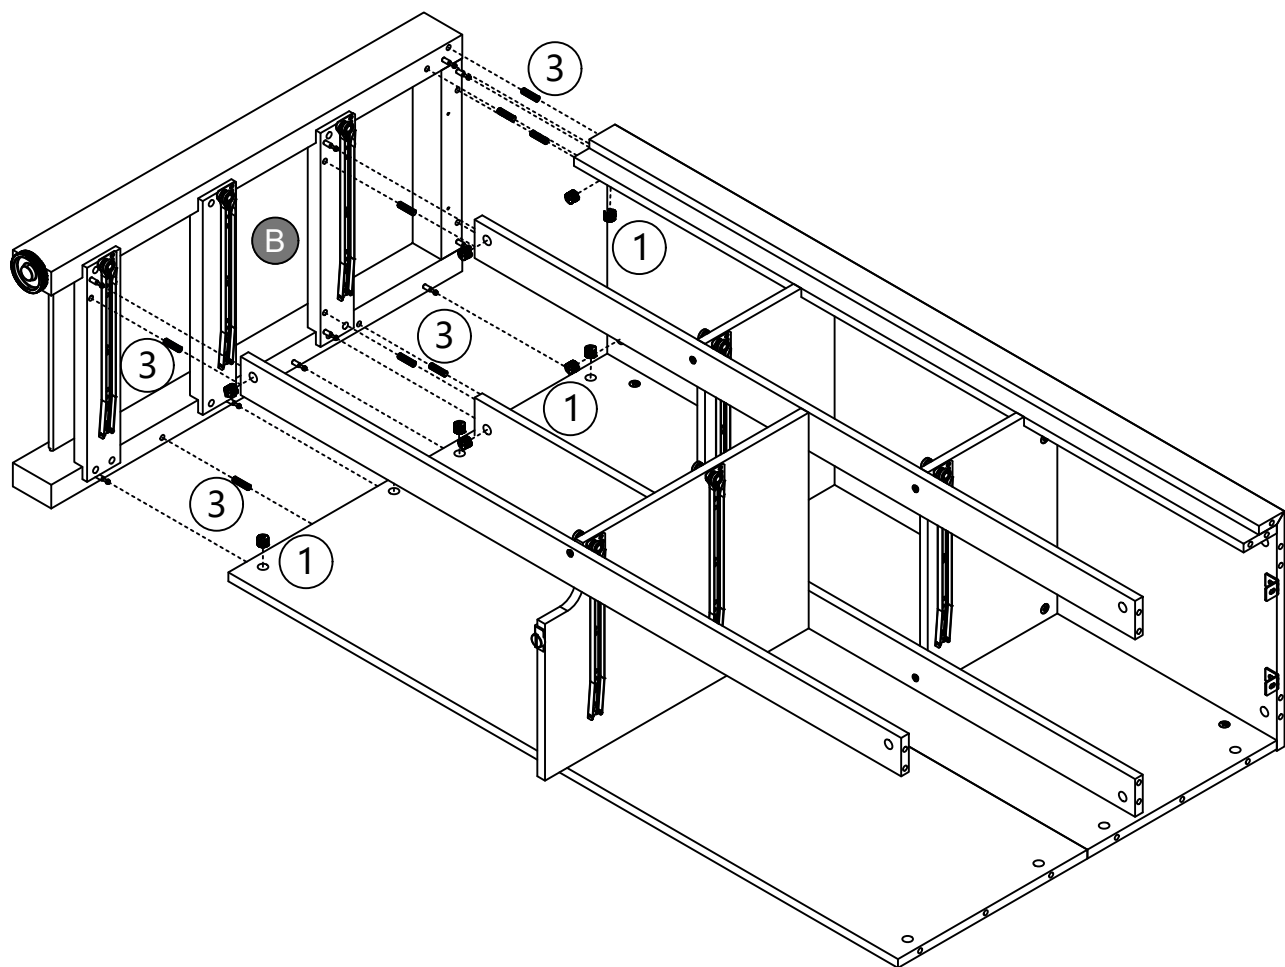

STEP 11

2 CAM
SCREW A - 10




13 FLAT HEAD SCREW-9
#6.5x1/2"




L=12"
3x CABINET RIGHT
(CR)




9 SHACKLES A -1

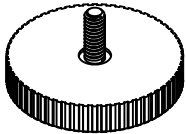

(CR)





3x L=12"
CABINET RIGHT
(CR)

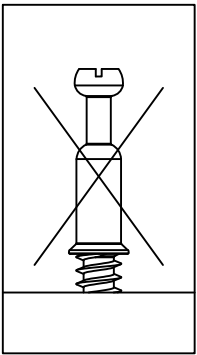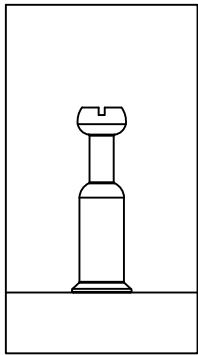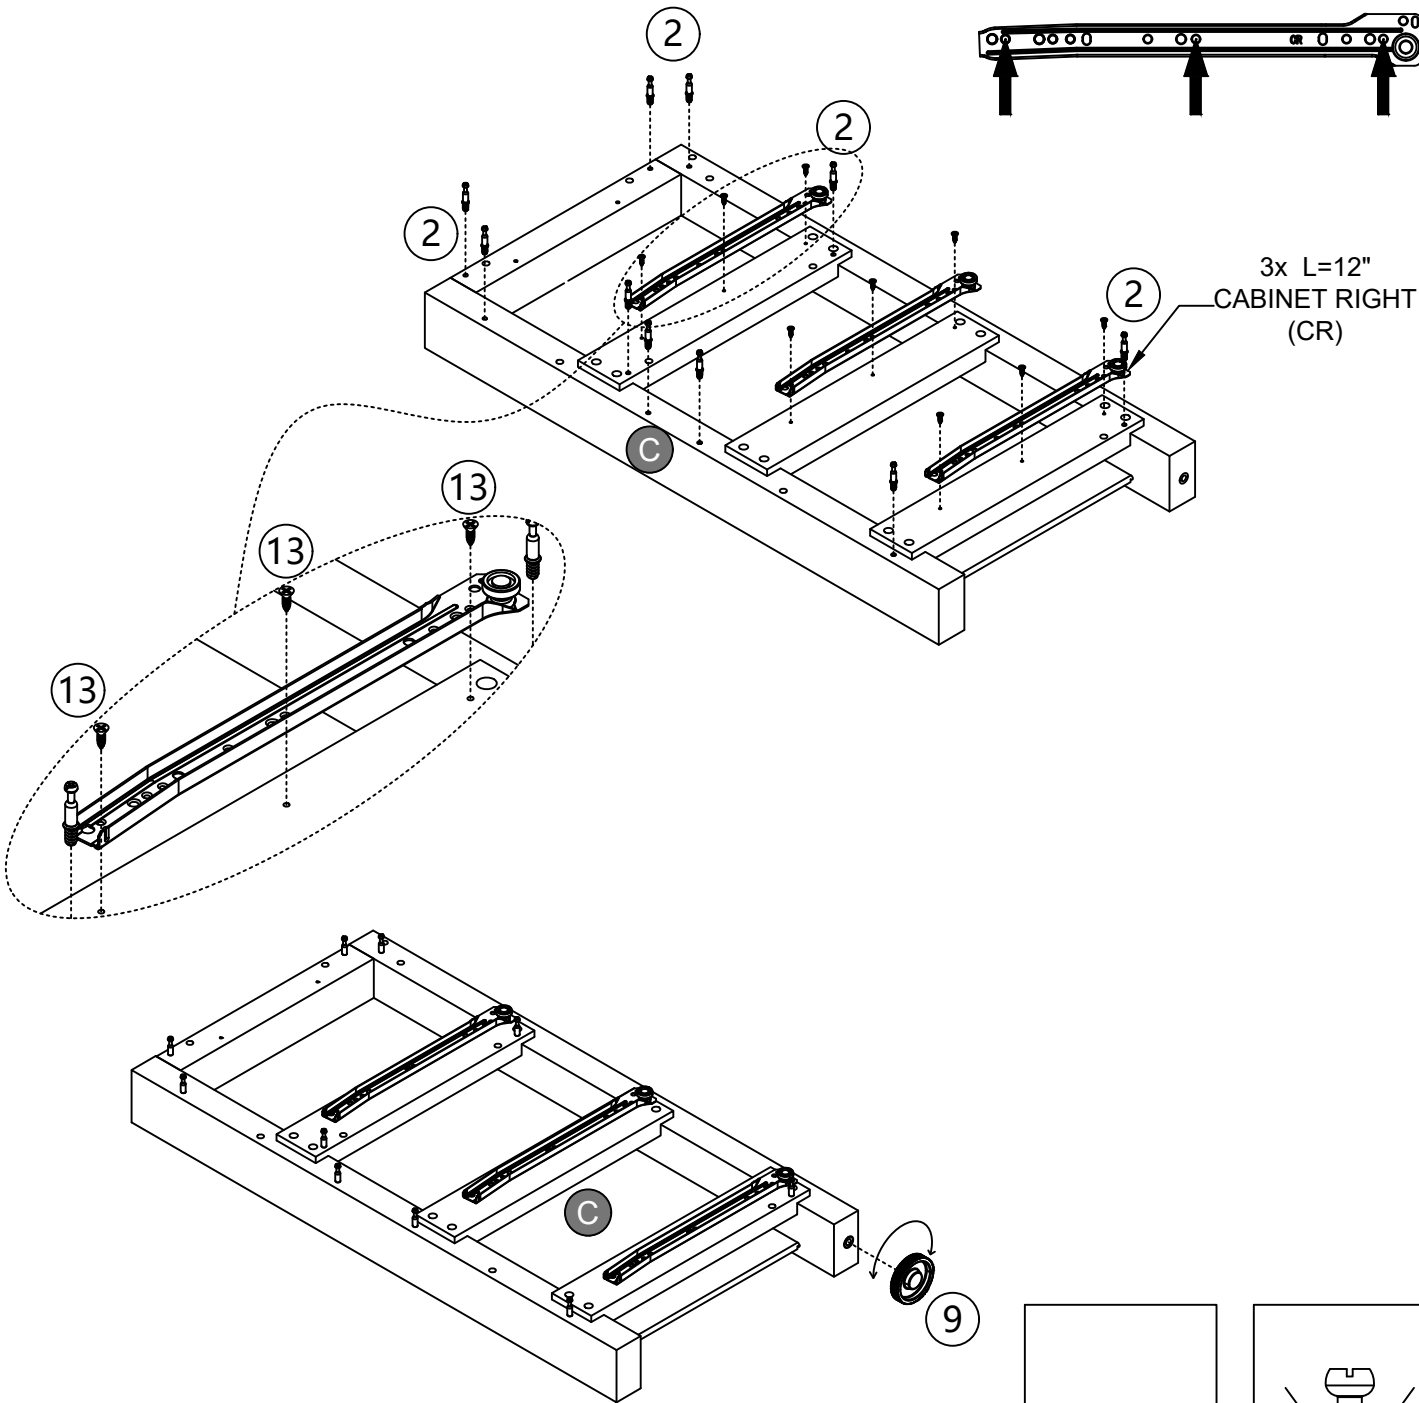

STEP 12



1 HIDDEN
CAM A - 10

3 WOOD
DOWEL Ø8x30mm -9

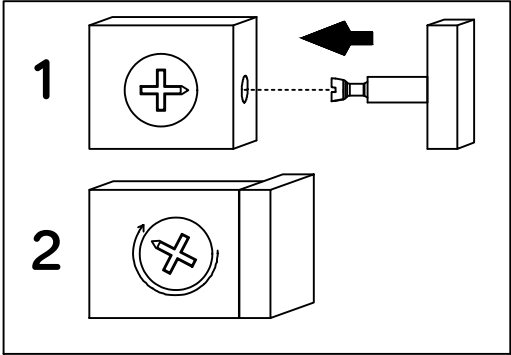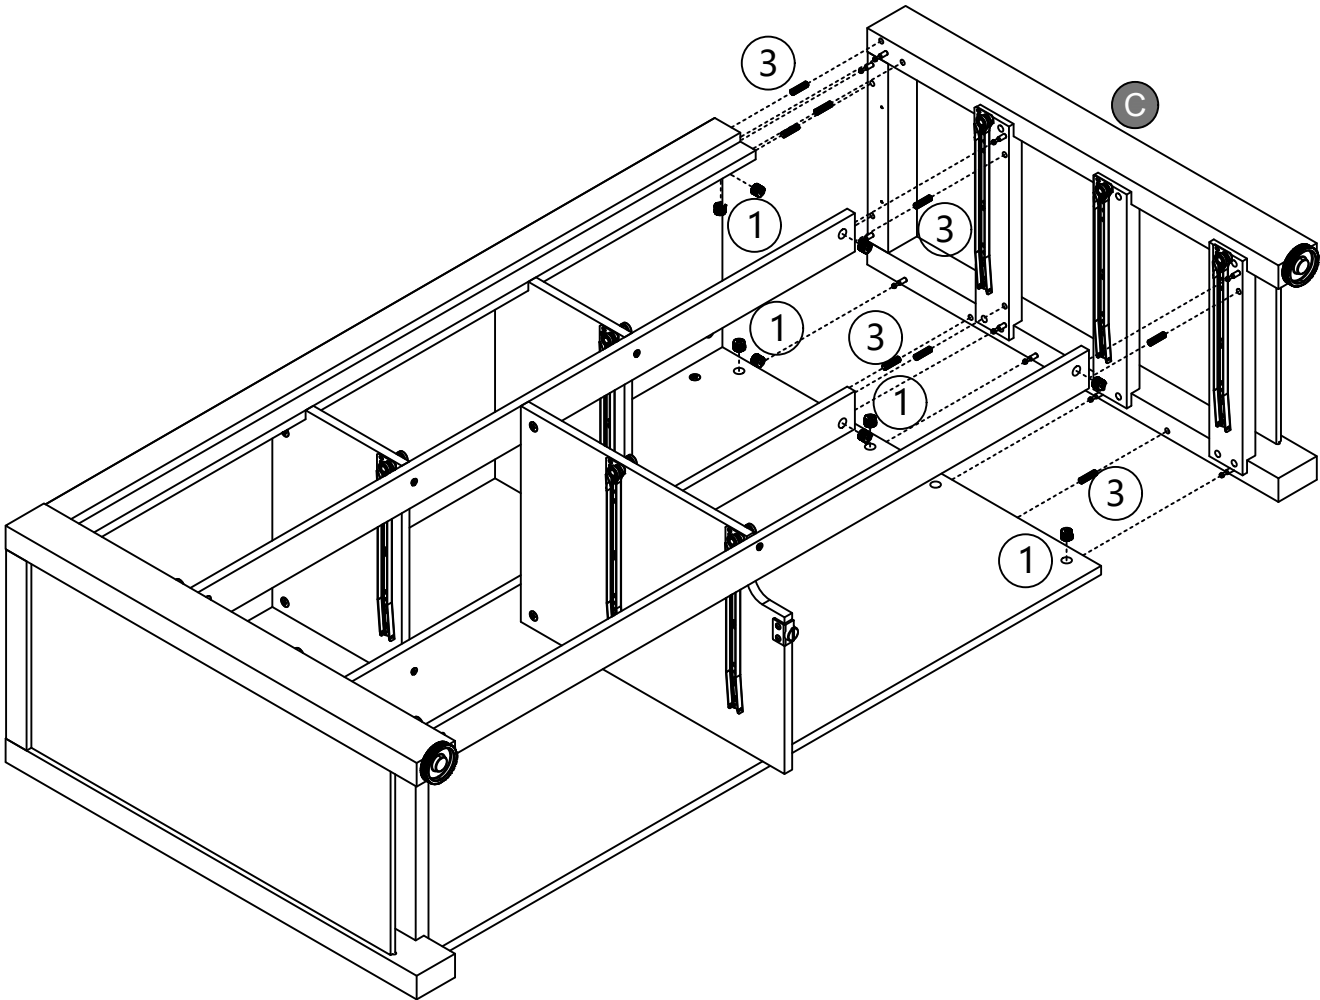

STEP 13

19 ROUND HEAD SCREW - 4
#8*9x16"

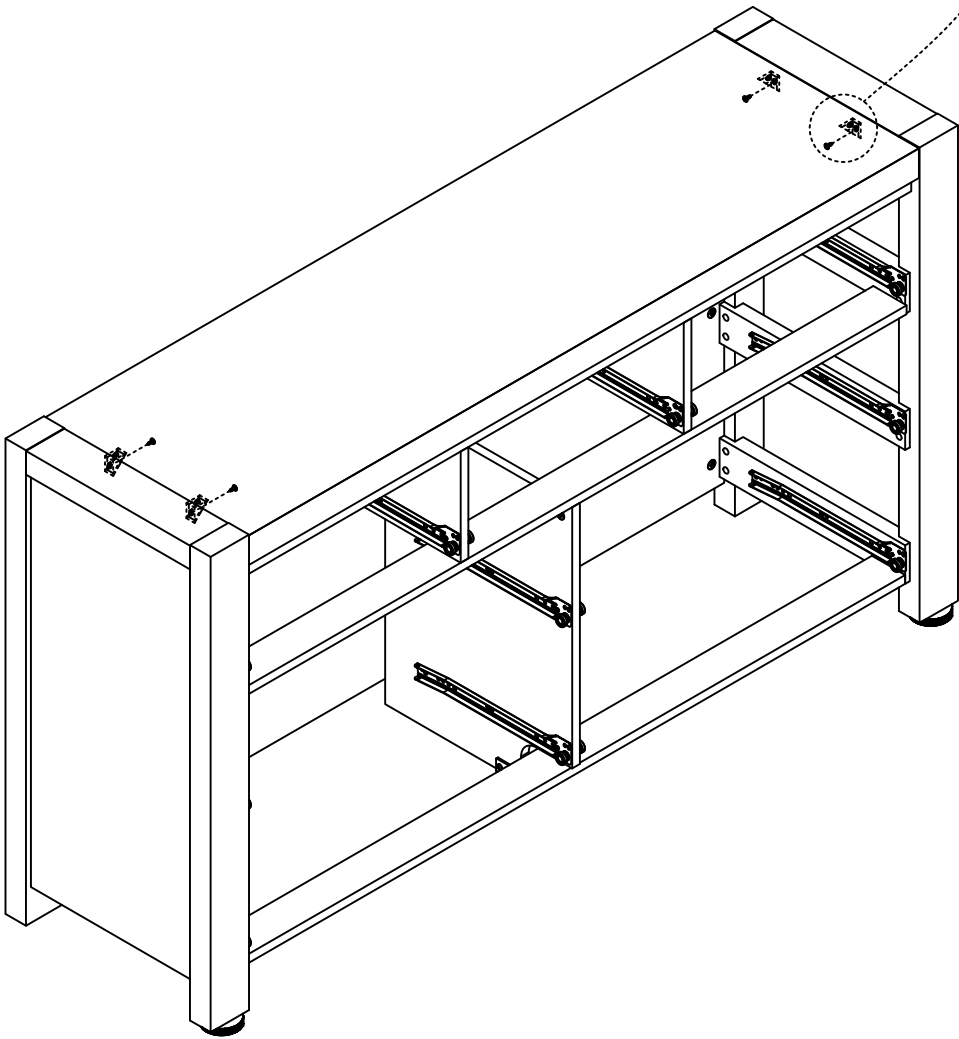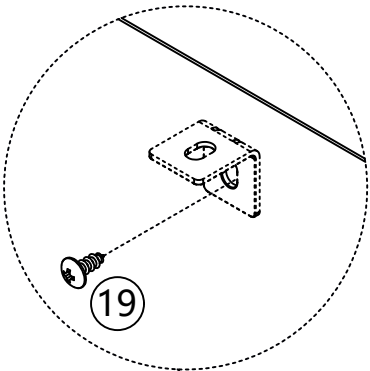

STEP 14




⑥ ANTI TIPPING
HARDWARE -2



⑮ Bolt M7x50mm-4








⑳ ALLEN KEY -1

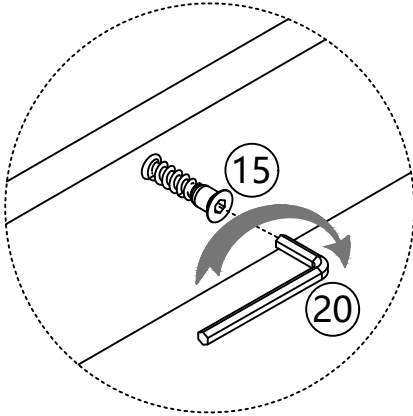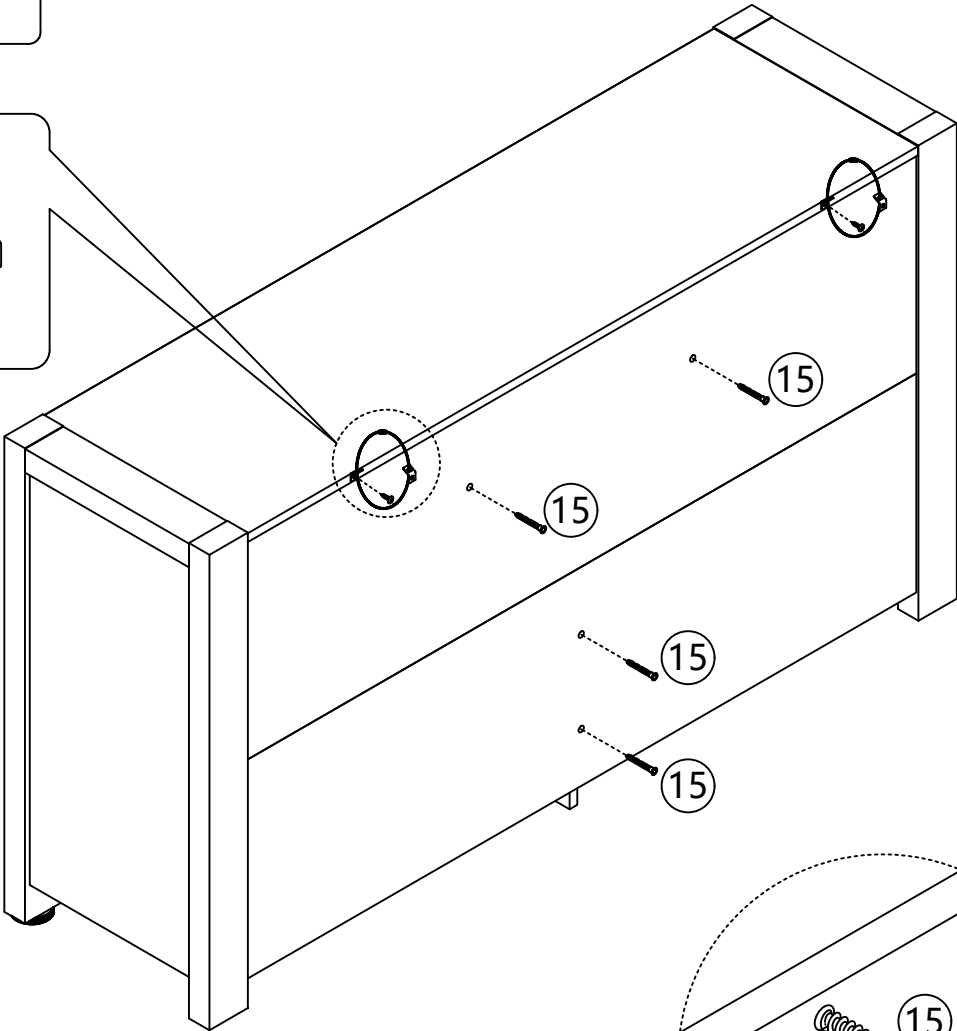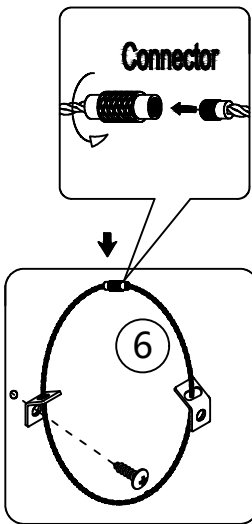

STEP 15




5 CAM
SCREW A -24

4 HIDDEN
CAM A -24

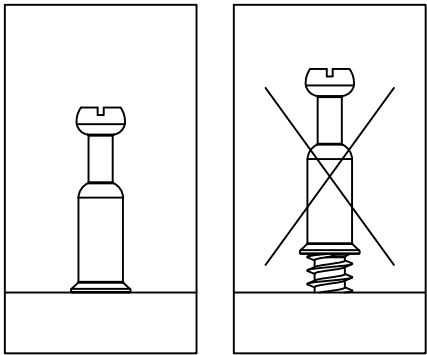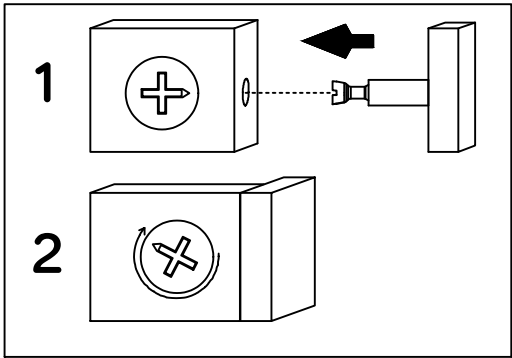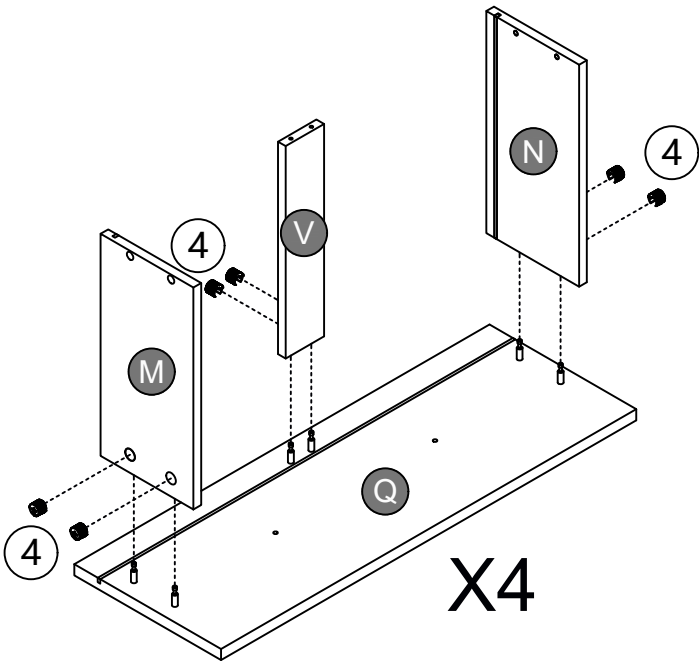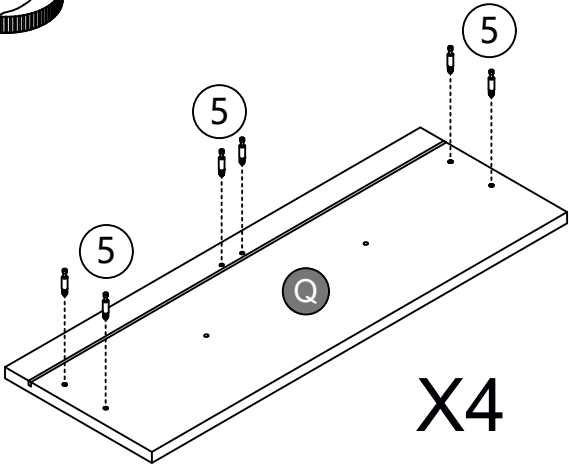


STEP 16


14 FLAT HEAD SCREW-24
#10x1-1/2"

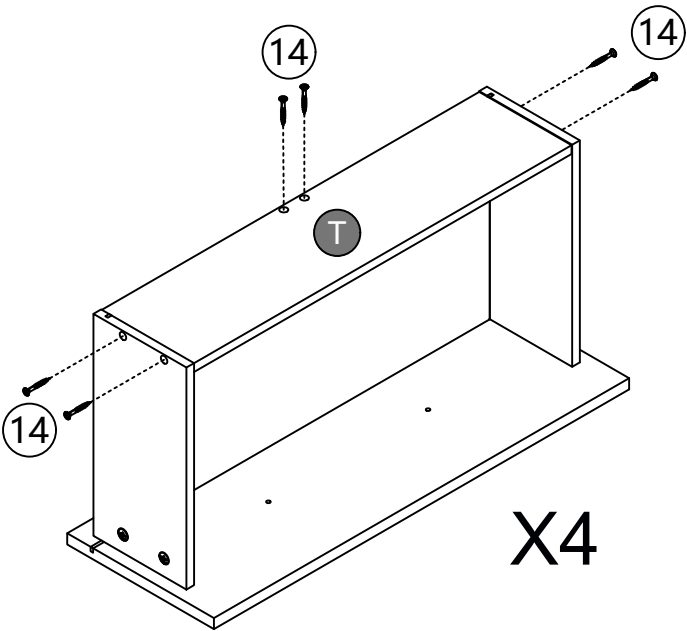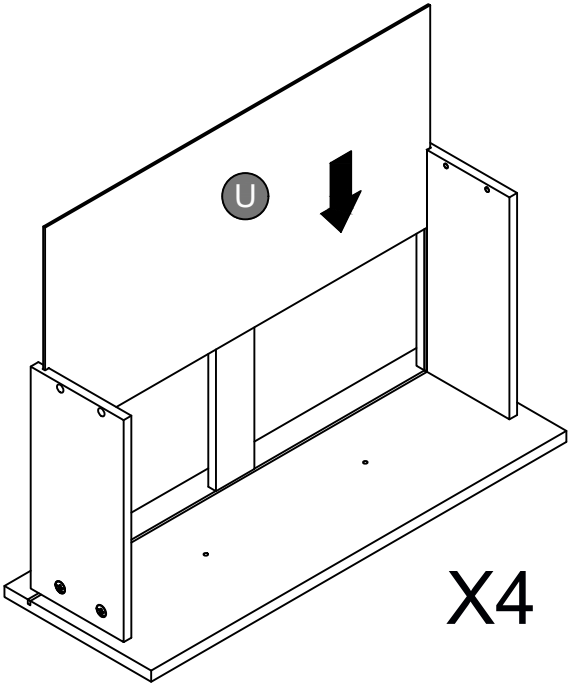

STEP 17



L=12"
4x DRAWER RIGHT
(DR)



L=12"
4x DRAWER LEFT
(DL)

13 FLAT HEAD SCREW-24
#6.5x1/2"




16 PAN HEAD BOLTS - 8
5*32"x7/8"


7 SHAKE
HANDS -4




(DL)



4x L=12"
DRAWER LEFT
(DL)


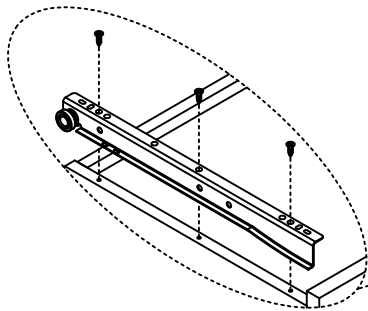


4x L=12"
DRAWER RIGHT
(DR)

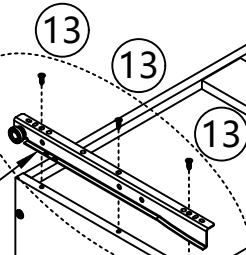

X4

(DR)




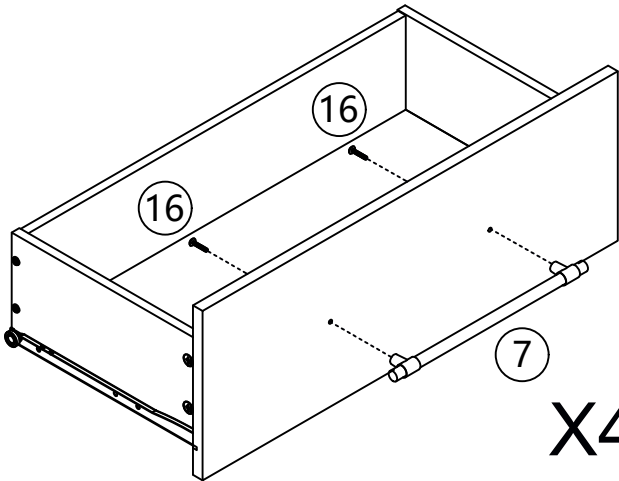



X4

STEP 18




5 CAM
SCREW A -12

4 HIDDEN
CAM A -12

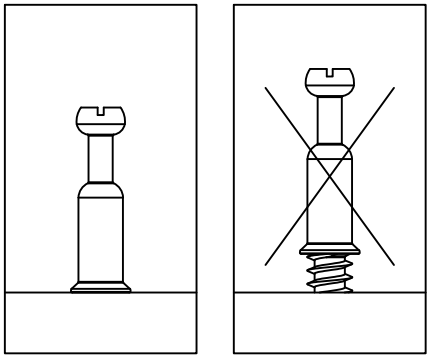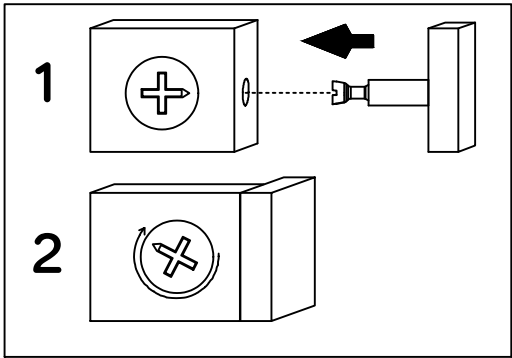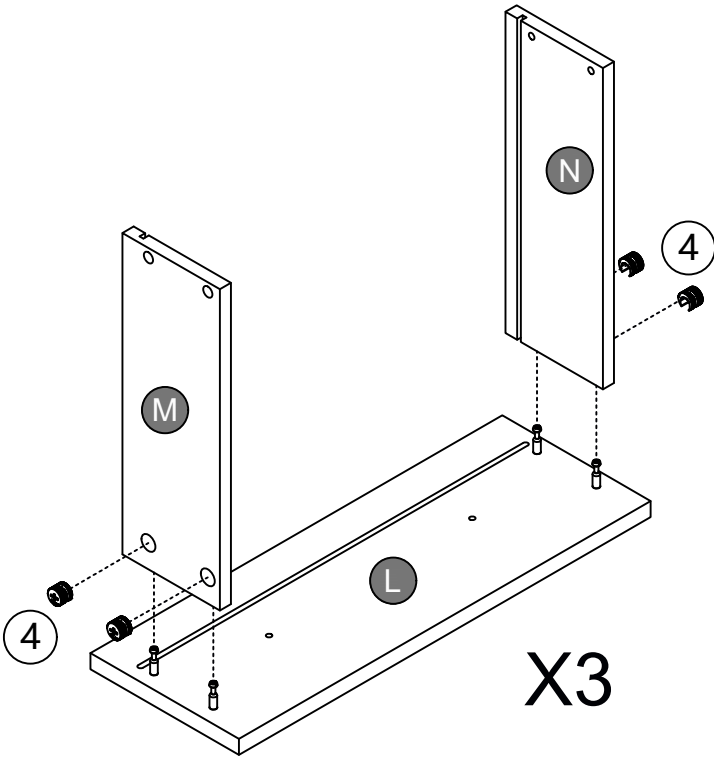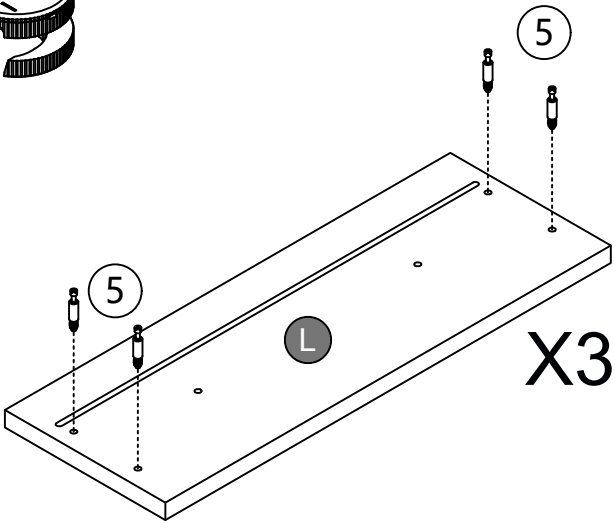


STEP 19


14 FLAT HEAD SCREW-12
#10x1-1/2"

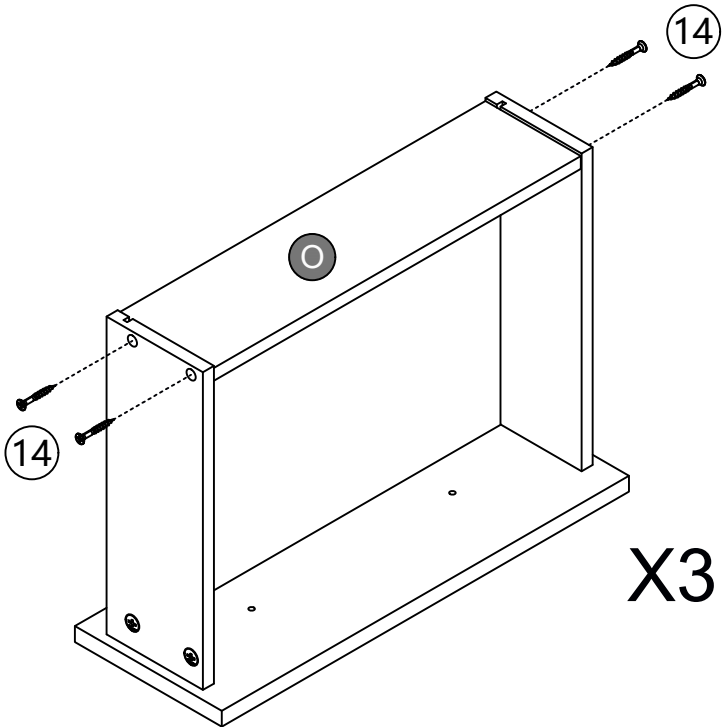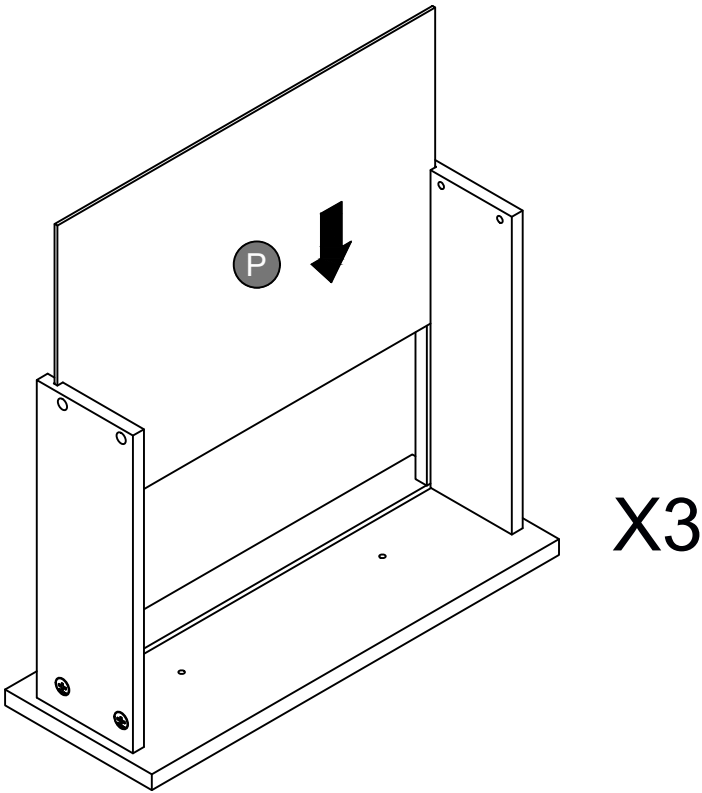

STEP 20



L=12"
3x DRAWER RIGHT
(DR)




L=12"
3x DRAWER LEFT
(DL)

13 FLAT HEAD SCREW-18
#6.5x1/2"





16 PAN HEAD BOLTS - 6
5*22"x7/8"

8 SHAKE
HANDS -3





(DL)

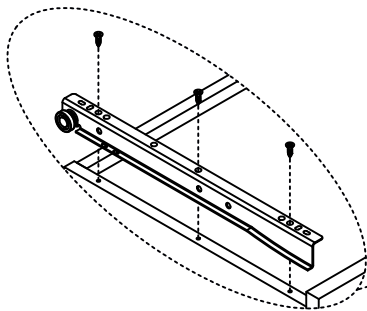


3x L=12"
DRAWER RIGHT
(DR)

(DR)

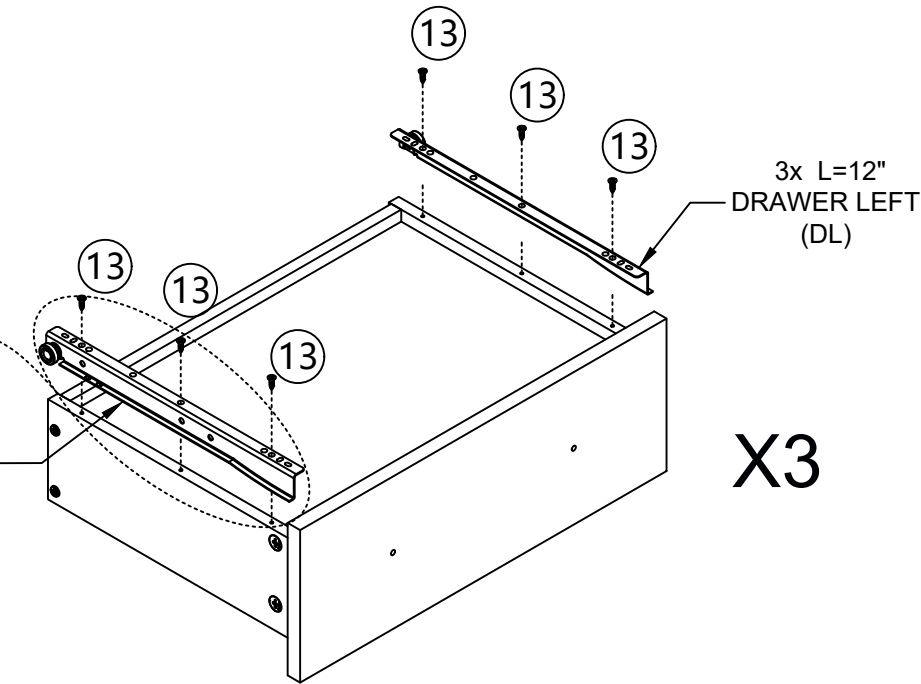

3x L=12"
DRAWER LEFT
(DL)



X3

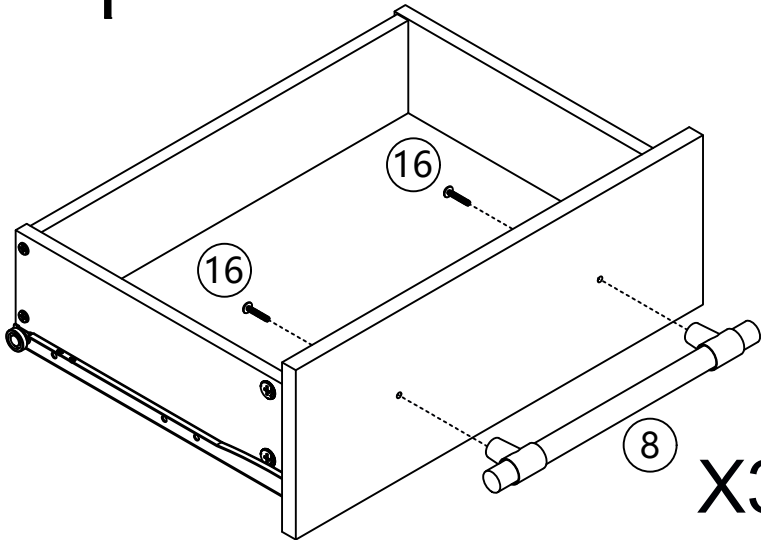

8



X3

STEP 21

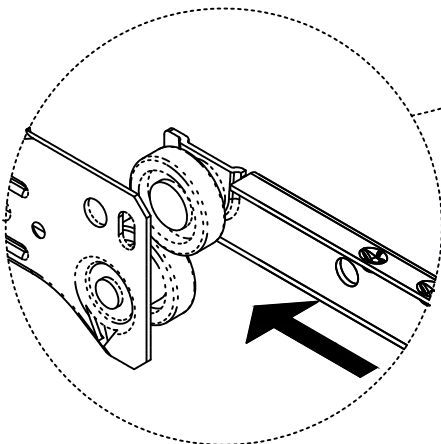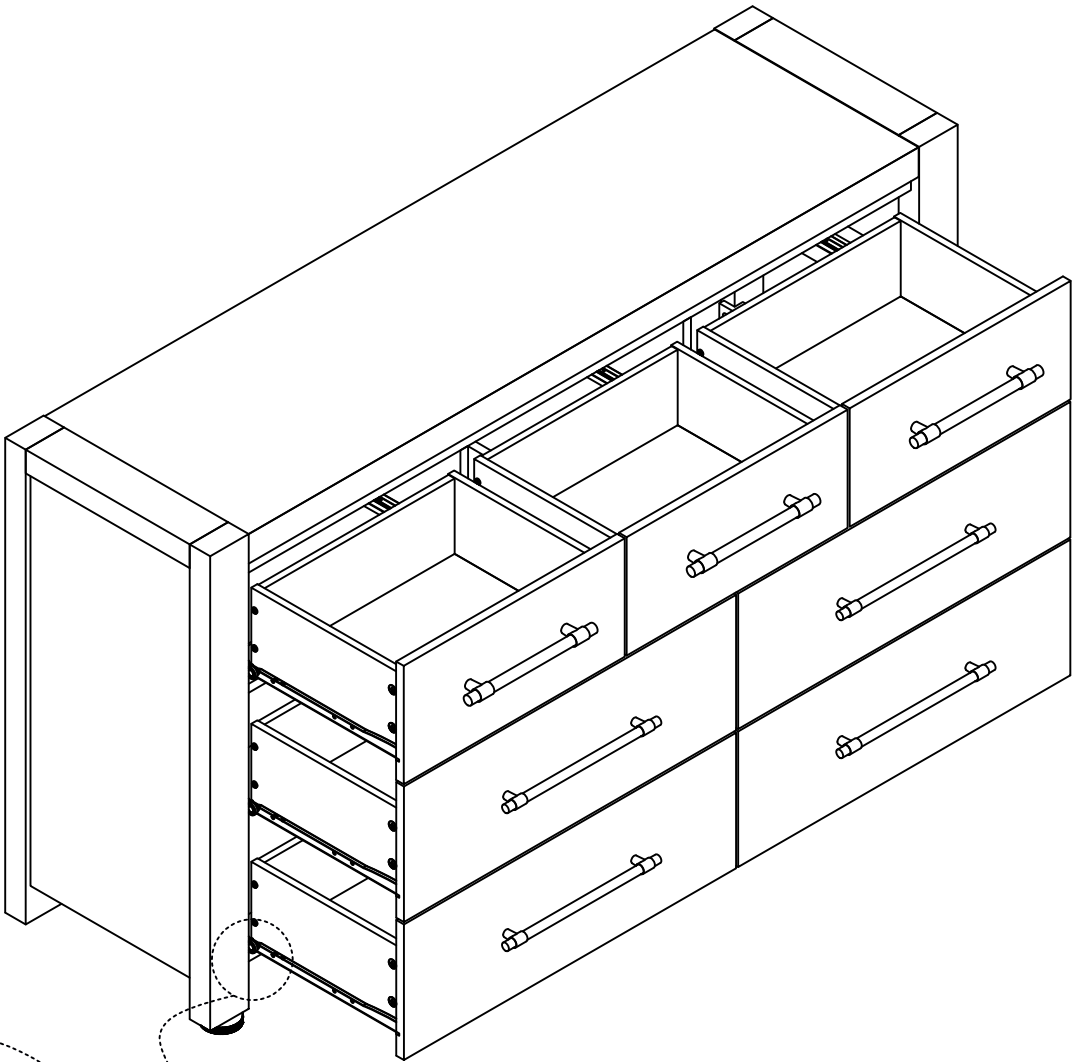


STEP 22


6 ANTI TIPPING
HARDWARE -2

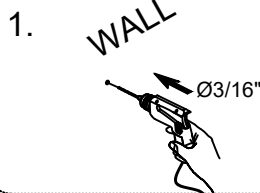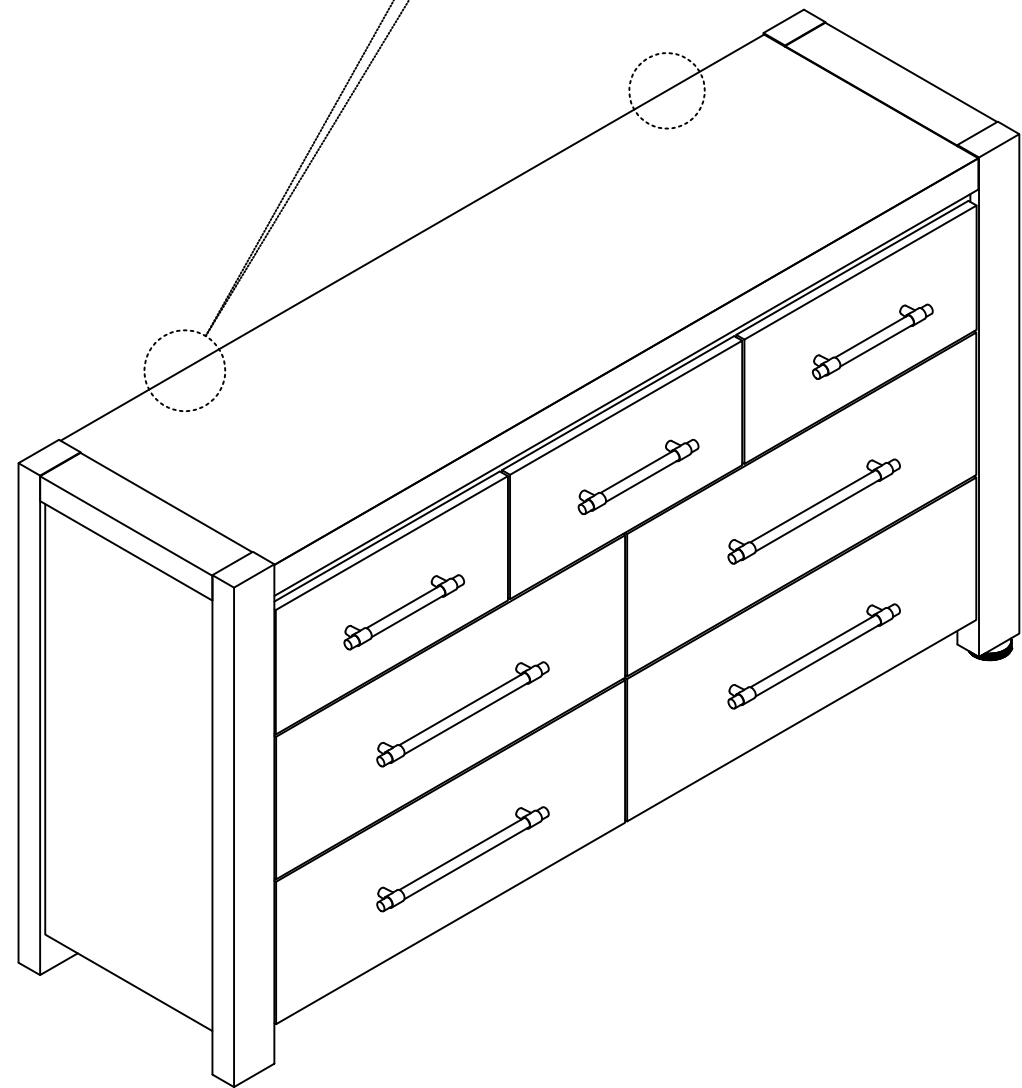

1. Mark the position on the wall, and use an electric drill to make the hole.

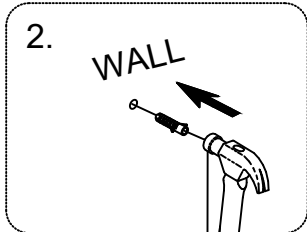

2.The corresponding hole position on the wall, the anchor ,is hammered in.

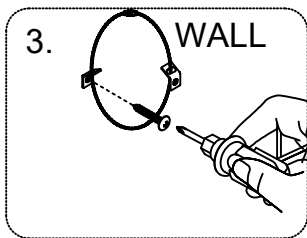

3.The alignment of the Anti tipping hardware with the hole of the anchor(10) is tightened with a screwdriver using screw .