

Quality statement

We appreciate your selection of our product. Through our detailed quality checks, we ensure that each box contains exceptional components that will exceed your expectations.

Customer Service

If your order has missing parts or defective items or if you have any questions, please do not hesitate to contact our customer service department

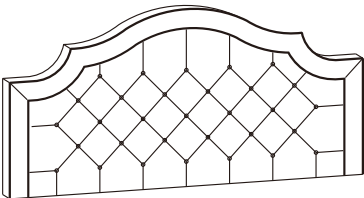
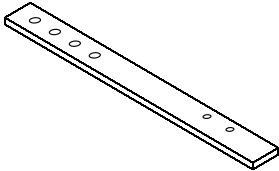
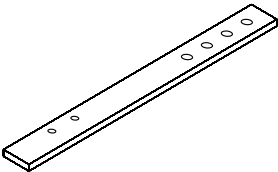
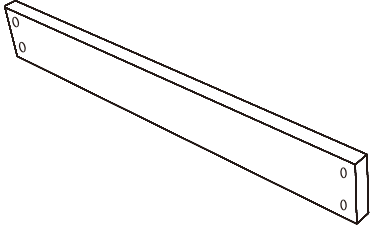
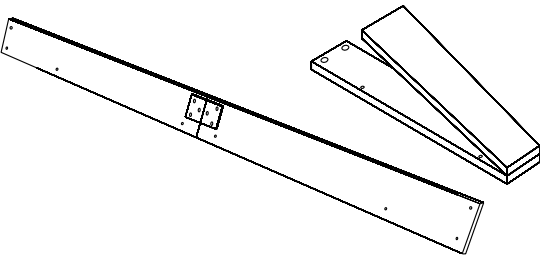
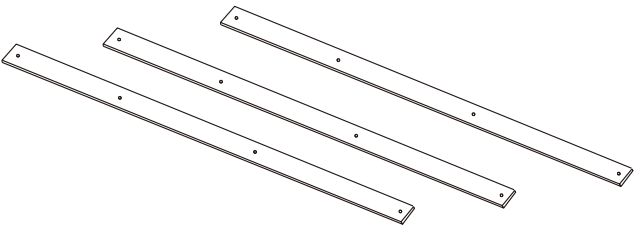
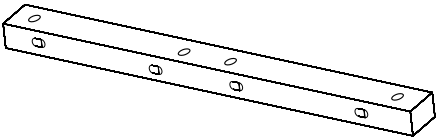
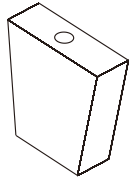
Care Instructions

Please follow the instructions provided below for proper care of your product. Following these tips will ensure your furniture's high-standard quality remains as it ages

- Vacuum regularly to eliminate dust as they can be abrasive and wear the furniture prematurely
- Never use harsh chemicals or solvents as this may damage the finish
- Limit contact with liquids as this may damage the finish
- Bolt spills immediately to prevent staining. If necessary, gently wipe using a clean cloth dampened with warm water. Proceed to brush lightly after drying
- If you choose to use a professional product, test the fabric in a discreet area for any signs of defect
- Stains from markers, pens, crayons, and pens may be difficult to remove. We recommend that you consult a professional





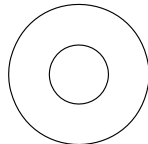

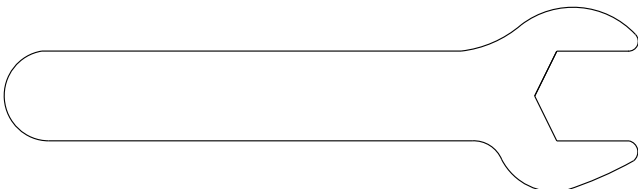
PARTS LIST

PLEASE CHECK TO ENSURE ALL PARTS ARE IN THE BOX

A	1PC	L	1PC
Headboard Panel		Left Leg	
			
R	1PC	D	1PC
Right Leg		Footboard	
			
E	2PCS	G	3PCS
Side Rails		Wooden Slats	
			
H	2PCS	J	2PCS
Iron Tubes		Footboard Legs	
			




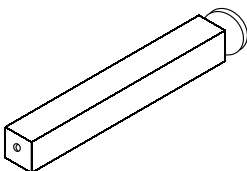
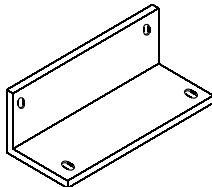
HARDWARE LIST

PLEASE CHECK TO ENSURE ALL PARTS ARE IN THE BOX

①	12PCS	②	16PCS	③	12PCS
1/4"x1-3/4" Allen Bolts		5/16"x1" Allen Bolts		5/16"x2-1/8" Allen Bolts	
					
④	2PCS	⑤	36PCS		
1/4"x3" Allen Bolts		Flat Washers			
					
⑥	22PCS	⑦	1PC		
Spring Washers		Wrench			
					

HARDWARE LIST

PLEASE CHECK TO ENSURE ALL PARTS ARE IN THE BOX

⑧	6PCS	⑨	1PC
Nuts 5/16		Allen Wrench 1/4	
			
⑩		1PC	
Allen Wrench 5/16			
			
⑪	6PCS	⑫	4PCS
Support Feet		L-metal Plates	
			

IMPORTANT!!

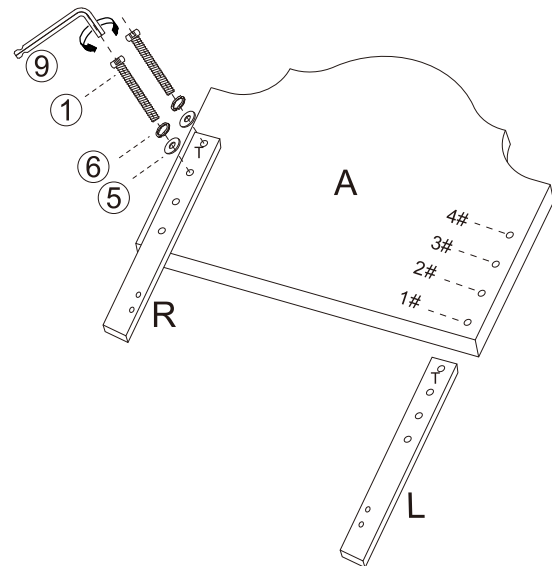
To assemble the full unit straight, please do not tighten the individual screw completely, only tighten the screws halfway through before positioning other screws. After all the screws are in position, secure the screws tight and completely.

Tips:

**Please check the thickness of your mattress and box spring before proceeding.

1)

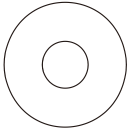



Assemble the Legs (L & R) and Headboard (A).



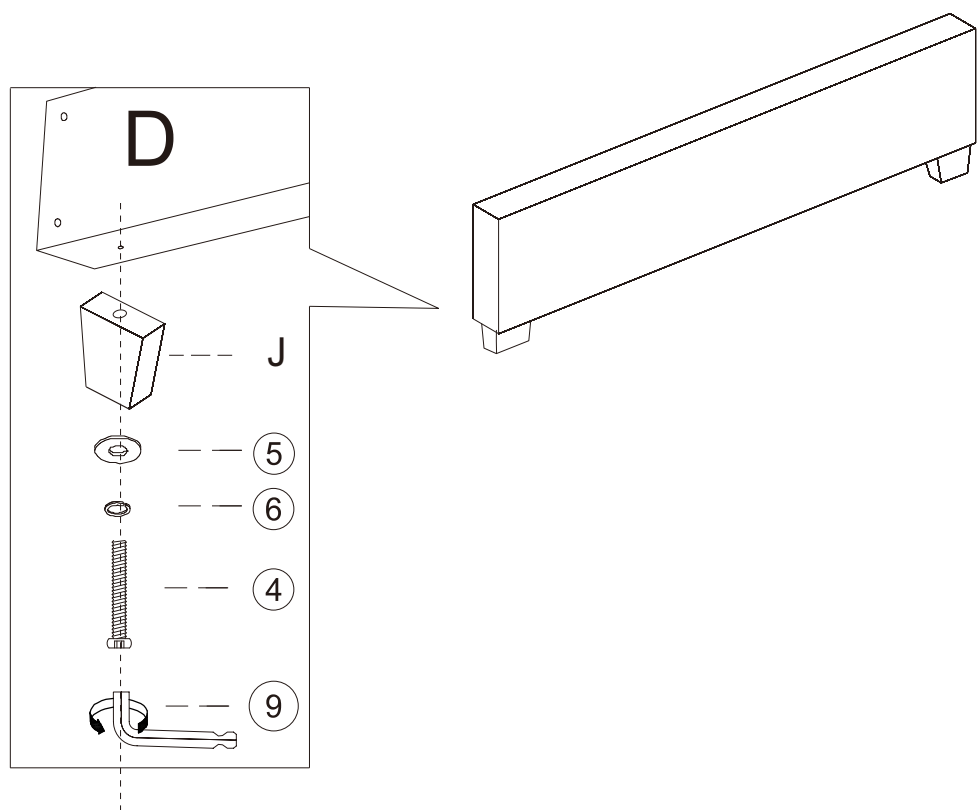
IMPORTANT!

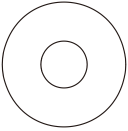


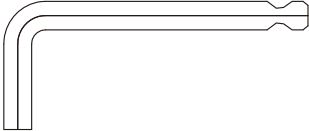
Please check the thickness of your mattress and box spring before proceeding.

Box Spring + Mattress	Adjustable Headboard Height
Under 10"	T match 4#
10"~14"	T match 3#
14"~18"	T match 2#
18"	T match 1#

⑤	4PCS	⑥	4PCS
Flat Washers		Spring Washers	
			
①	4PCS	⑨	1PC
1/4"x1-3/4" Allen Bolts		Allen Wrench 1/4	
			

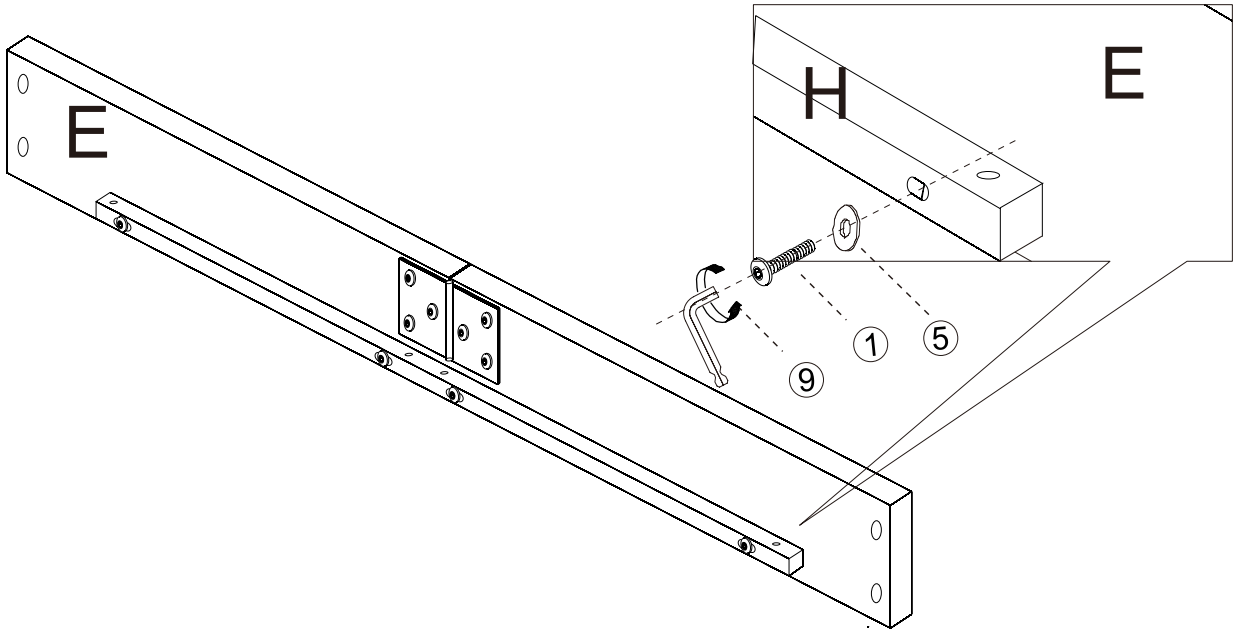
2)
Assemble Footboard Legs (J) to Footboard (D).


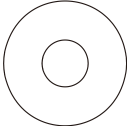
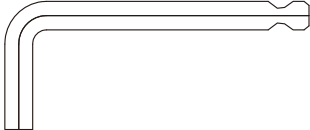


⑤	2PCS	⑥	2PCS
Flat Washers		Spring Washers	
			
④	2PCS	⑨	1PC
1/4"x3" Allen Bolts		Allen Wrench 1/4	
			

To assemble the full unit straight, please do not tighten the individual screw completely, only tighten the screws halfway through before positioning other screws. After all the screws are in position, secure the screws tight and completely.

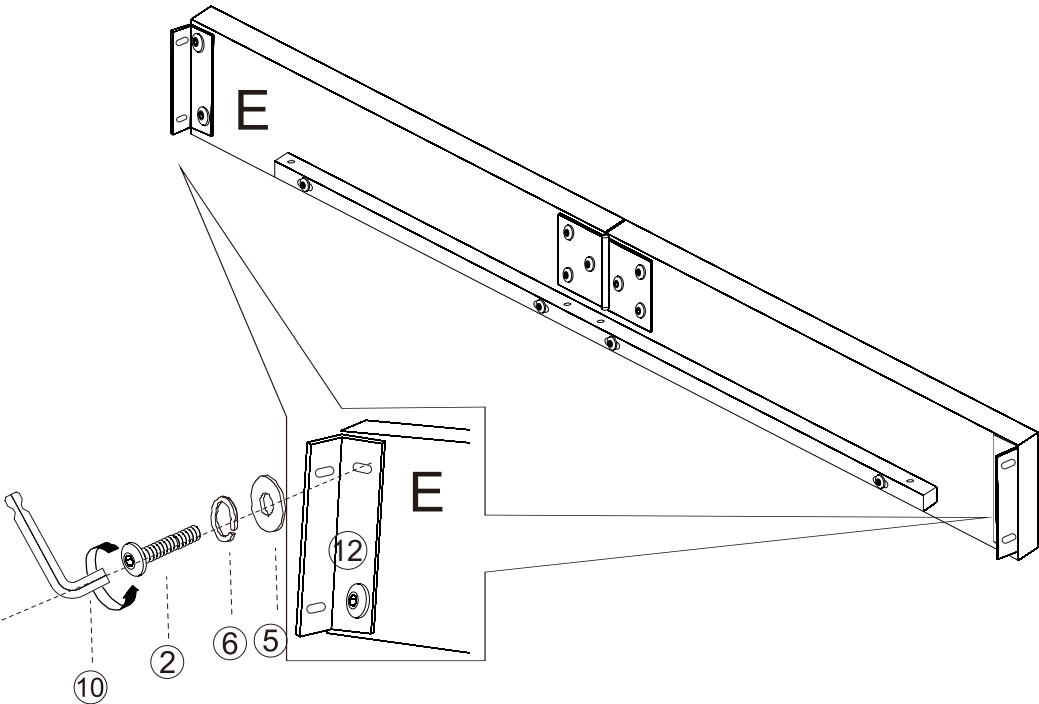
3)
Unfold the Side Rails(E), assemble the Iron Tubes(H) to Side Rails(E).


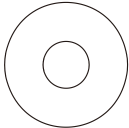




①	8PCS	⑤	8PCS	⑨	1PC
1/4"x1-3/4" Allen Bolts		Flat Washers		Allen Wrench 1/4	
					

To assemble the full unit straight, please do not tighten the individual screw completely, only tighten the screws halfway through before positioning other screws. After all the screws are in position, secure the screws tight and completely.

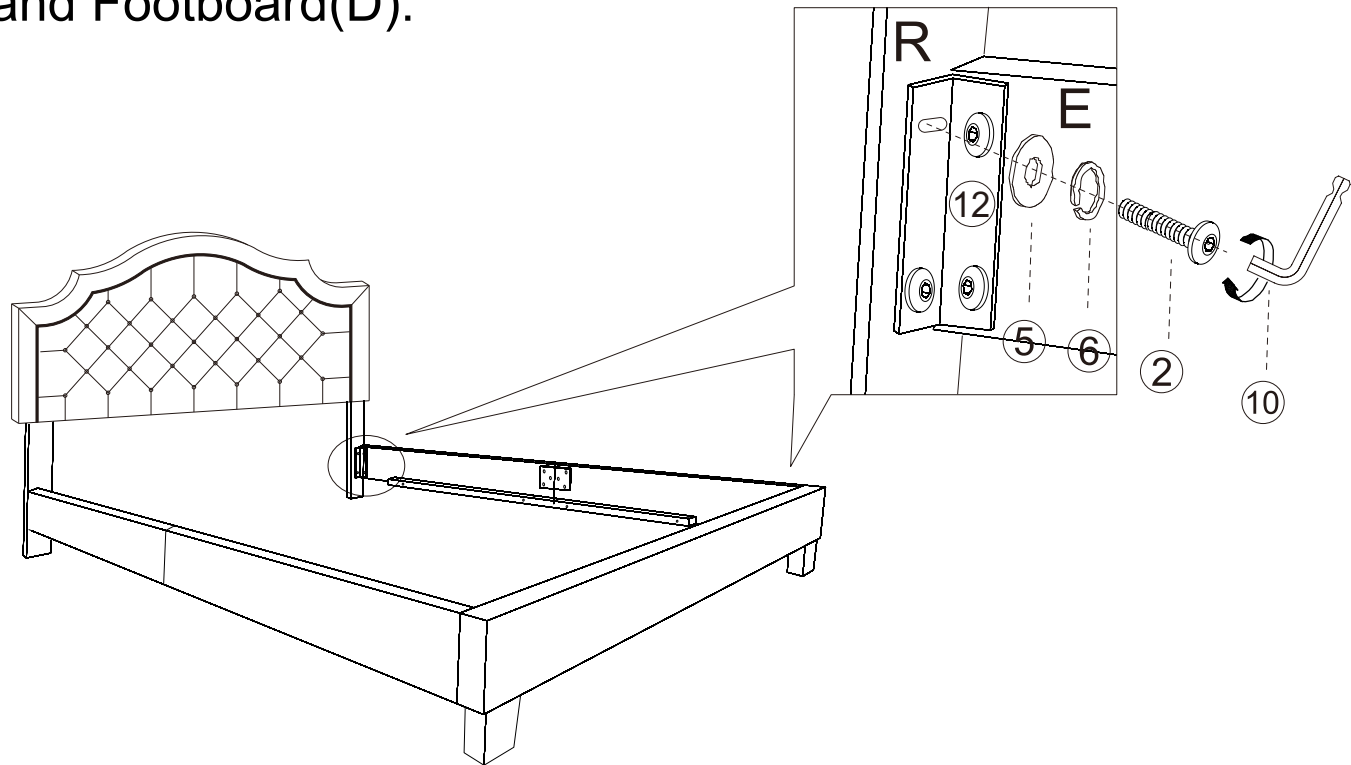
4)
Assemble the L-Metal Plates(12) to Side Rails(E).

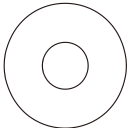





②	8PCS	⑤	8PCS
5/16"x1" Allen Bolts		Flat Washers	
			
⑥	8PCS	⑩	1PC
Spring Washers		Allen Wrench 5/16	
			

To assemble the full unit straight, please do not tighten the individual screw completely, only tighten the screws halfway through before positioning other screws. After all the screws are in position, secure the screws tight and completely.

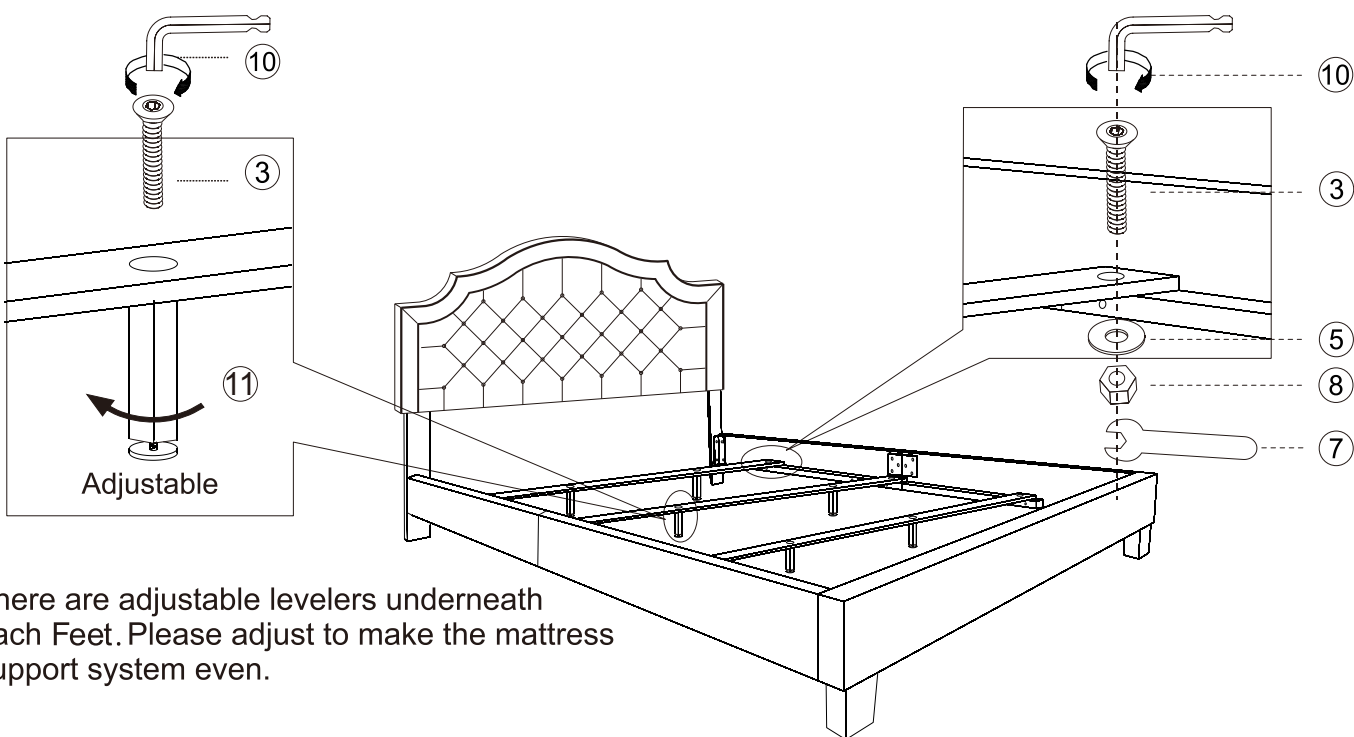
5)
Attach Side Rails(E) to the Left Leg & Right Leg (L/R) and Footboard(D).



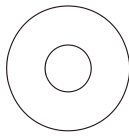
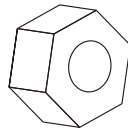
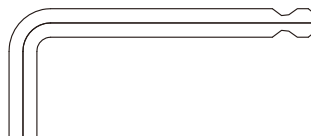
⑤	8PCS	⑥	8PCS
Flat Washers		Spring Washers	
			
②	8PCS	⑩	1PC
5/16"x1" Allen Bolts		Allen Wrench 5/16	
			

To assemble the full unit straight, please do not tighten the individual screw completely, only tighten the screws halfway through before positioning other screws. After all the screws are in position, secure the screws tight and completely.

6)
Assemble Wooden Slats(G) and Support Feet (11).



There are adjustable levelers underneath each Feet. Please adjust to make the mattress support system even.

⑤	6PCS	⑧	6PCS	⑩	1PC
Flat Washers		Nuts		Allen Wrench 5/16	
					
③	12PCS		⑦	1PC	
5/16"x2-1/8" Allen Bolts			Wrench		
