
## **Package Includes:**

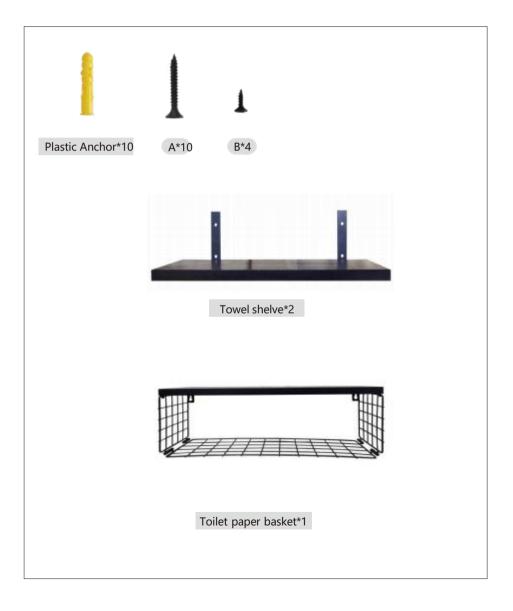

## **Installation Steps:**

**Step 1:** Put the Bubble Level on the board; When the bubble is in the middle position, it means the shelve is horizontal; Then you can make a mark of the hole position



**Step 2:** Use a drill to punch holes on your marks, about 2-3mm deeper than the Plastic Anchor



**Step 3:** Put the Plastic Anchor into the hole, Use the screw A to fix the shelve on the wall







For the best installation of toilet paper basket, we suggest to leave the nails out of the wall for 0.1 in

**Step 4:** There are 4 pre-drilled holes on two side of the board, Use B screw to connect the storage basket with board,



**Step 5:** Repeat Step 1 2 3 to fix the basket on the wall (we suggest to leave the nails out of the wall for 0.1 in)

