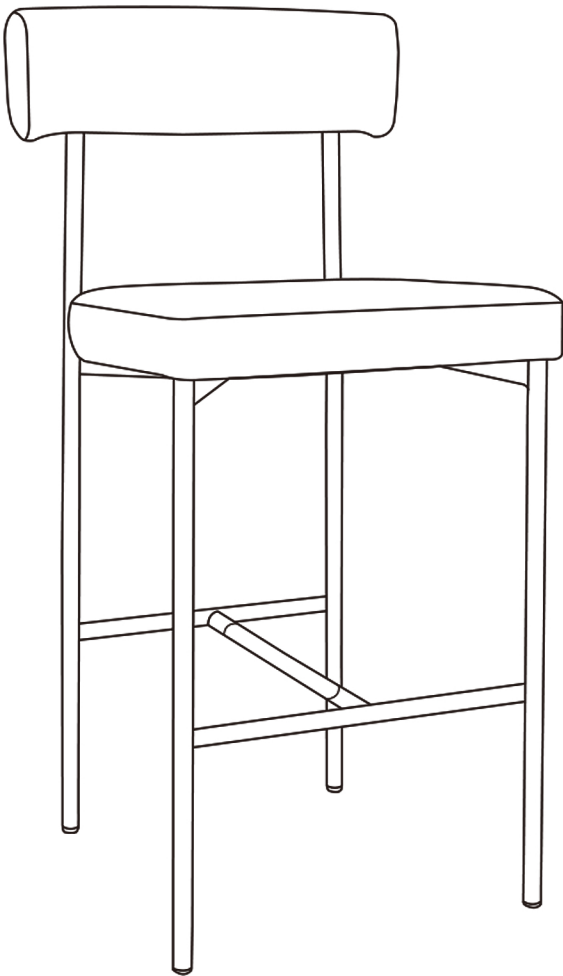


BAR STOOLS

ASSEMBLY INSTRUCTIONS



**Need help? Contact us through the shopping platform.
Or email: service.furniture@outlook.com**

HALF HOUR
ASSEMBLY TIME

2 PEOPLE
REQUIRED FOR ASSEMBLY

1 X 1 M
FLOOR SPACE REQUIRED

INSTALLATION SUGGESTIONS

PLEASE READ ALL THE INSTRUCTIONS CAREFULLY BEFORE ASSEMBLING AND USING THE PRODUCT.




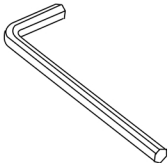

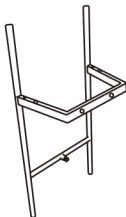
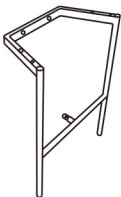

- 1. Please check whether all parts are complete according to the installation instructions.
- 2. Please ensure that the installation space is clean and flat to avoid dirt and damage to the product parts.
- 3. In each step, do not tighten bolts/screws completely until all bolts/screws are lined up and tightened 70% separately. Do not over tighten bolts/screws to avoid stripping.
- 4. We recommend that all assembled parts should be placed near the assembly location to avoid loss or forgetting while assembling.

TIPS FOR GIVING FEEDBACK

Please provide helpful information. We will give you feedback within 24h.

- 1. Describe your problem in detail and explain it with some clear multi-angle photos of the problem area.
- 2. Send your order ID and the letter number and quantity of the part in question from the parts list.
- 3. A clear photo of the side of the box that has the product information or the label on the bottom of the cushion.

PARTS AND HARDWARE LIST

 M6*50mm A*4	 M6*35mm B*2	 M6*16mm C*4	 M8*45mm D*2	 E*4	 F*1
 G*1	 H*1	 I*1	 J*1	 K*1	 L*2

ASSEMBLY STEPS

Assembly tip: Just tighten the screws to 70% before all of them are aligned. After all the screws are aligned, tighten the remaining parts.

STEP 1. Connect the front frame (J) and rear frame (I) using the metal tube (K). Then secure the front frame (J) and rear frame (I) together with screws (B*2). Note: Do not fully tighten yet.	STEP 2. Rotate the metal tube (K) to align the screw holes. Then secure with screws (C*2). Note: Do not fully tighten yet.	STEP 3. Secure the seat cushion (G) to the frame using the combination of screws (A*4) and washers (E*4). Note: Do not fully tighten yet.
STEP 4. Secure the metal connectors (L*2) to the backrest (H) using screws (D*2). Note: Do not fully tighten yet.	STEP 5. Align and insert the metal connectors (L*2) into the rear frame. Secure with screws (C*2). Note: Tighten all screws.	STEP 6. Congratulations! You have possessed an exquisite barstool. Tip: Adjust pre-installed adjustable foot pads height to achieve balance.

WARRANTY TERMS & CONDITIONS

- 1. We provide warranty for the product for one year.
- 2. The warranty period starts on the delivery date.
- 3. If the product has quality problems, contact us and we promise we will solve it for you.

CORRECT SITTING POSITION

