

installation instructions:

SIGNATURE URETHANE GABLE VENT

SAFETY INSTRUCTIONS

Make sure to use the correct tools recommended.

Wear safety goggles.

Follow fixture, power tools, and paint manufacturers' instructions and users manuals.

Use common sense and follow good construction practices.

TOOL & MATERIAL CHECKLIST

- ☐ construction adhesive
- ☐ caulk
- ☐ caulking gun
- ☐ finishing nails
- ☐ hammer
- ☐ paint
- ☐ chalk line box & pencil


IMPORTANT INFO

- It is highly recommended that you prime & paint/finish our gable vents with 100% acrylic latex paint before installation.
- Once installed, you can apply any necessary touch-up paint/finish.
- Clean installation surface and back of vent of all dirt and dust with a clean cloth or sponge.
- Make sure that the surface and the back of the vent are completely dry before attempting installation.
- Measure and mark the location where the vent is going to be installed.

INSTALL INSTRUCTIONS:

1. Apply a 1/2" bead of adhesive caulk all the way around the back edge of the vent.
2. Gently press the vent up against the wall.
3. When pressing the vent up against the wall, some adhesive will seep out. Remove any excess adhesive.
4. If additional support is needed, non-corrosive fasteners can be used.
5. Fill any fastener holes and voids with caulk and smooth the surface with a finger or putty knife.
6. Apply touch up paint as needed.

EXAMPLE DIAGRAM:

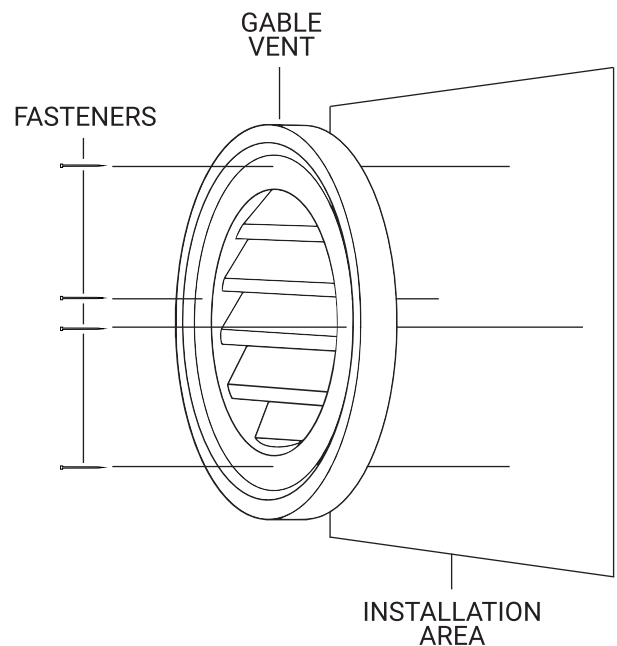

We Can Help. Call (866) 607-0453



EKENA
MILLWORK

Industry leading manufacturer of urethane, PVC, wood, rustic, and metal millwork

www.ekenamillwork.com