


INSTRUCTION

Outdoor Metal Furniture-Swivel Chairs

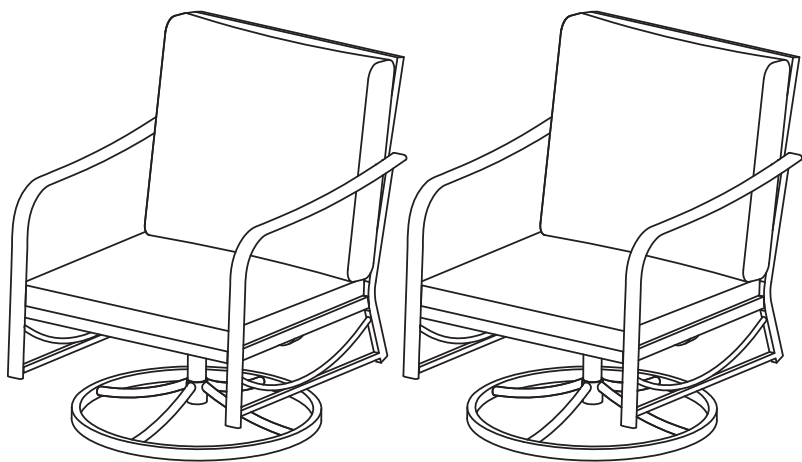


**If you need help or find any damaged or missing parts, please don't worry
— feel free to contact us through the platform. We're here for you.**

NOTICE

NOTICE


If the screw holes are not aligned, please use a hammer on that side to ensure that the screw holes are properly aligned.

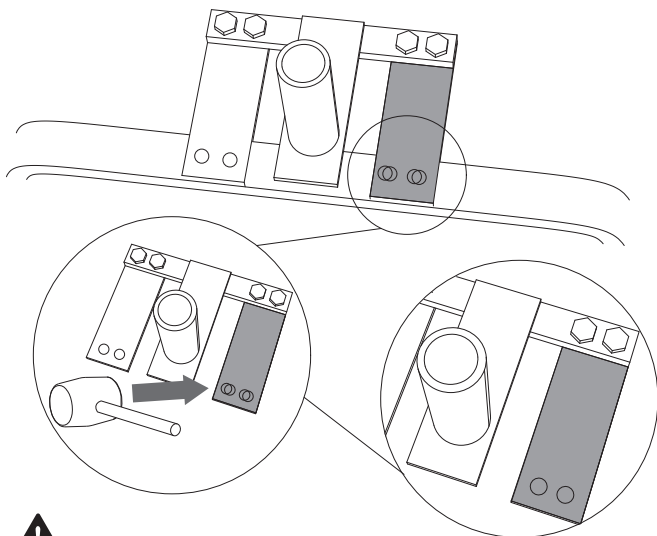


NOTICE

The upper screwdriver needs to be turned at a 45-degree angle to tighten the screws.



The bottom screwdriver needs to be used horizontally to tighten the screws.

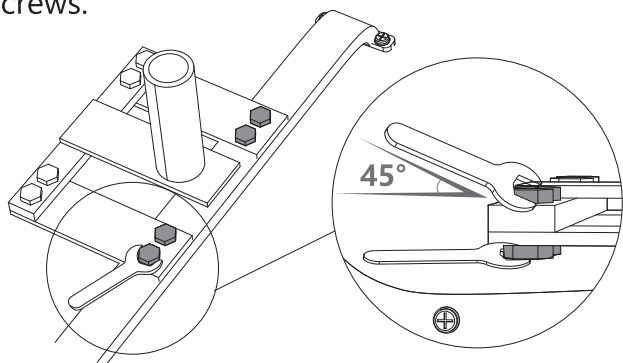

NOTICE

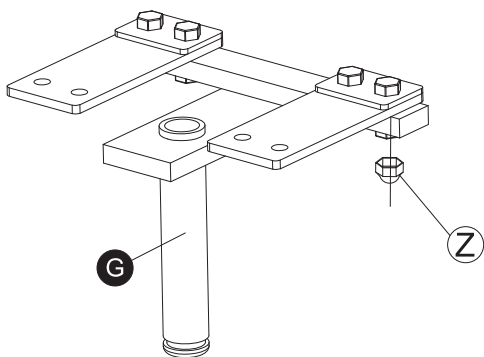







If you find that the metal plate is tilted or does not align with the holes in the base during assembly, you can use a wrench to loosen the screws, adjust them, then tighten them again, and finally cover the nuts with the caps.

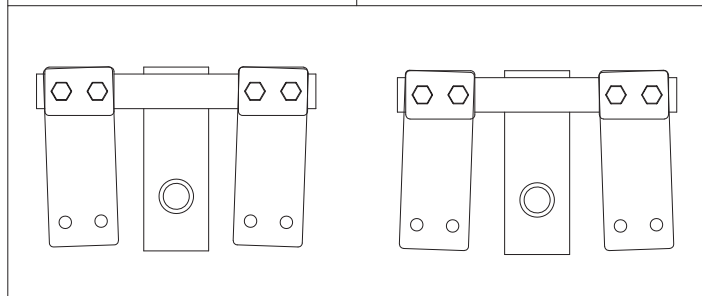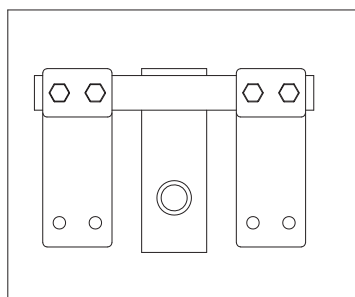

HARDWARE LIST

HH  M8	II  M8	JJ 	KK 	LL  M8
8 pcs	8 pcs	8 pcs	1 pc	2 pcs
P 	Q  M8*35	S  M6*28	X  M6	Y  M6
4 pcs	8 pcs	20 pcs	20 pcs	20 pcs
Z  M8				
16 pcs				

PART LIST


A1 	B1 	CC 	D 	E 
2 pcs	2 pcs	2 pcs	2 pcs	2 pcs
F 	G 	H 	I 	
2 pcs	2 pcs	2 pcs	2 pcs	

1. Please ensure that all accessories are complete before starting the installation.
2. Due to the variety of accessories, many accessories may be glued together, please check carefully
3. If any accessories are missing or damaged, please contact the seller immediately.

STEP 1

NOTICE

When installing, please be careful not to tighten the screws immediately!
You need to make sure that all the screws are secured to 80%, then tighten them!

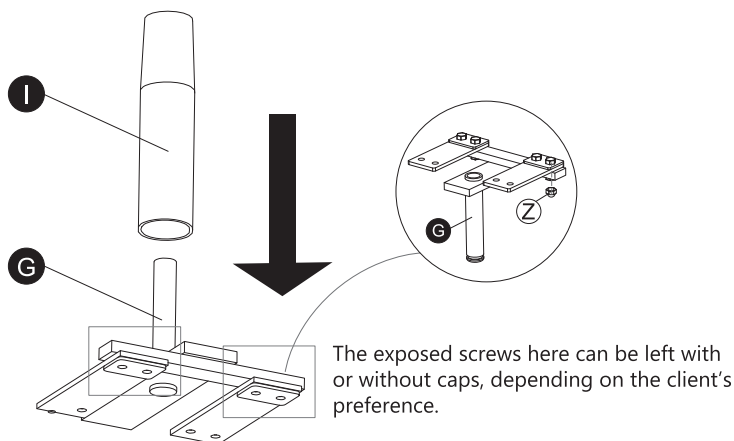



1 pc

1 pc


M8
4 pcs

STEP 2

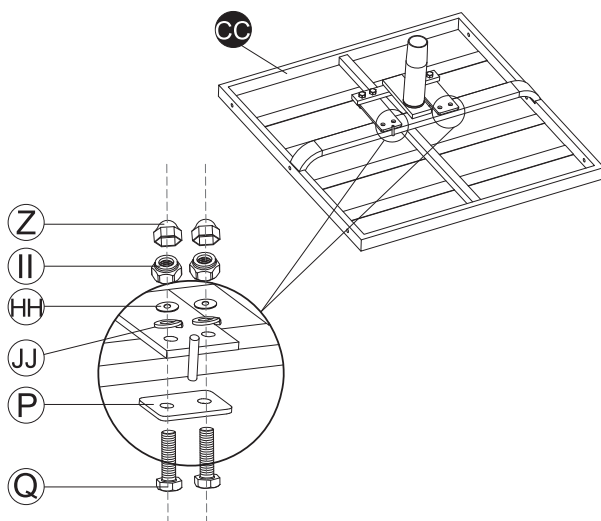


	
1 pc	4 pcs
	
M8	
4 pcs	2 pcs
	
M8	M8*35
4 pcs	4 pcs
	
M8	
4 pcs	

STEP 3

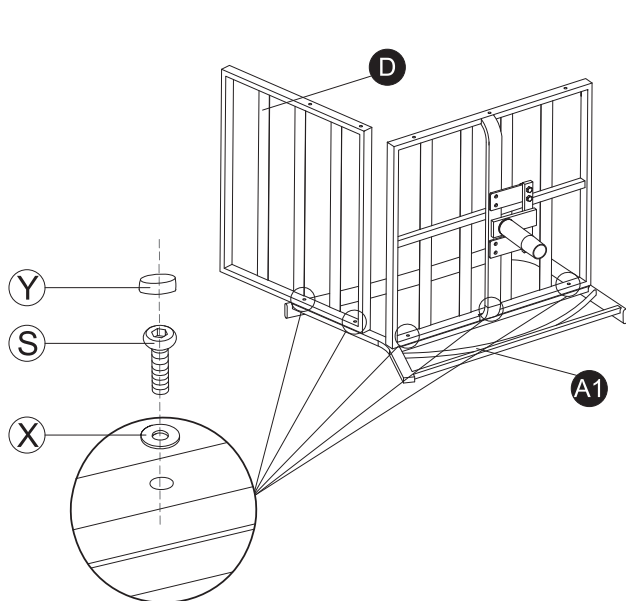



A1	D
1 pc	1 pc
S	
M6*28	
5 pcs	
X	
M6	
5 pcs	
Y	
M6	
5 pcs	

STEP 4


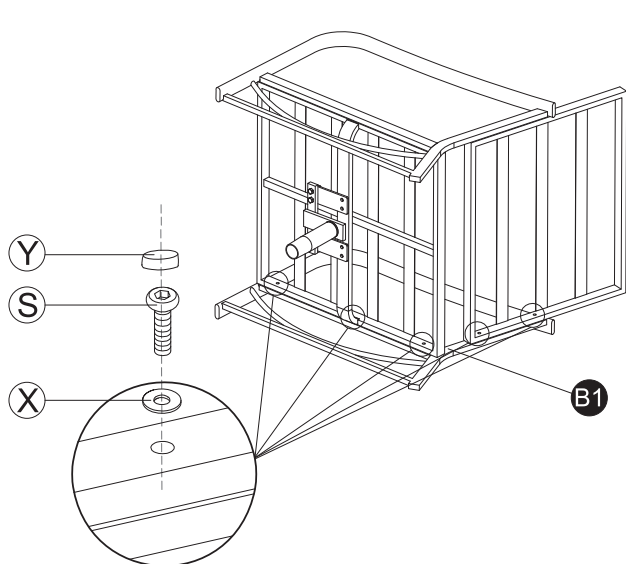


B1	
1 pc	
S	
M6*28	
5 pcs	
X	
M6	
5 pcs	
Y	
M6	
5 pcs	

STEP 5

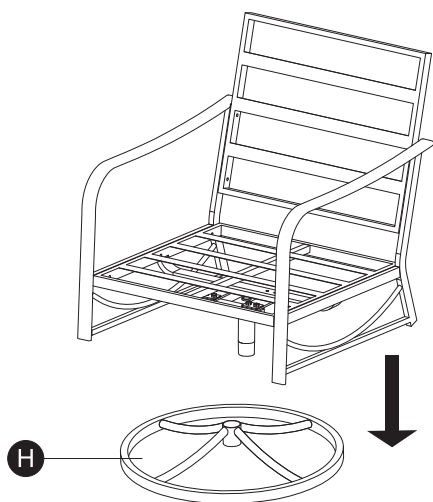

STEP 6

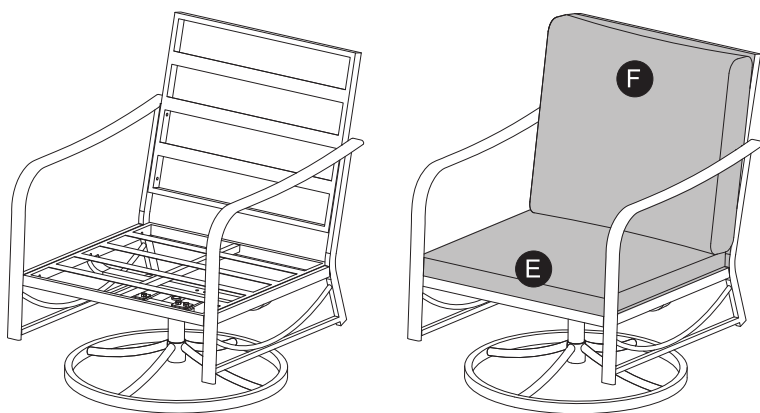

STEP 7

**The installation is complete.
Make sure all the screws are fully tighten.**

