


Installation Instruction

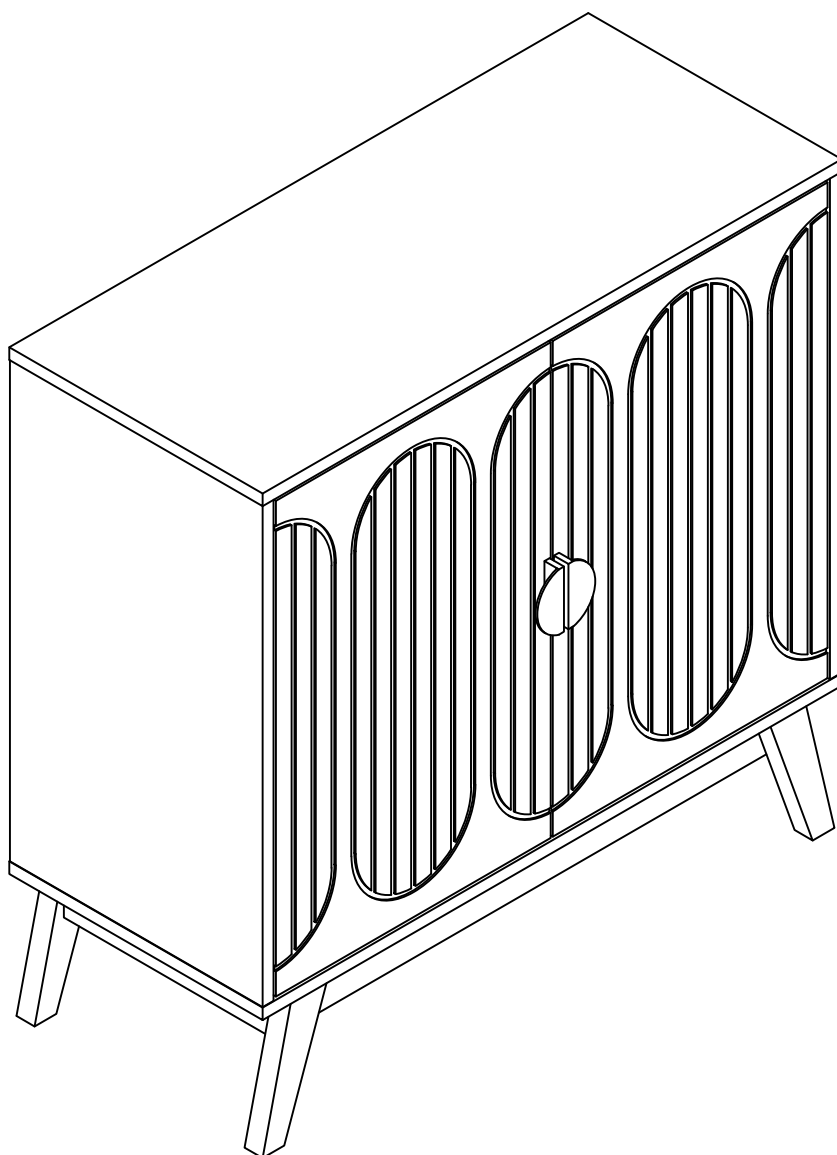

Assembling


Estimated time for assembly



45 : 00

What you need

- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



Weight Limitation




100

lbs table top

35

lbs per

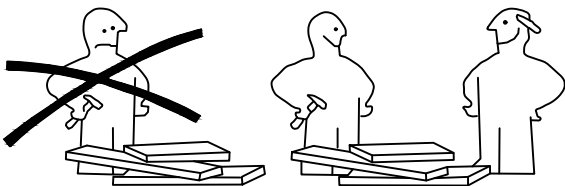


What' included


Code	Description	Qty
A	Cam Bolt M6X35MM	30
B	Cam Lock 15X10MM	30
C	Wooden Dowel M8X30MM	8
D	Screw M4X40MM	6
E	Screw M3.5X14MM	38
F	Shelf Holder	4
G	Metal connector	2
H	Shelf Holder	4
I	Cam Bolt M4X18MM	4
J	The back button	12
K	Anchor	2
L	EVA mat	4
M	Metal shake handhandle	2
N	Self-adhesive hole sticker	30
O	The screw M6X25MM	8
P	Iron absorption	1
Q	Wrench M4X90MM	1
R	Screw M3.5X14MM	2

The Hardwares


Ⓐ




Ⓑ



Ⓒ



Ⓓ




Ⓔ




Ⓕ



Ⓖ

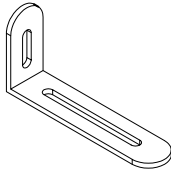


Ⓗ

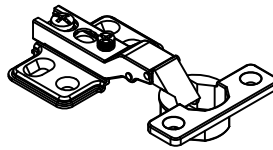

Ⓘ




Ⓙ



Ⓚ



Ⓛ



Ⓜ




Ⓝ



Ⓞ



Ⓟ

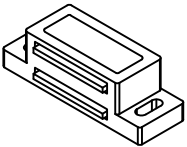

Ⓠ



Ⓡ




IMPORTANT:

1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping
3. Please use hand tools to assemble this product. Do not use power tools.


Included Accessories

Code	Description	Qty
1	Cabinet Top	1
2	Bottom Panel	1
3	Left Side Panel	1
4	Right Side Panel	1
5	On the rear panell	2
6	Panel support plate	1
7	Door leaf	2
8	Shelf	1
9	Back reinforcement plate	1
10	Diagonal support foot	2
11	Diagonal support foot	2
12	Foot front and rear connecting plates	2
13	Foot left and right connecting plate	2


The Accessoriess

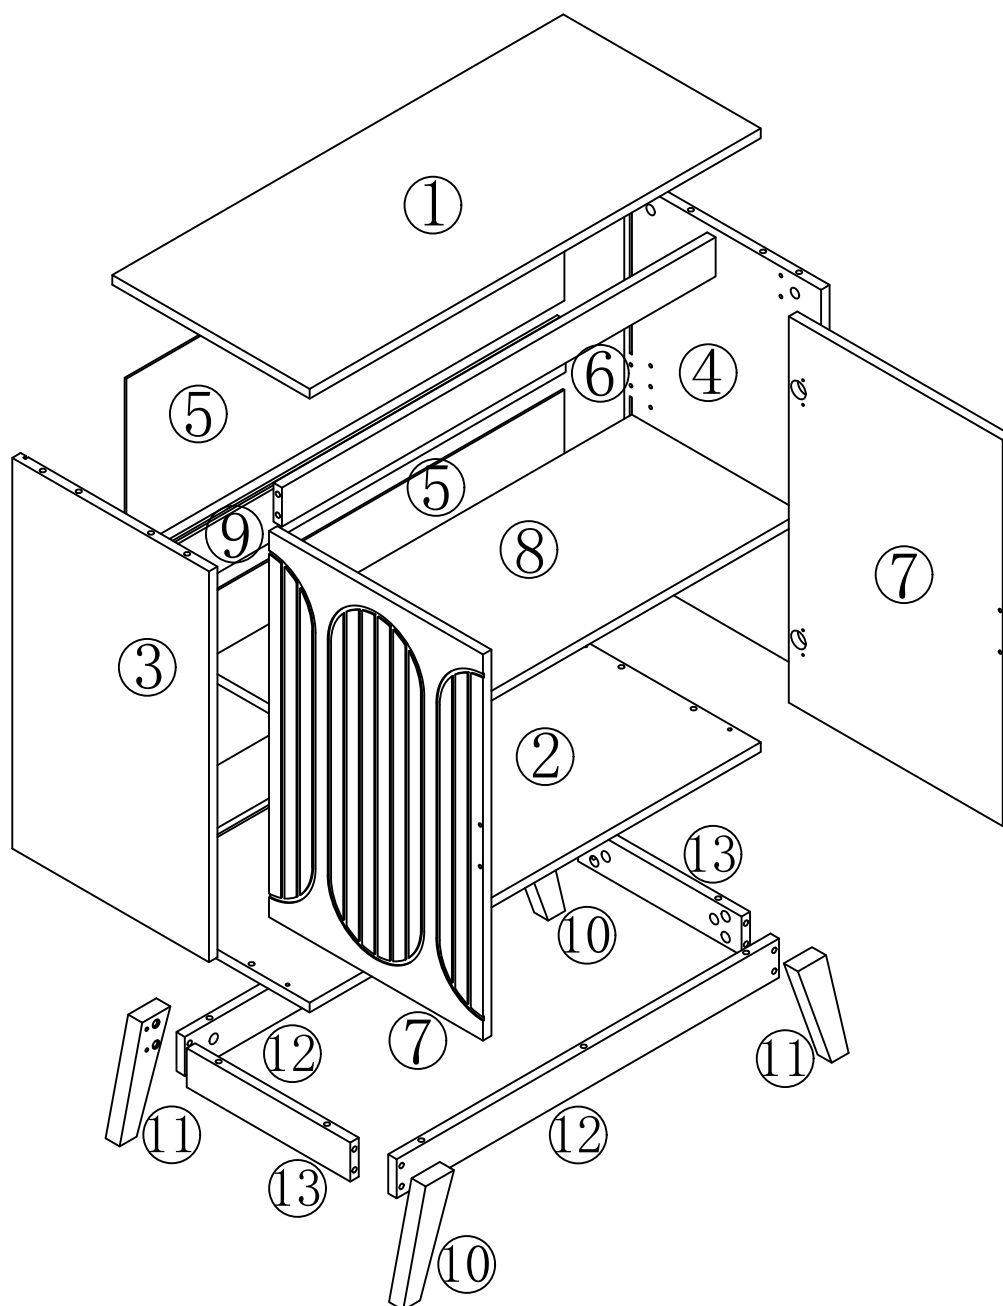


Step 1

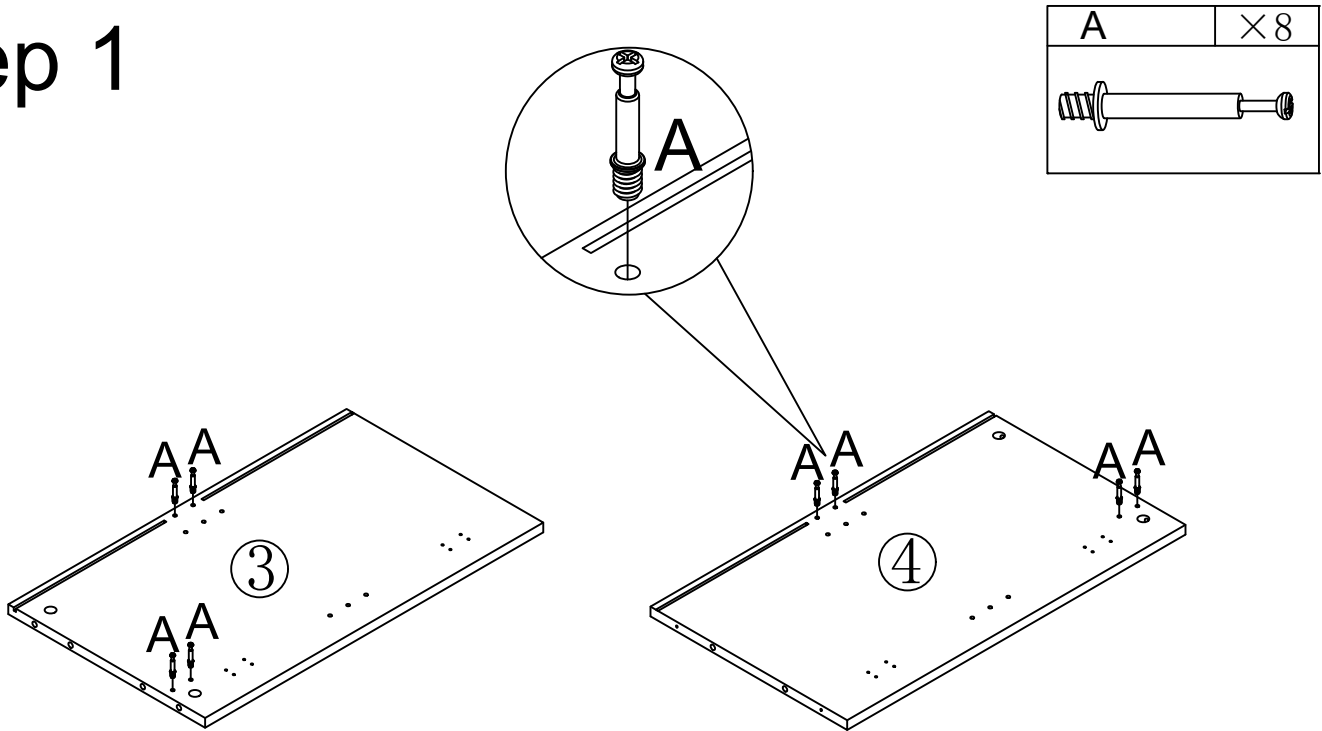


Step 2

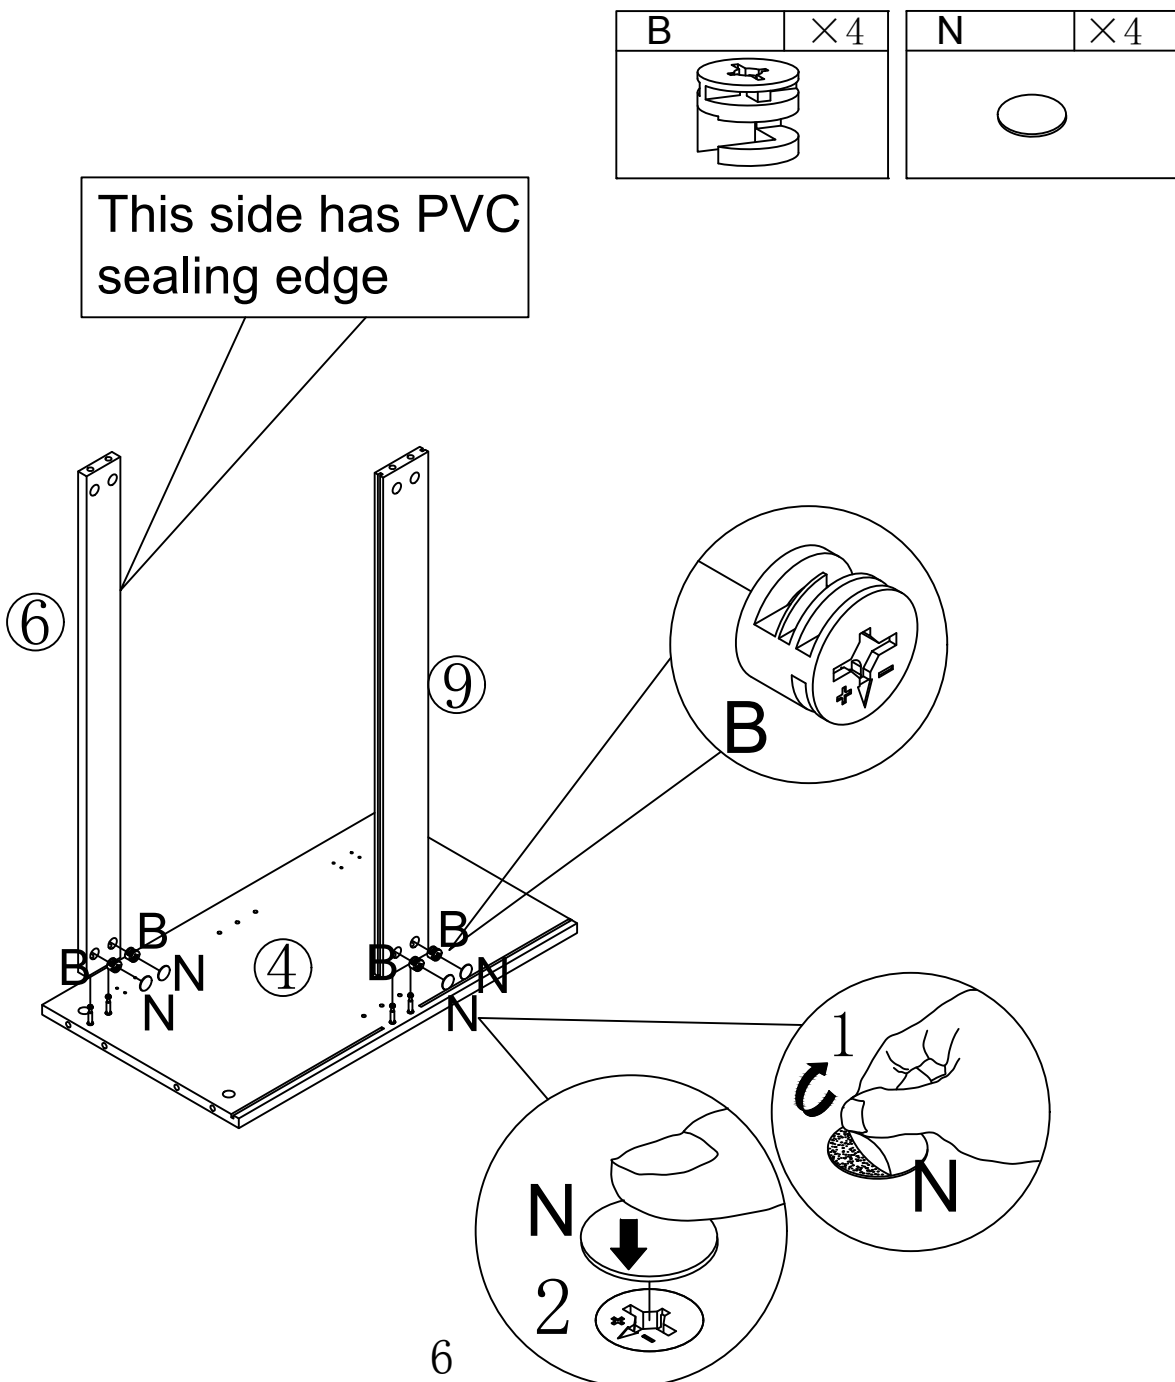


Step 3

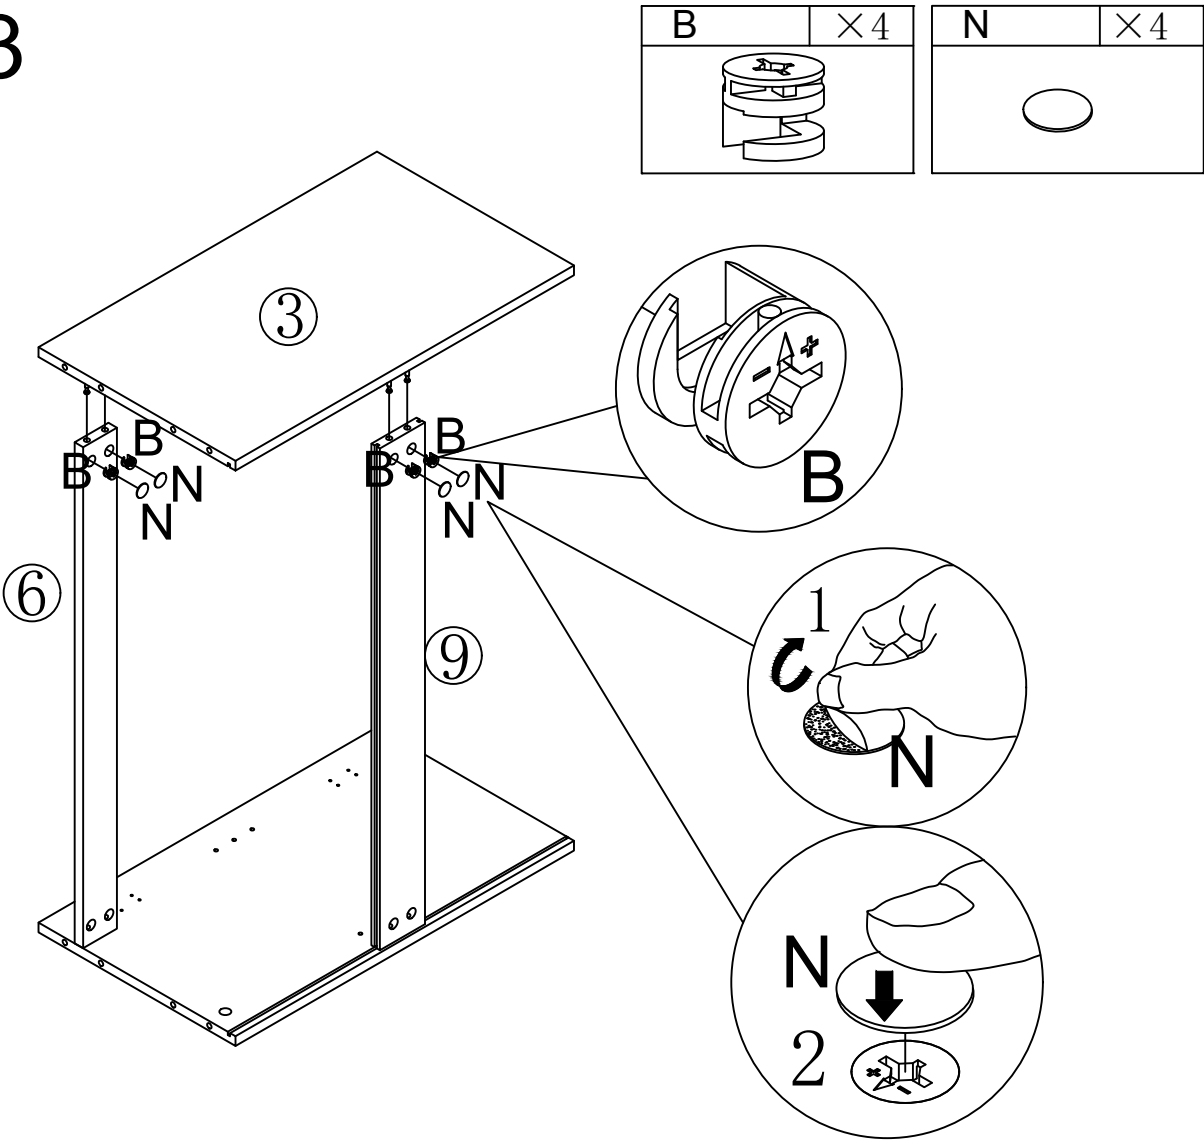


Step 4

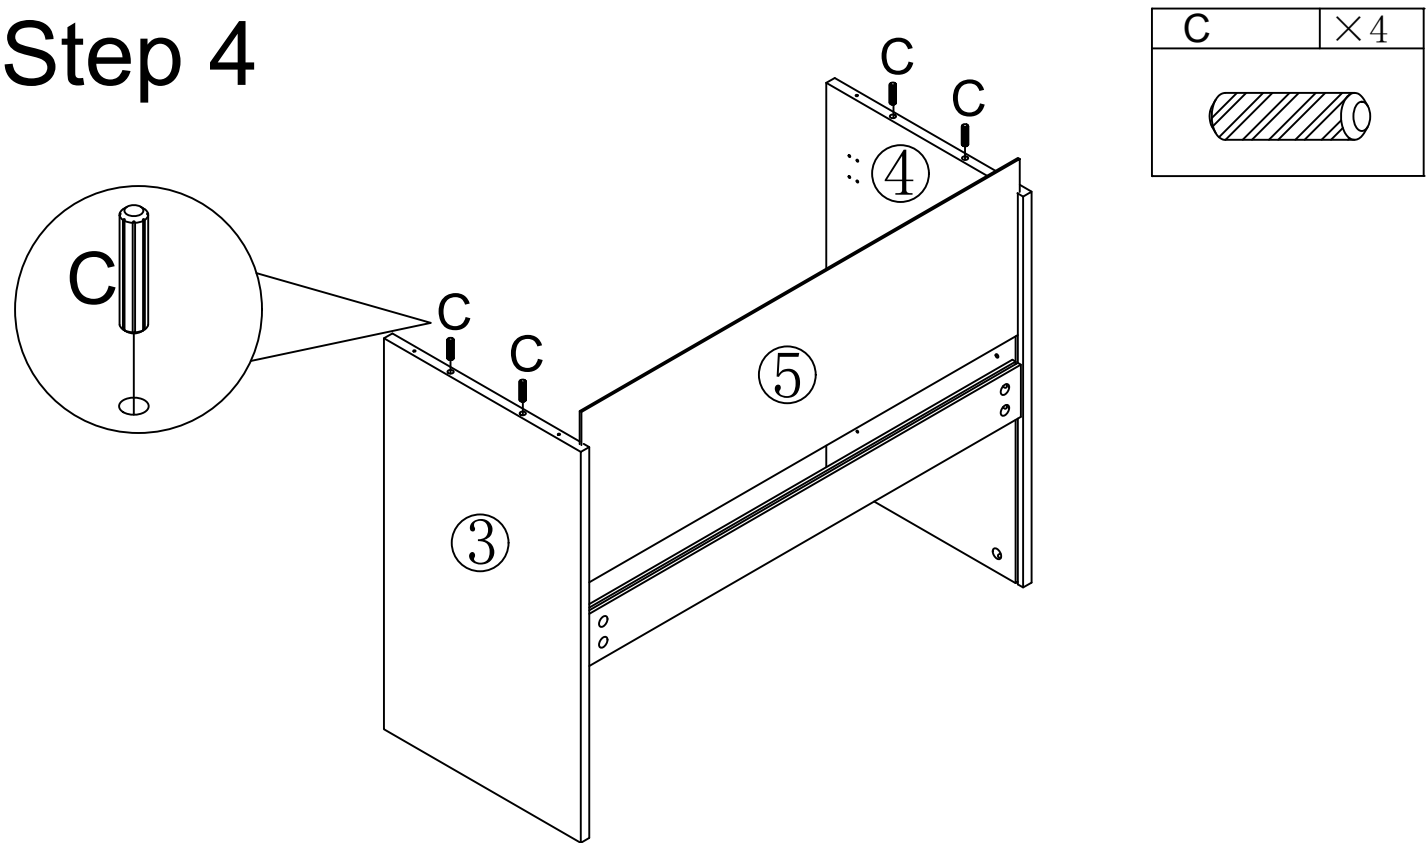



Step 5

A	×10
	

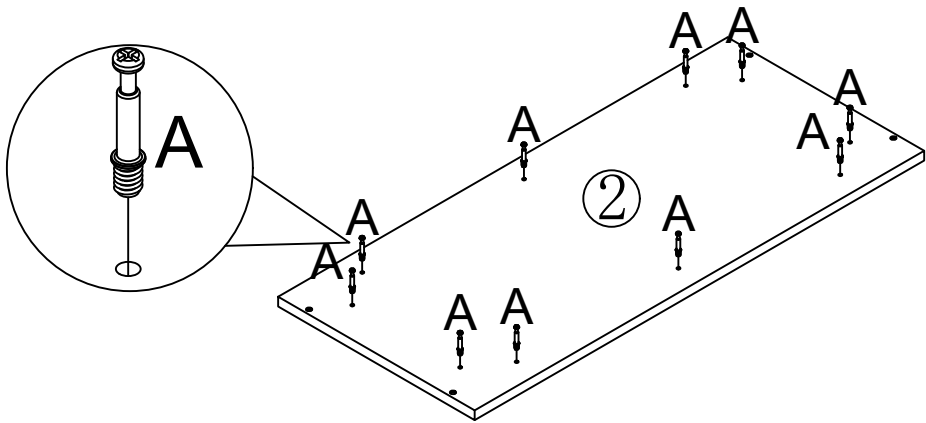



Step 6

D	×4
	

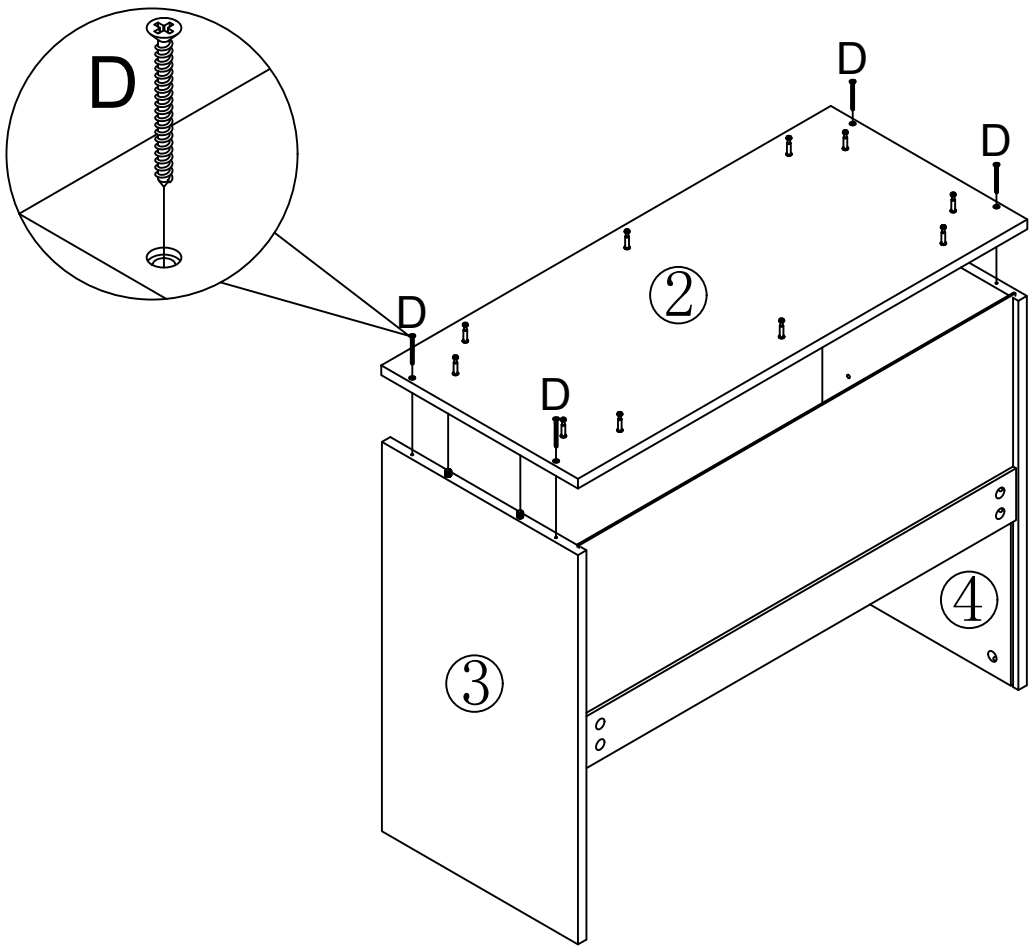

Step 7

A	×8
	

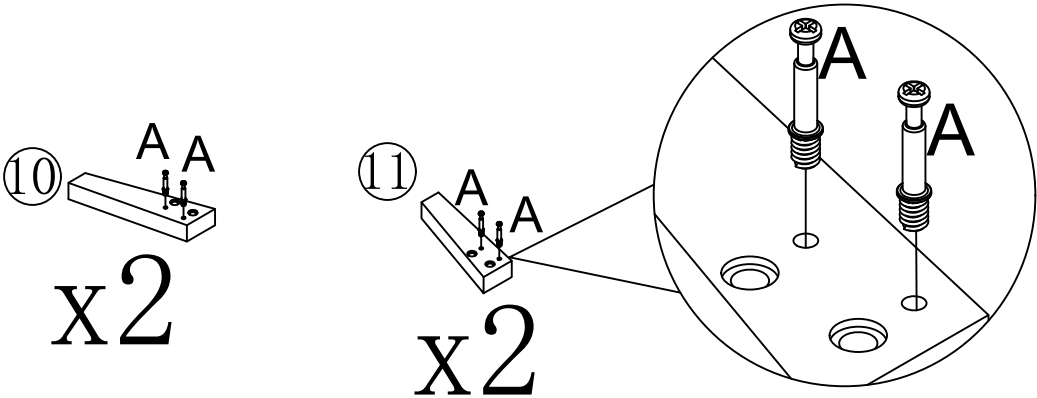


Step 8

O	×8
	


Q	×1
	



Pay attention to screw (O) do not lock lock to 90 percent


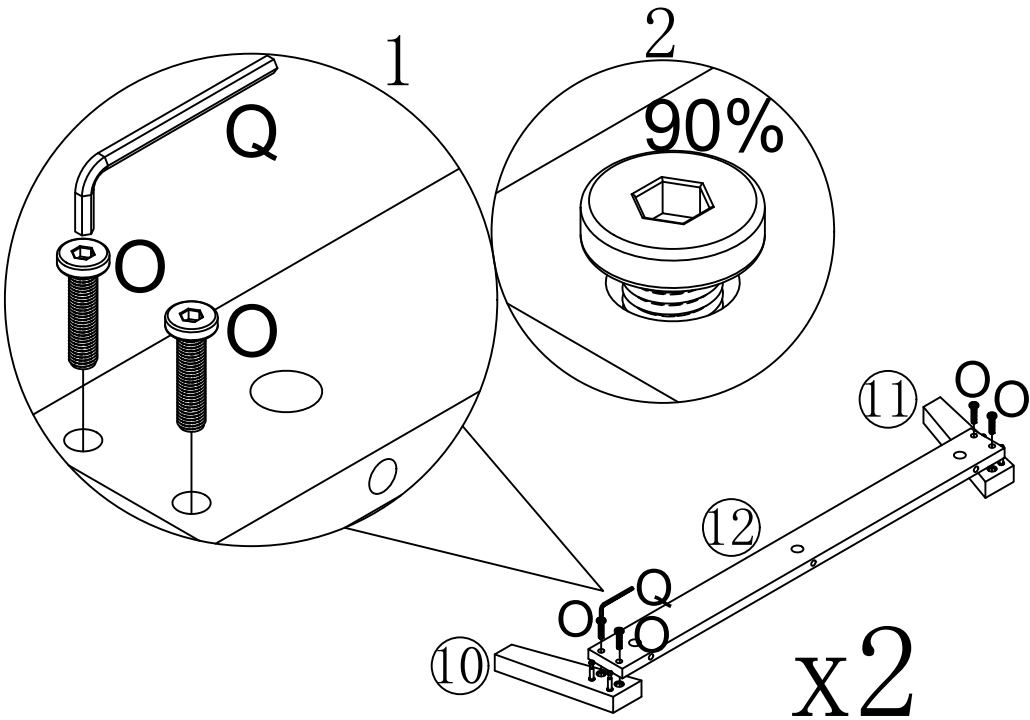


Step 9

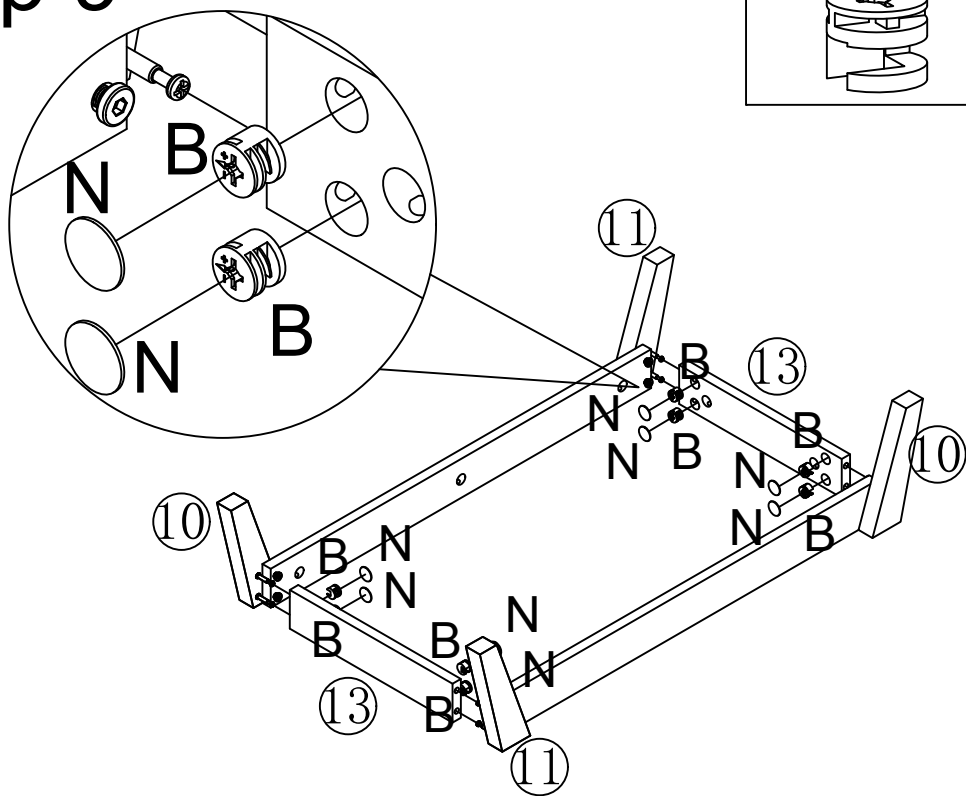


B	×8

N	×8

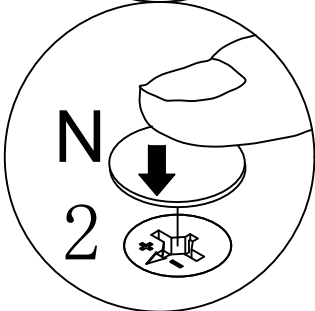
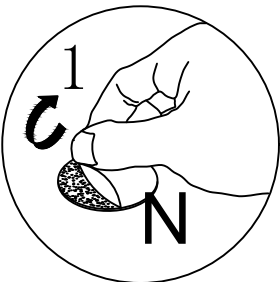


Step 10

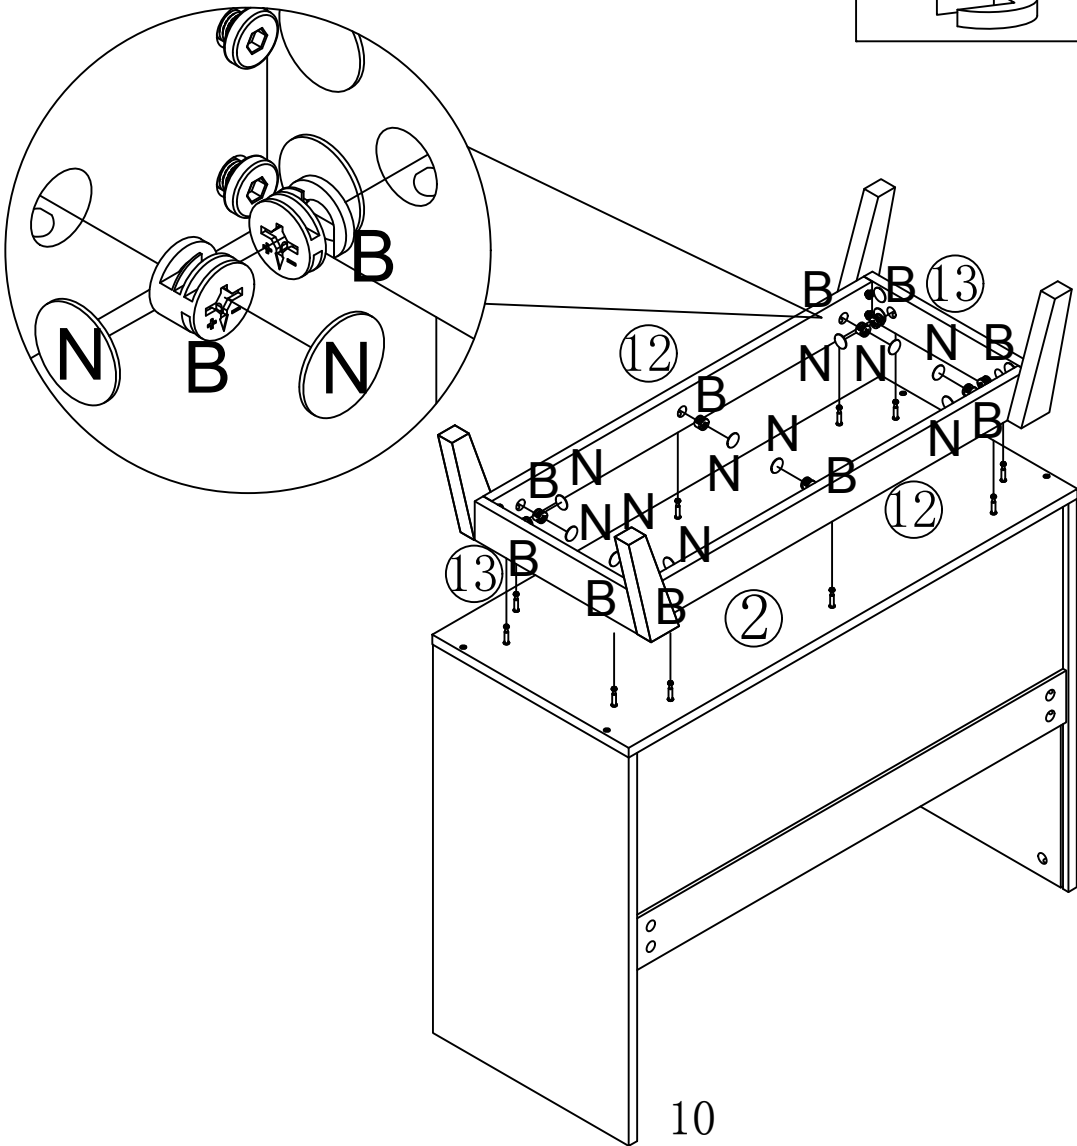


B	×10

N	×10

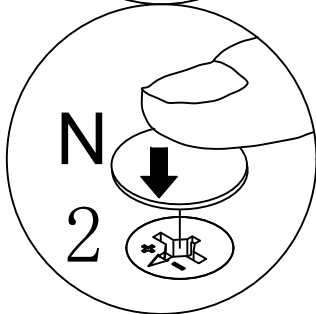
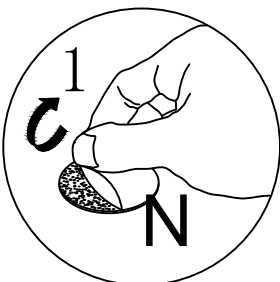


Step 11


Lock the screw
(O) 100%

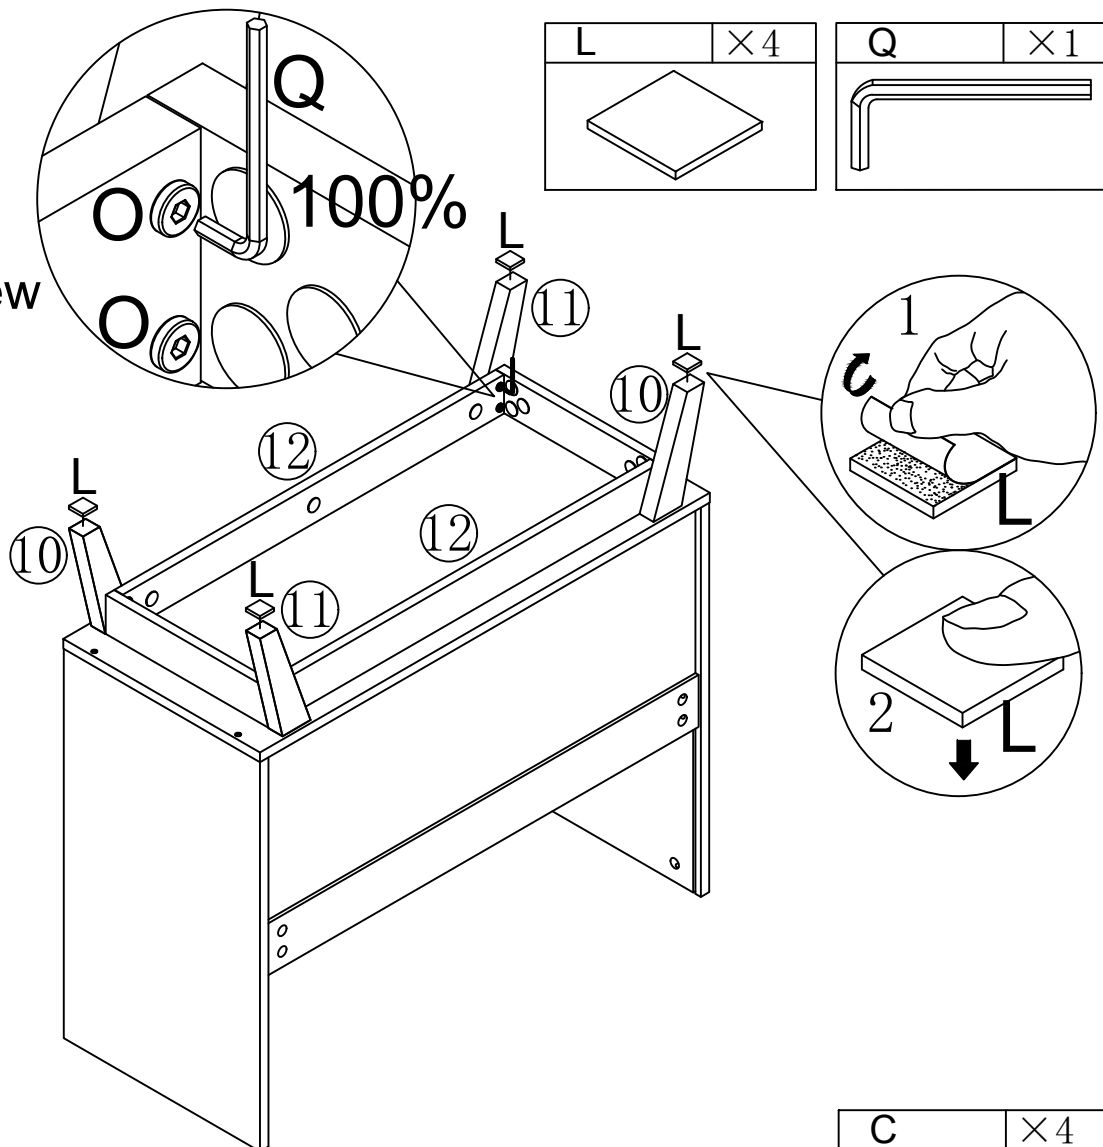


Step 12

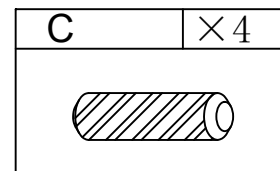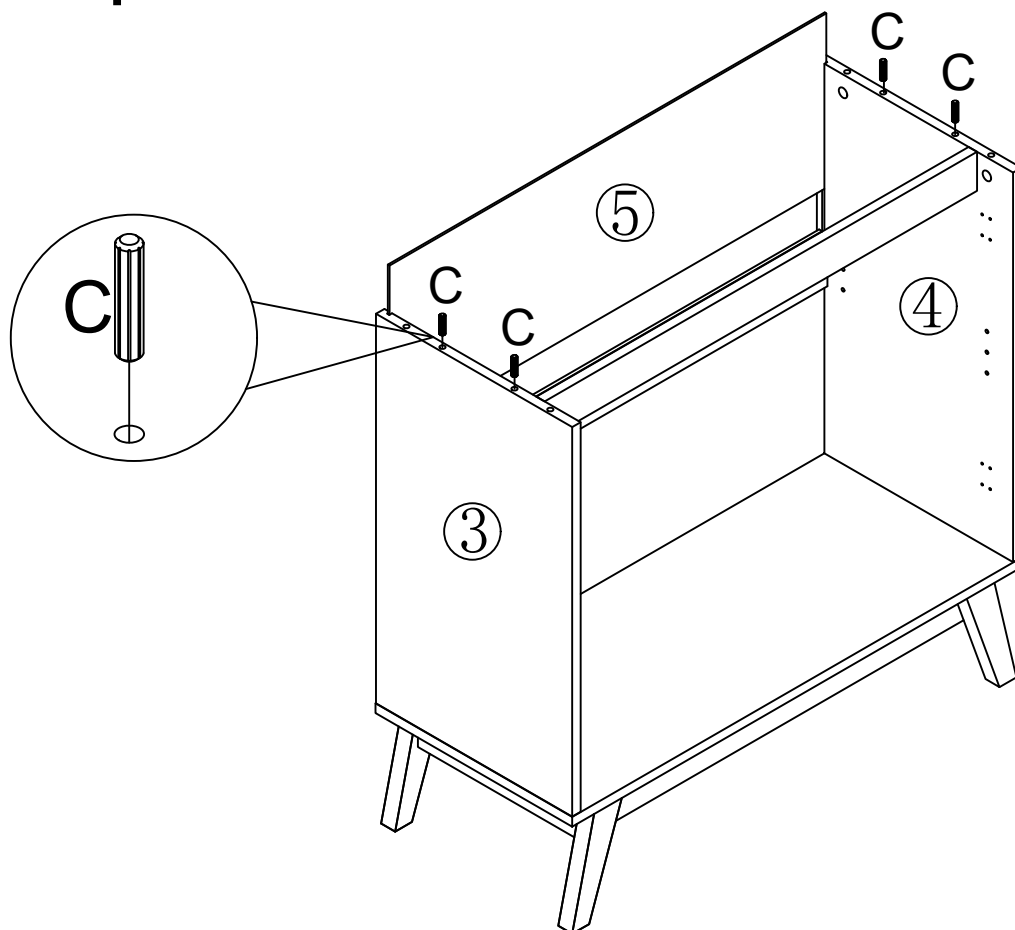



Step 13

A	×4	P	×1	R	×2
					

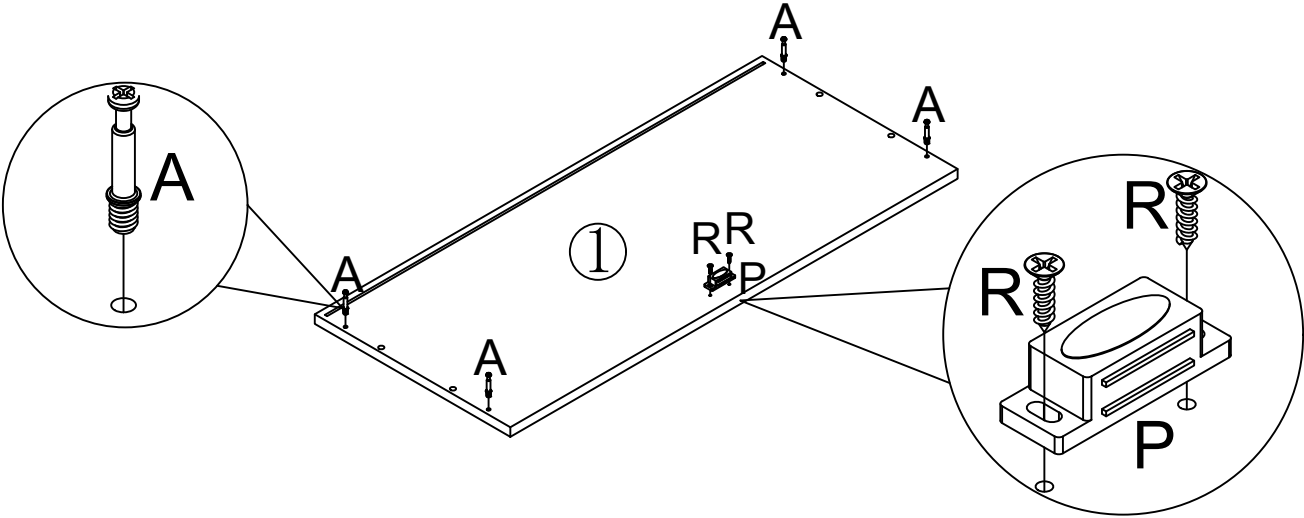


Step 14


B	×4	N	×4
			

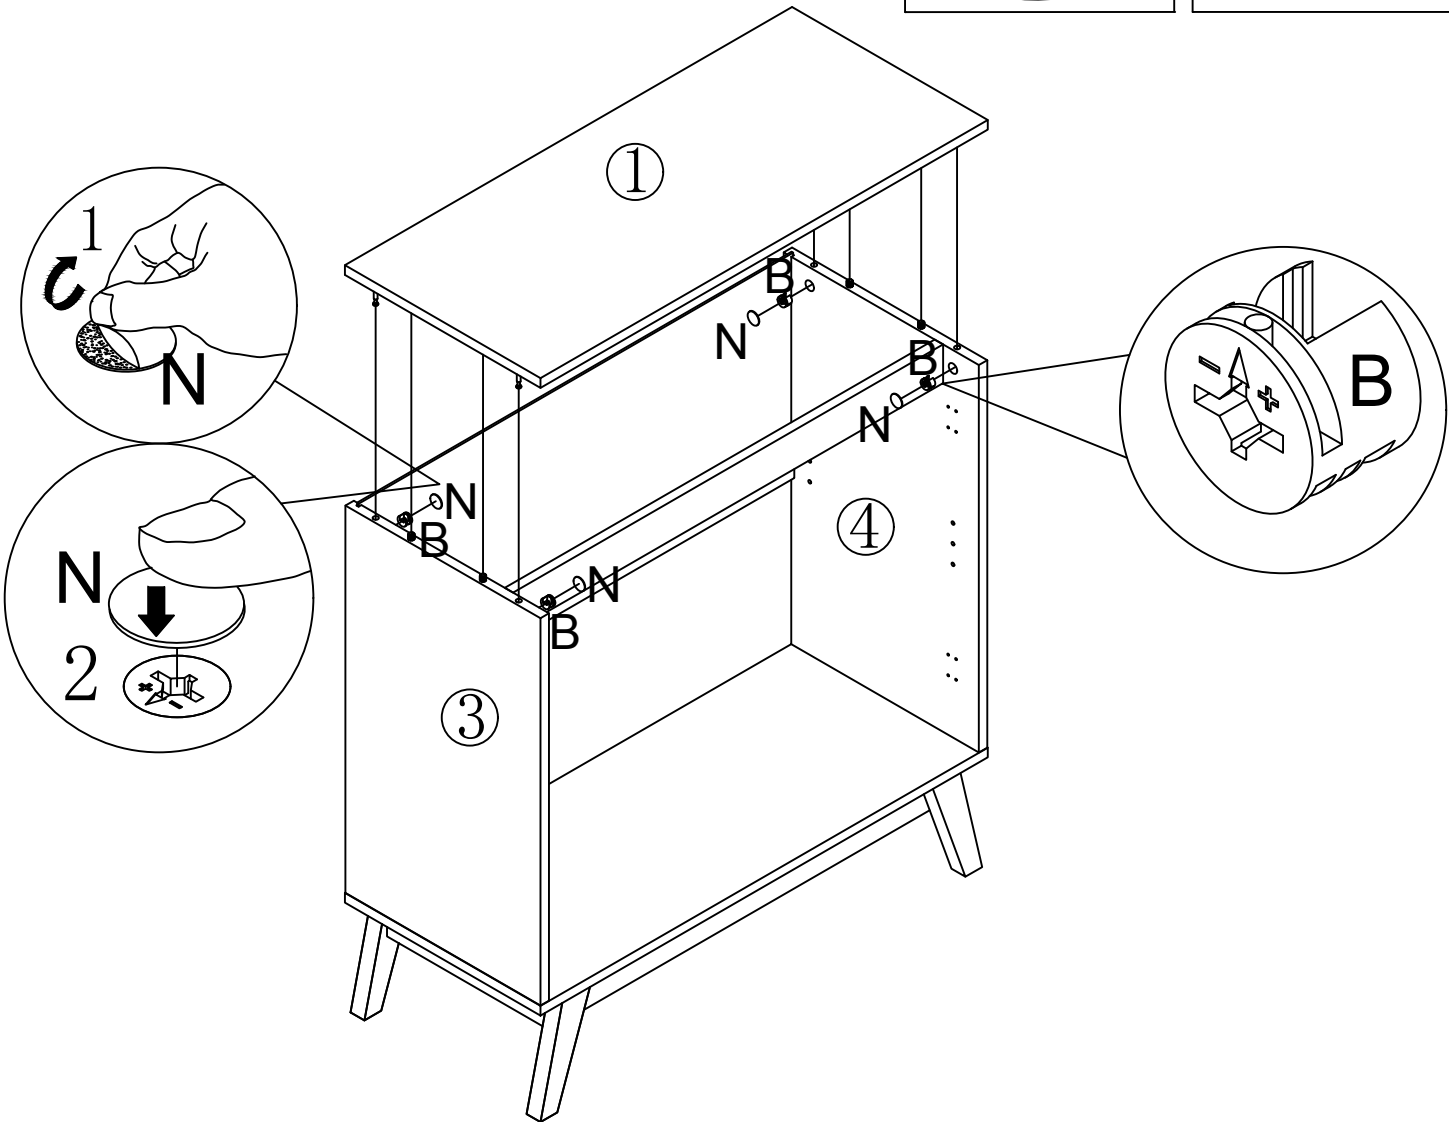


Step 15

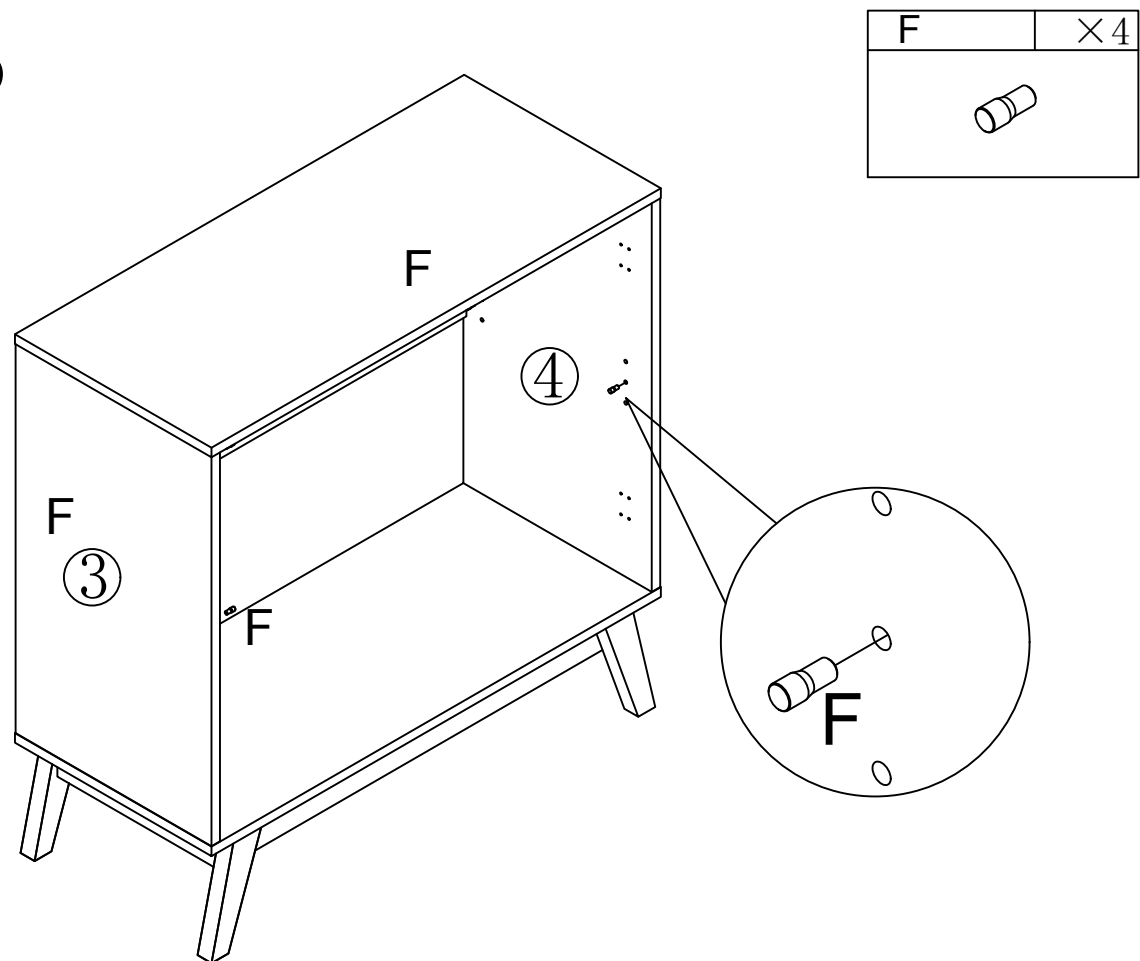


Step 16

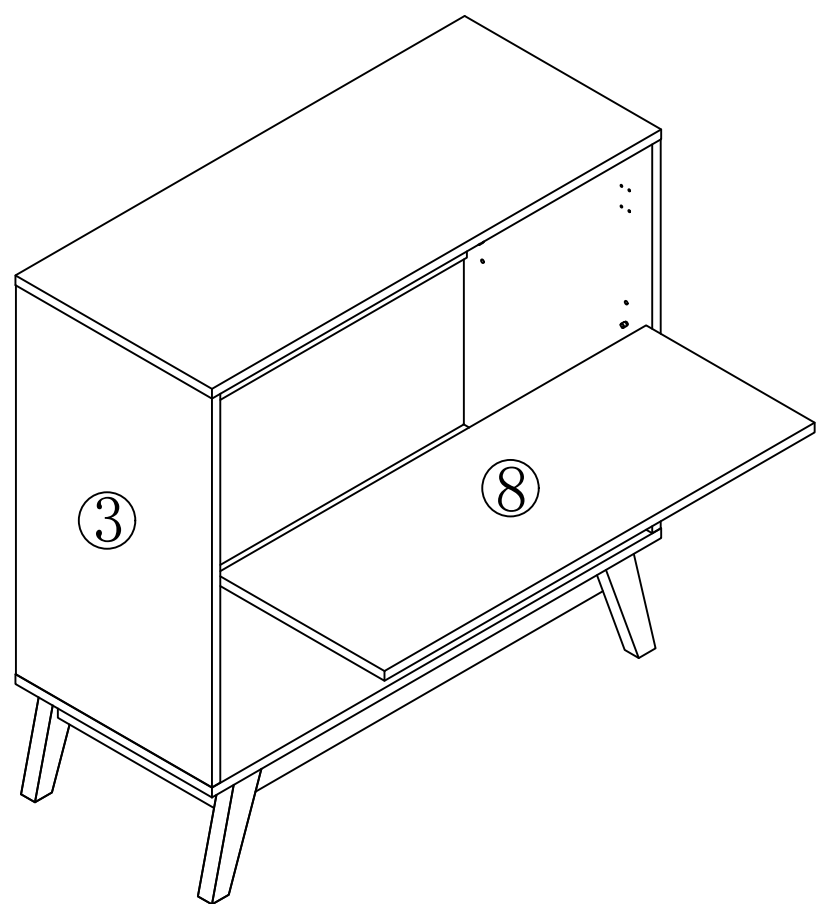



Step 15

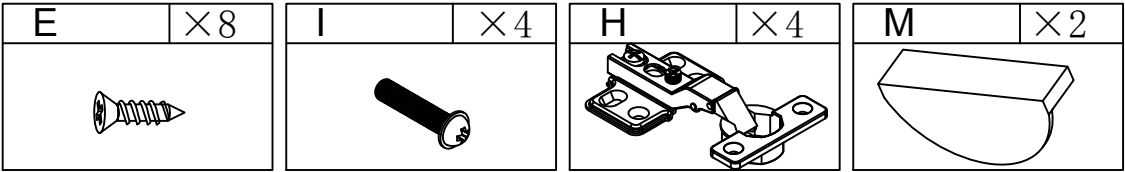E	×8	I	×4	H	×4	M	×2
							

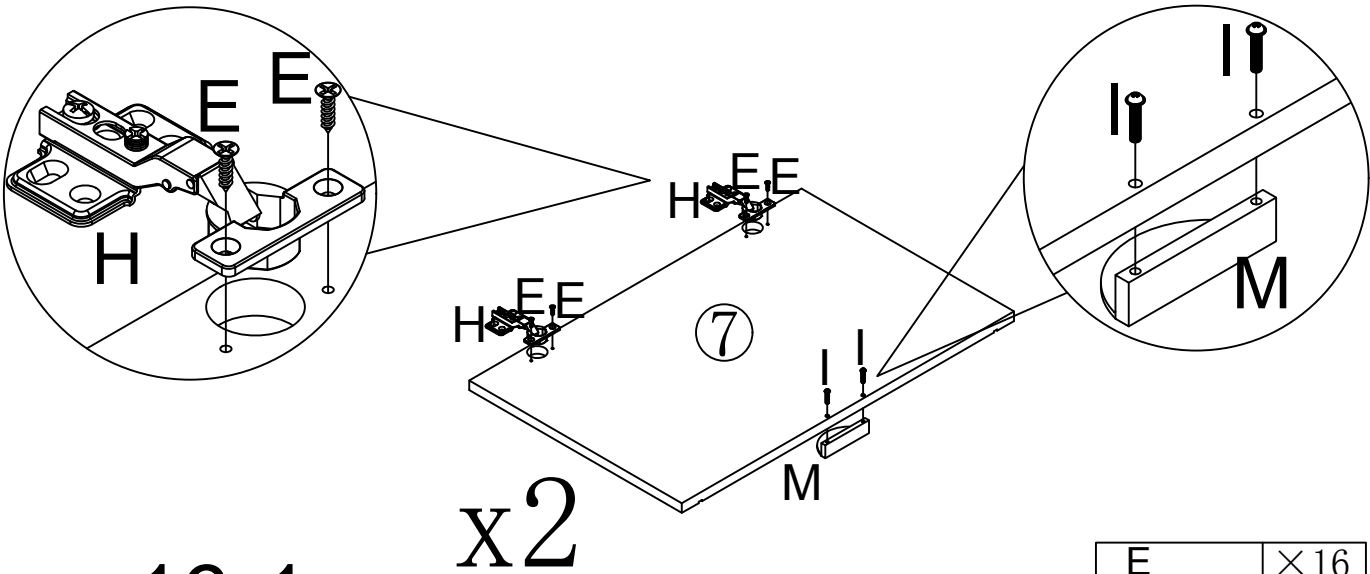


Step 16-1

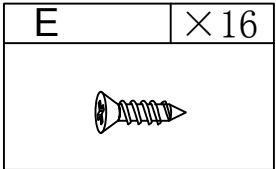E	×16
	

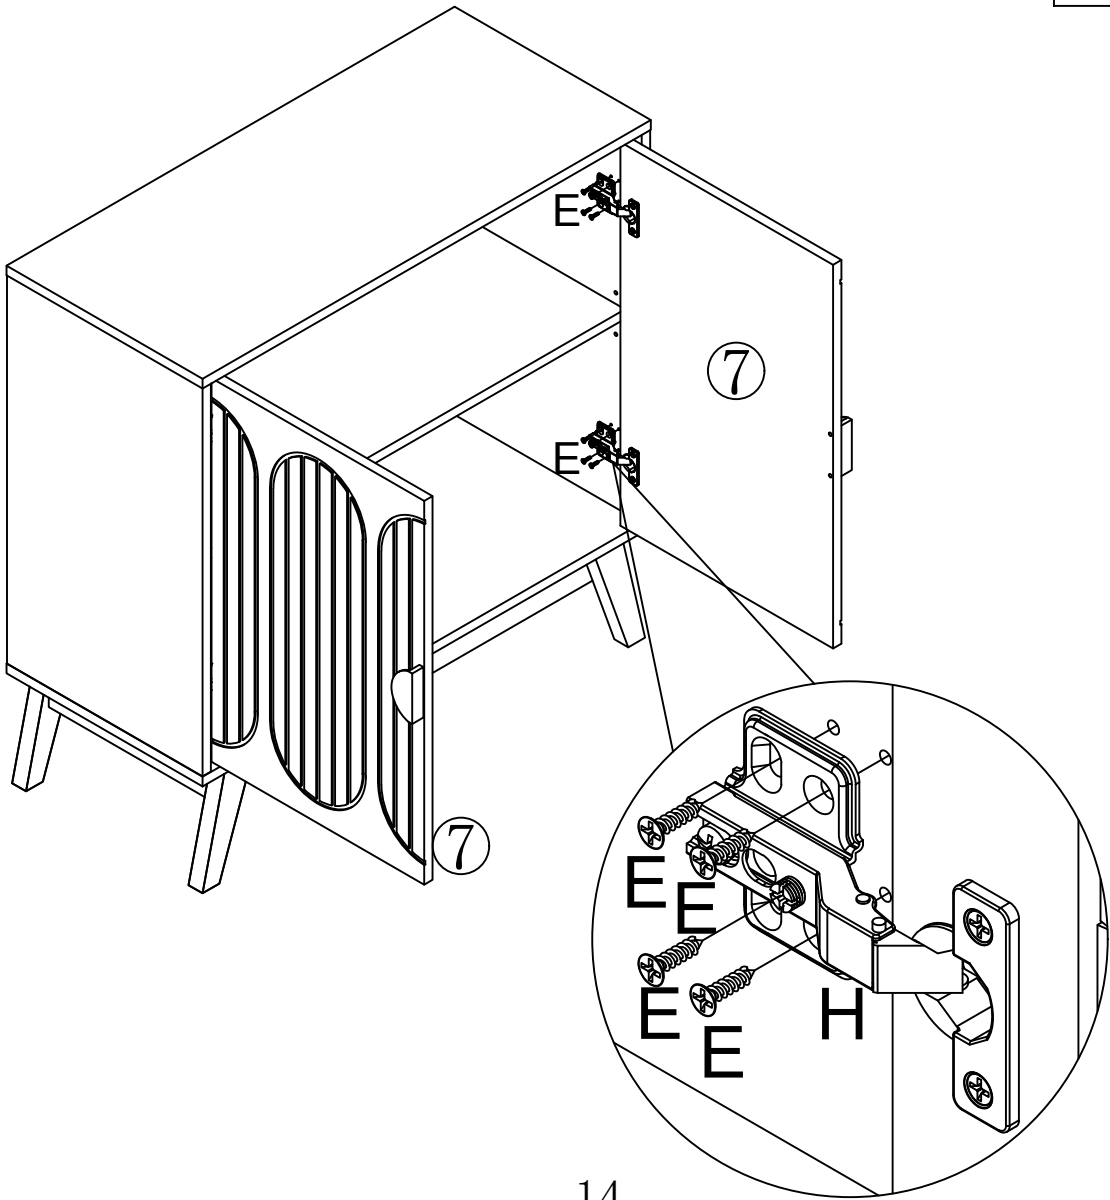



Step 16-2

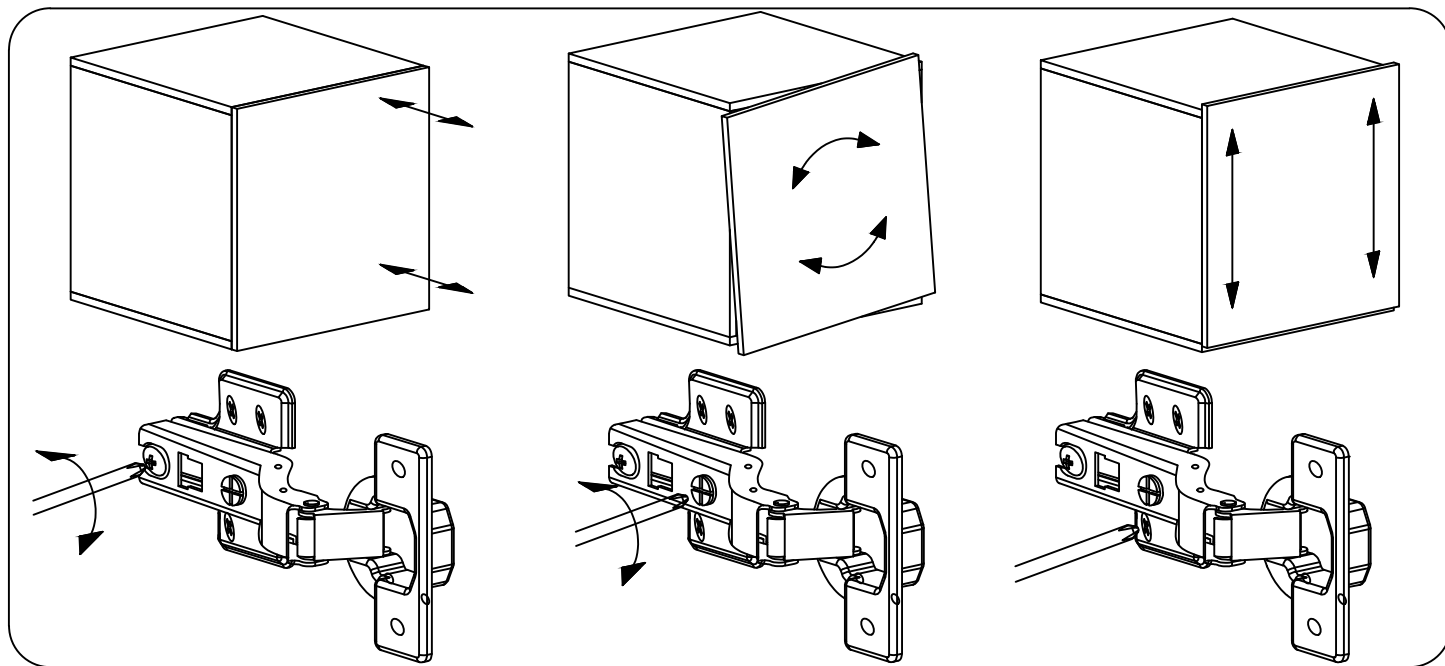

11


Step 17



E	×12	J	×12
			

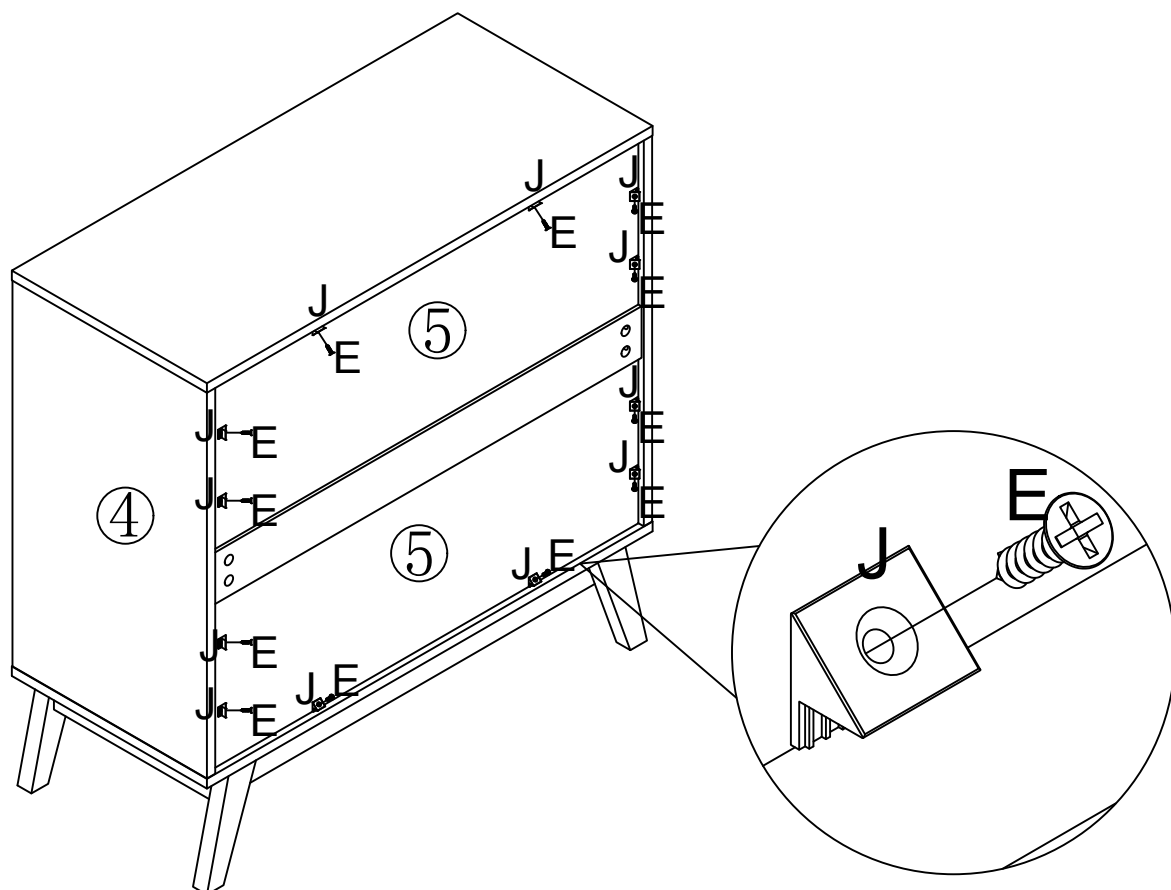


15

Step 18

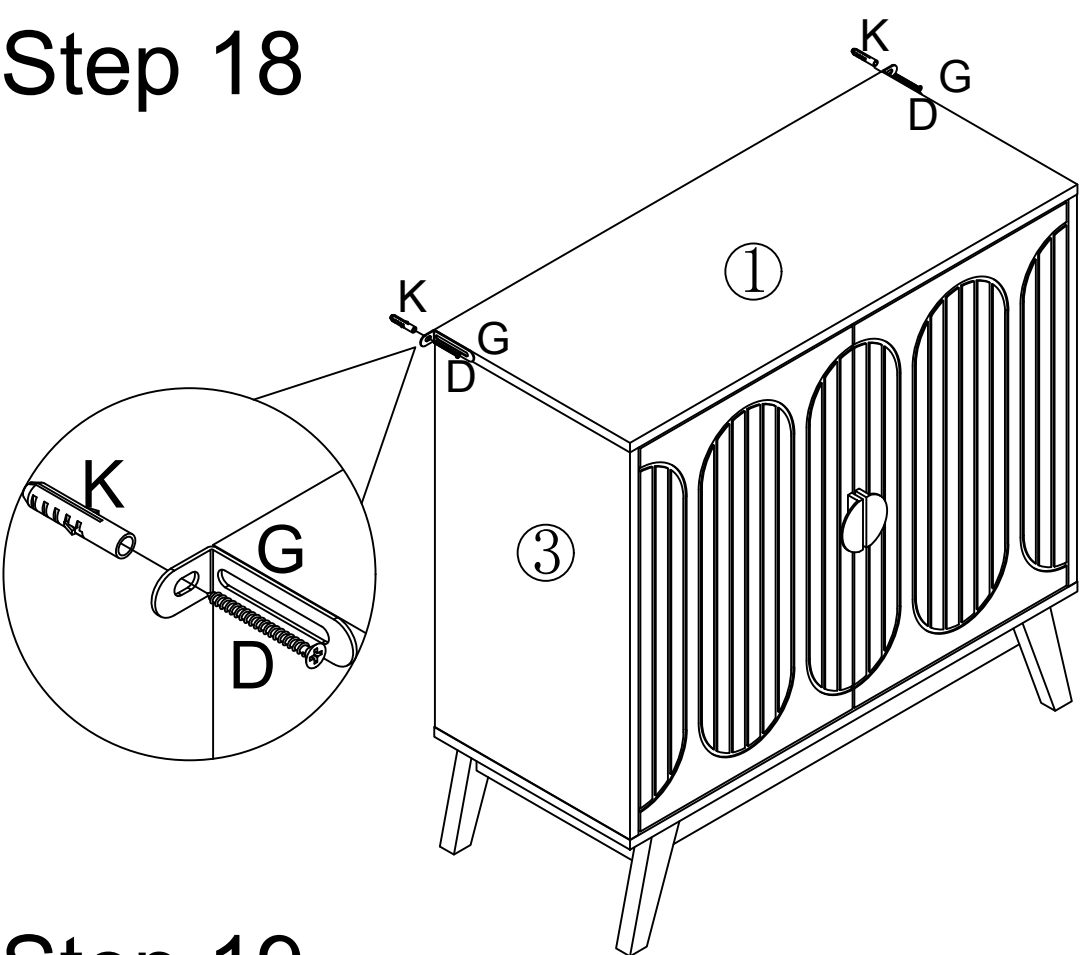

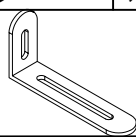D	×2
	
G	×2
	
K	×2
	

Step 19

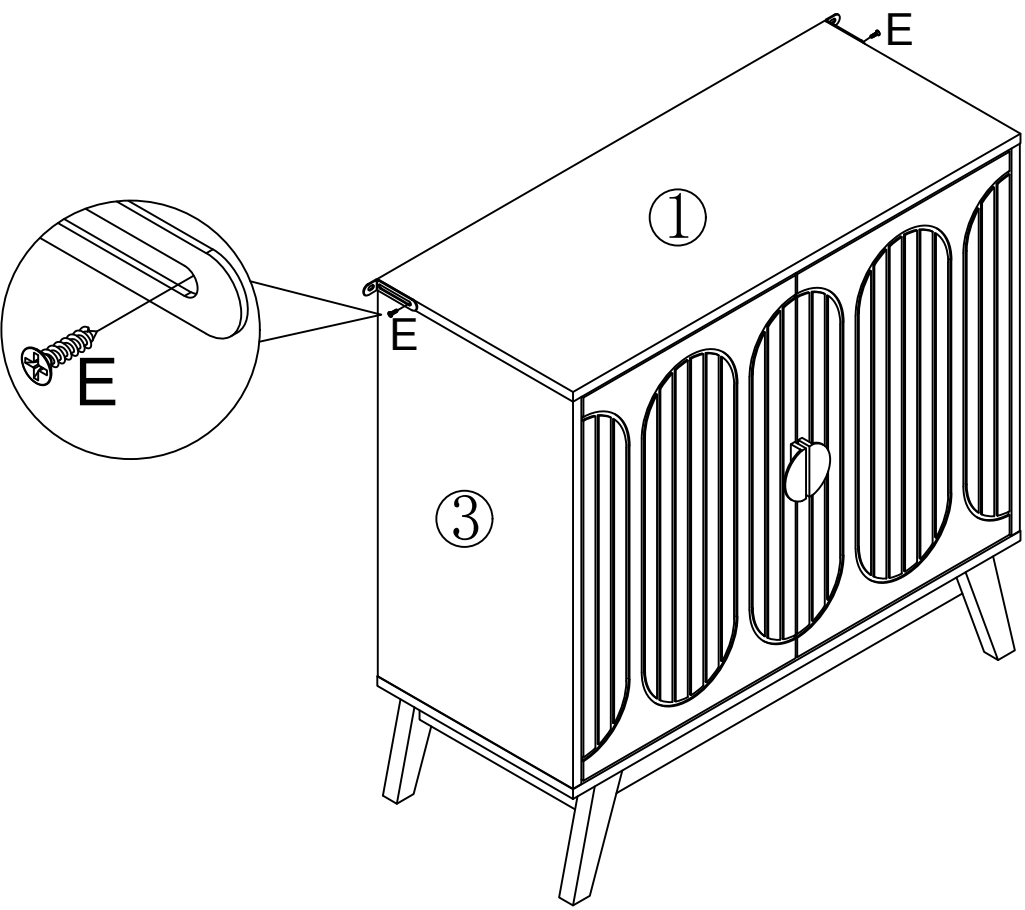

E	×2
	

Step 20

