

## Ottoman

(Unassembled kit)

### Tools required:


For your convenience we use Recex multi-drive, rust-resistant, zinc-plated hardware. Tools required are a #2 Philips or Robertson screwdriver.

### Package Contents:

- (a) Sides... 2
- (b) Slats... 9
- (c) Legs... 4
- (d) Side Rail...2

### Hardware:

- 1 ½" screw... 34
- Wood Spacer...2

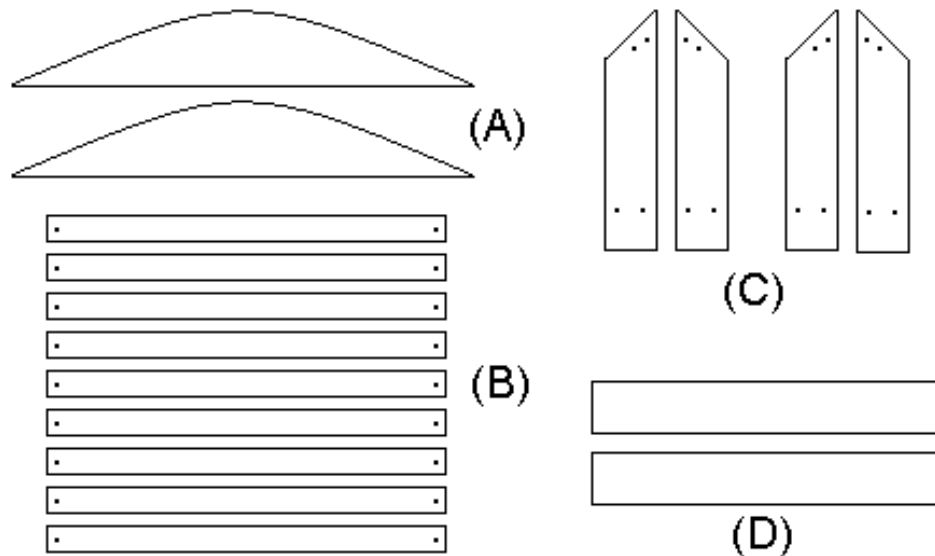

## Assembly

- Position 2 sides approx. 18" apart - make parallel to each other with **flat edge down**.
- Attach a slat across each end using 1-1/2" screws.
- Using 3/8" spacer; evenly space and attach remaining 7 slats.
- Build leg assembly by setting 2 legs approx. 15" apart - with higher point facing in (as shown).
- Set Side Rail across legs. Use wood spacer to measure 1" up from bottom of each leg and attach side rail using 1-1/2" screws. (repeat for other leg assembly)
- Turn ottoman top over, and attach leg assembly to inside of ottoman.

