


SUNCOZE

TV CONSOLE WITH STORAGE

Assembly Instruction

FTH1003 V2

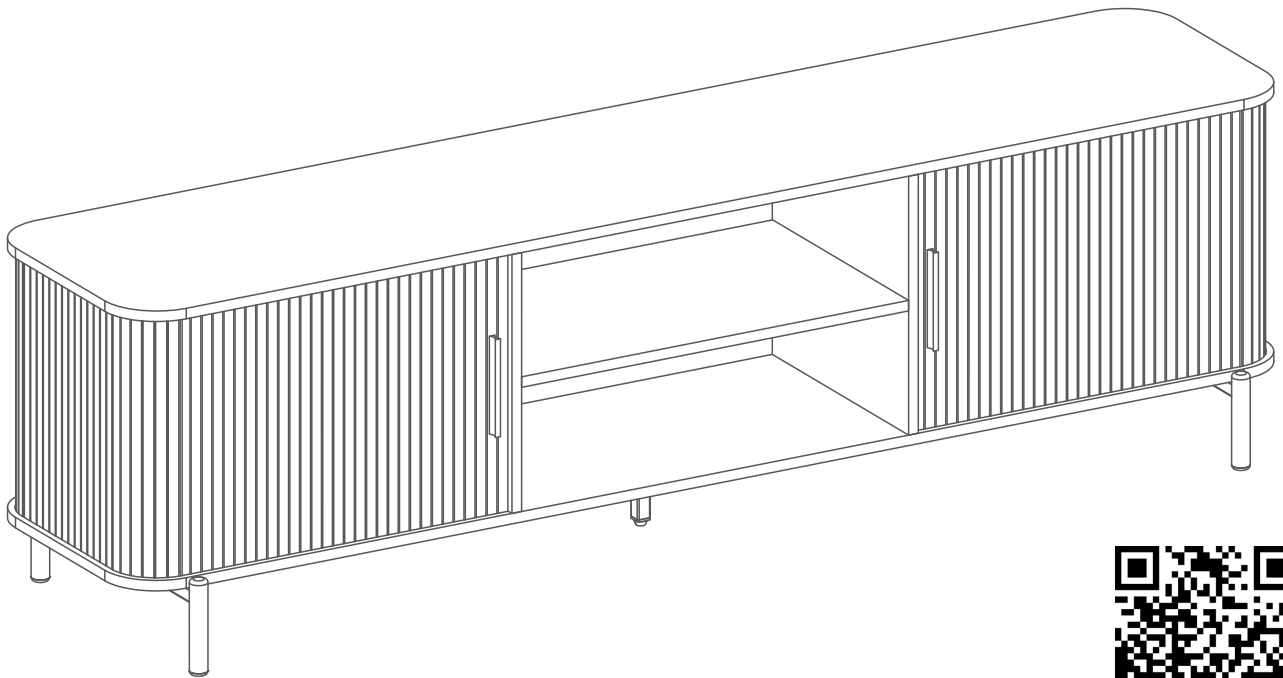

Installation Video

*Live Bright ☺
Stay Cozy*

- We care about every customer's shopping experience and will help you solve the problem until satisfied !
- Any questions please contact us at support@suncoze.com.

CUSTOMER SERVICE LETTER

We care about every customer's shopping experience and will help you solve the problem until satisfied !

Chat us immediately if have any concerns with following information (such as damaged part, missing part, installation problem, wrong product)

1. Order platform and order number
2. Product name and SKU
3. Detailed photos if have




support@suncoze.com


INSTALLATION AND USAGE NOTES

1. Please check the manual carefully and make sure you have received all the parts.
2. If there is any missing part, please let us know the letter of the parts you need.
3. If there is any damage part, please send clear photos to us, we will check and offer you best solution.
4. Please follow the manual to assemble the items correctly.
5. Do not make the screws too loose or too tight.
6. The accessory bag contains some small accessories, which should be kept way from children.
7. Kids are not allow to climb or play with the product for safety reasons.


PACKAGE CONTENTS

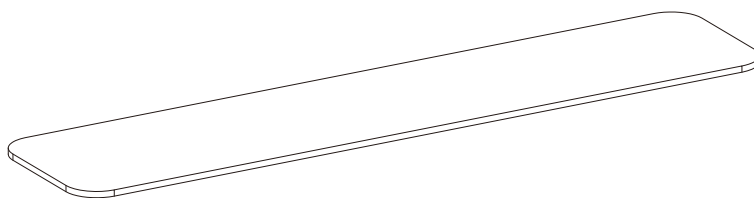


① (x1)

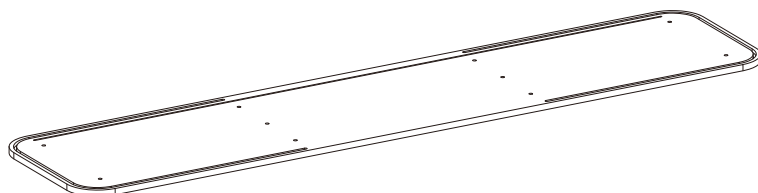


② (x1)

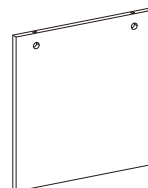


③ (x1)

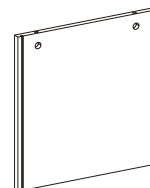

④ (x1)

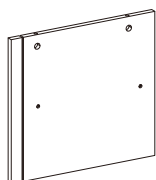


⑤ (x1)

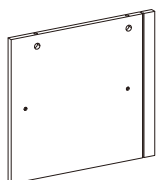


⑥ (x1)




⑦ (x1)

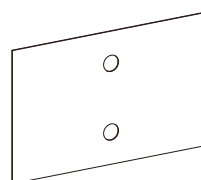


⑧ (x1)

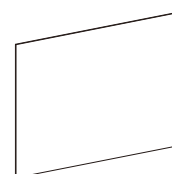


⑨ (x2)

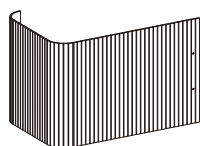

⑩ (x2)

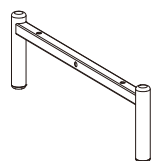

⑪ (x2)

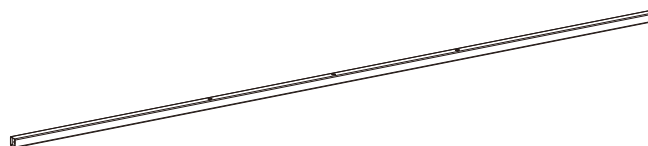


⑫ (x1)




⑬ (x1)



Ⓐ (x4)
M4x8




Ⓑ (x4)
Ø4x35




Ⓒ (x6)
M6x30



Ⓓ (x8)
Ø6x36



Ⓔ (x2)
M6x40



Ⓕ (x1)
M6x40




Ⓖ (x8)
Ø7.8x38




Ⓗ (x8)
Ø15




Ⓘ (x1)
Ø19




Ⓙ (x2)
150mm




Ⓚ (x1)
4mm



Ⓛ (x1)




Ⓜ (x1)

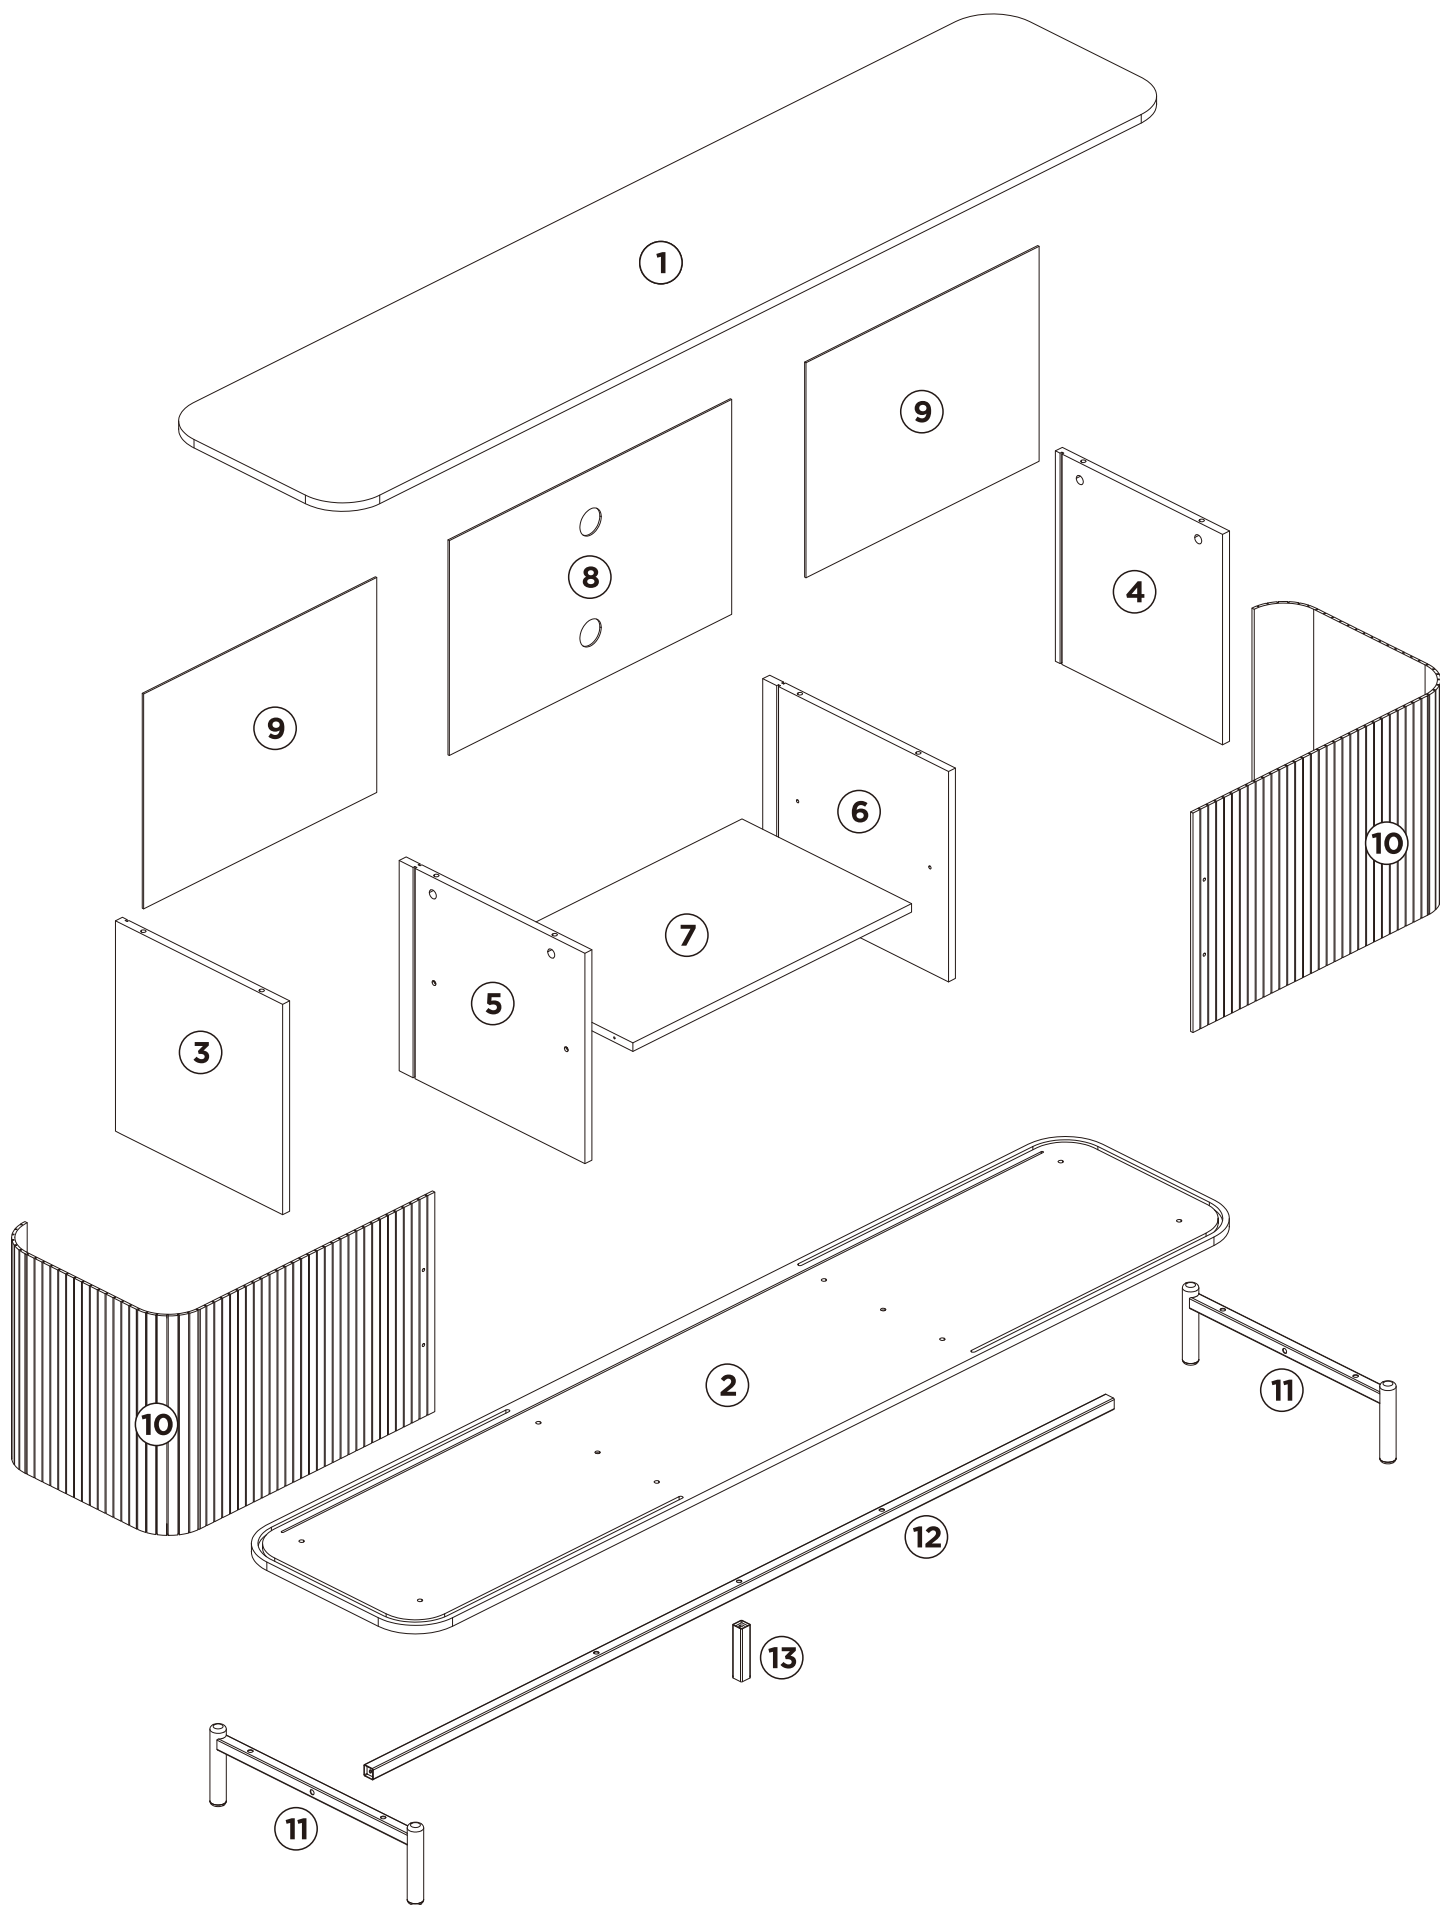


1



M x1

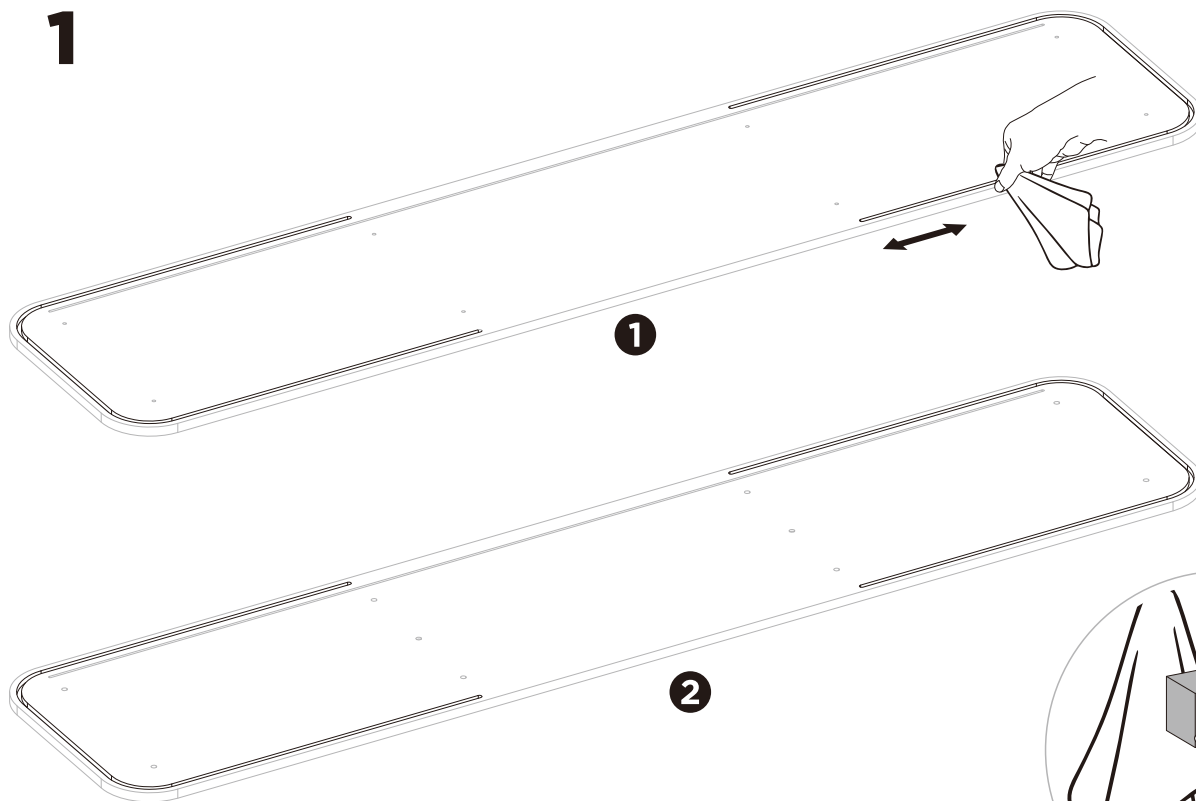



Note: For optimal performance, before installation, apply wax block **M** to a cloth and use the cloth to lubricate the sliding grooves of parts **1** and **2**.

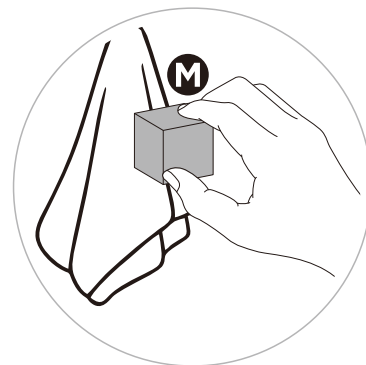

2




B x4

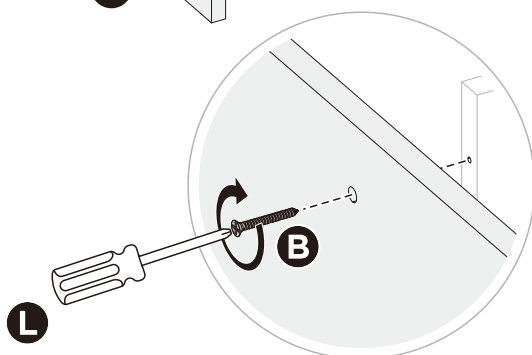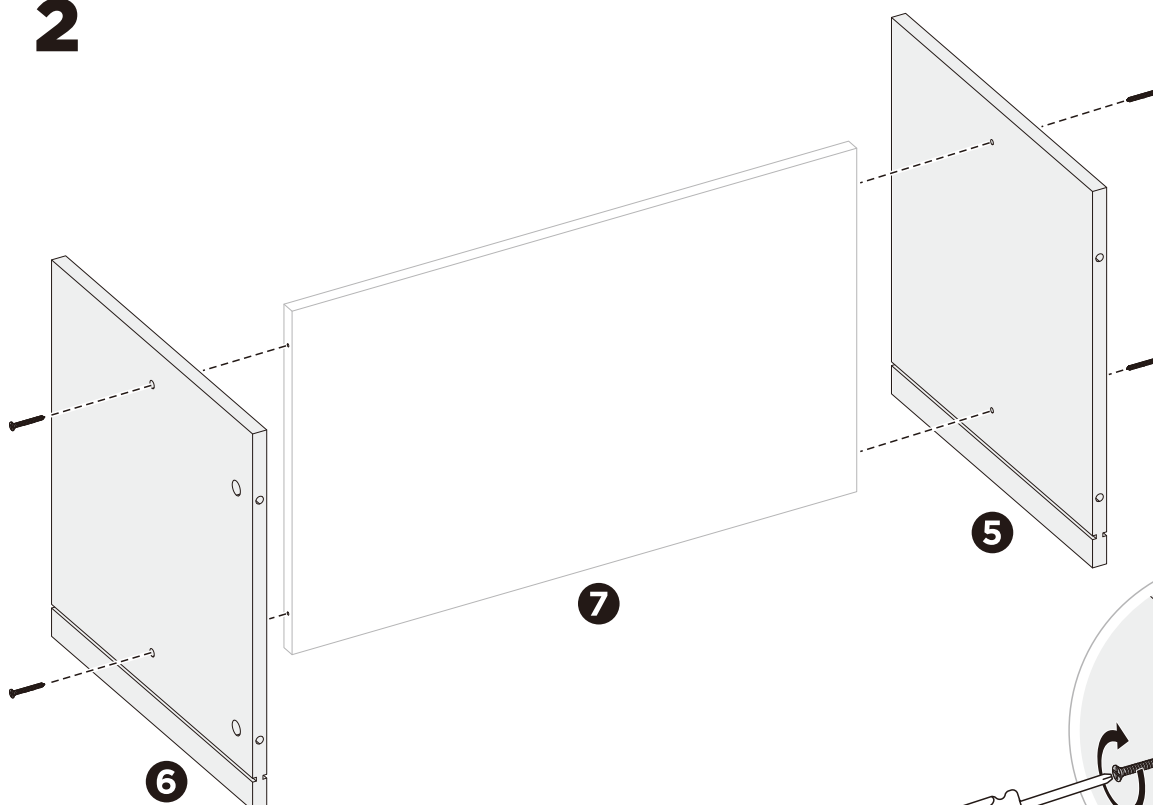


3

 **G** x8



Note: Panels **1** and **2** both have back panel grooves. Ensure the groove orientation is correct as shown during installation.

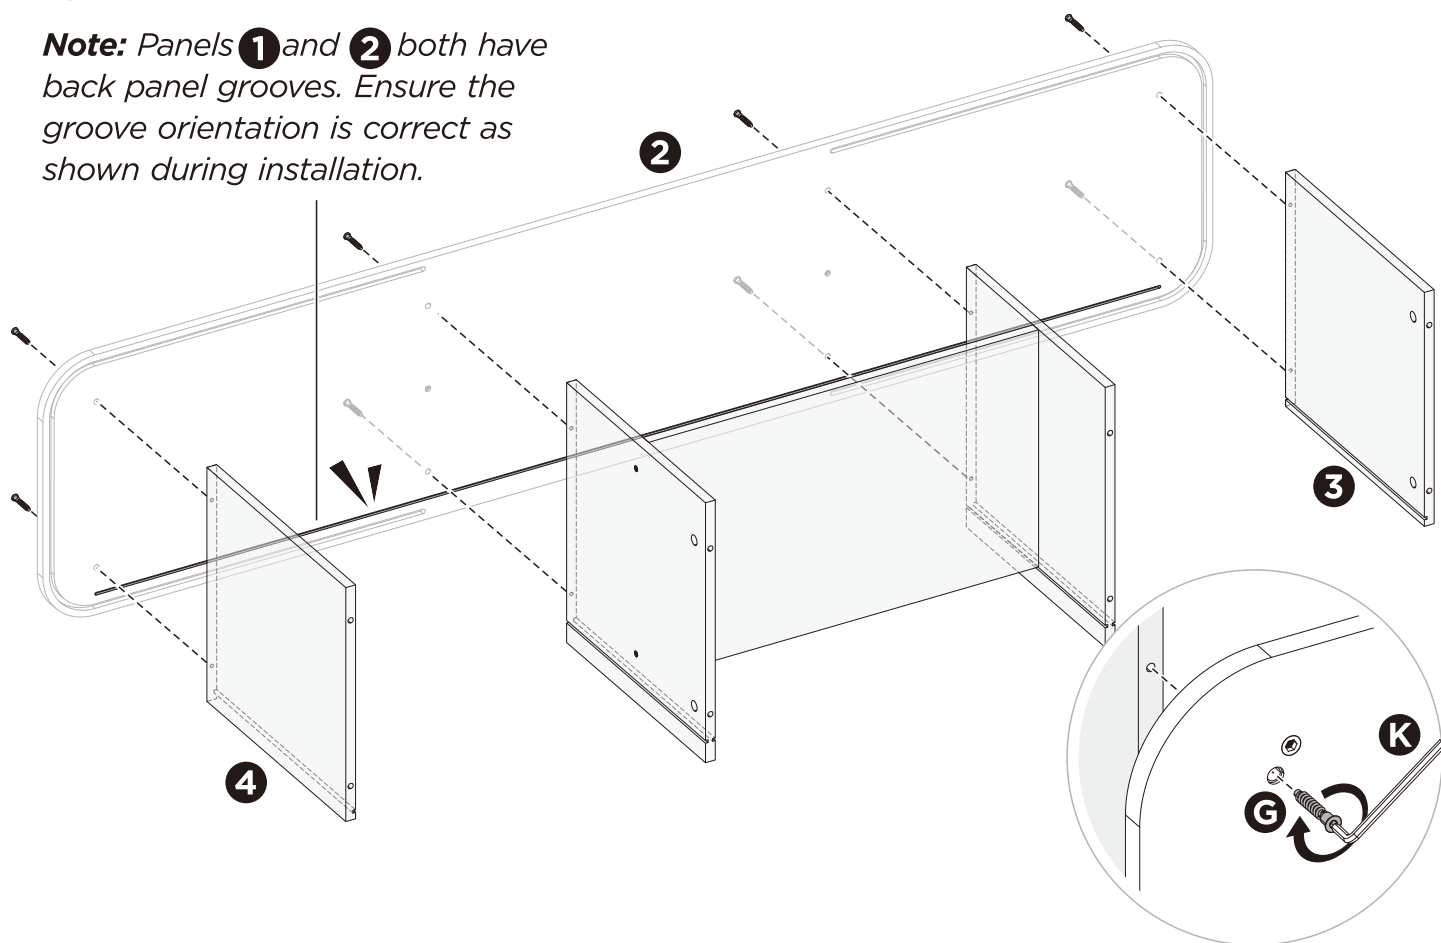



4

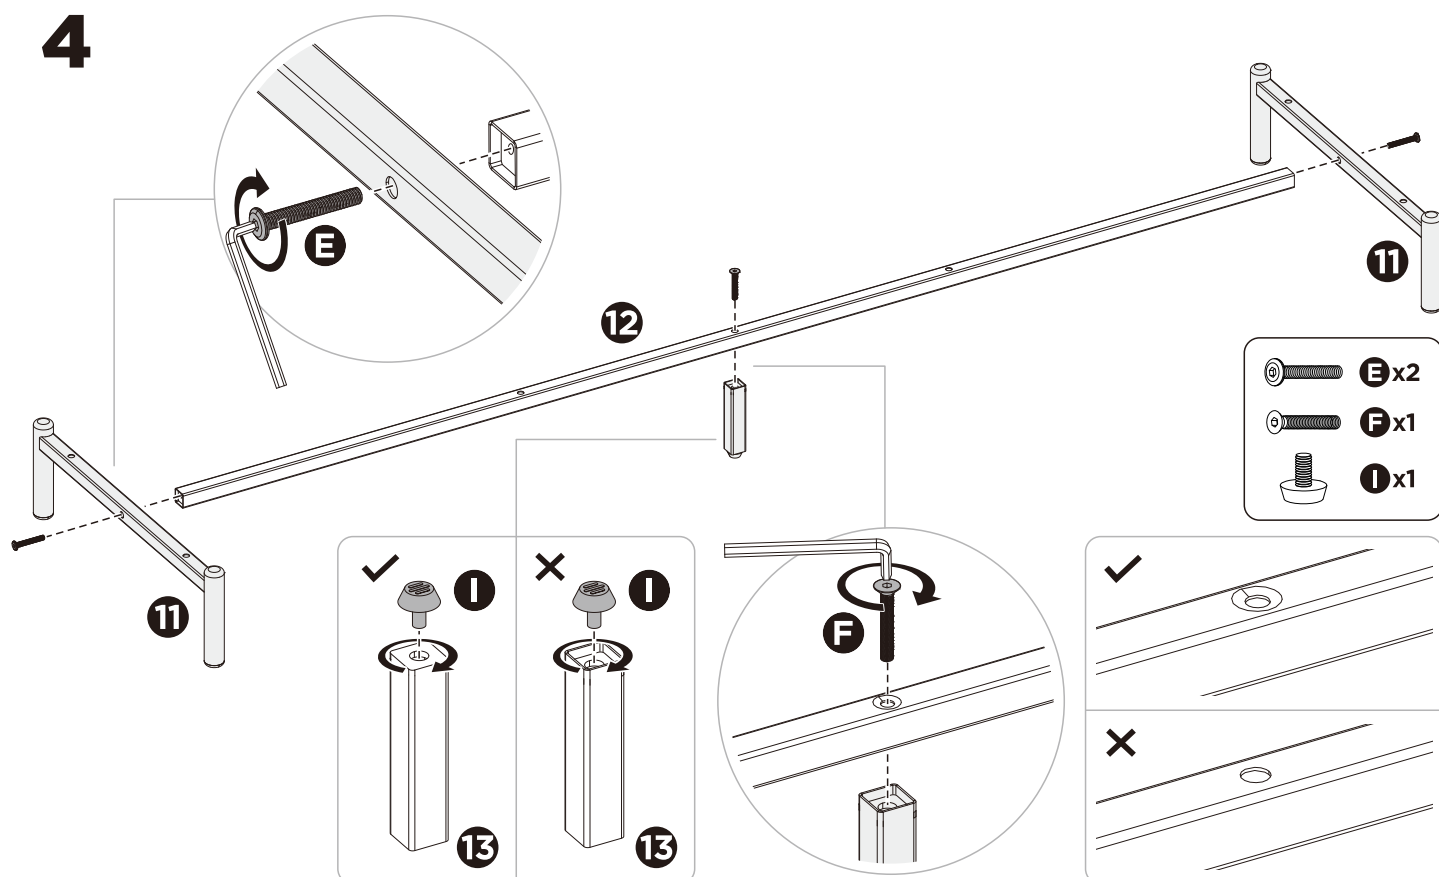


5

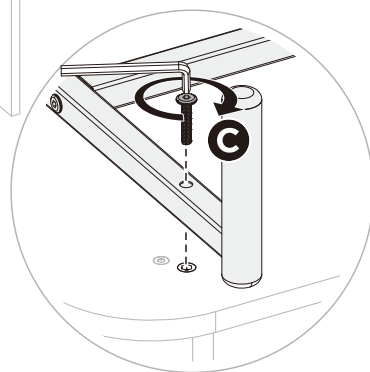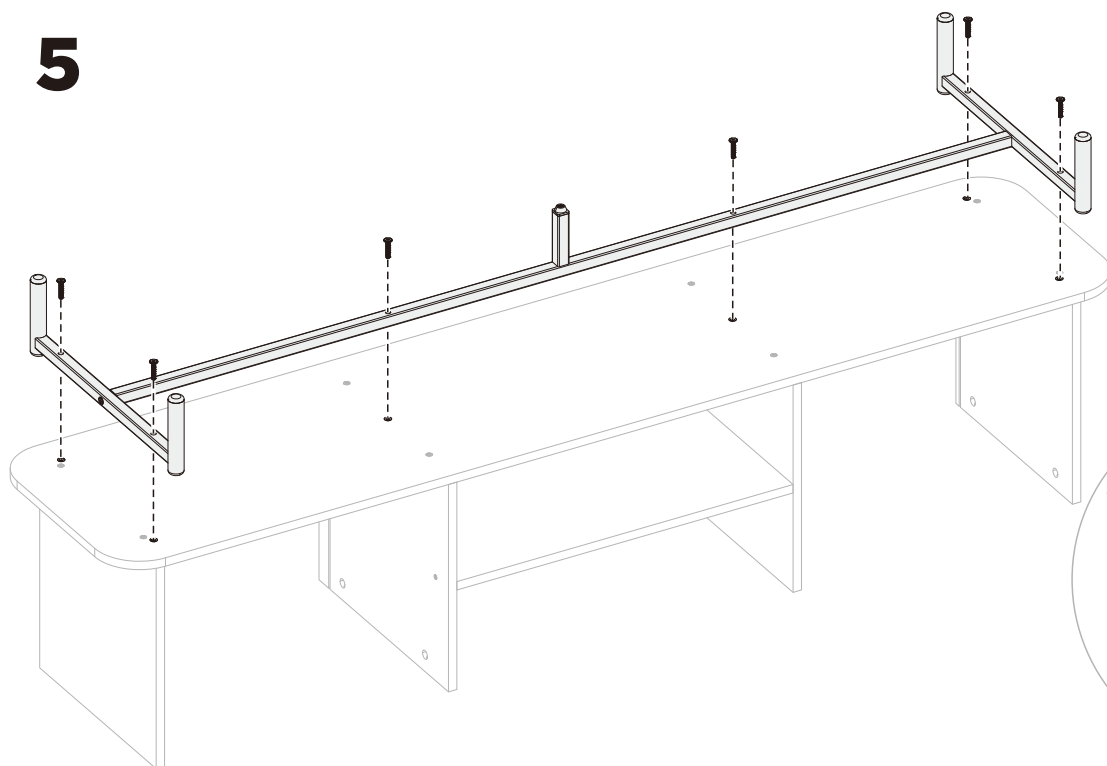

6

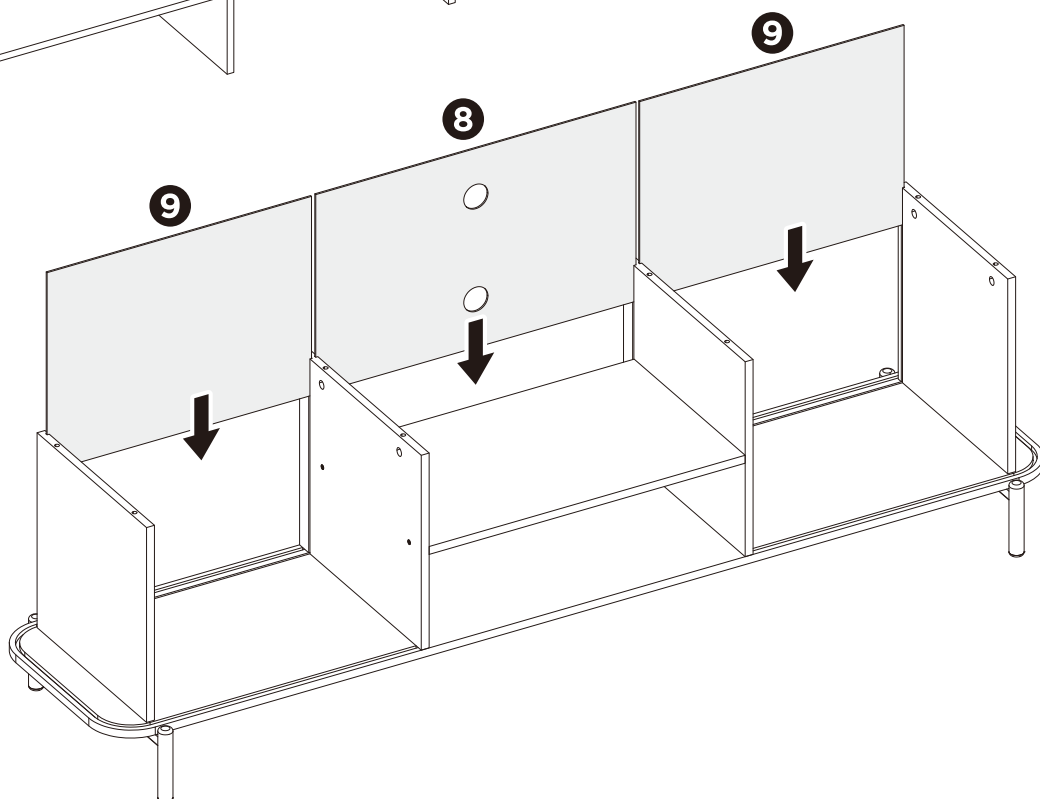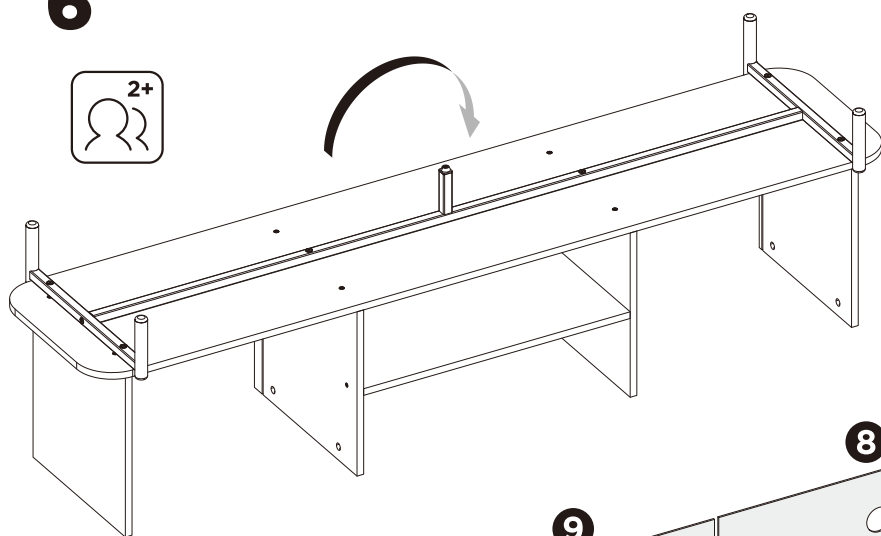


7

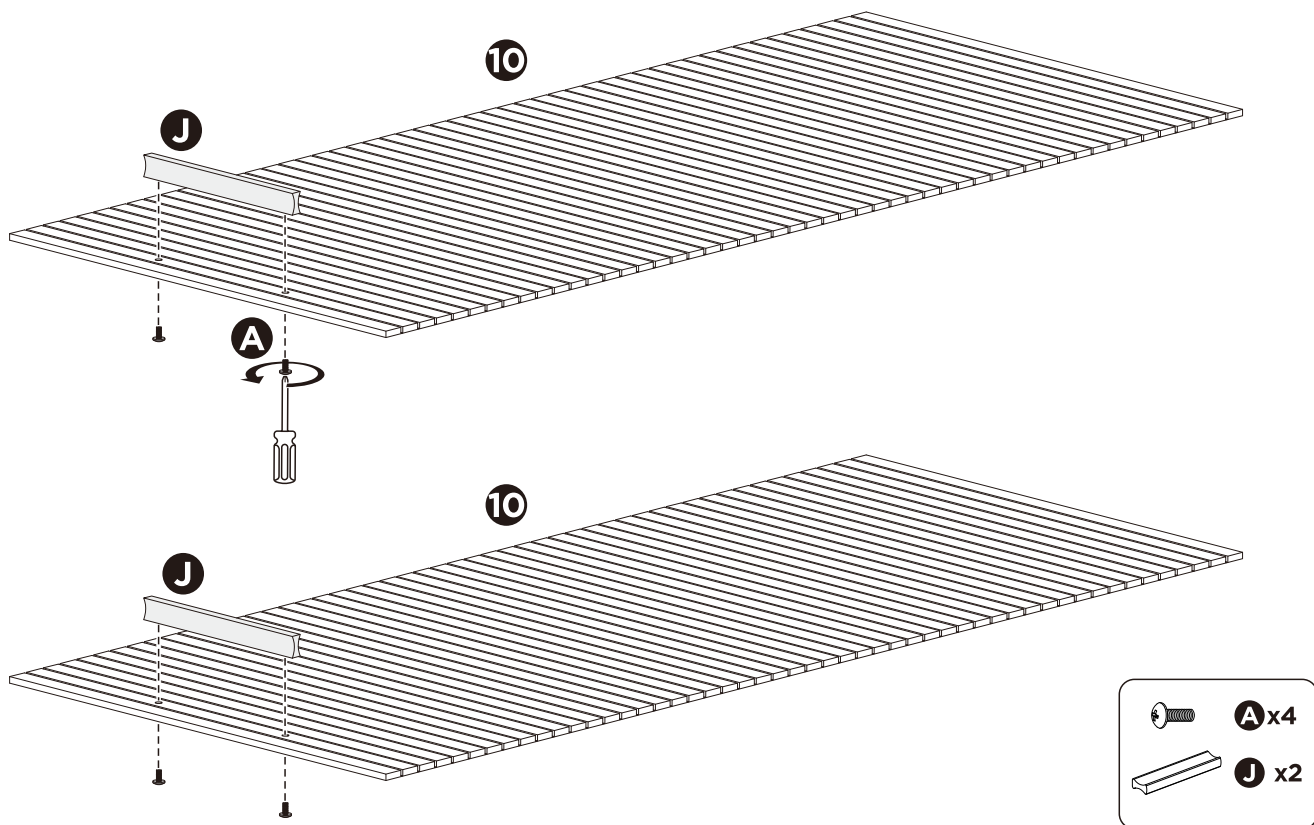


8



Note: Ensure the cabinet door and back panel are fully engaged into the slide rails.

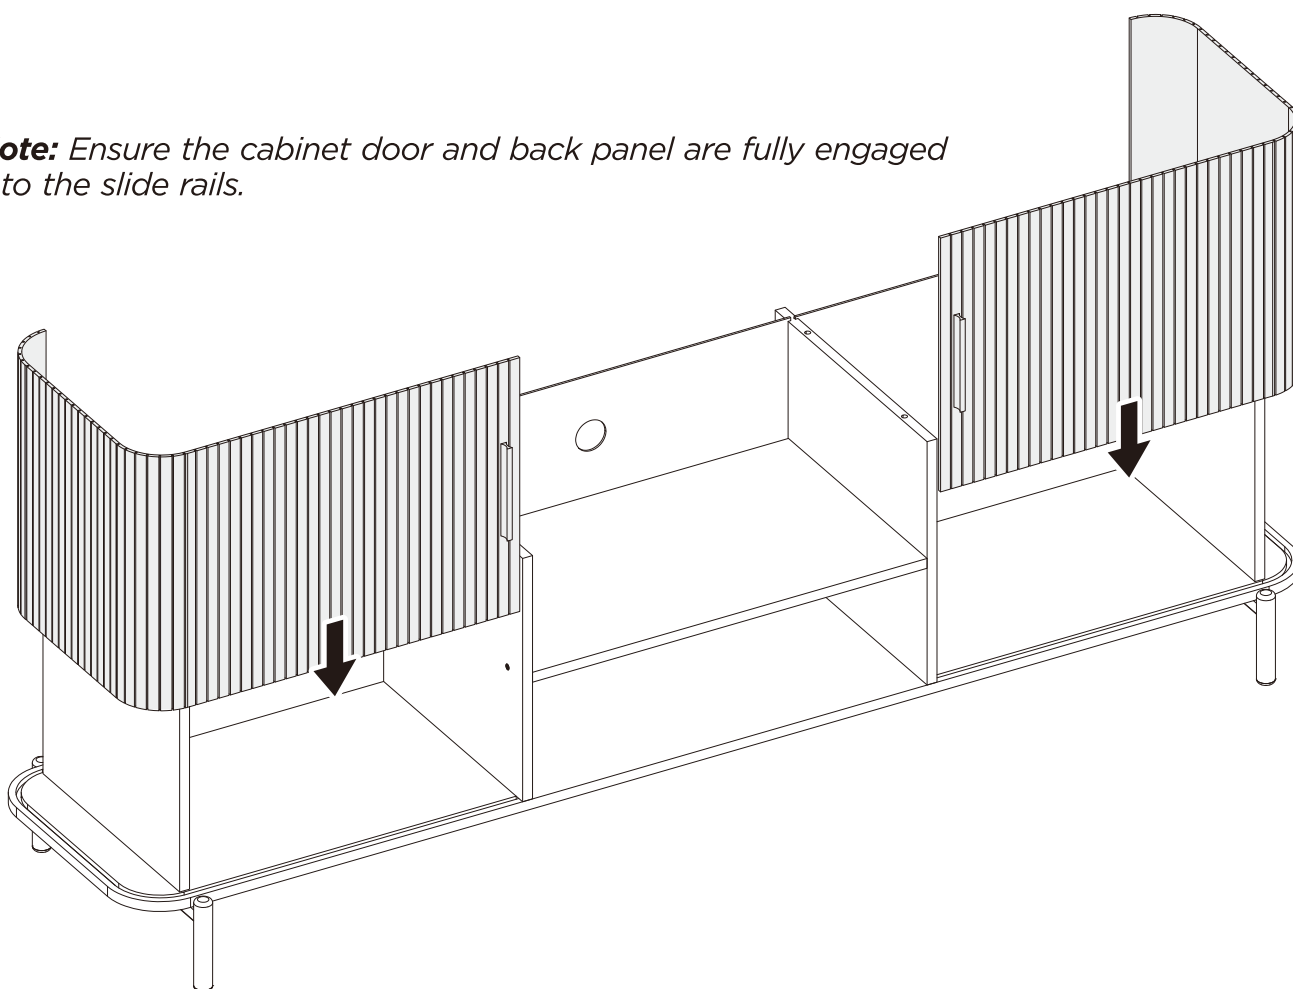

9


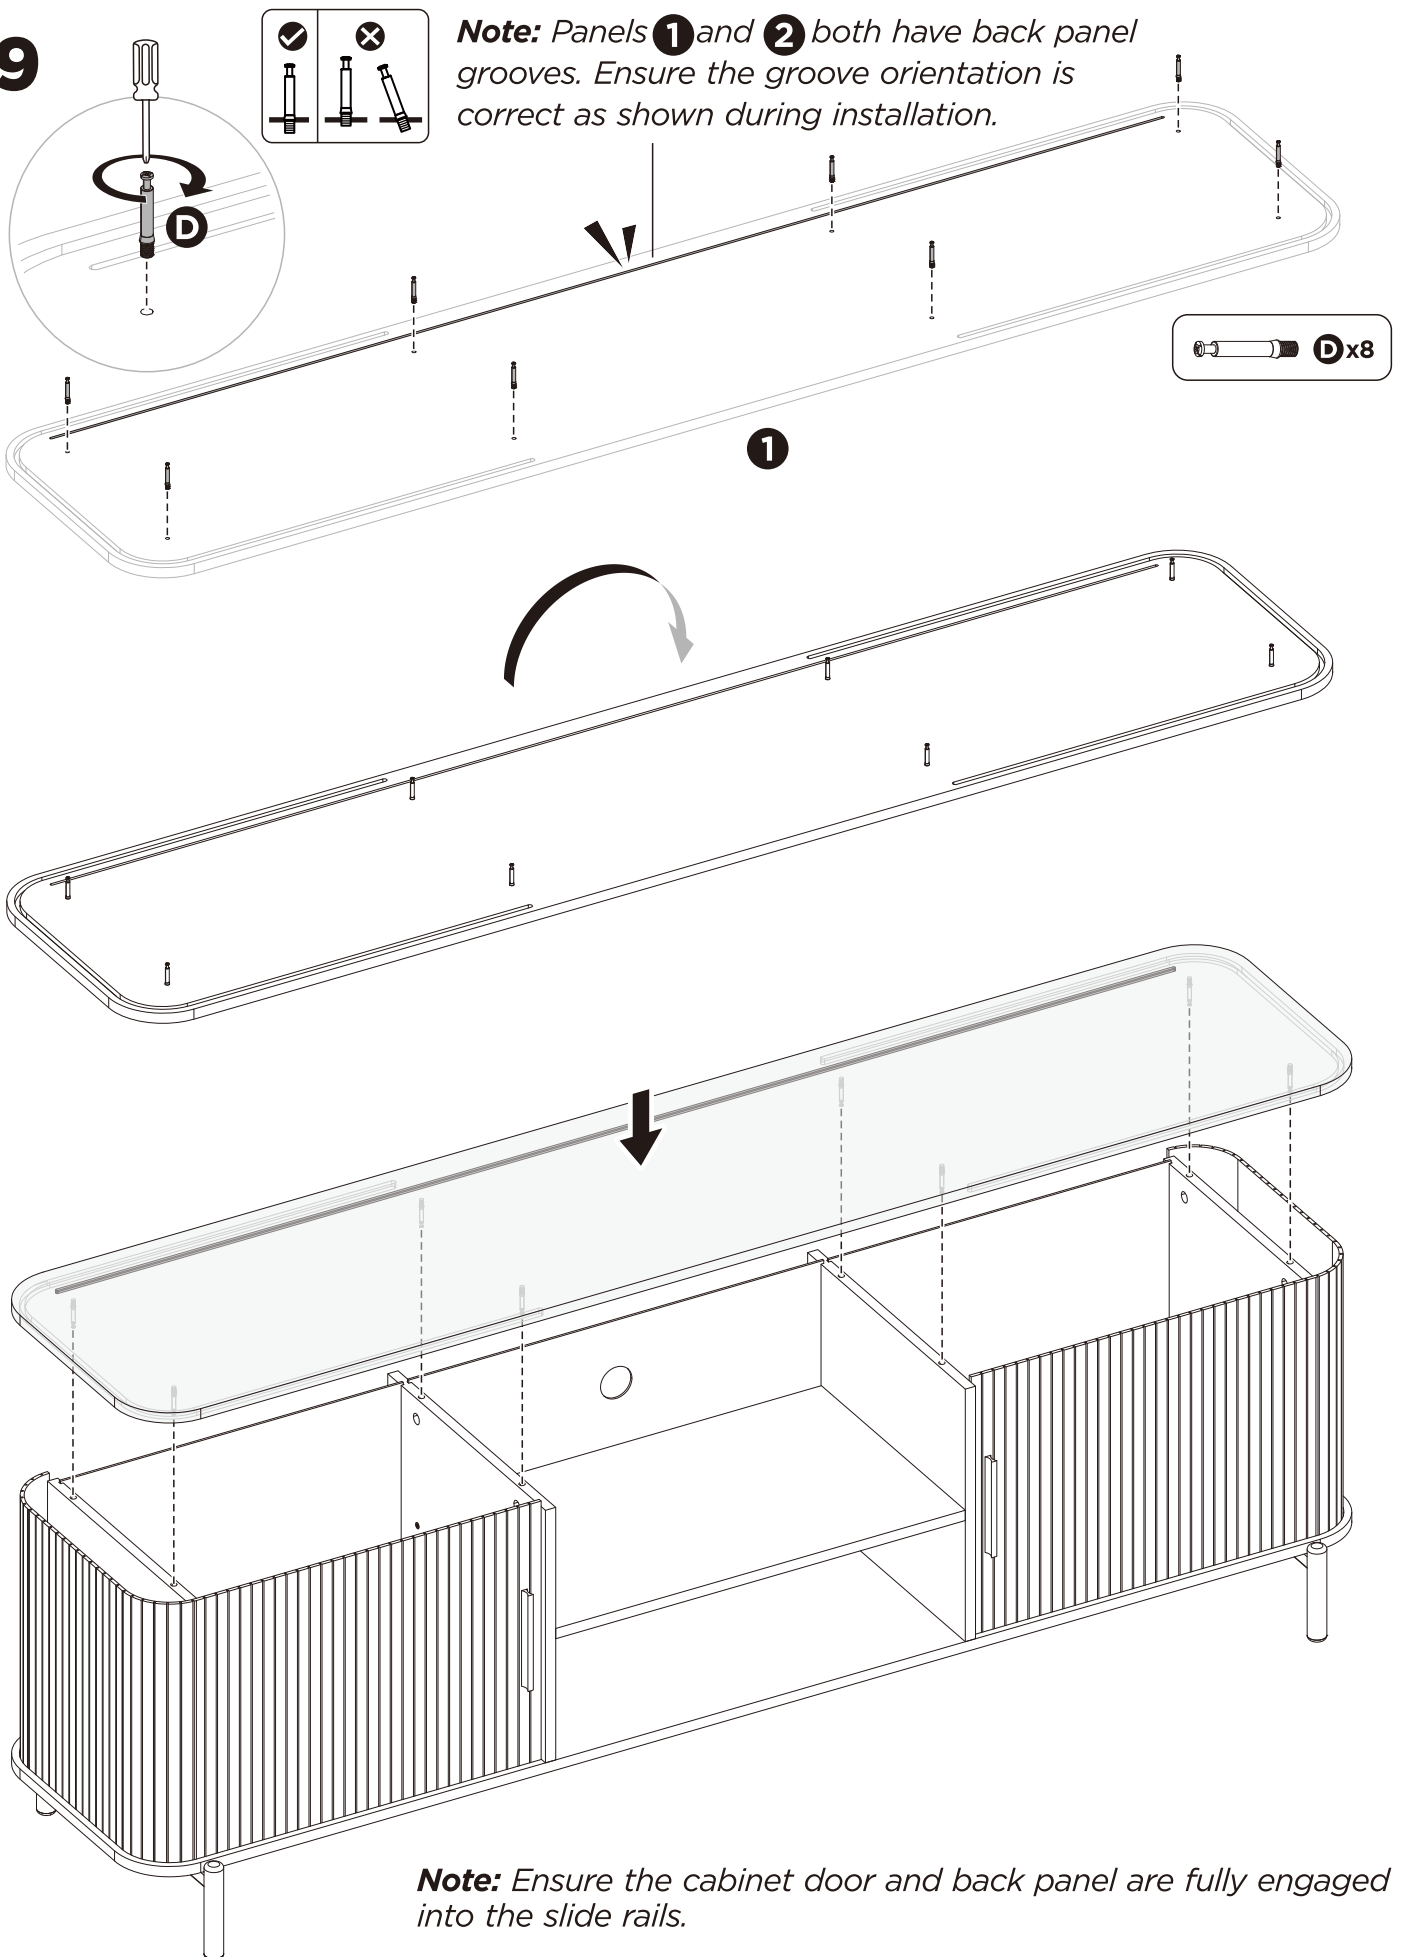


10

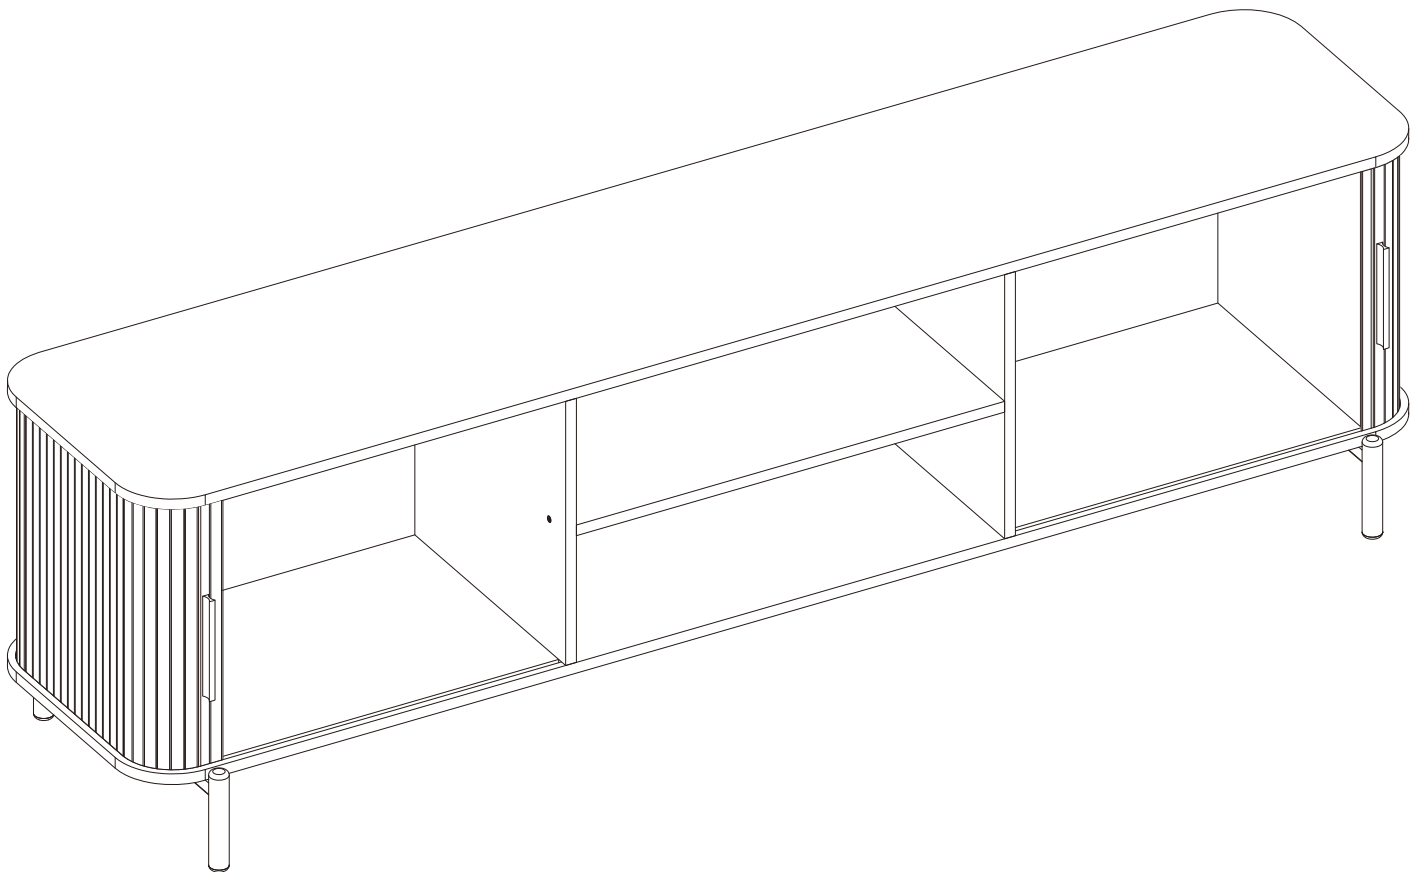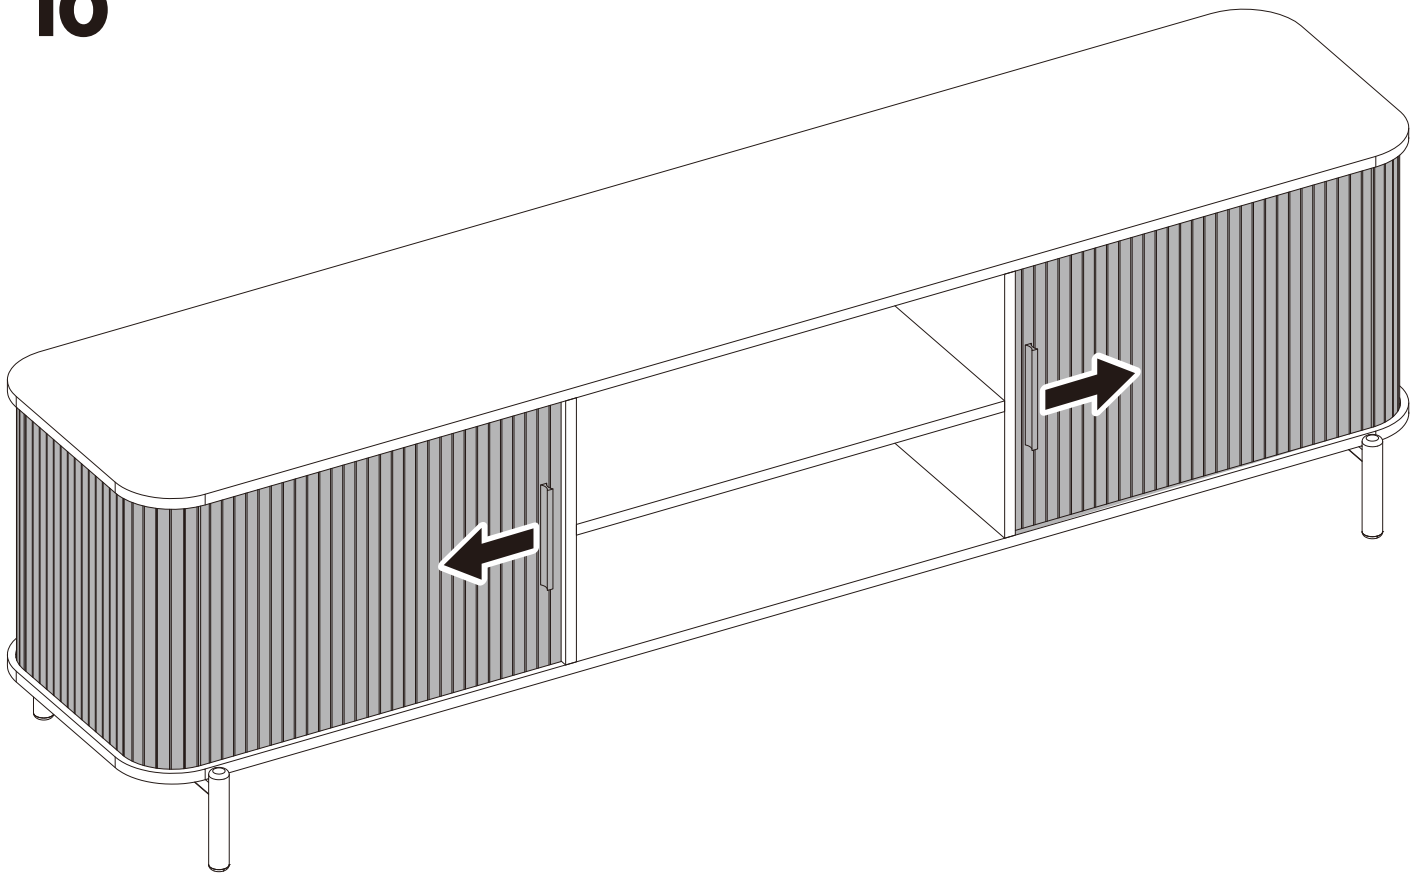

11

H x8

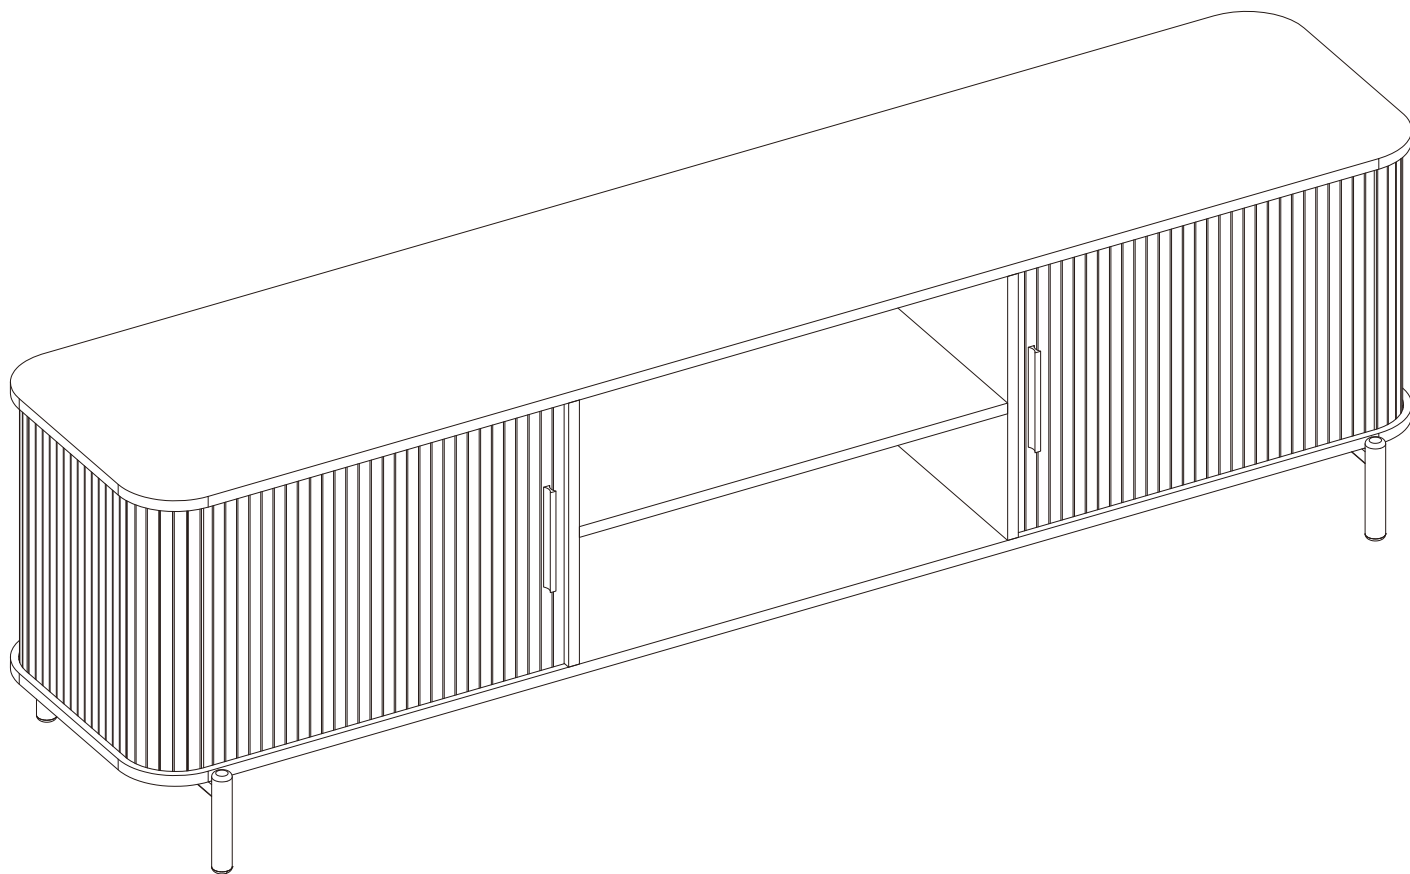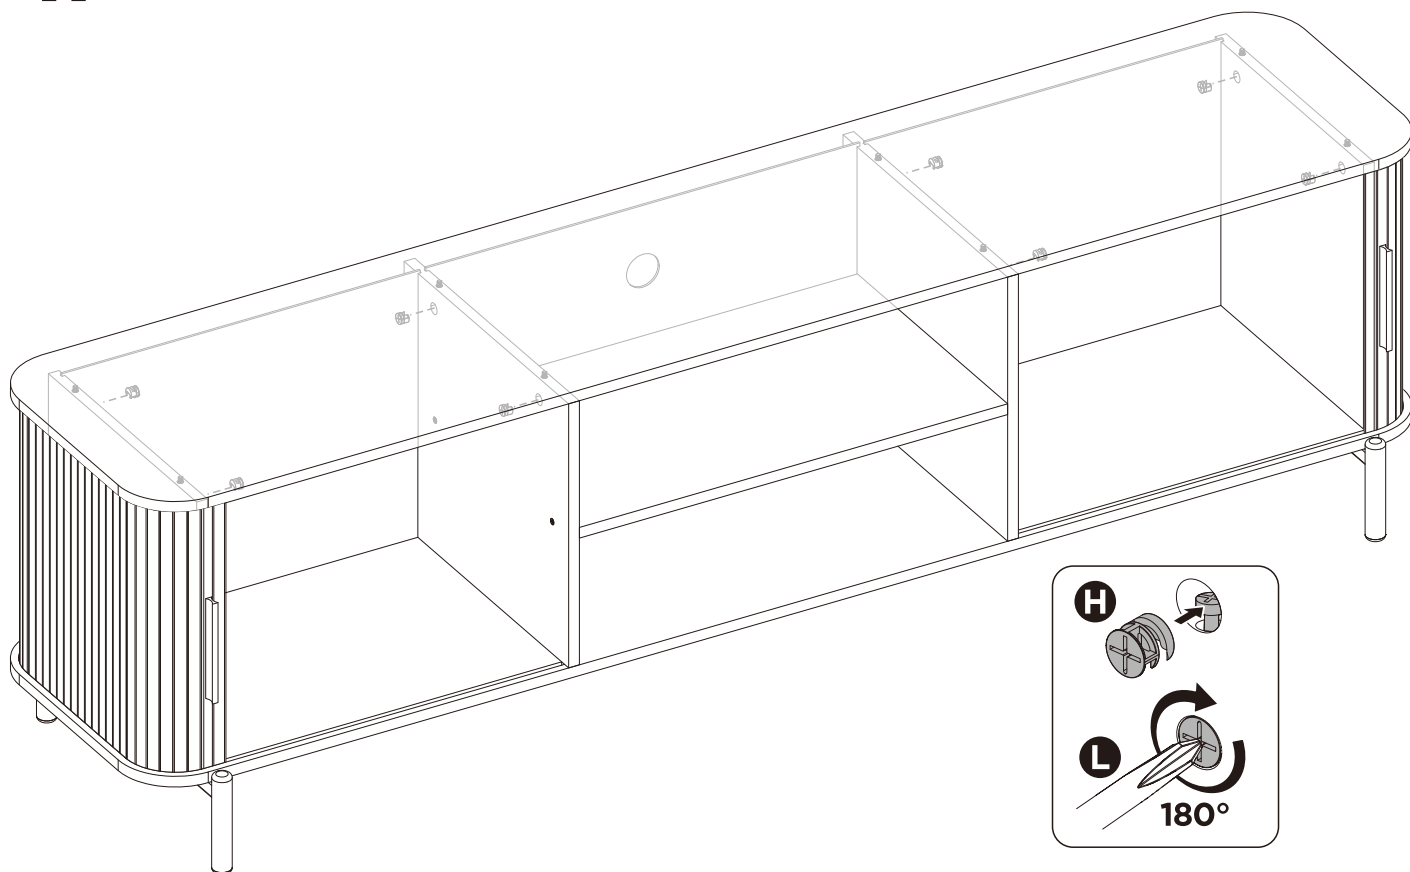

Need Help? Contact Us First!

We're here to ensure your planting success.



support@suncoze.com