







































Packing list		
Box A		
serial number	Number of layers	The item number
1	1-1	WA-03
2	2-1	WA-03
3	3-1	WA-03
4	4-1	FA-01
5	5-1	FA-01
6	6-1	FA-02
7	7-1	WA-08
8	8-1	WA-04
9	8-2	JTMB-WA-01
10	9-1	WA-04
11	9-2	JTMB-WA-03
12	10-1	WA-09
13	10-2	WA-09
14	10-3	WA-09
15	10-4	WA-09
16	11-1	WA-01
17	12-1	WA-01
18	13-1	WA-01
19	14-1	WA-01
20	15-1	WA-01
21	16-1	WA-01
22	17-1	WA-01
23	18-1	WA-02
Box B		
serial number	Number of layers	The item number
1	1-1	RA-01
2	2-1	RA-01
3	3-1	RA-02
4	4-1	WA-01
5	5-1	WA-01
6	6-1	WA-01
7	7-1	WA-01
8	8-1	WA-01
9	9-1	WA-01
10	10-1	WA-01
11	11-1	WA-01
12	12-1	JTMB-WA-02

13	13-1	JTMK-WC-01、JTMK-WC-02、JTMK-WC-03、JTMB-WC-01、JTMB-WC-02、JTMB-WC-03、WB-01、WB-02、WB-03、WB-04、WC-01
----	------	-------------------------------------------------------------------------------------------------



Box C

serial number	The item number	Quantity/set
1	JTRB-04	2/套
2	JTRB-02	4/套
3	JTFB-01	4/套
4	WD-03	2/套
5	WD-01	2/套
6	WD-02	1/套
7	KYN28A-12	1/套
8	JTMK-WC-04	4/套


List of Materials

NO.	PART.	Qty.		NO.	PART.	Qty.
WA-08		2		RB-01		2
FA-01		3		RB-02		4
FA-02		1		JTRB-02		4
WA-01		15		JTRB-04		2
WA-02		1		JTMK-WC-01		1
WA-03		4		JTMK-WC-02		2
WA-04		1		JTMK-WC-03		1
WA-06		1		JTMK-WC-04		4
WA-09		4		JTMB-WC-01		2
JTMB-WA-01		1		JTMB-WC-02		2
JTMB-WA-02		2		WD-03		2
JTMB-WA-03		1		WD-01		2
RA-01		2		WD-02		1
RA-02		1		ST4.2X20		106
JTFB-01		4		ST4.2X12		54
WB-02		2		ST4.2X26		20
WB-03		2		STYW4.2X12		26
WB-01		4		JTTY-D-01		1
WB-04		2				
WC-01		2				




flooring components

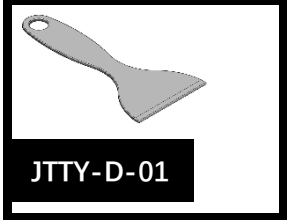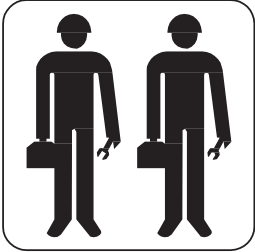


Note: The crease line of the floor must be underneath

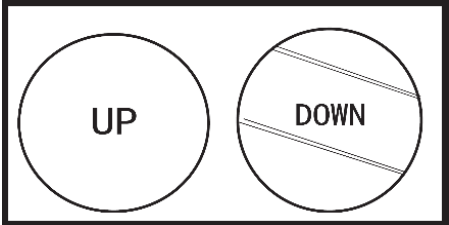

Use a spatula to make it easier to insert the panel


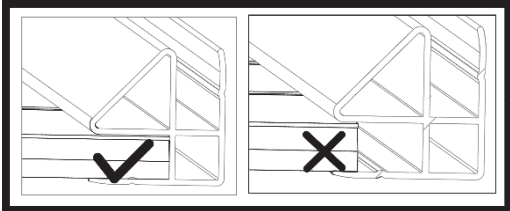
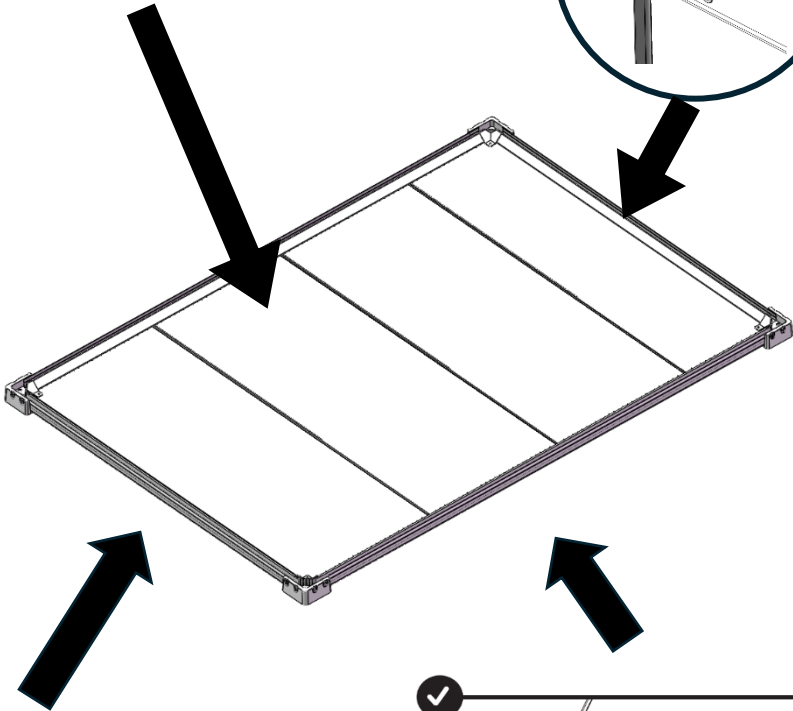
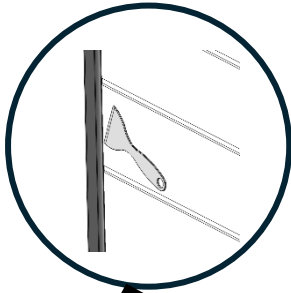


The panel fits perfectly inside the profile

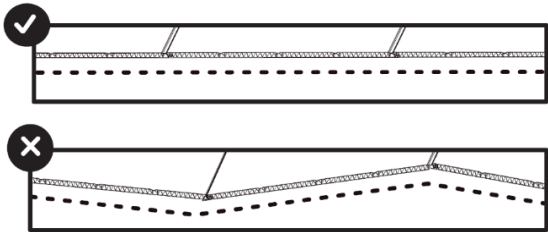


During installation, the plate remains vertical and cannot

Step 1

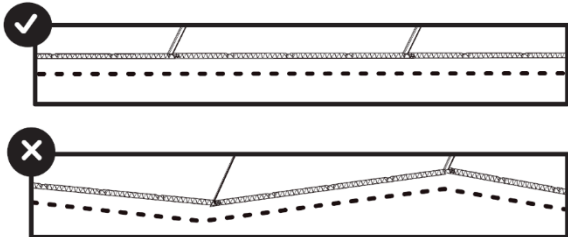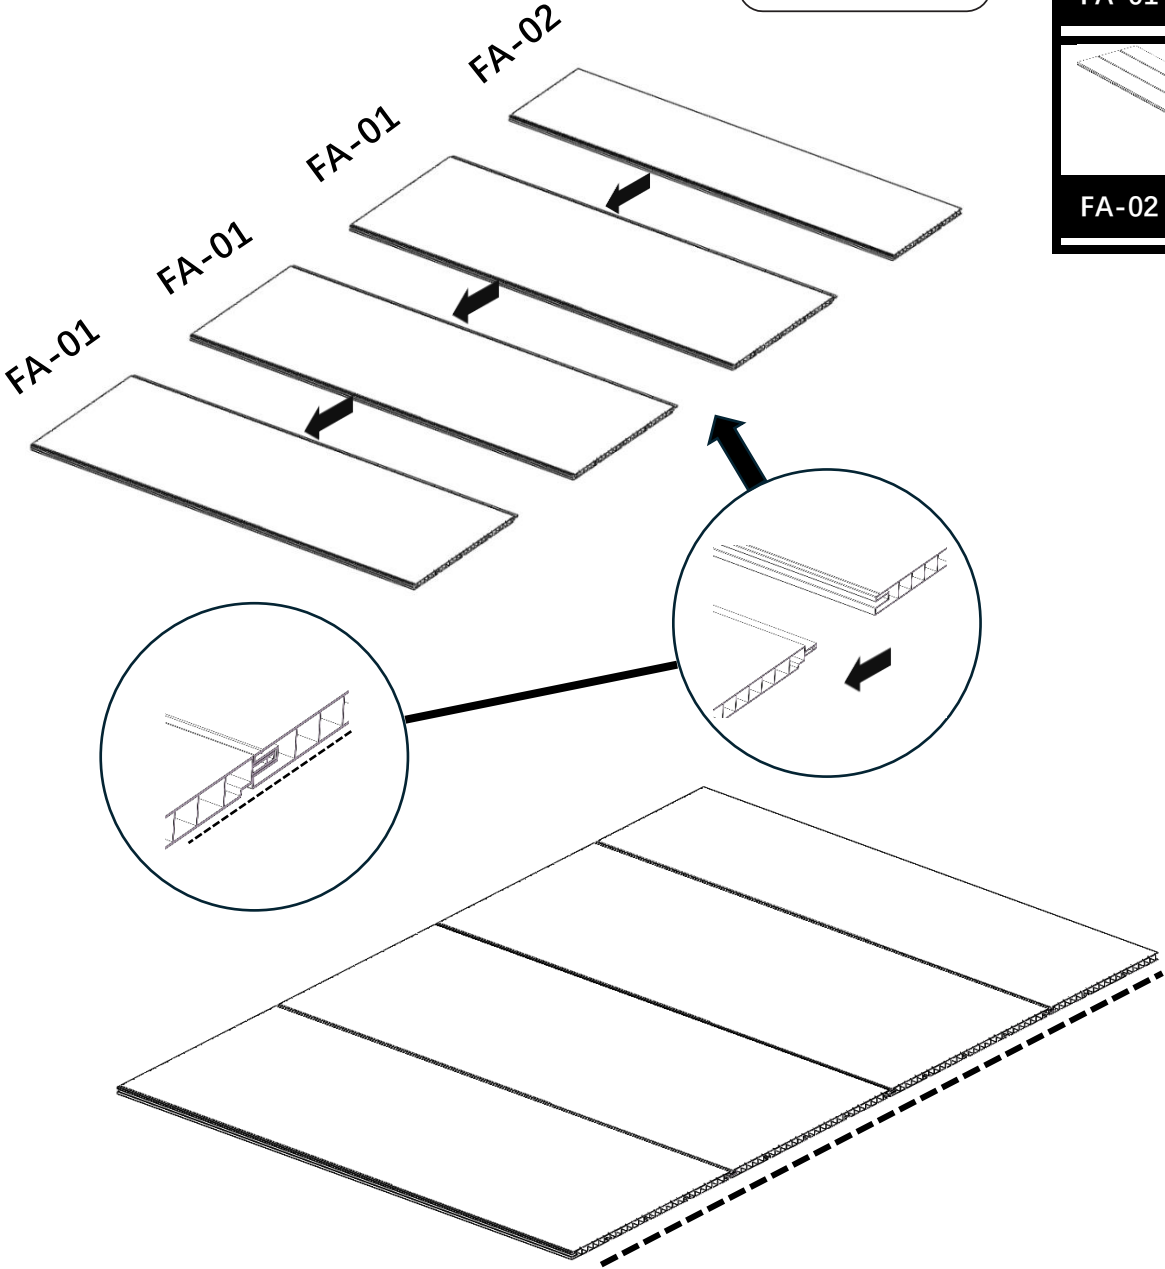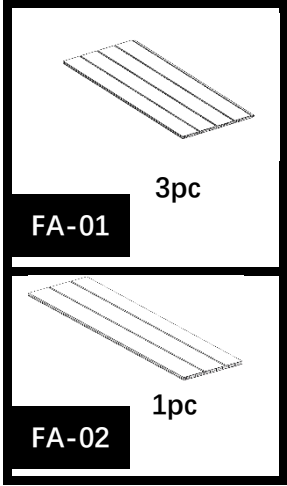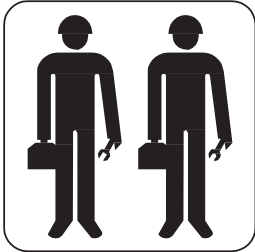






During installation, the plate remains vertical and cannot be bent


Step 2

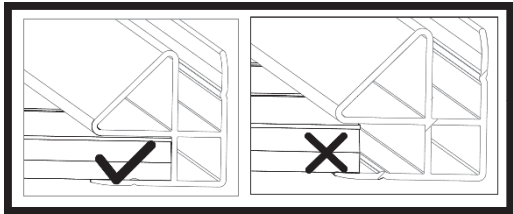

The panel fits perfectly inside the profile

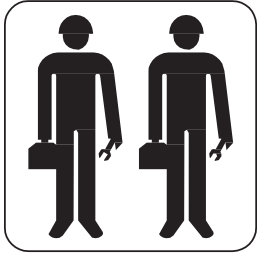


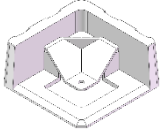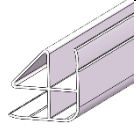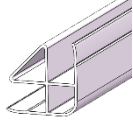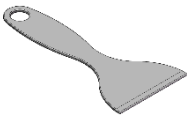- 1pc  JTFB-01
- 1pc  WB-02
- 1pc  WB-03
-  JTTY-D-01

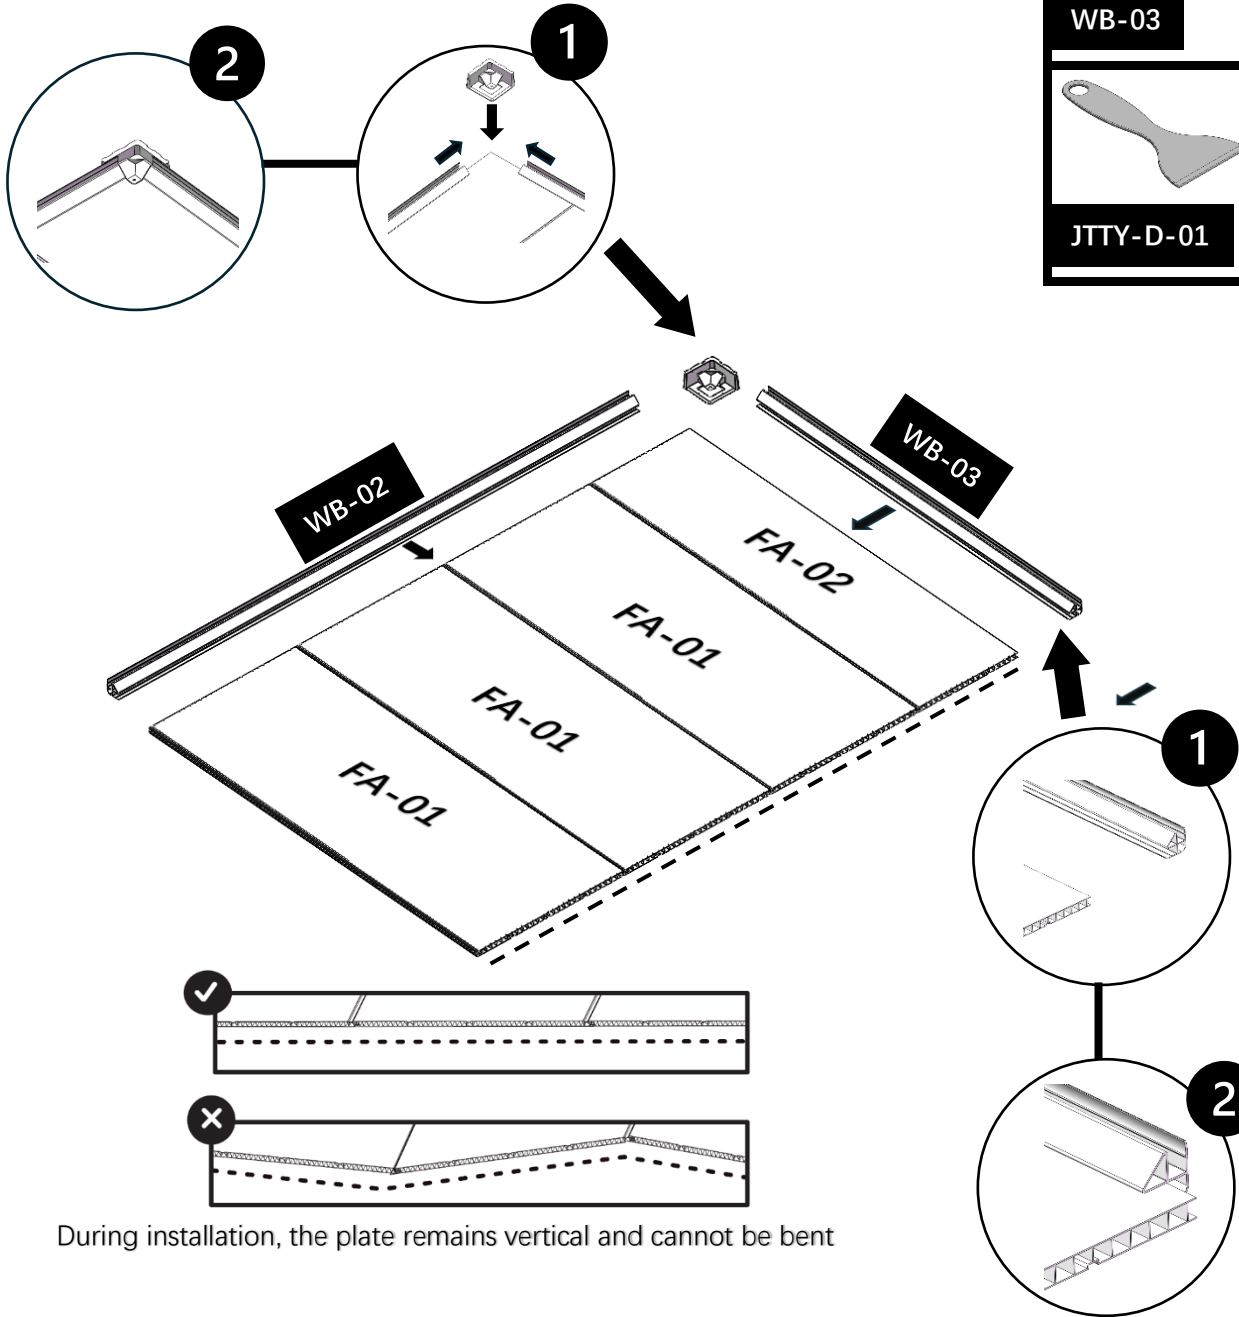


During installation, the plate remains vertical and cannot be bent


Step 3

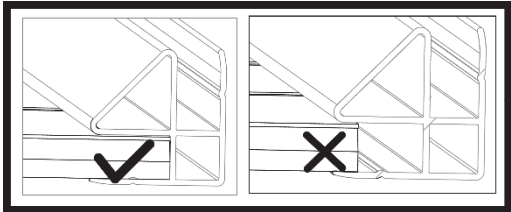

The panel fits perfectly inside the profile

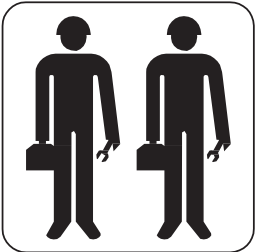


1pc	
JTFB-01	
1pc	
WB-03	
JTTY-D-01	


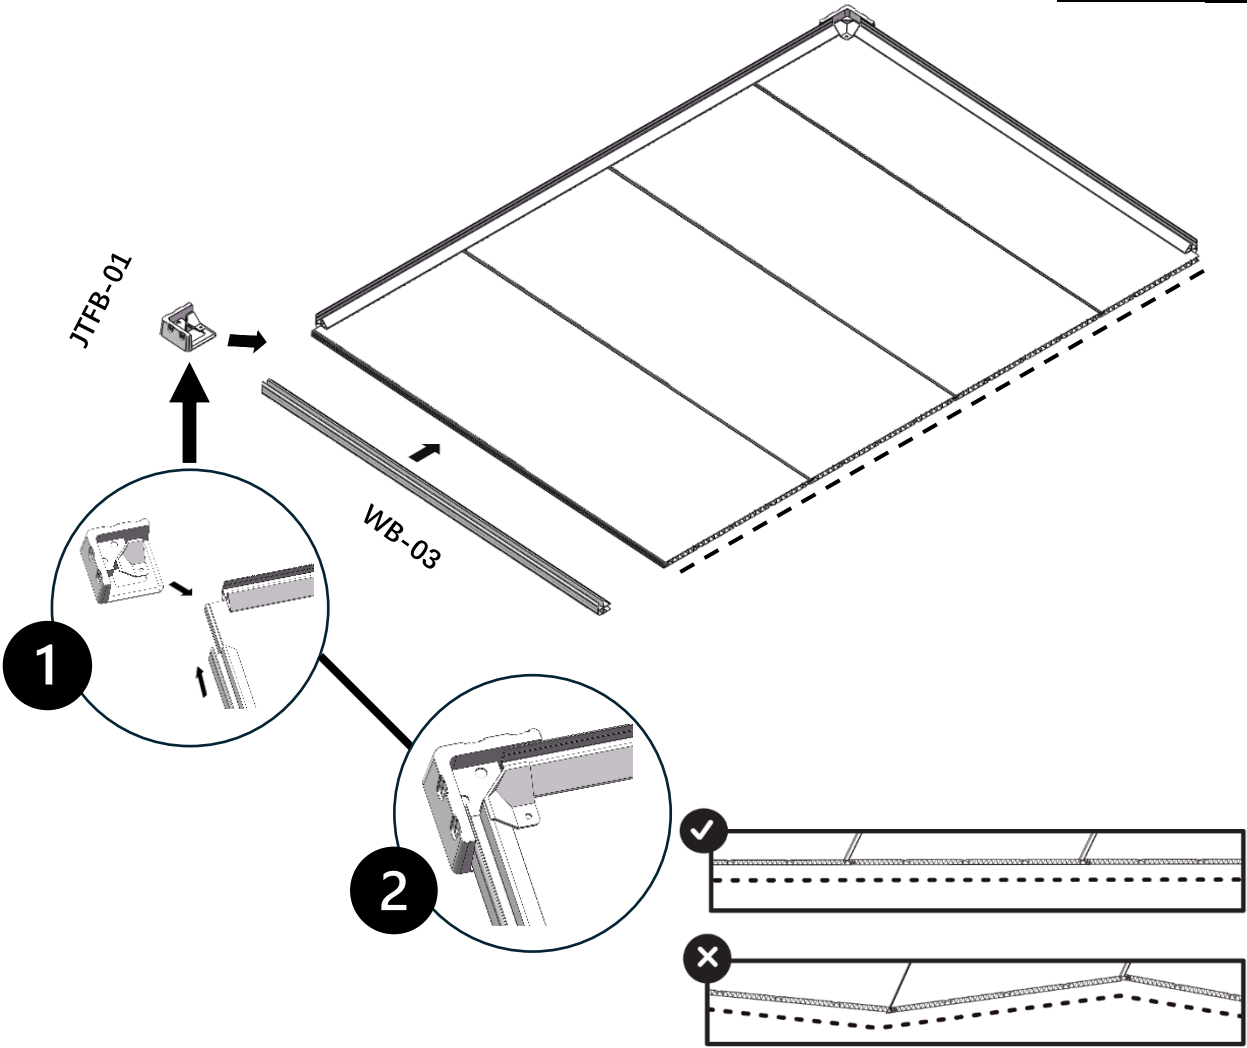


During installation, the plate remains vertical and cannot be bent



Step 4

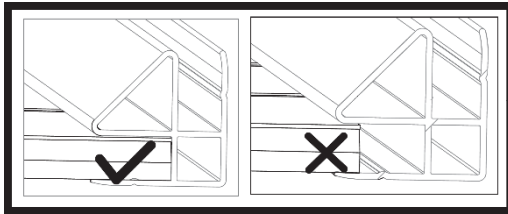

The panel fits perfectly inside the profile

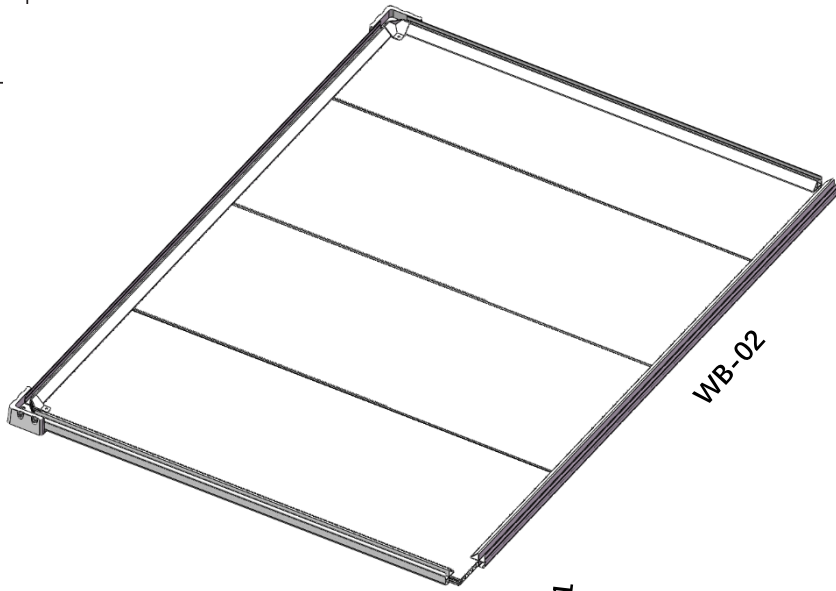
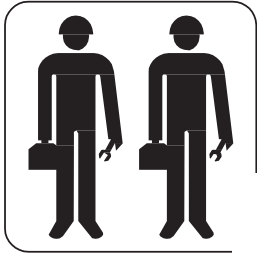


1pc	
JTFB-01	
1pc	
WB-02	
JTTY-D-01	

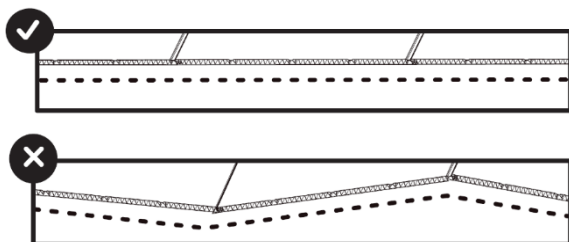
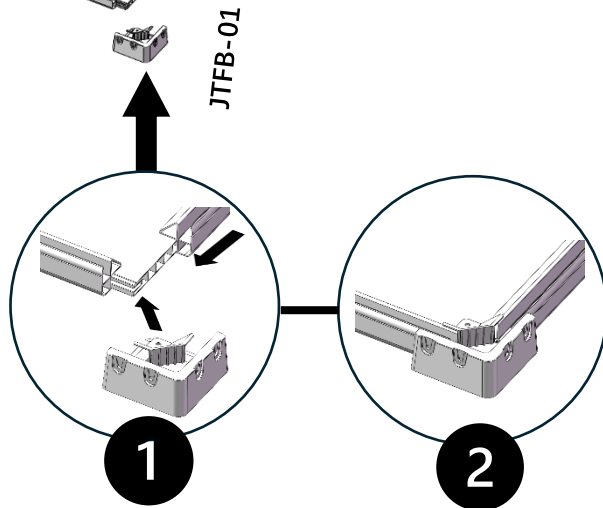


During installation, the plate remains vertical and cannot be bent

Step 5

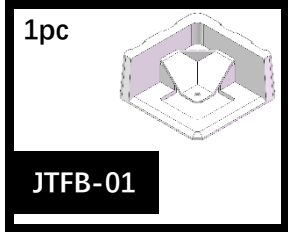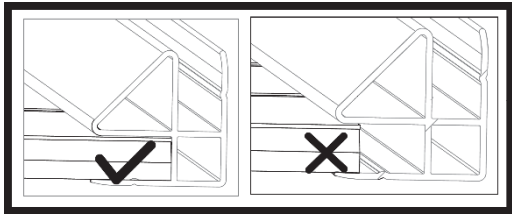

The panel fits perfectly inside the profile

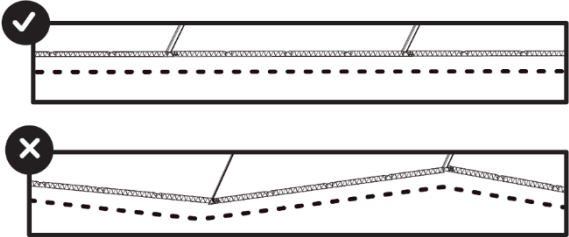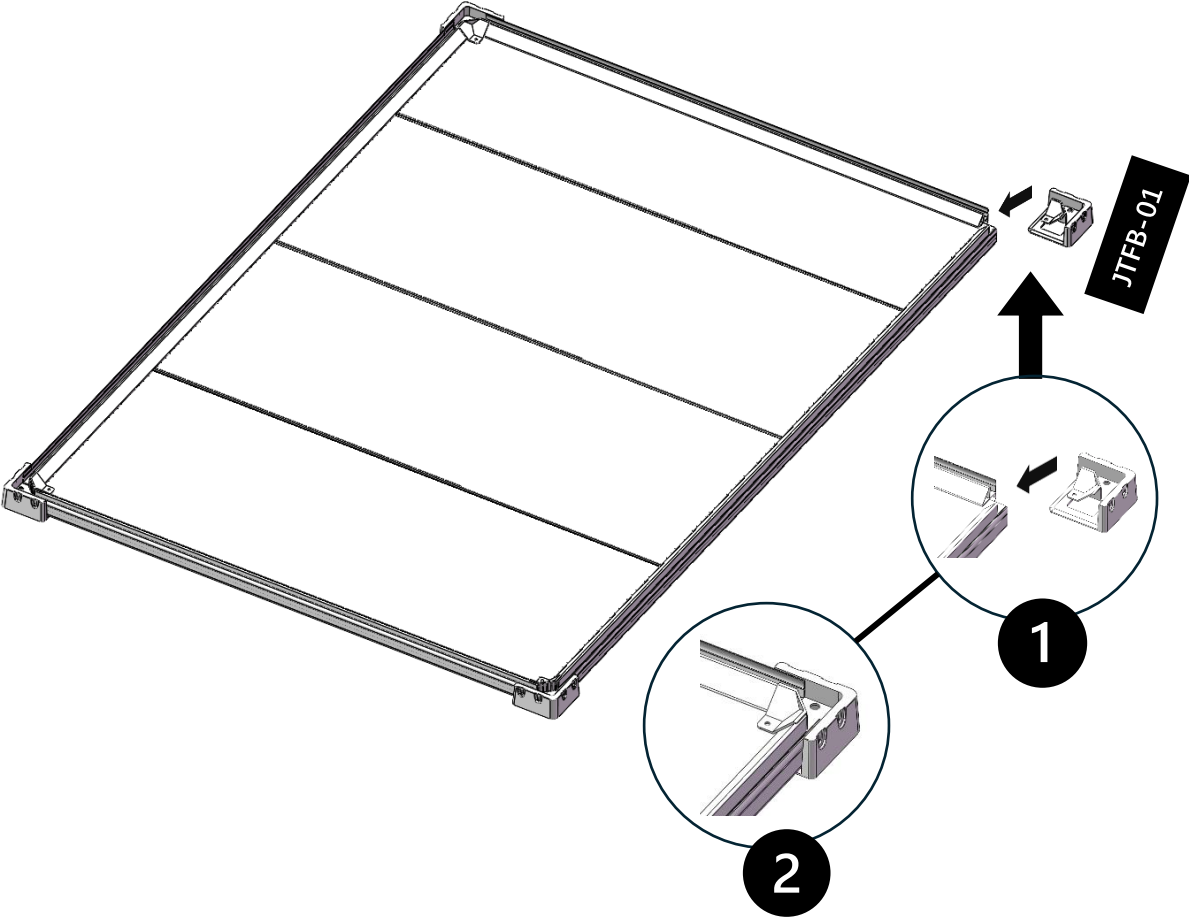



During installation, the plate remains vertical and cannot be bent

Step 6


4pc



ST4.2X12

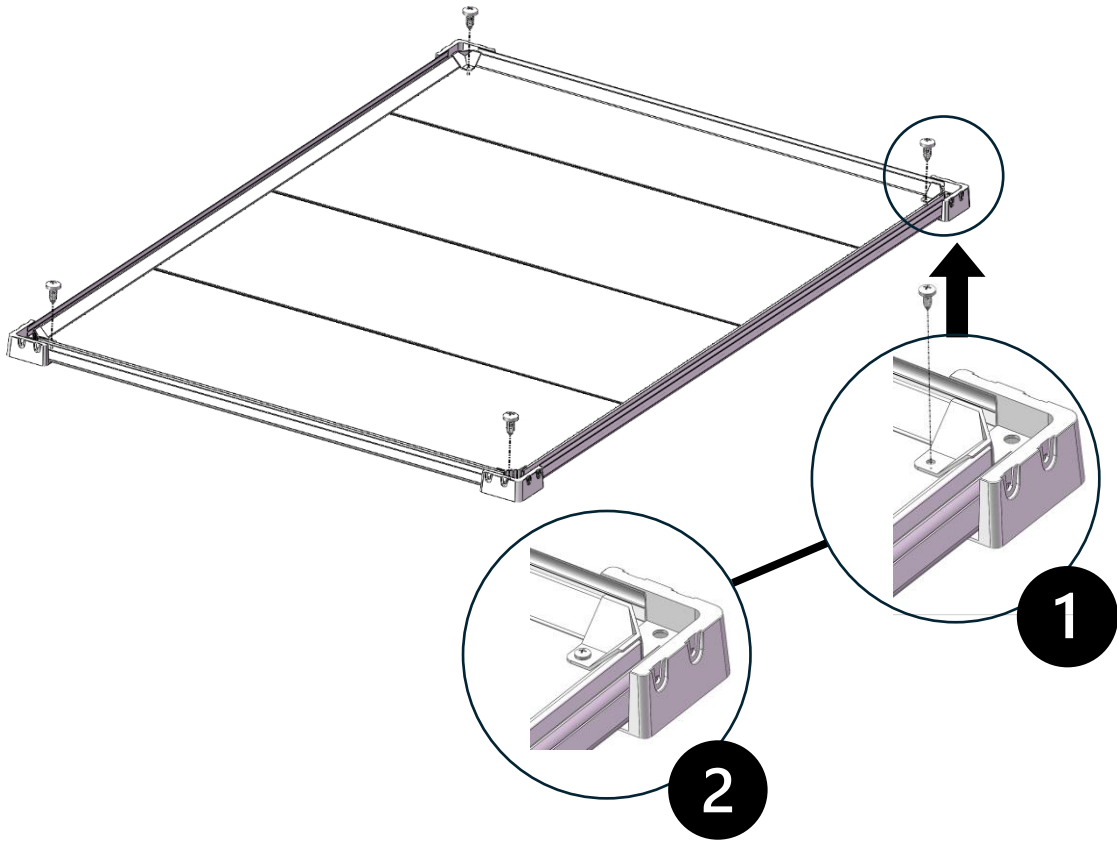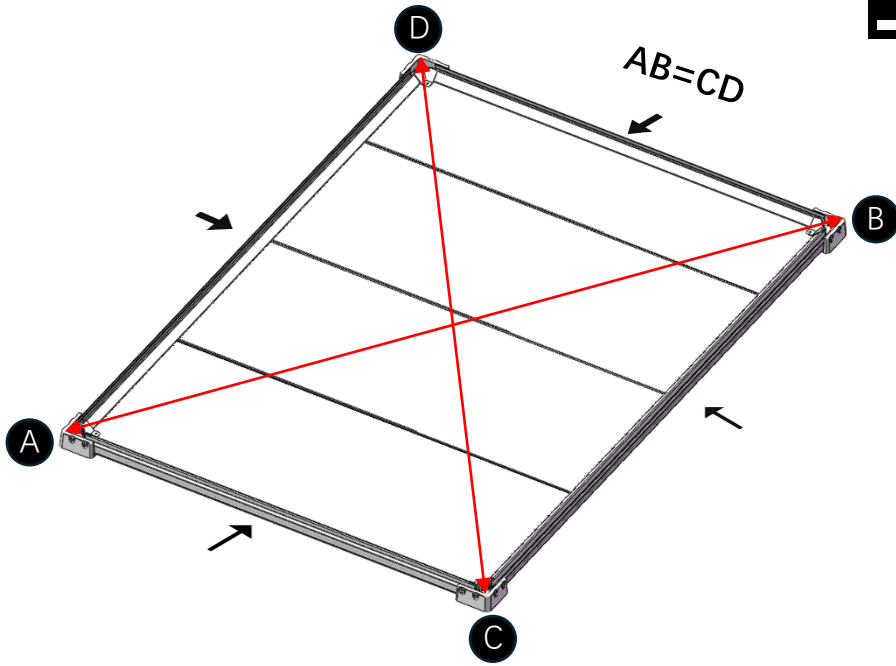

Step 7

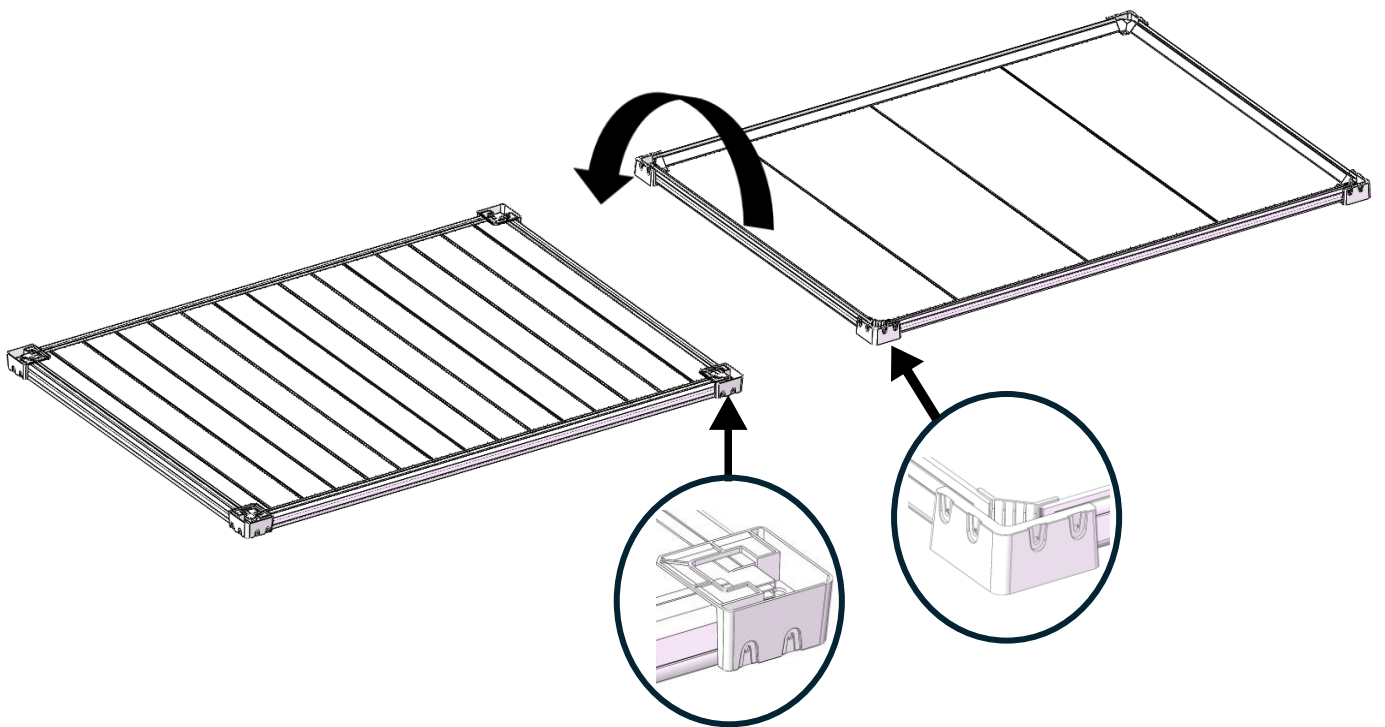


Step 8


12pc




ST4.2*20

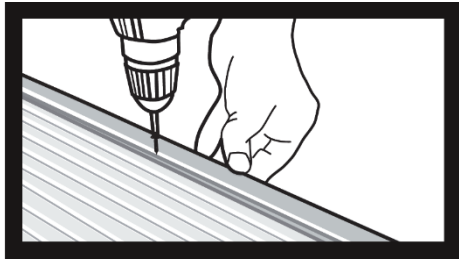






Fix the screws on the profile along the marking line

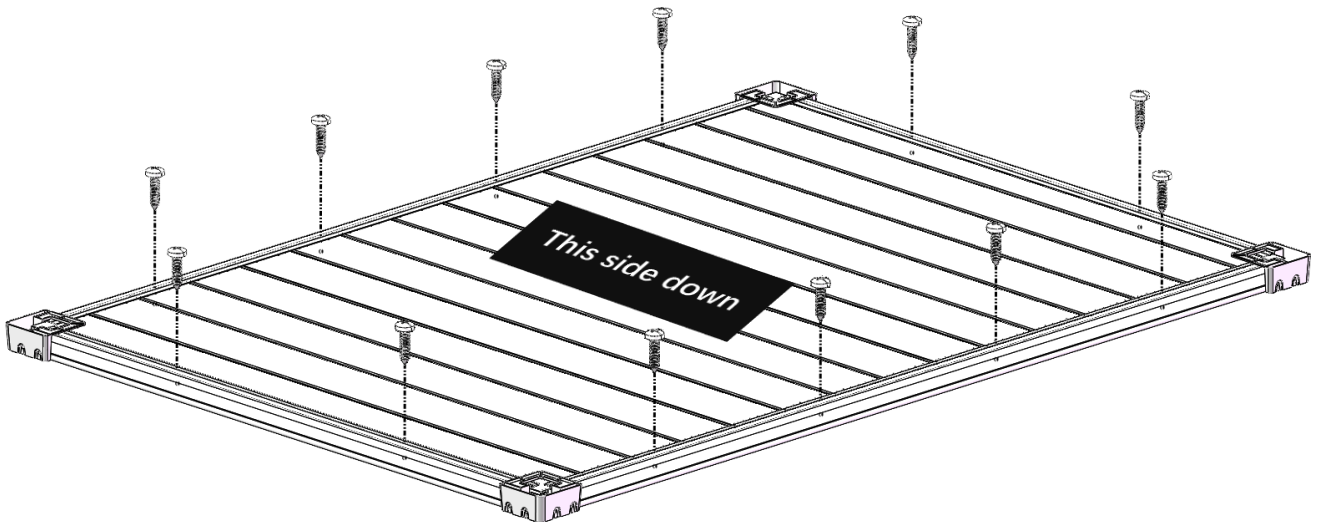

Step 9

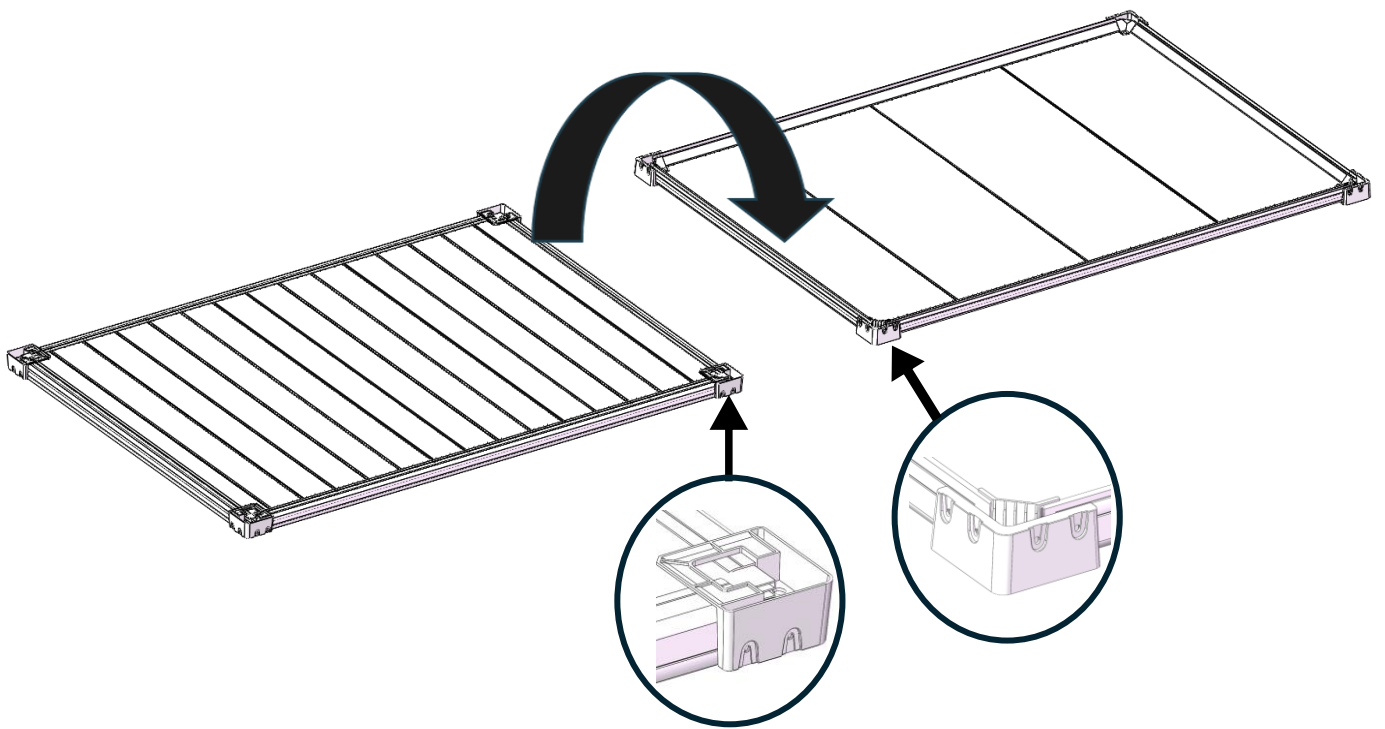


Wall installation

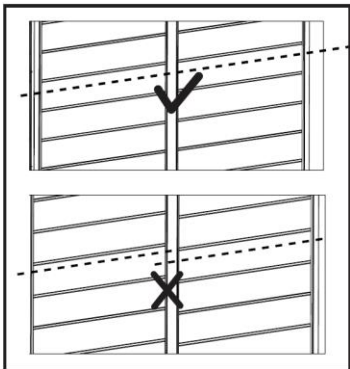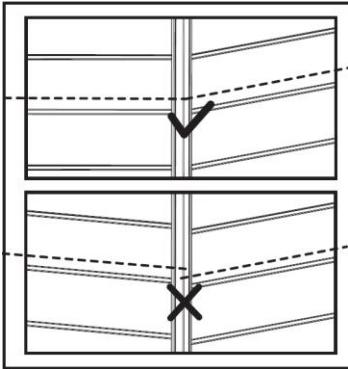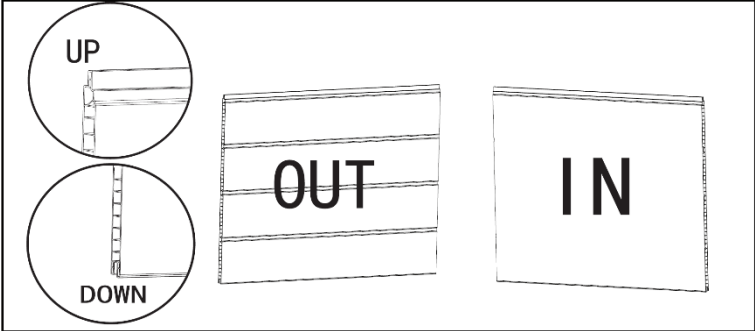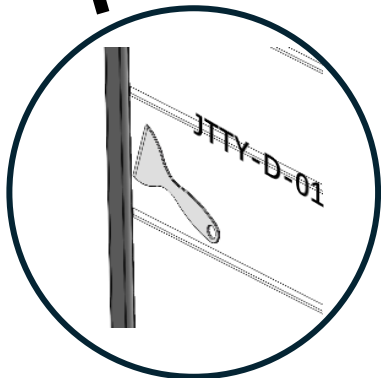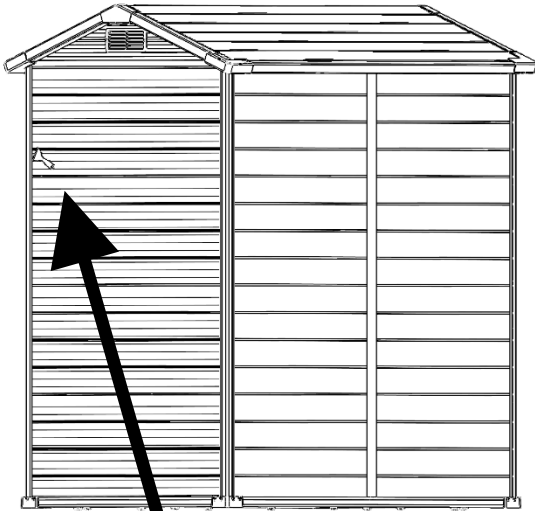


Use a spatula to make it easier to insert the

Step 10



1c

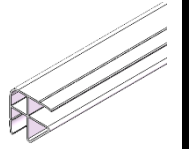


WB-01



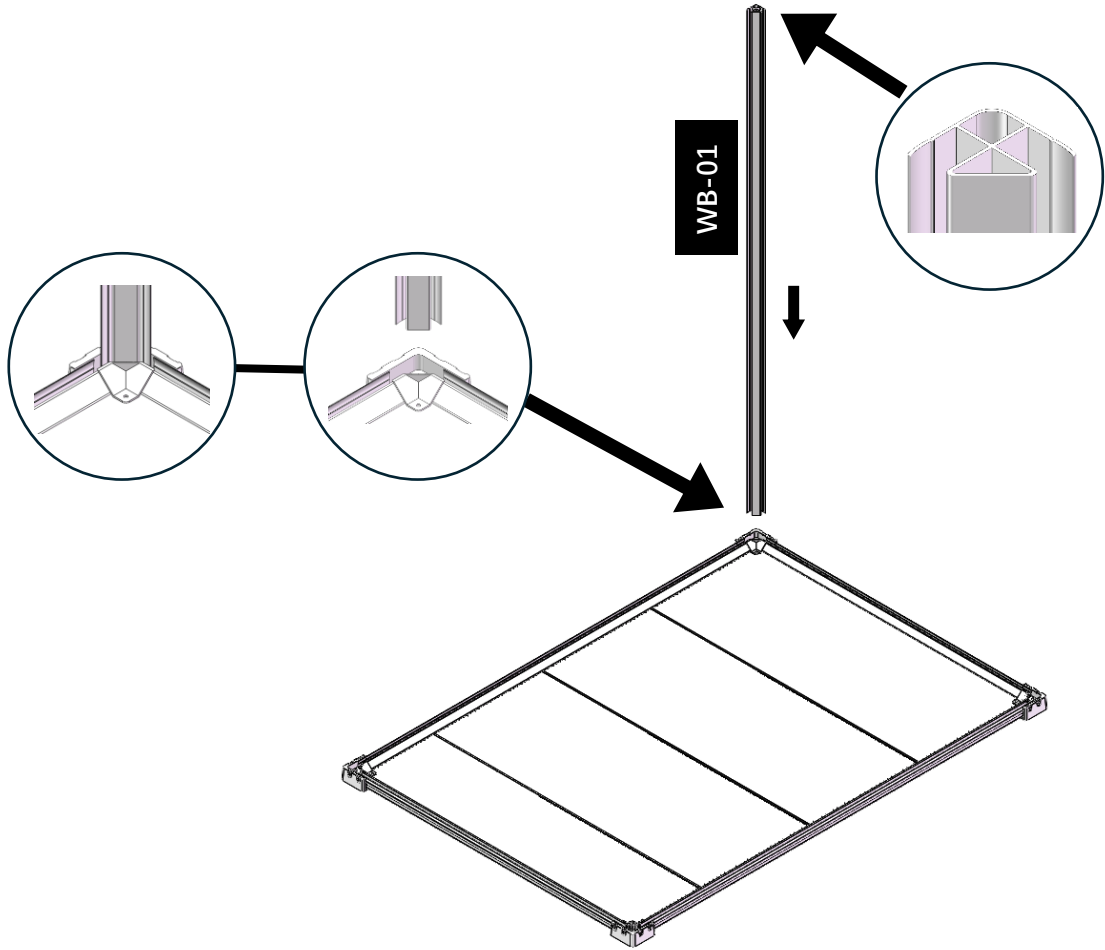


Step 11

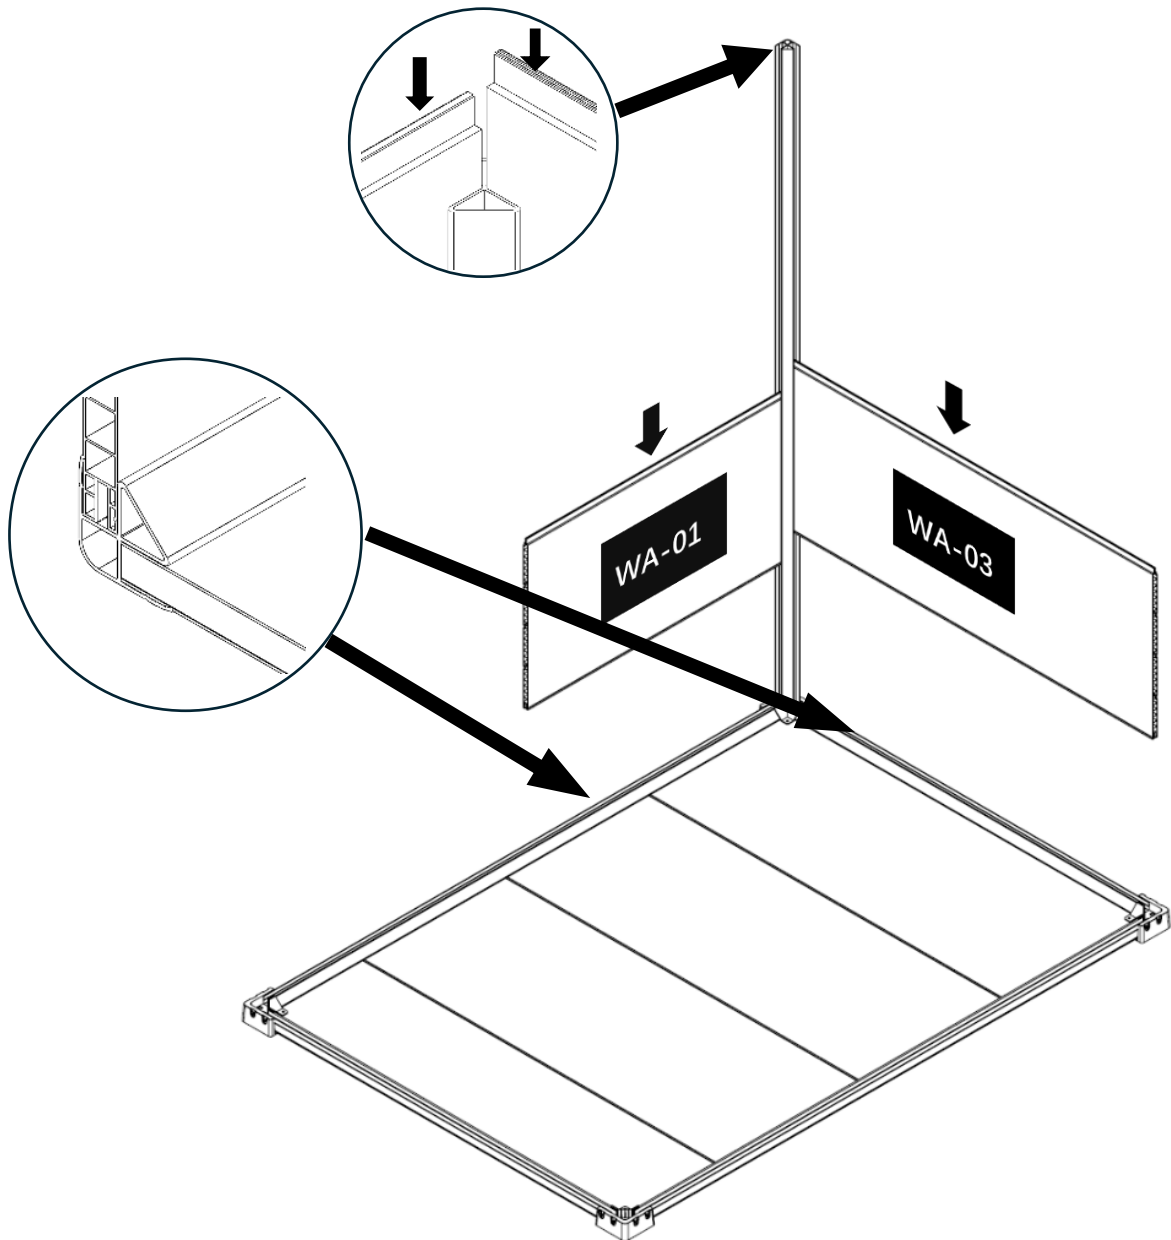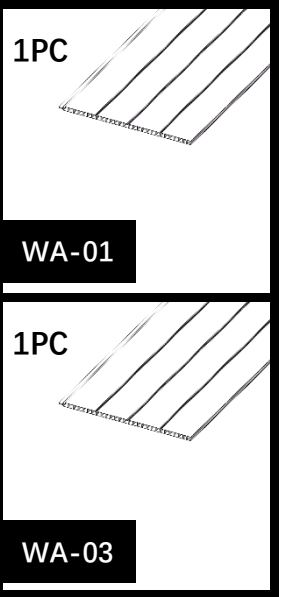


Step 12

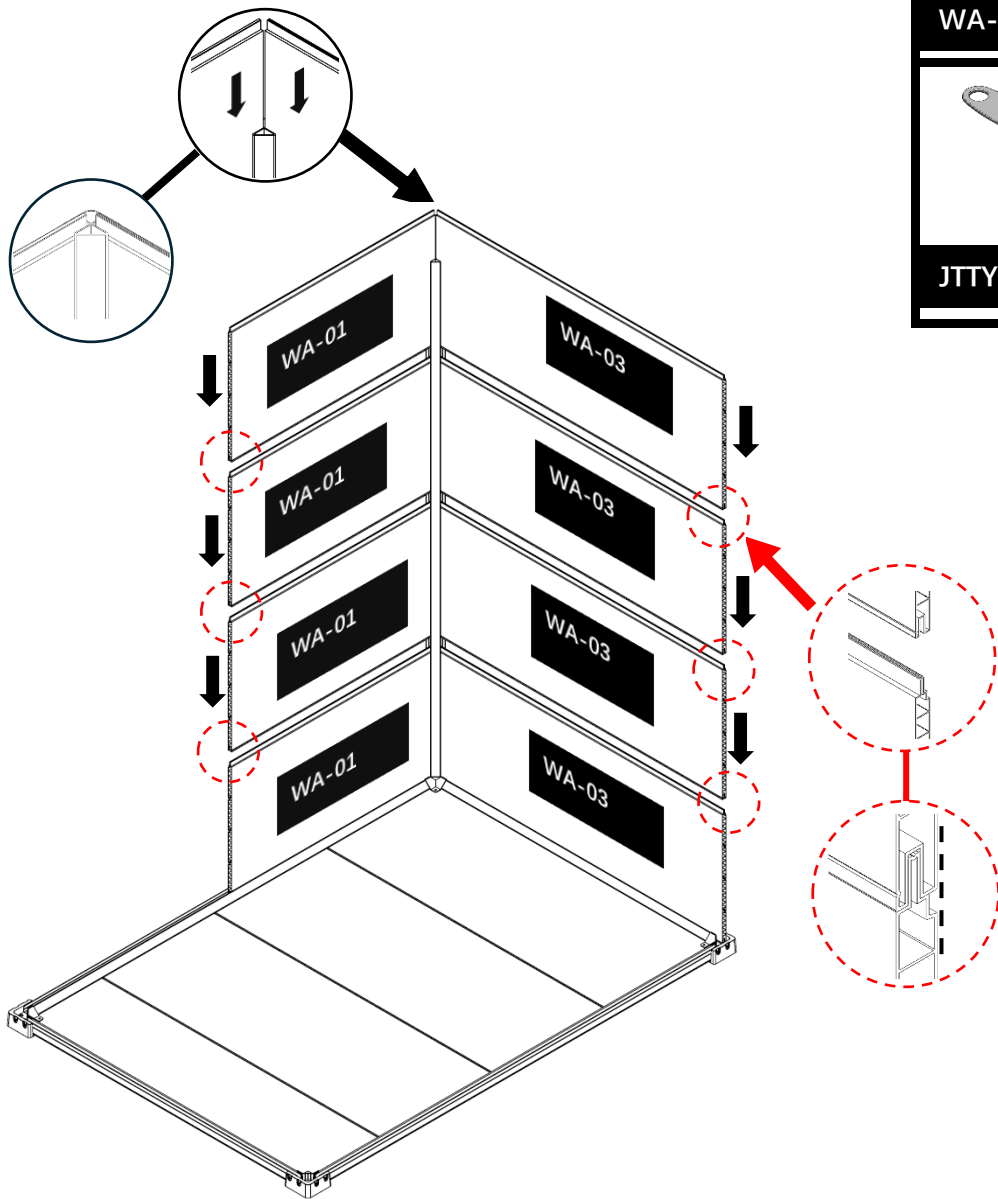

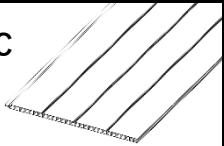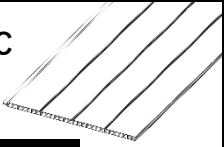
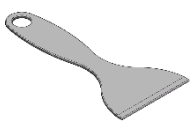
3PC	
WA-01	
3PC	
WA-03	
	
JTTY-D-01	

Step 13


4pc




ST4.2*20

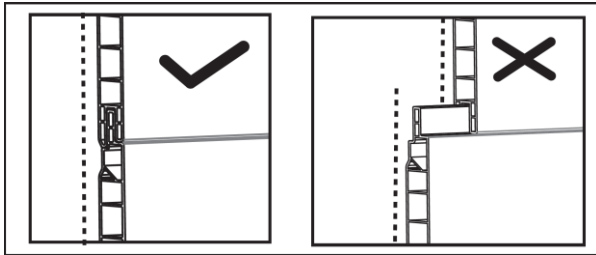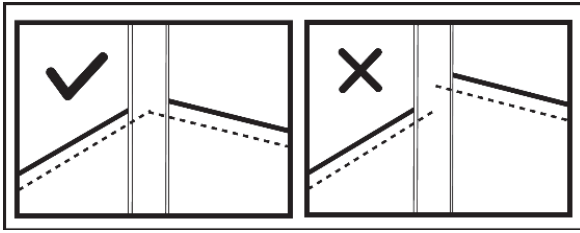

The panels must be aligned when they are installed

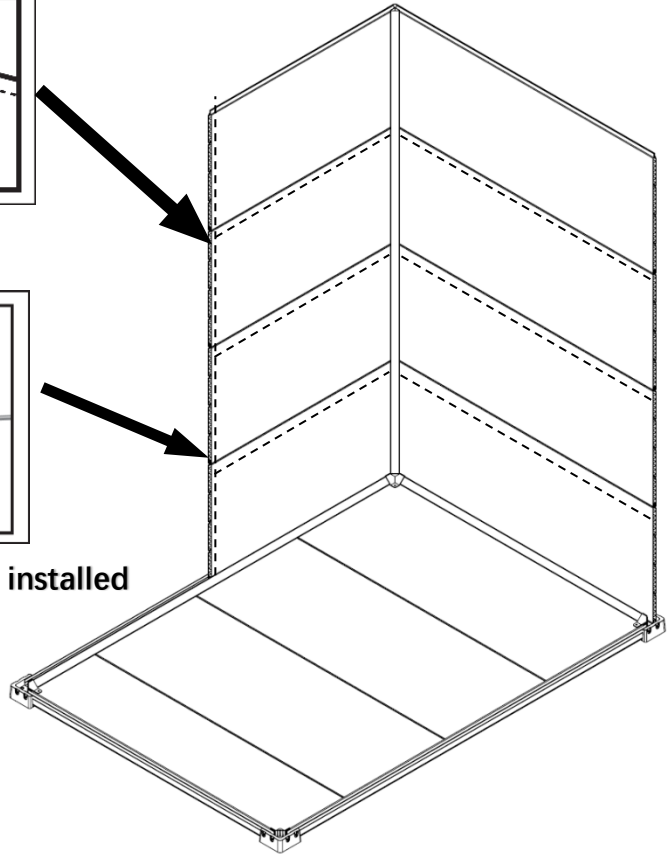

Step 14

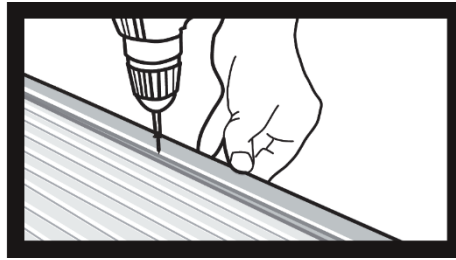


12pc




ST4.2*20




Fix the screws on the profile along the marking line

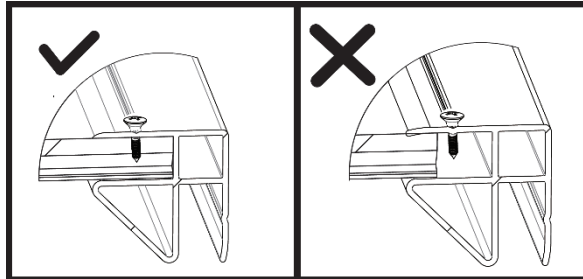




The sheet is fully inserted into the profile to fix the

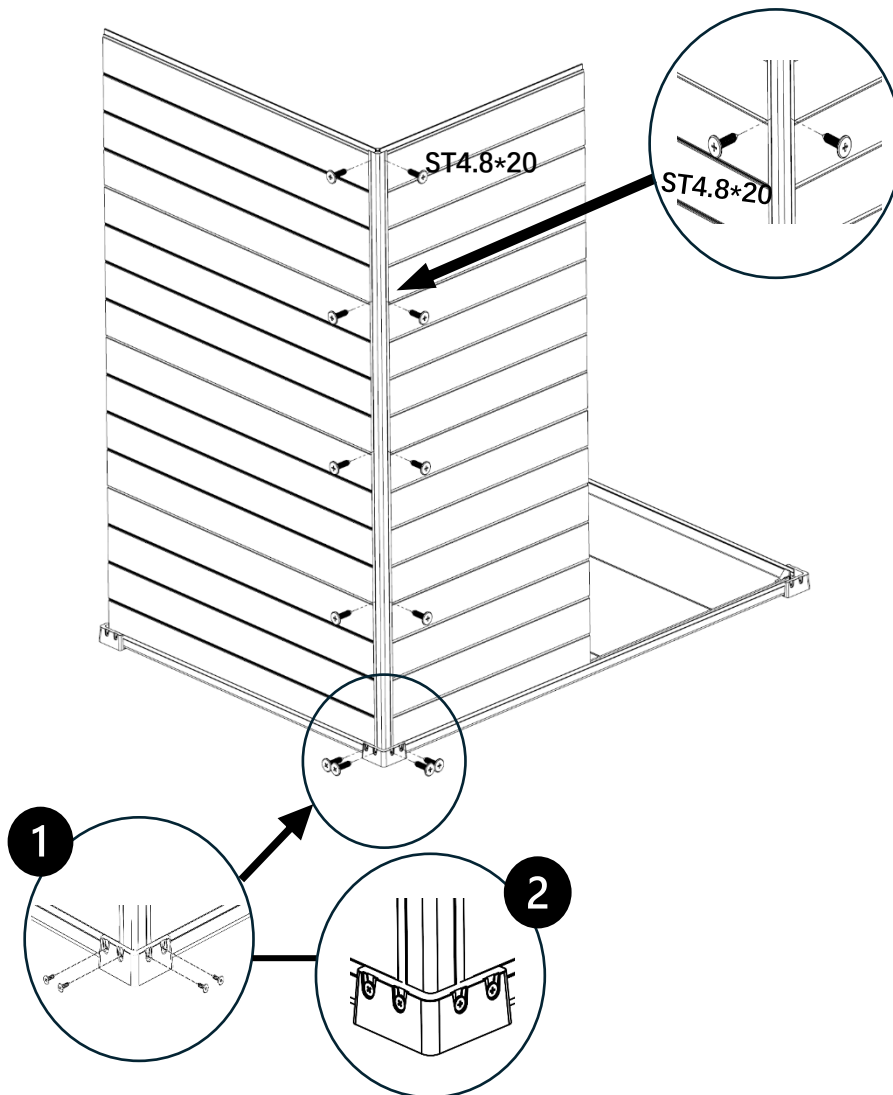

Step 15

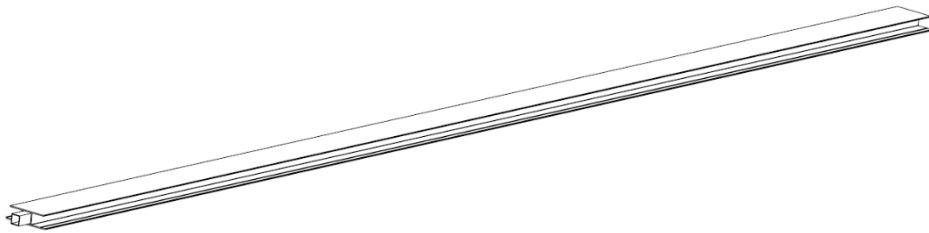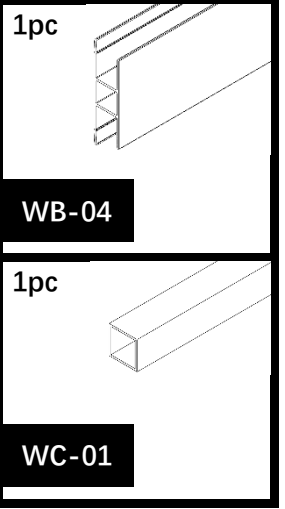


Step 16

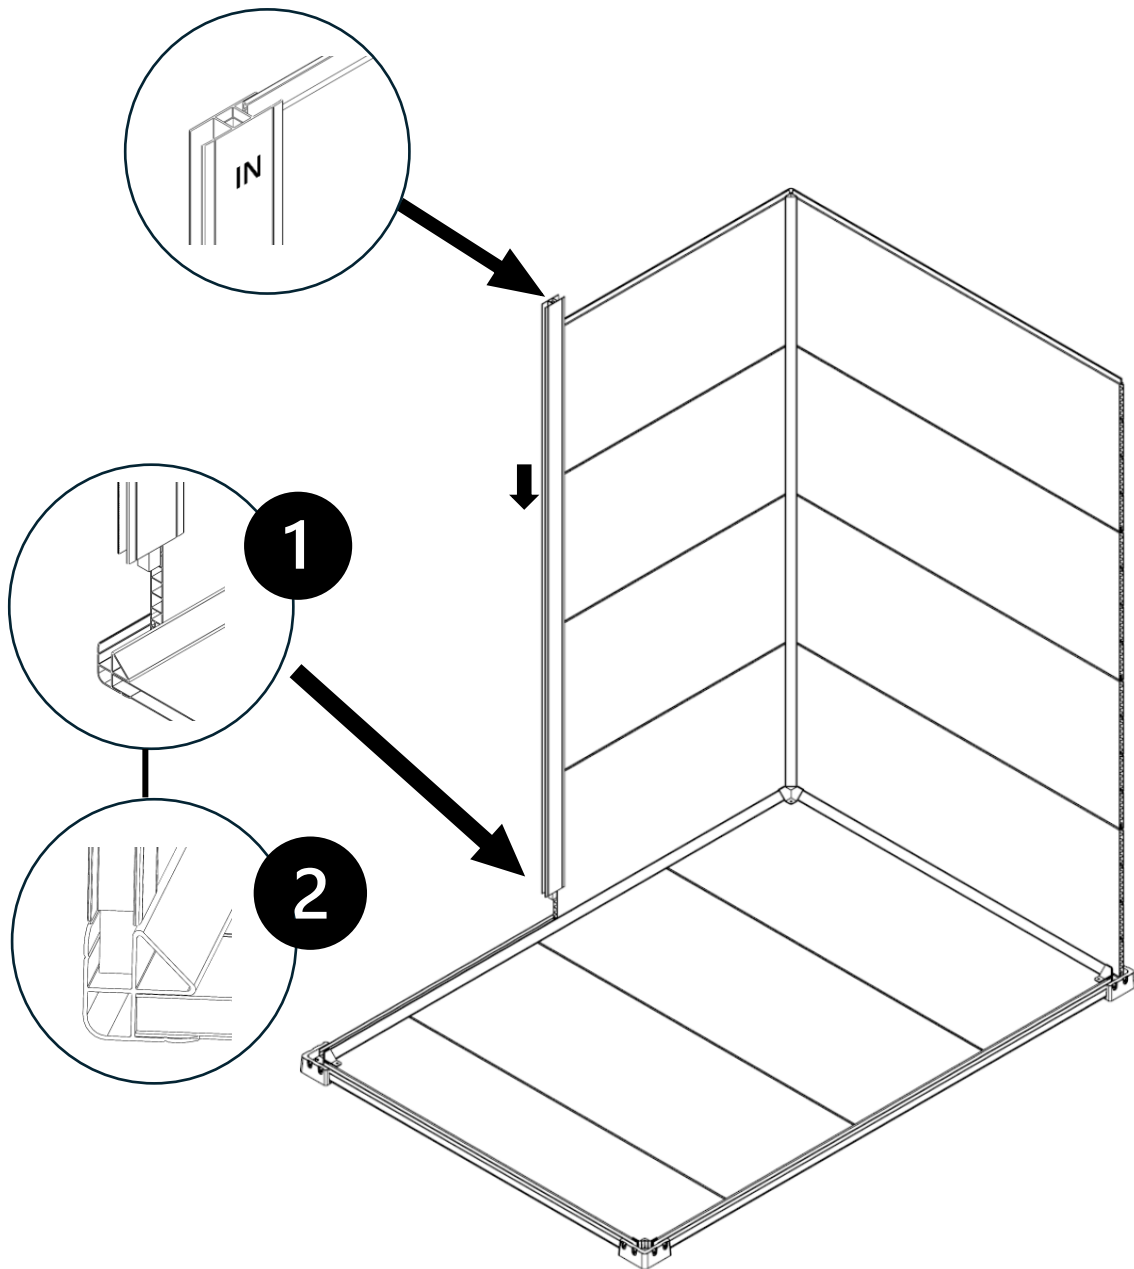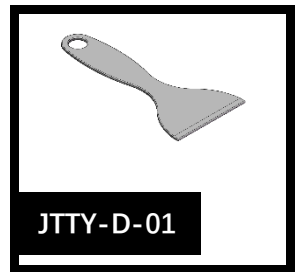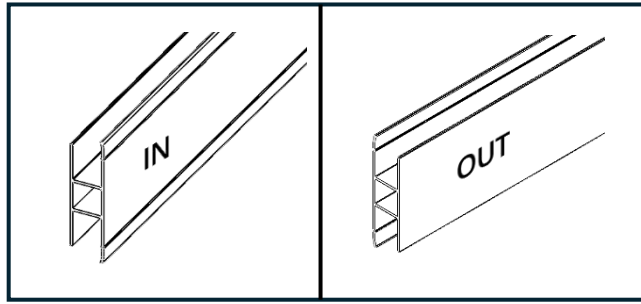


Step 17

4PC

WA-01

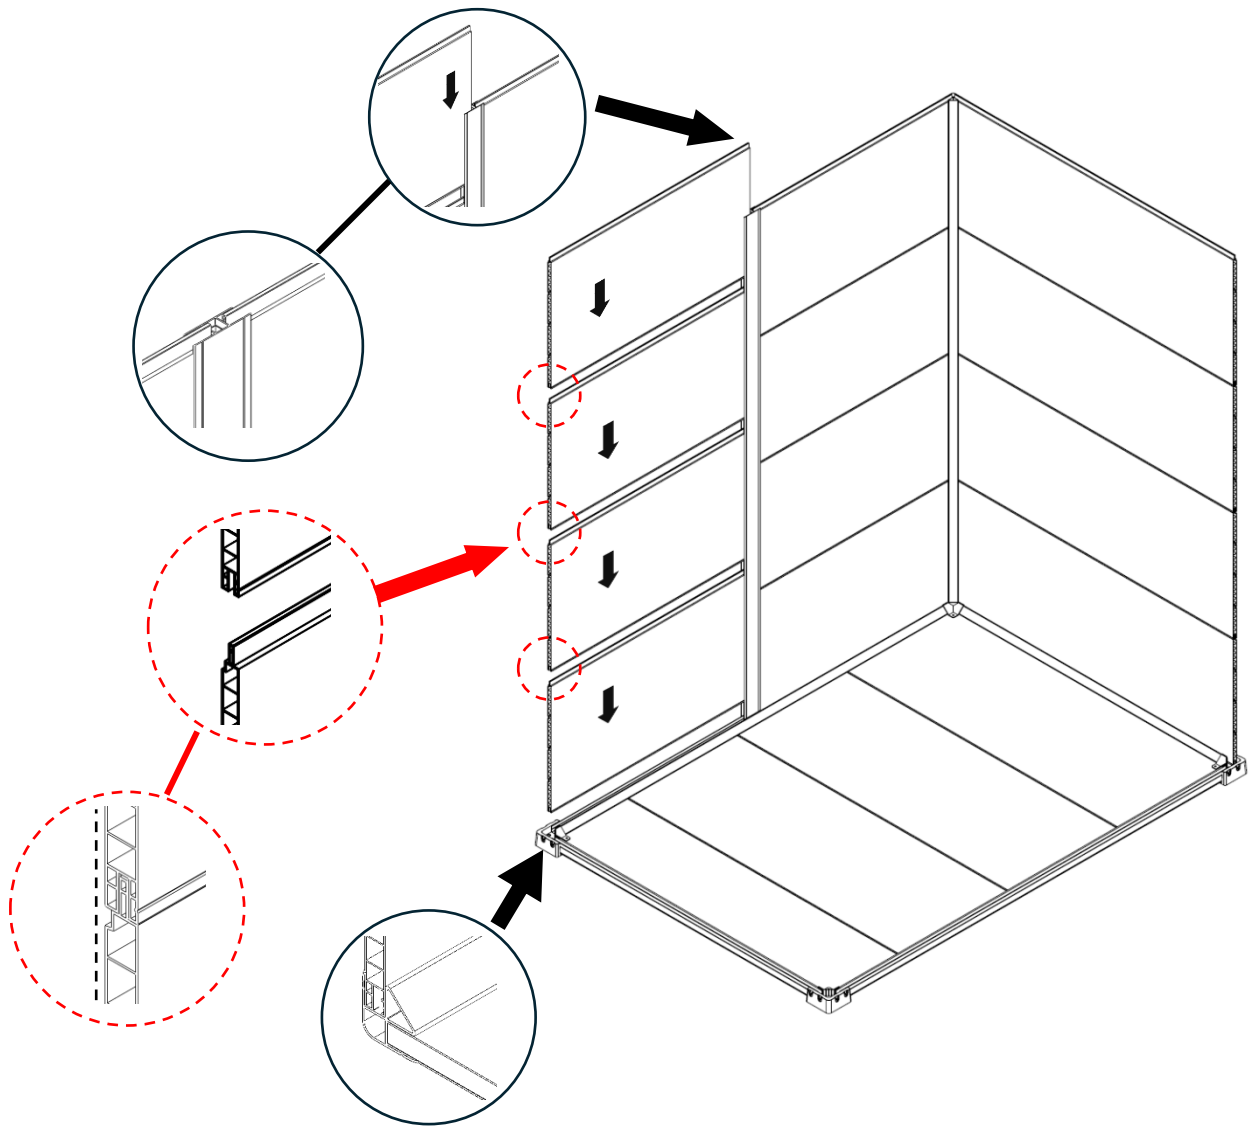


Step 18

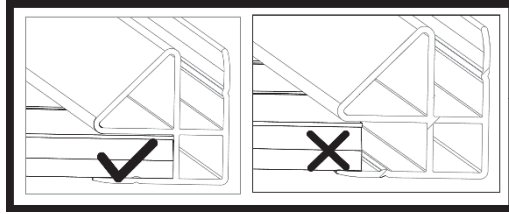


The panel fits perfectly inside the profile


1c

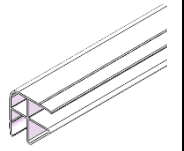


WB-01



JTTY-D-01

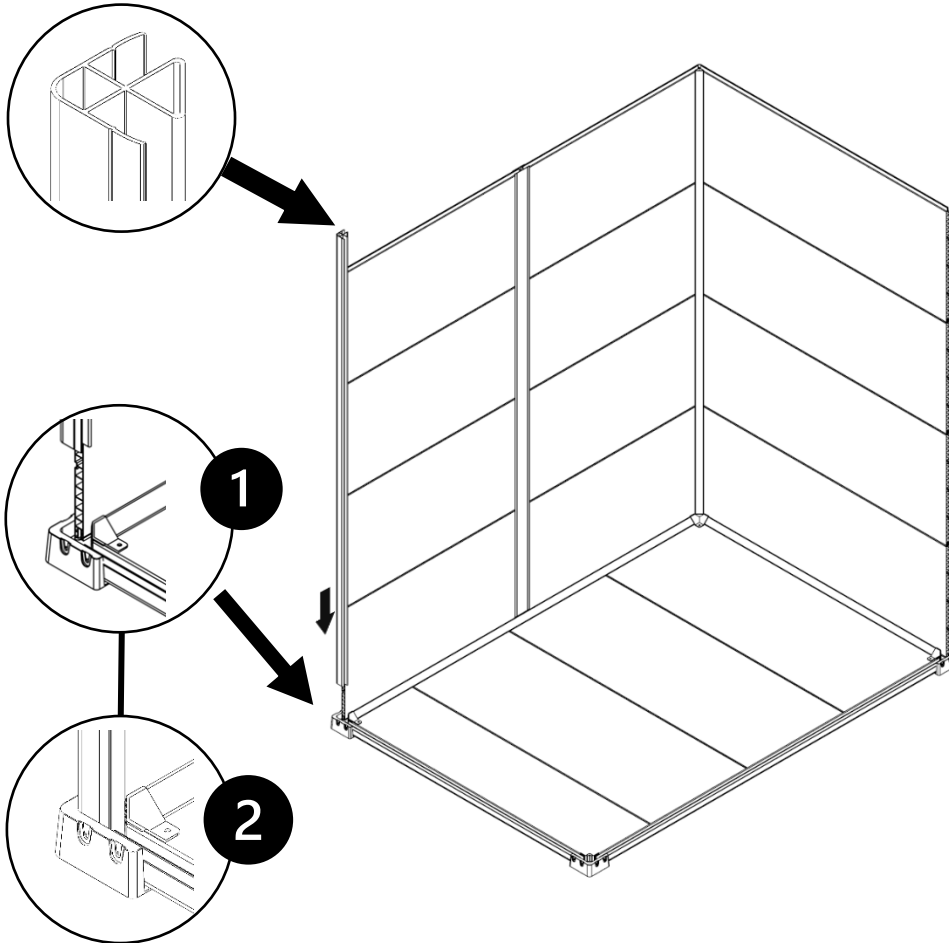

Step 19

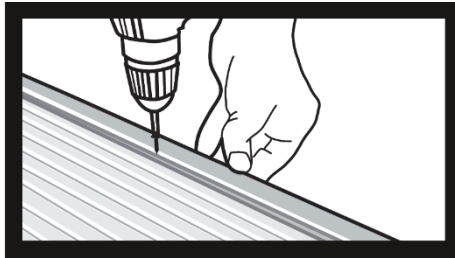


6PC




ST4.2*20


Fix the screws on the profile along the marking line

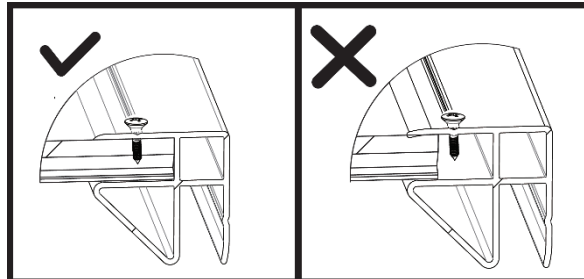

The sheet is fully inserted into the profile to fix the

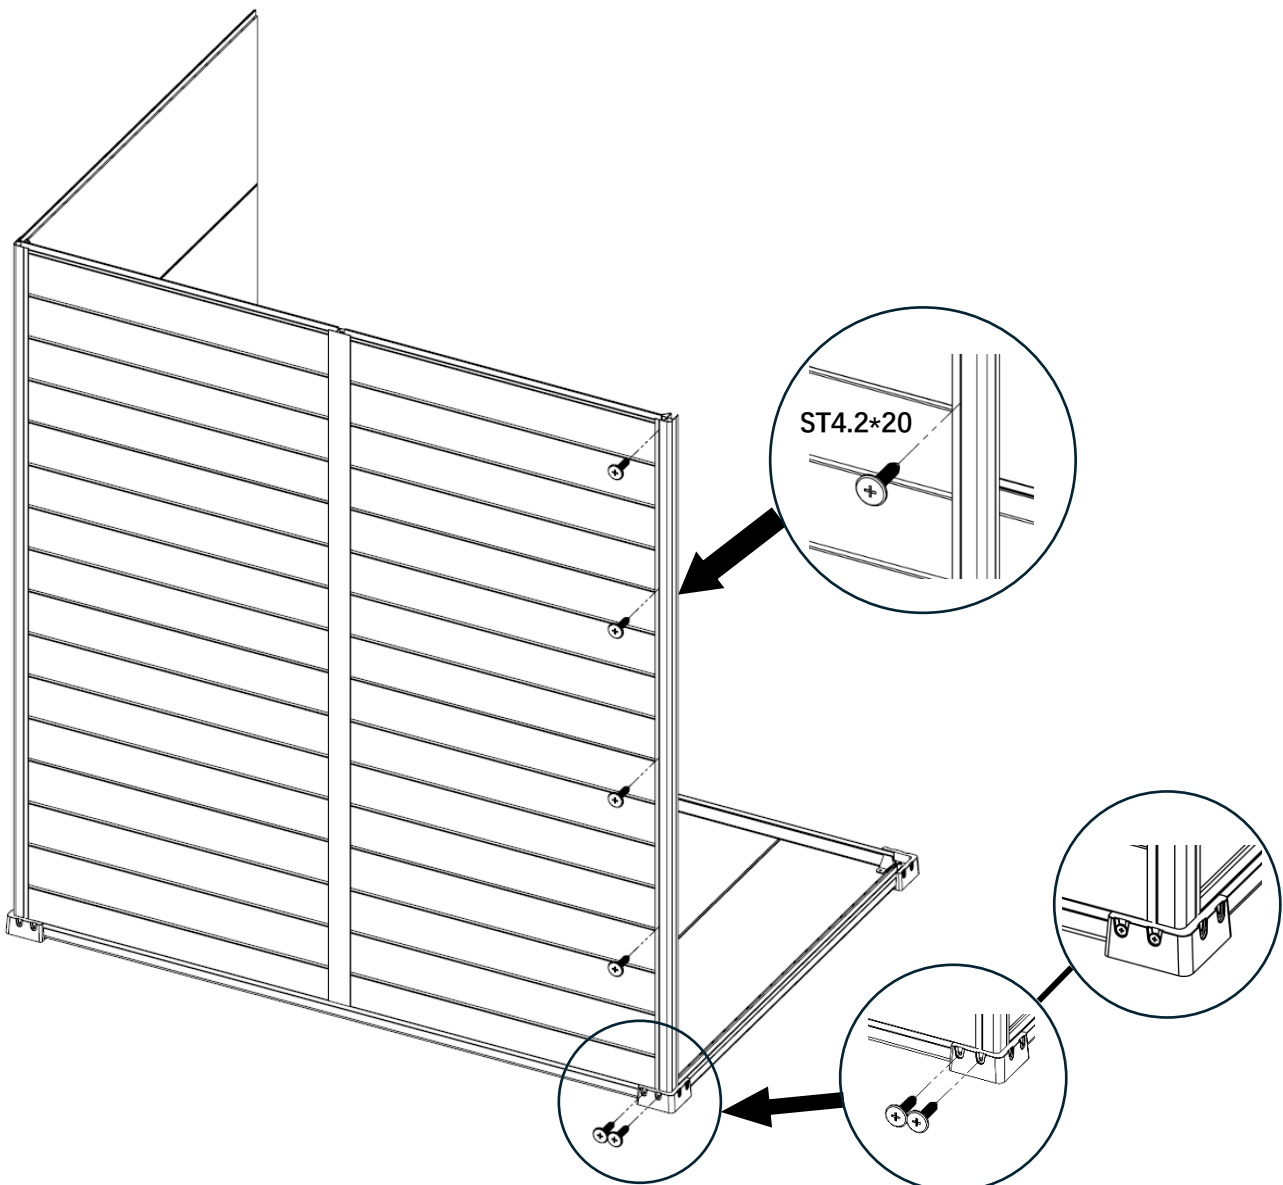


Step 20

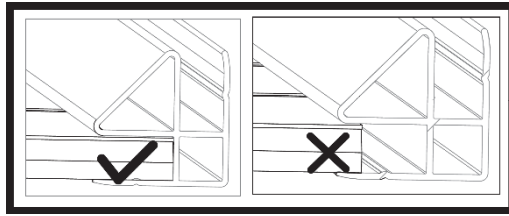


The panel fits perfectly inside the profile



1c

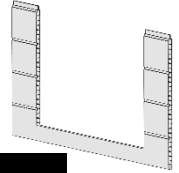


WA-06




JTTY-D-01

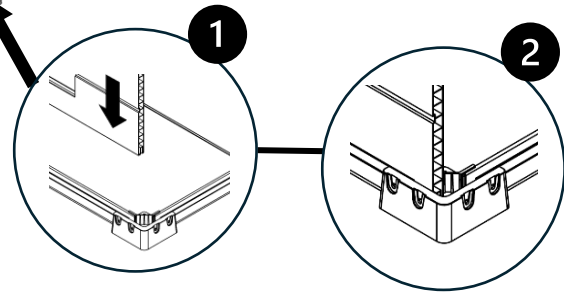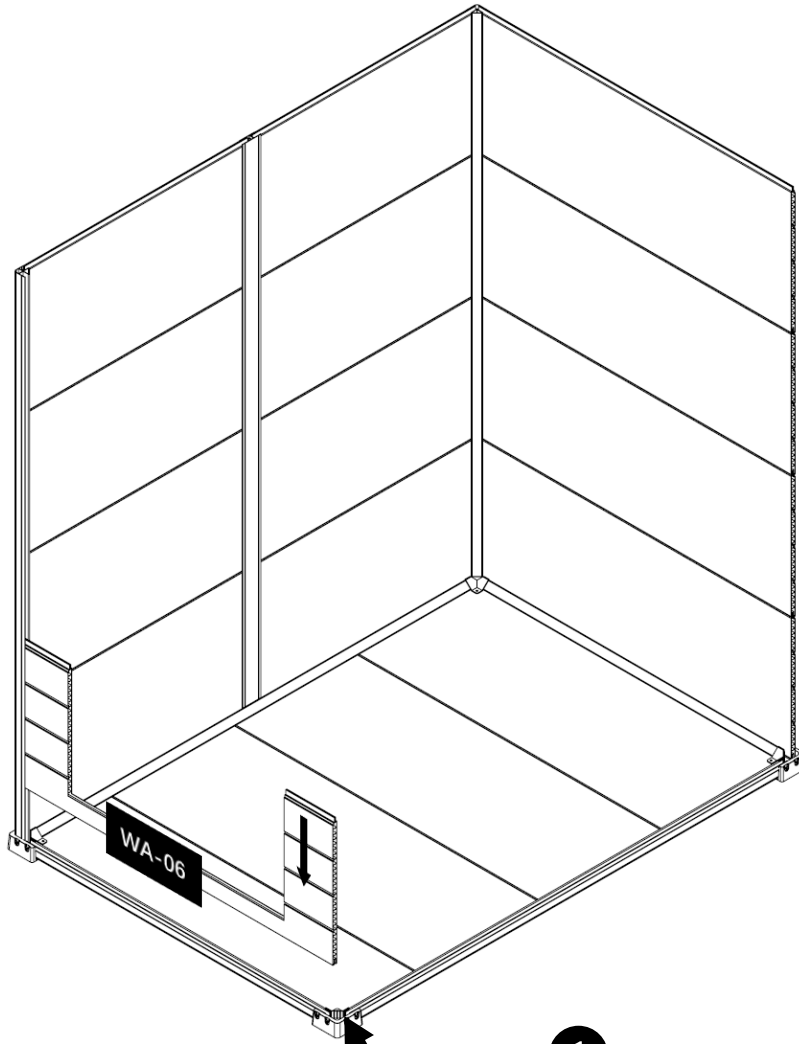


Step 21

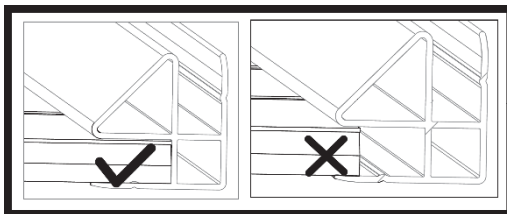


The panel fits perfectly inside the profile

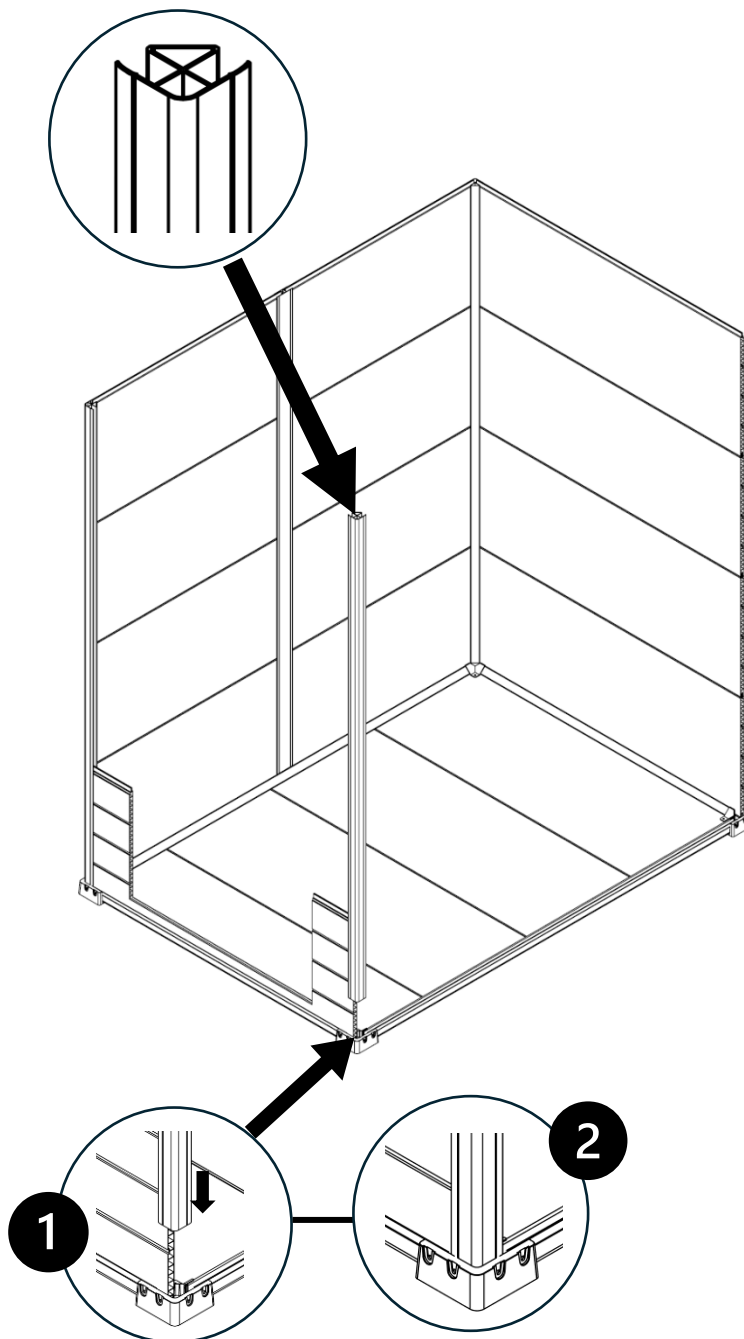

1c

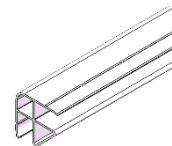


WB-01

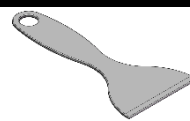


JTTY-D-01

Step 22

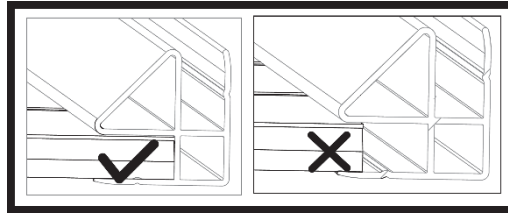


The panel fits perfectly inside the profile


4c

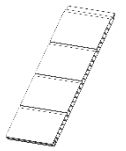


WA-09



JTTY-D-01

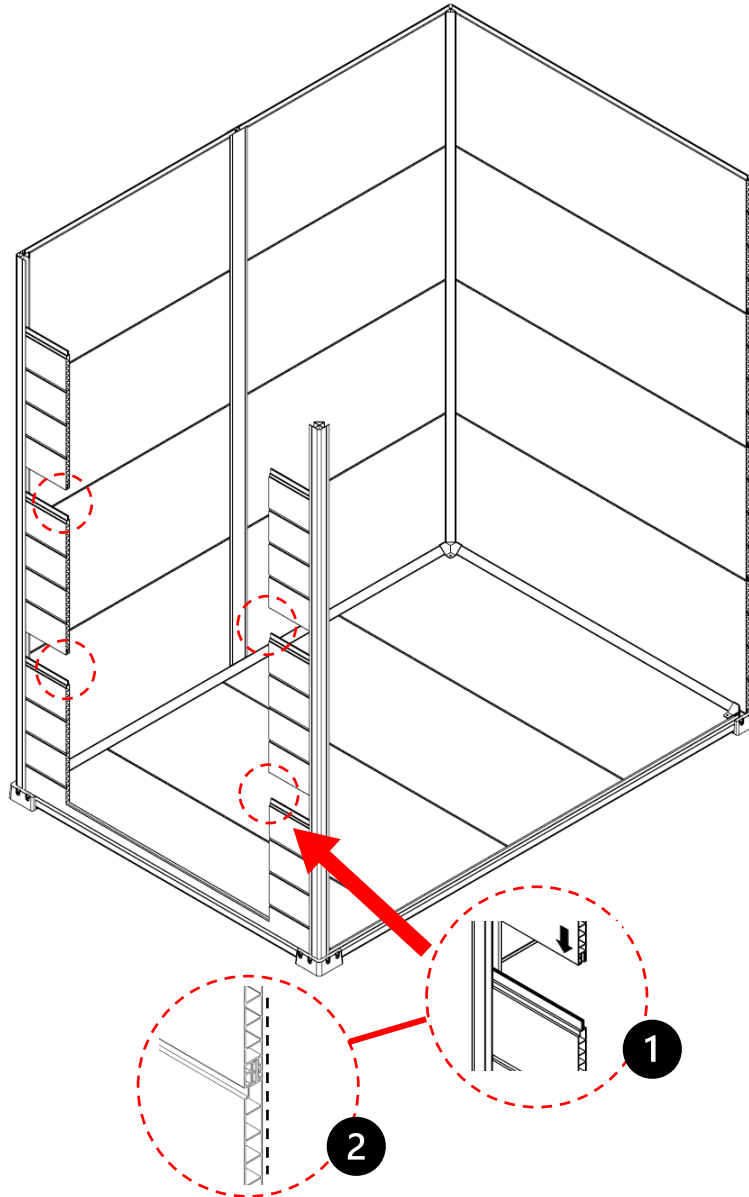

Step 23

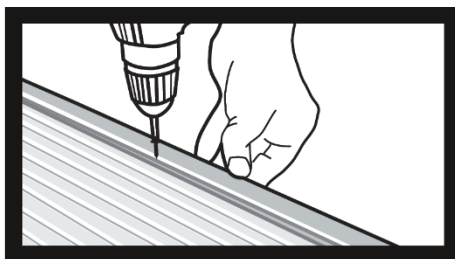


8PC




ST4.2*20

Fix the screws on the profile along the marking line

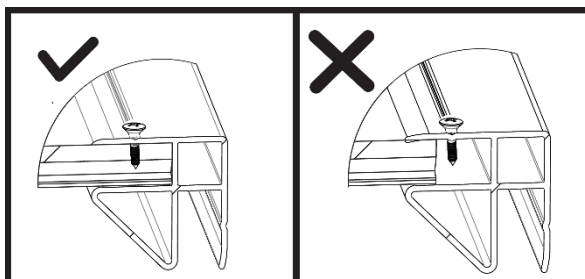


The sheet is fully inserted into the profile to fix the

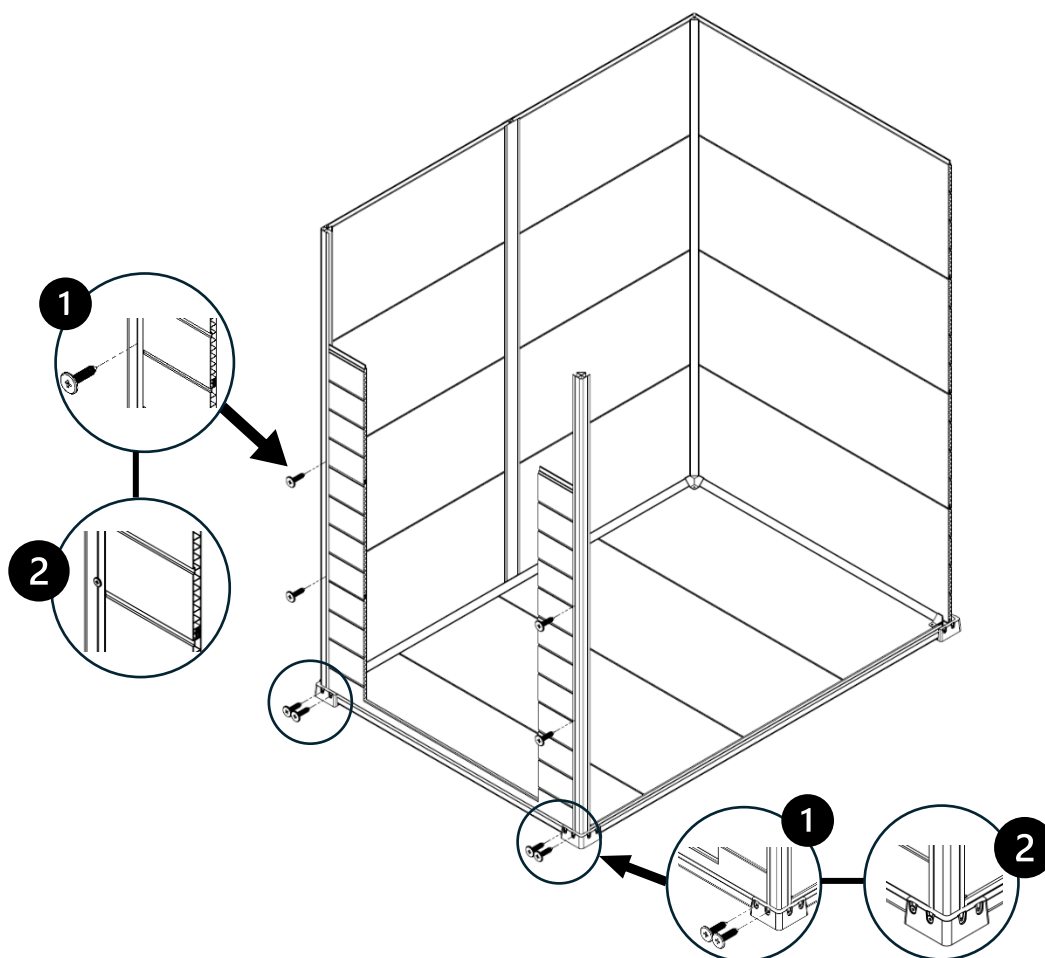

*

Step 24

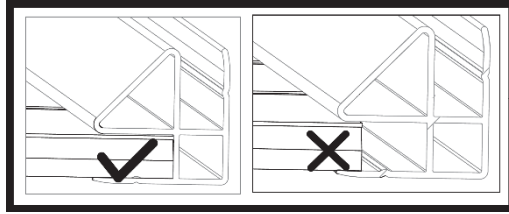


The panel fits perfectly inside the profile


4PC






WA-01

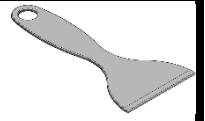




JTTY-D-01

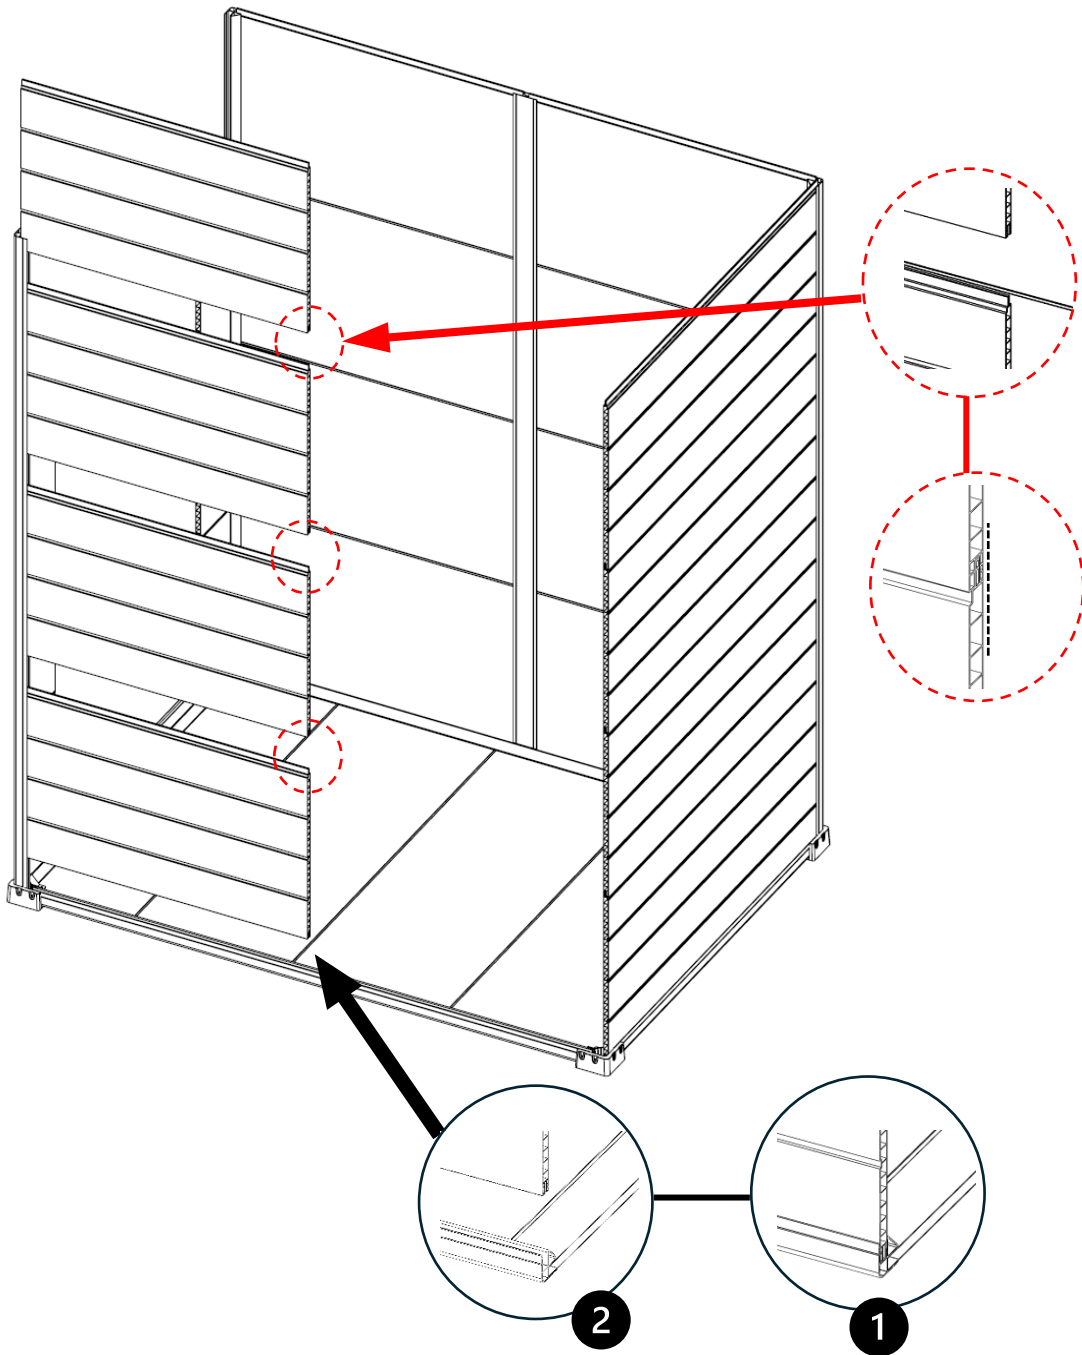


Step 25

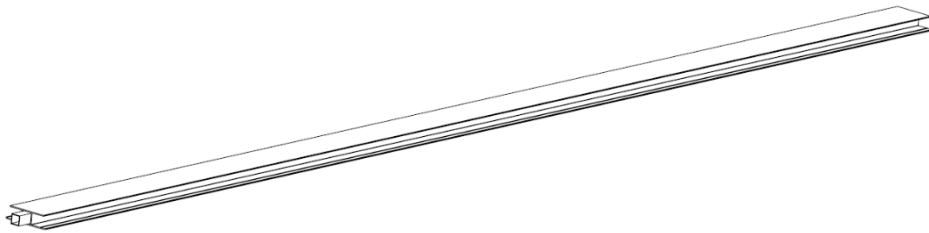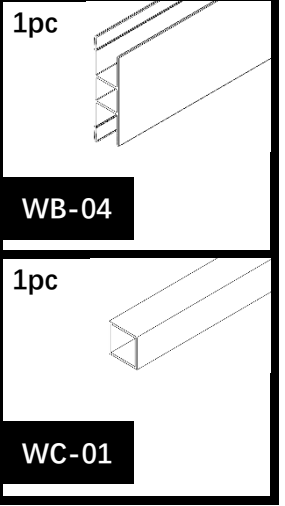

Step 26

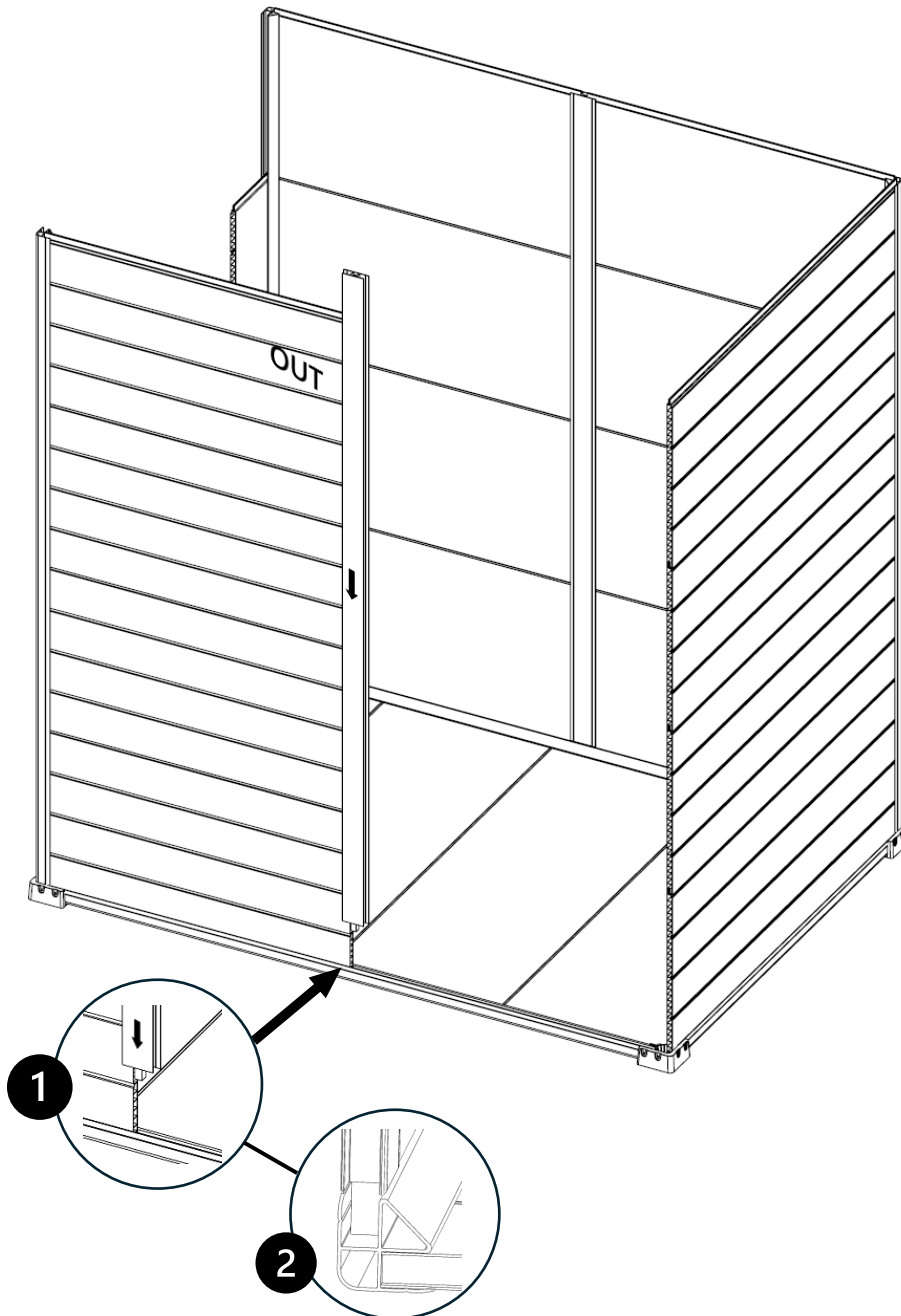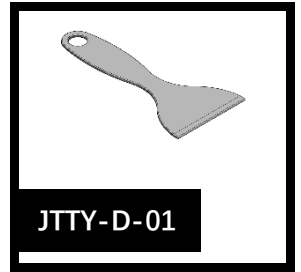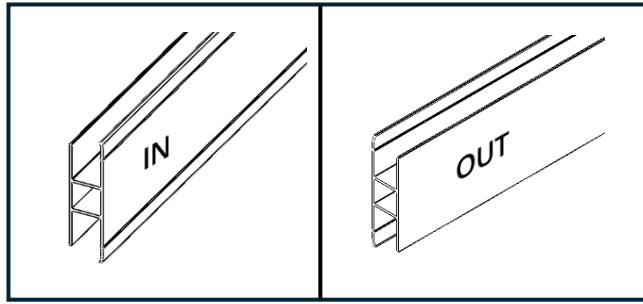


Step 27

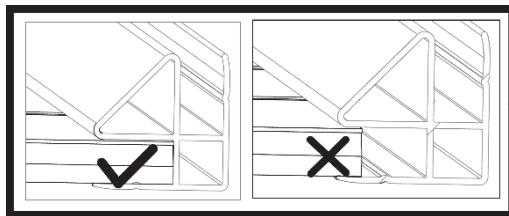


The panel fits perfectly inside the profile



1c

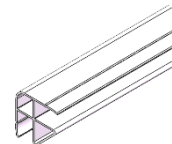


WB-01



JTTY-D-01

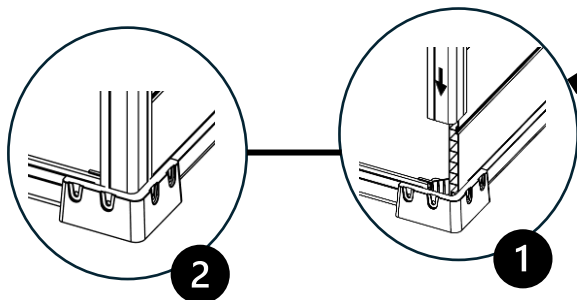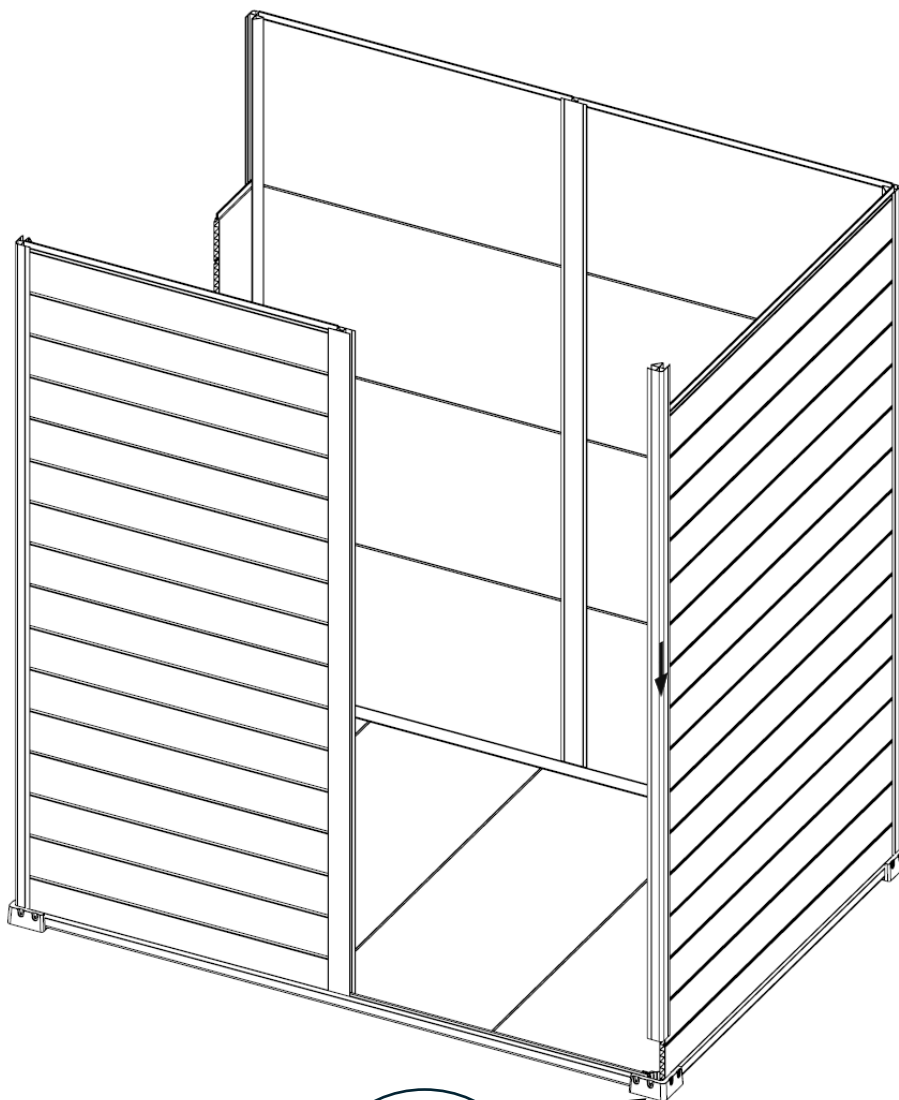

Step 28

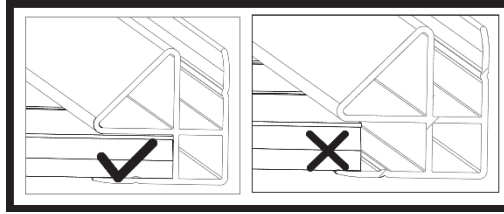


The panel fits perfectly inside the profile


3PC










WA-01





JTTY-D-01

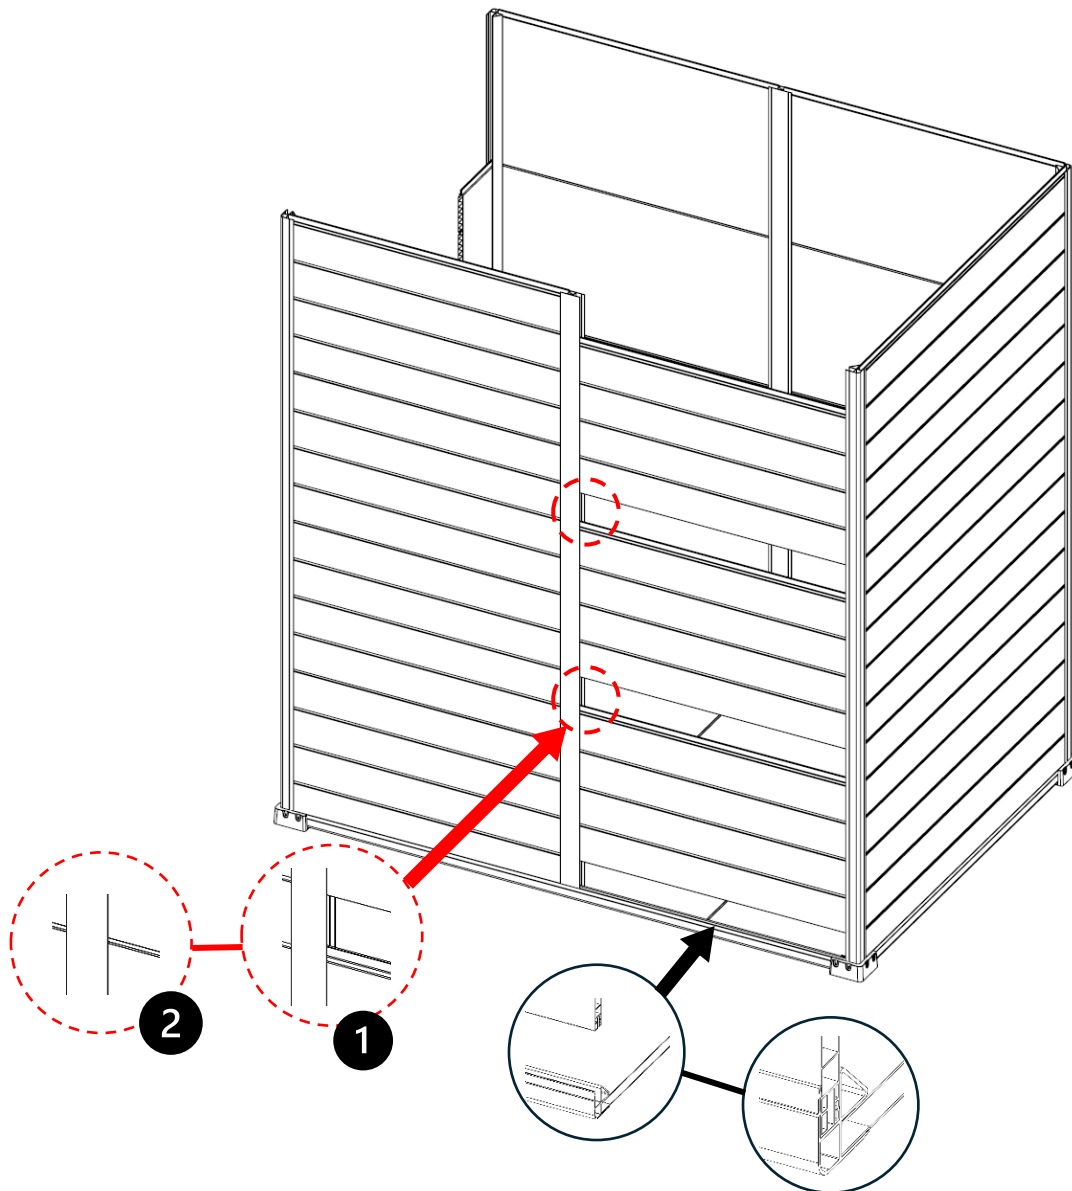


Step 29

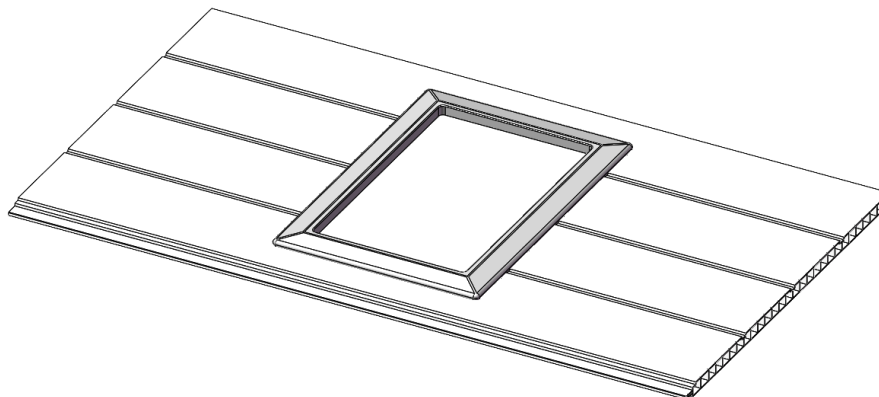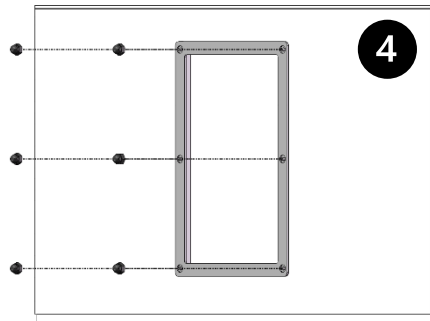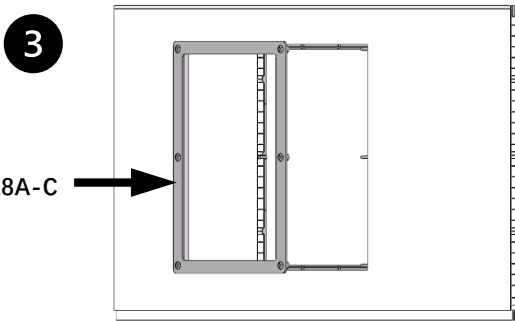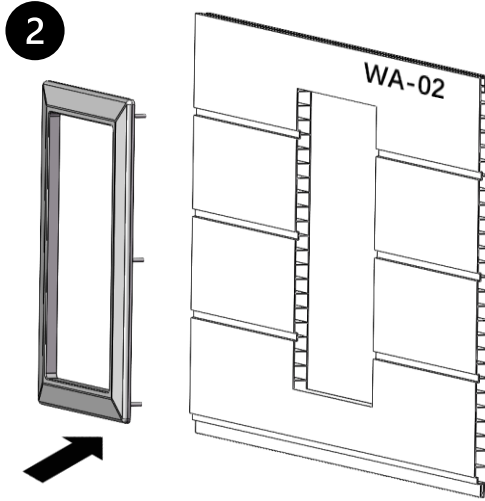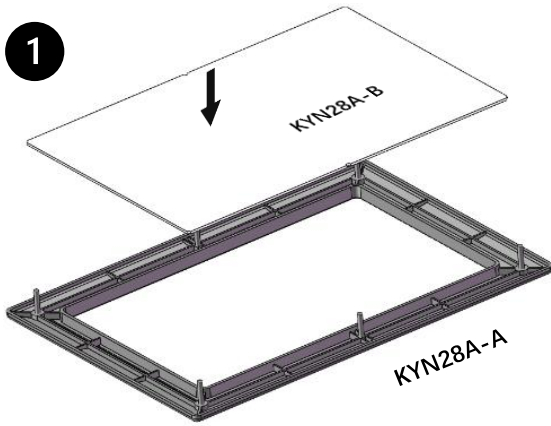


Step 30

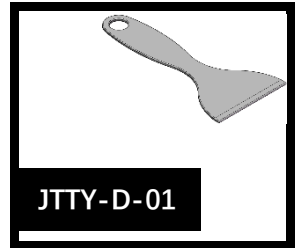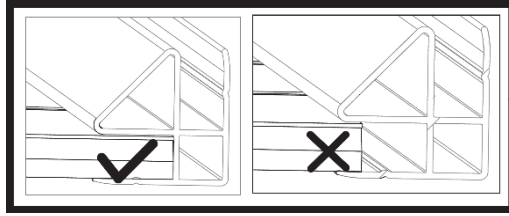

The panel fits perfectly inside the profile

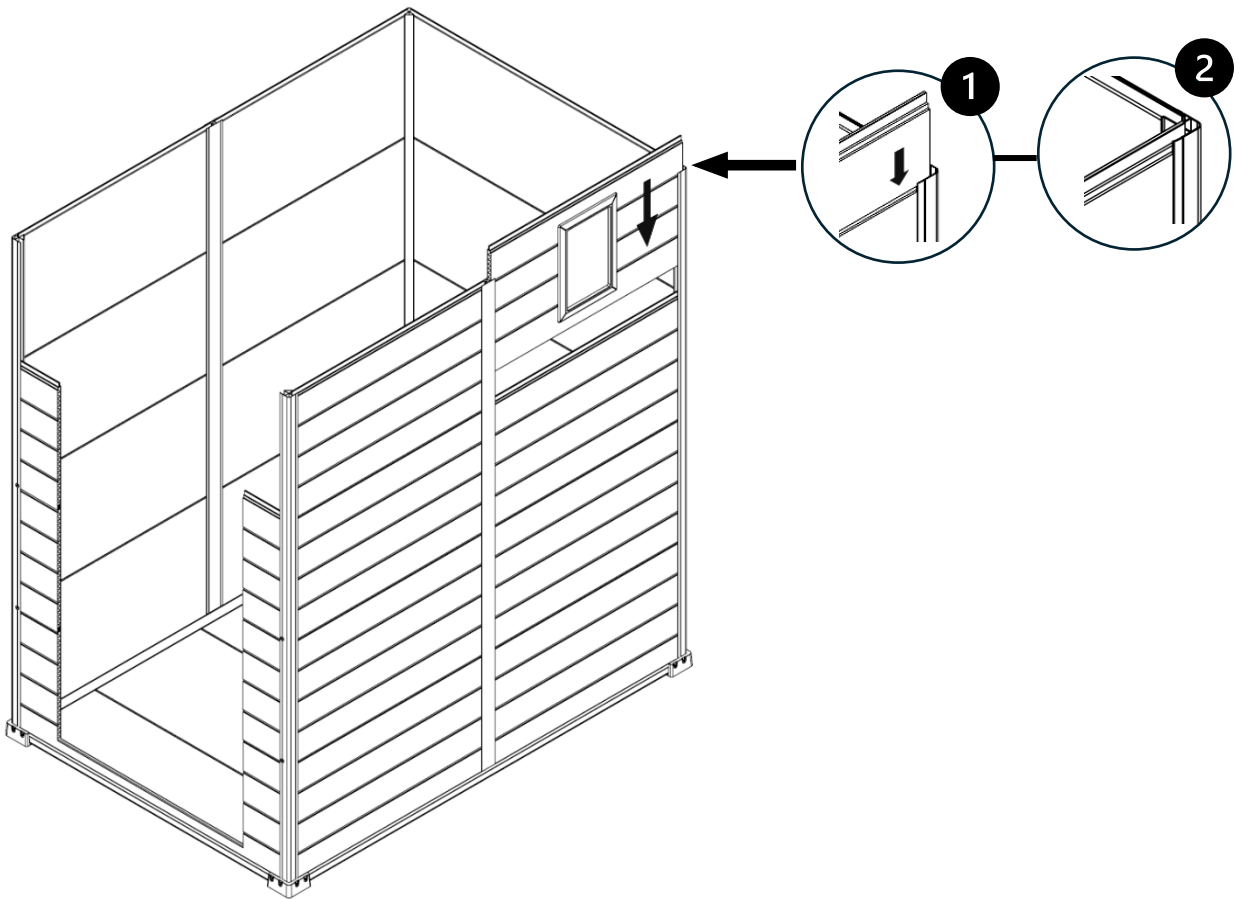

Step 31

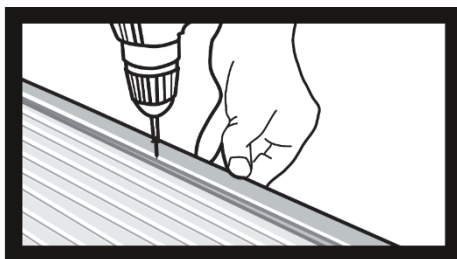


6pc




ST4.2*20


Fix the screws on the profile along the marking line

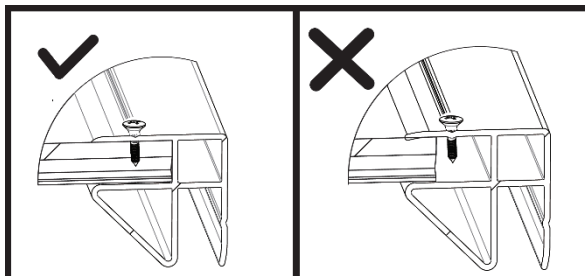

The sheet is fully inserted into the profile to fix the

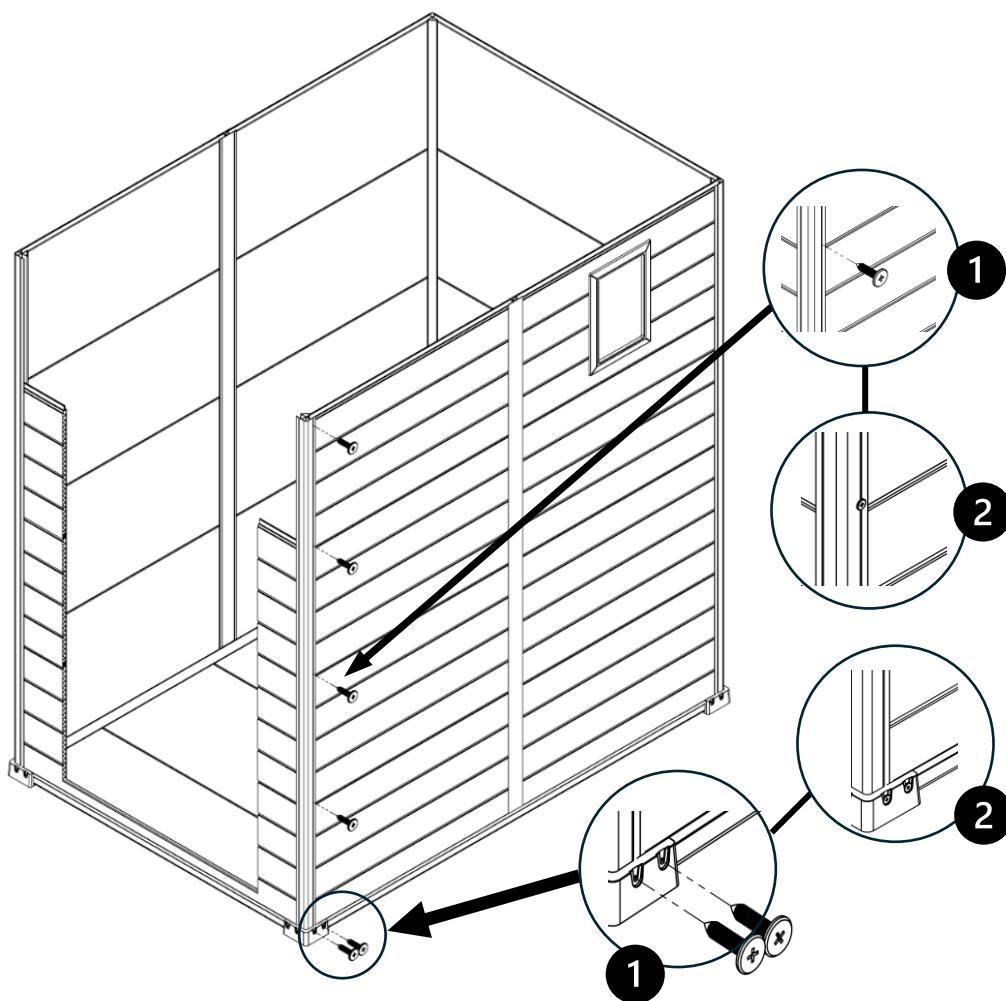

Step 32

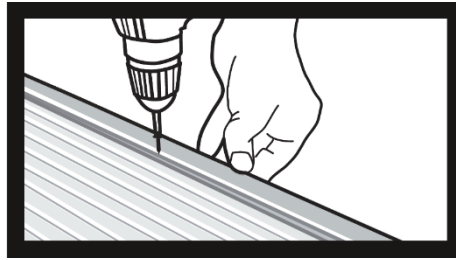


12pc




ST4.2*20


Fix the screws on the profile along the marking line

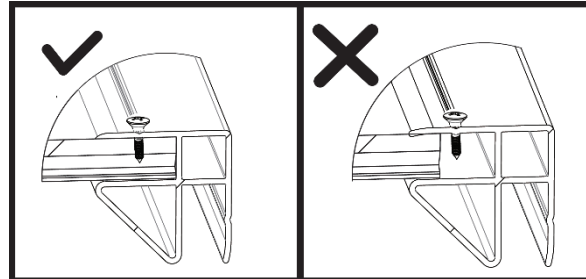


The sheet is fully inserted into the profile to fix the

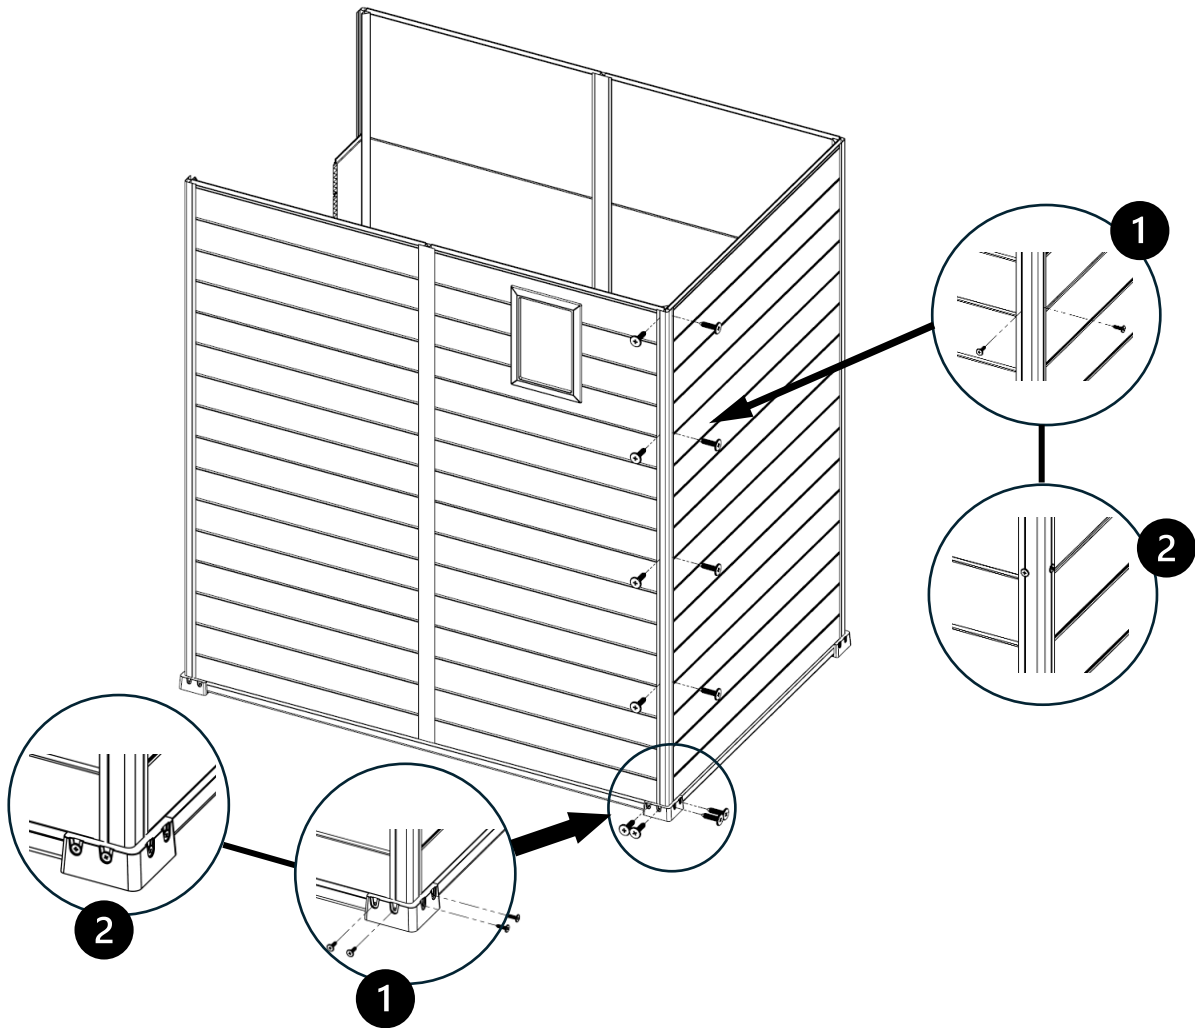


Step 33

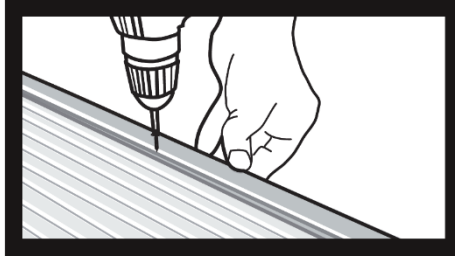

Fix the screws on the profile along the marking line

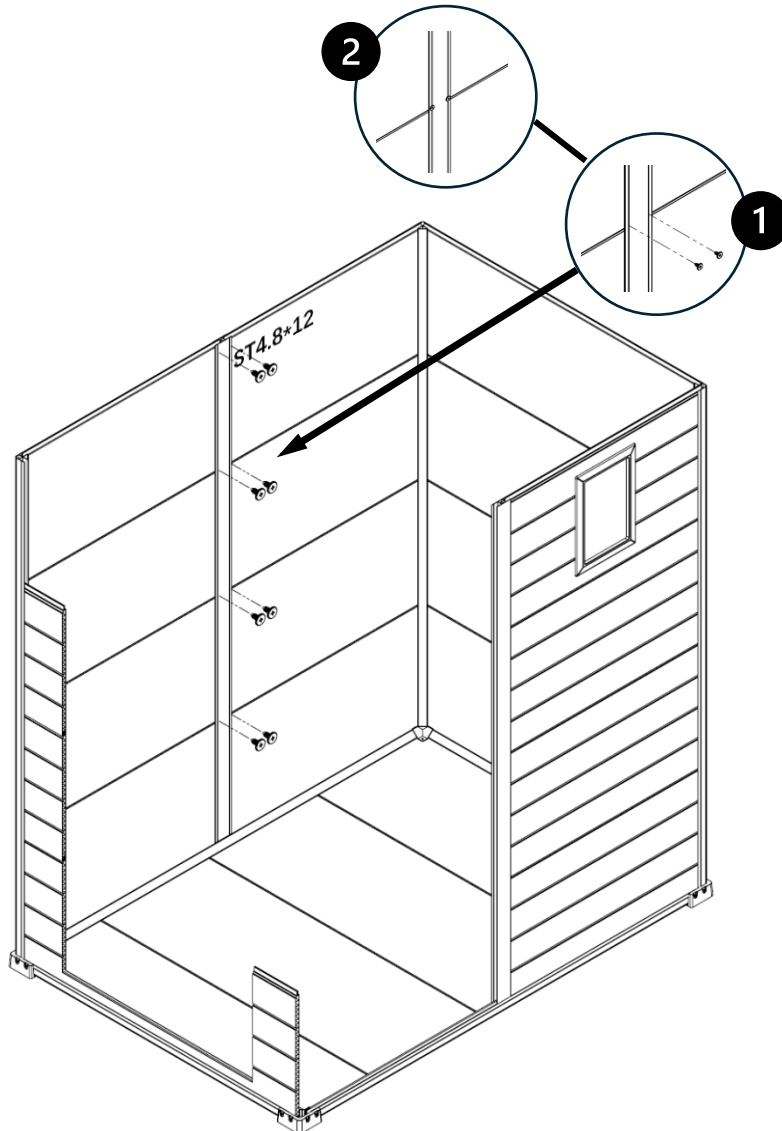

Step 34

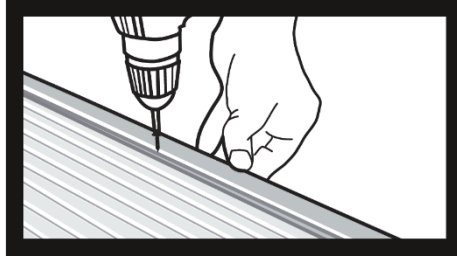


8pc




ST4.2*12

Fix the screws on the profile along the marking line

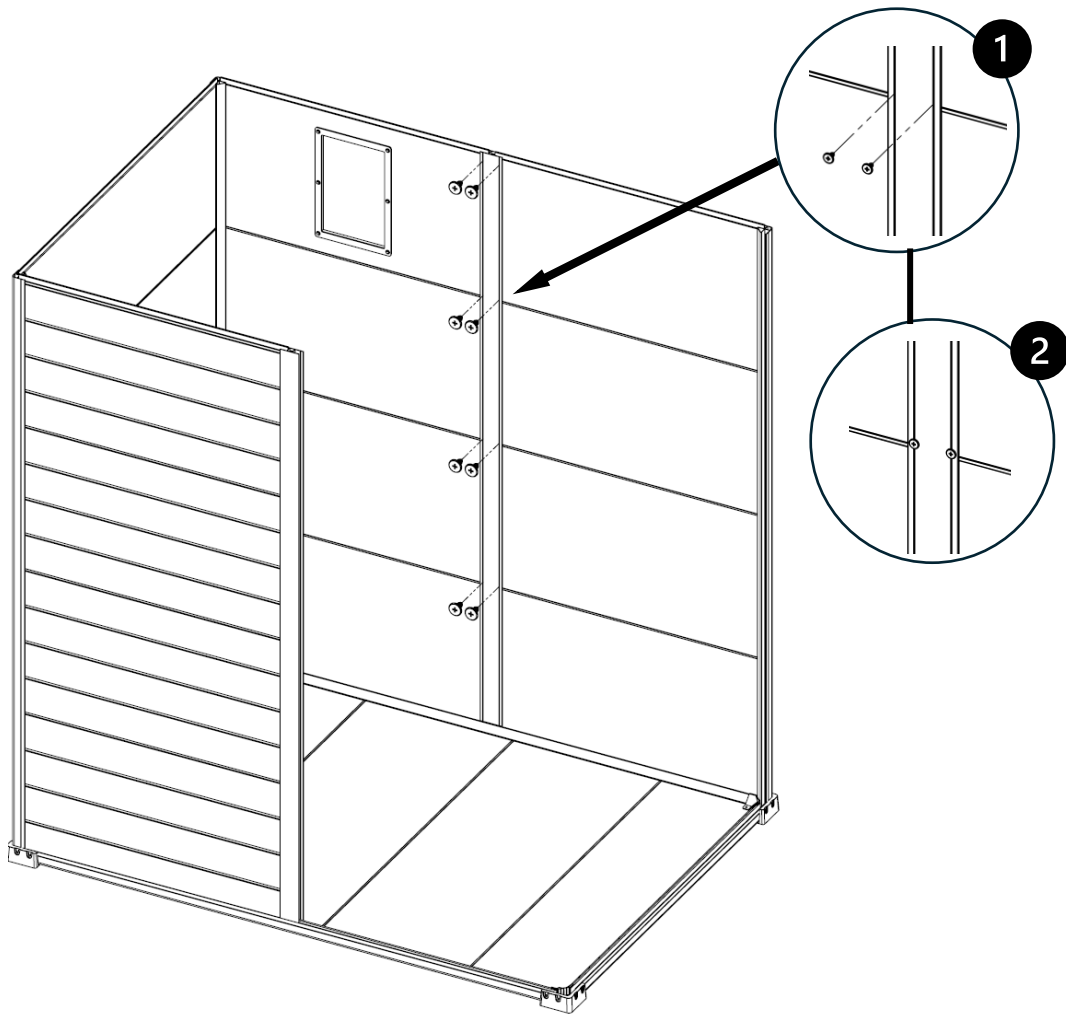


Step 35

1pc




JTMK-WC-02

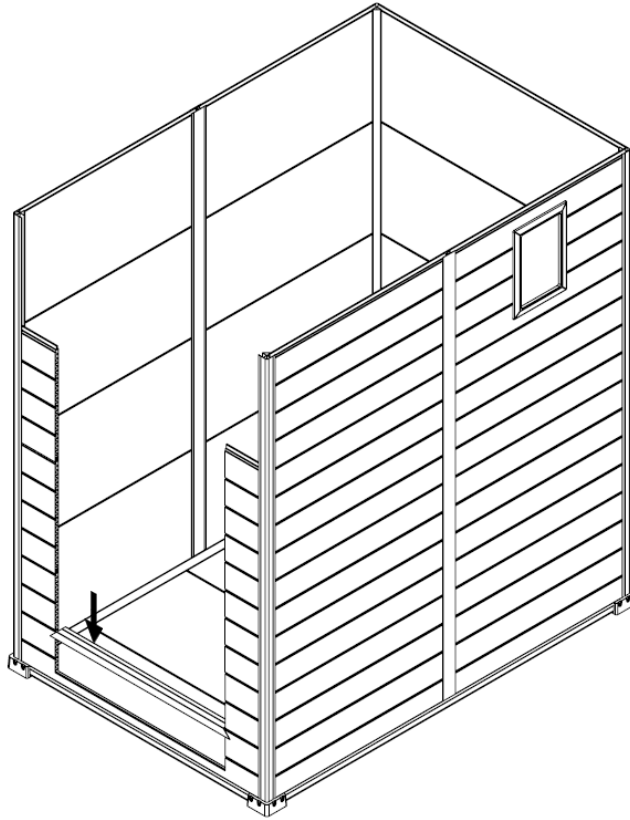


Step 36

1pc

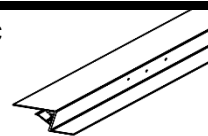


JTMK-WC-01


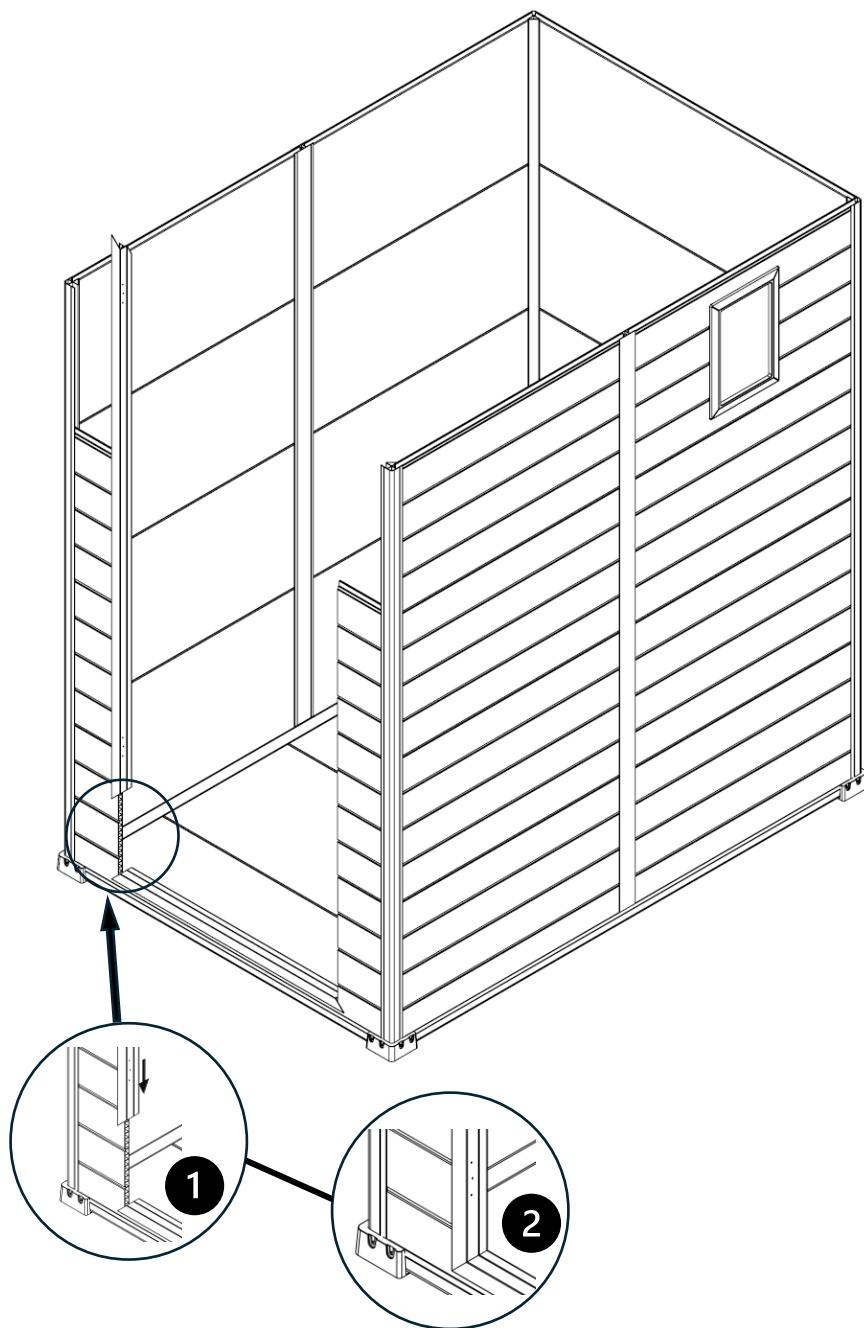


Step 37



1pc



JTMK-WC-03

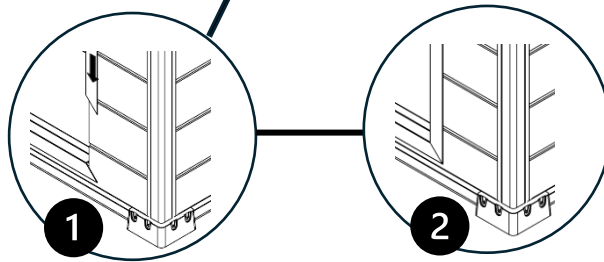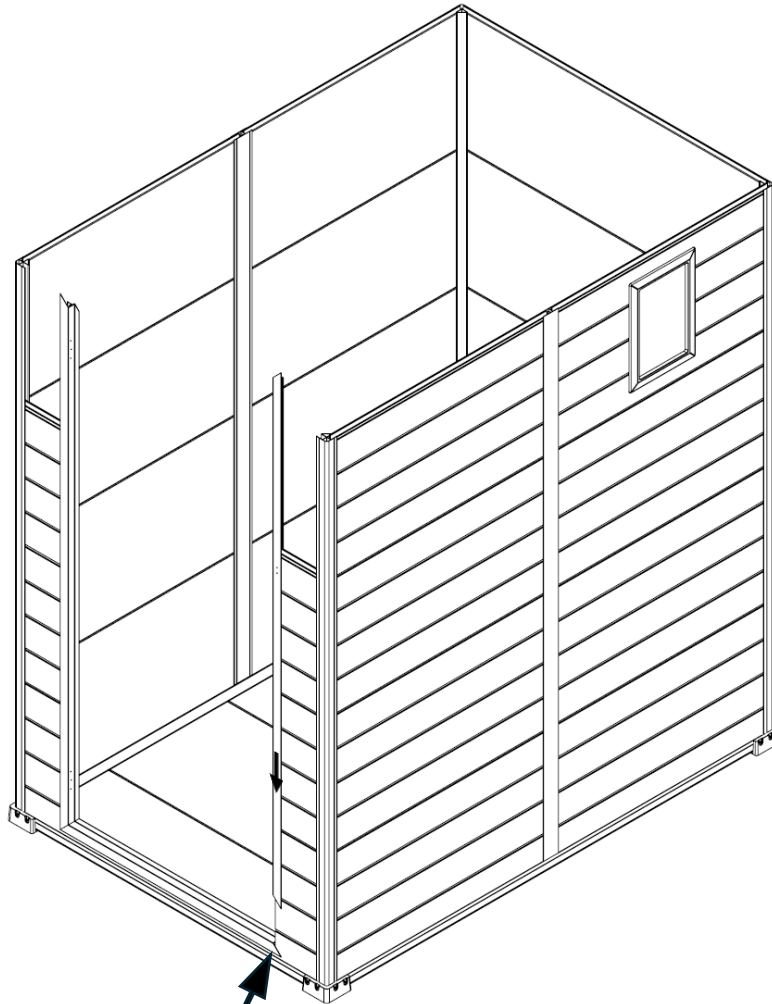


Step 38

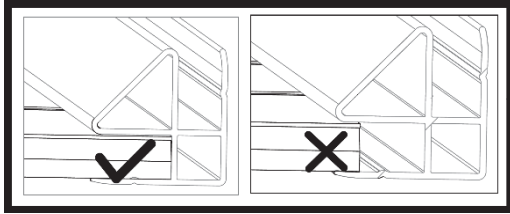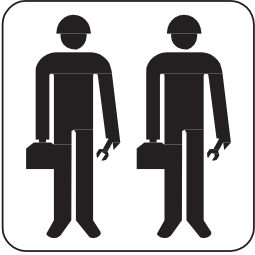


The panel fits perfectly inside the profile


1PC	
JTMK-WC-02	
1PC	
WA-04	
JTTY-D-01	

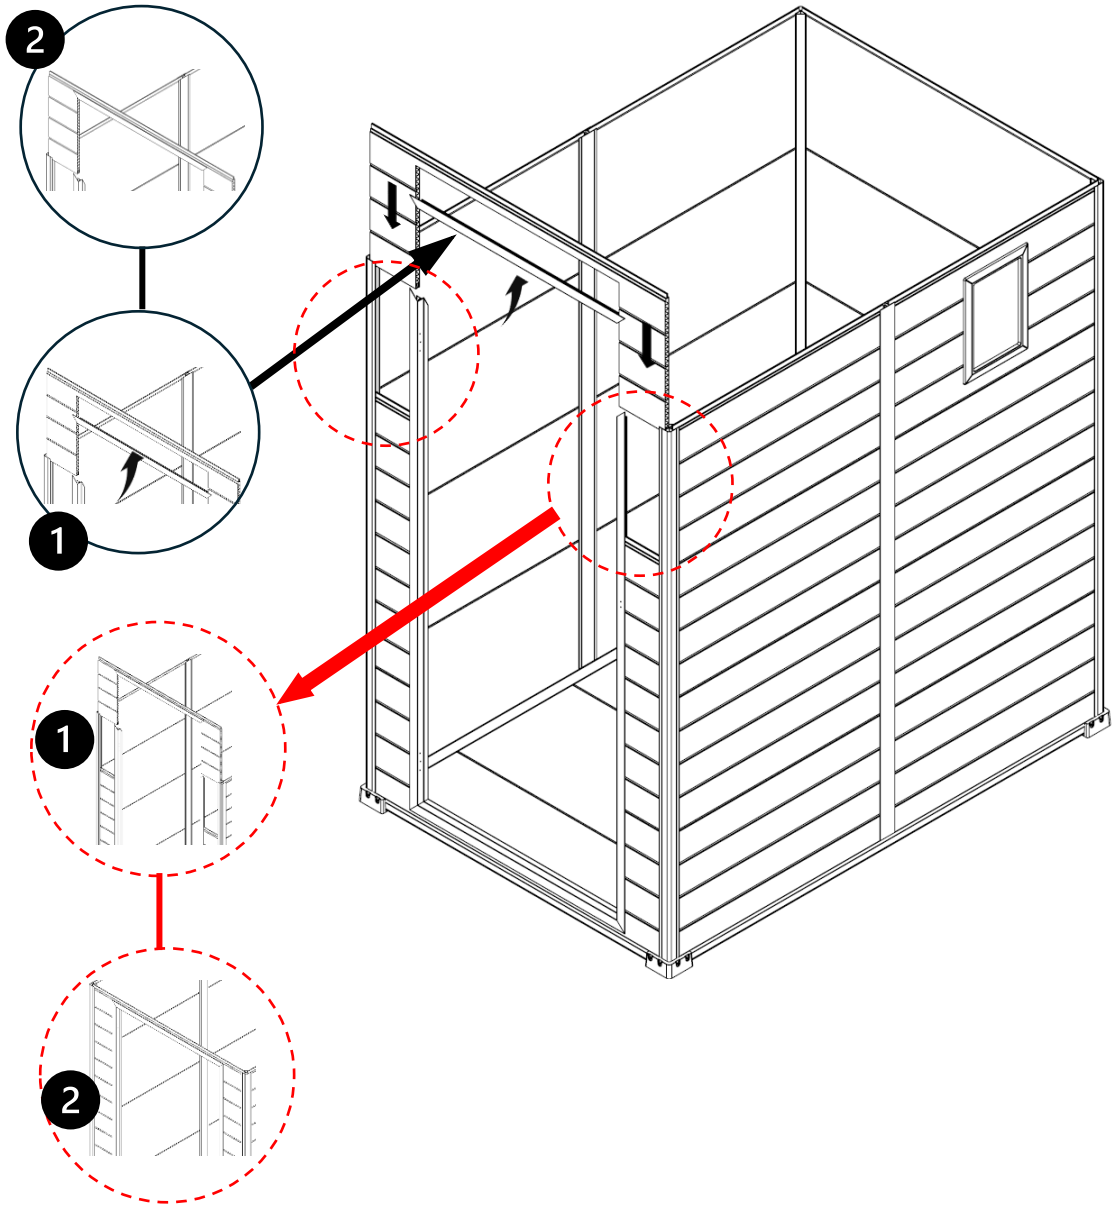


Step 39

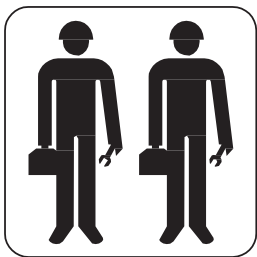

$AB=CD$

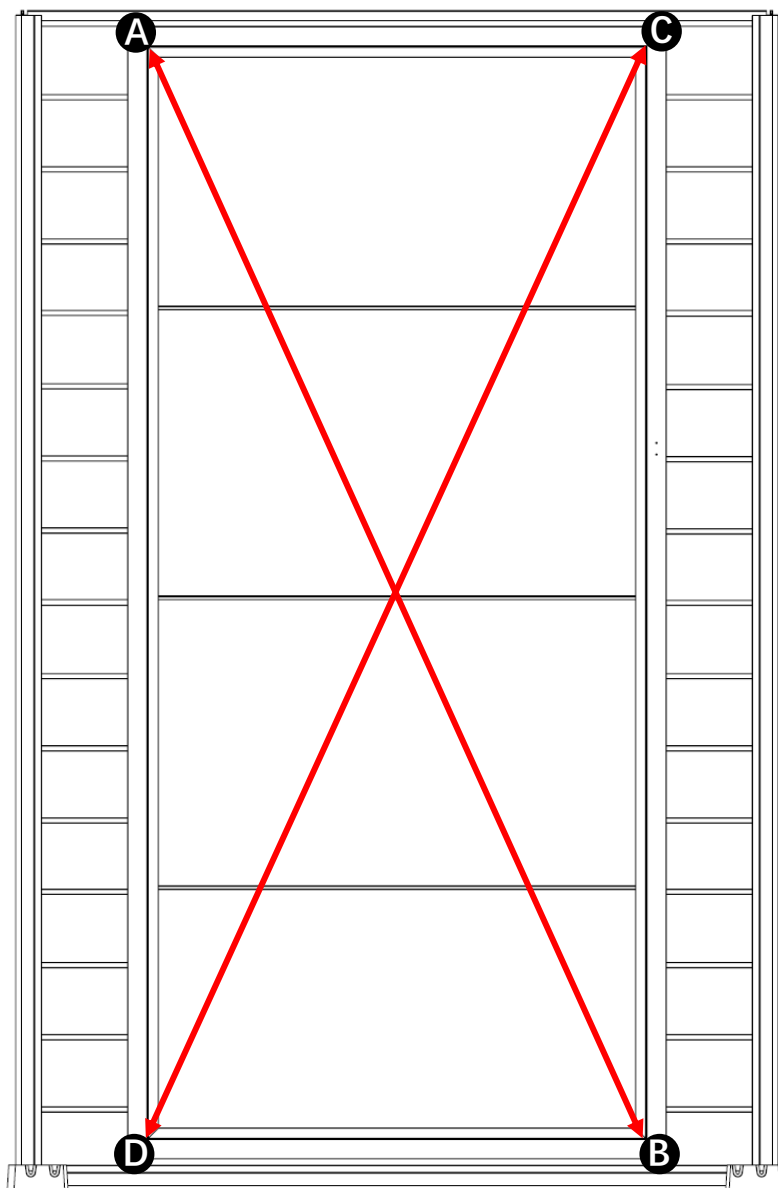


Step 40

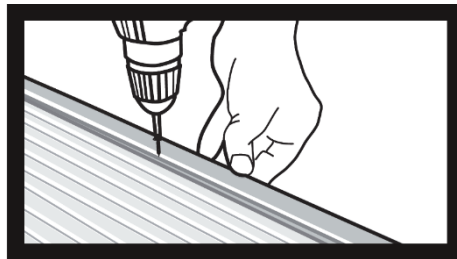


2PC




ST4.8*20

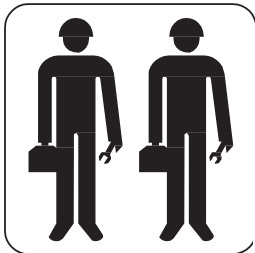


Fix the screws on the profile along the marking line

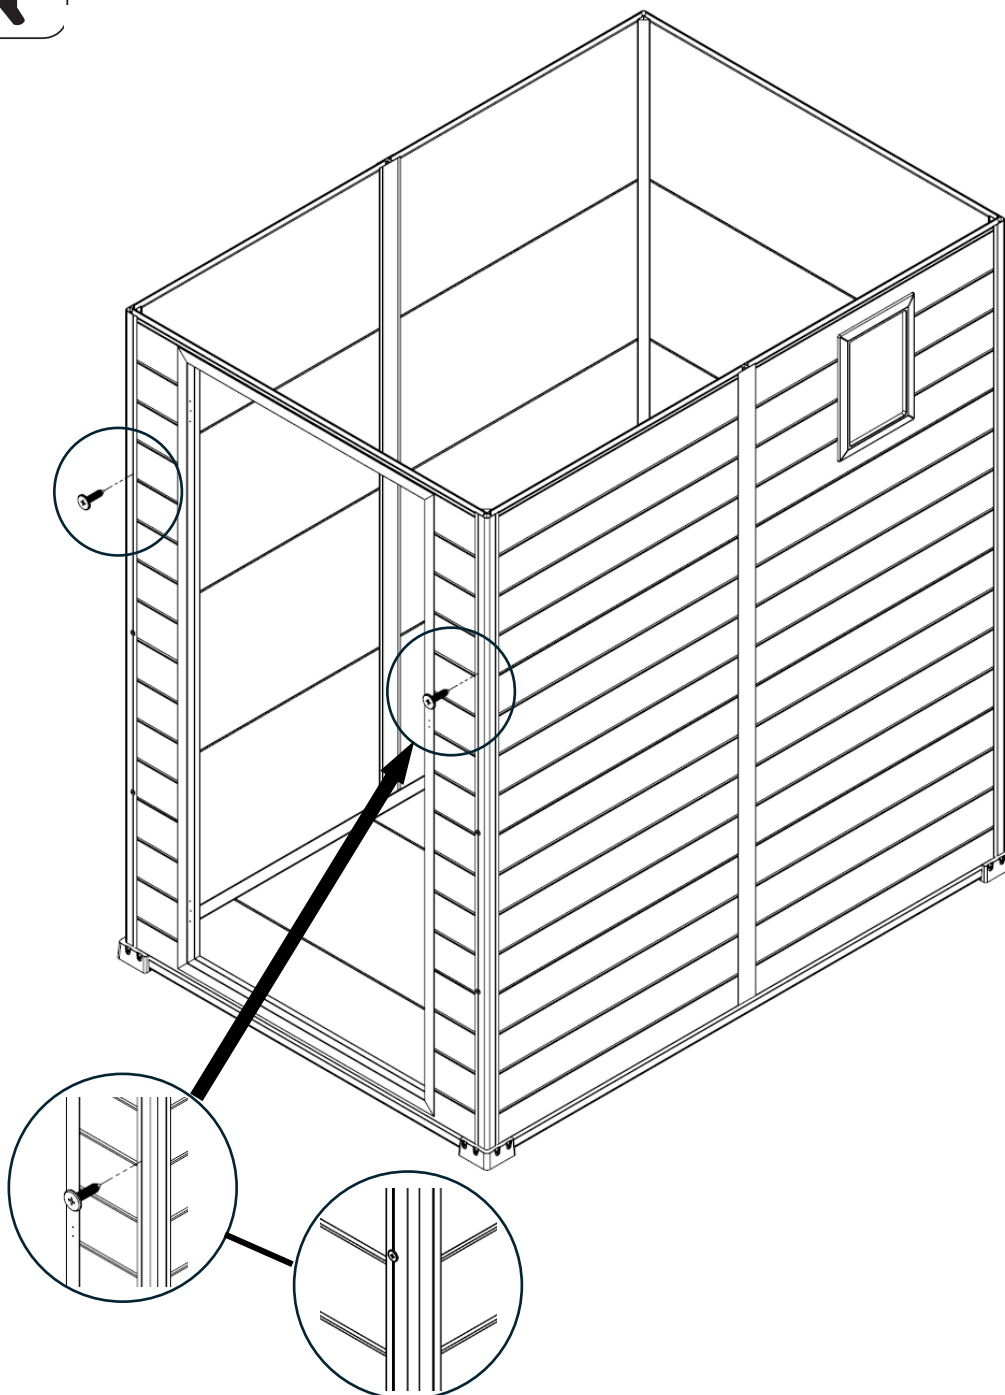

Step 41

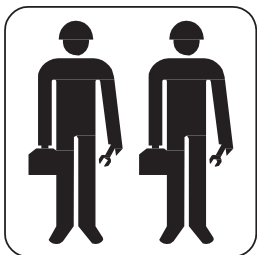


16PC




STYW4.2*12

4PC




JTMK-WC-04


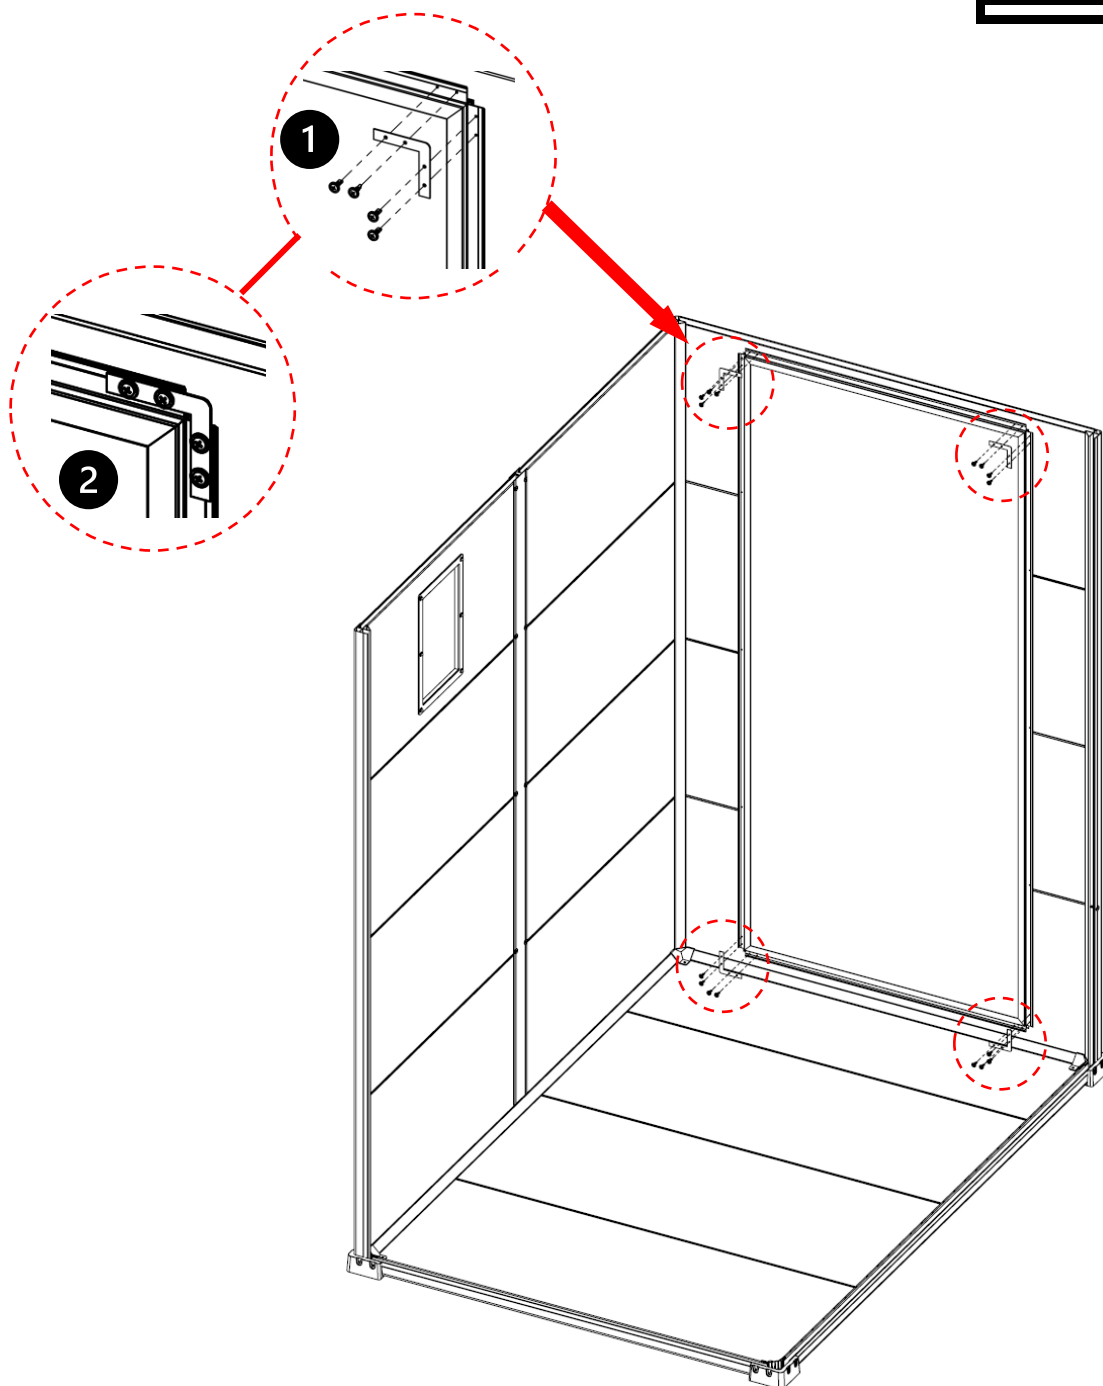


Step 42

6PC




STYW4.2*12

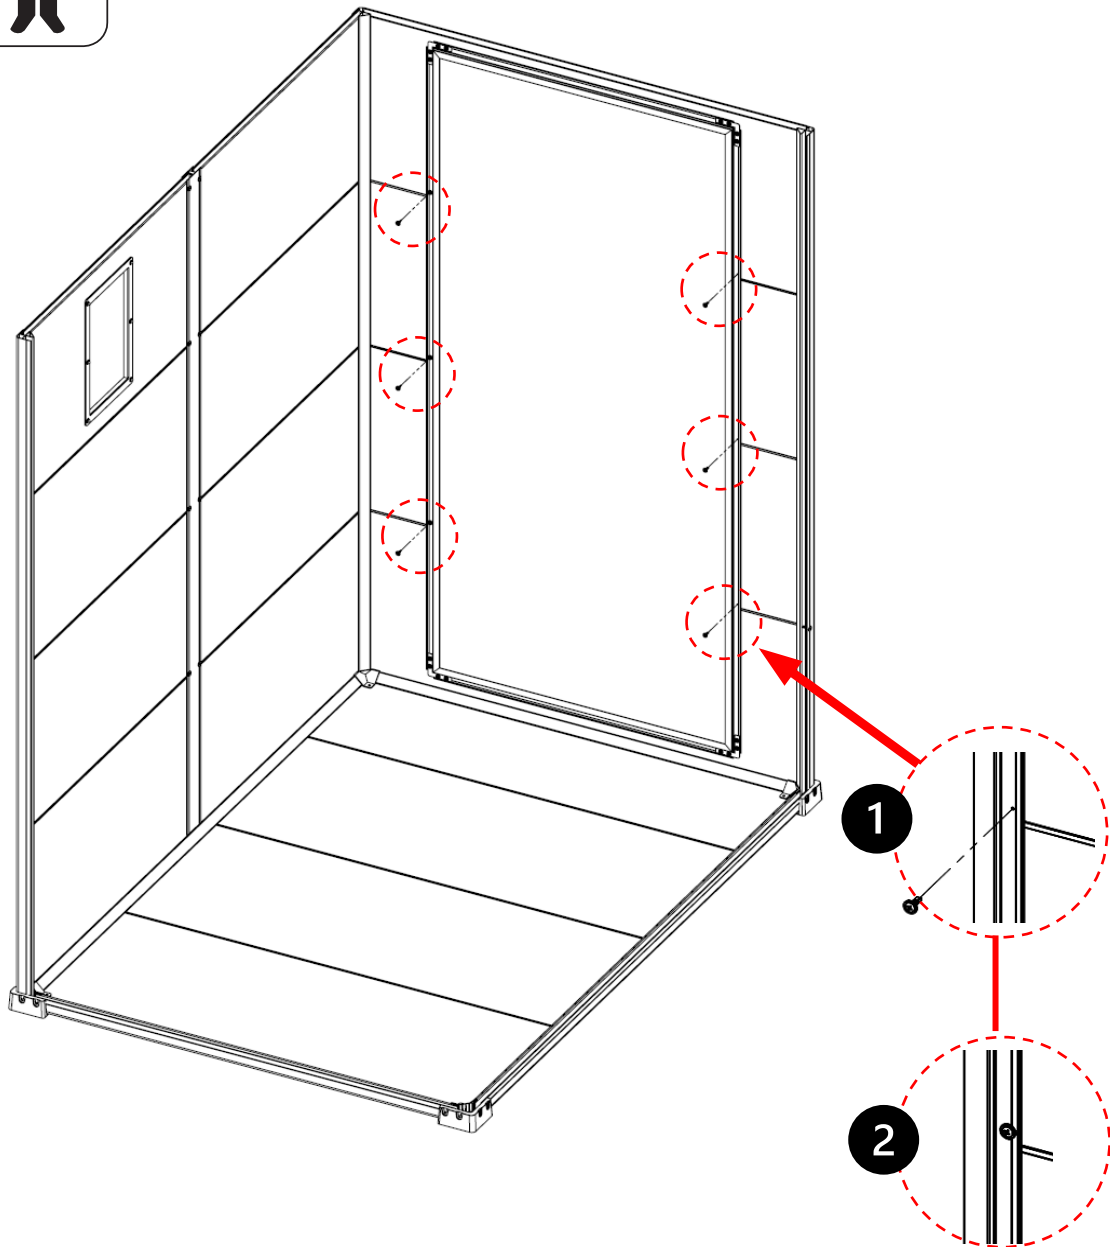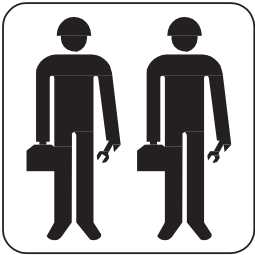


Step 43

2PC



WA-08

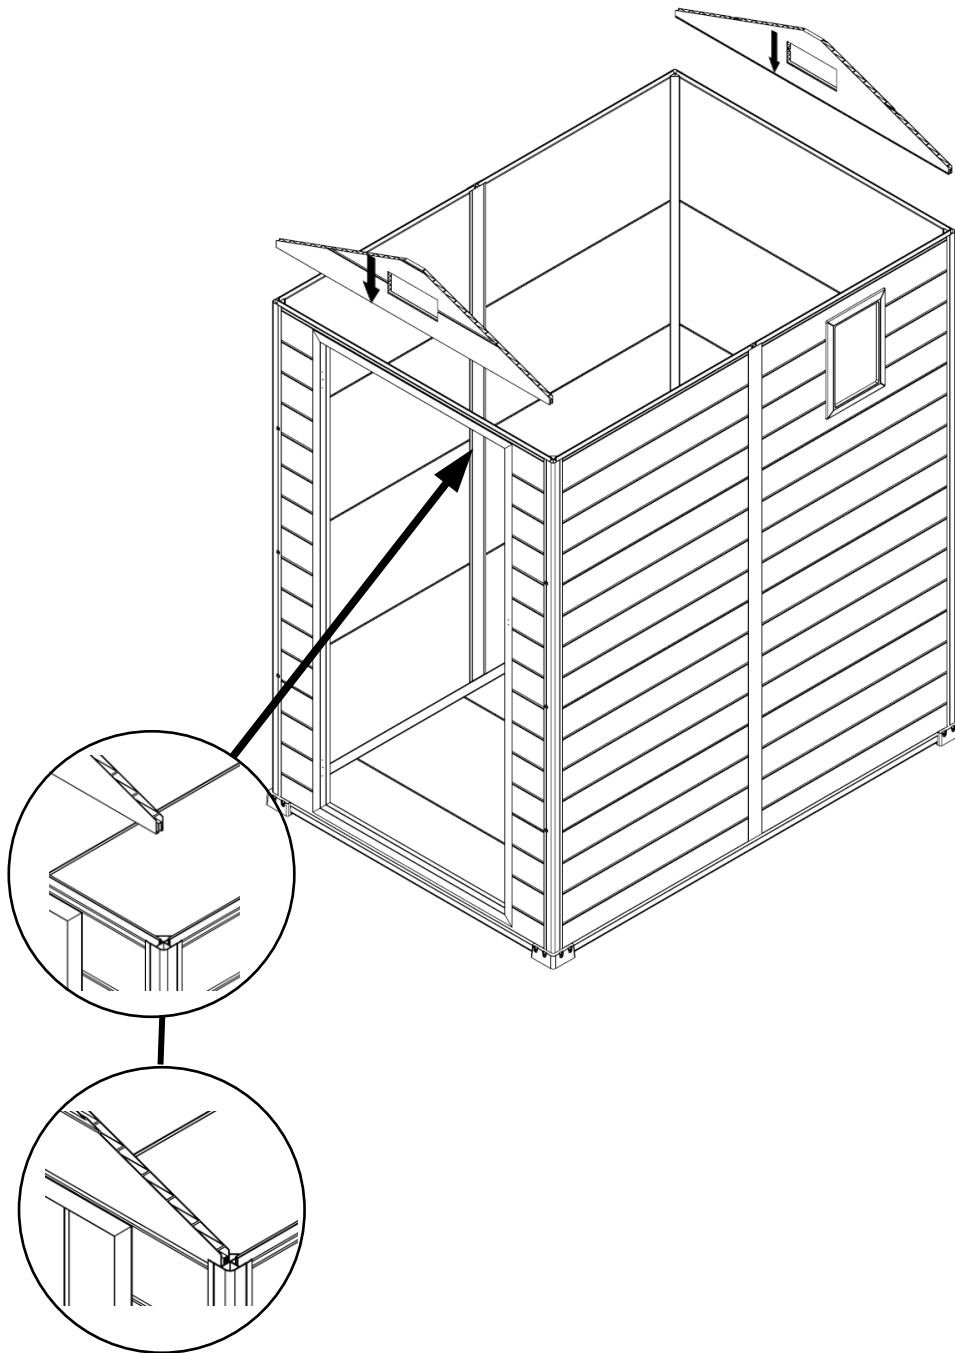


Step 44


6PC




STYW4.2*12

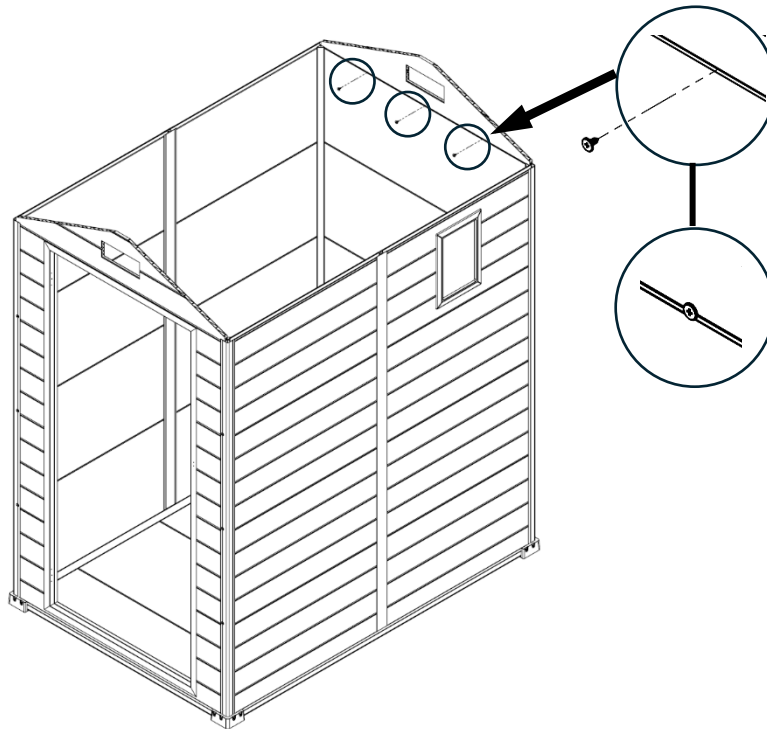

Step 45





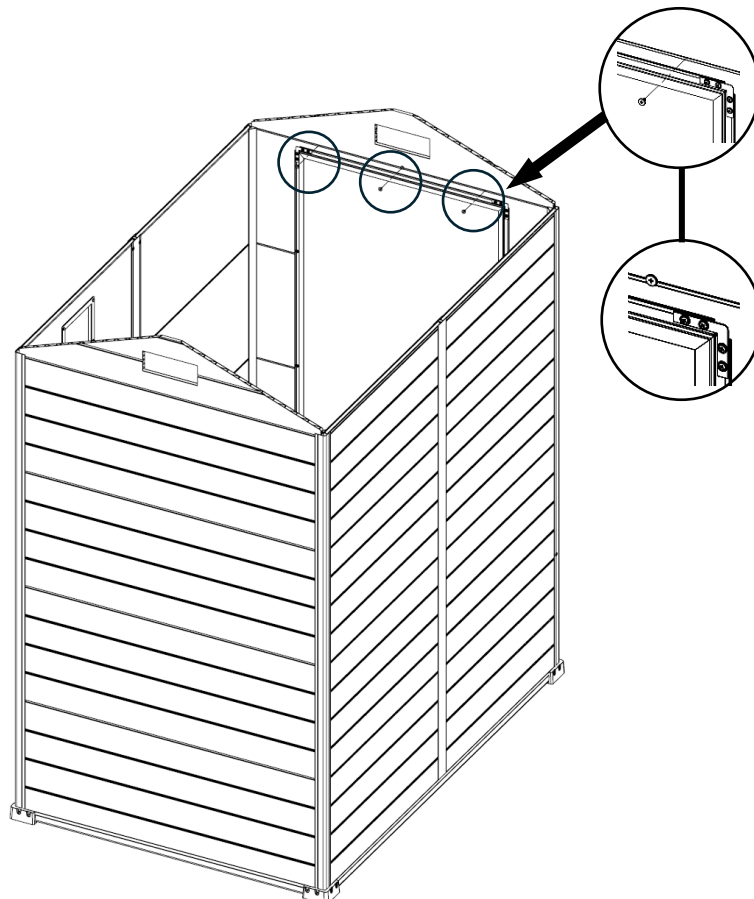


Roof parts

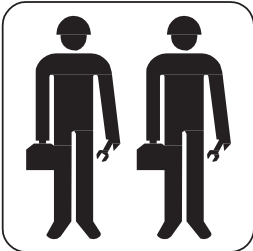


Note: The roof stripes are facing upwards

Use a spatula to make it easier to insert the panel

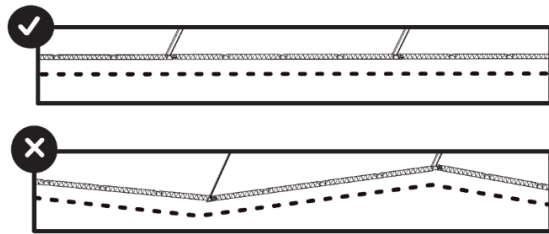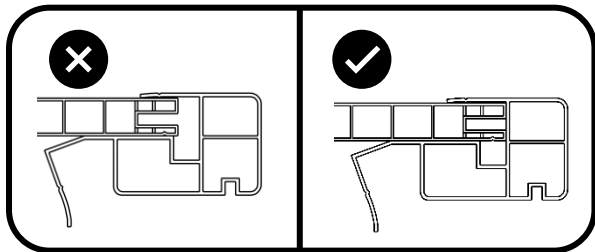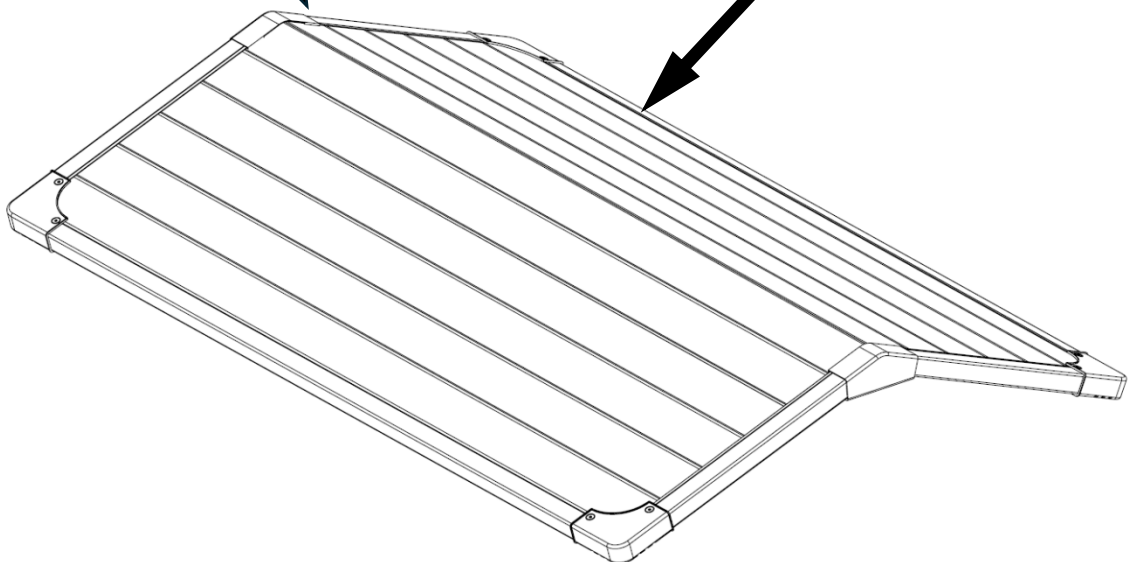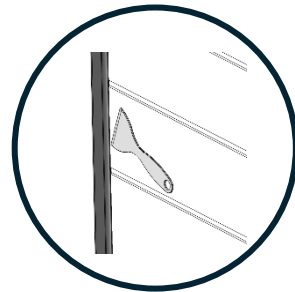
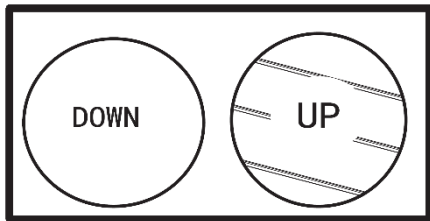


During installation, the plate remains vertical and cannot





Step 46

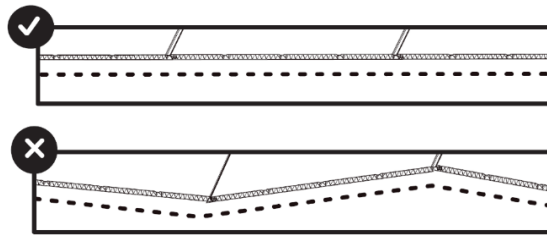





During installation, the plate remains vertical and cannot

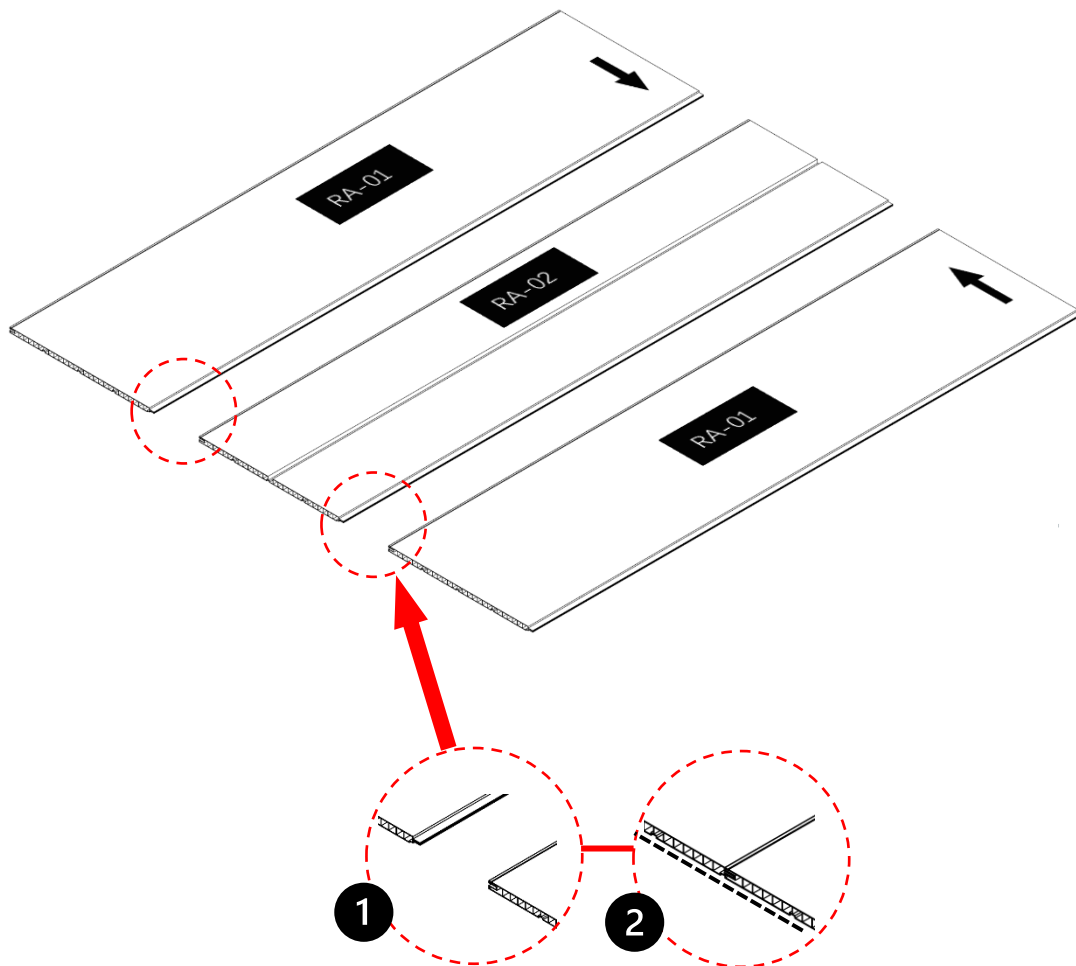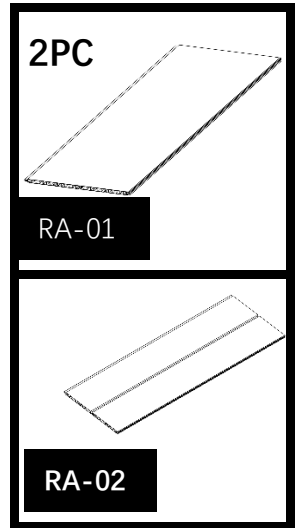





Step 47

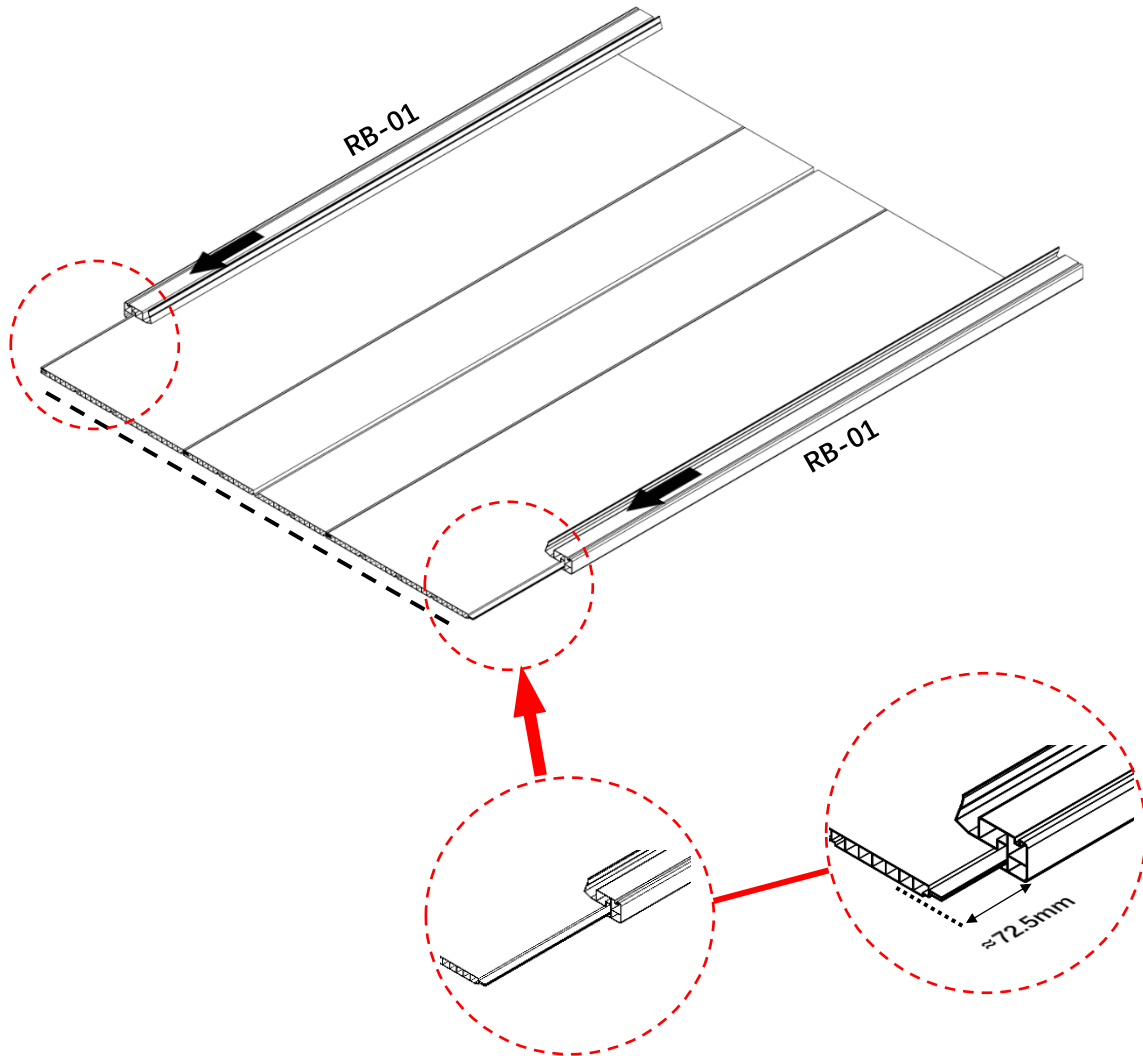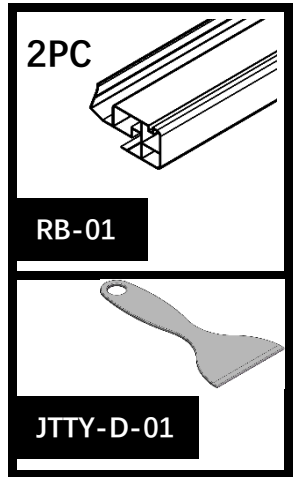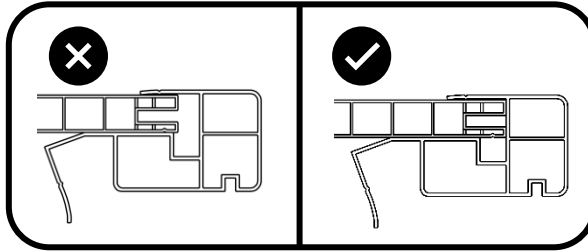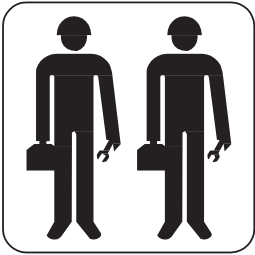

Step 48

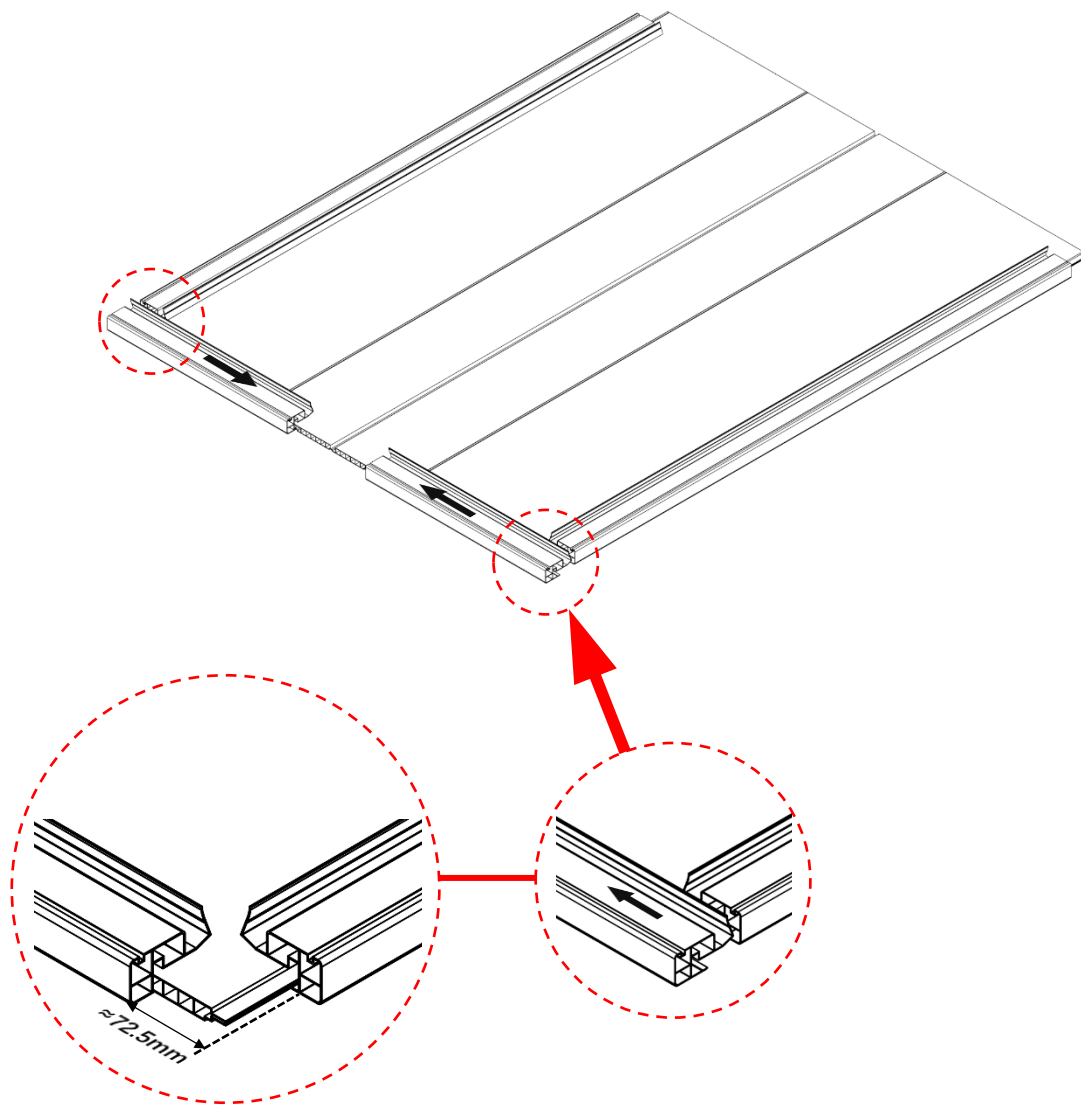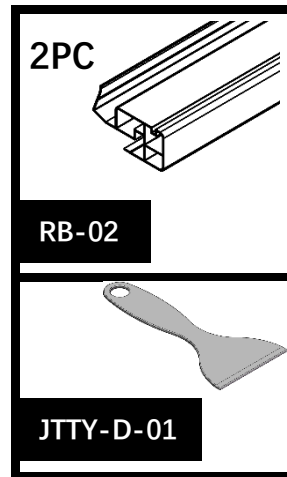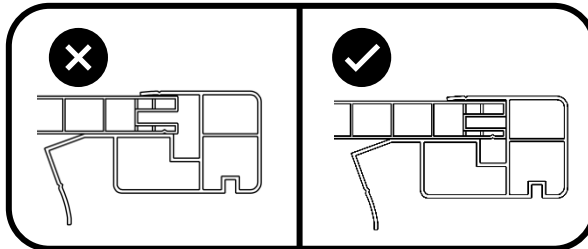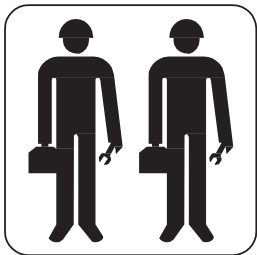


Step 49

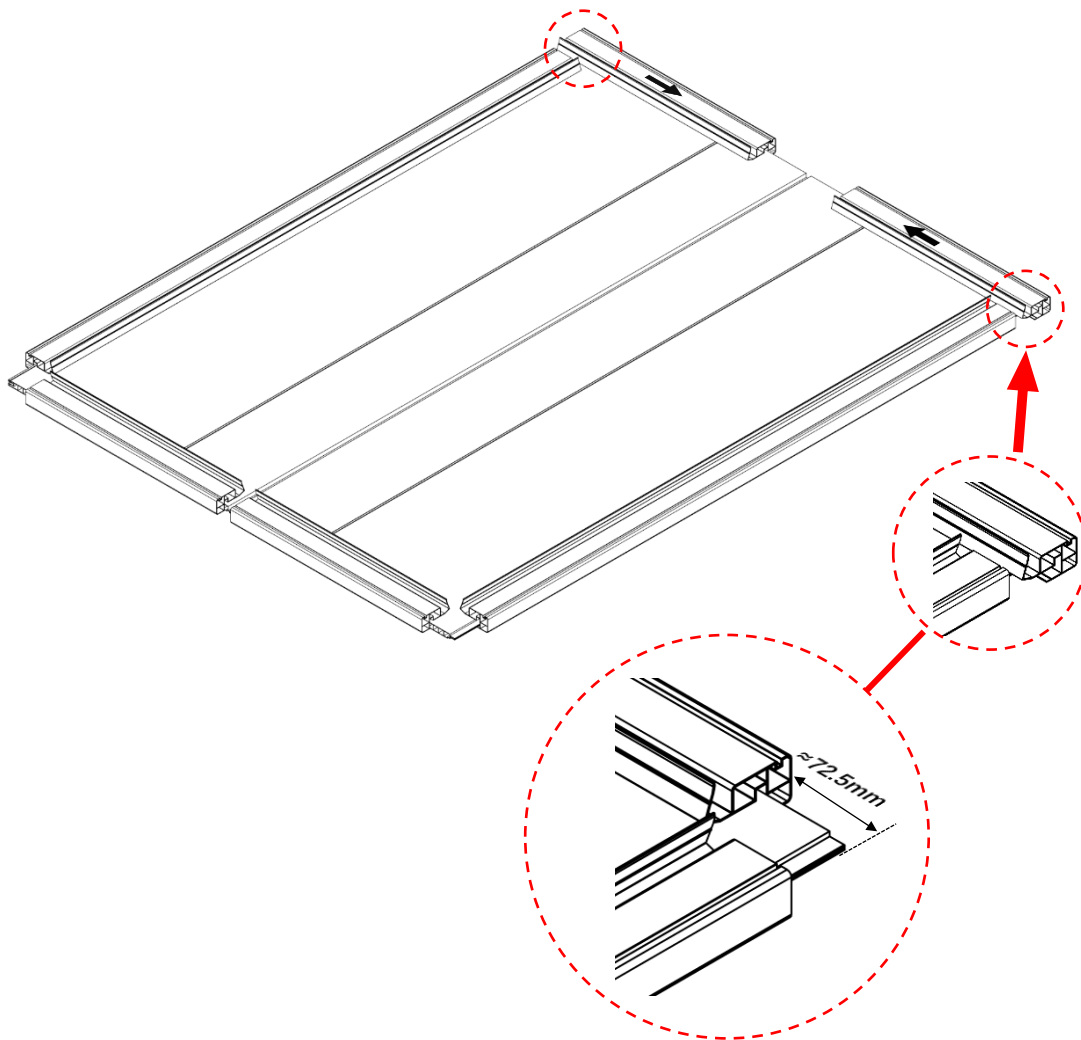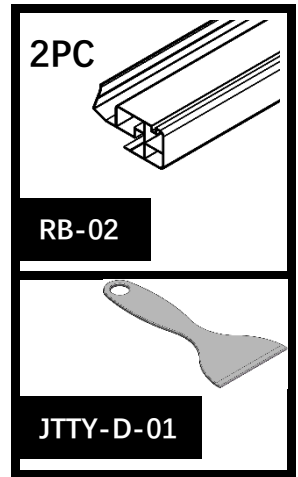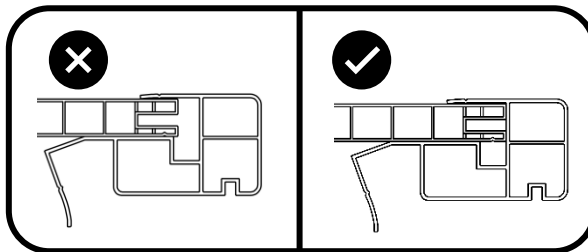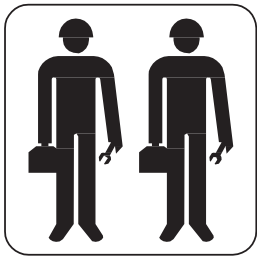


Step 50

4PC




JTRB-02

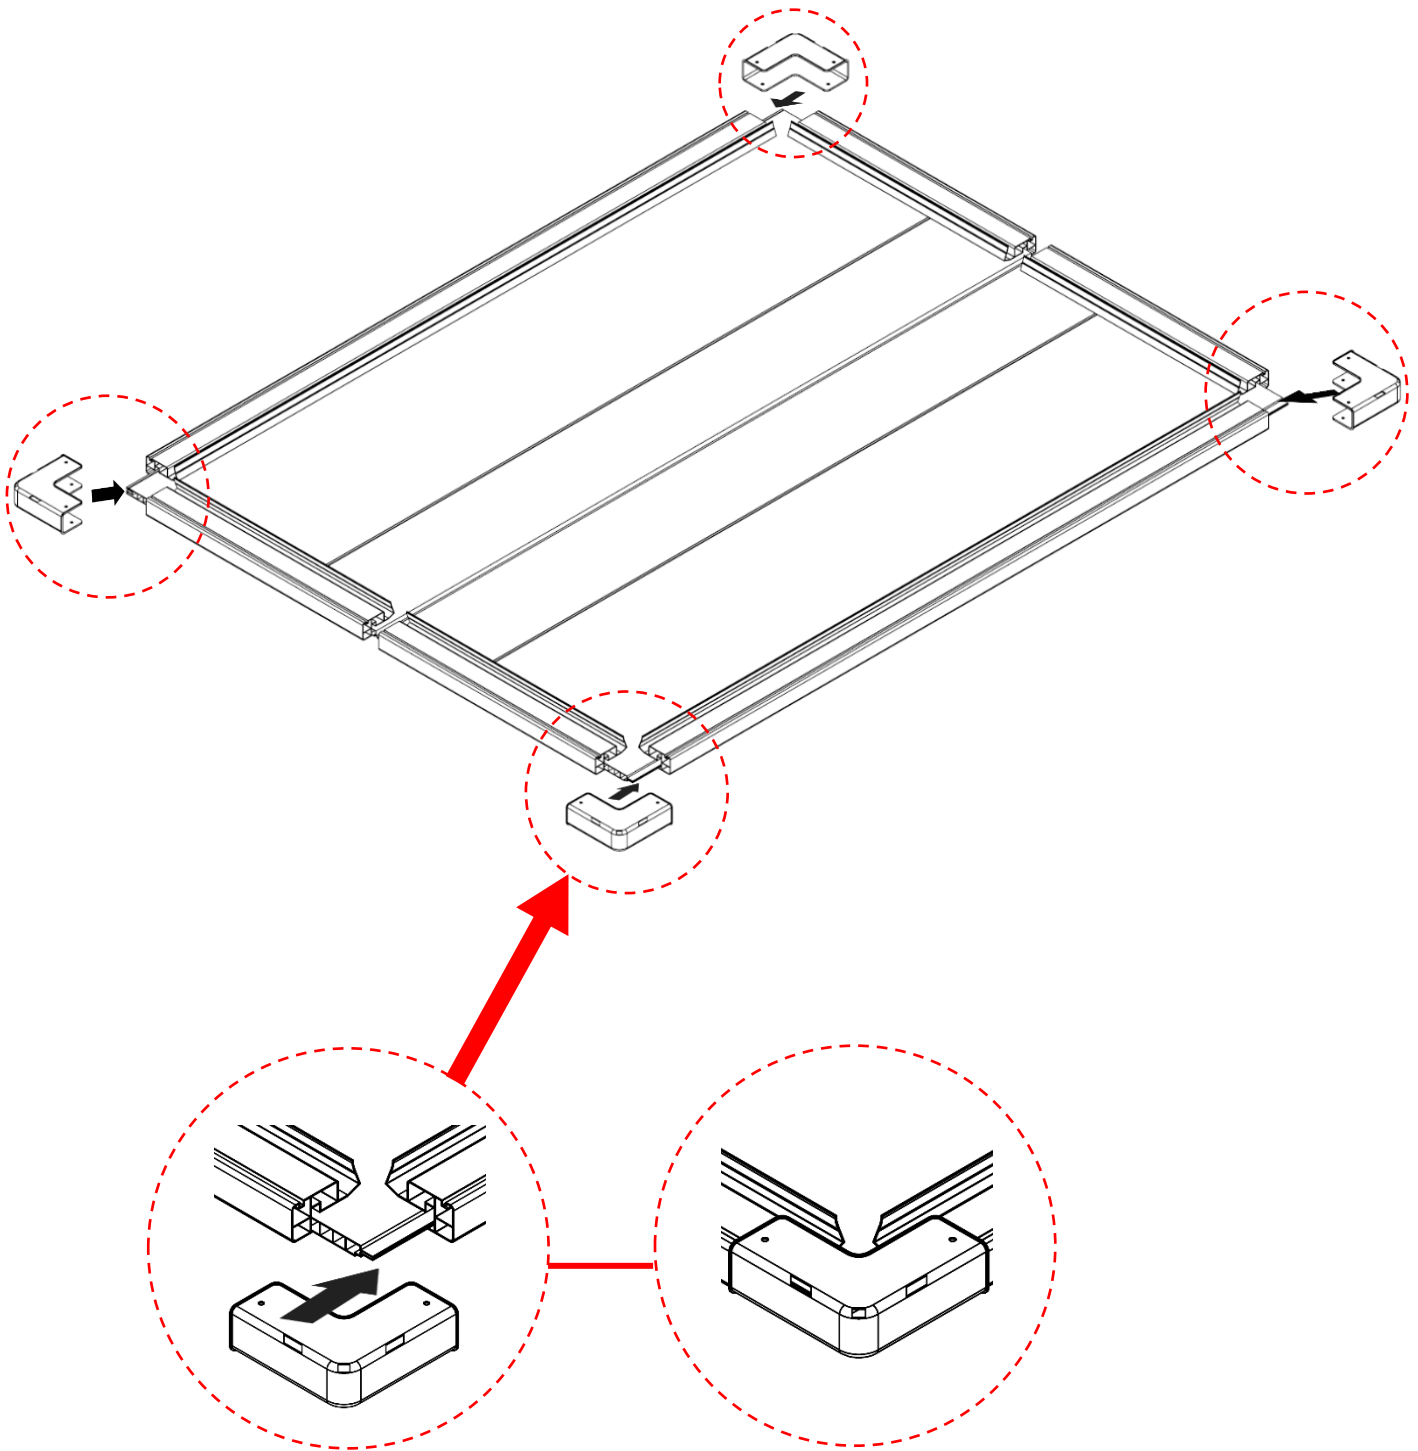


Step 51

8PC





ST4.2*20

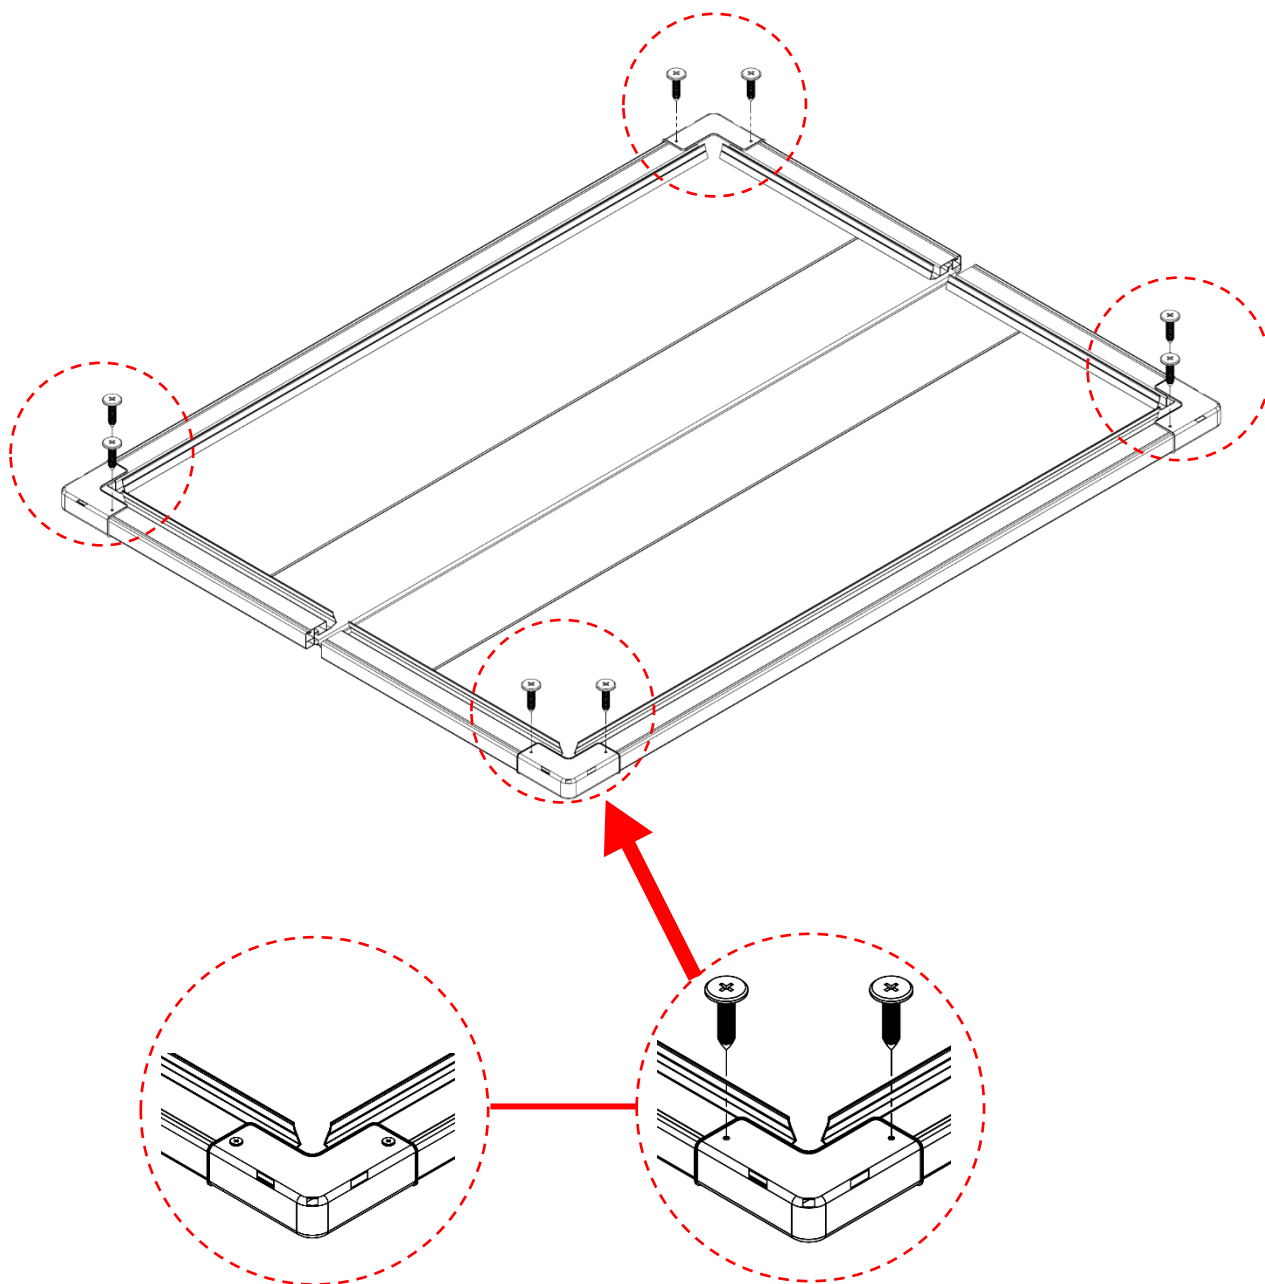


Step 52

Note: The roof stripes are facing upwards

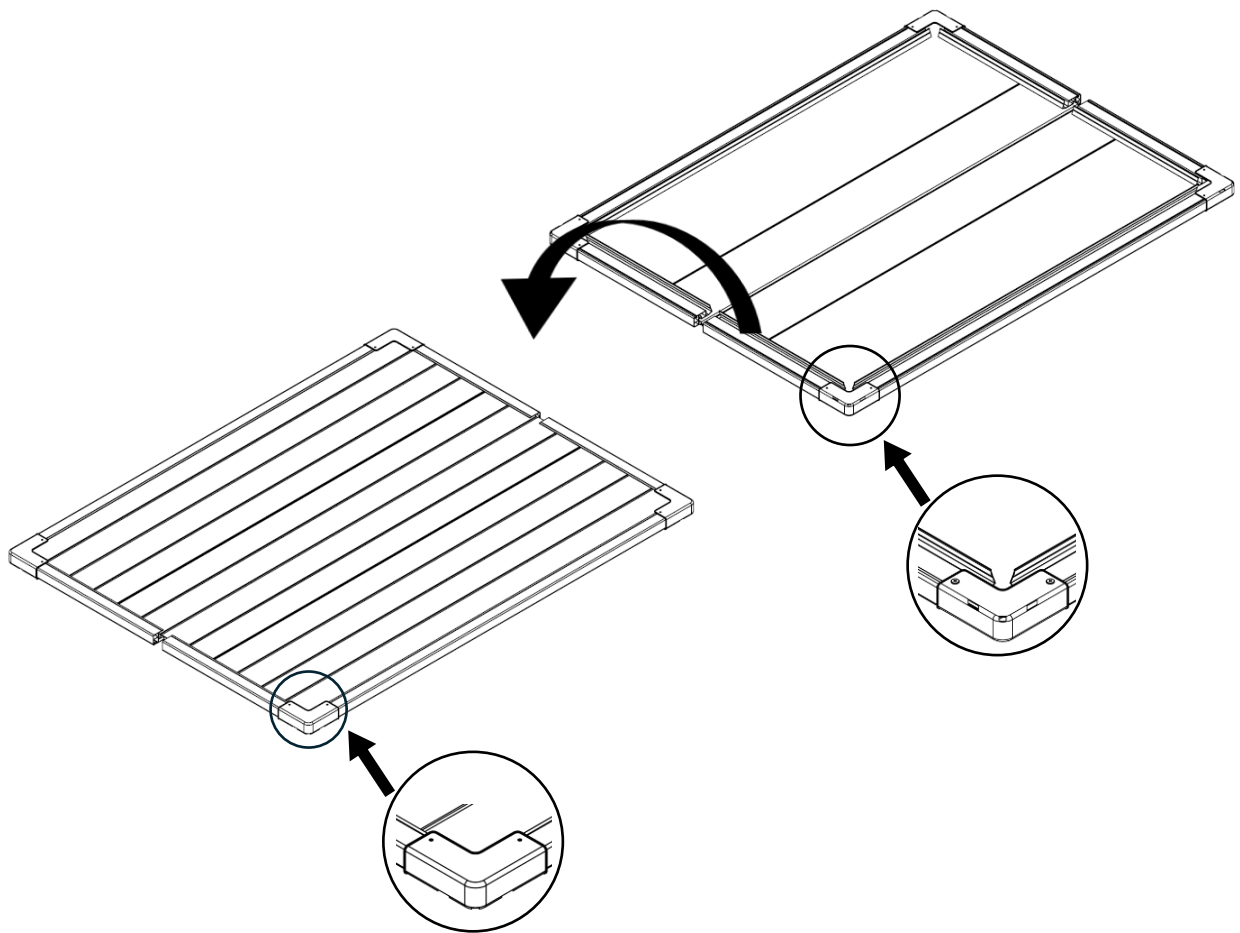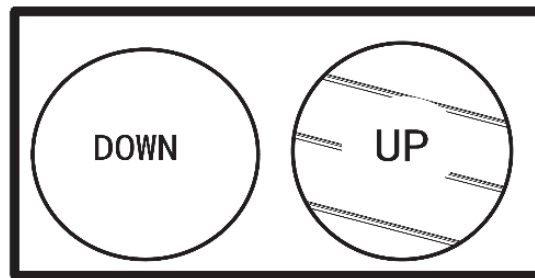

Step 53

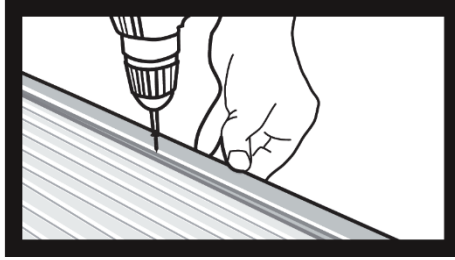


18PC









ST4.2*20

Fix the screws on the profile along the marking line




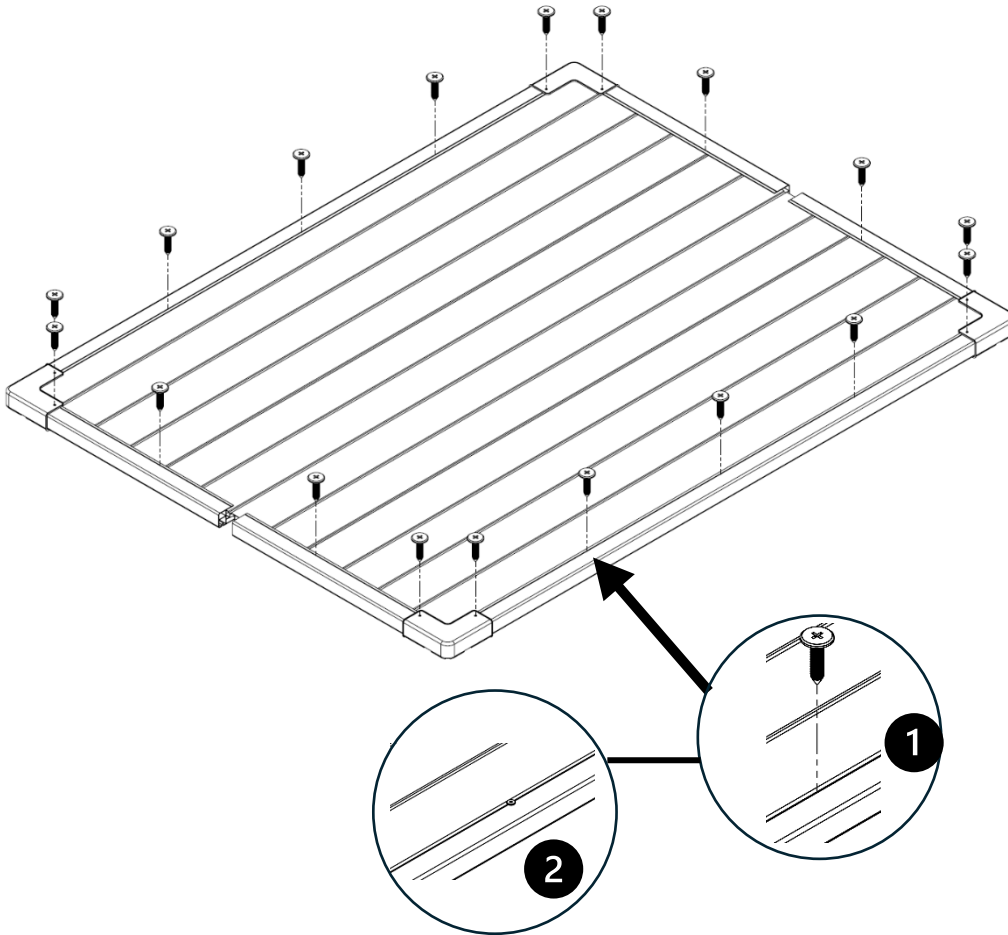


Step 54

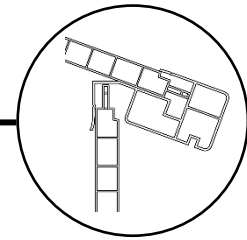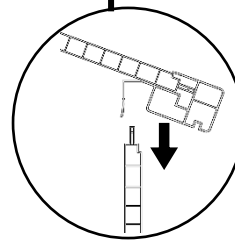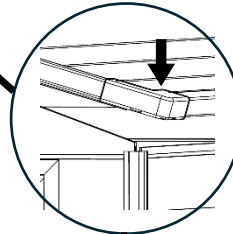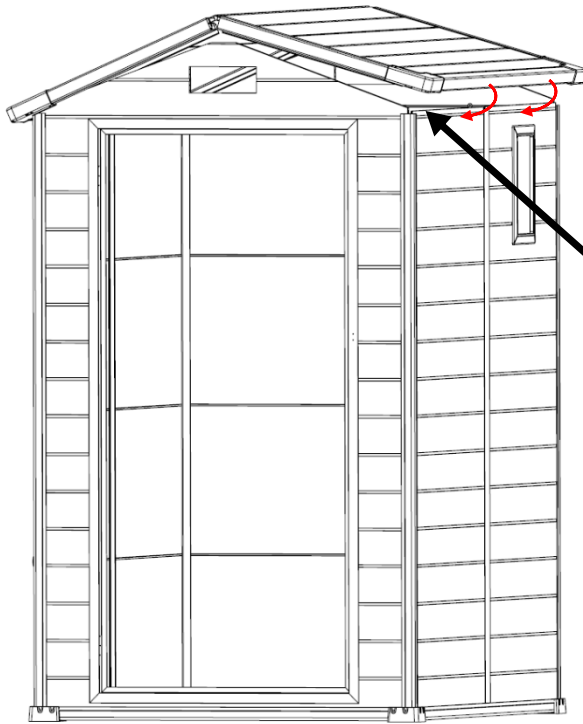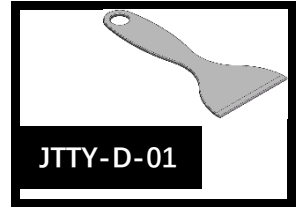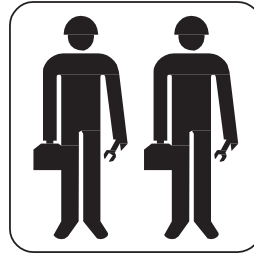


The panels fit perfectly in the profile

Step 55

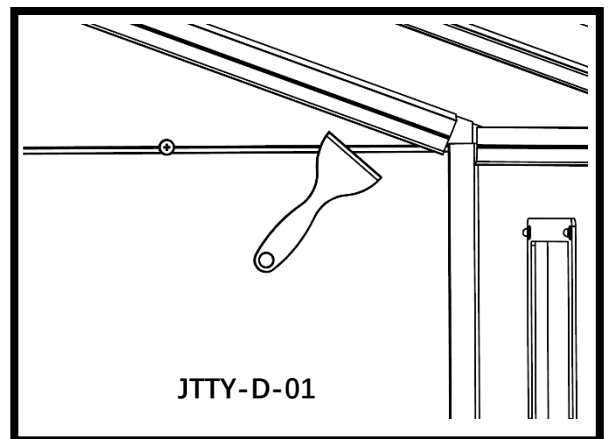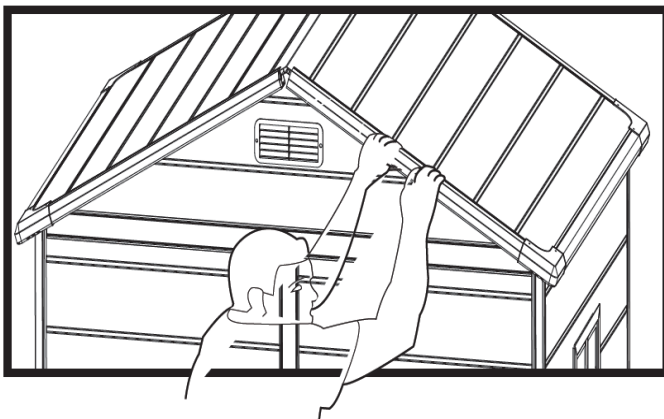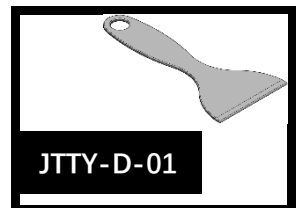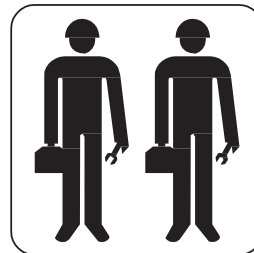



The roof profile fits perfectly to the panel

Step 56

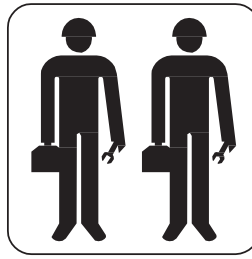


16pc

ST4.2*26

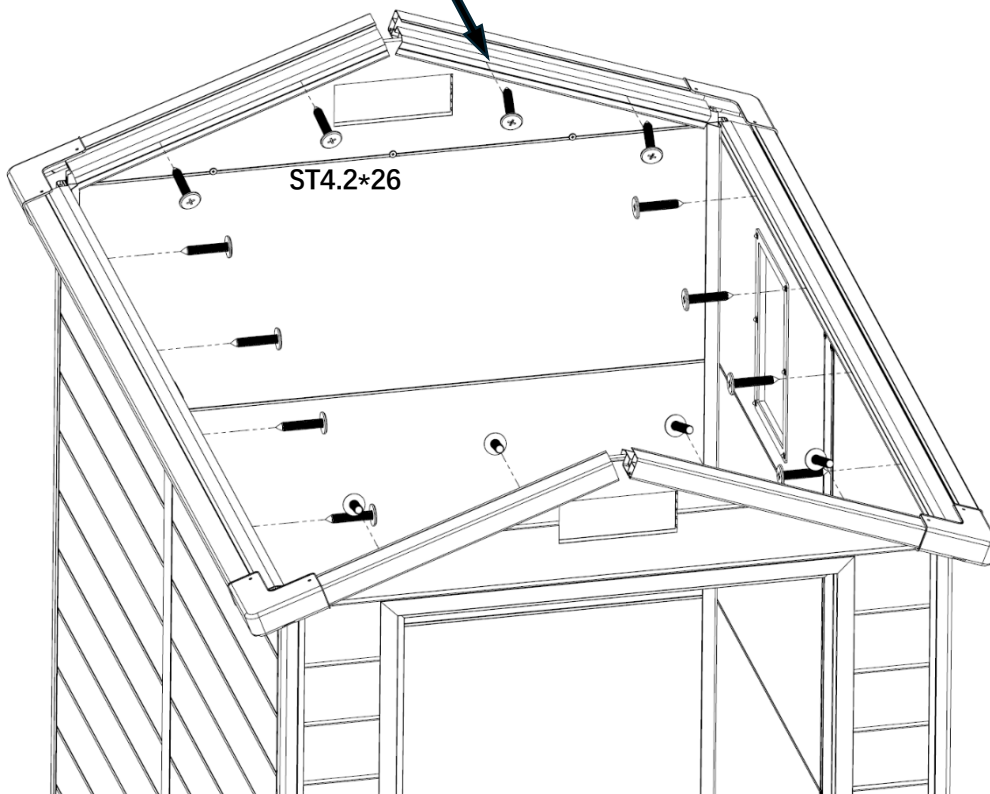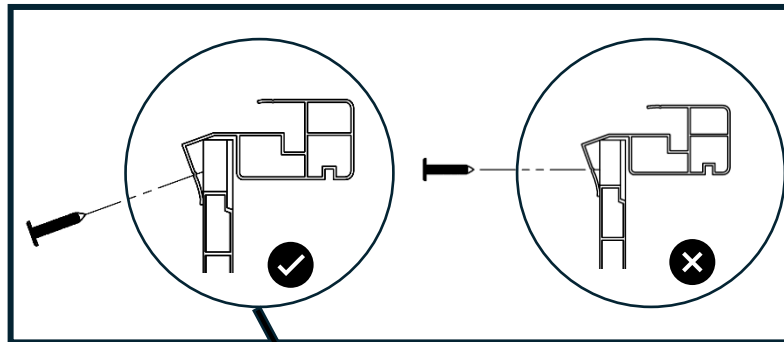


Step 57

16PC




ST4.2*26

4PC








ST4.2*26

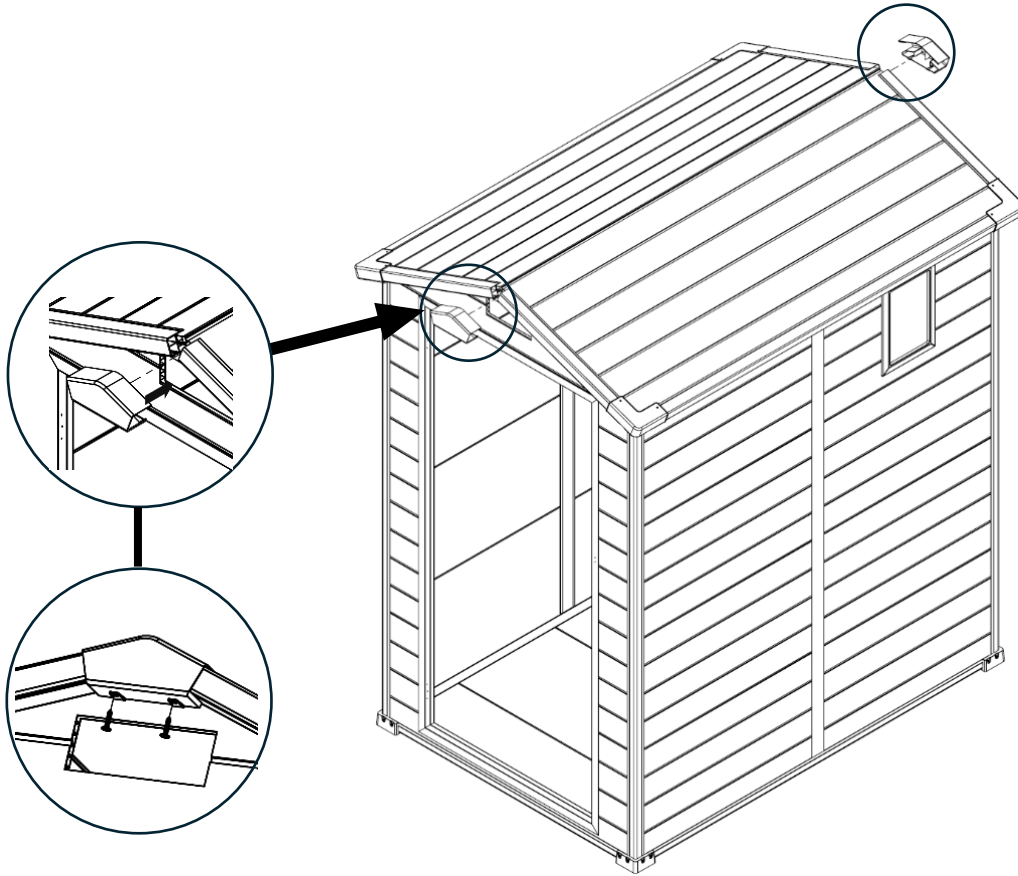


Door parts

Note: The roof stripes are facing upwards

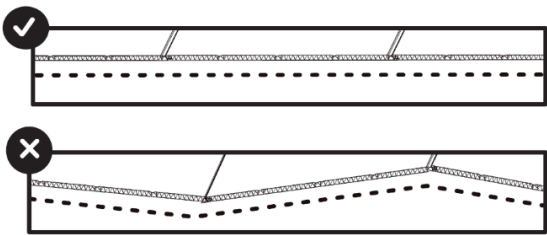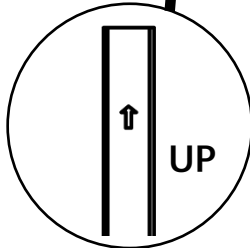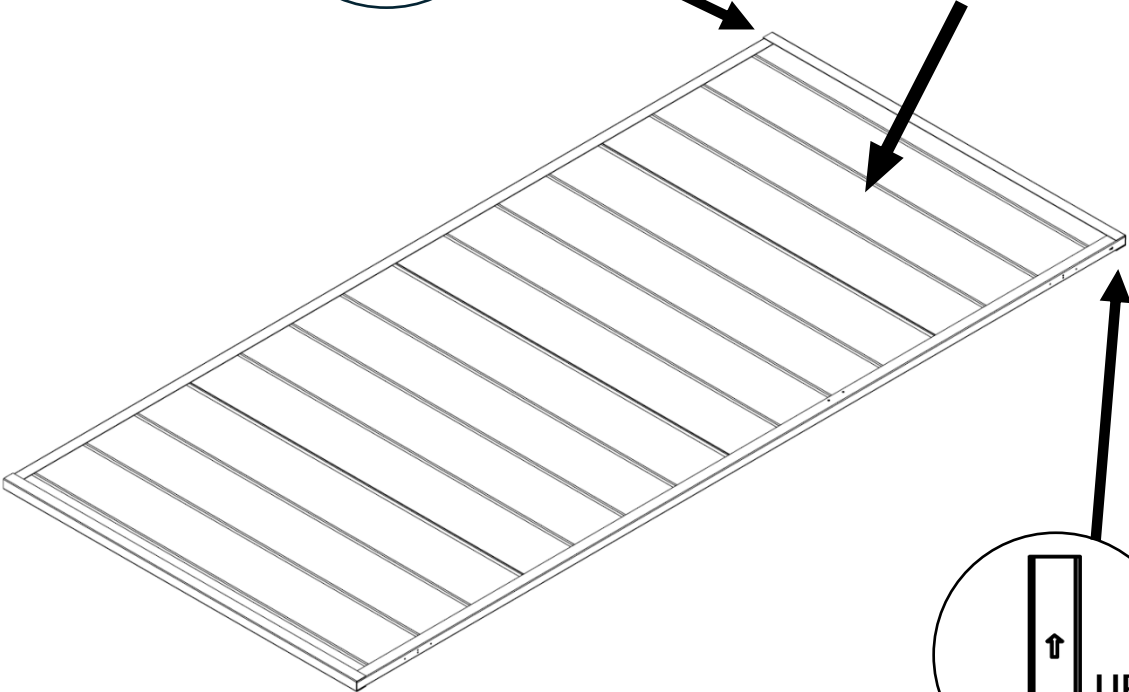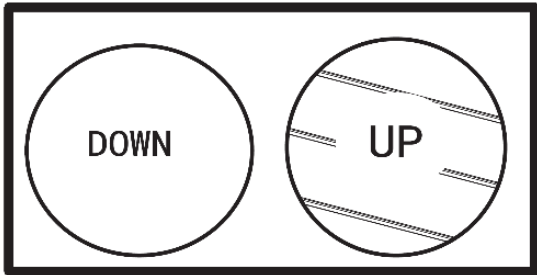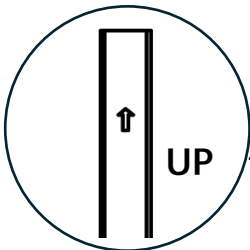

During installation, the plate remains vertical and cannot

Step 58

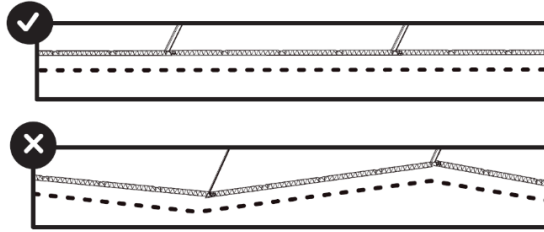

During installation, the plate remains vertical and cannot

1PC



JTMB-WA-01

2PC




JTMB-WA-01


1PC



ST4.2*26

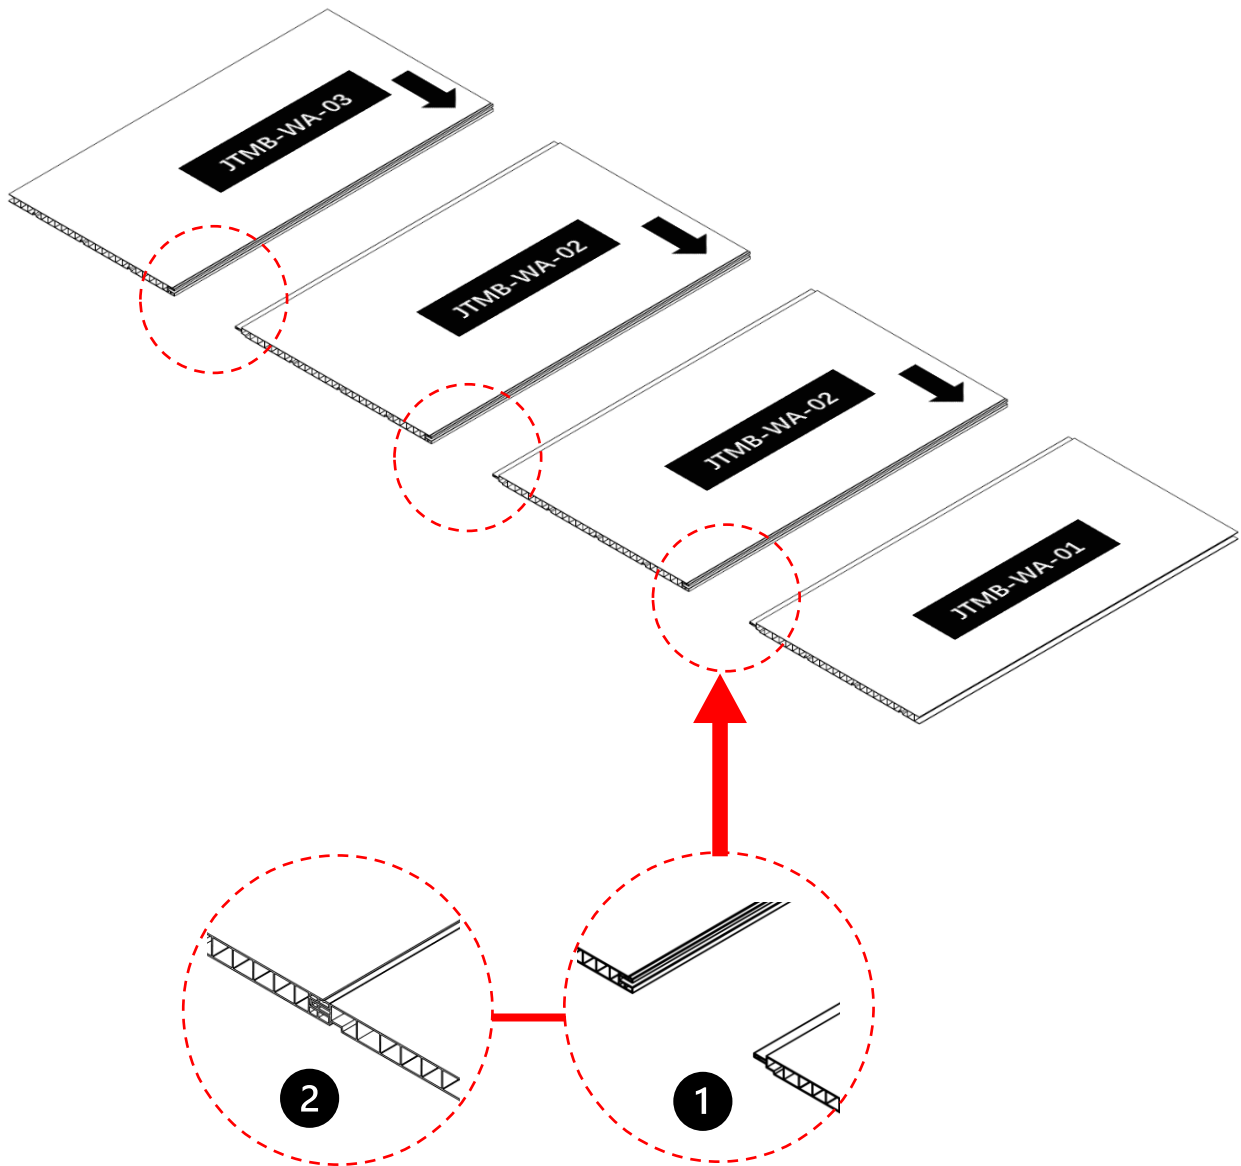


Step 59

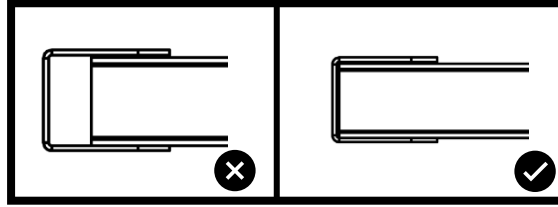

1PC



JTMB-WC-01

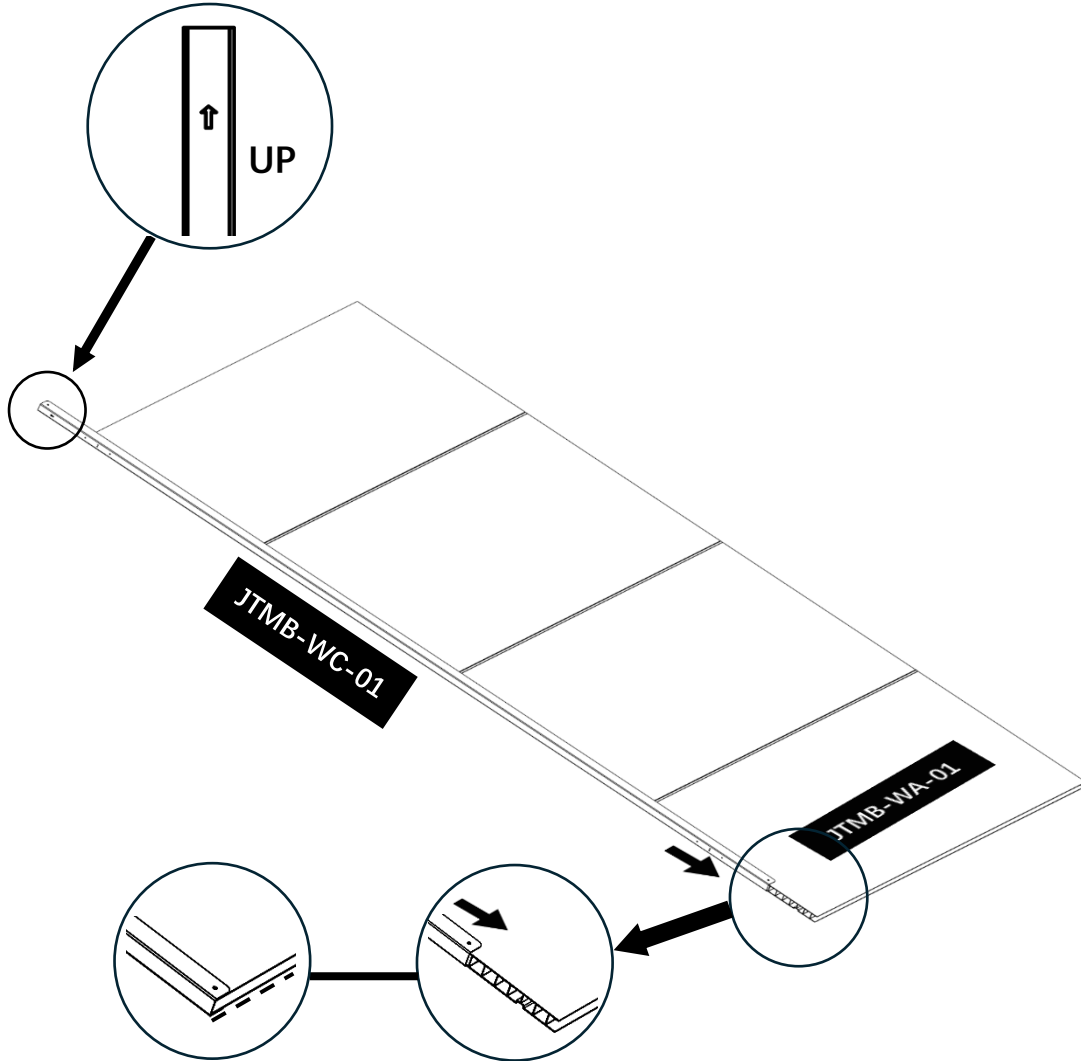


Step 60


1PC



JTMB-WC-02

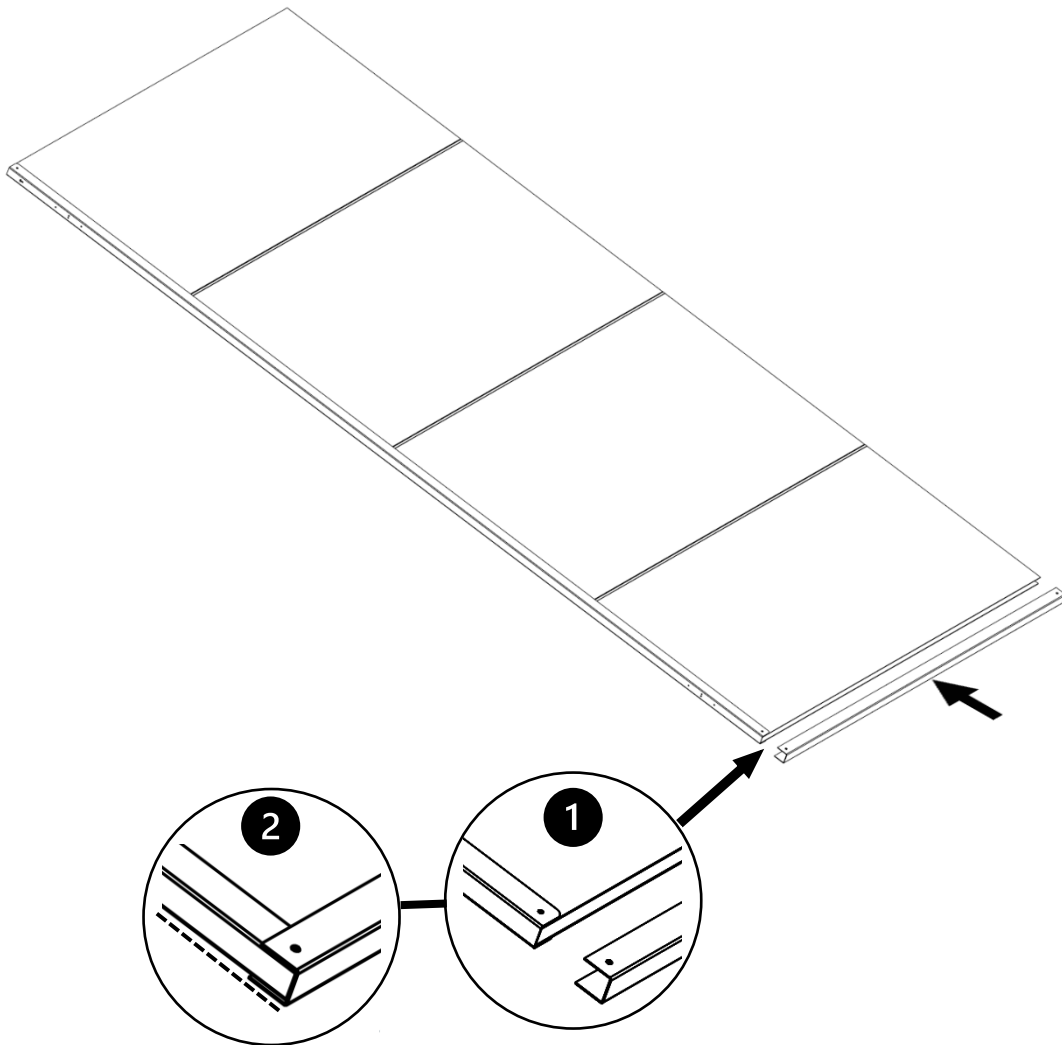


Step 61

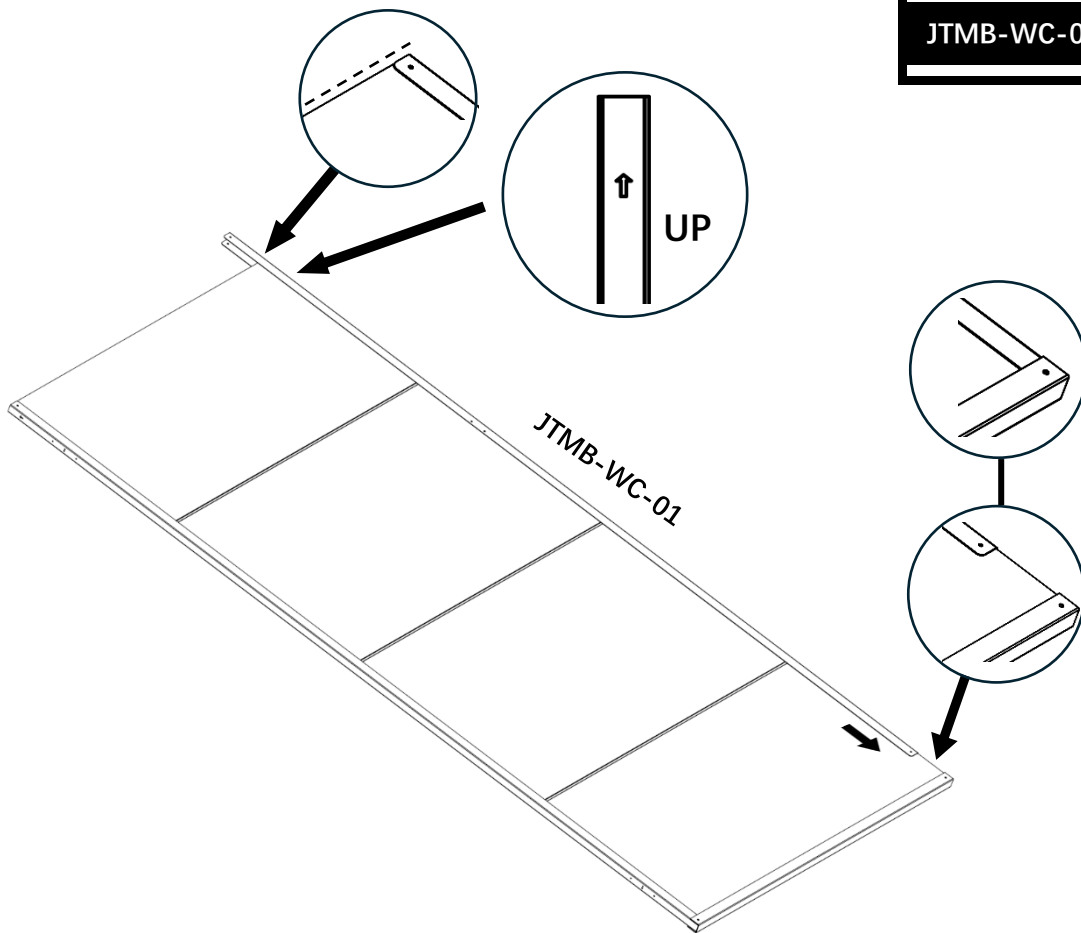


Step 62



1PC



JTMB-WC-02

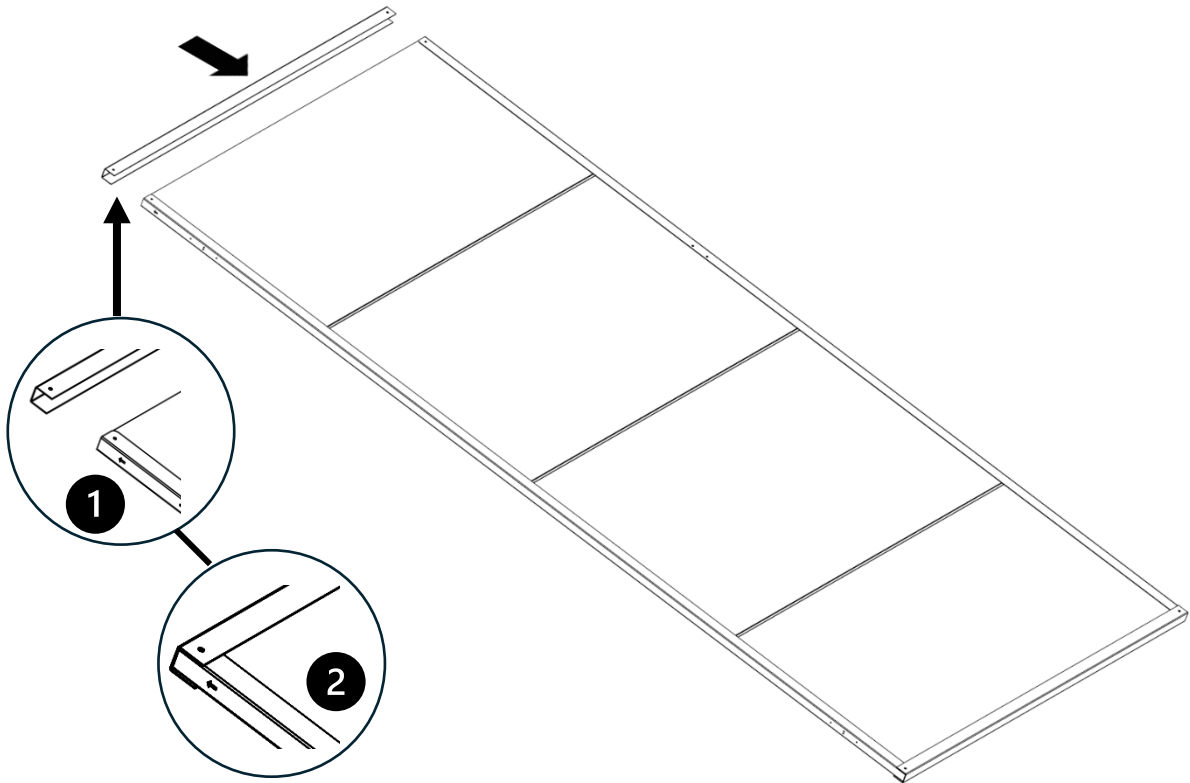


Step 63

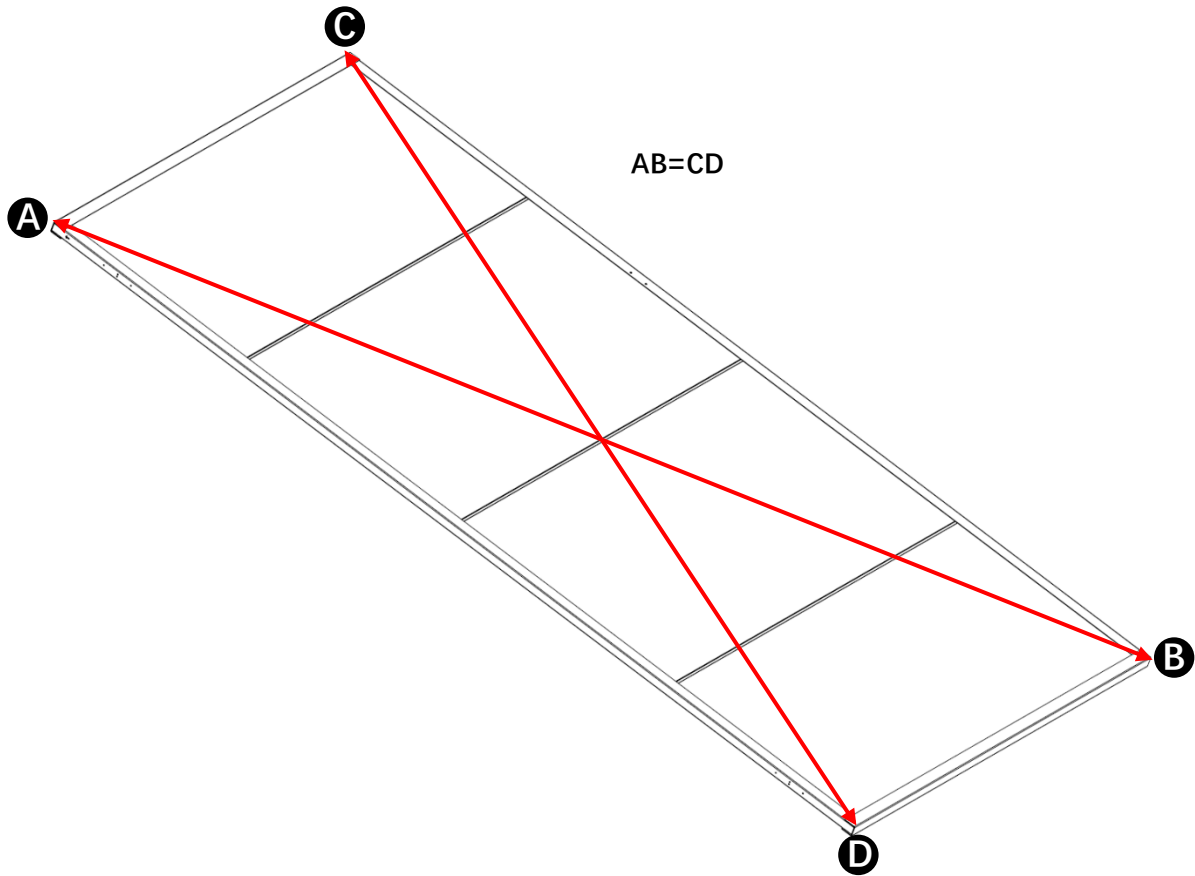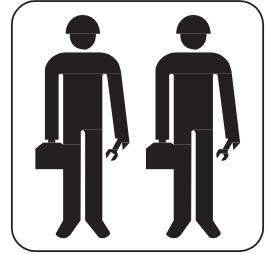


Step 64


10PC



STYW4.2*12

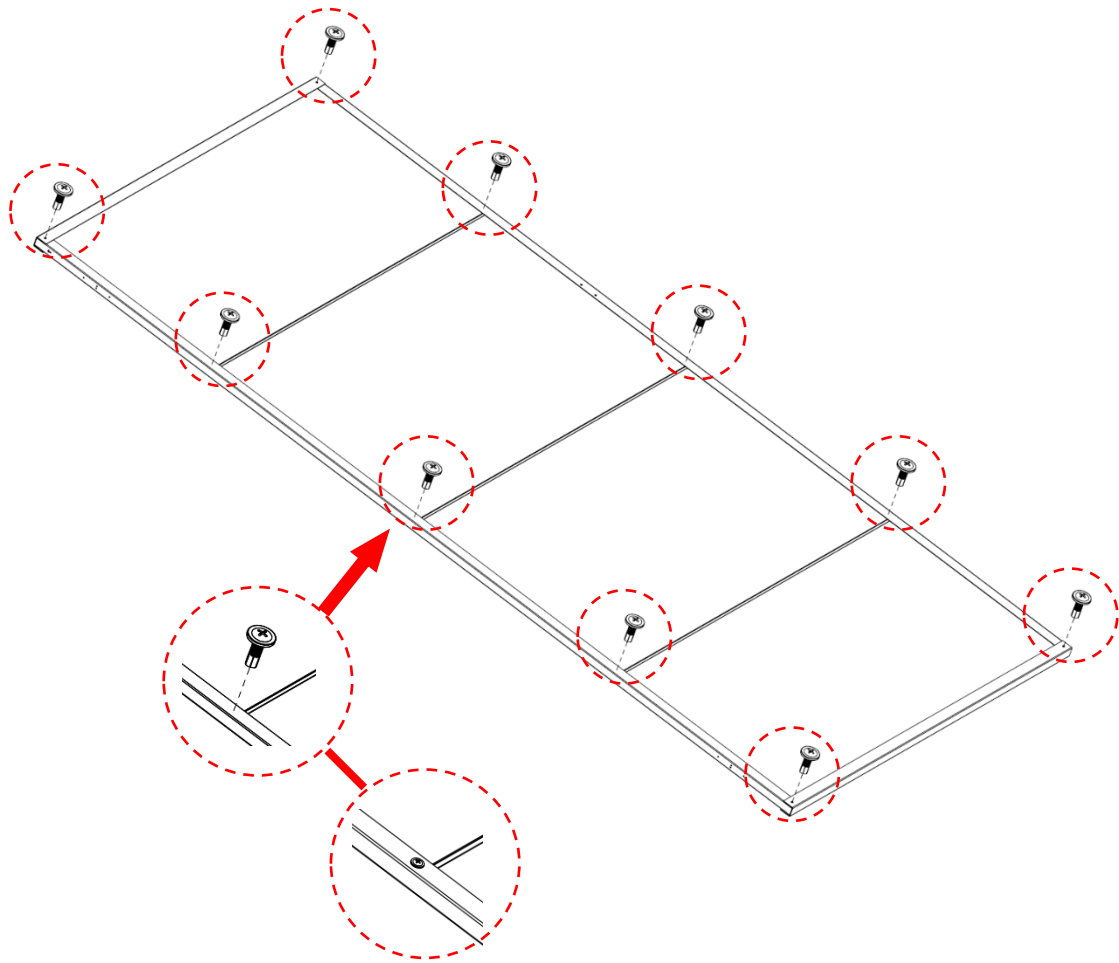

Step 65

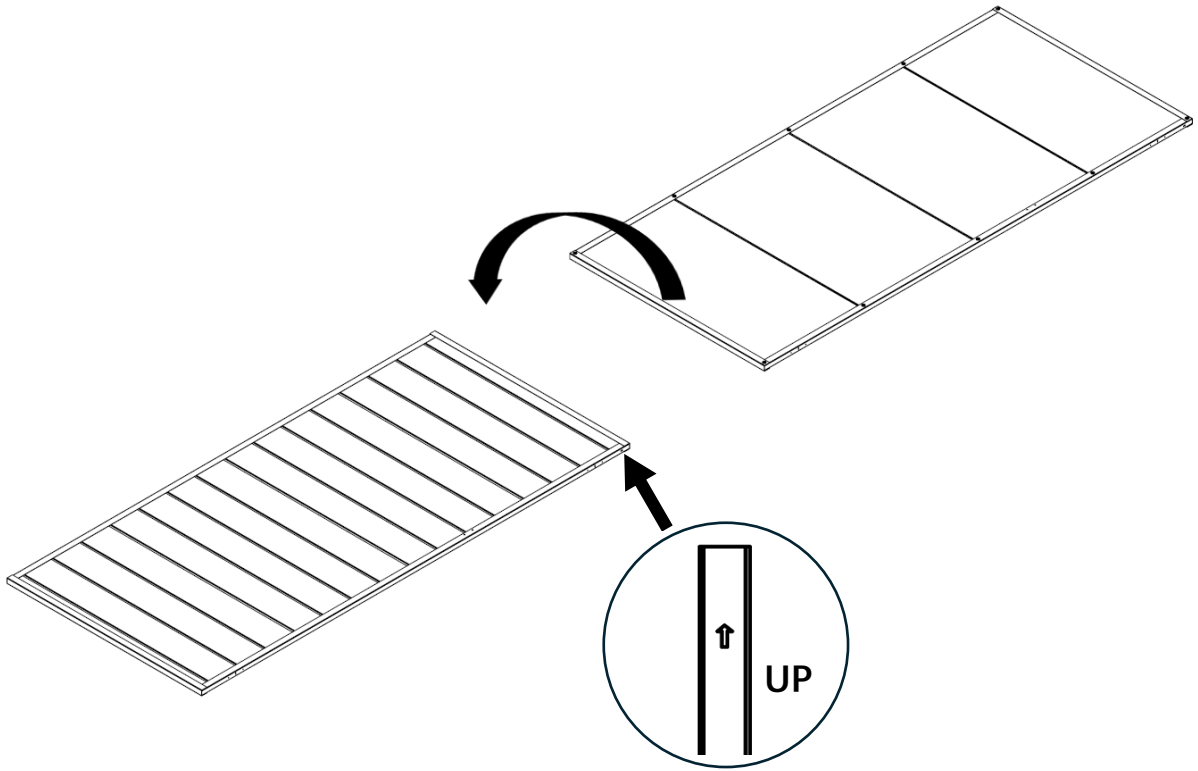


Step 66

6PC




ST4.2*12

2PC



WD-01

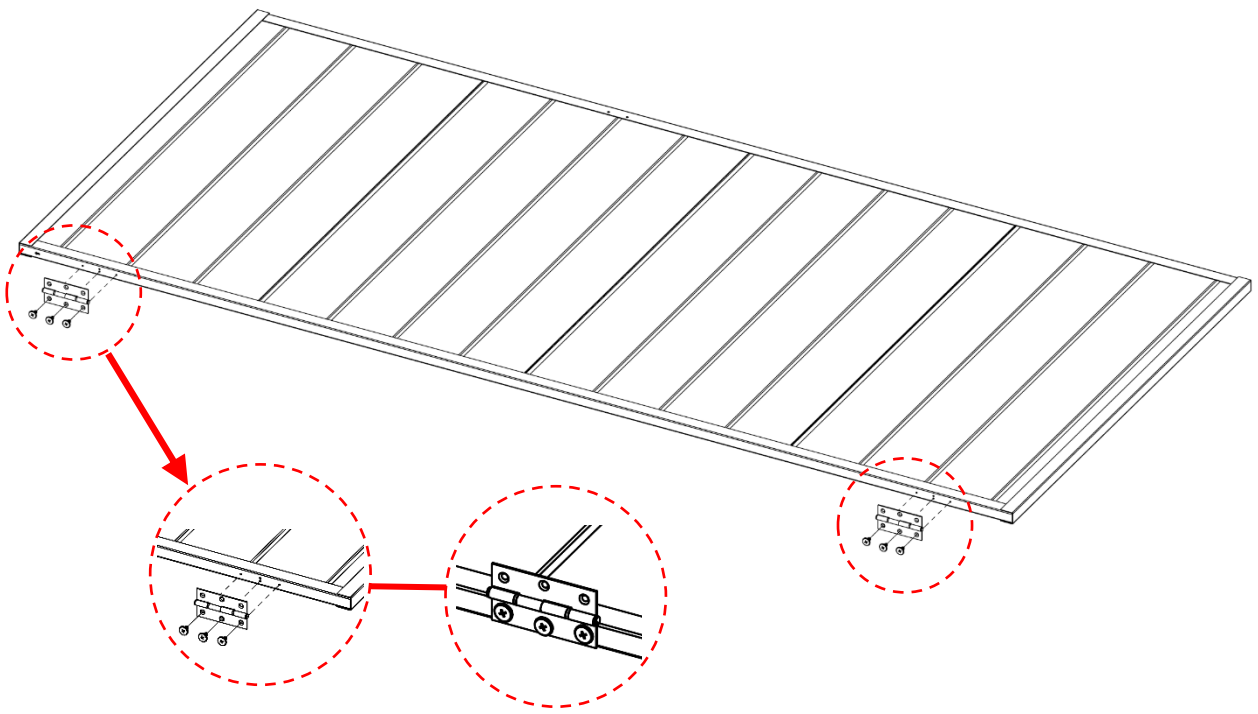


Step 67

6PC




ST4.2*12

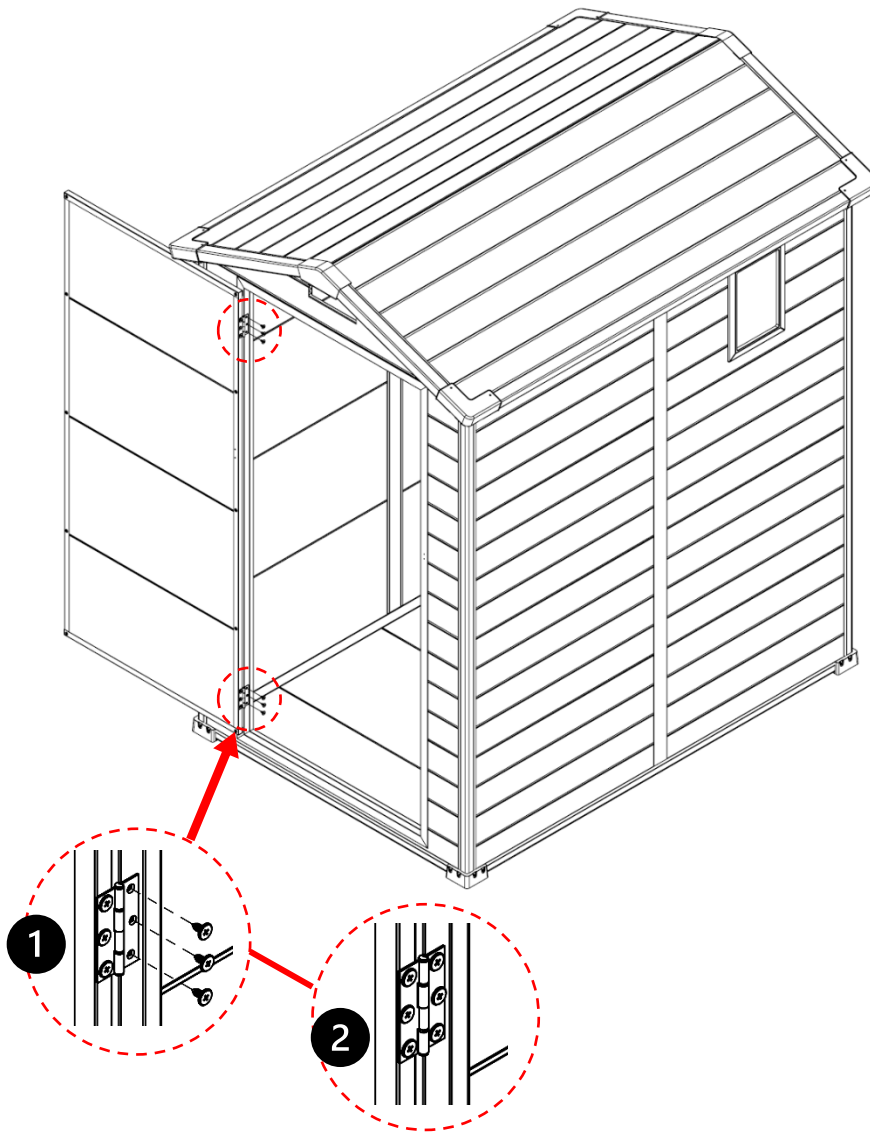

Step 68

4PC




STYW4.2*12


1PC



WD-02

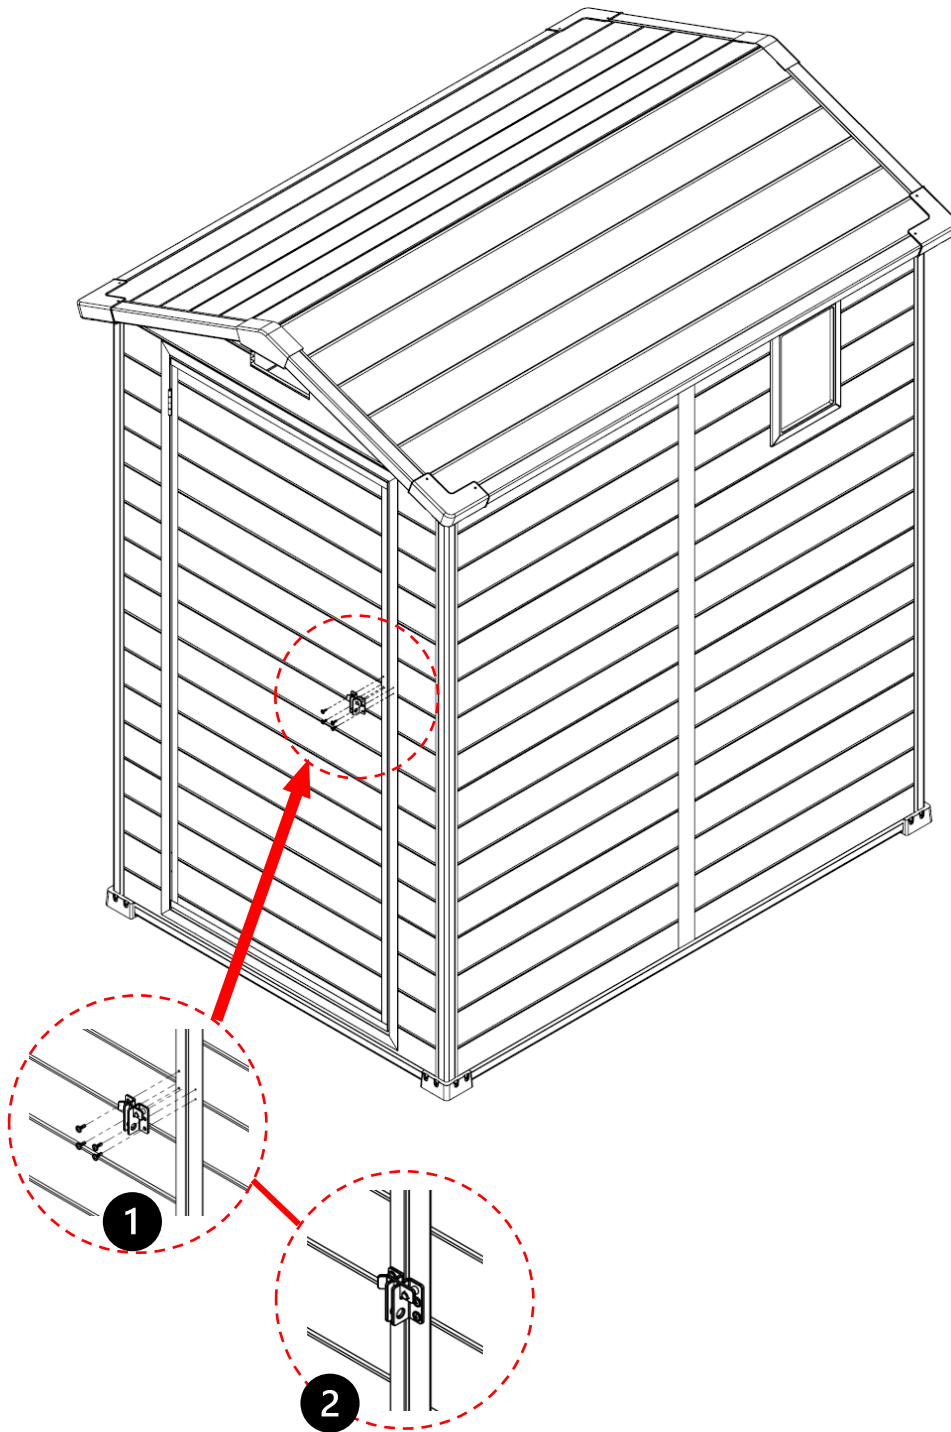

Step 69

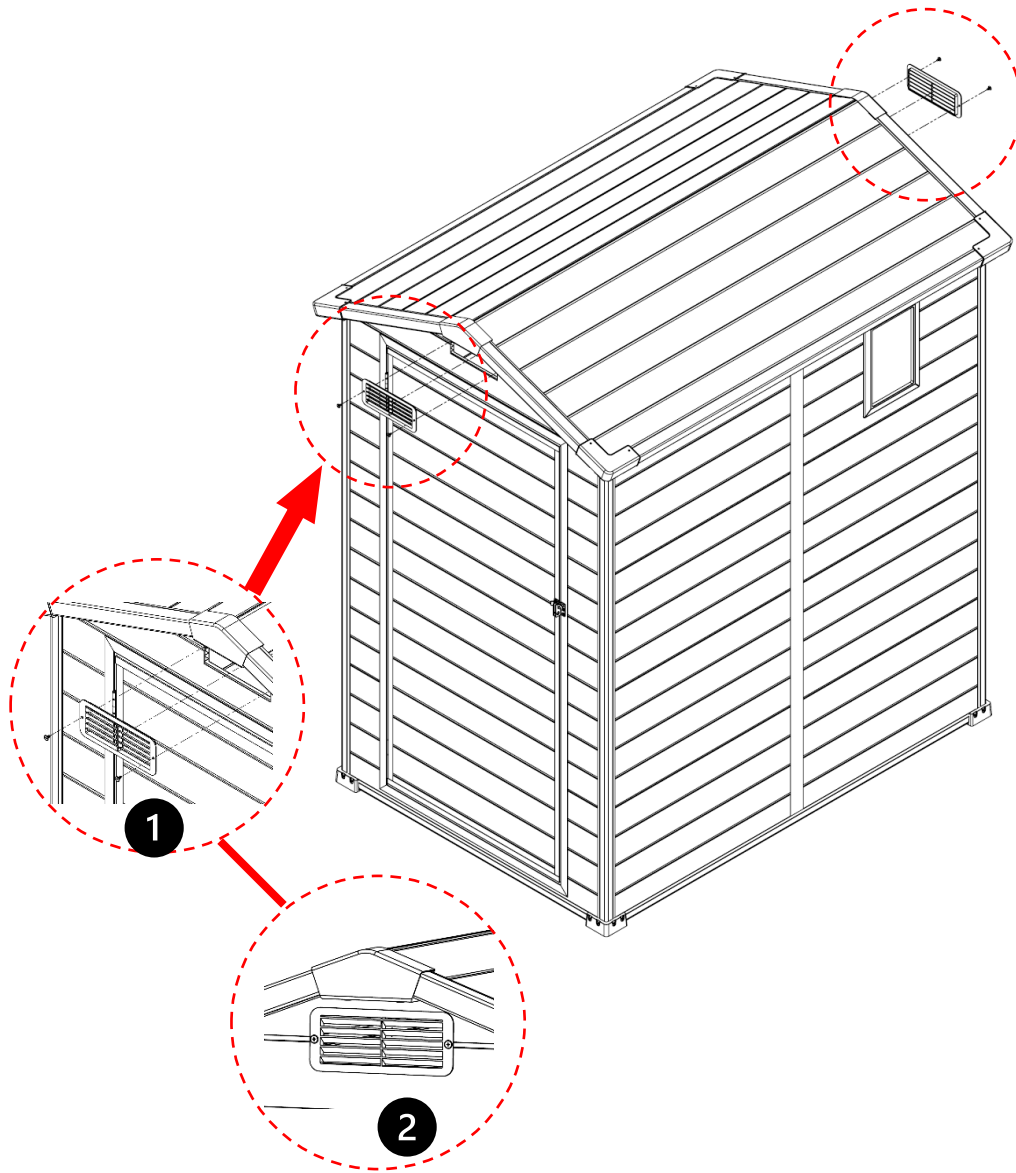


4PC



ST4.2*12

1PC



WD-02