


ASSEMBLY INSTRUCTIONS



WARNING !

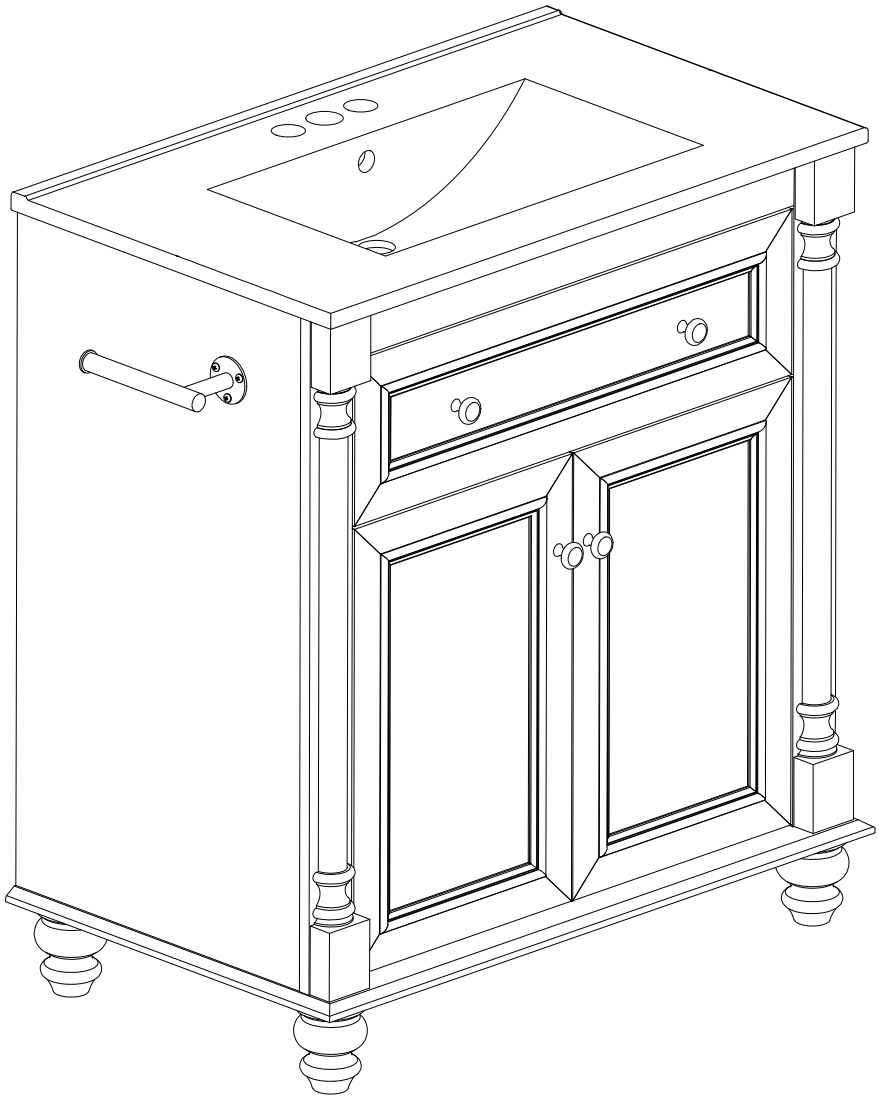




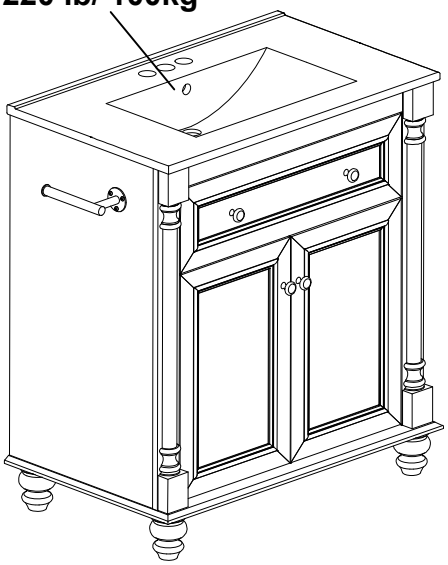


Estimated Time for Assembly

60 mins

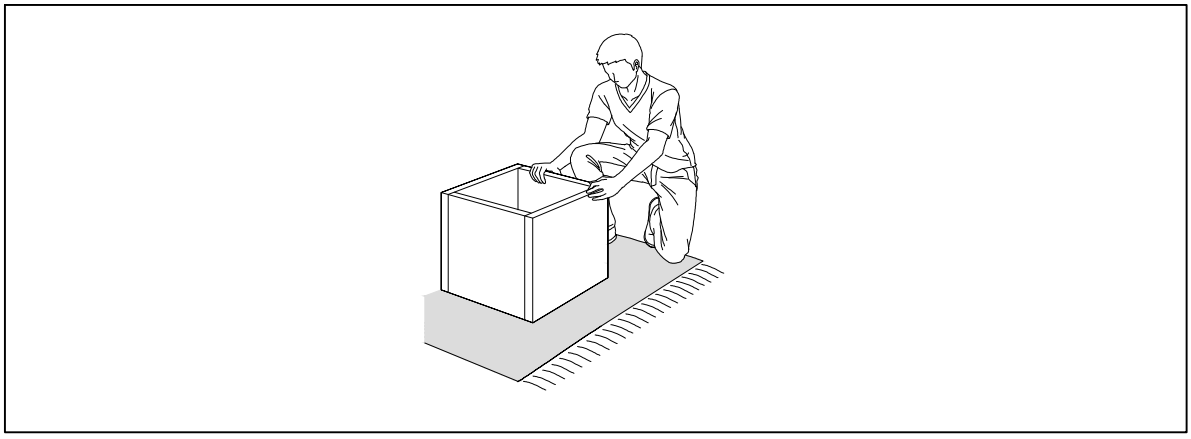

Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

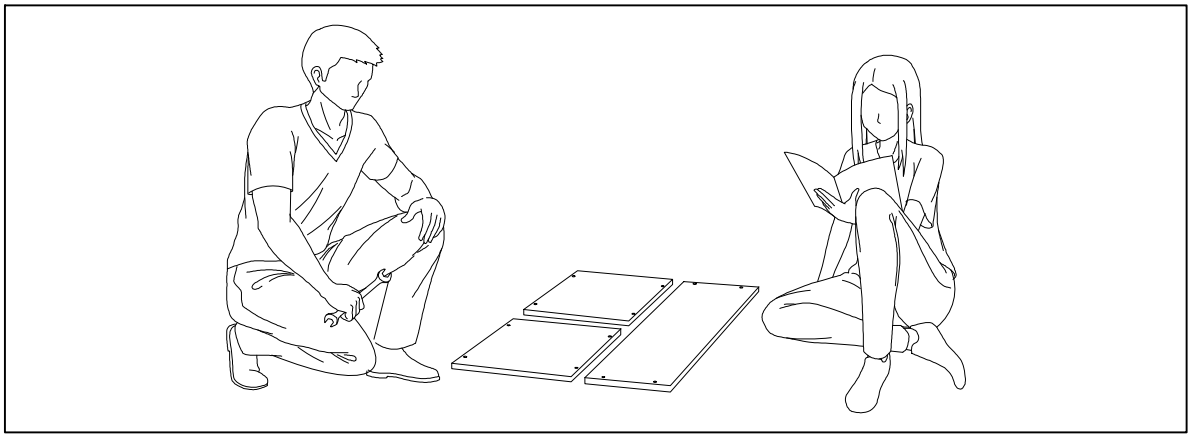


This furniture requires 2 people to assembly.

Make sure no parts are missing or damaged before assembly.


Board Identification

Not actual size

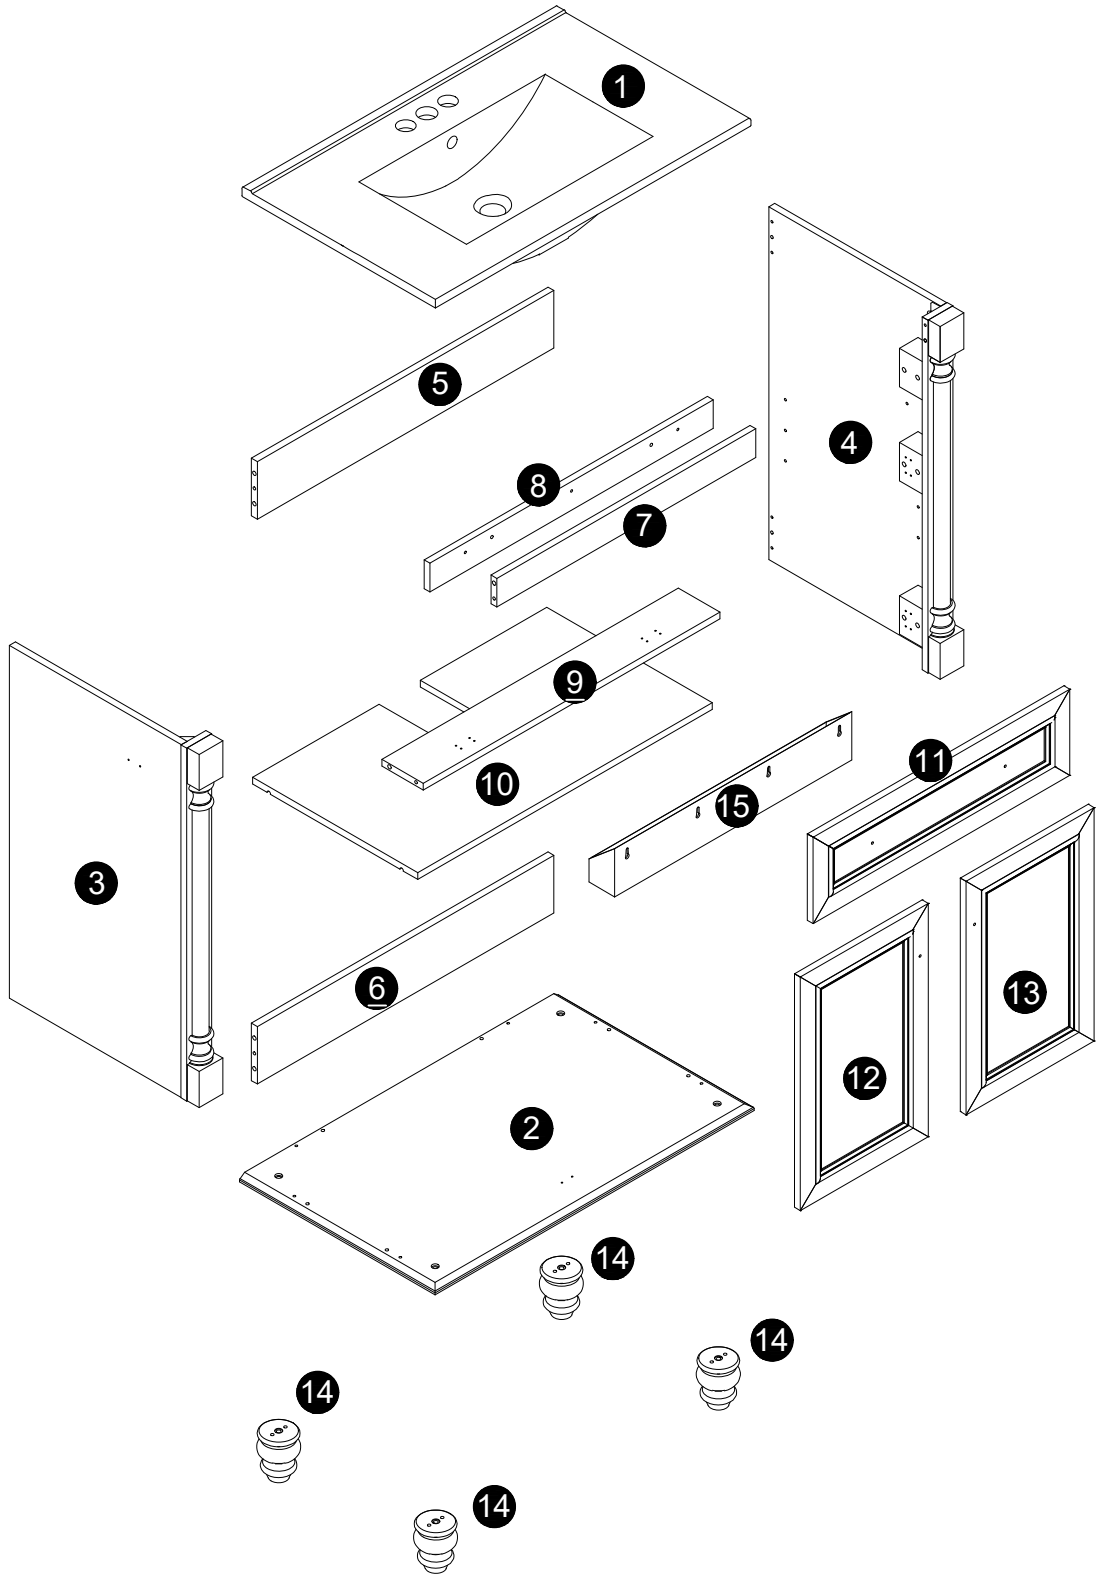


BOARD IDENTIFICATION


Not actual size

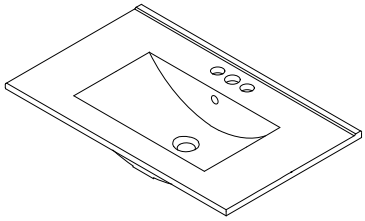


① x1

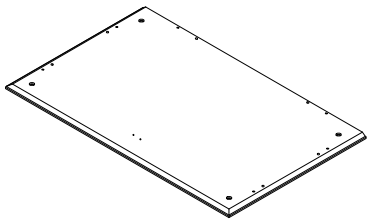


② x1

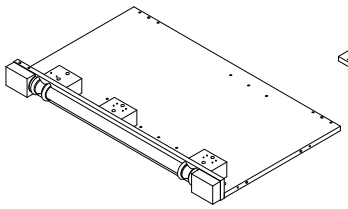


③ x1

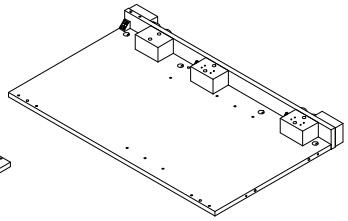


④ x1

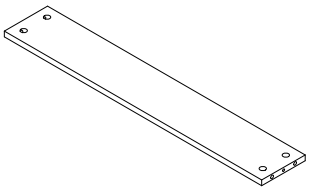


⑤ x1

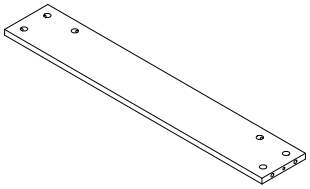


⑥ x1

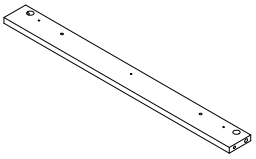


⑦ x1

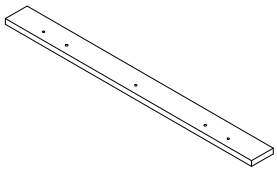


⑧ x1

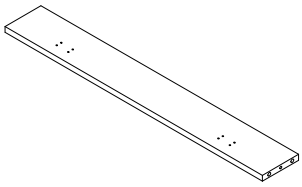


⑨ x1

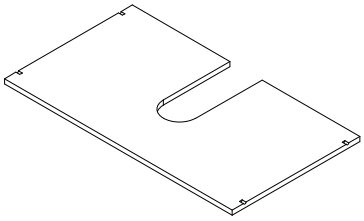


⑩ x1

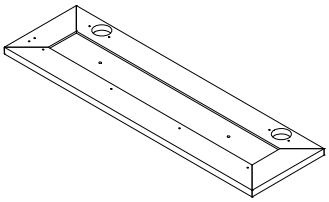


⑪ x1

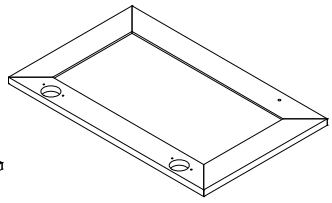

⑫ x1


















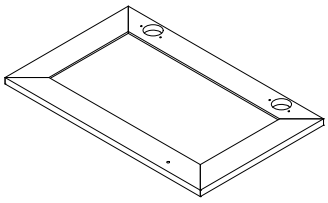


⑬ x1

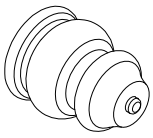


⑭ x4

HARDWARE LIST

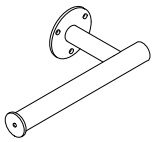
	 Ø15x9.5	 Ø6x30	 Ø6x20
A x14+1	B x14+1	C x22+2	D x2
 Ø4x16	 Ø3.5x15	 Ø5x40	 Ø3.5x12
E x3	F x36+3	G x4	H x7
		 M4x12	 M4x20
I x1	J x4	K x2	L x2
			 Ø3.5x12
M x2	N x4	O x1	P x4
		 M6x28	
Q x4	R x4	S x1	T x1
 #5*9/16"	 Ø6*30mm	 #8*45mm	
U x2	V x2	W x2	


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

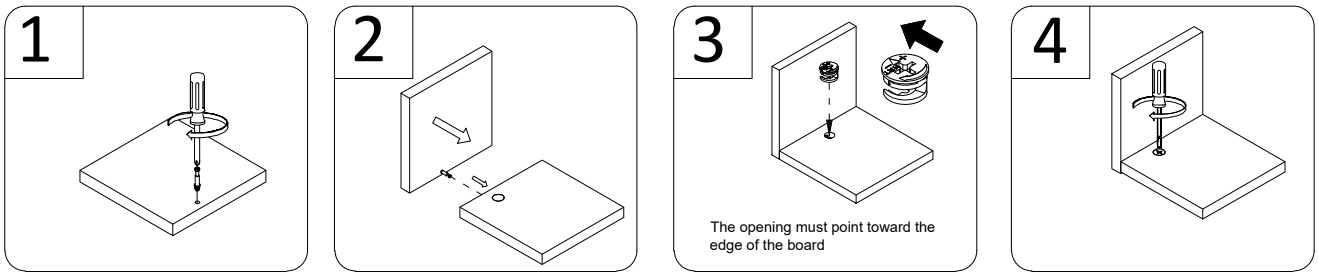


STEP 1

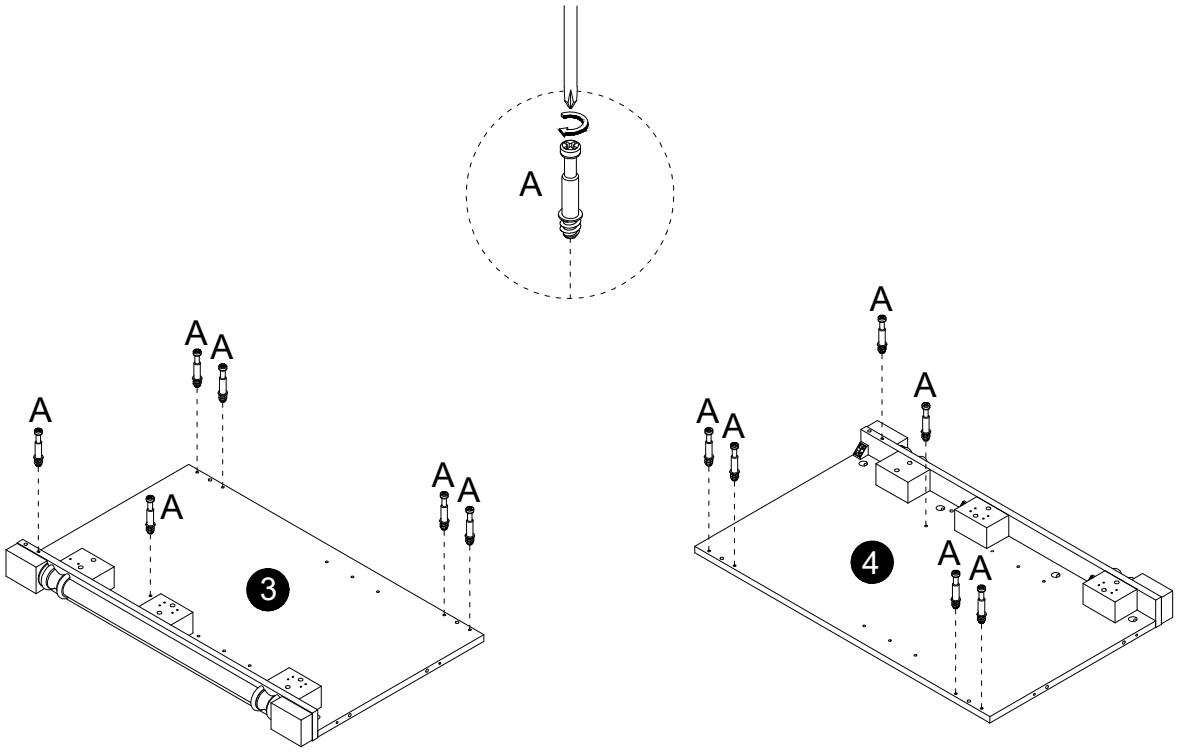


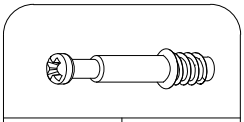


A	x 12


STEP 2

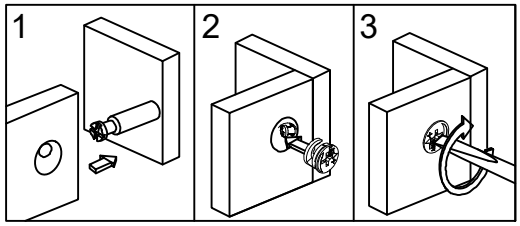

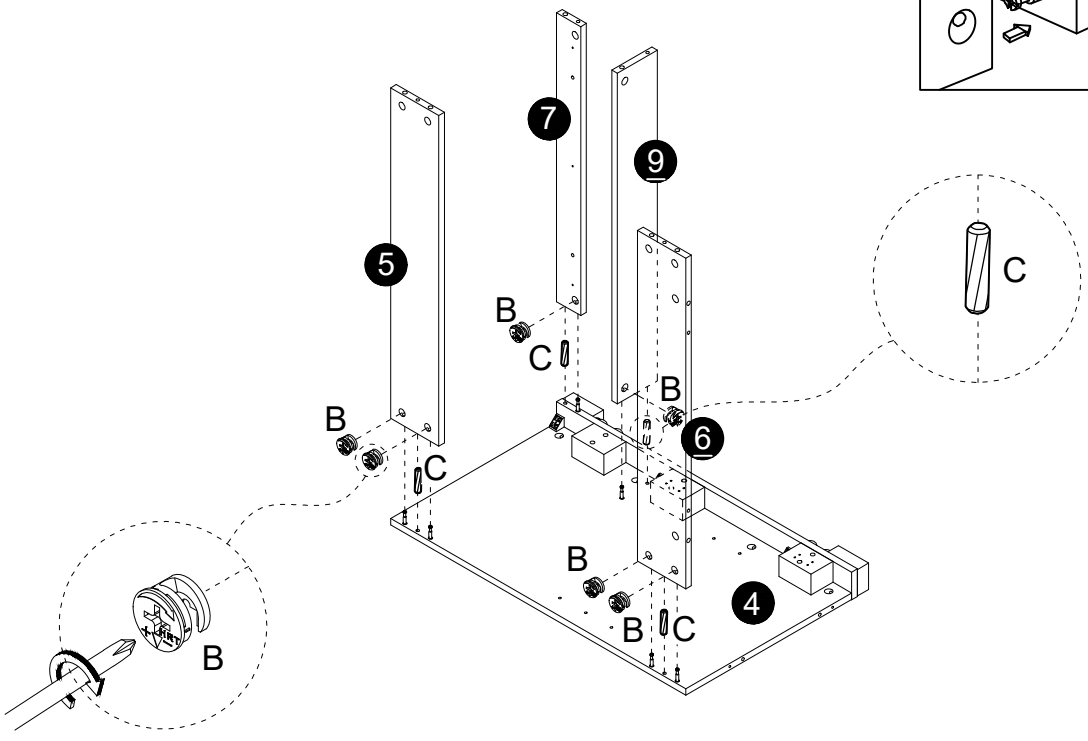





Ø6x30	
C	x 4




Ø15x9.5	
B	x 6

STEP 3

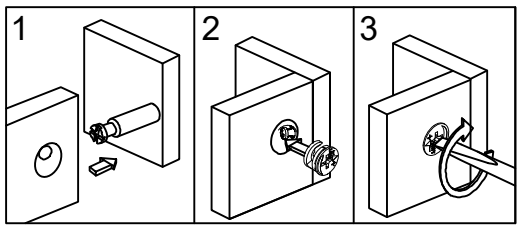

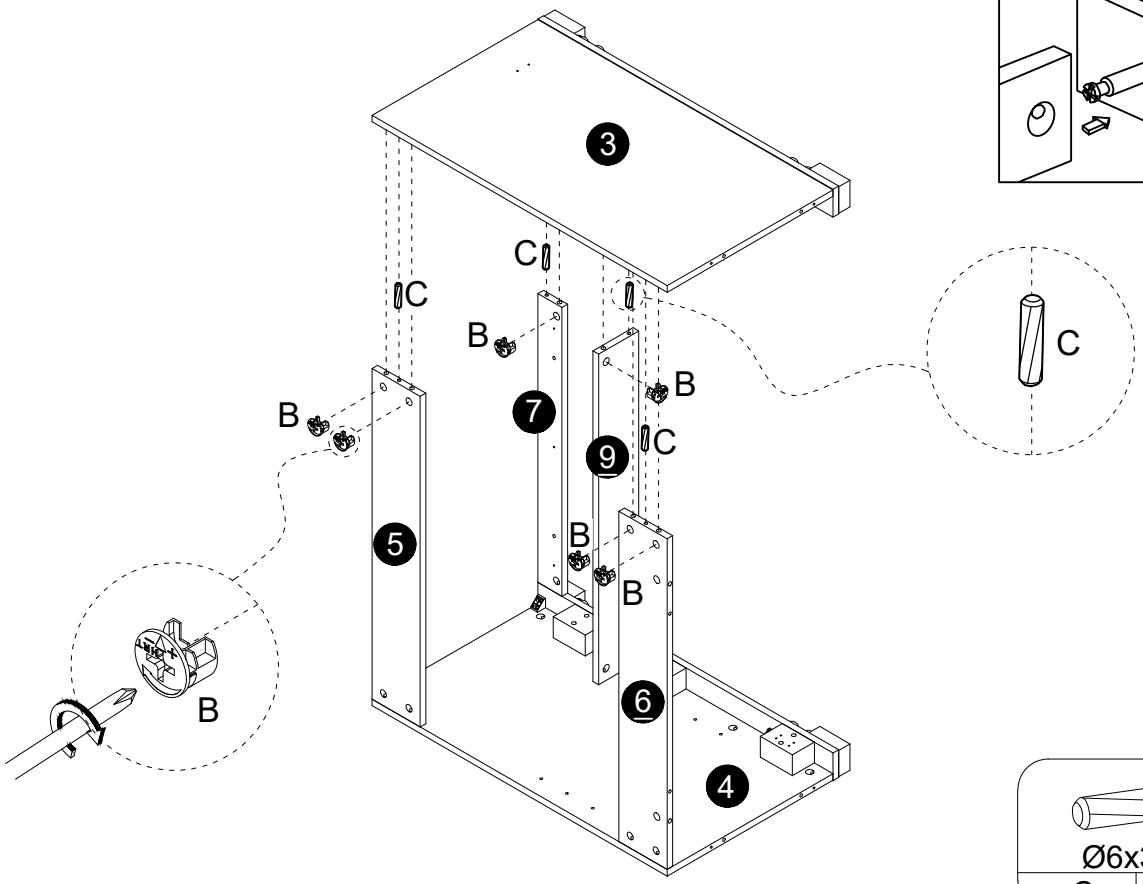



Ø6x30	
C	x 4




Ø15x9.5	
B	x 6

STEP 4

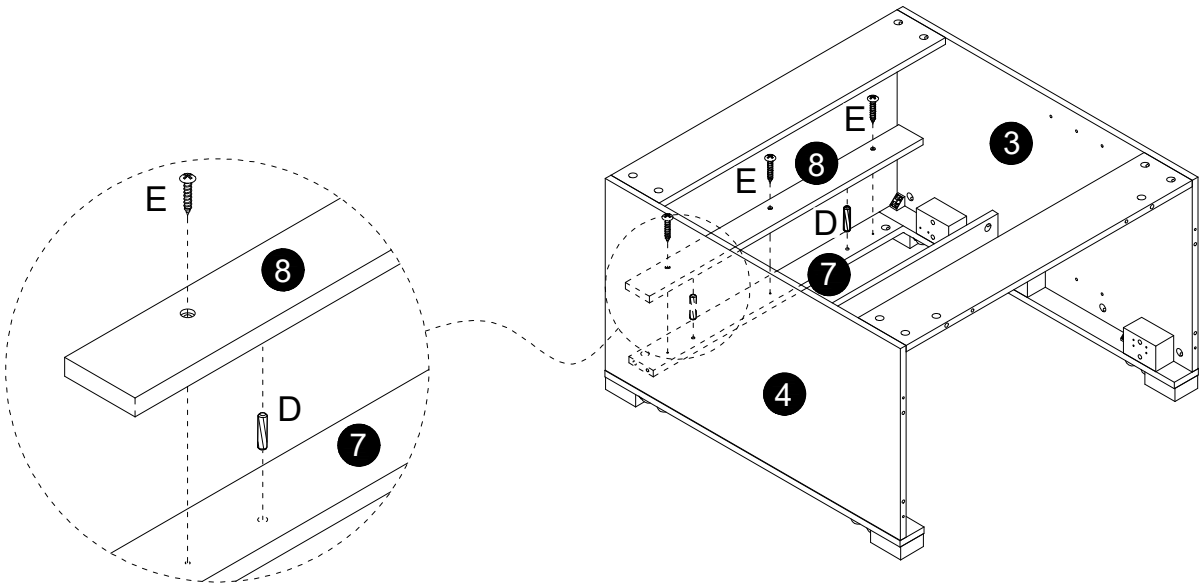





Ø4x16	
E	x 3




Ø6x20	
D	x 2

STEP 5

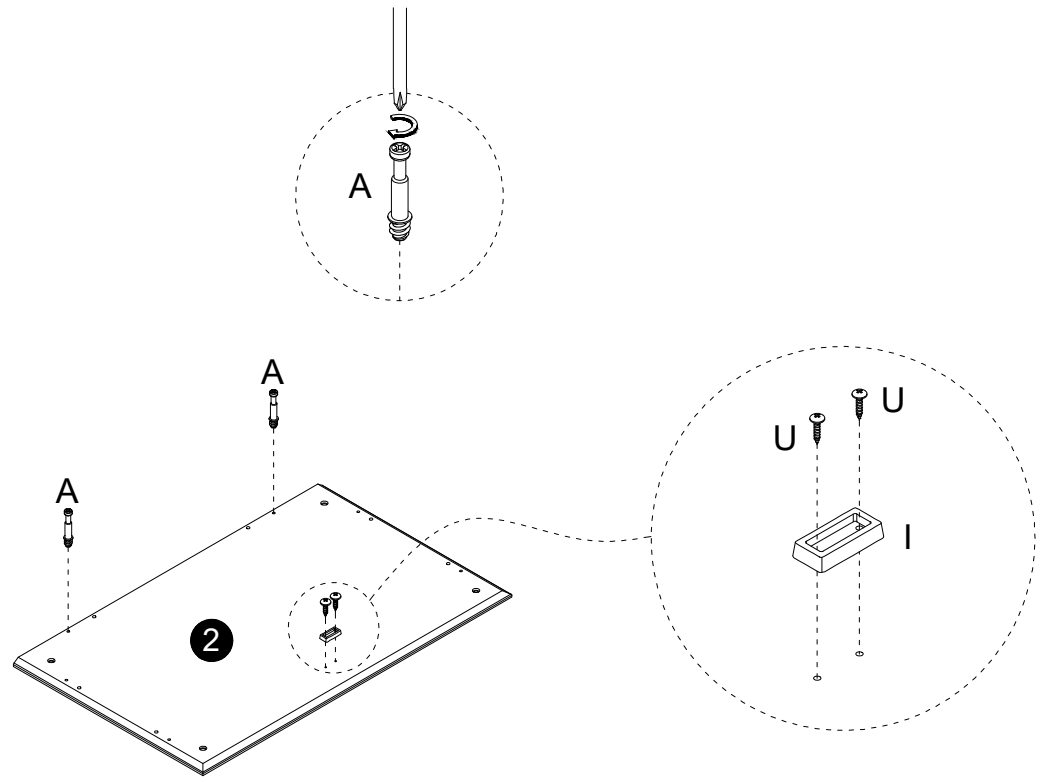



#5*9/16"	
U	x 2





I	x 1




A	x 2

STEP 6

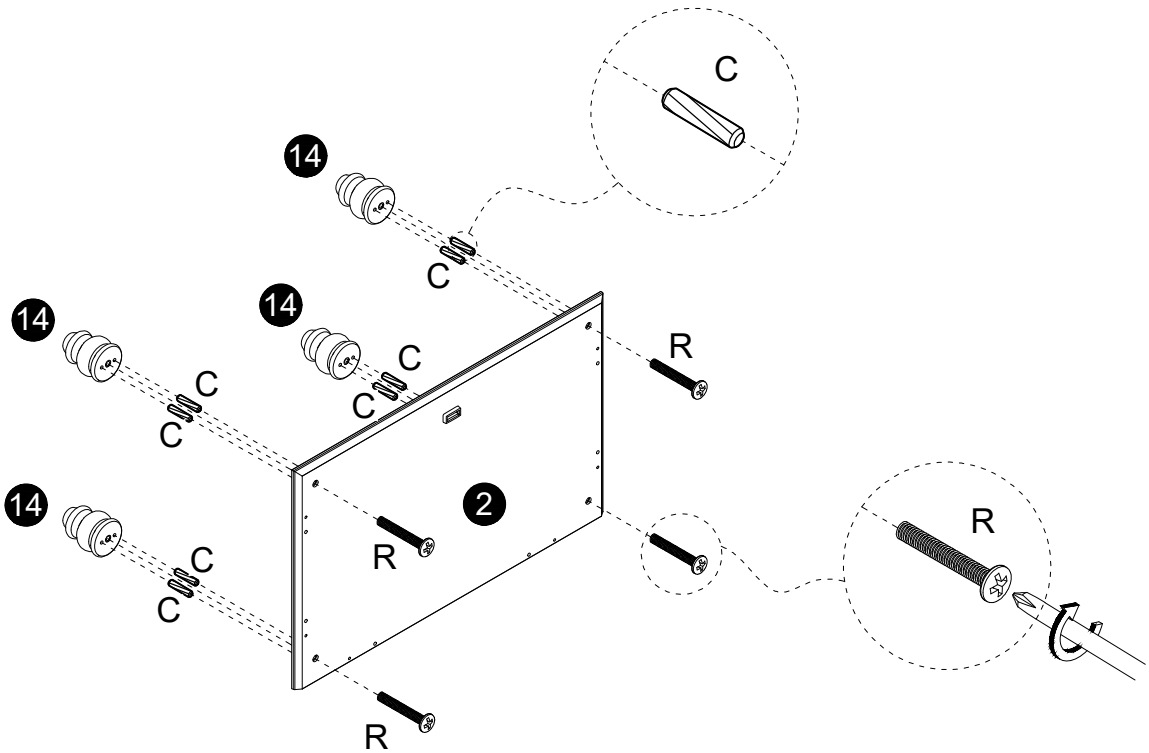




Ø6x30	
C	x 8



M6x28	
R	x 4


STEP 7

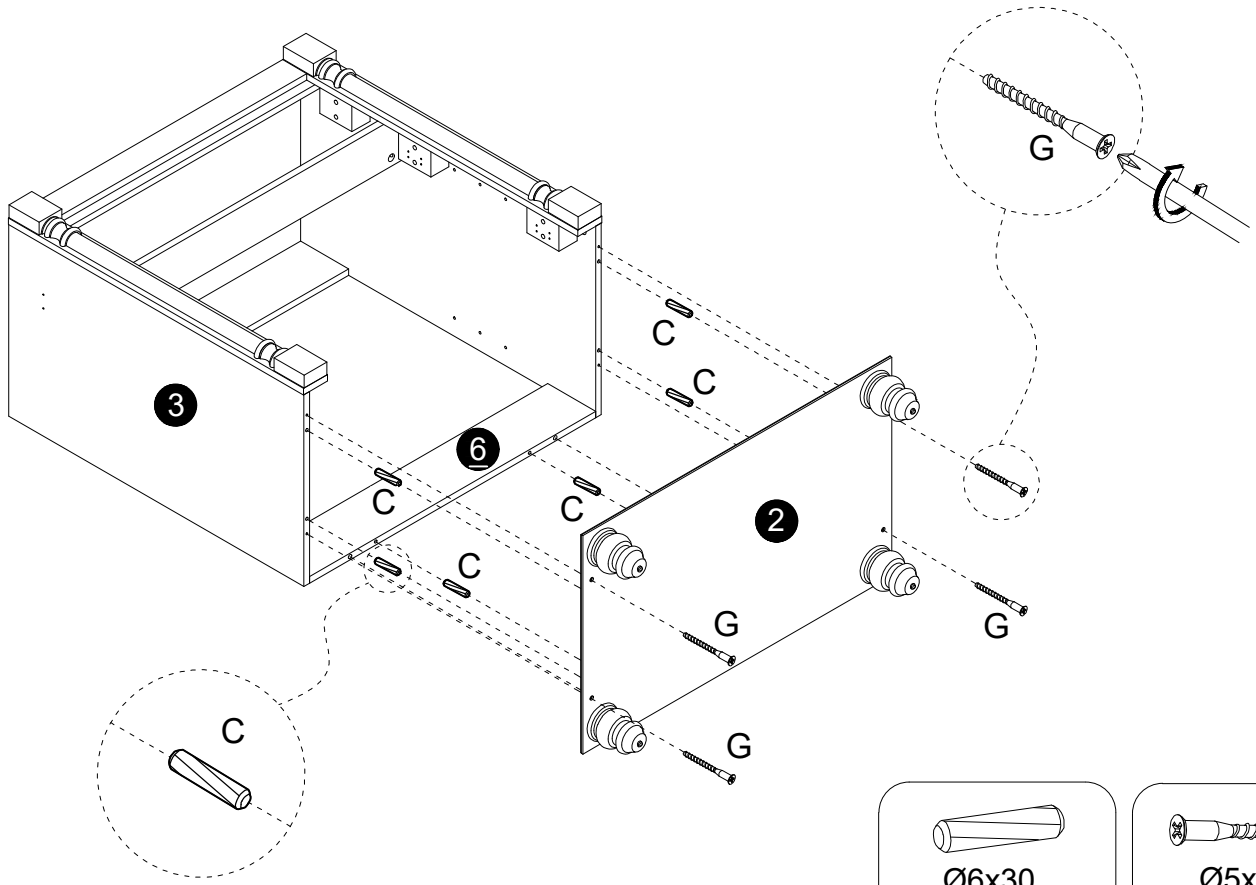


Ø6x30	
C	x 6

Ø5x40	
G	x 4


STEP 8

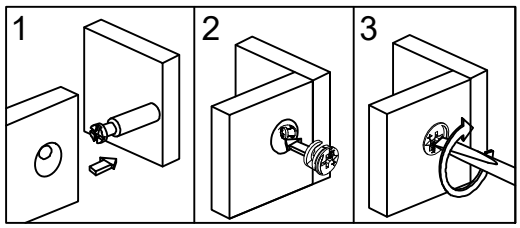


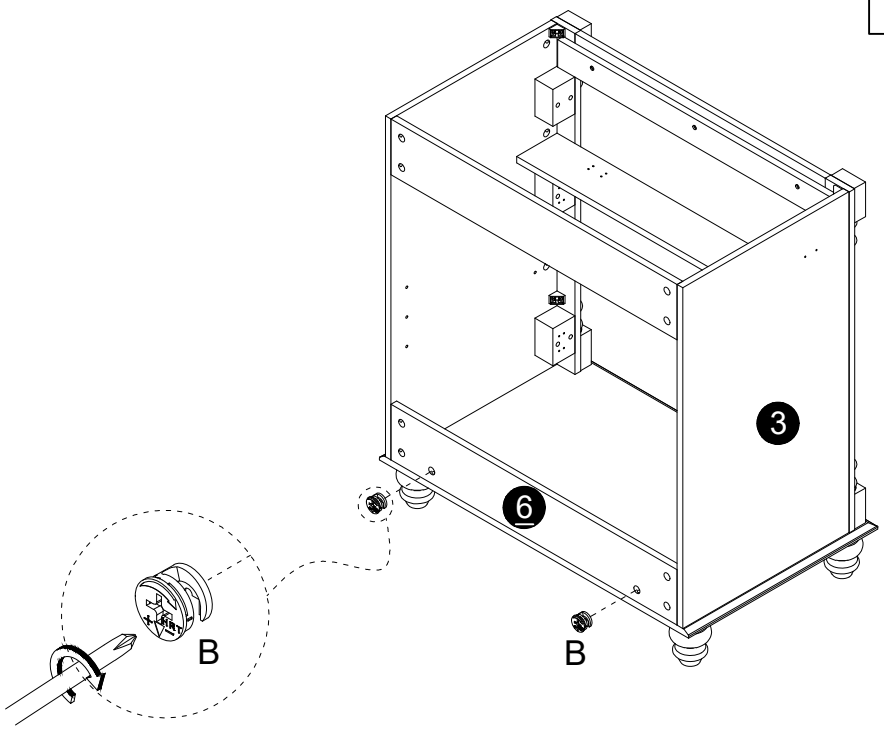


Ø15x9.5	
B	x 2



STEP 9

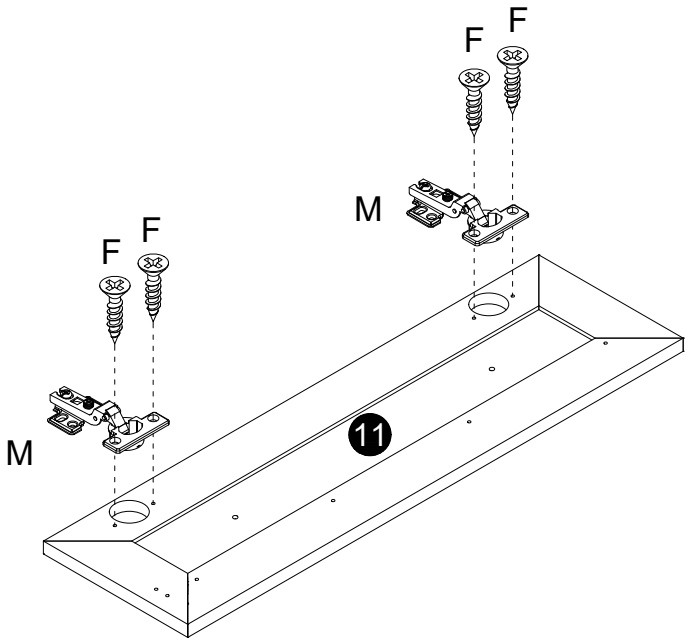


	 Ø3.5x15
M x 2	F x 4

STEP 10

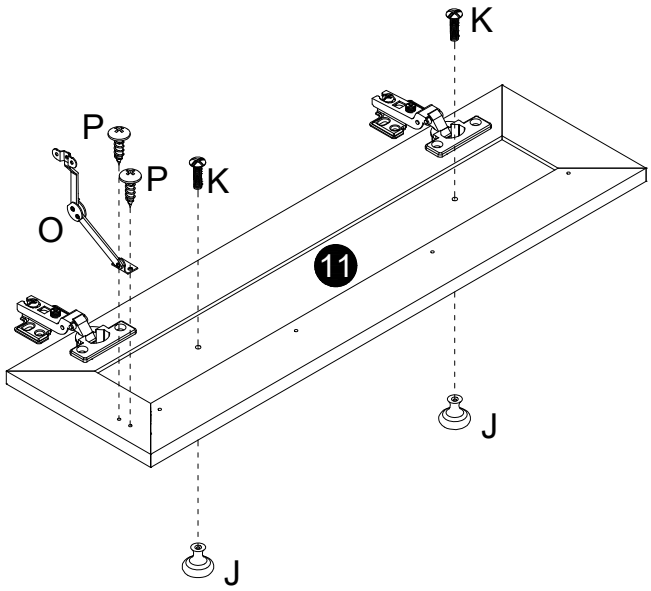

 M4x12			 Ø3.5x12
K x 2	J x 2	O x 1	P x 2

STEP 11

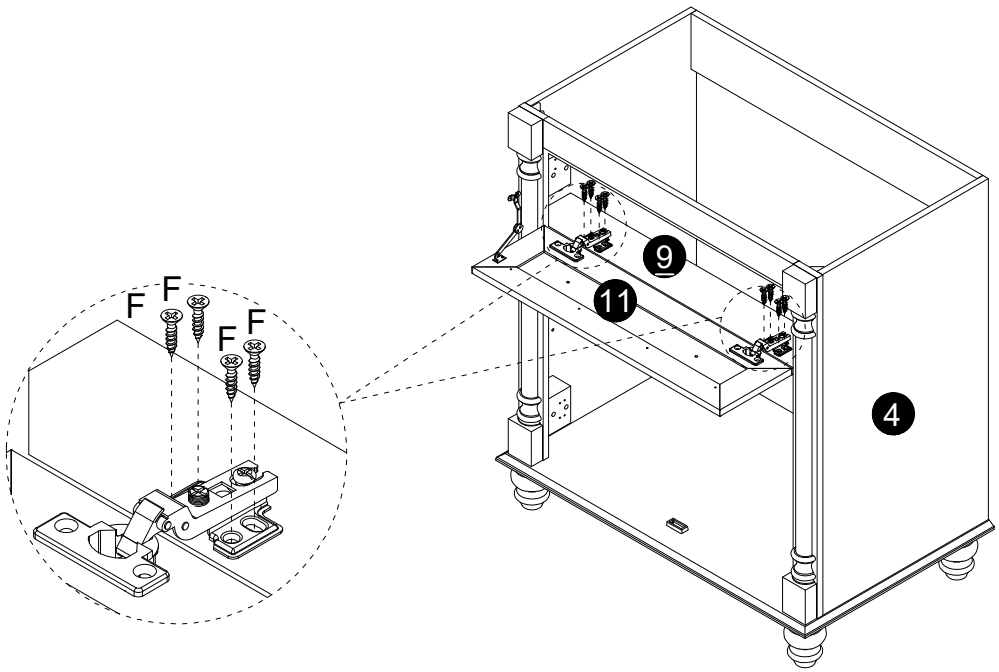




Ø3.5x15

F	x 8

STEP 12

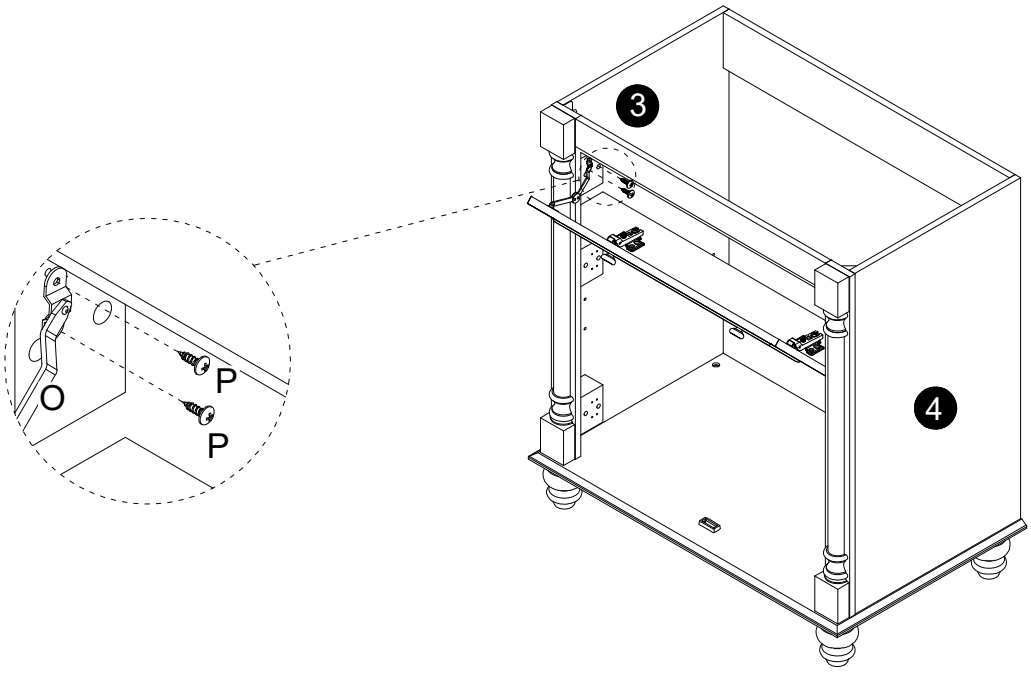




Ø3.5x12


P	x 2

STEP 13

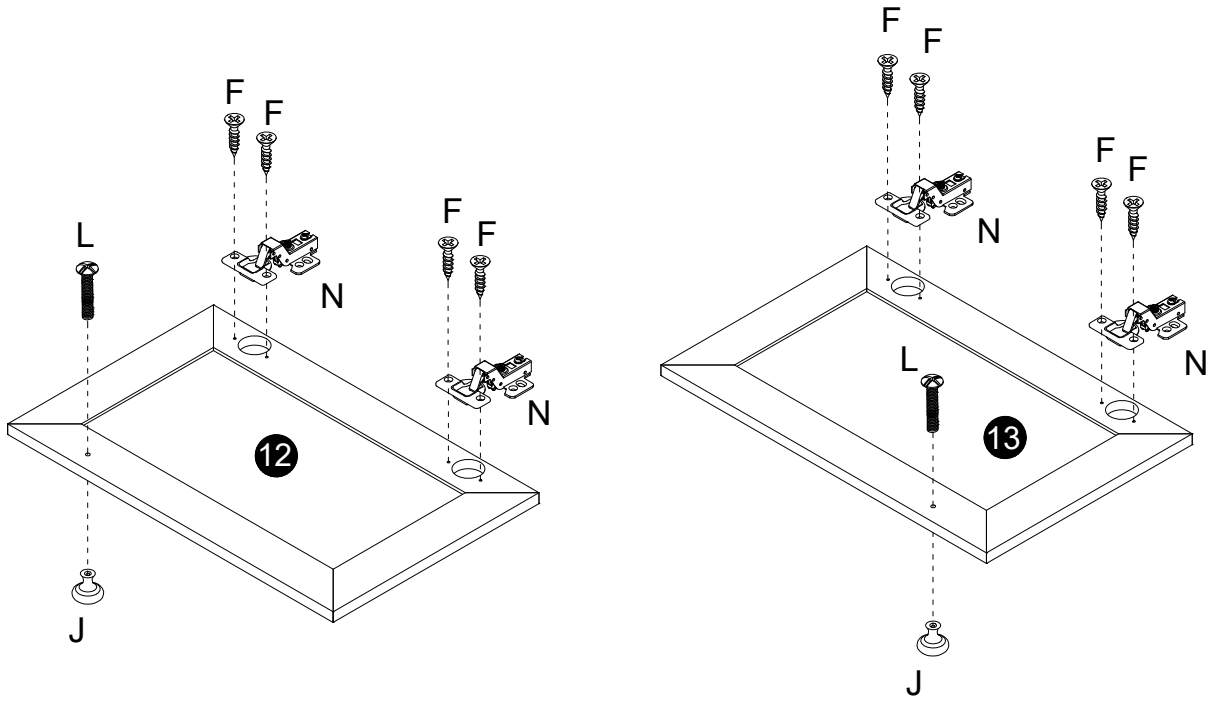


M4x20		J		N		Ø3.5x15	
L	x 2	J	x 2	N	x 4	F	x 8


STEP 14

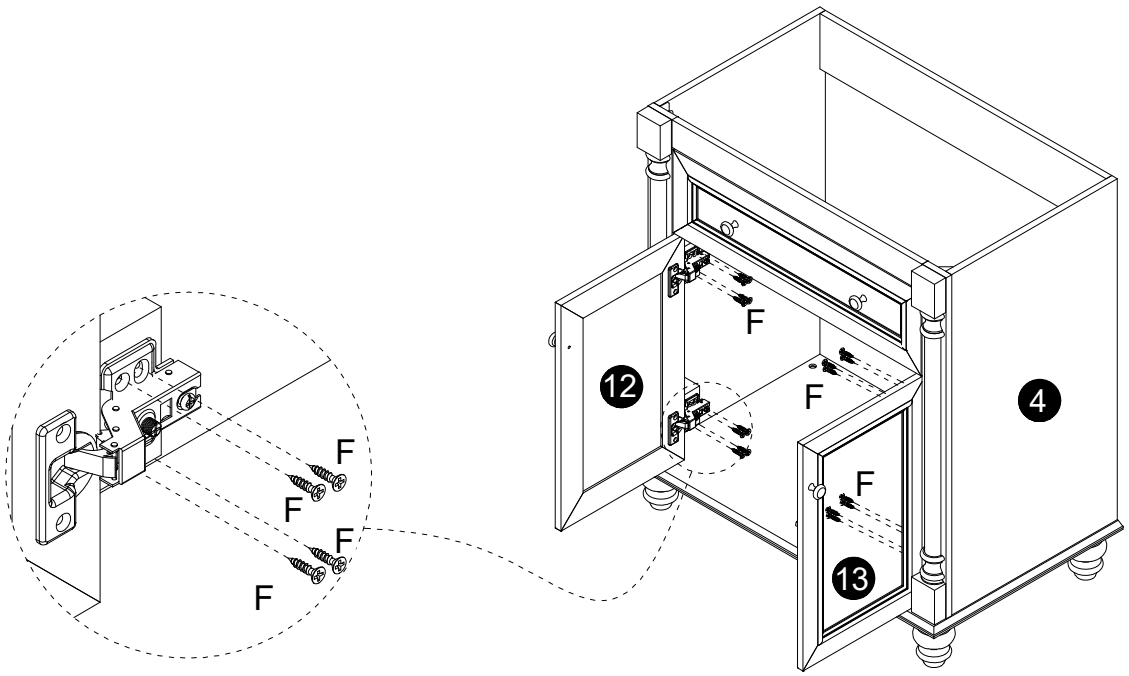


Ø3.5x15	
F	x 16


STEP 15

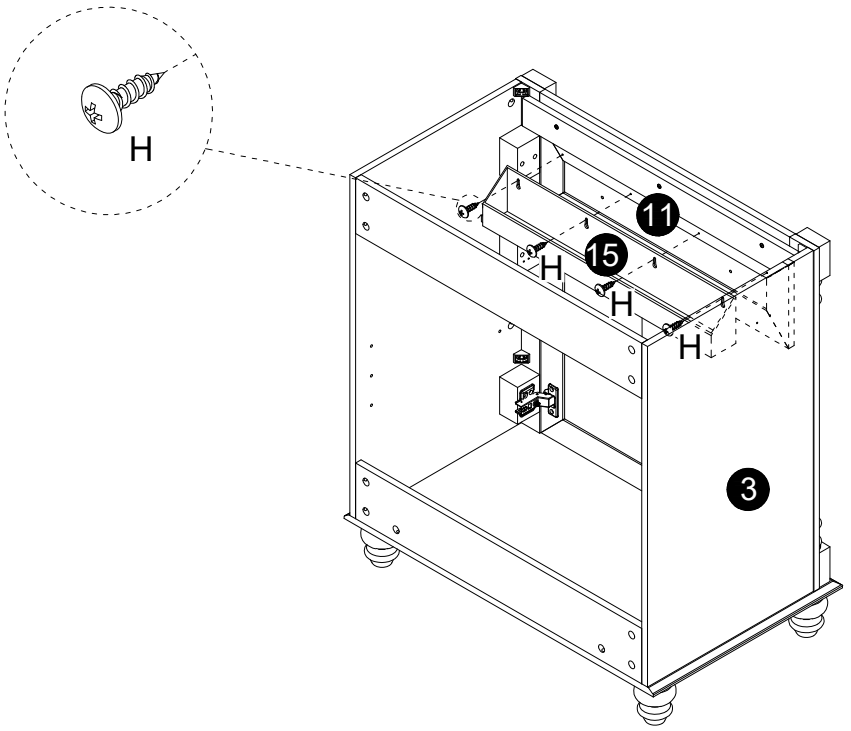


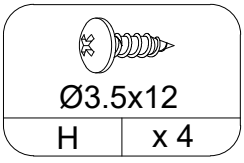


STEP 16

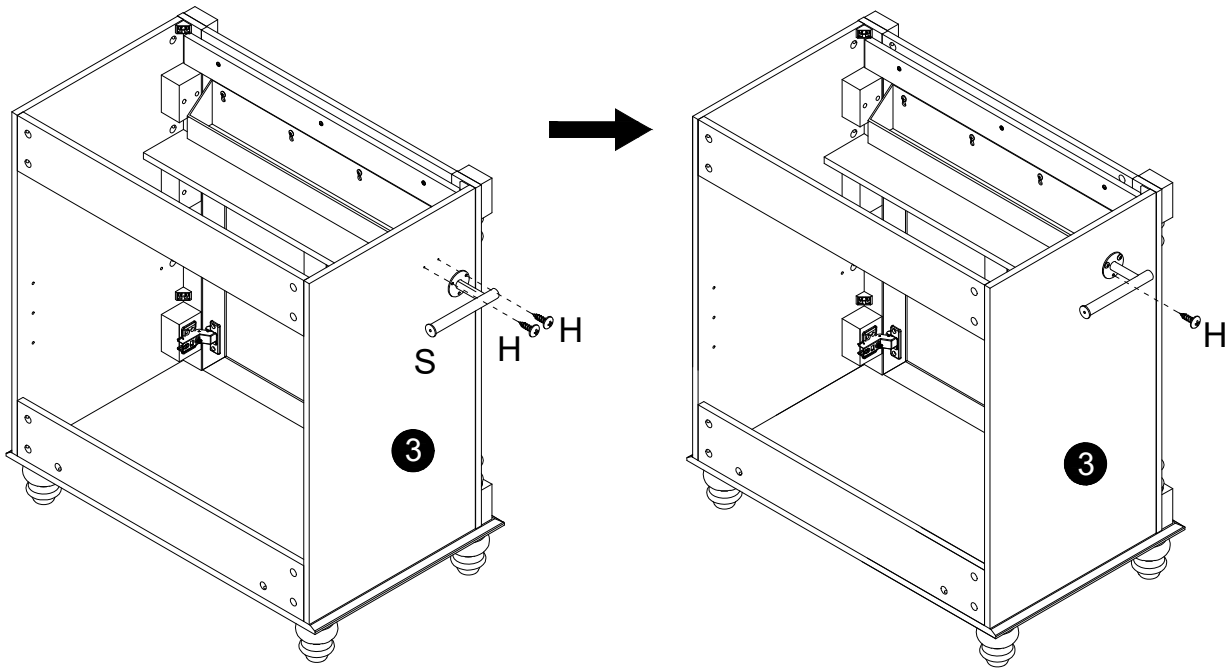


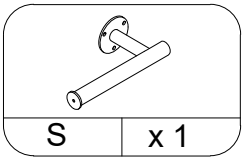

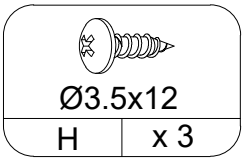


STEP 17

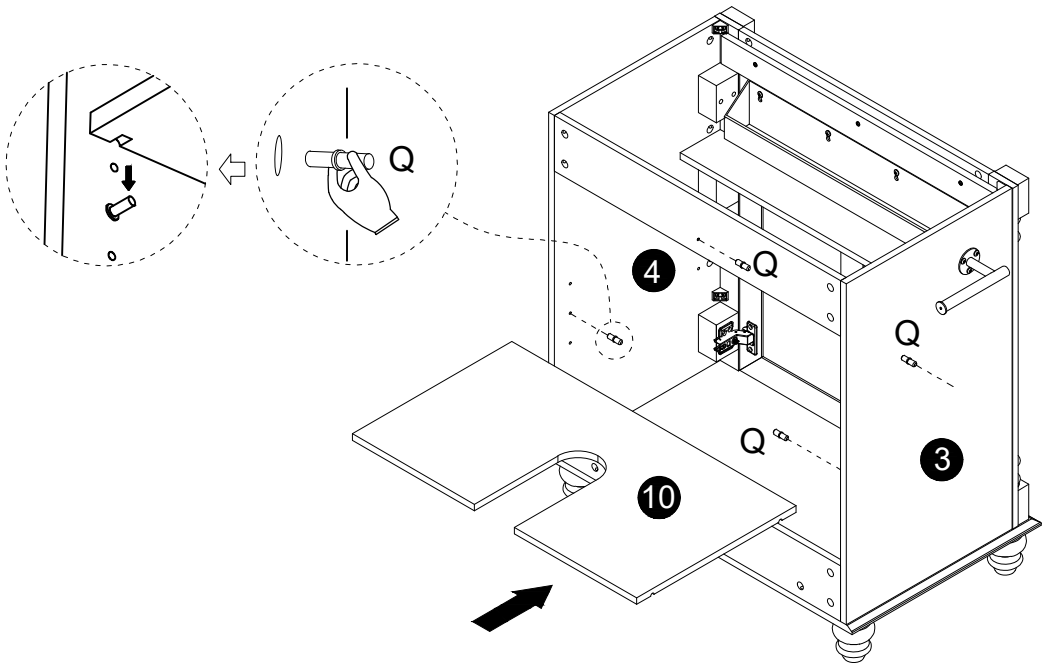

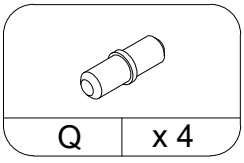

STEP 18

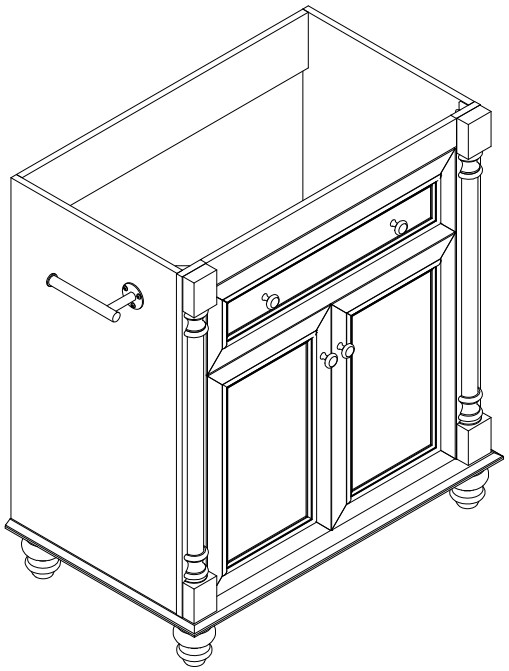

STEP 19


***Note:** Clean area where the vanity will be permanently located prior to beginning installation, ensuring the vanity will not interfere with any water supply and drain lines once mounted.

* With the help of another adult, carefully place vanity against the wall in its final location. From inside vanity, drill hole through vanity mounting area and into wall studs.

Using mounting hardware (**V**) appropriate for your installation site, secure vanity to wall studs.

* **WARNING**

Vanity **MUST** be secured to wall

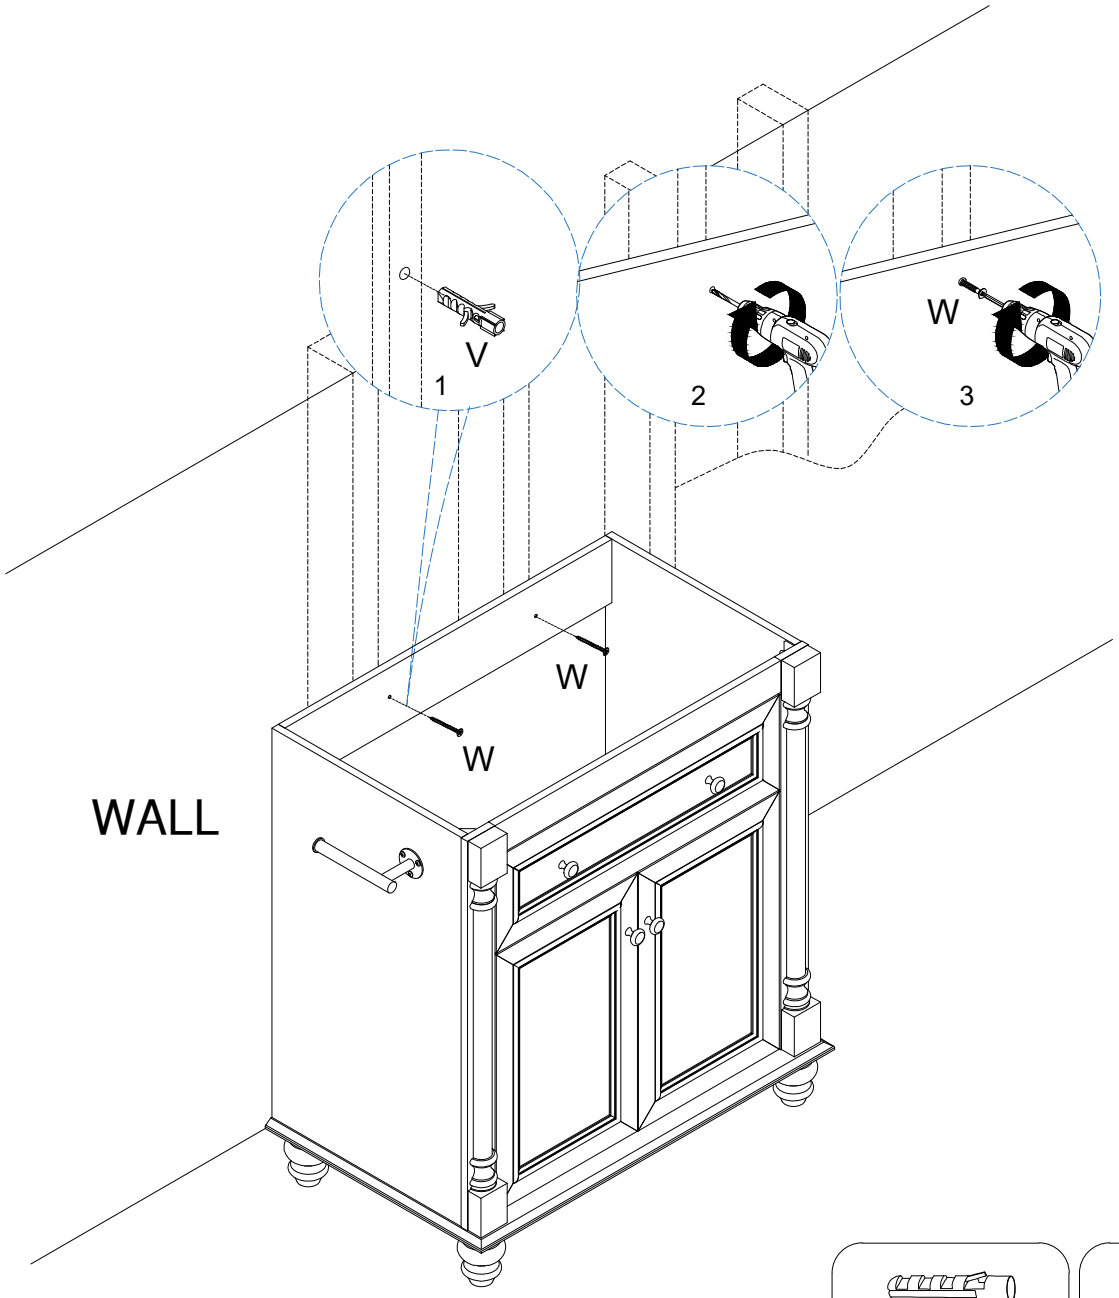


Ø6*30mm	
V	x 2

#8*45mm	
W	x 2

STEP 20

Note: At this stage it may be easier to install the faucet and drain kit (not included) to top (1) per the manufacturer's instructions.

* Apply stain free silicone or latex silicone caulk (not included) to the top edge of vanity.With the help of another adult, gently lower top (1) onto the vanity. Wipe away any excess caulk with a soft cloth, and wait approximately 24 hours for it to dry.

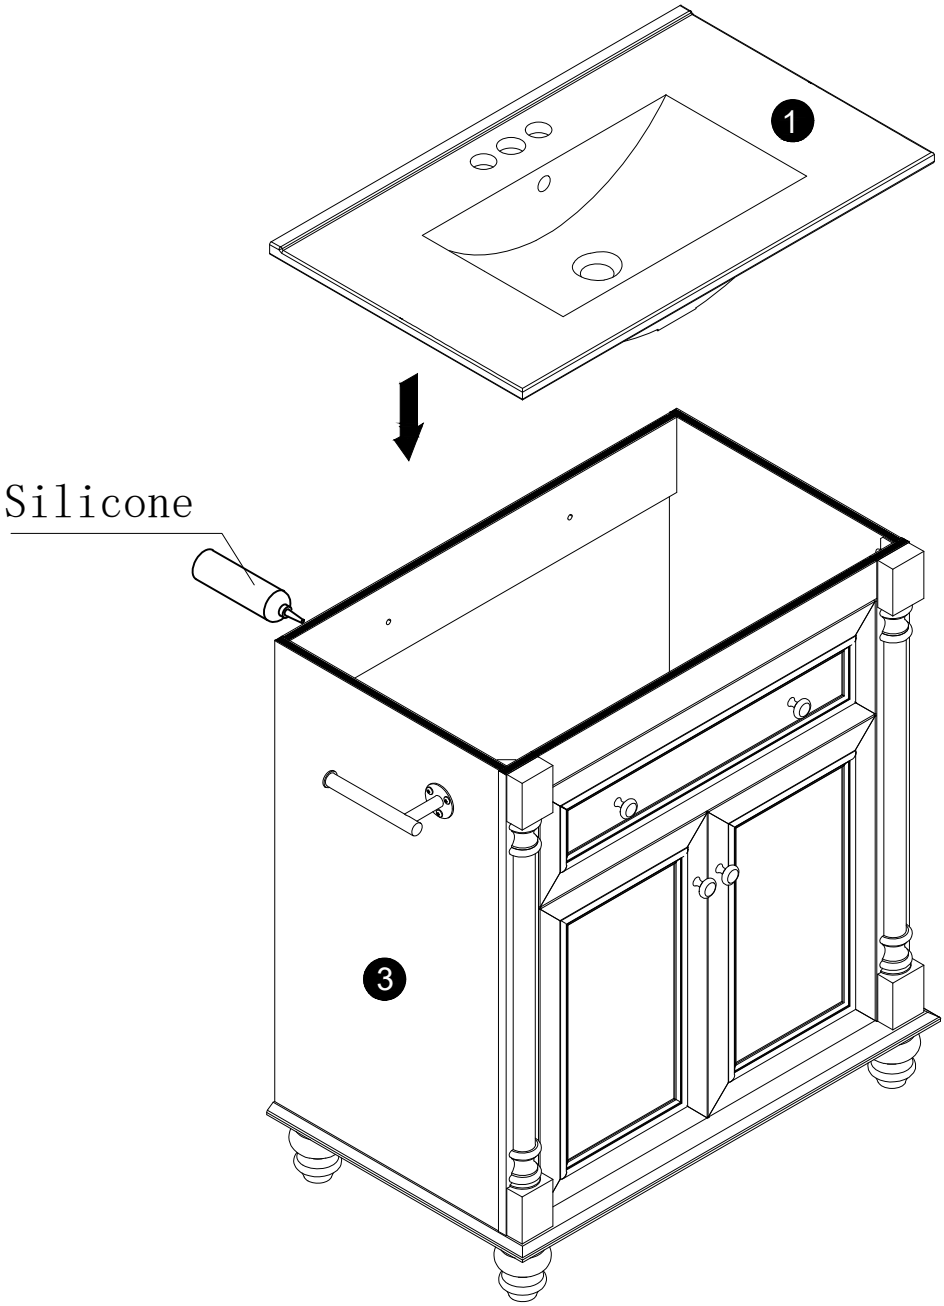

FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard and Particle board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

· Tighten all bolts and screws again within the first 2 weeks of assembly
· Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

· Clean the surface of the MDF (medium - density fiberboard) or PB (particle board) with a lightly dampened cloth.
· Small amount of mild soap can be used if necessary
- **Dry the surface immediately after cleaning.**

⚠ DO NOT use bleach or alcohol detergent to clean the surface.
⚠ DO NOT apply wood treatment on parts made with MDF and PB.
Medium - density fiberboard and Particle board will swell and distort when suffer from water damage.
Make sure to dry the furniture immediately after cleaning