


Assembly Instructions

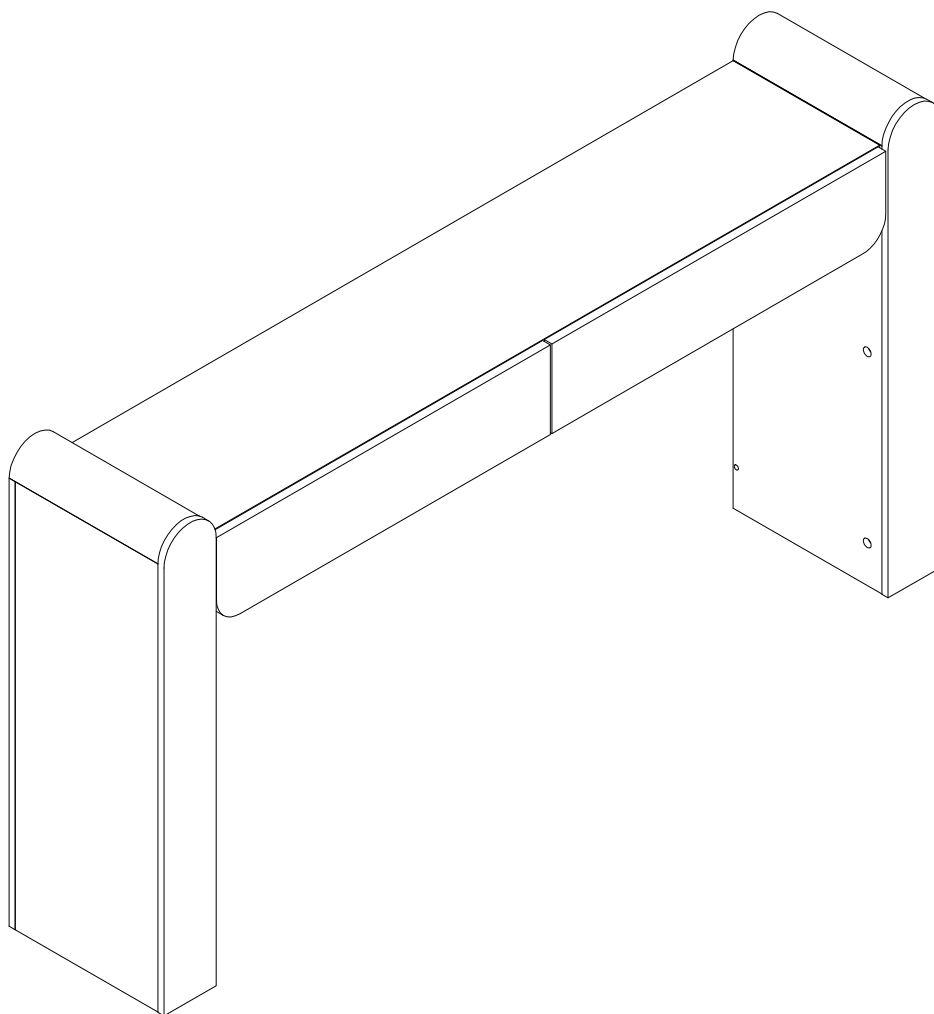

“Please check all parts and hardware against the list before assembly. If any parts are missing or damaged, please contact us immediately.”


Before Assembly

1. Assembly requires two or more people to complete.
2. Using power tools will make the installation finish faster.

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

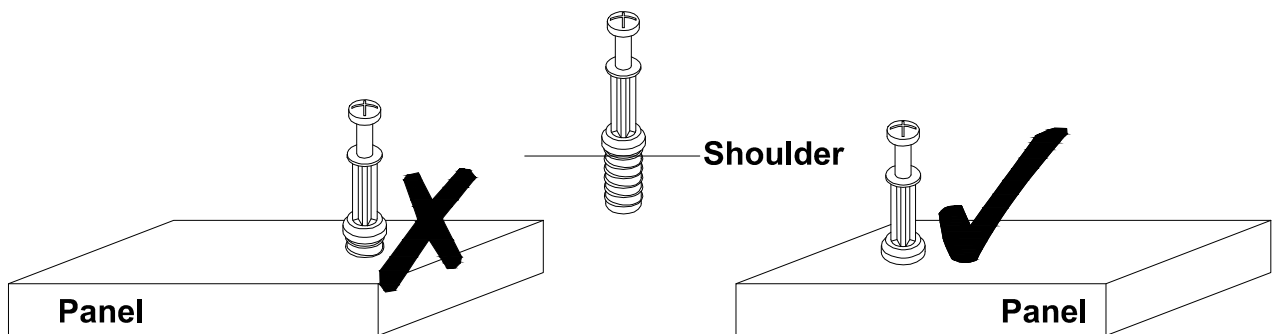


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

CAM LOCK

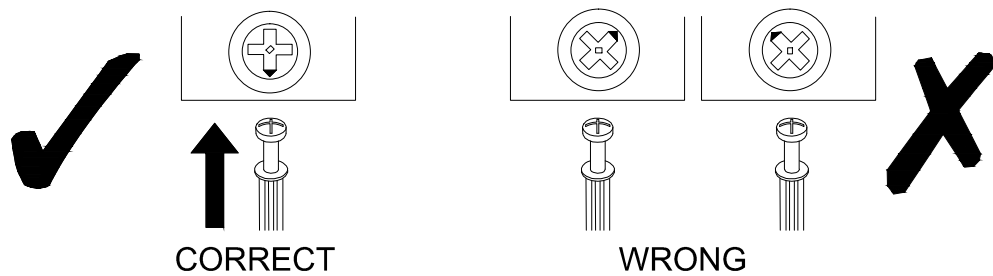


When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT

"Ensure the arrow on the Cam Lock (B) is pointing towards the hole for the Cam Lock Dowel (A) before inserting."

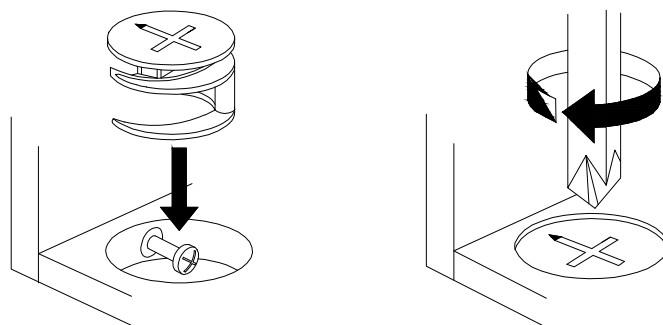

Turn cam lock clockwise to tighten.

Product structure

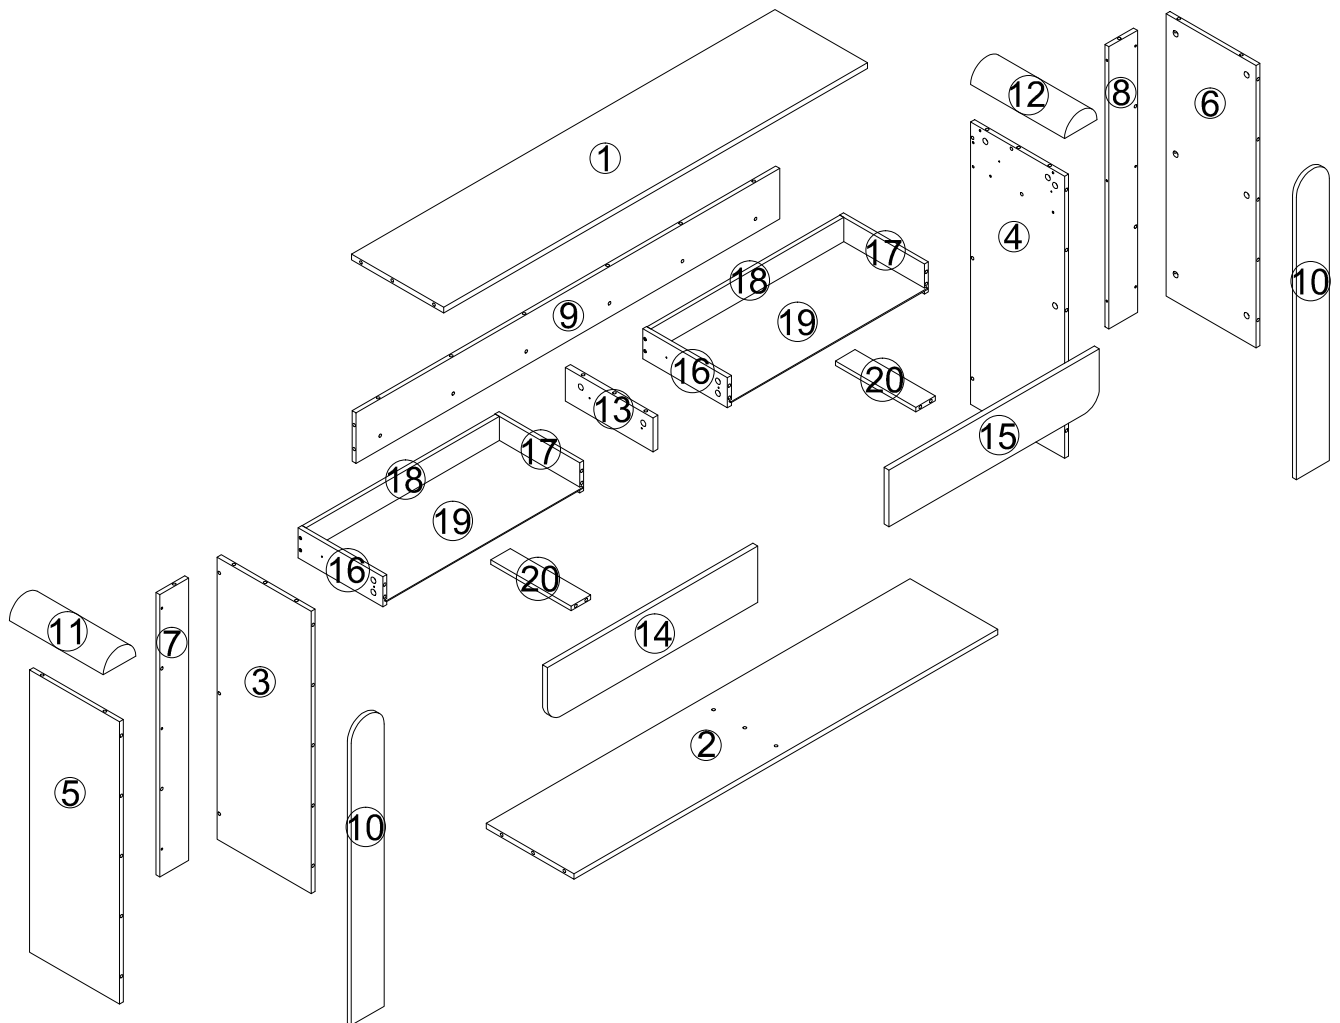

“Assemble on a soft surface, such as a carpet or the original packaging box, to avoid scratches to the panels.”


Part List



“Please check all parts and hardware against the list before assembly. If any parts are missing or damaged, please contact us immediately.”

No. A

Quantity: 58 Pcs
Cam Lock Dowel
8*28mm



No. B

Quantity: 58 Pcs
Cam
φ15




No. C

Quantity: 58 Pcs
Sticker
Ø20




No. D

Quantity: 28 Pcs
Dowel
8*30mm




No. E

Quantity: 2 Sets
Drawer Slider
10"




No. F

Quantity: 16 Pcs
Screw
M3.5*12mm



No. G

Quantity: 8 Pcs
Screw
M4*30mm



No. H

Quantity: 12 Pcs
Screw
M6*40mm




No. I

Quantity: 8 Pcs
Foot Pad
Ø12




No. J

Quantity: 1 Pc
Allen Key
4#



No. K

Quantity: 1 Pc
Screwdriver

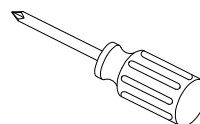


No. L


Quantity: 2 Sets
Anti-falling Parts




STEP 1

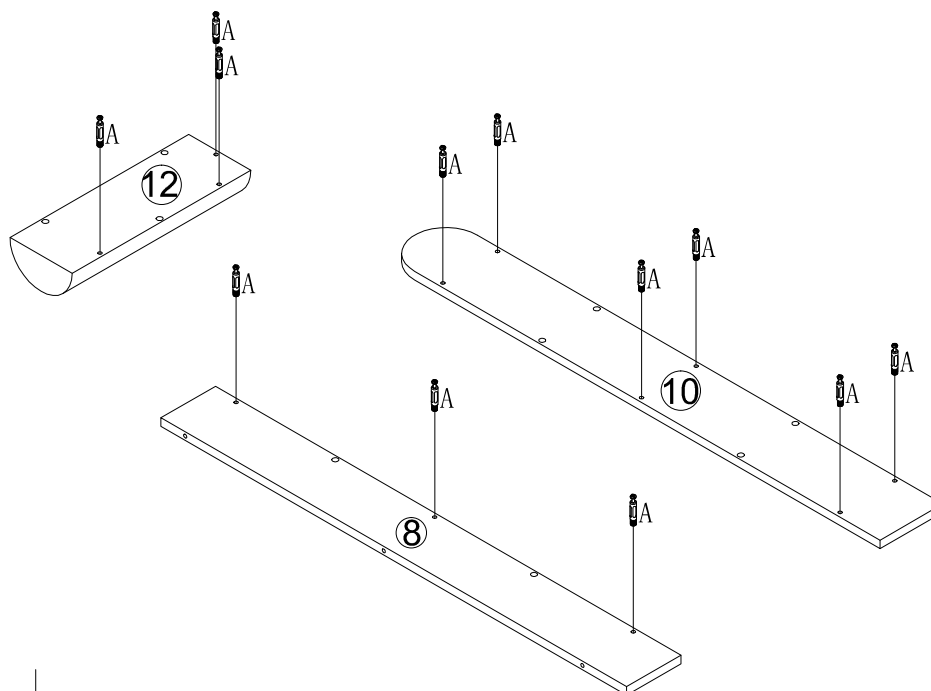

No. A
Quantity: 12 Pcs
8*28 mm



STEP 2

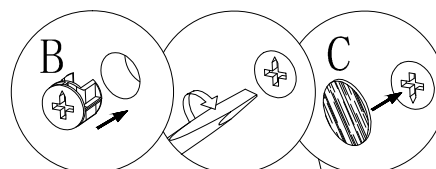



No. B
Quantity: 3 Pcs
Ø15



No. C
Quantity: 3 Pcs
Ø20



No. D
Quantity: 2 Pcs
8*30mm

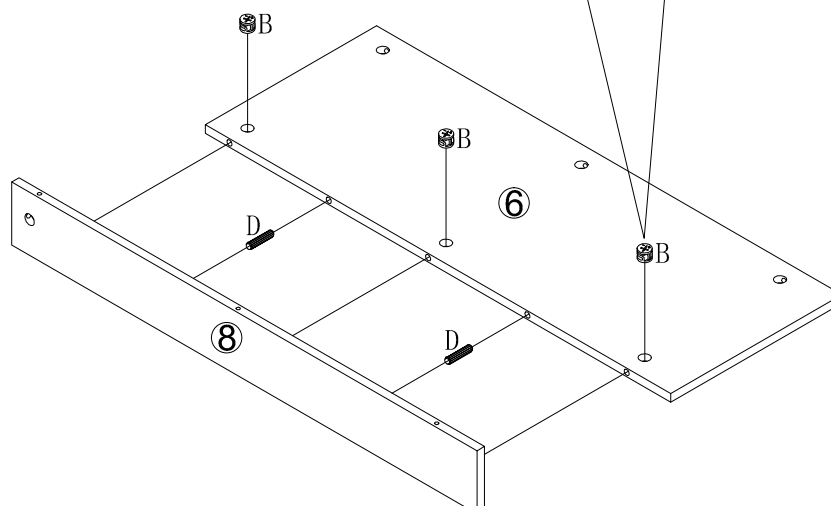

STEP 3



No. B
Quantity: 3 Pcs
Ø15



No. C
Quantity: 3 Pcs
Ø20



No. D
Quantity: 2 Pcs
8*30mm

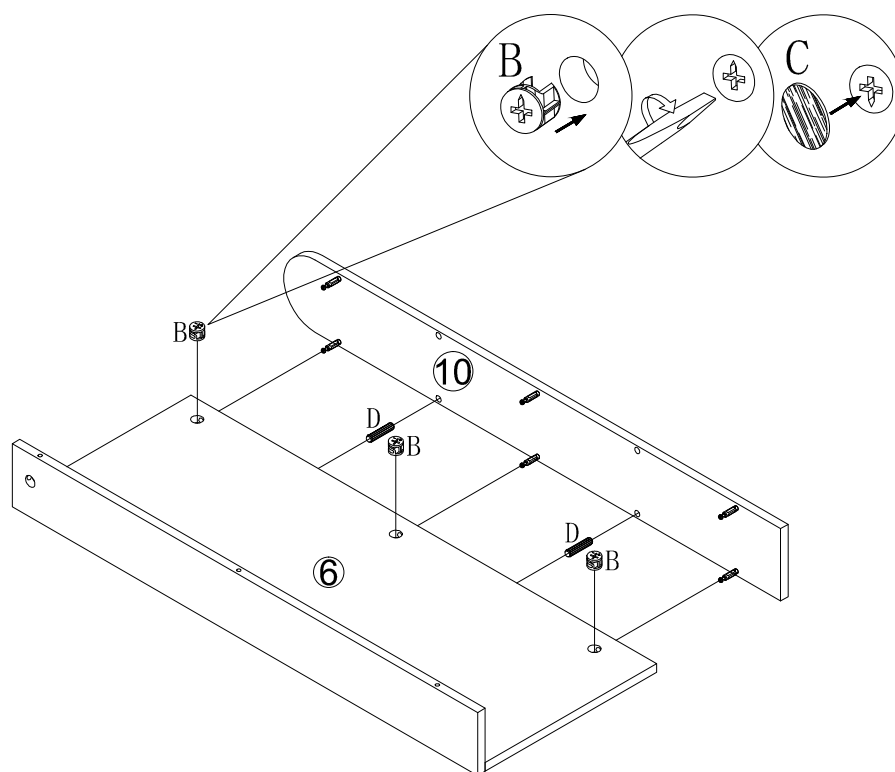

STEP 4



No. B
Quantity: 3 Pcs
Ø15



No. C
Quantity: 3 Pcs
Ø20



No. D
Quantity: 2 Pcs
8*30mm

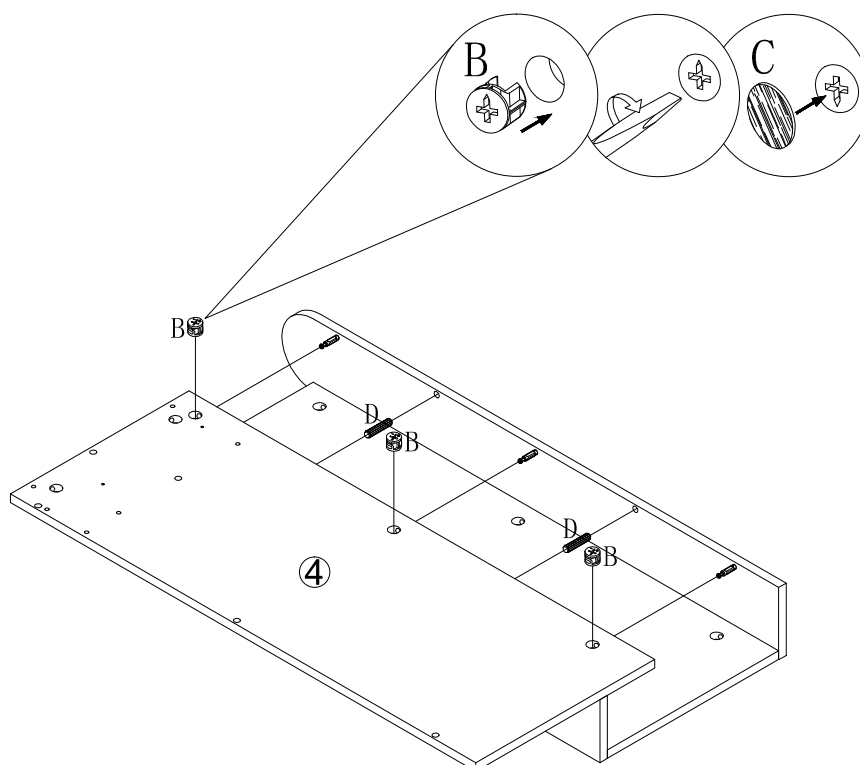


STEP 5

No. H
Quantity: 3 Pcs
M6*40mm



No. J
Quantity: 1 Pc
4#

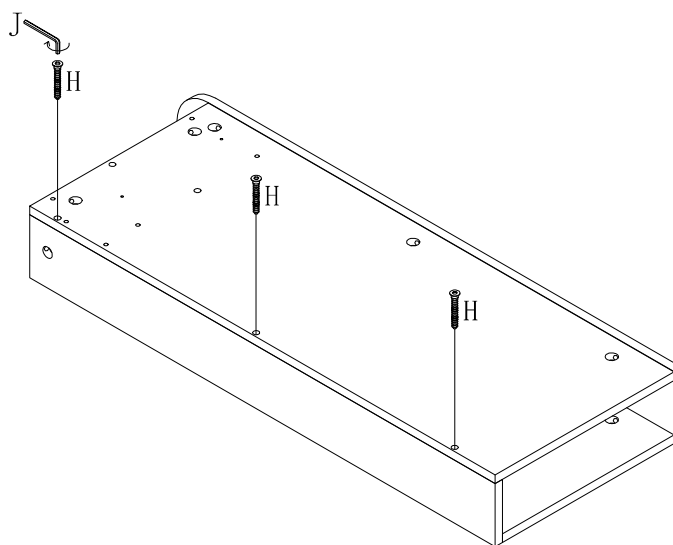

STEP 6



No. B
Quantity: 3 Pcs
Ø15




No. C
Quantity: 3 Pcs
Ø20




No. D
Quantity: 3 Pcs
8*30mm

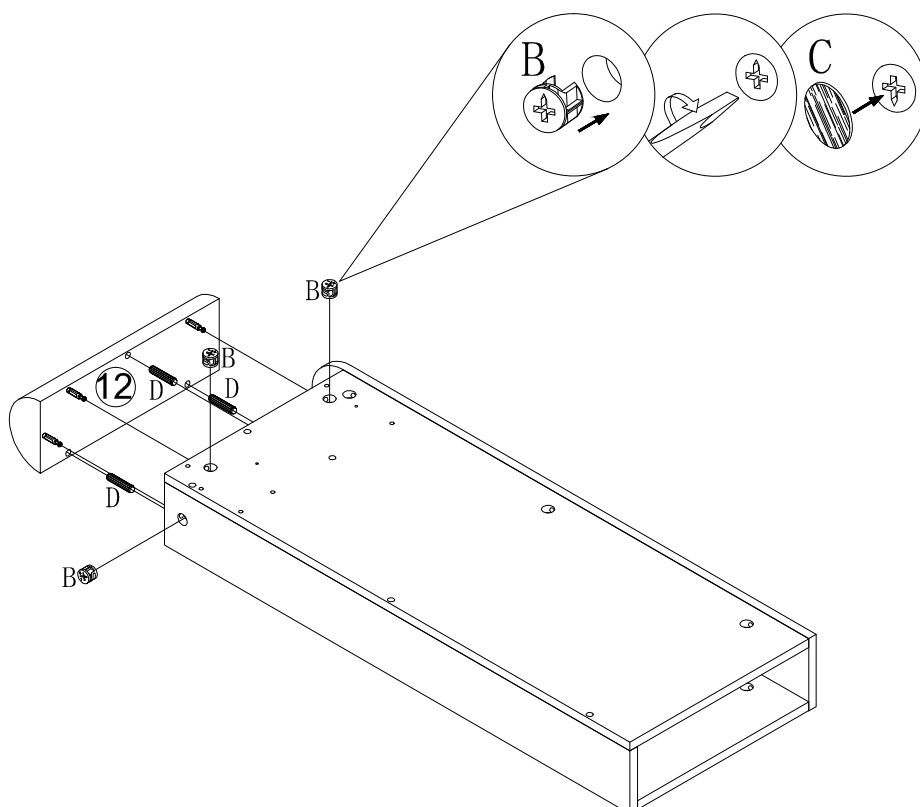


STEP 7

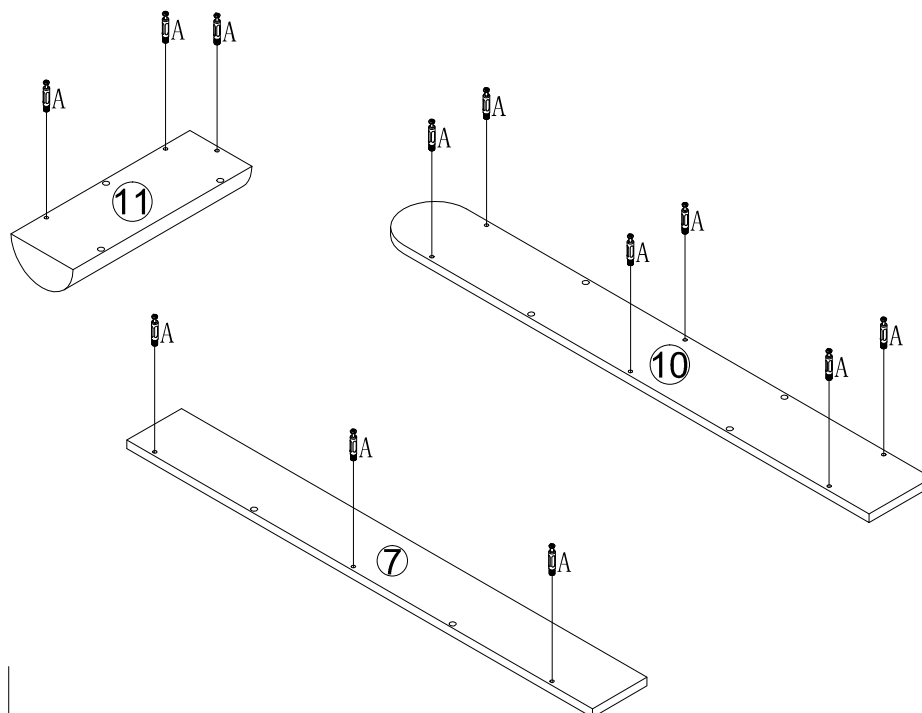

No. A
Quantity: 12 Pcs
8*28 mm



STEP 8

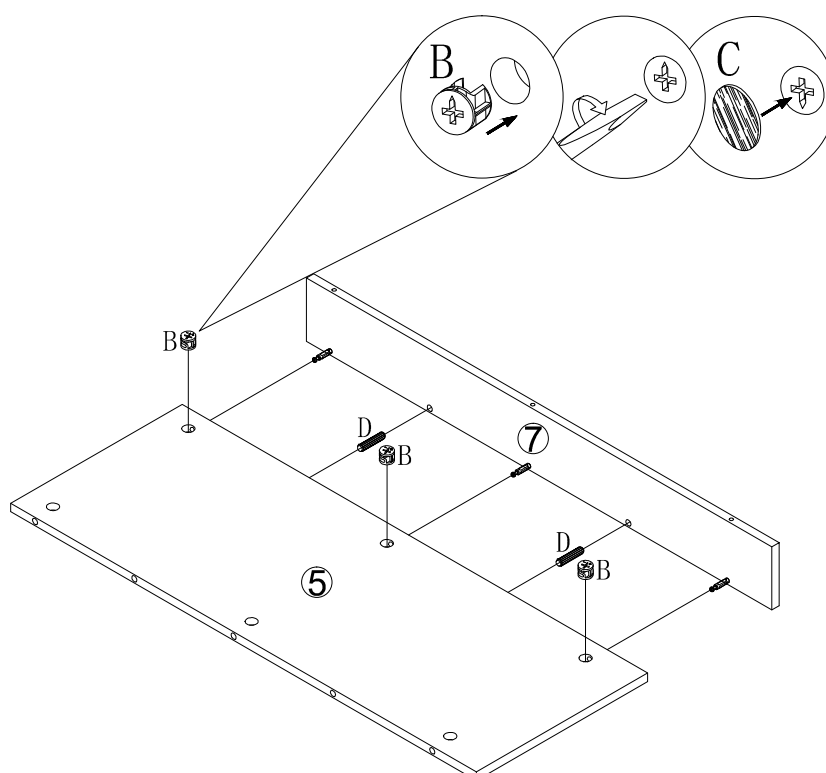


No. B
Quantity: 3 Pcs
Ø15



No. C
Quantity: 3 Pcs
Ø20



No. D
Quantity: 2 Pcs
8*30mm



STEP 9



No. B
Quantity: 3 Pcs
Ø15



No. C
Quantity: 3 Pcs
Ø20



No. D
Quantity: 2 Pcs
8*30mm

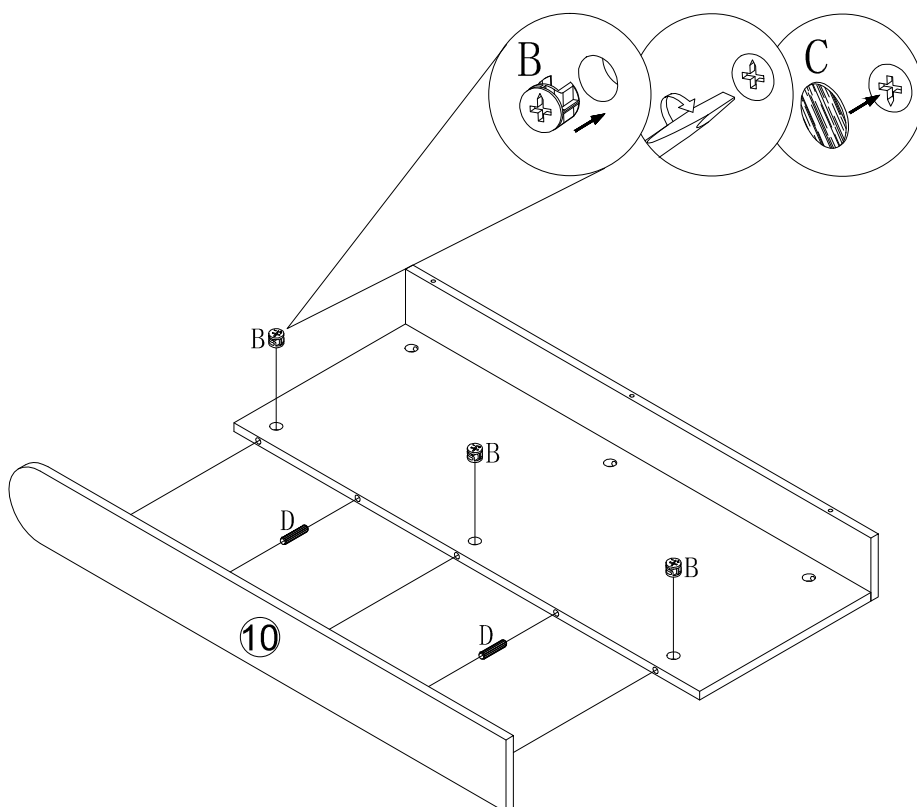

STEP 10



No. B
Quantity: 3 Pcs
Ø15



No. C
Quantity: 3 Pcs
Ø20



No. D
Quantity: 2 Pcs
8*30mm

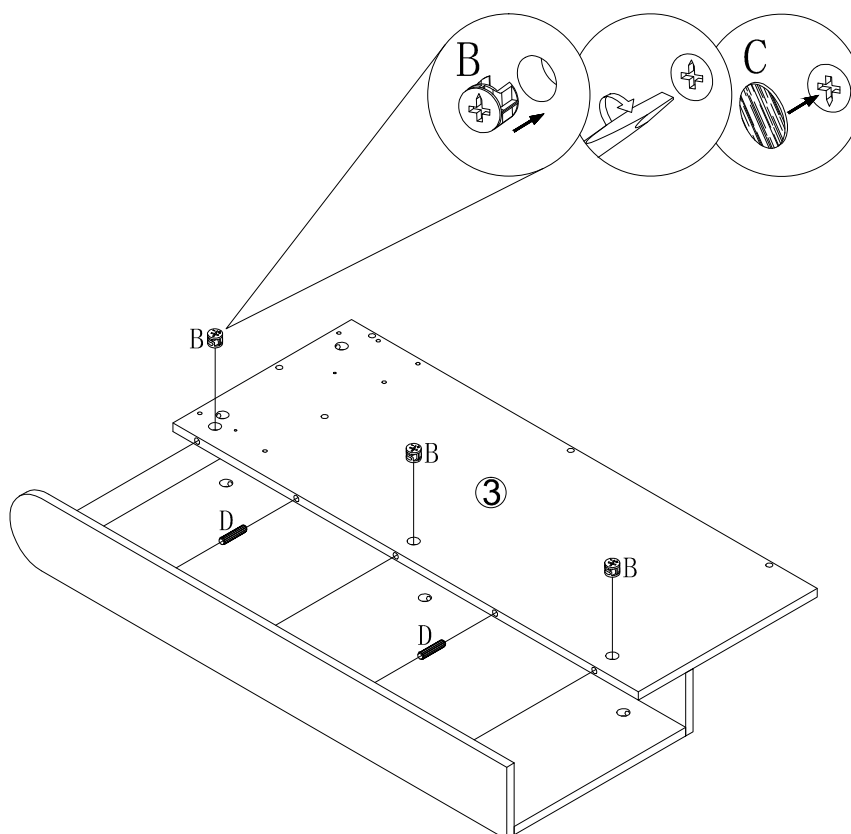



STEP 11

No. H
Quantity: 3 Pcs
M6*40mm



No. J
Quantity: 1 Pc
4#

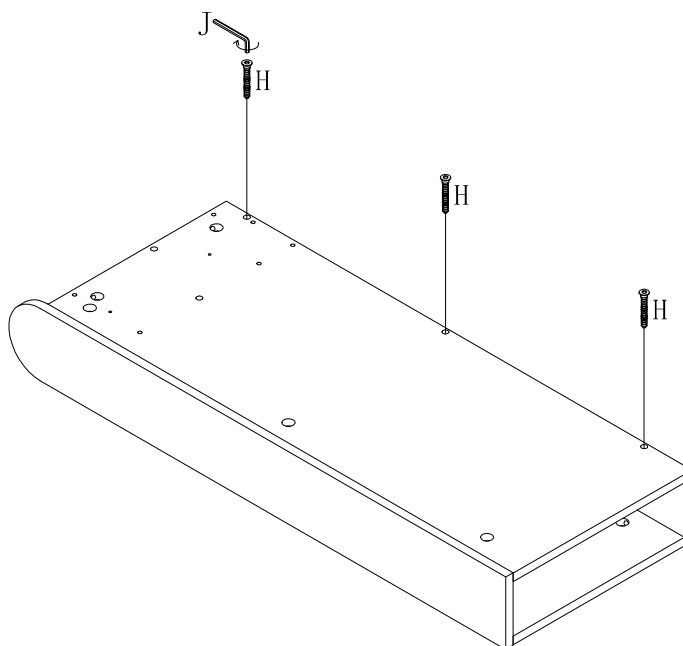

STEP 12



No. B
Quantity: 3 Pcs
Ø15




No. C
Quantity: 3 Pcs
Ø20




No. D
Quantity: 3 Pcs
8*30mm

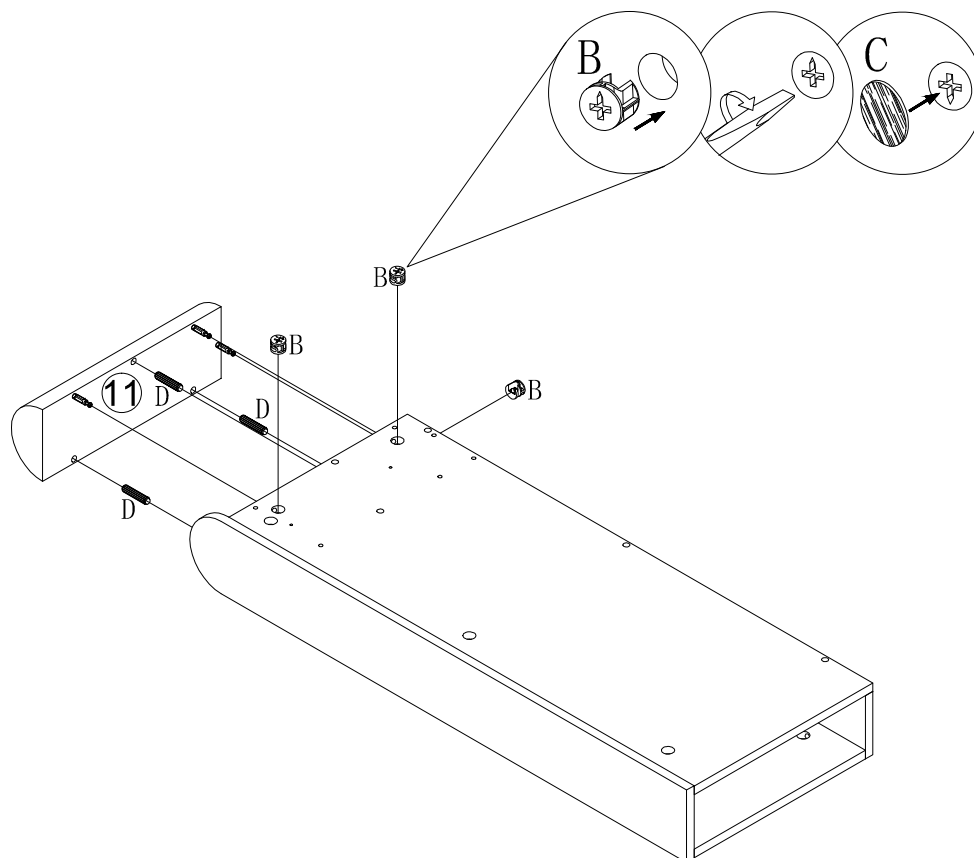


STEP 13

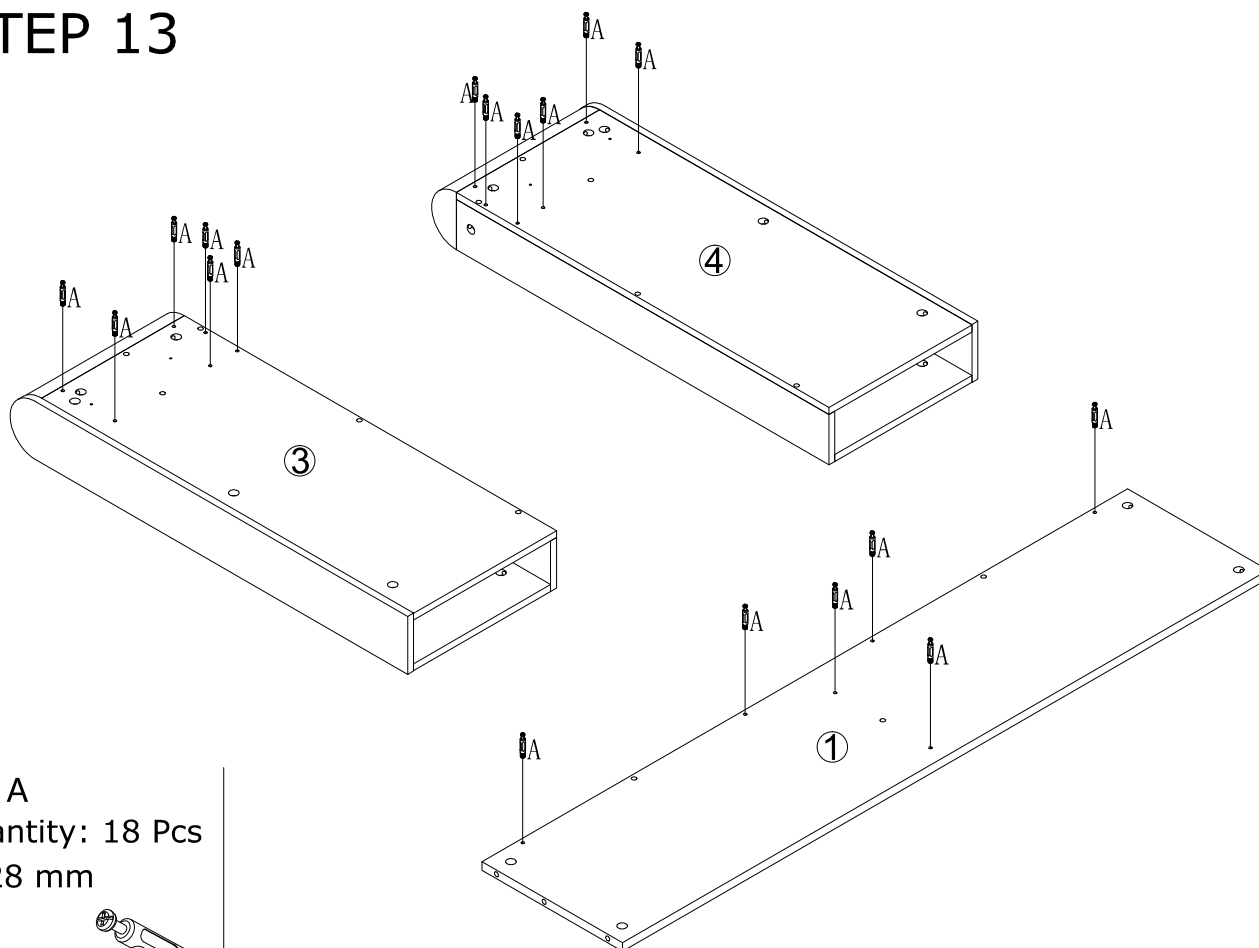

No. A
Quantity: 18 Pcs
8*28 mm



STEP 14

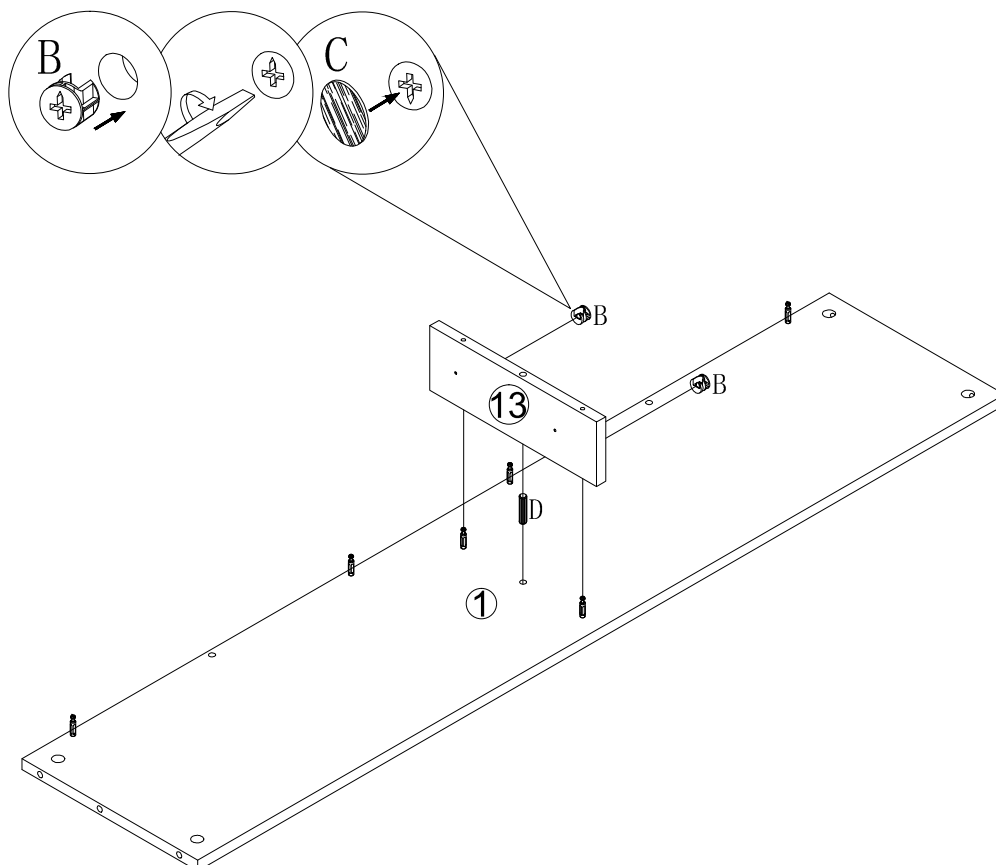


No. B
Quantity: 2 Pcs
Ø15



No. C
Quantity: 2 Pcs
Ø20




No. D
Quantity: 1 Pc
8*30mm




Preparatory steps for installing drawer slides;

please first locate and disassemble the drawer slide 'E' component for subsequent installation, Please follow the instructions below for disassembly.


How to separate the drawer slider:

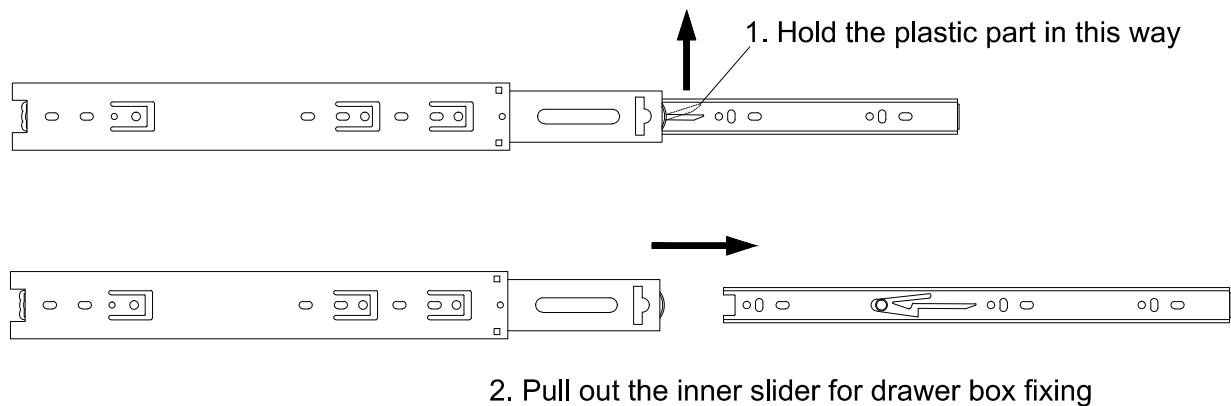

Drawer Front Alignment

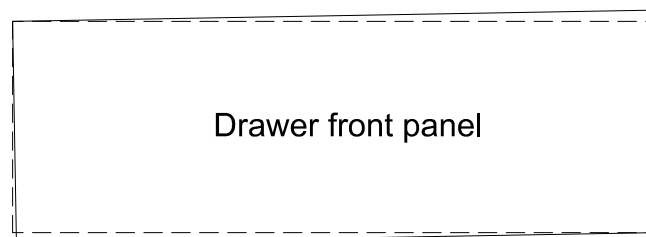


If the drawer front panel is NOT level after being assembled, then...

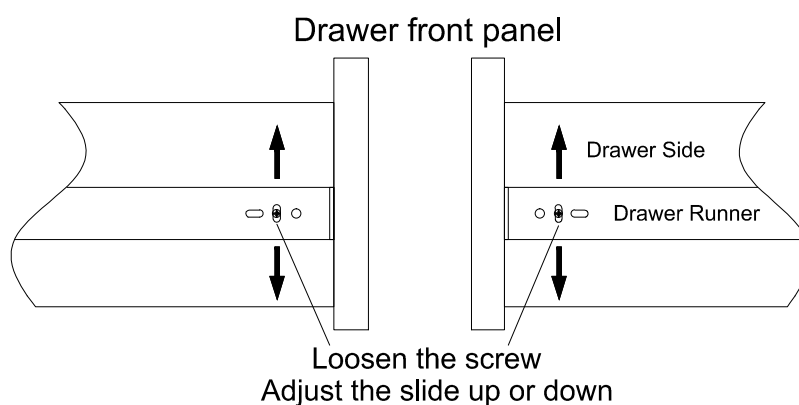


Loosen the screws on the left and right hand side, then adjust the drawer slide up or down, until the drawer fronts are even/level, then tighten the screws.


STEP 15

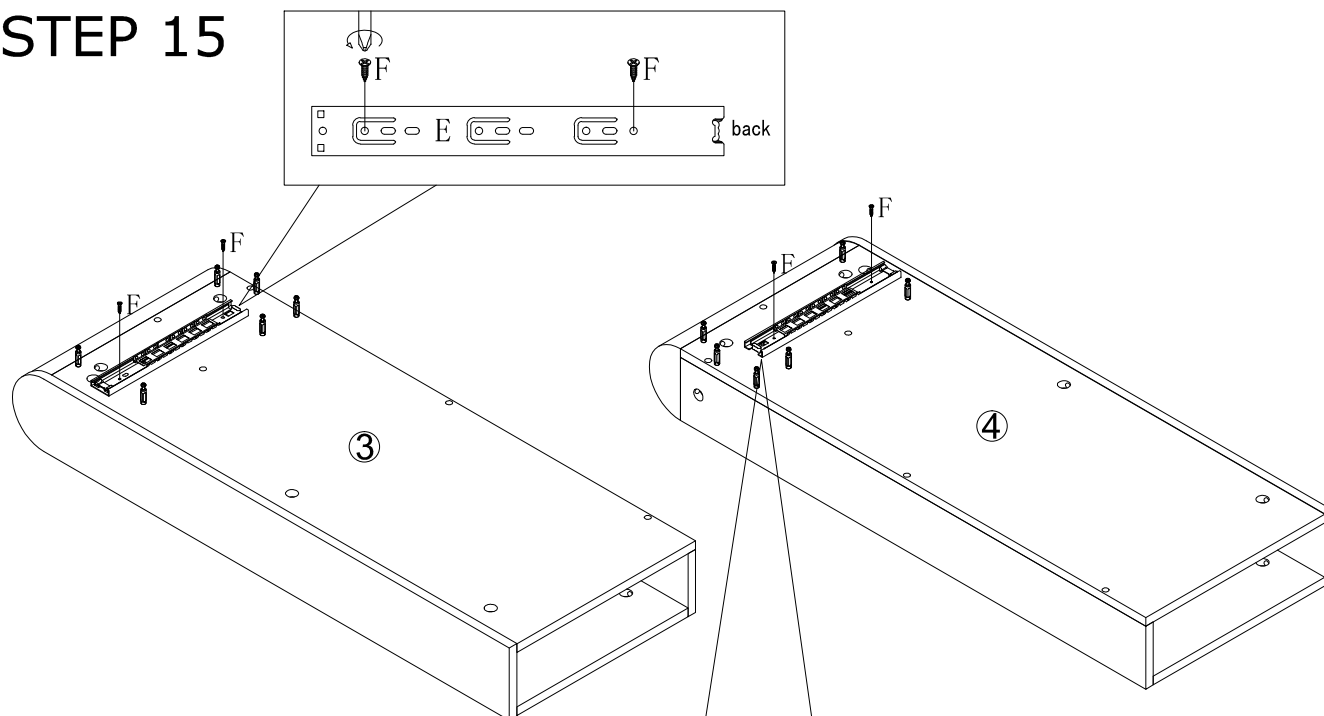


No. E
Quantity: 1 Sets
10"

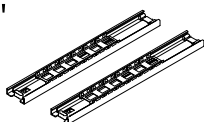


No. F
Quantity: 4 Pcs
M3.5*12mm

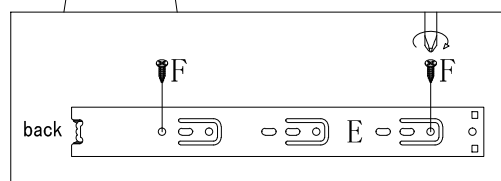

STEP 16

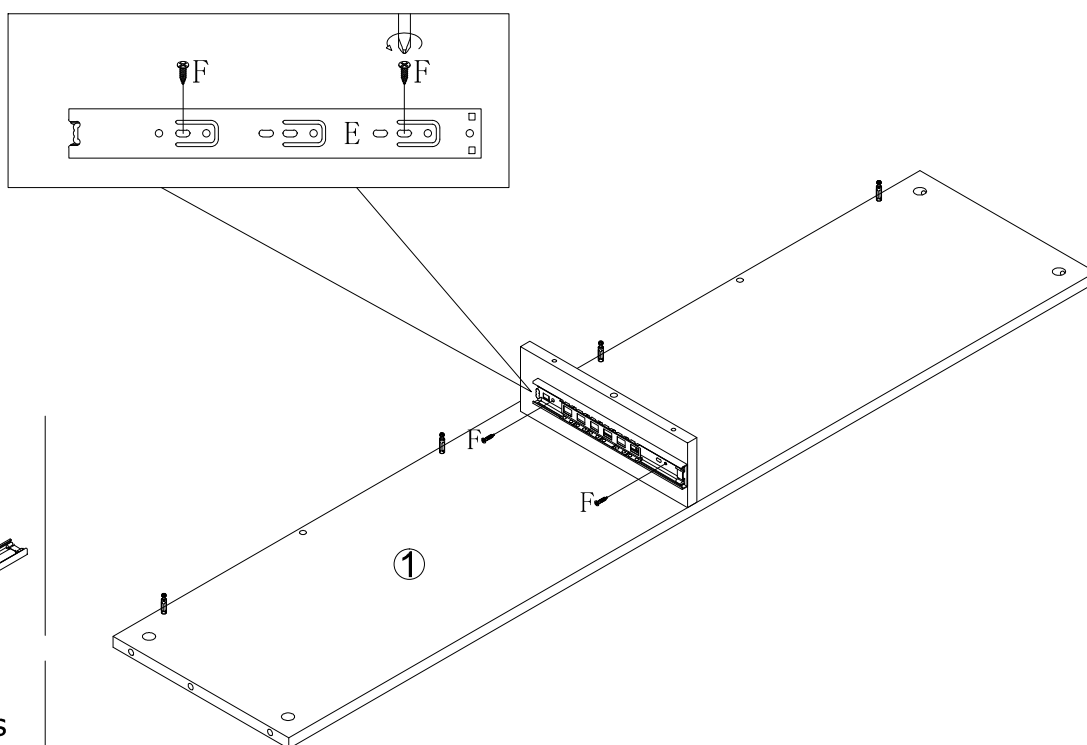

No. E
Quantity: 1 Pc
10"

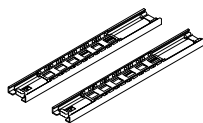


No. F
Quantity: 2 Pcs
M3.5*12mm




STEP 17

No. E
Quantity: 1 Pc
10"


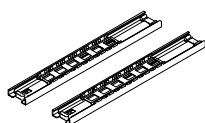


No. F
Quantity: 2 Pcs
M3.5*12mm

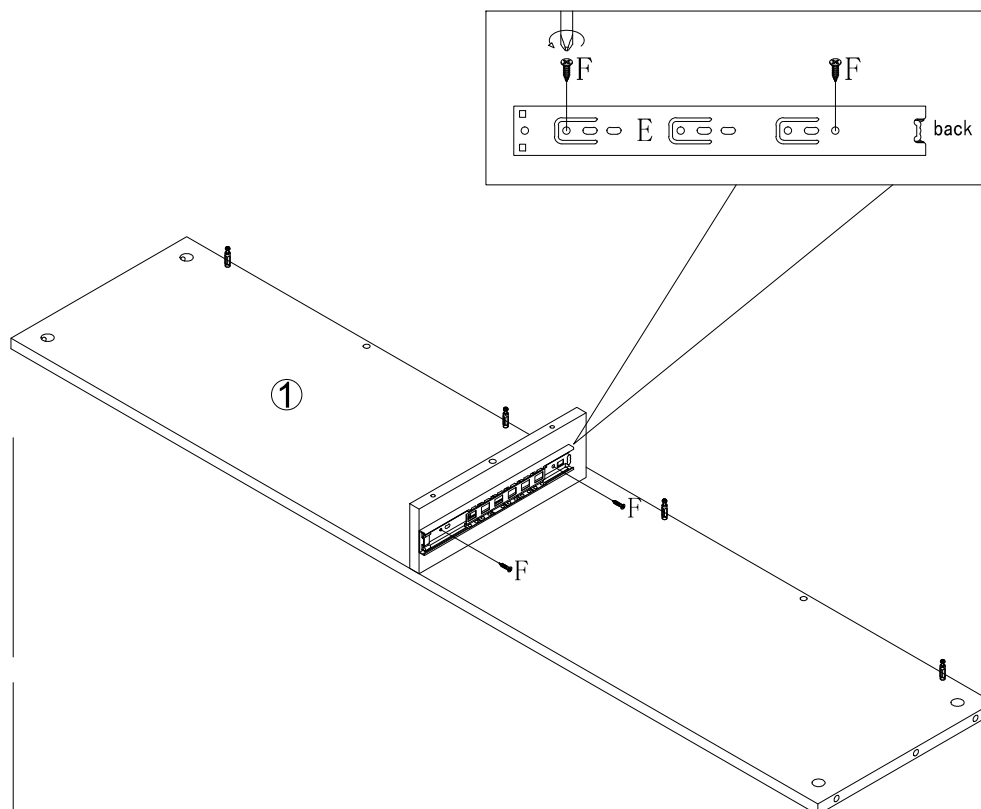

STEP 18

No. D
Quantity: 2 Pcs
8*30mm

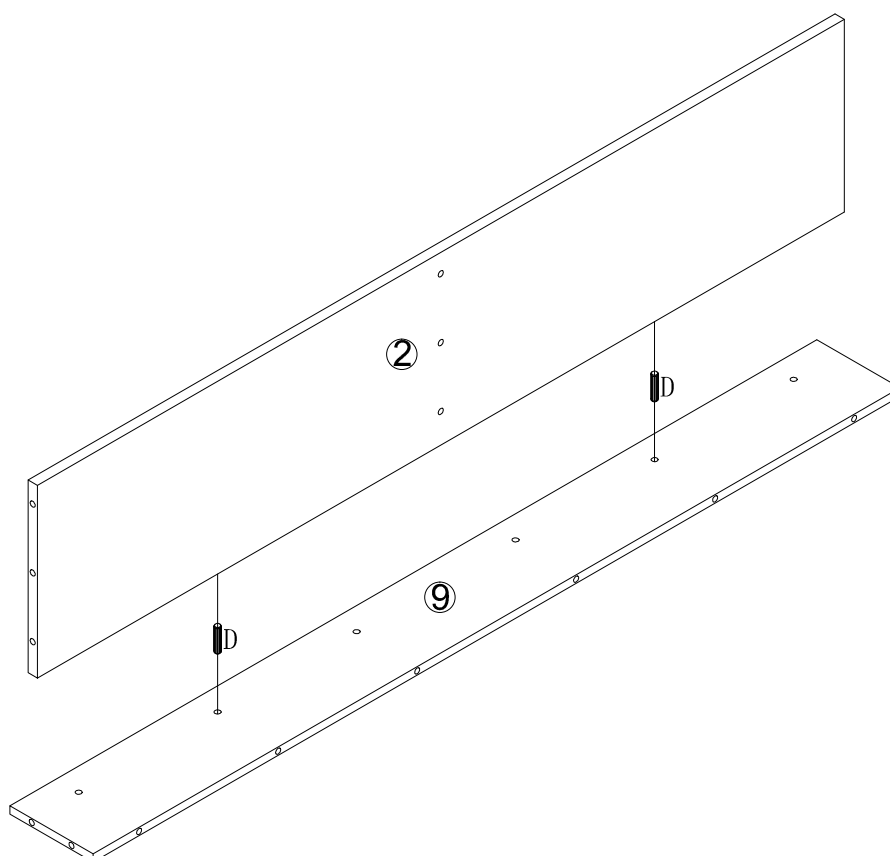

STEP 19



No. B
Quantity: 4 Pcs
Ø15



No. C
Quantity: 4 Pcs
Ø20



No. D
Quantity: 3 Pcs
8*30mm

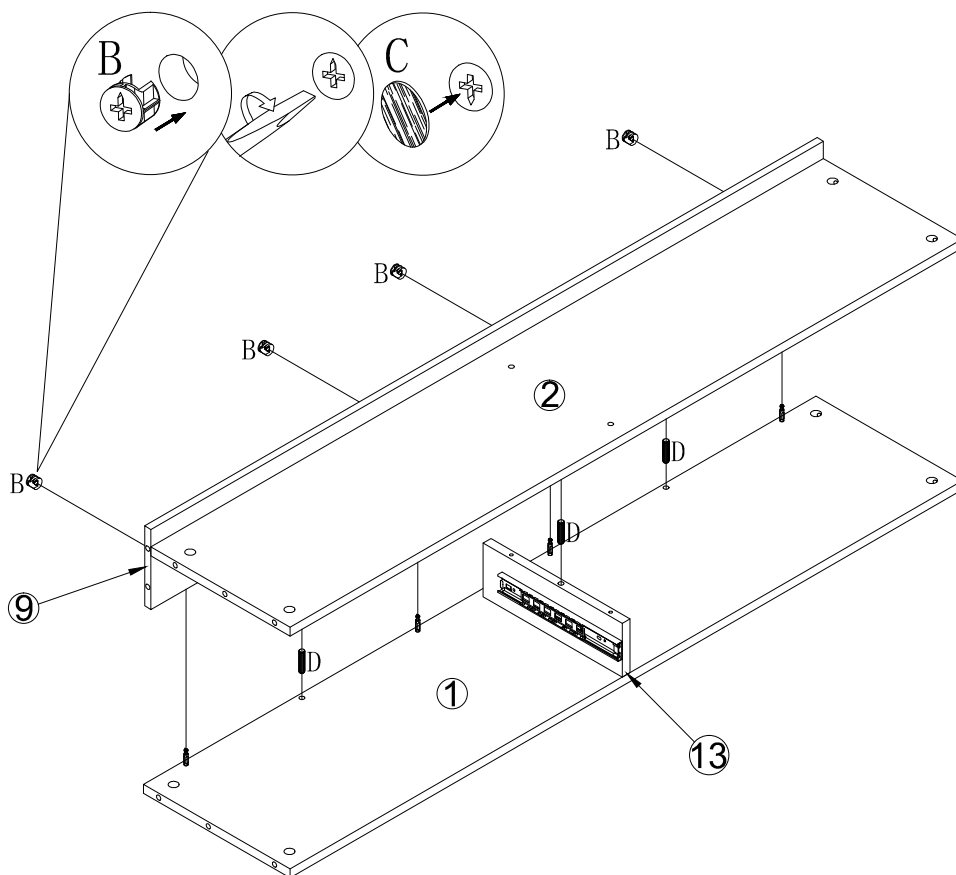



STEP 20

No. H
Quantity: 6 Pcs
M6*40mm



No. J
Quantity: 1 Pc
4#

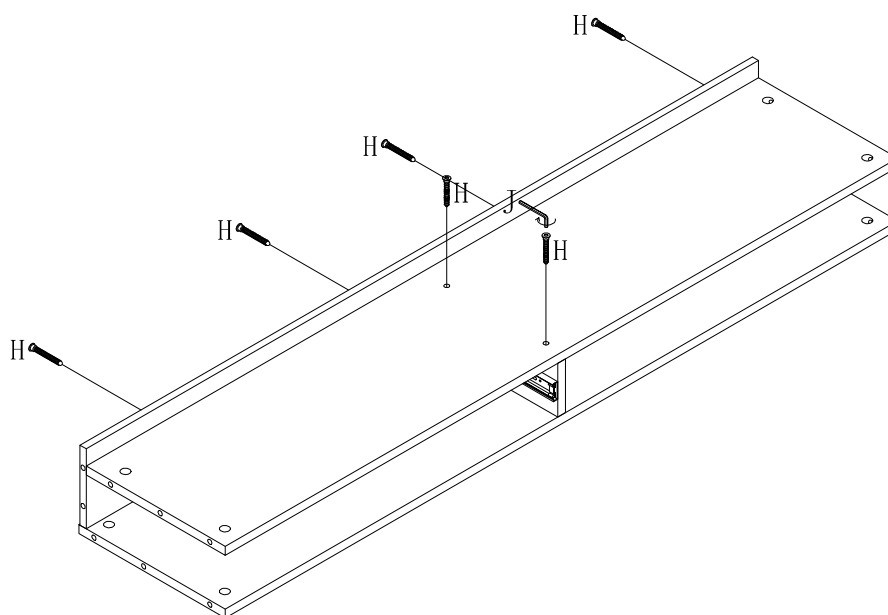

STEP 21



No. B
Quantity: 4 Pcs
Ø15



No. C
Quantity: 4 Pcs
Ø20



No. D
Quantity: 2 Pcs
8*30mm

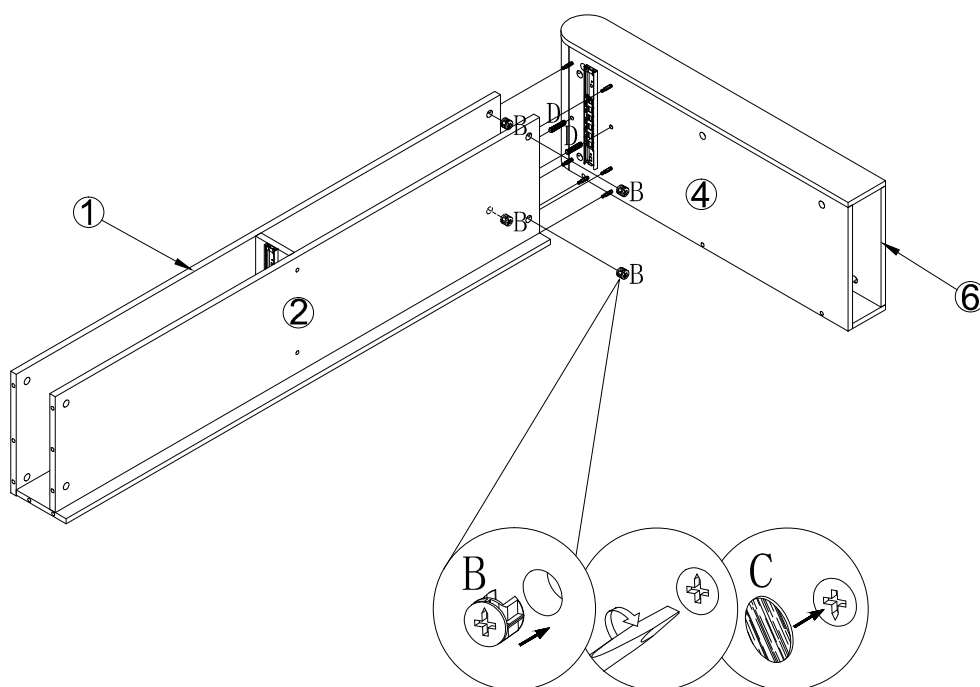

STEP 22



No. B
Quantity: 4 Pcs
Ø15




No. C
Quantity: 4 Pcs
Ø20



No. D
Quantity: 2 Pcs
8*30mm

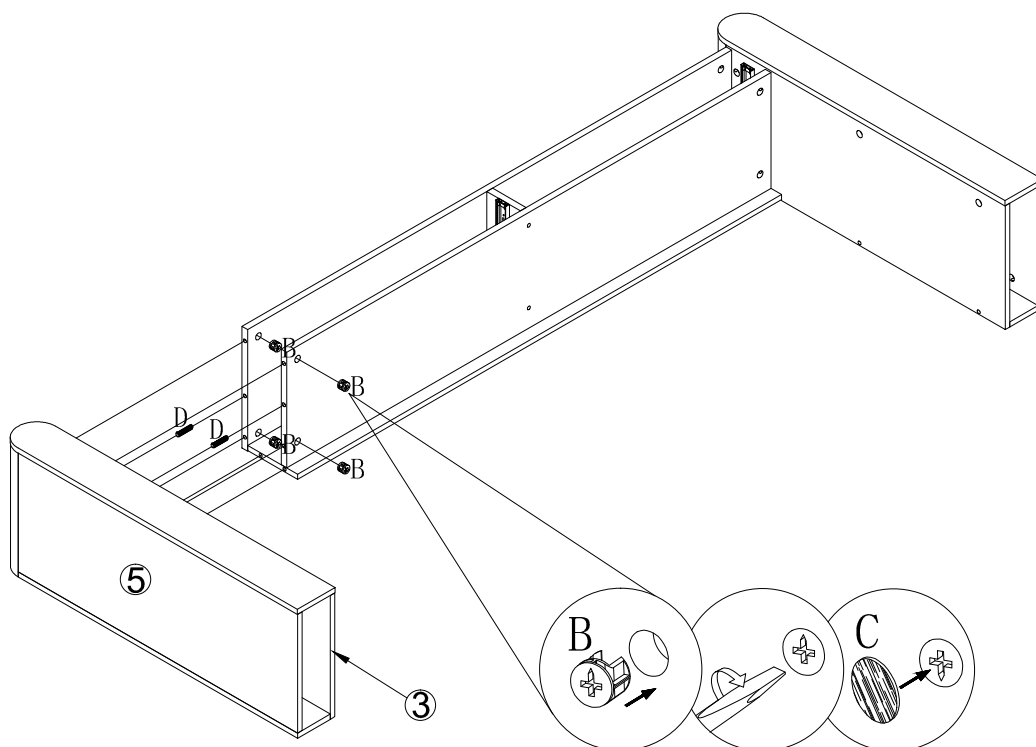


STEP 23

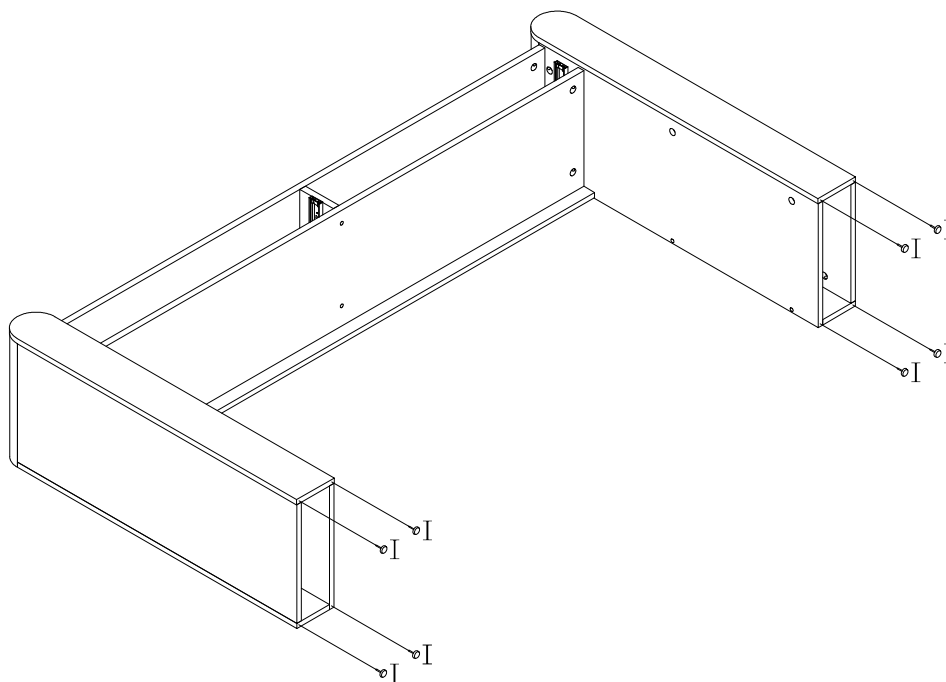

No. I
Quantity: 8 Pcs
Ø12



STEP 24

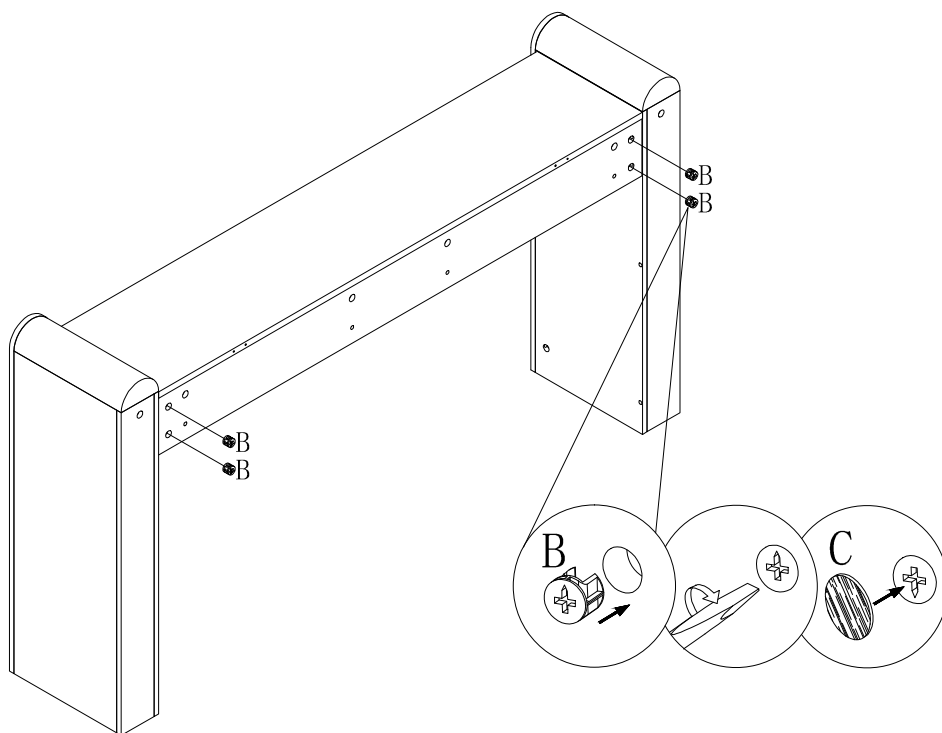


No. B
Quantity: 4 Pcs
Ø15



No. C
Quantity: 4 Pcs
Ø20




STEP 25

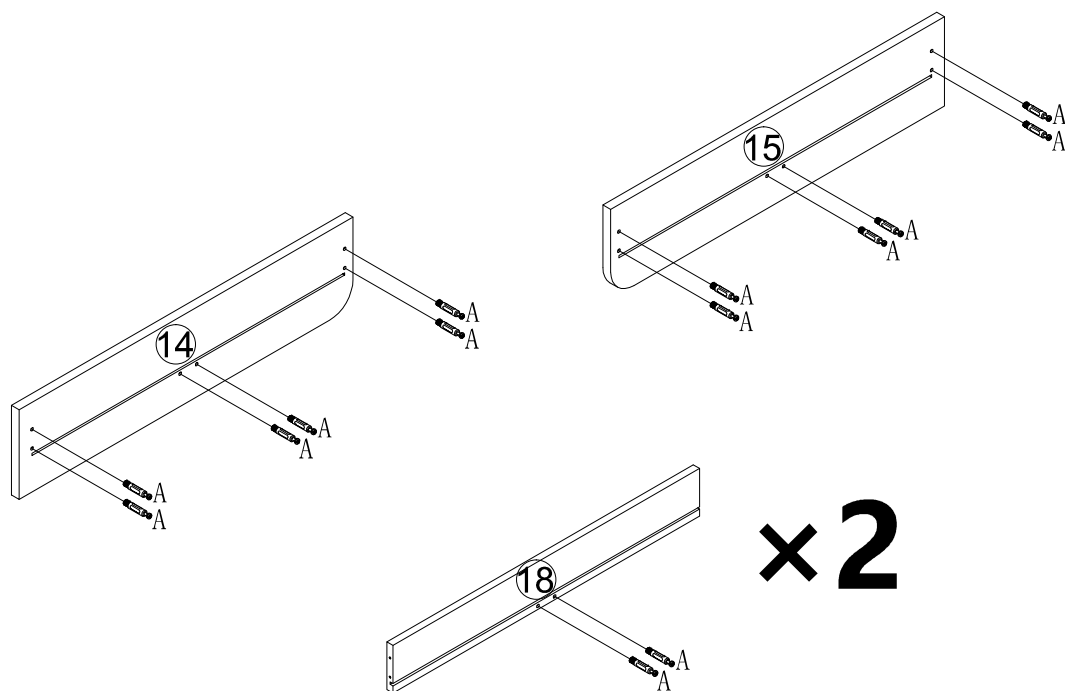

No. A
Quantity: 16 Pcs
8*28 mm



STEP 26

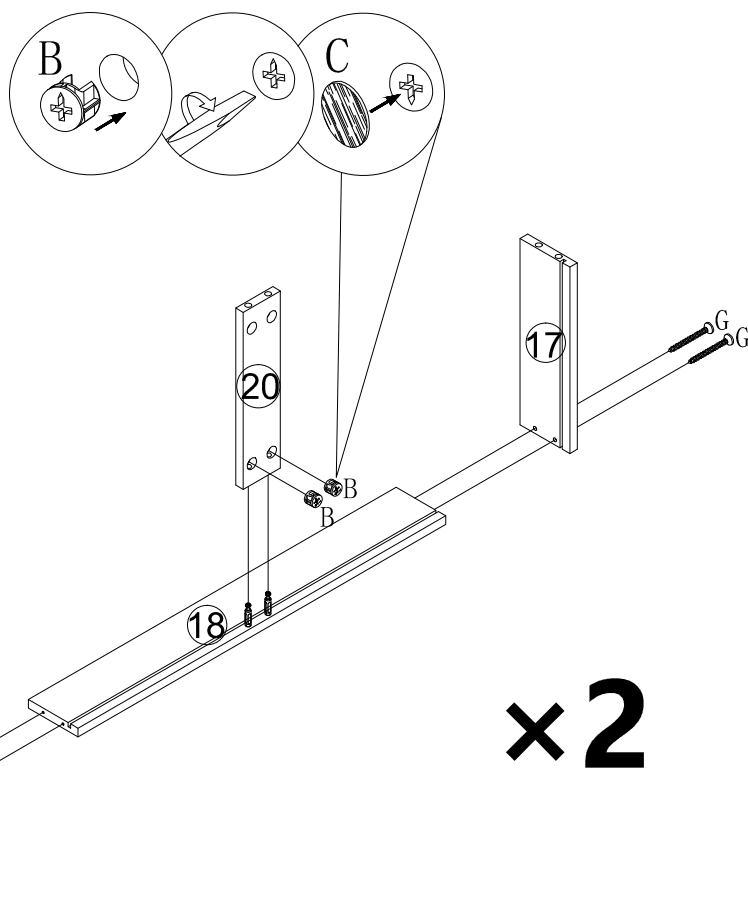


No. B
Quantity: 4 Pcs
Ø15




No. C
Quantity: 4 Pcs
Ø20



No. G
Quantity: 8 Pcs
M4*30mm





STEP 27

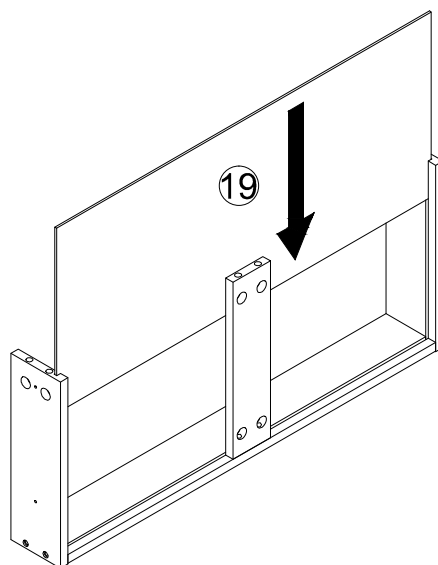

×2


STEP 28

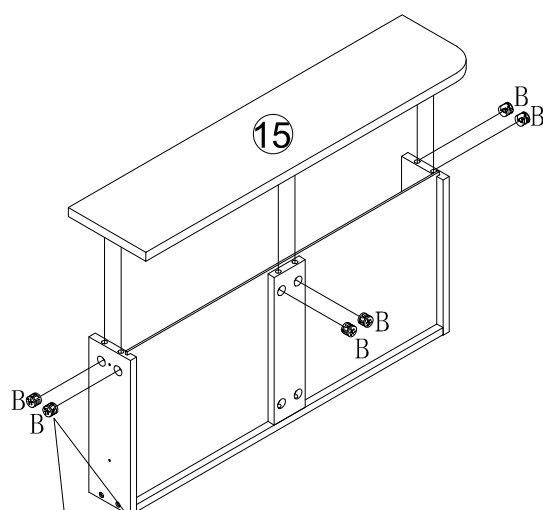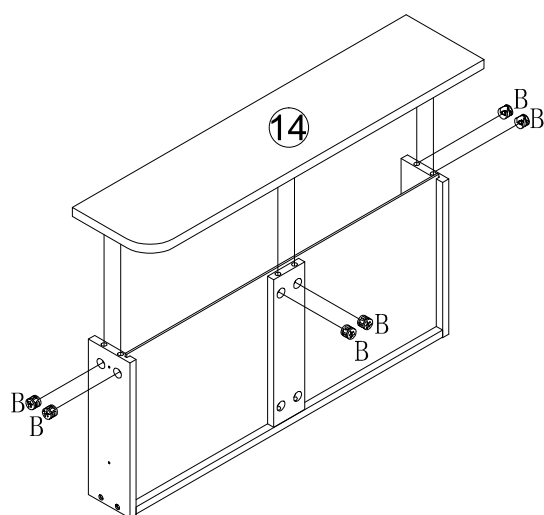


No. B
Quantity: 12 Pcs
Ø15




No. C
Quantity: 12 Pcs
Ø20

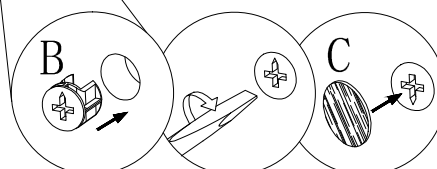

STEP 29

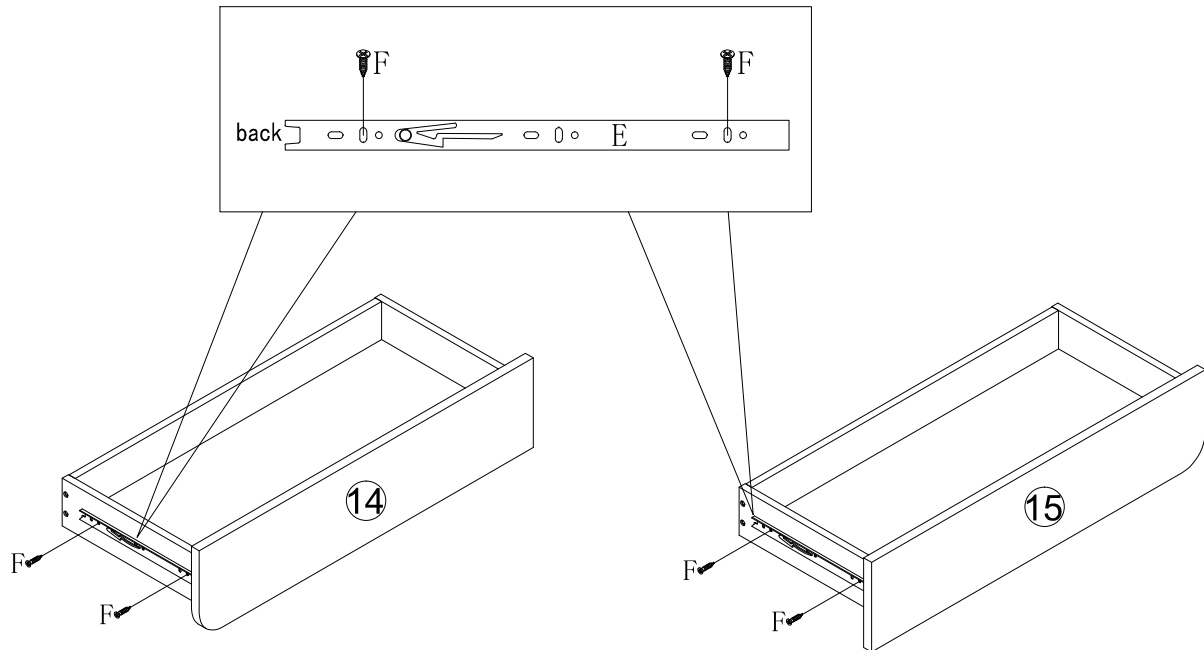


No. E
Quantity: 2 Sets
10"



No. F
Quantity: 8 Pcs
M3.5*12mm



STEP 30

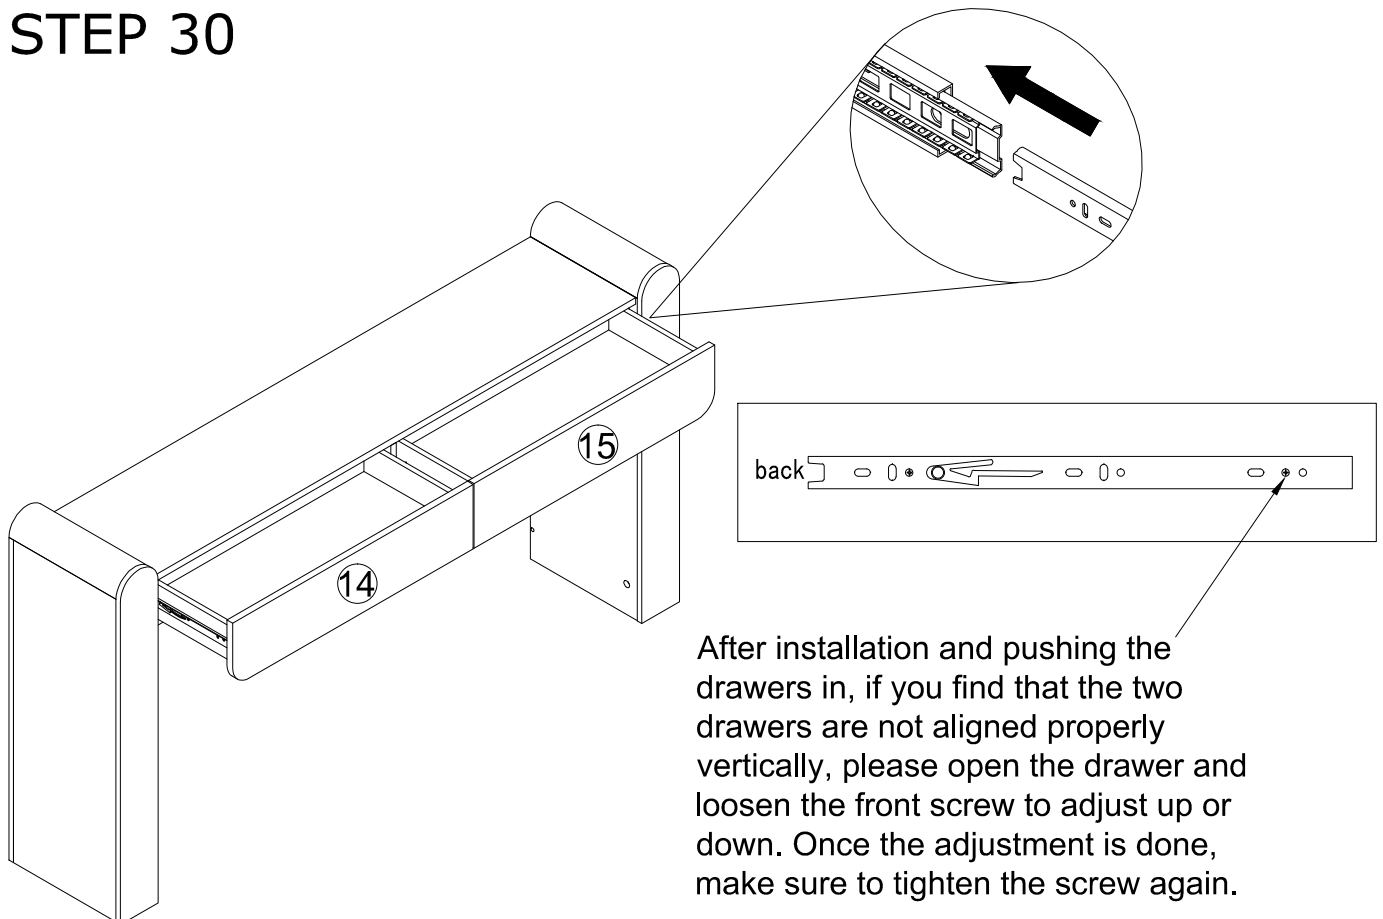


STEP 31






WARNING: ALWAYS LIFT the cabinet when moving it. **NEVER DRAG** it across the floor. Dragging will cause the legs to fail and may lead to serious injury or property damage.

WALL

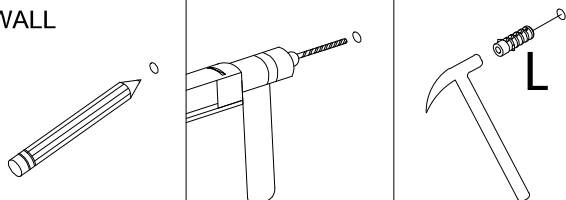


1. The customer must mark the desired mounting positions on the wall, then use their own hammer drill to drill holes into the wall surface.
2. Use a hammer to tap the one plastic expansion anchors into the wall.
3. Insert the corresponding screws into the plastic expansion anchors to complete the installation.

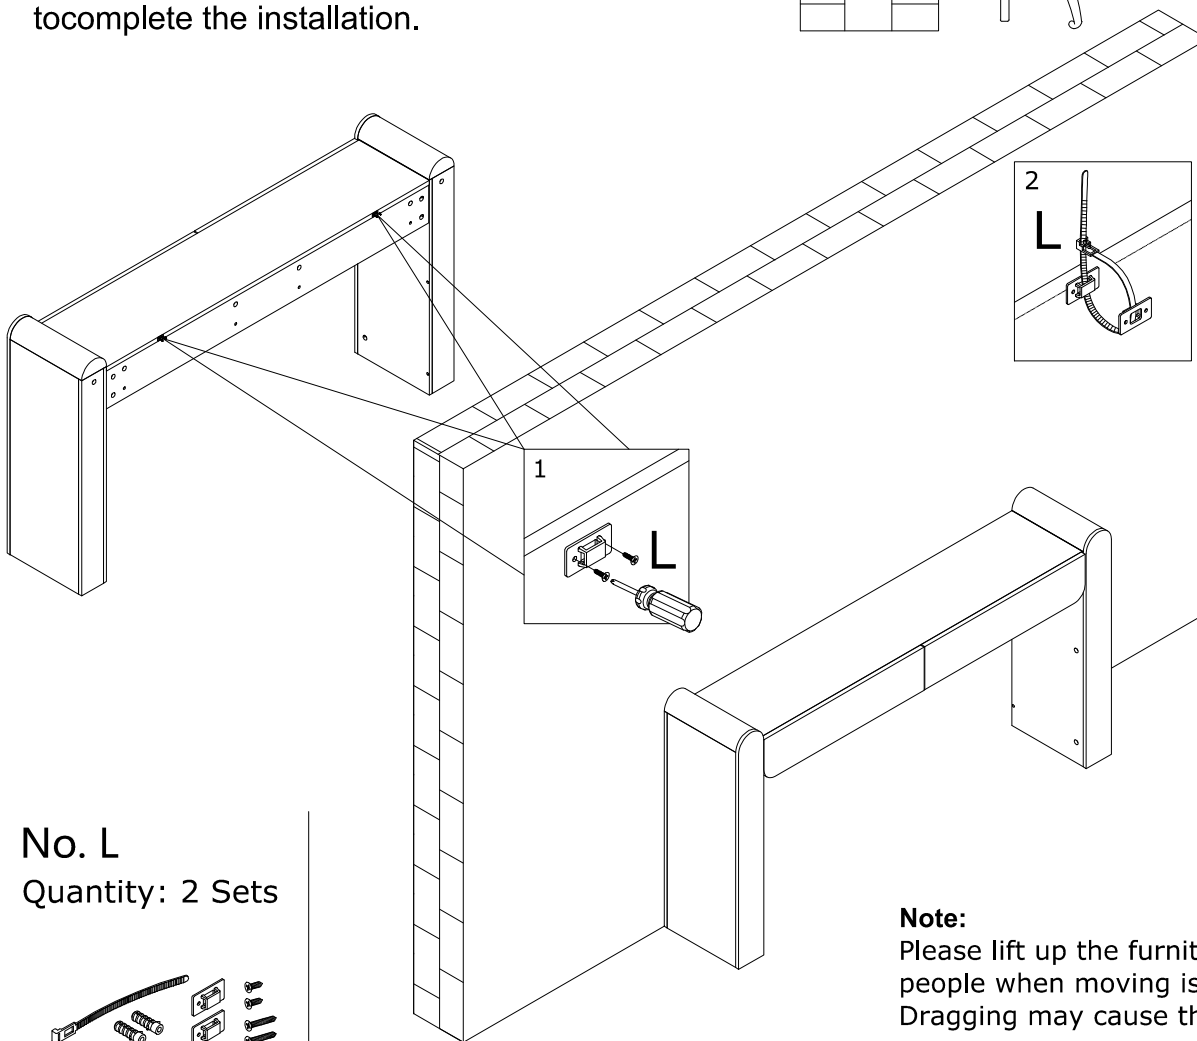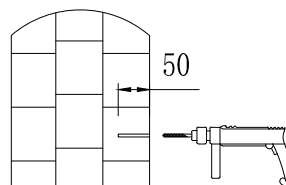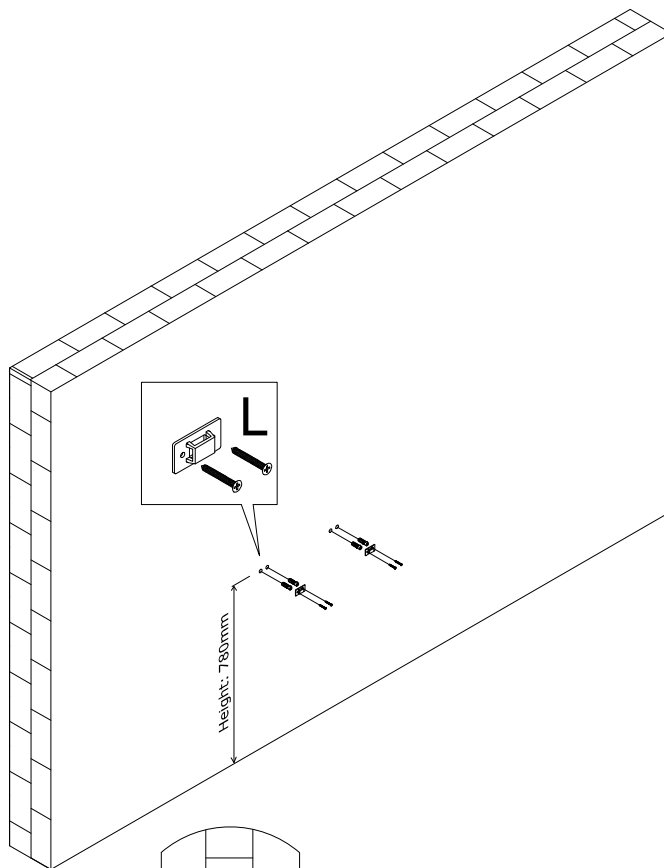

No. L

Quantity: 2 Sets



Note:

Please lift up the furniture by two people when moving is needed. Dragging may cause the legs failure.