




ASSEMBLY INSTRUCTIONS

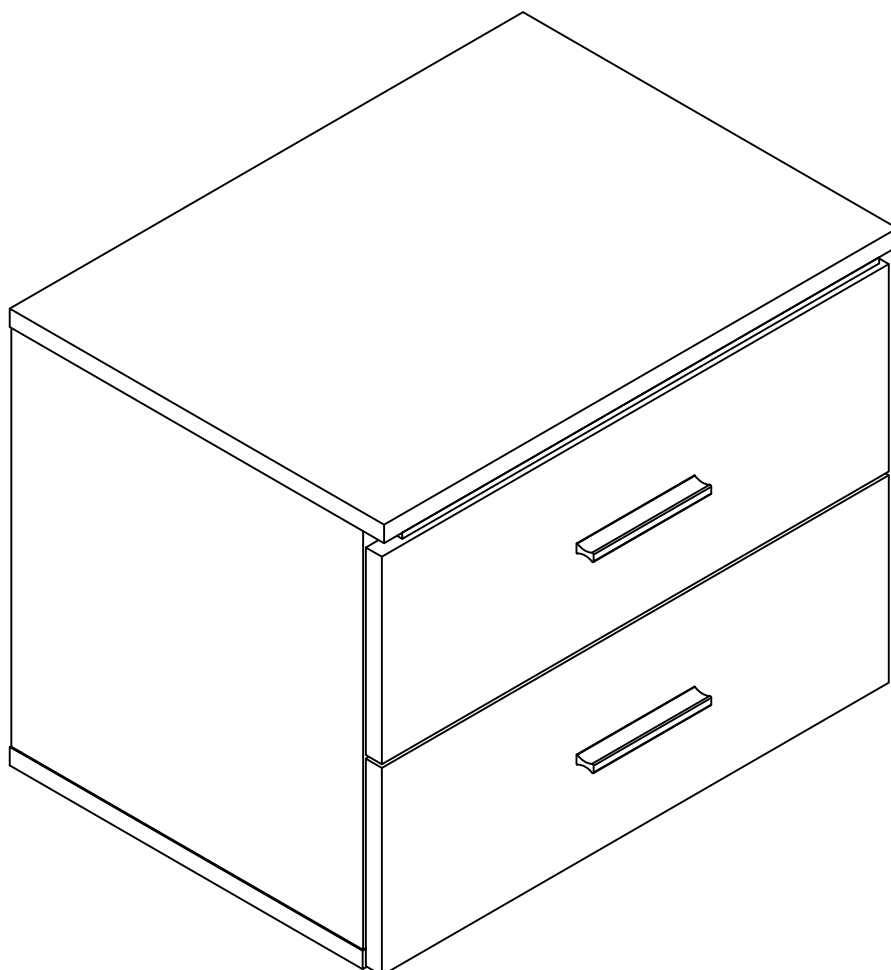


BOARD IDENTIFICATION

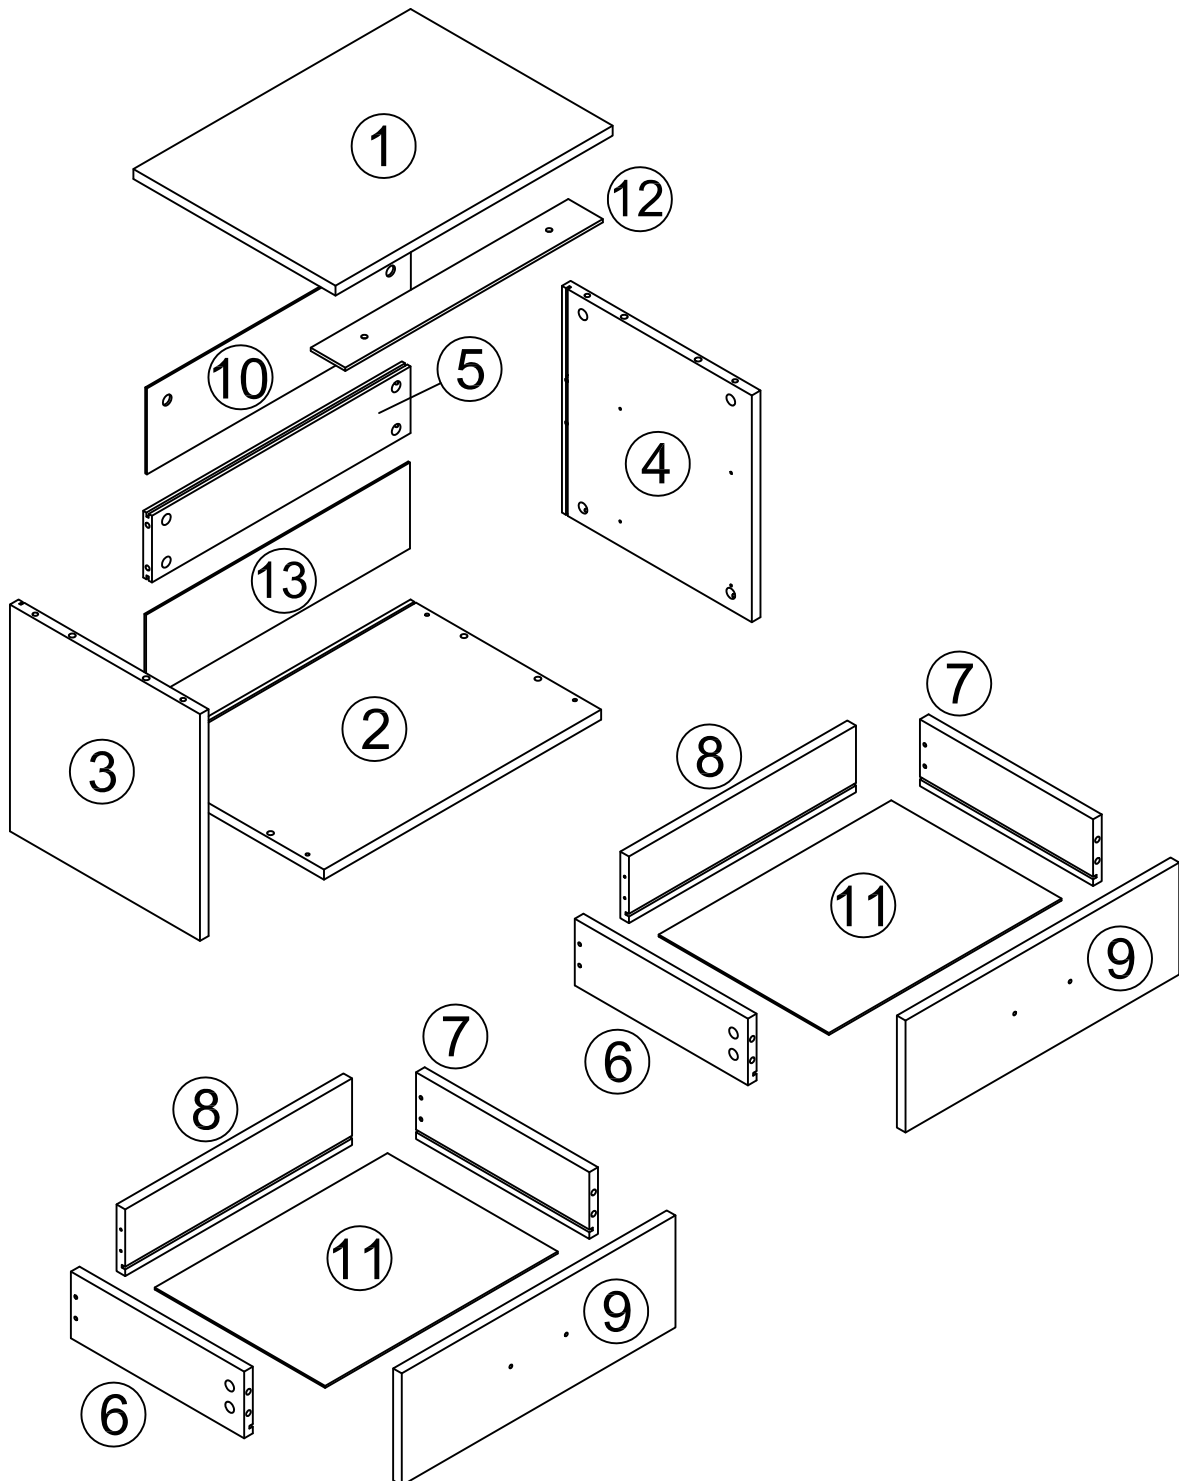


BOARD IDENTIFICATION

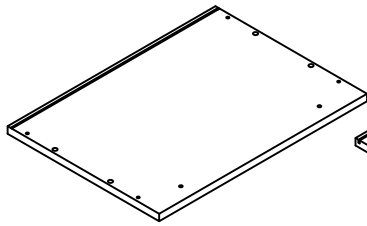


①
MAIN PANEL
X1

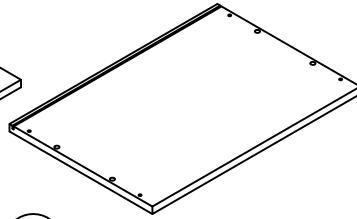


②
BOTTOM
X1

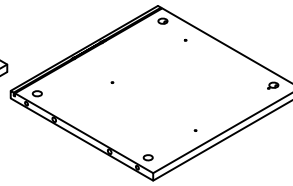


③
LEFT SIDE PANEL
X1

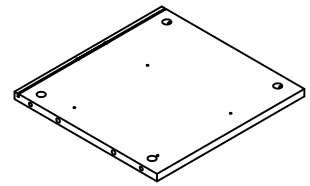


④
RIGHT SIDE PANEL
X1

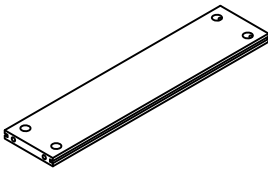


⑤
MIDDLE BACK PANEL
X1

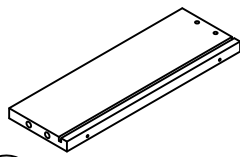


⑥
DRAWER LEFT
X2

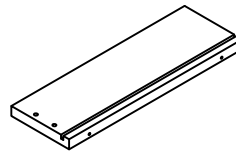


⑦
DRAWER RIGHT
X2

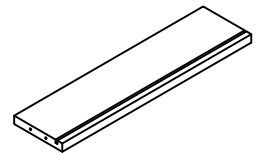


⑧
DRAWER BACK
X2

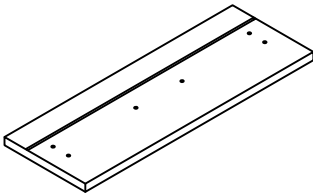


⑨
DRAWER FRONT
X2

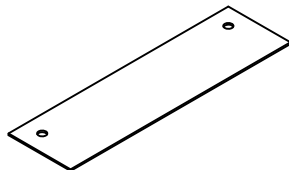


⑩
UPPER BACK PANEL
X1

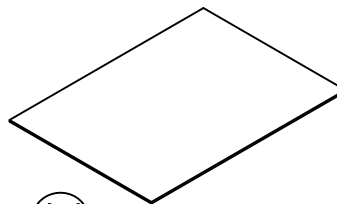

⑪
DRAWER BOTTOM
X2

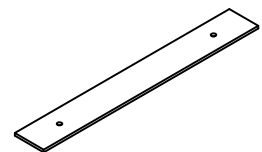


⑫
ACRYLIC SHEETS
X1

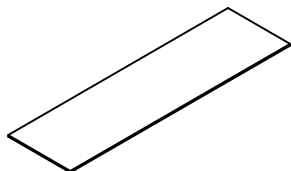


⑬
LOWER BACK PANEL
X1



1

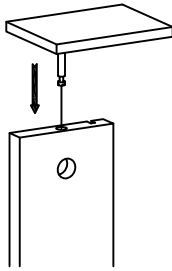


2

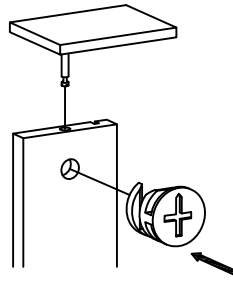


3

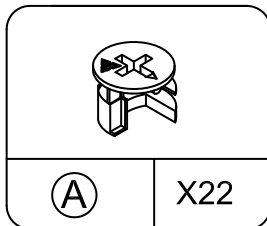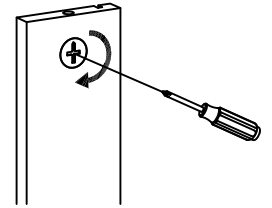


CAM LOCK
F15*11

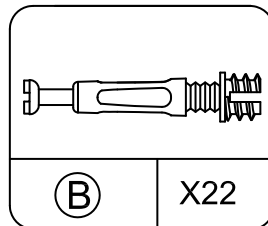


CAM BOLT
F7*31

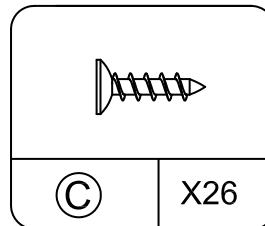


SCREW
F3.5*12

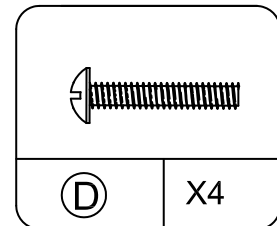


BOLT
F4*18

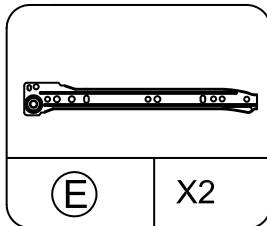


LEFT OUTER TRACK
F20*300

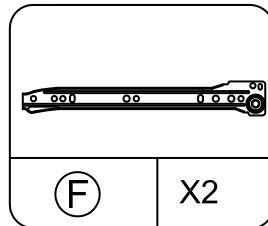


RIGHT OUTER TRACK
F20*300

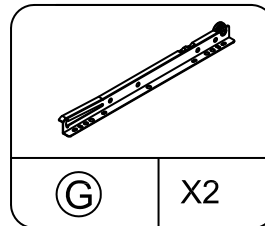


LEFT INNER TRACK
F20*300

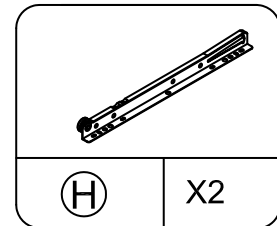


RIGHT INNER TRACK
F20*300

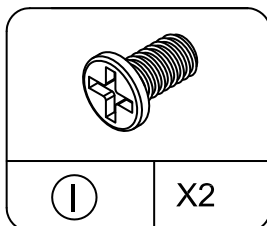


BOLT
F6*10

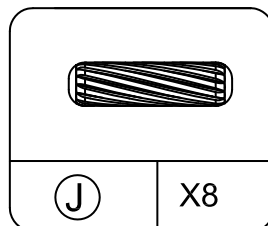


WOOD DOWEL
F8*30

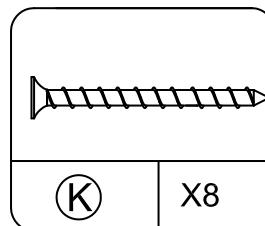


SCREW
F4*35

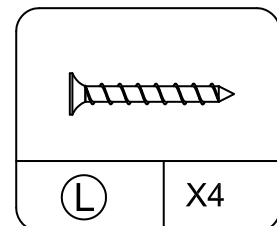


SCREW
F4*25

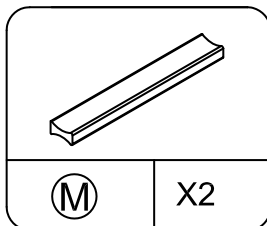

HANDLE

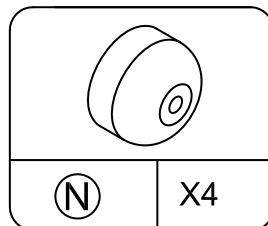



FOOT

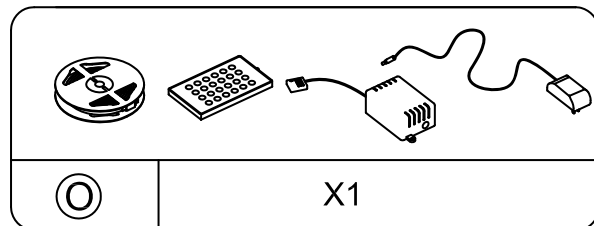

LIGHT STRIP



STEP 1

- Attach panel (12) to (1) with bolts (I).

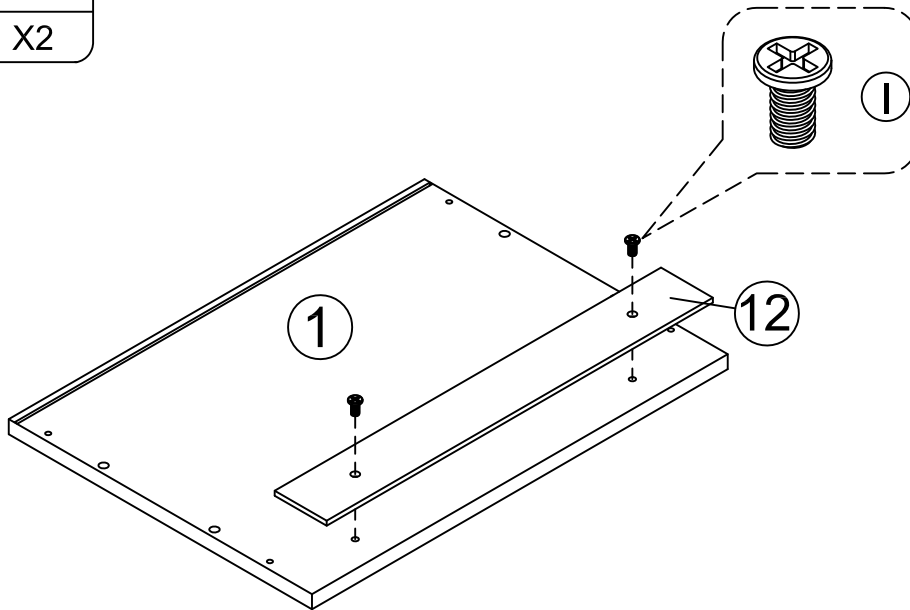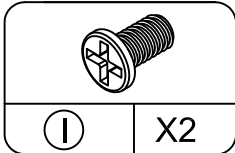


STEP 2

- Screw cam bolts (B) into panel (1) & (2) as below shown.

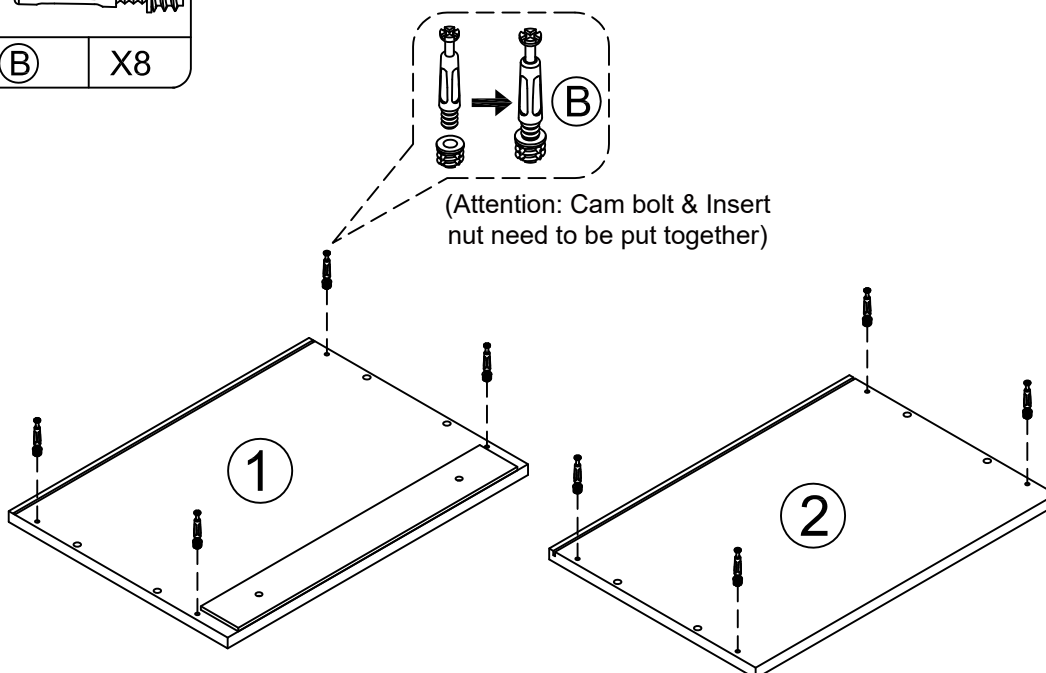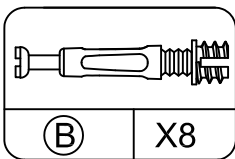


STEP 3

- Screw cam bolts (B) into panel (3) & (4) as below shown.
- Insert wood dowels (J) into panel (3) & (4) as shown in the picture.

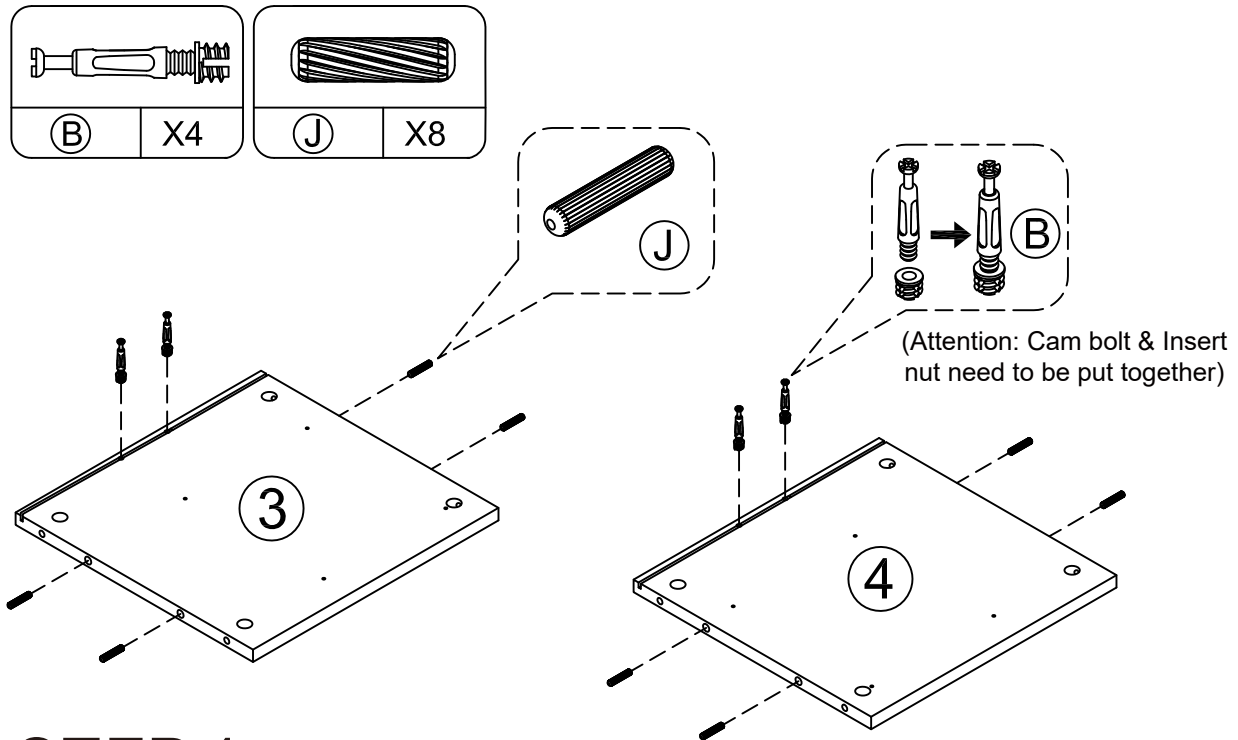



STEP 4

- Attach panel (3) & (4) to (5) with cam locks (A).

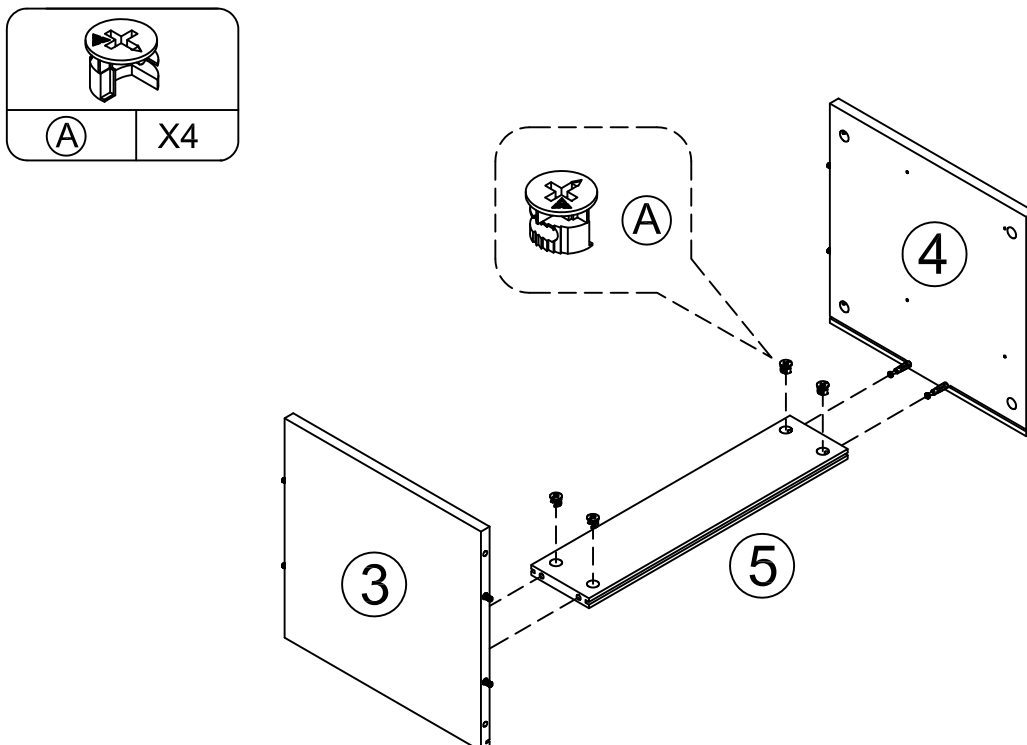




STEP 5

- Insert (13) into the slot as below shown.
- Attach panel (2) to (3) & (4) with cam locks (A).

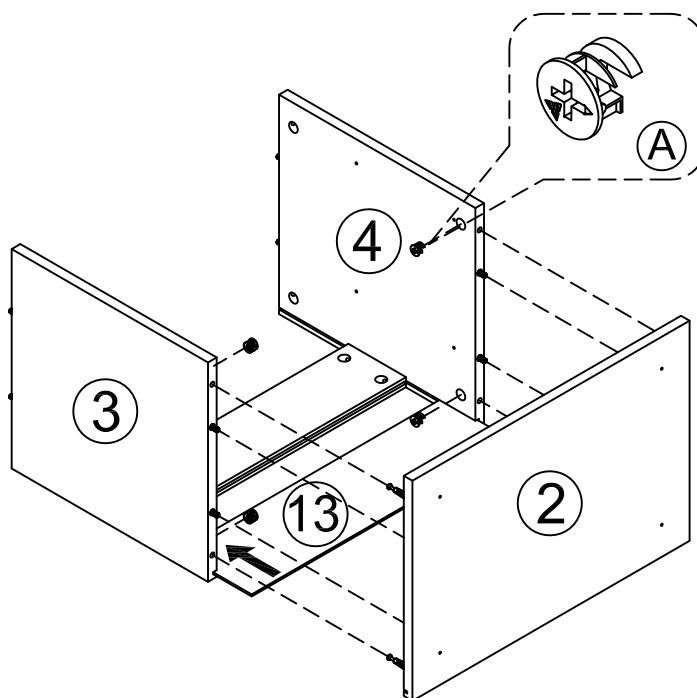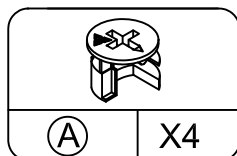






STEP 6

- Attach foot(N) to panel (2) with screw (L).

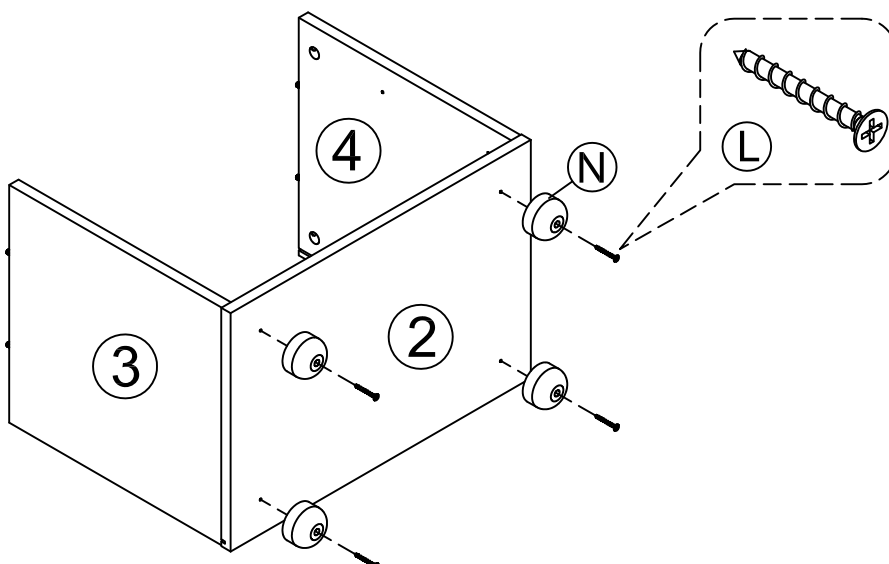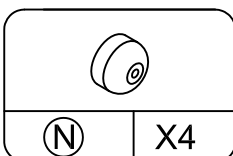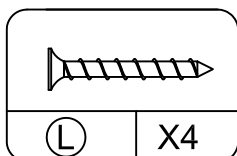



STEP 7

- Install drawer track (E) & (F) to panel (3) & (4) with screws (C).

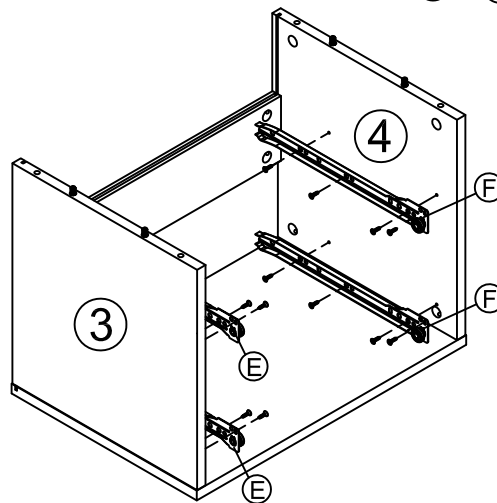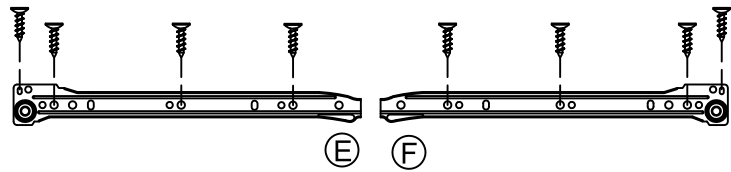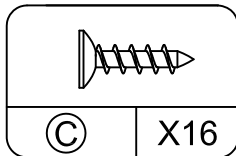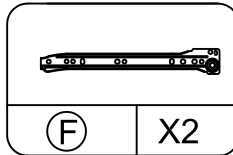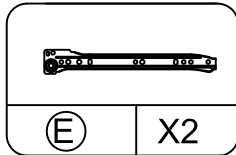



STEP 8

- Stick LED band to the side of the back.

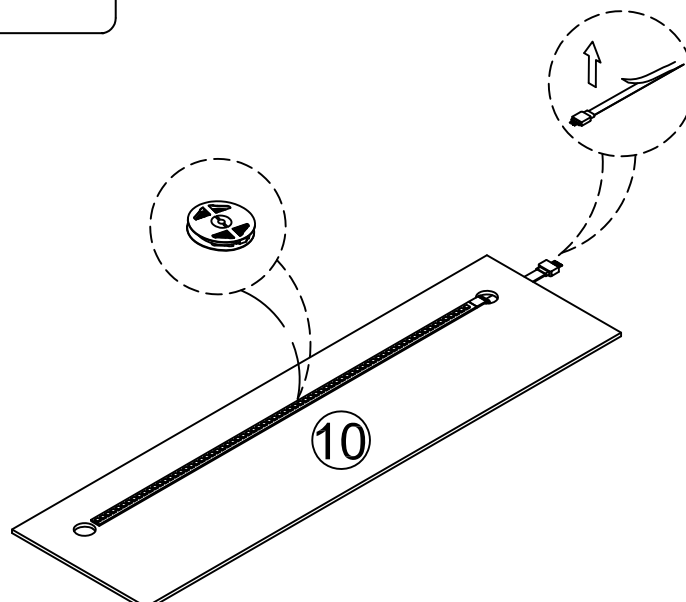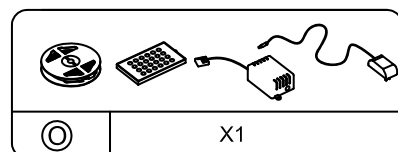



STEP 9

- Insert (10) into the slot as below shown.
- Attach panel (1) to (3) & (4) with cam locks (A).

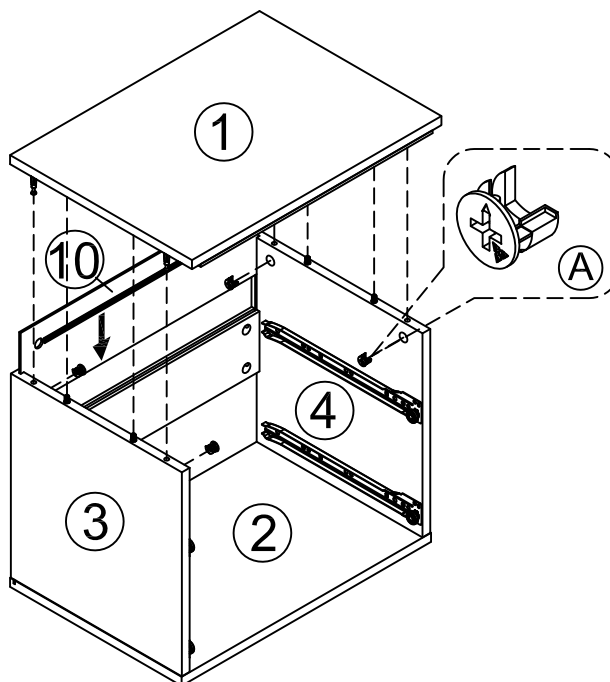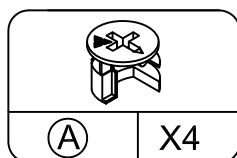



STEP 10

- Screw cam bolts (B) into panel (9) as below shown.

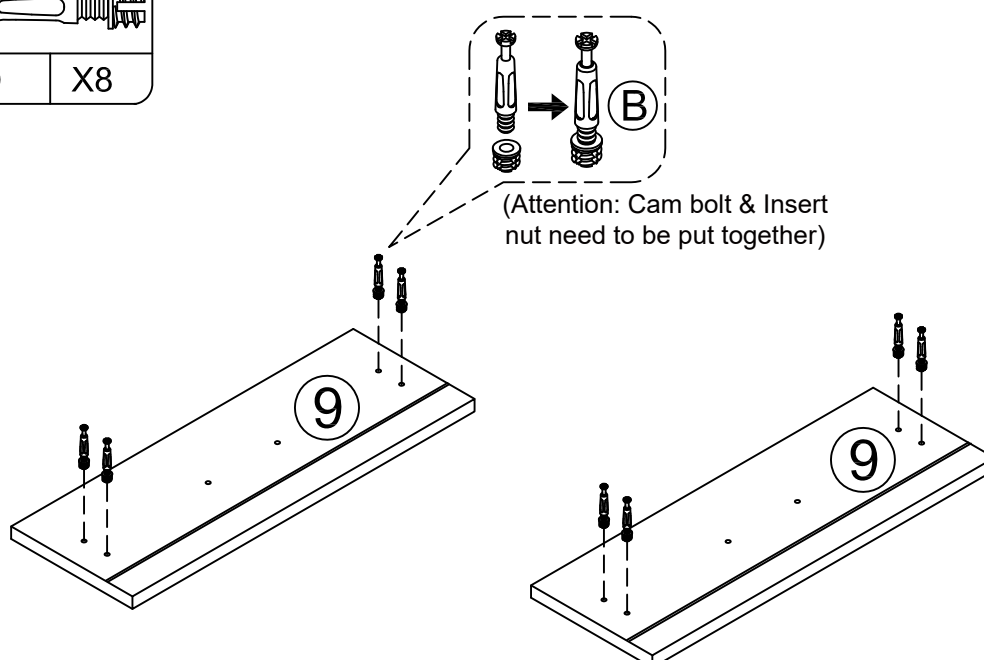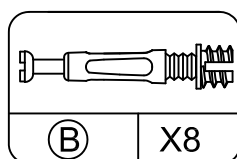



STEP 11

- Attach panel (6) & (7) to panel (8) with screw (K) .

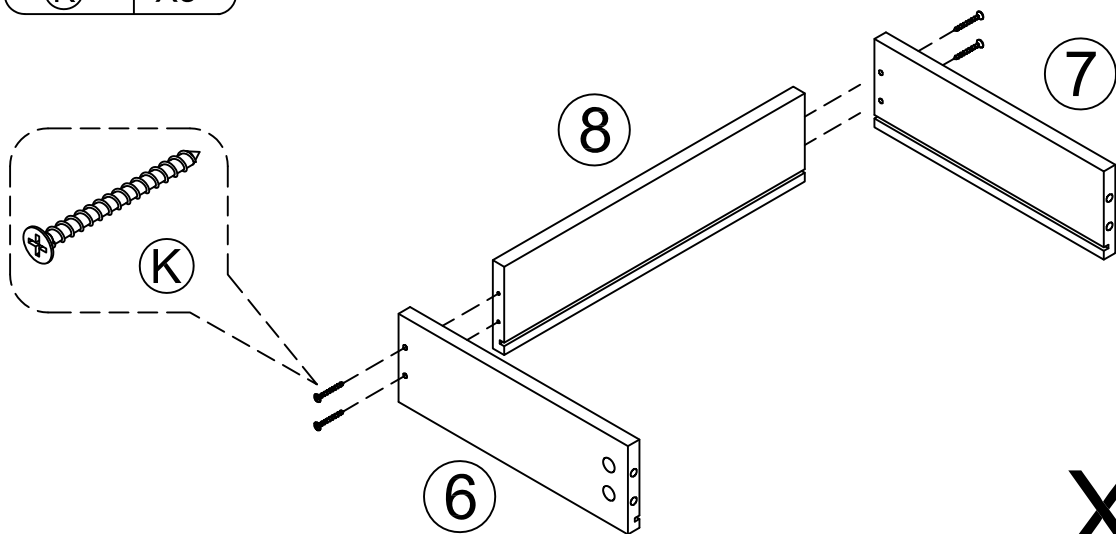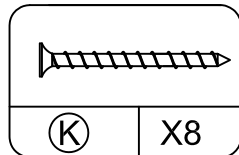






STEP 12

- Insert panel (11) into the grooves.
- Attach panel (9) to (6) & (7) with cam locks (A).

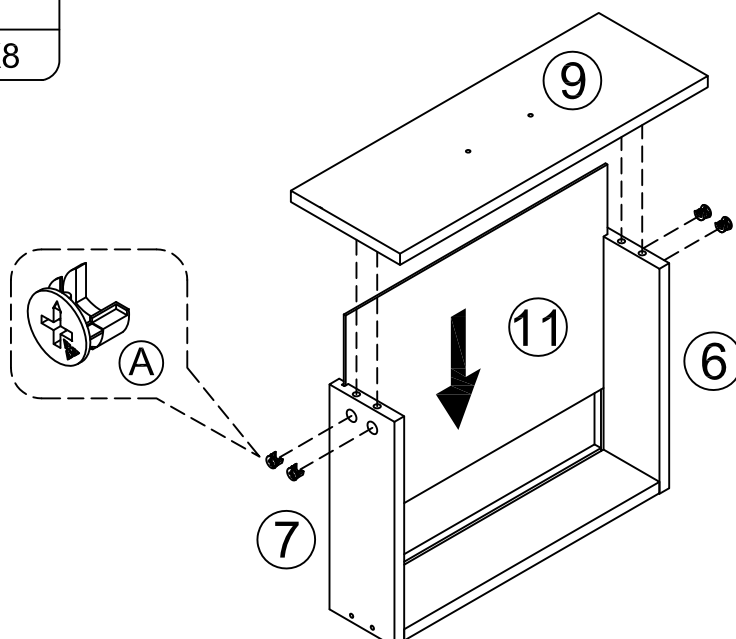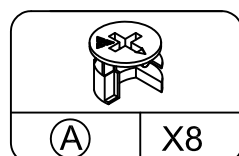




STEP 13

- Install drawer track (G) & (H) to panel (6) & (7) with screws (C).

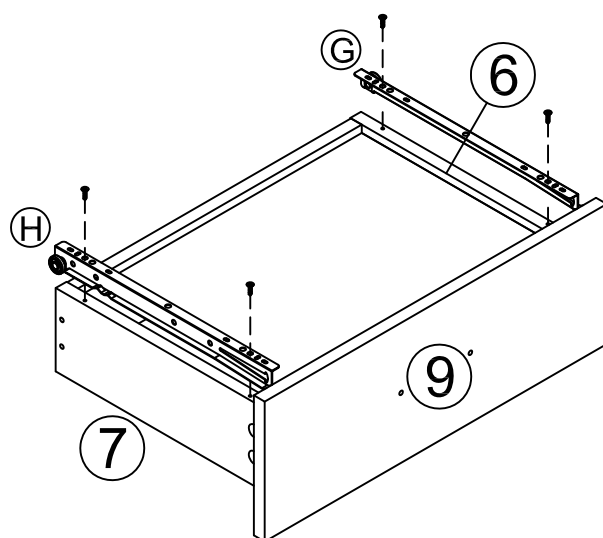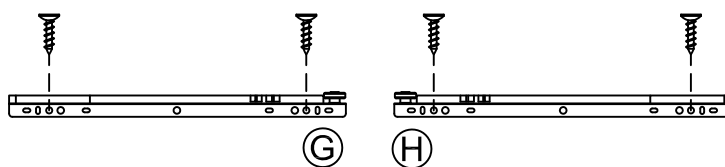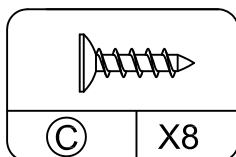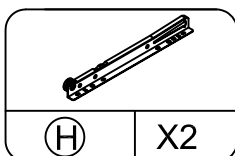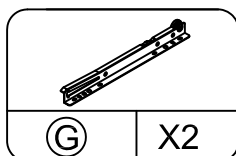


STEP 14

- Install handle (M) to panel (9) with bolts (D).

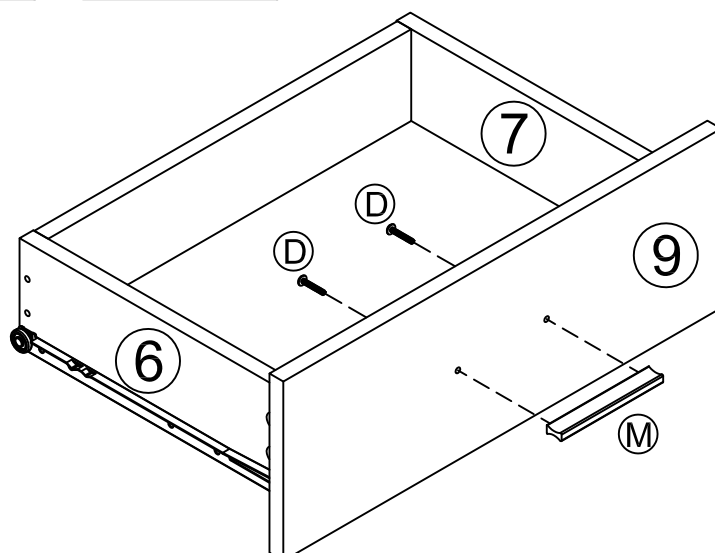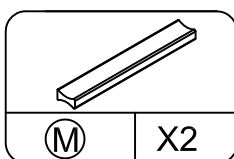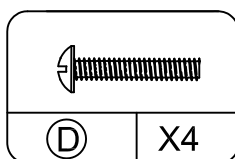



STEP 15

- Insert the drawers.

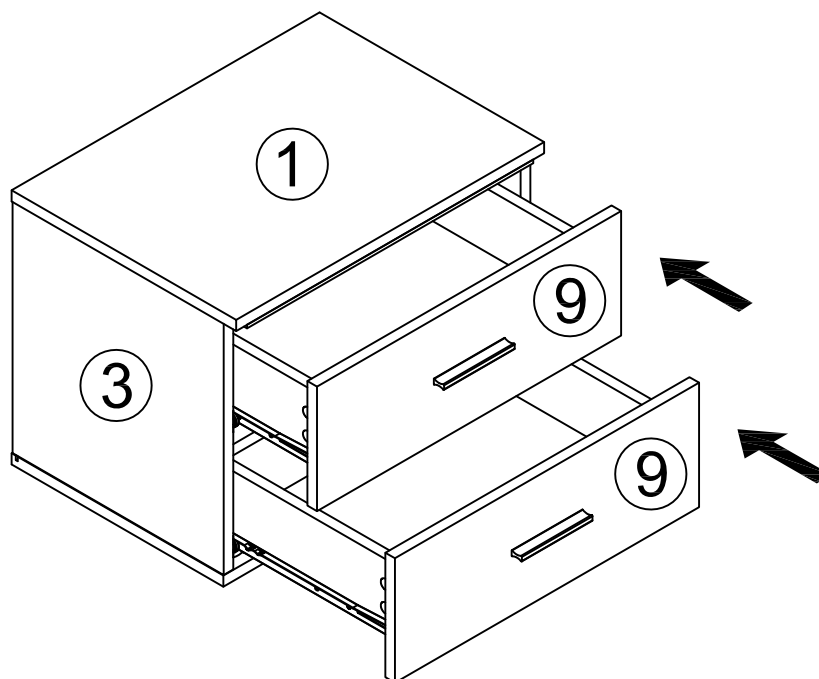

STEP 16

-Connected pin of LED and power adapter to the RGB control box as below.
-Remove the battery protection pad from remote controller.
Align remote controller to the RGB Control box to adjust the color mode.
Specifications of battery:cr2025 3v

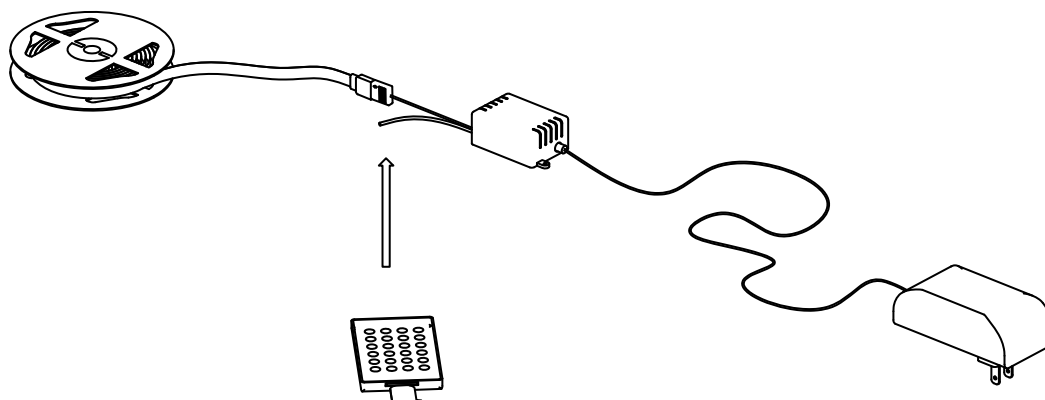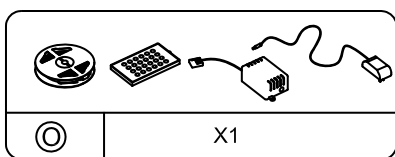

STEP 17

- Installation complete.

