








# Polycarbonate Window Door Awning

## Assembly Instructions


	IMAGE	QTY	PART		IMAGE	QTY	PART
①		3	Board	④		3	Back Fixing Bar
②		3	Frontal Fixing Bar	⑤		8	Setscrew
③		4	Bracket	⑥		4	Bolt(big)
				⑦		4	Bolt(small)

### Step1




Remove the protective film from the board.

### Step2

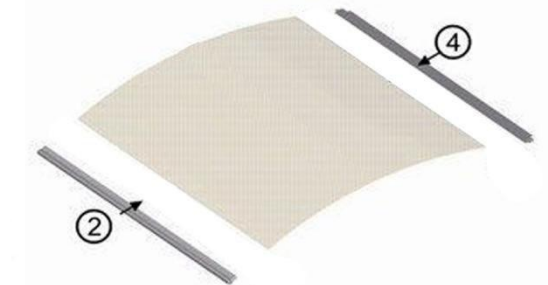


Align the board into the both fixing bars.

### Step3

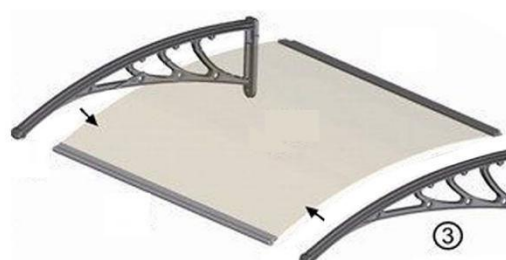

Mount the assemble board on the brackets and connect them with bolt ⑥ and ⑦.  
(It's recommend to place the board vertically when mounting the brackets.)  
Assemble the other two canopies with one bracket in the same steps.

### Step4

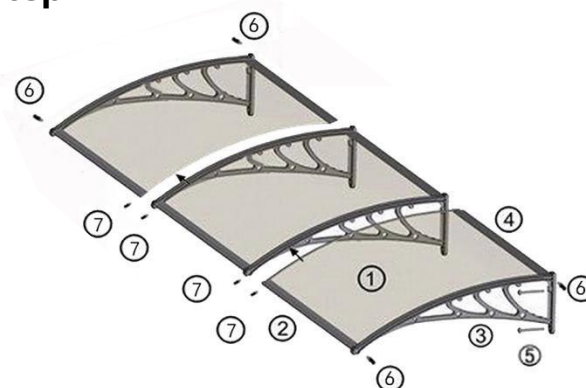

Drill eight holes before installing the canopy. Make sure the holes you drill can exactly match to the holes of the bracket.  
Use setscrew ⑤ to fix the unit onto the desired location.

### NOTE

It's recommended to install this unit with a minimum of 2 person.  
Make sure that the desired location won't cause any possible injuries.  
Regularly check all the fittings and connections. Tighten them up if loose.

Thank You For Purchasing From  
VIVOHOME

✉ [support@vivohome.com](mailto:support@vivohome.com)  
[www.vivohome.com](http://www.vivohome.com)  
MADE IN CHINA