
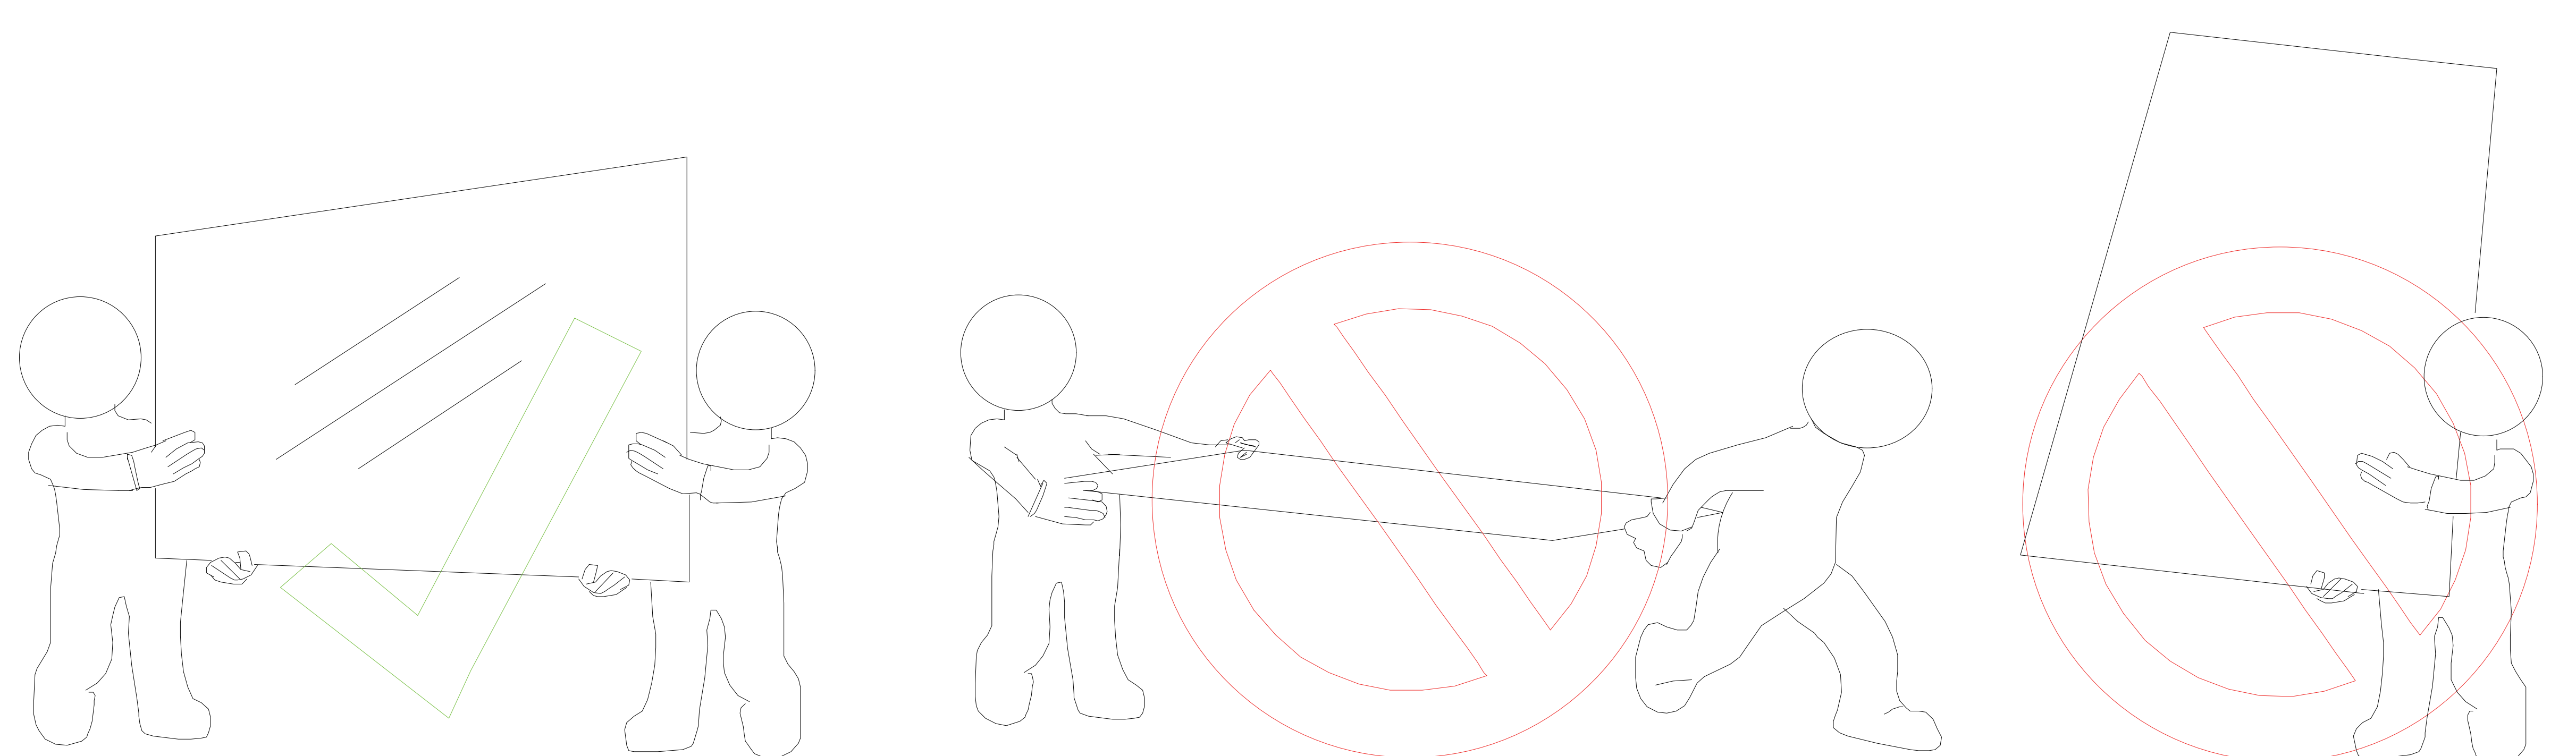
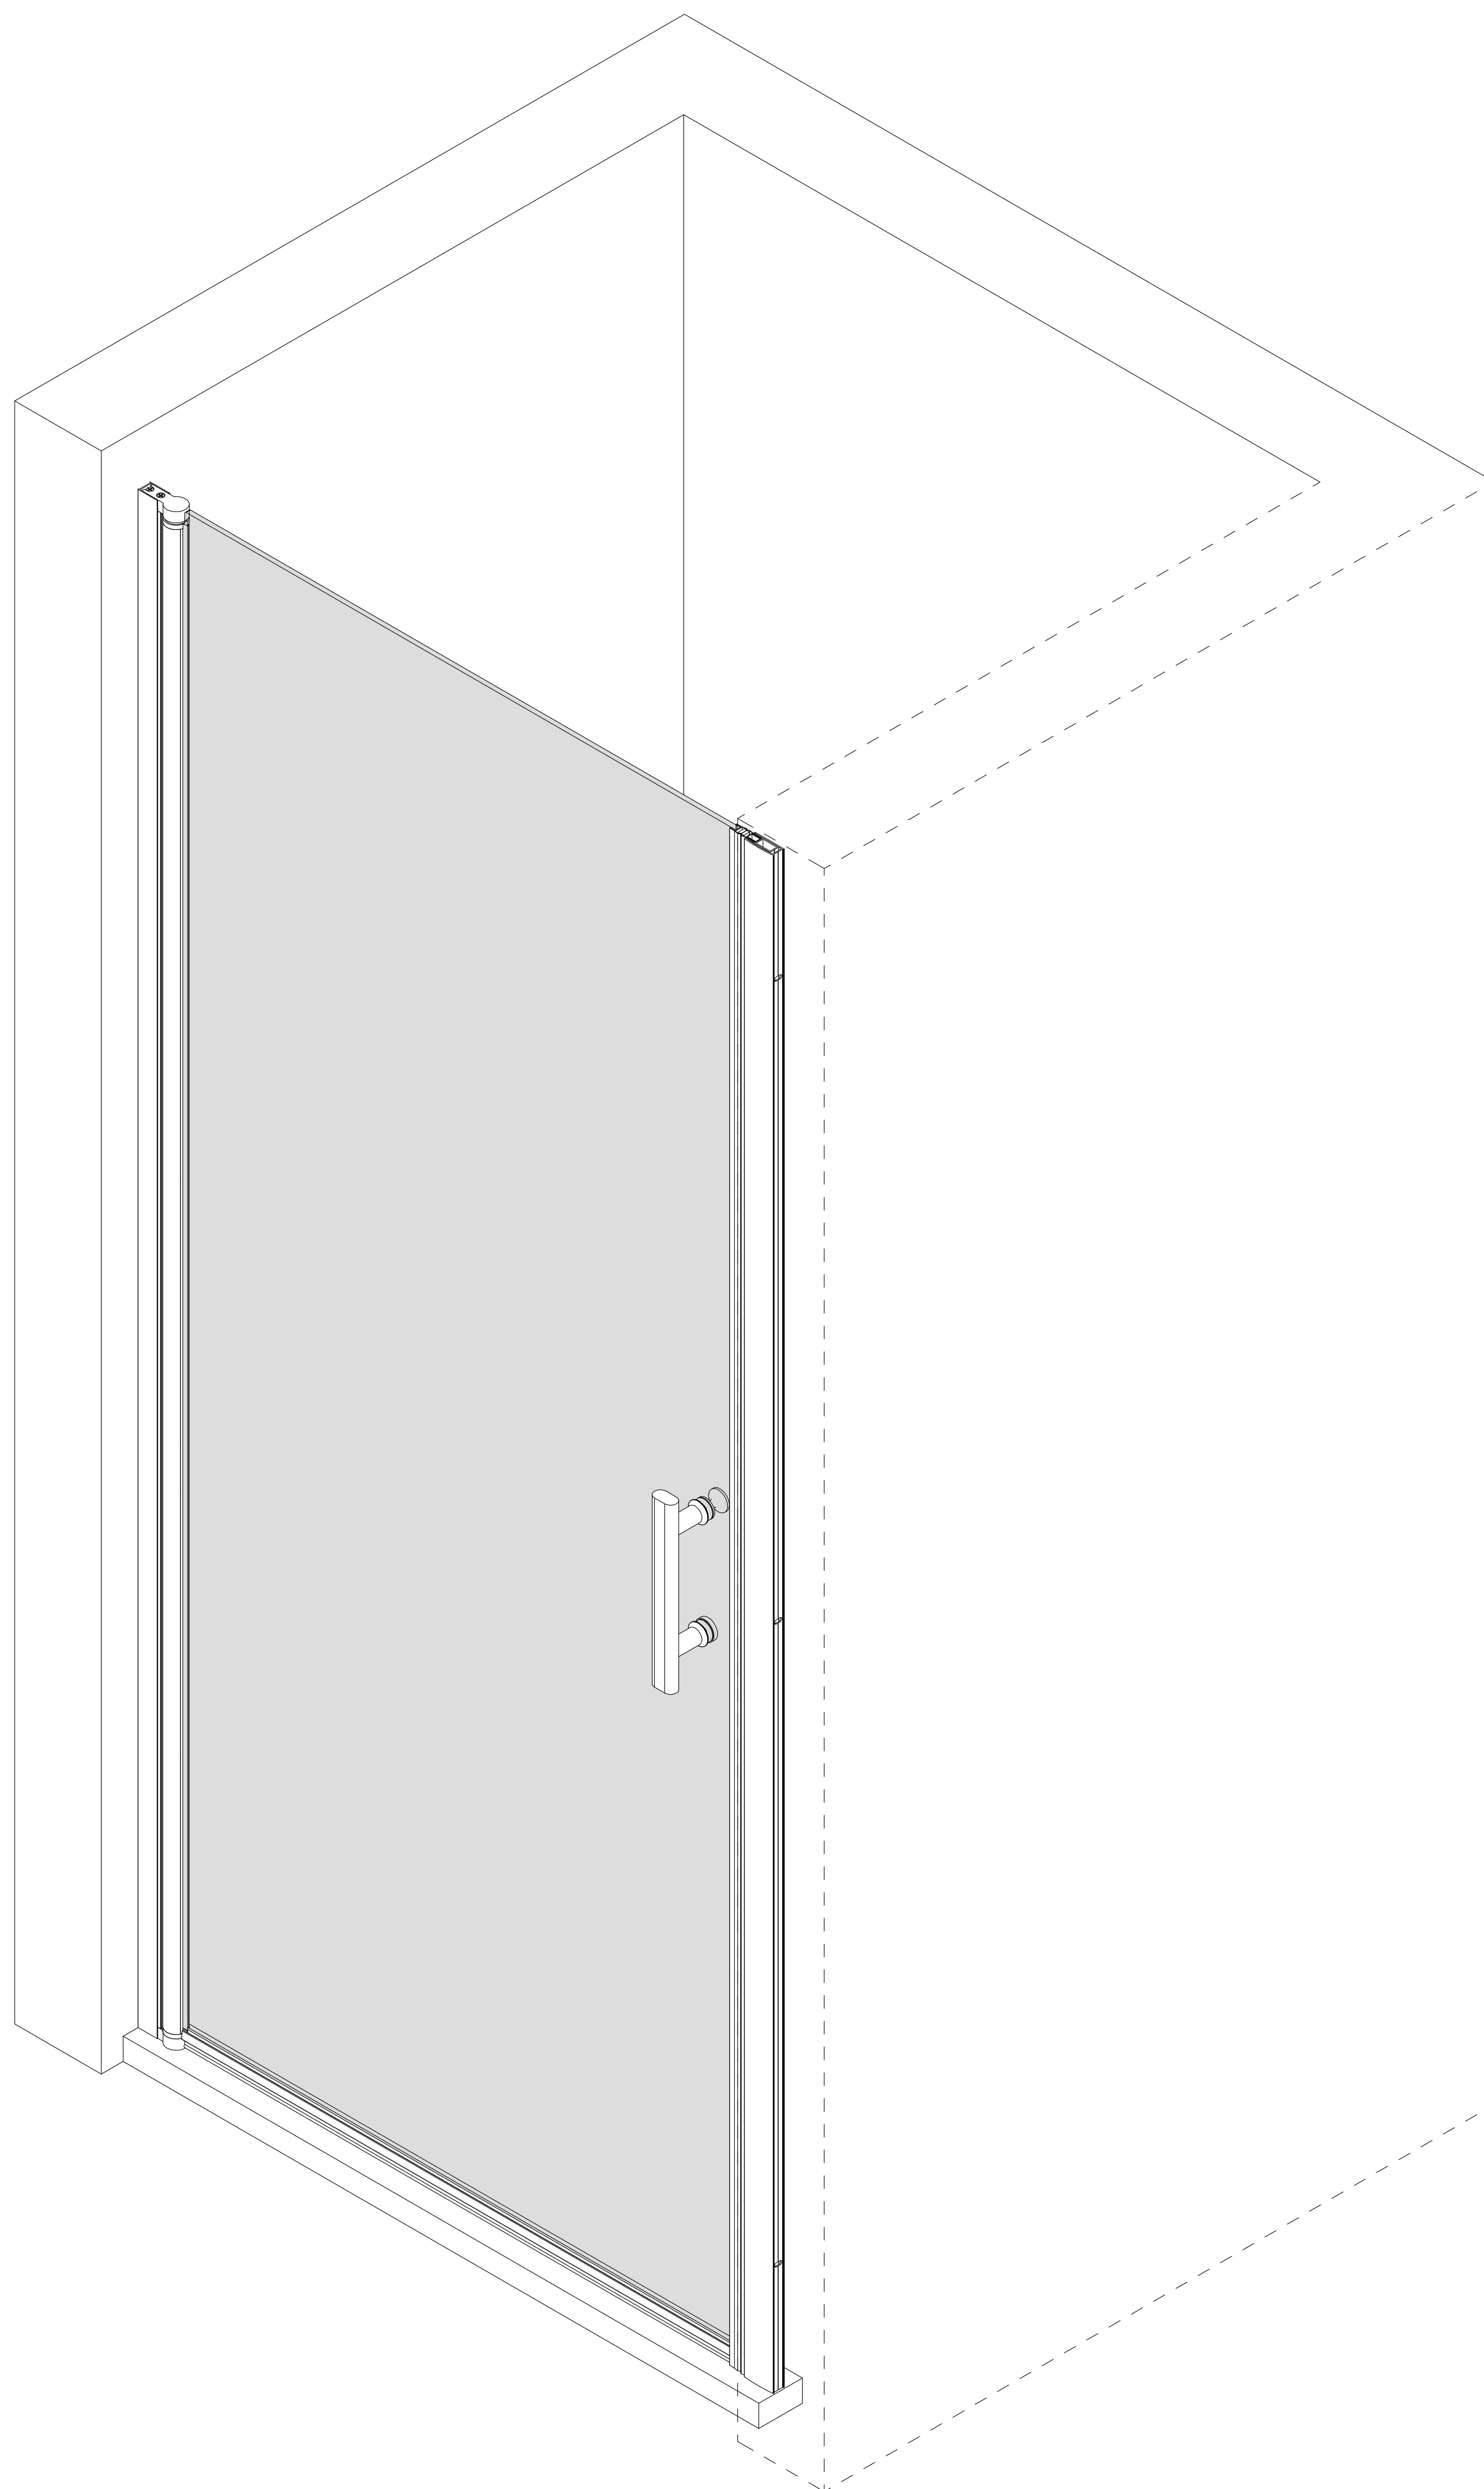
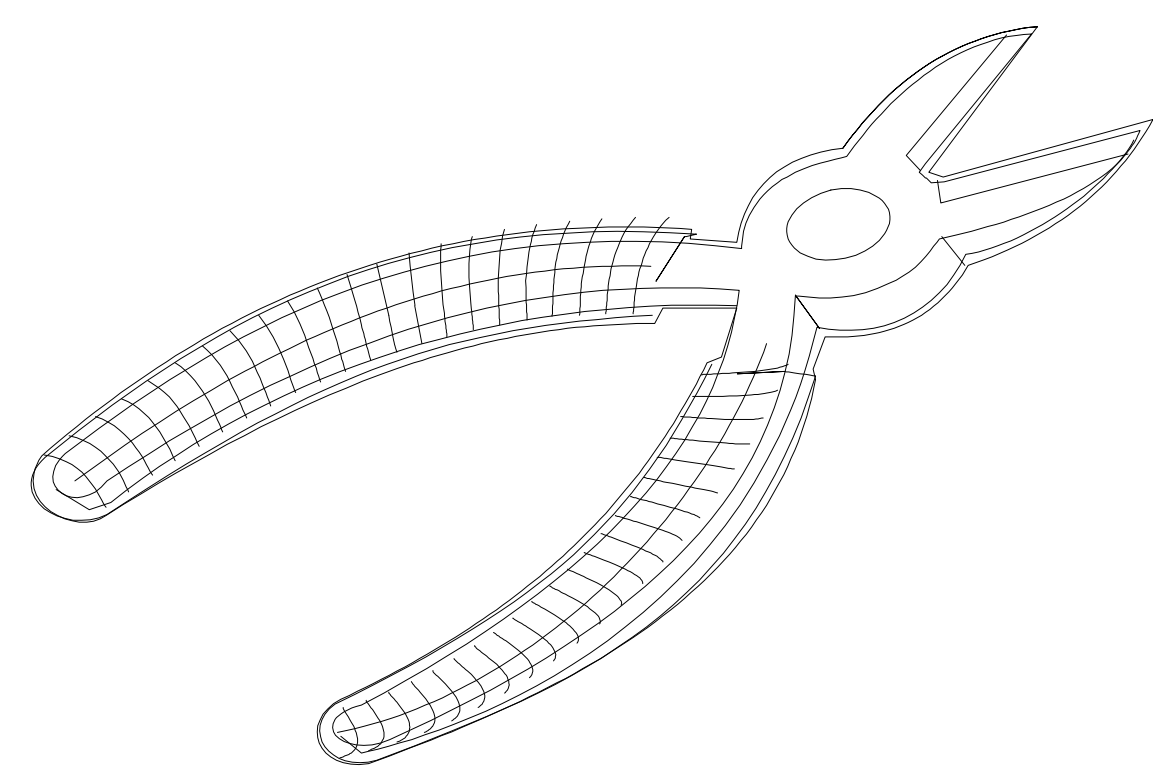
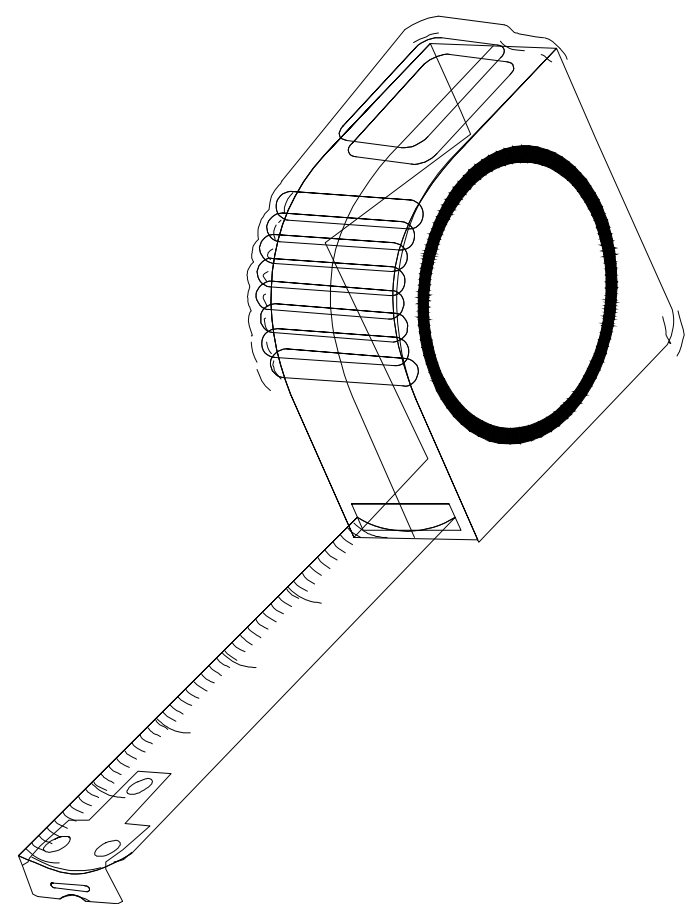
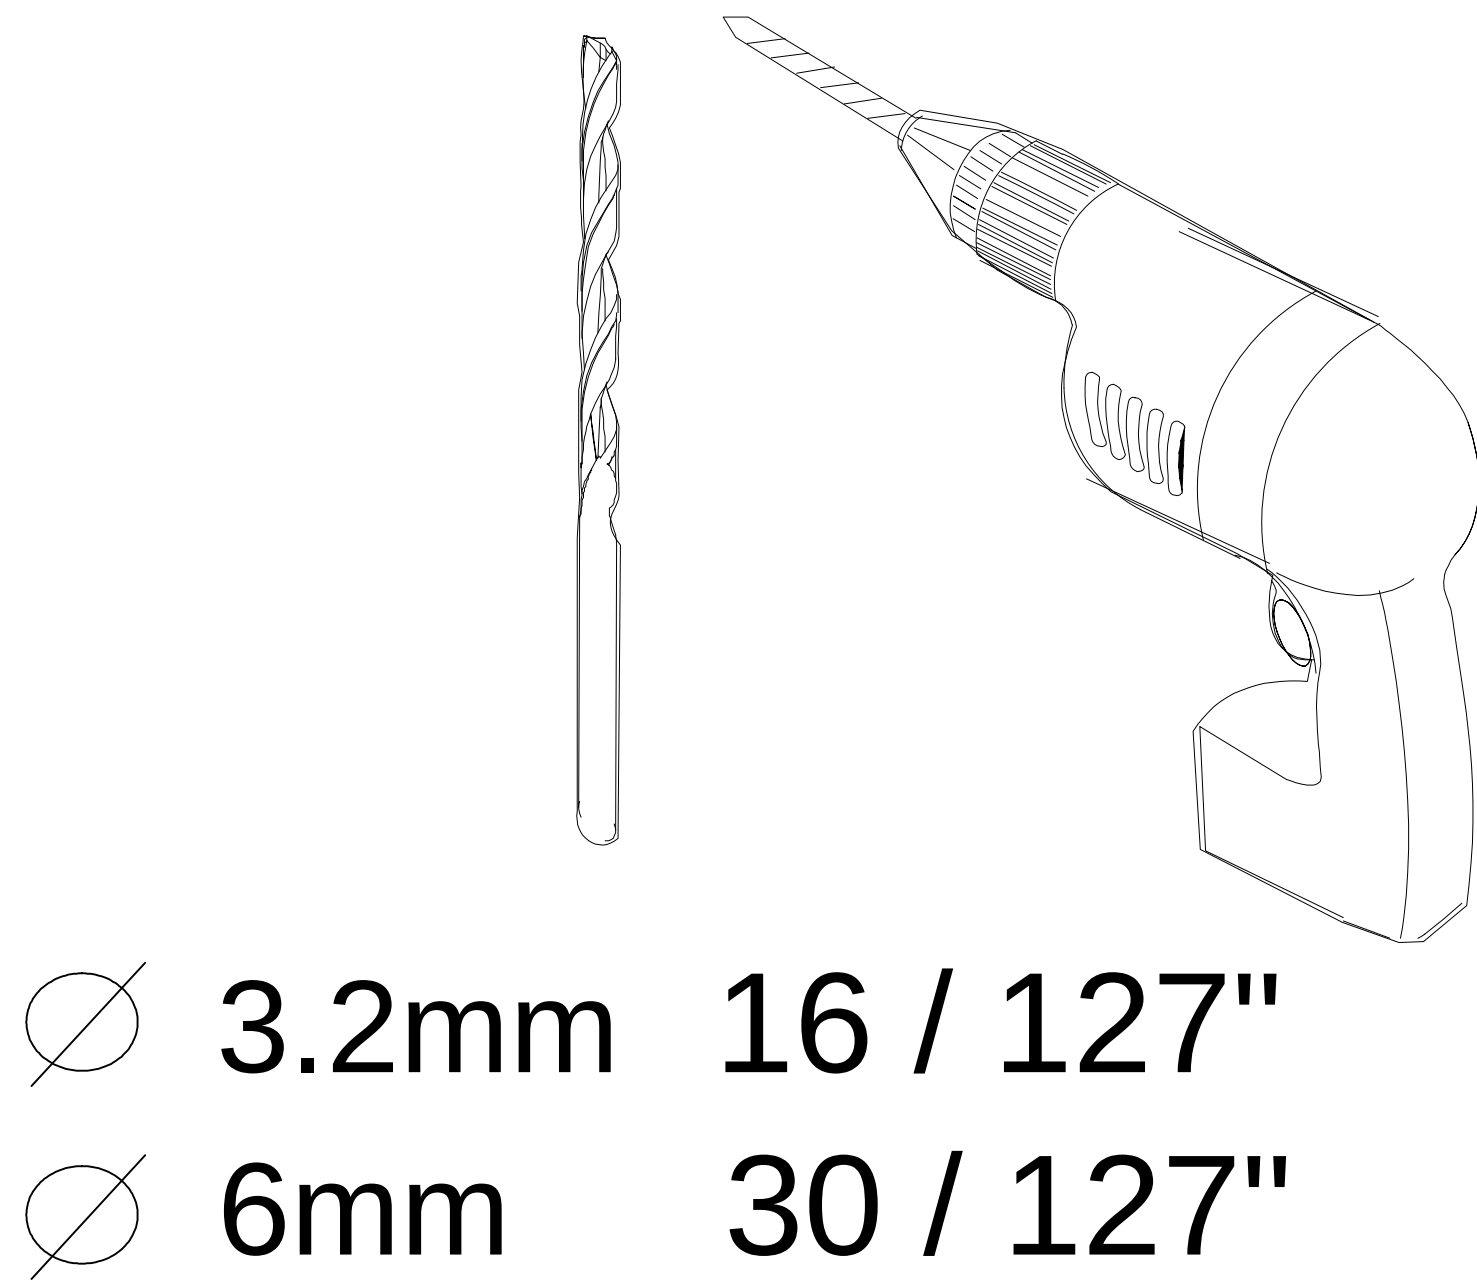
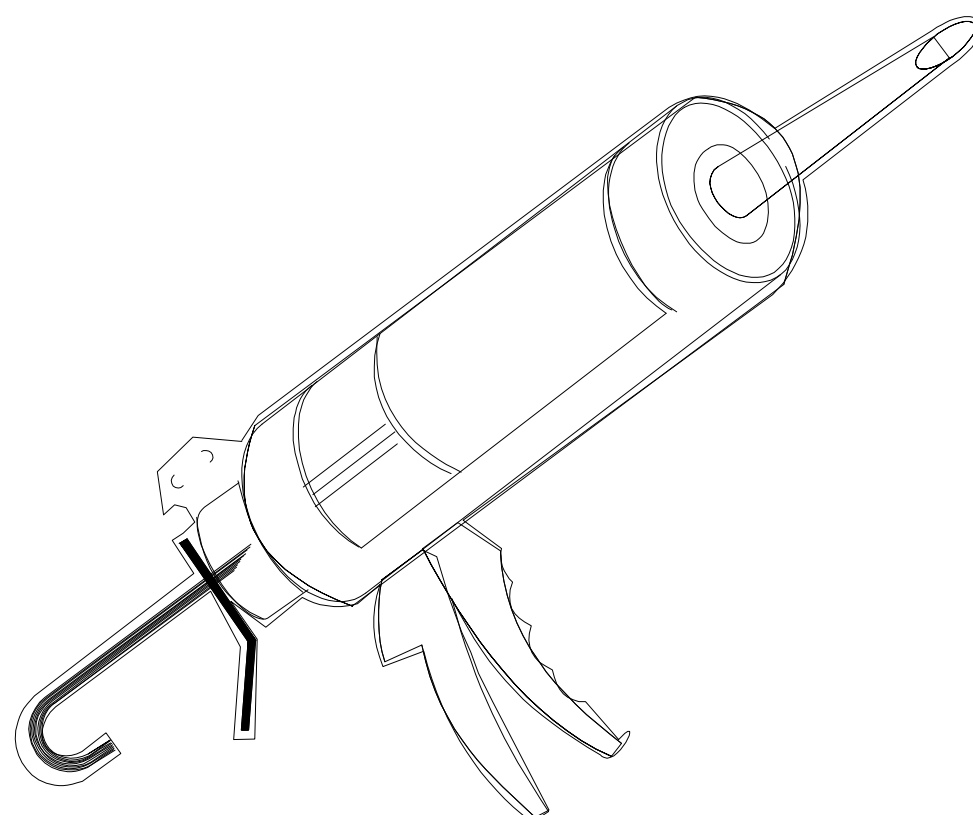
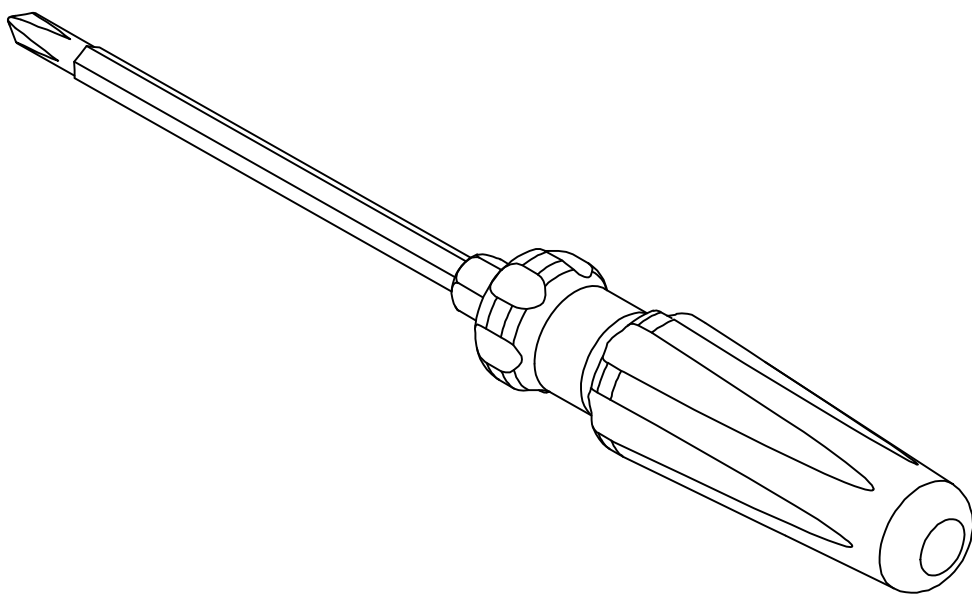
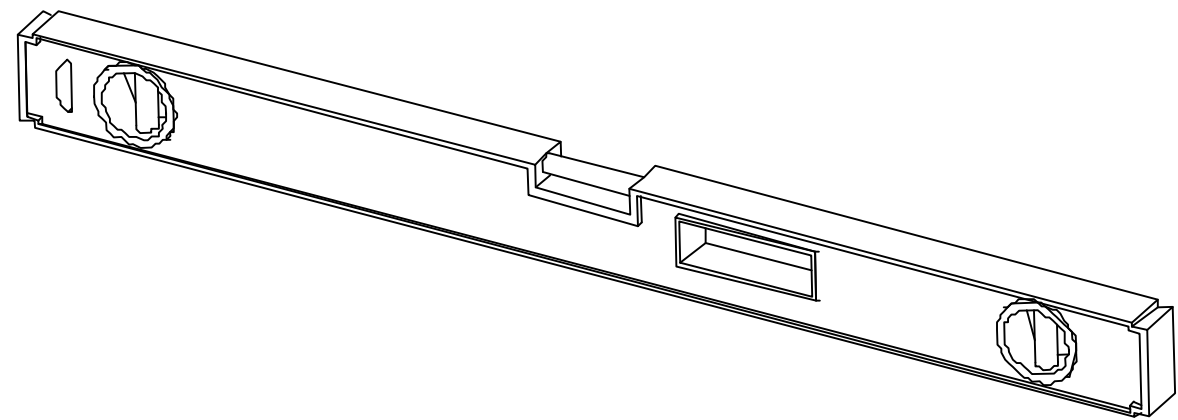
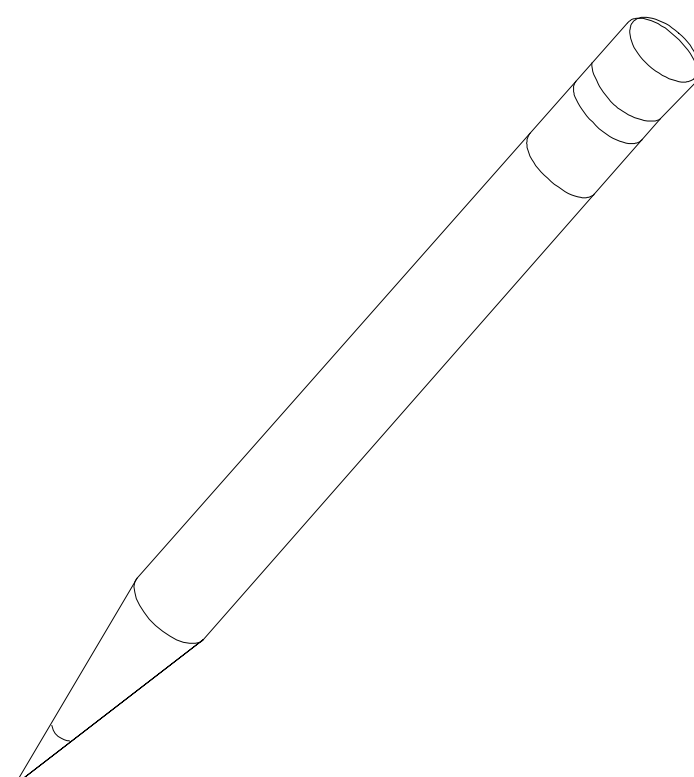


INSTALLATION MANUAL

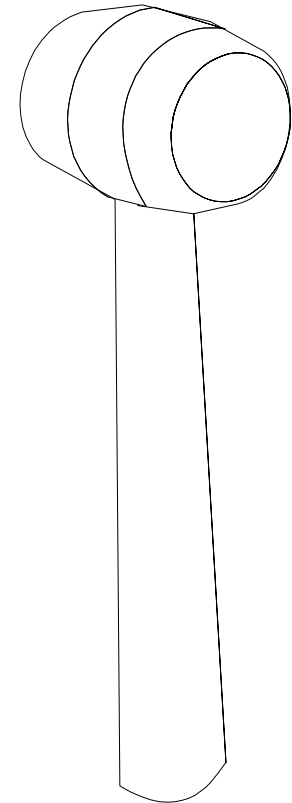

NOTE: Installation Requires 2 People

Tools and Materials

		 Ø 3.2mm 16 / 127" Ø 6mm 30 / 127"		
Cutting Plier	Tape Measure	Drill	Caulk Gun	Screwdriver
				
Level	Pencil	Mallet		

Before You Begin

- ⚠ CAUTION: Risk of injury. Always wear safety glasses when cutting or drilling.
- ⚠ CAUTION: Risk of injury or product damage. Tempered glass cannot be cut.
 - Before starting the installation, lay out and identify the parts. Inspect them for damage.
 - The bath/shower or receptor should be installed/prepared at this time, including finished wall materials.

Installation on Tiled Surfaces


If your shower door will be installed over tiles, ensure the tiles are fully laid beneath the door frame.

Shower Door Care


- Do not use abrasive pads or sharp tools on any metal parts or glass surfaces.
- To maintain a clean and like-new appearance, wipe with diluted mild soap and water.
- We recommend using a squeegee to dry the glass panels after each use.

Overall Installation displaying

The product can be installed in reverse.
This manual is for left-opening doors;
for right-opening doors, install by mirroring the instructions.

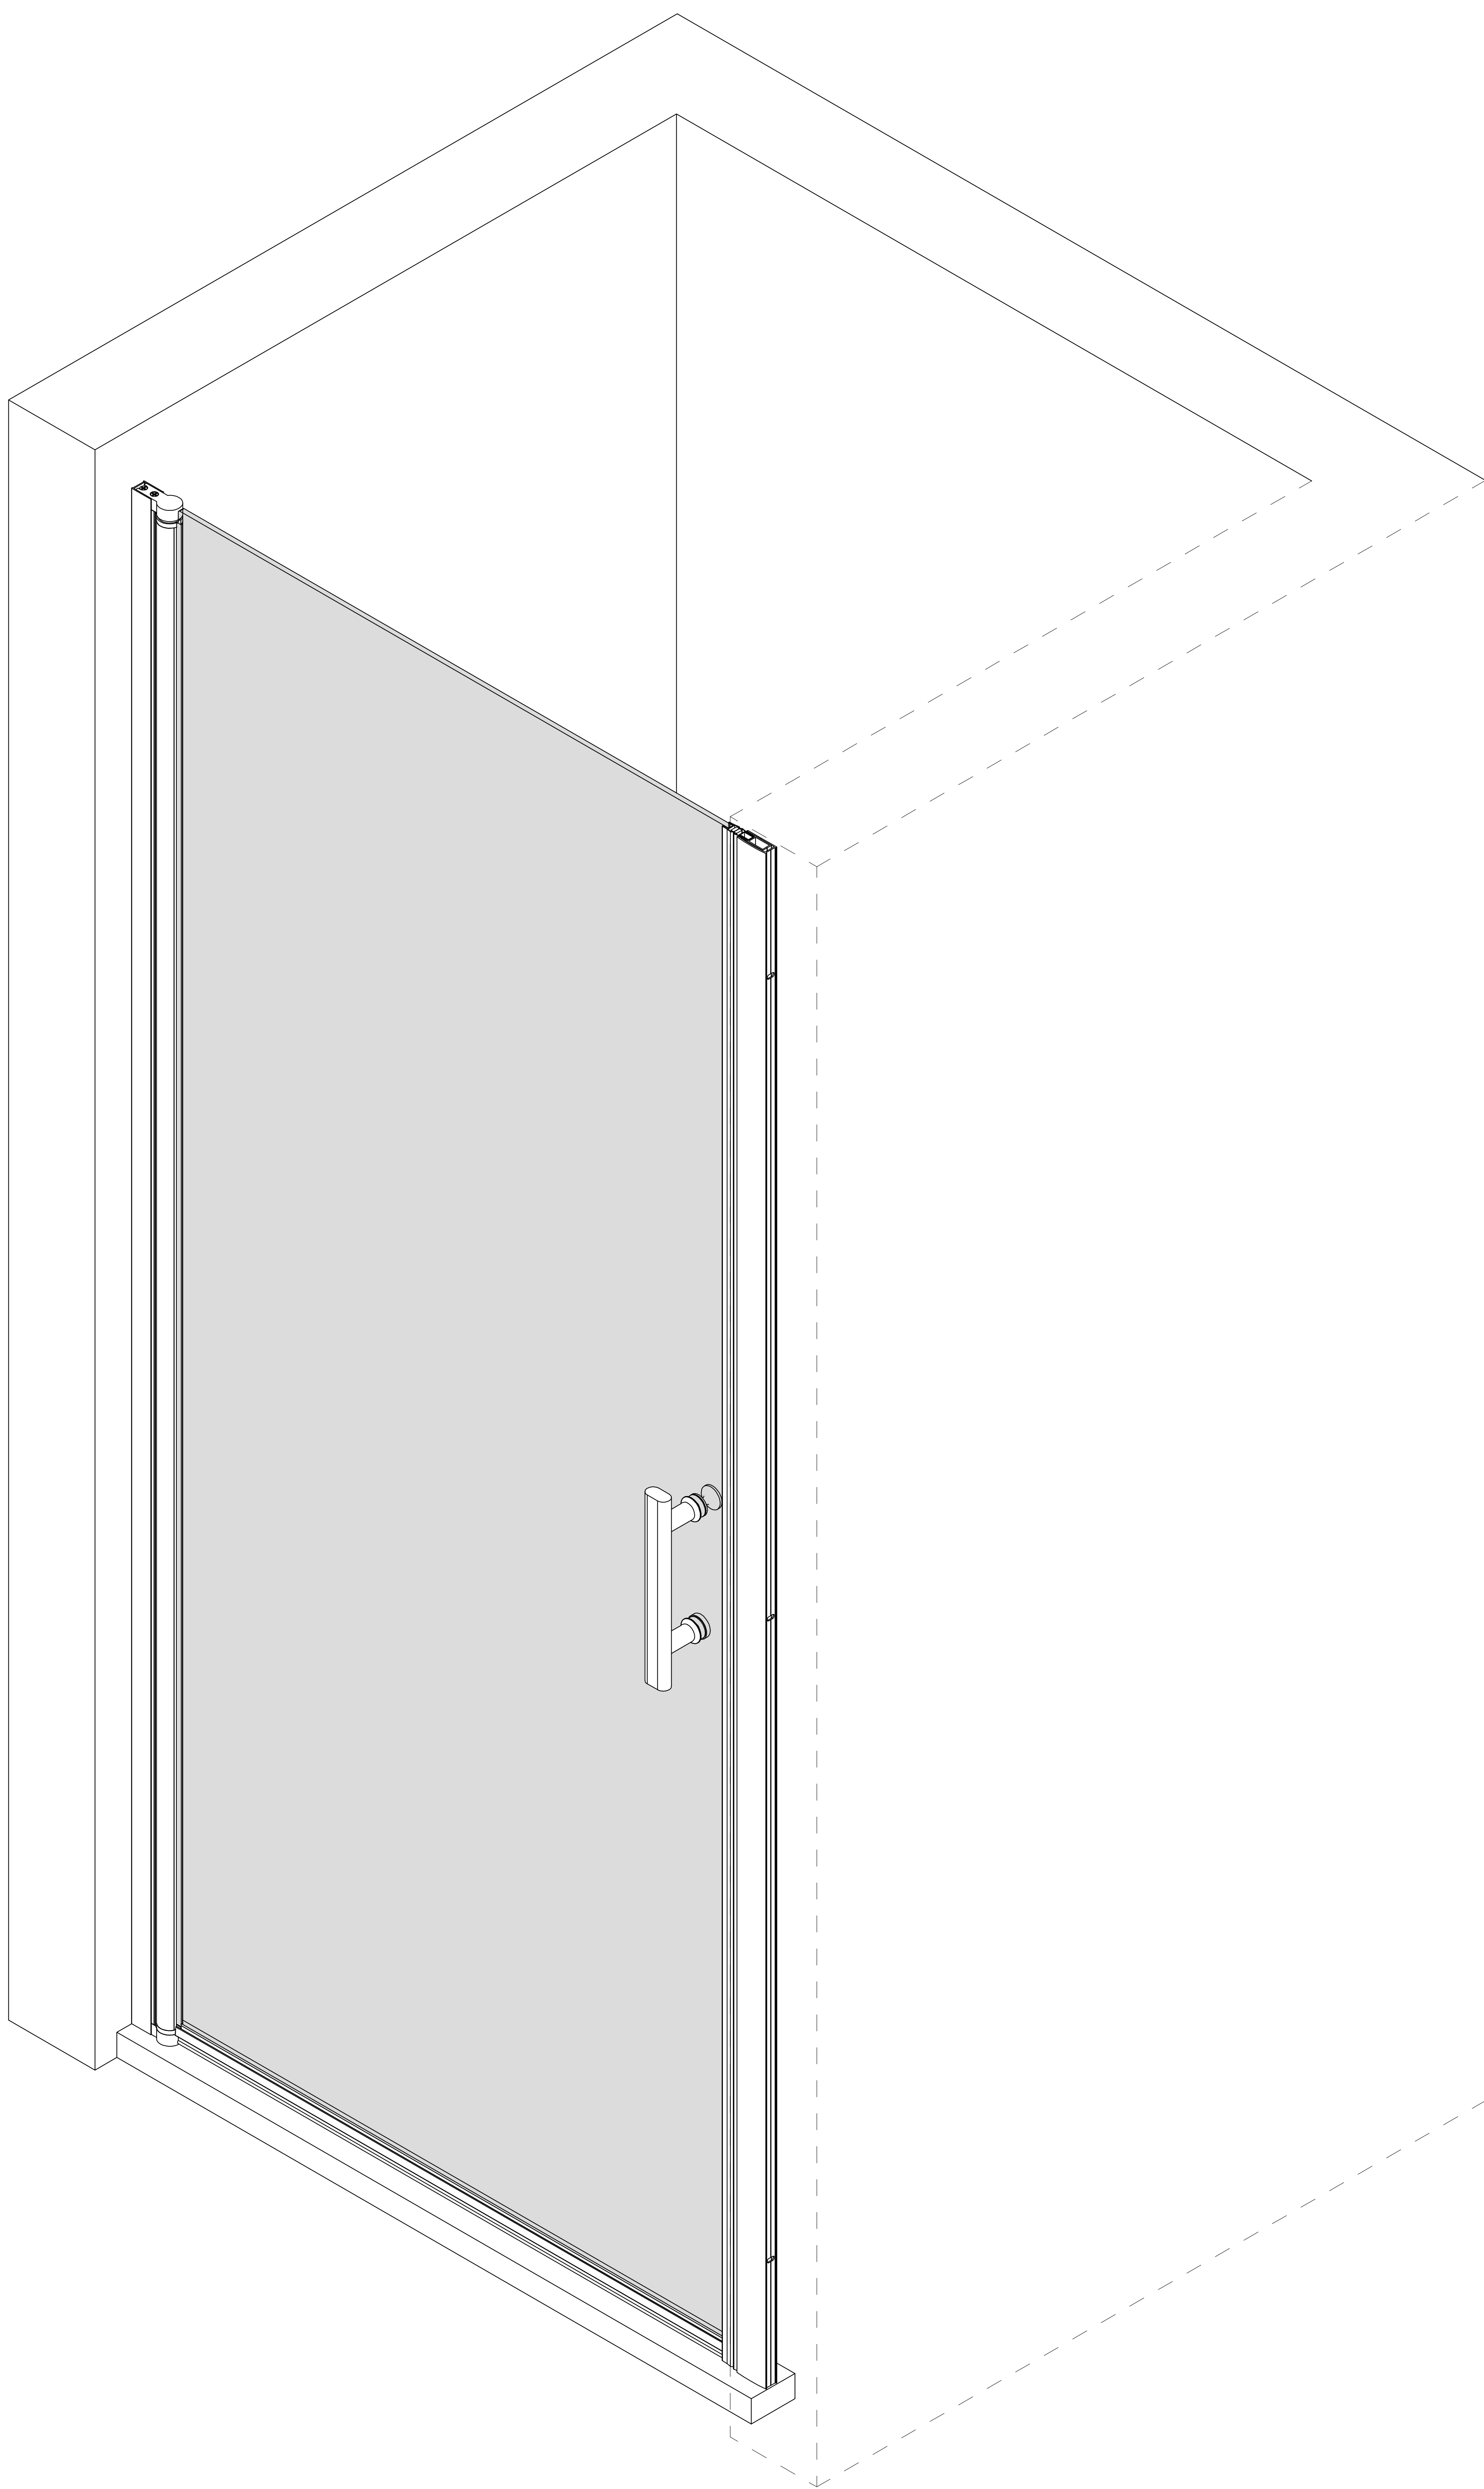


Left-opening











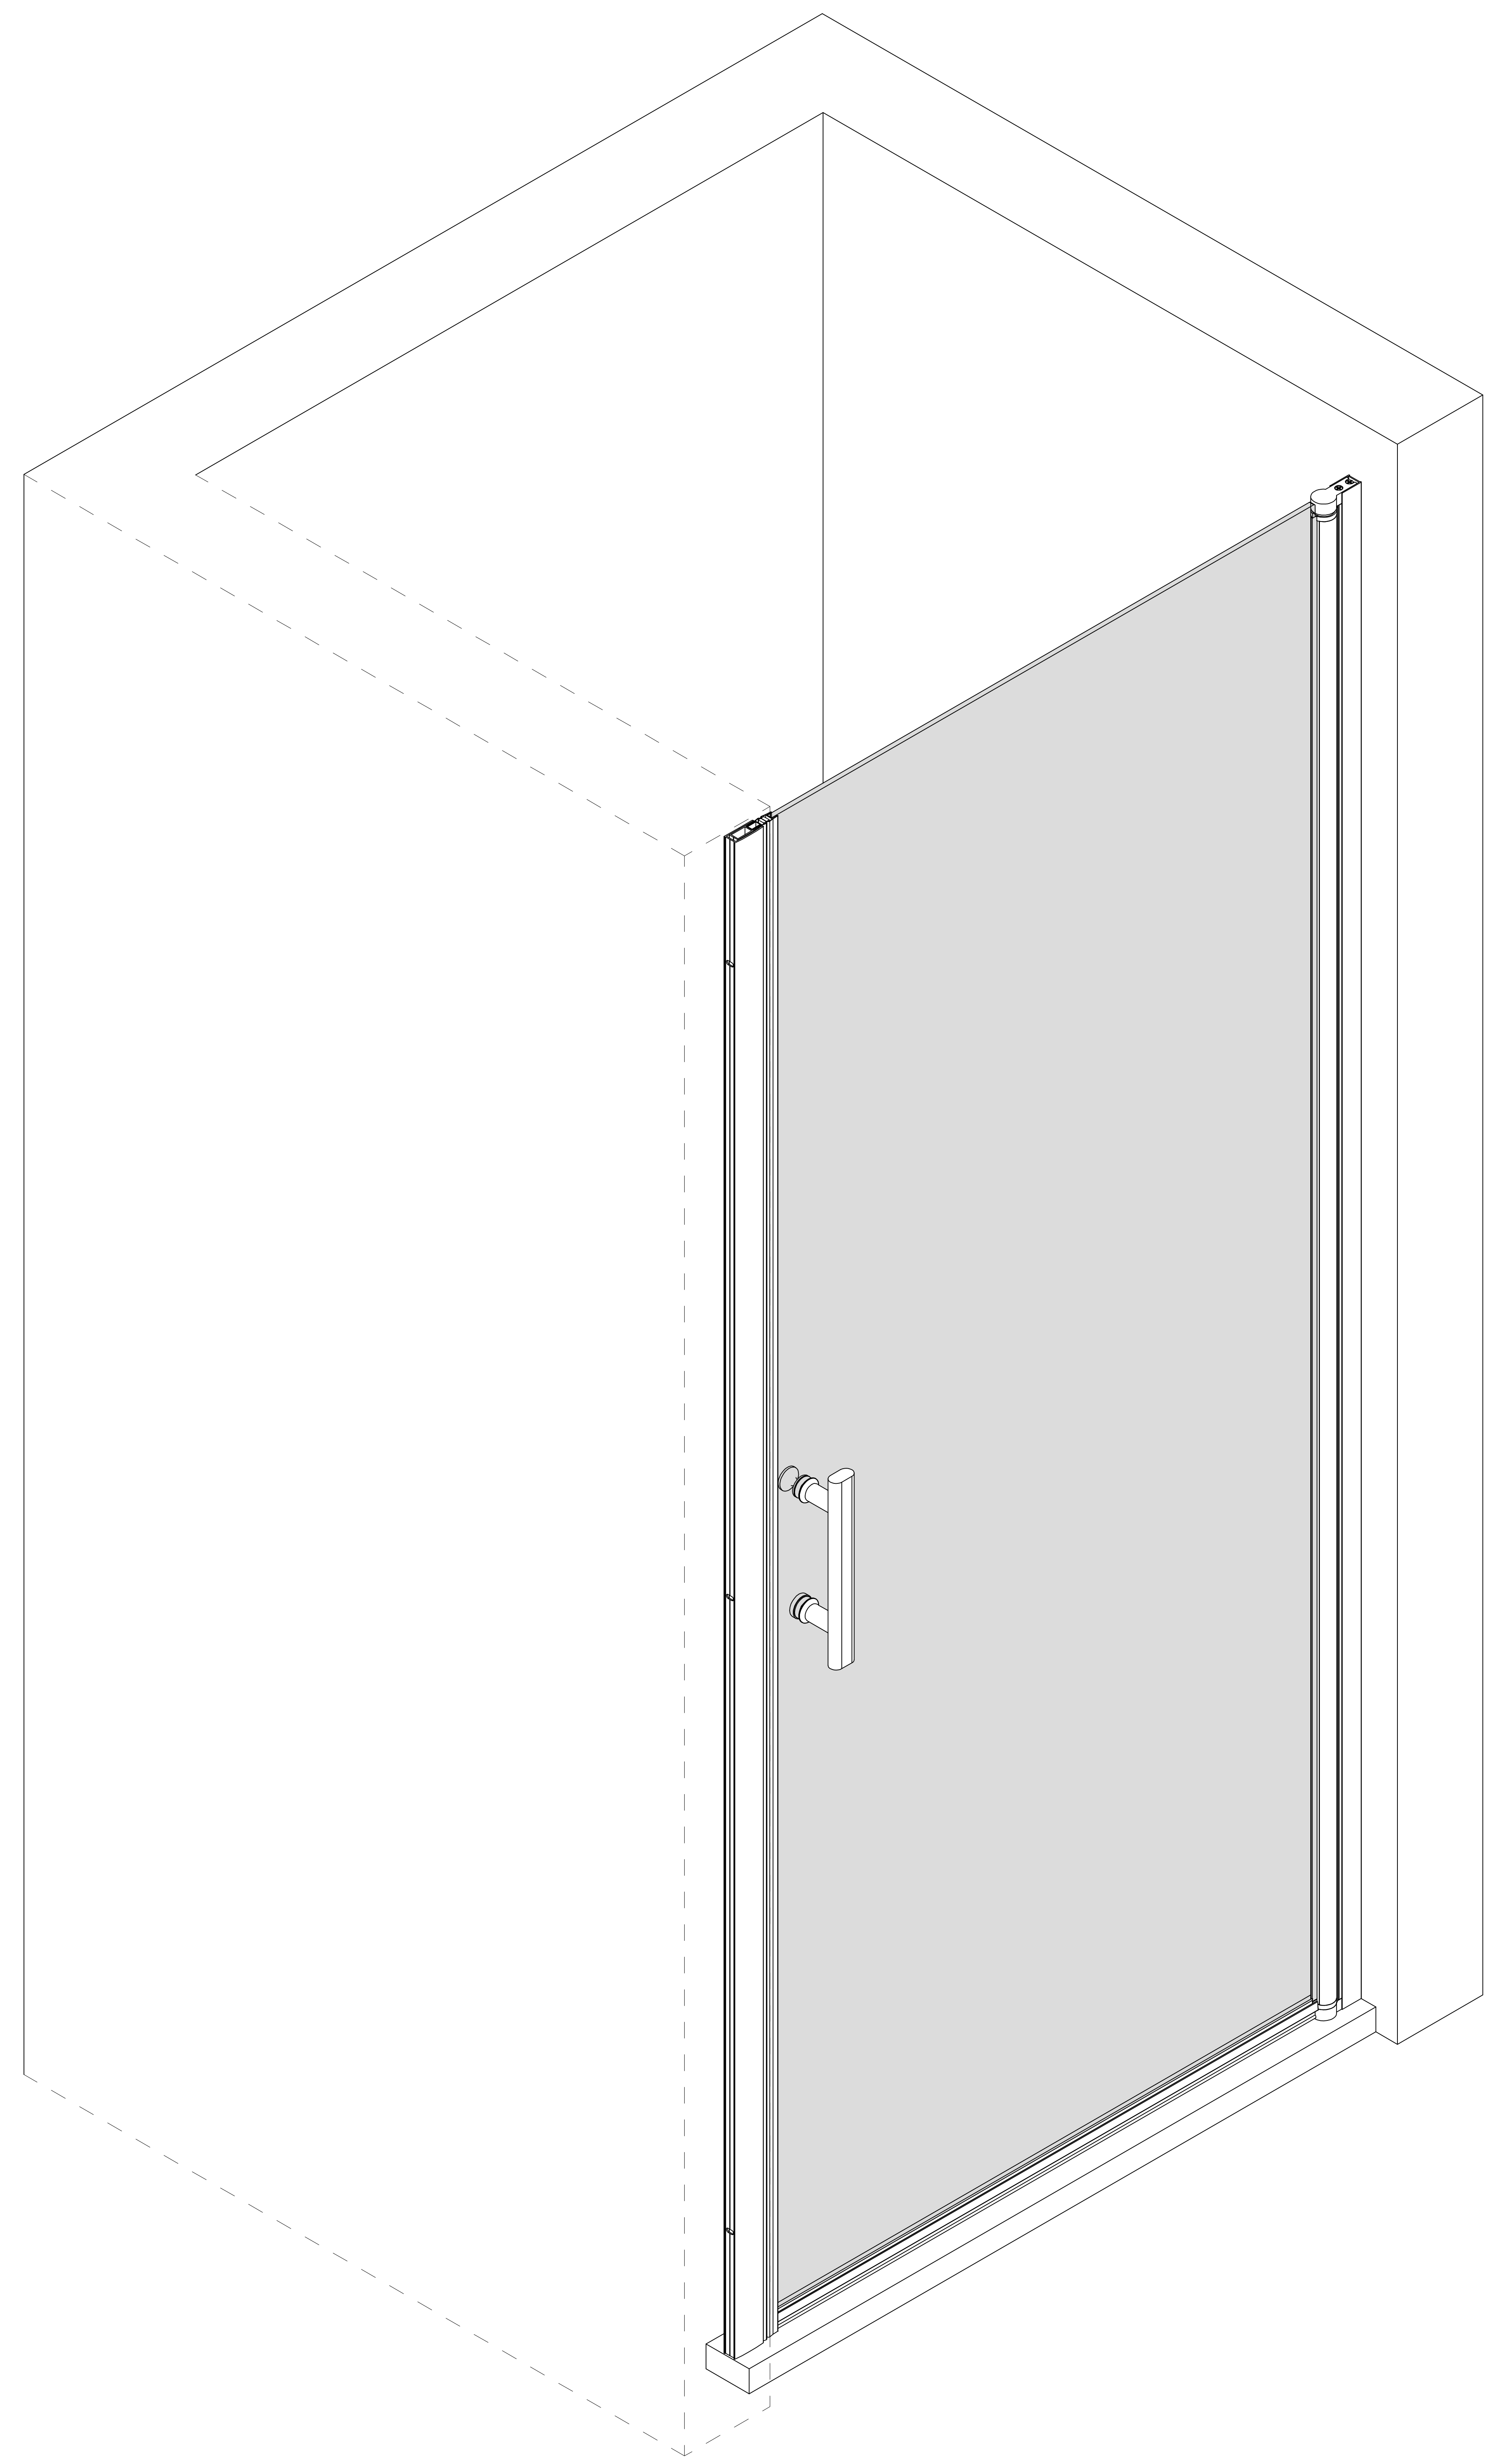


Right-opening

Detailed Diagram of Shower Door Components

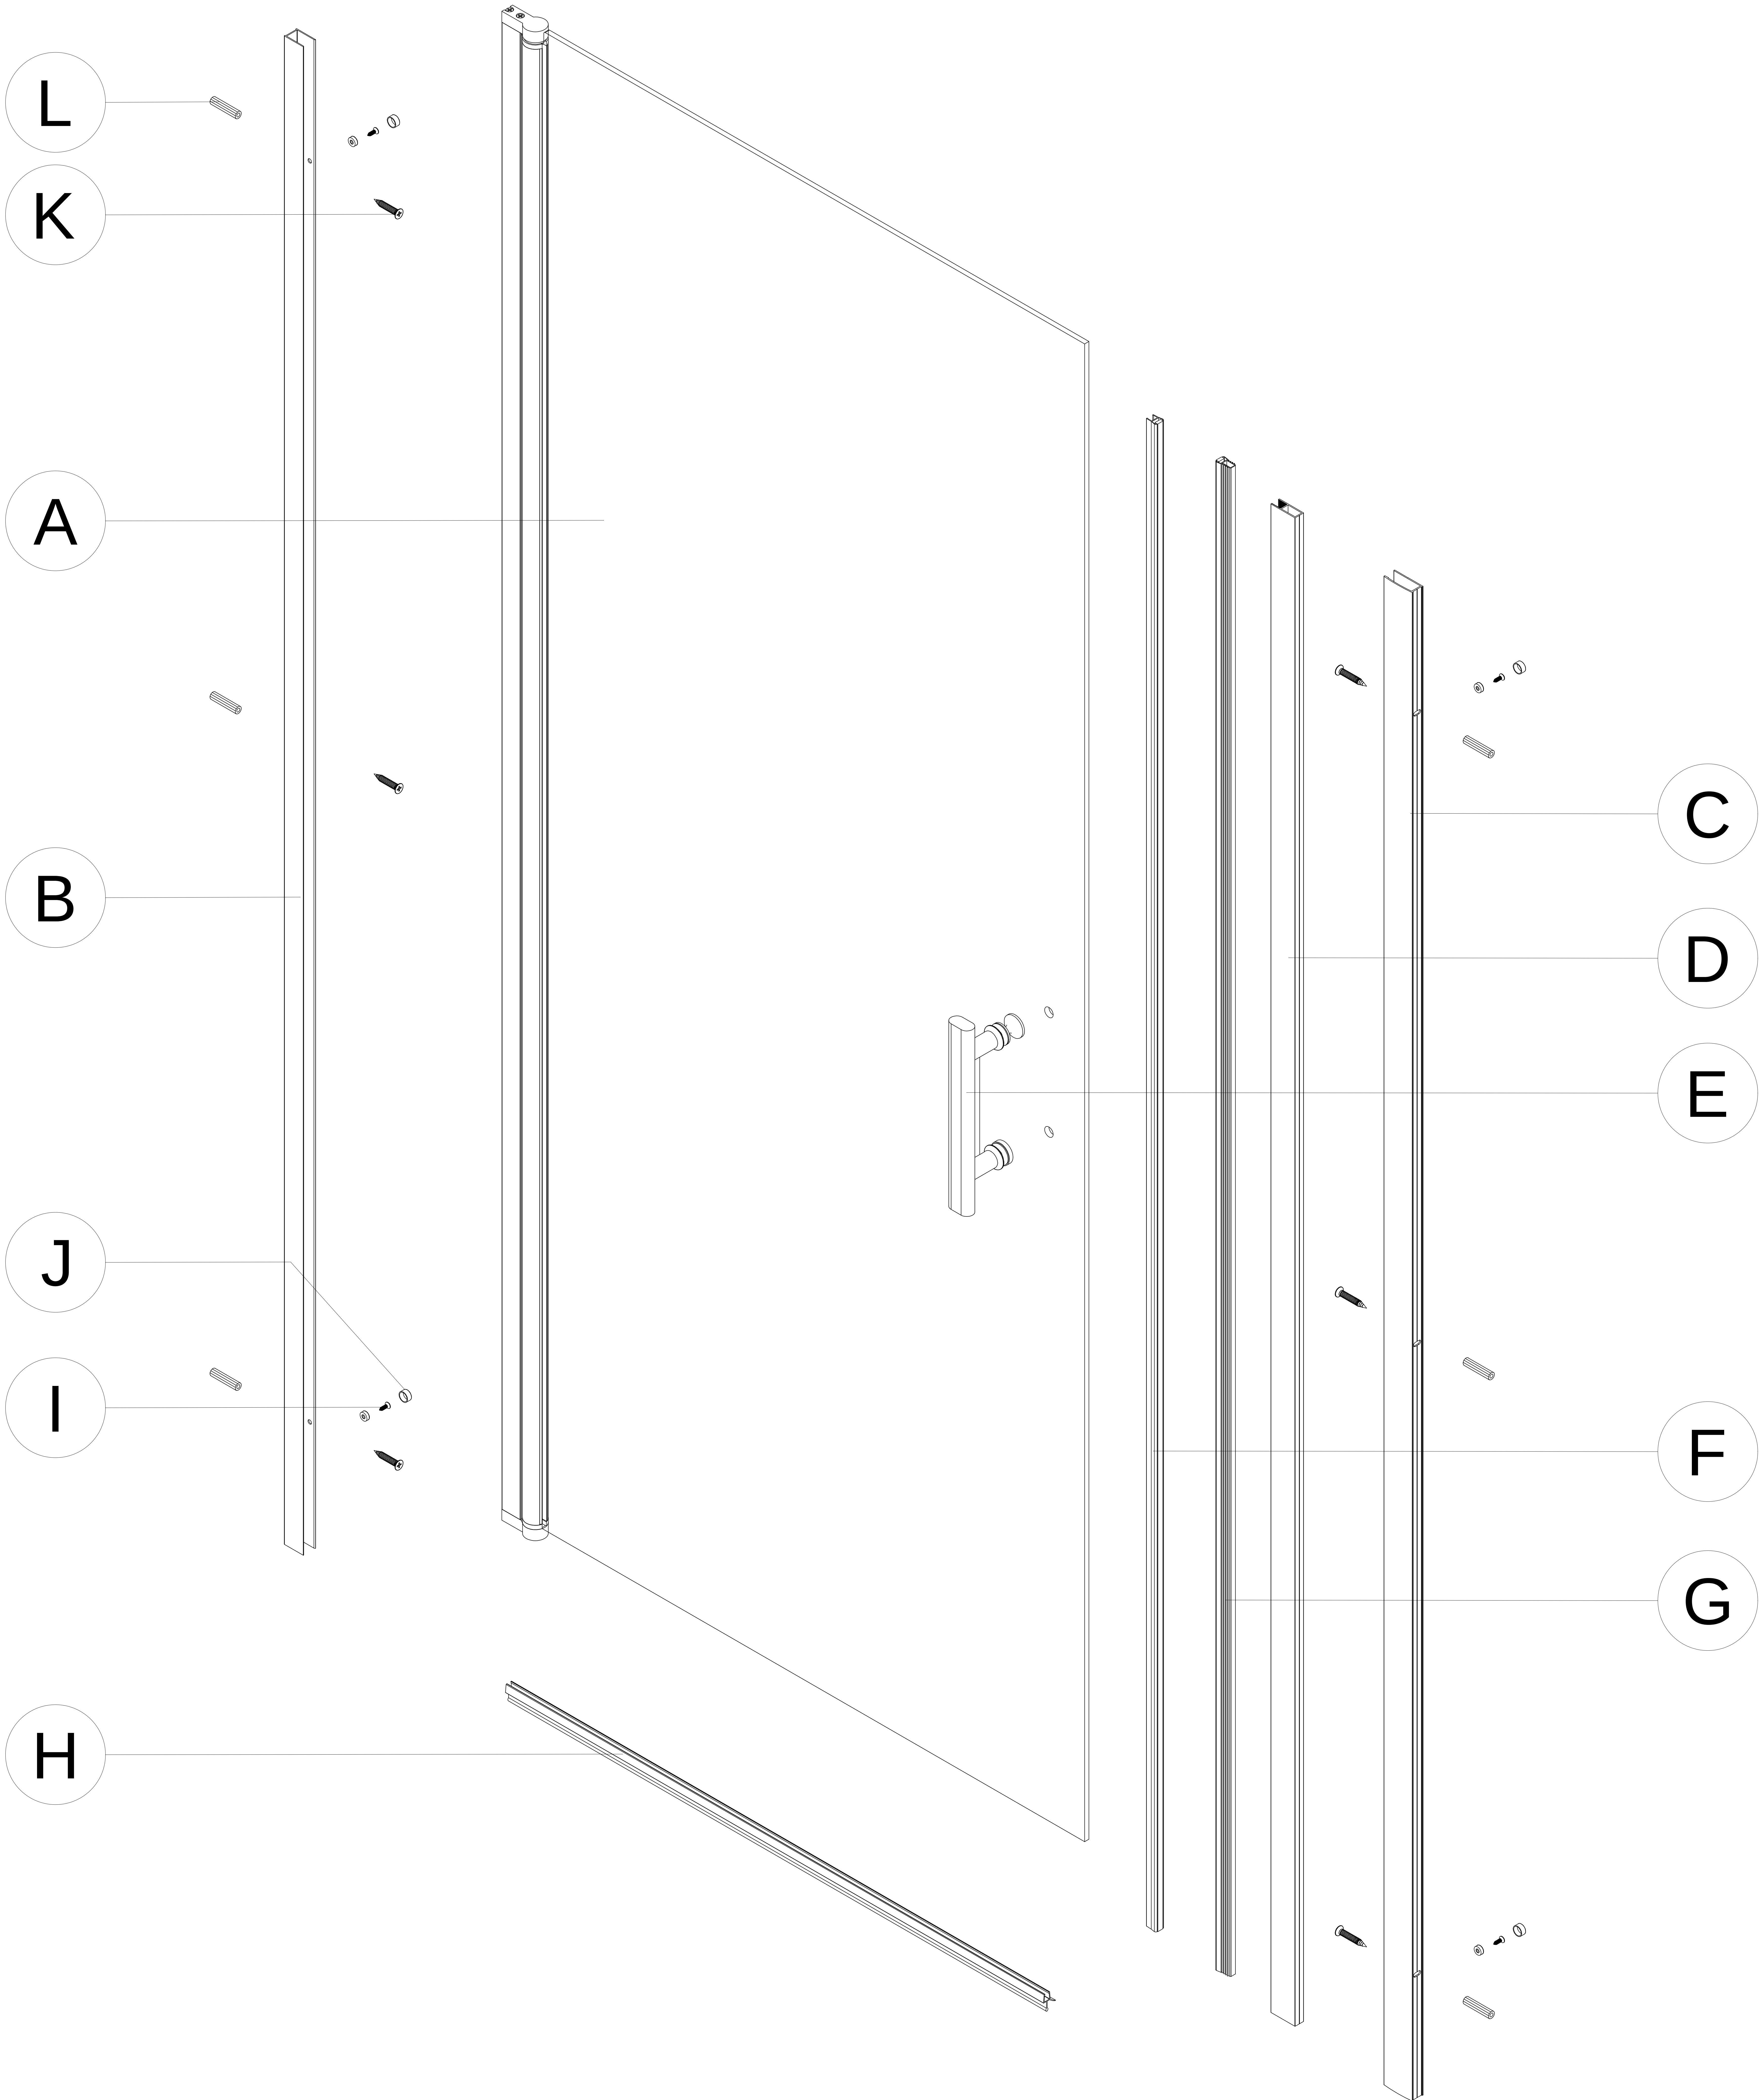


Parts And Hardware Listing

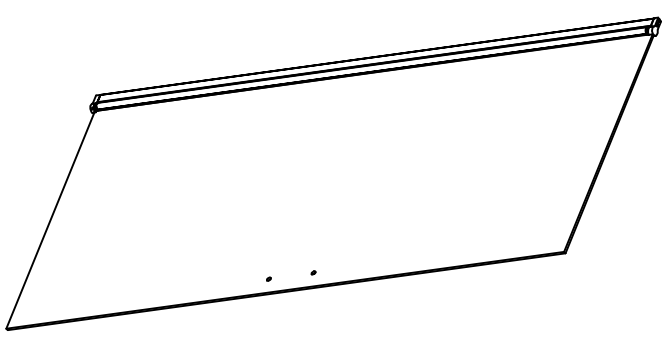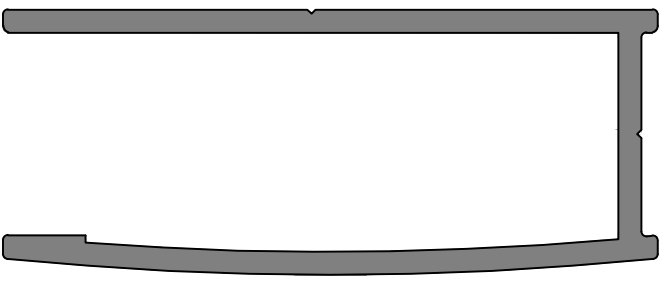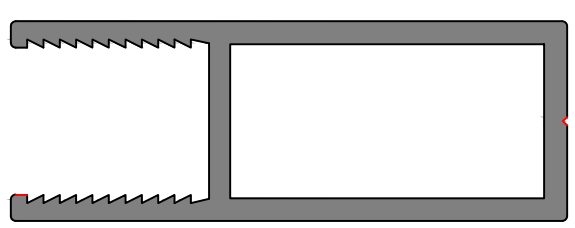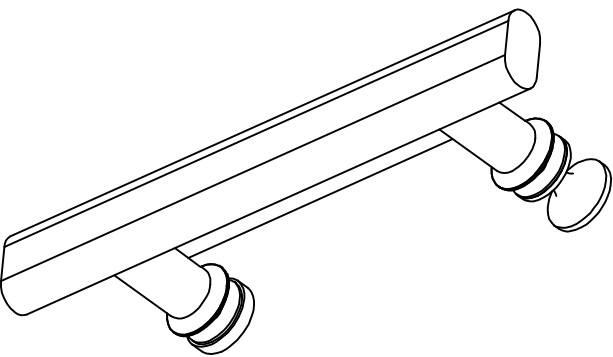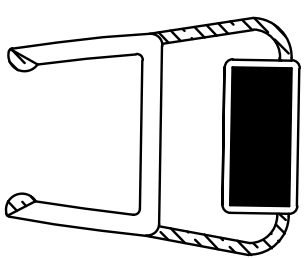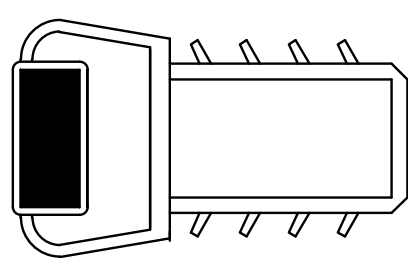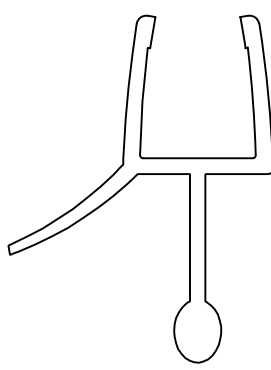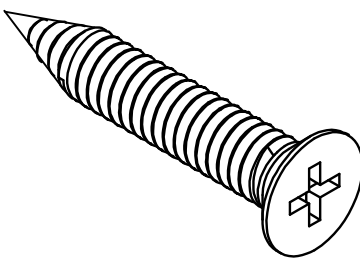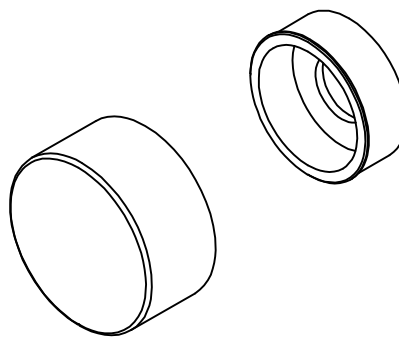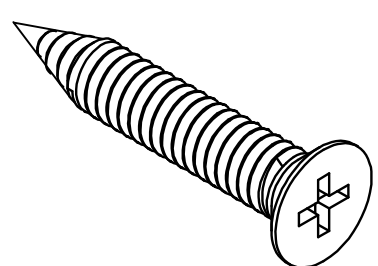
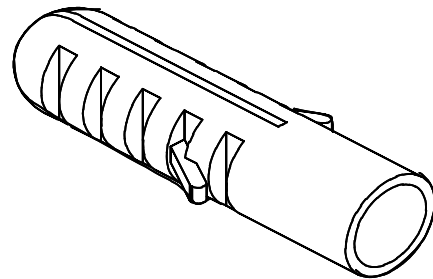
ITEM	NAME	QTY	PICTURE
A	Movable Glass Door	1	
B	Hinge Side Jamb	1	
C	Magnetic Side Jamb - A	1	
D	Magnetic Side Jamb - B	1	
E	Handle	1	
F	Glass Door Magnetic Strip	1	
G	Press-in Magnetic Strip	1	
H	Bottom Door Water Seal Strip	1	
I	Fixing screws 4mm x 12mm	4	
J	D01 Screw decorative cap	4	
K	Fixing screws 4mm x 35mm	6	
L	Hollow wall plugs 6mm x 30mm	6	

STEP 1

Measure the on-site installation conditions and adjust



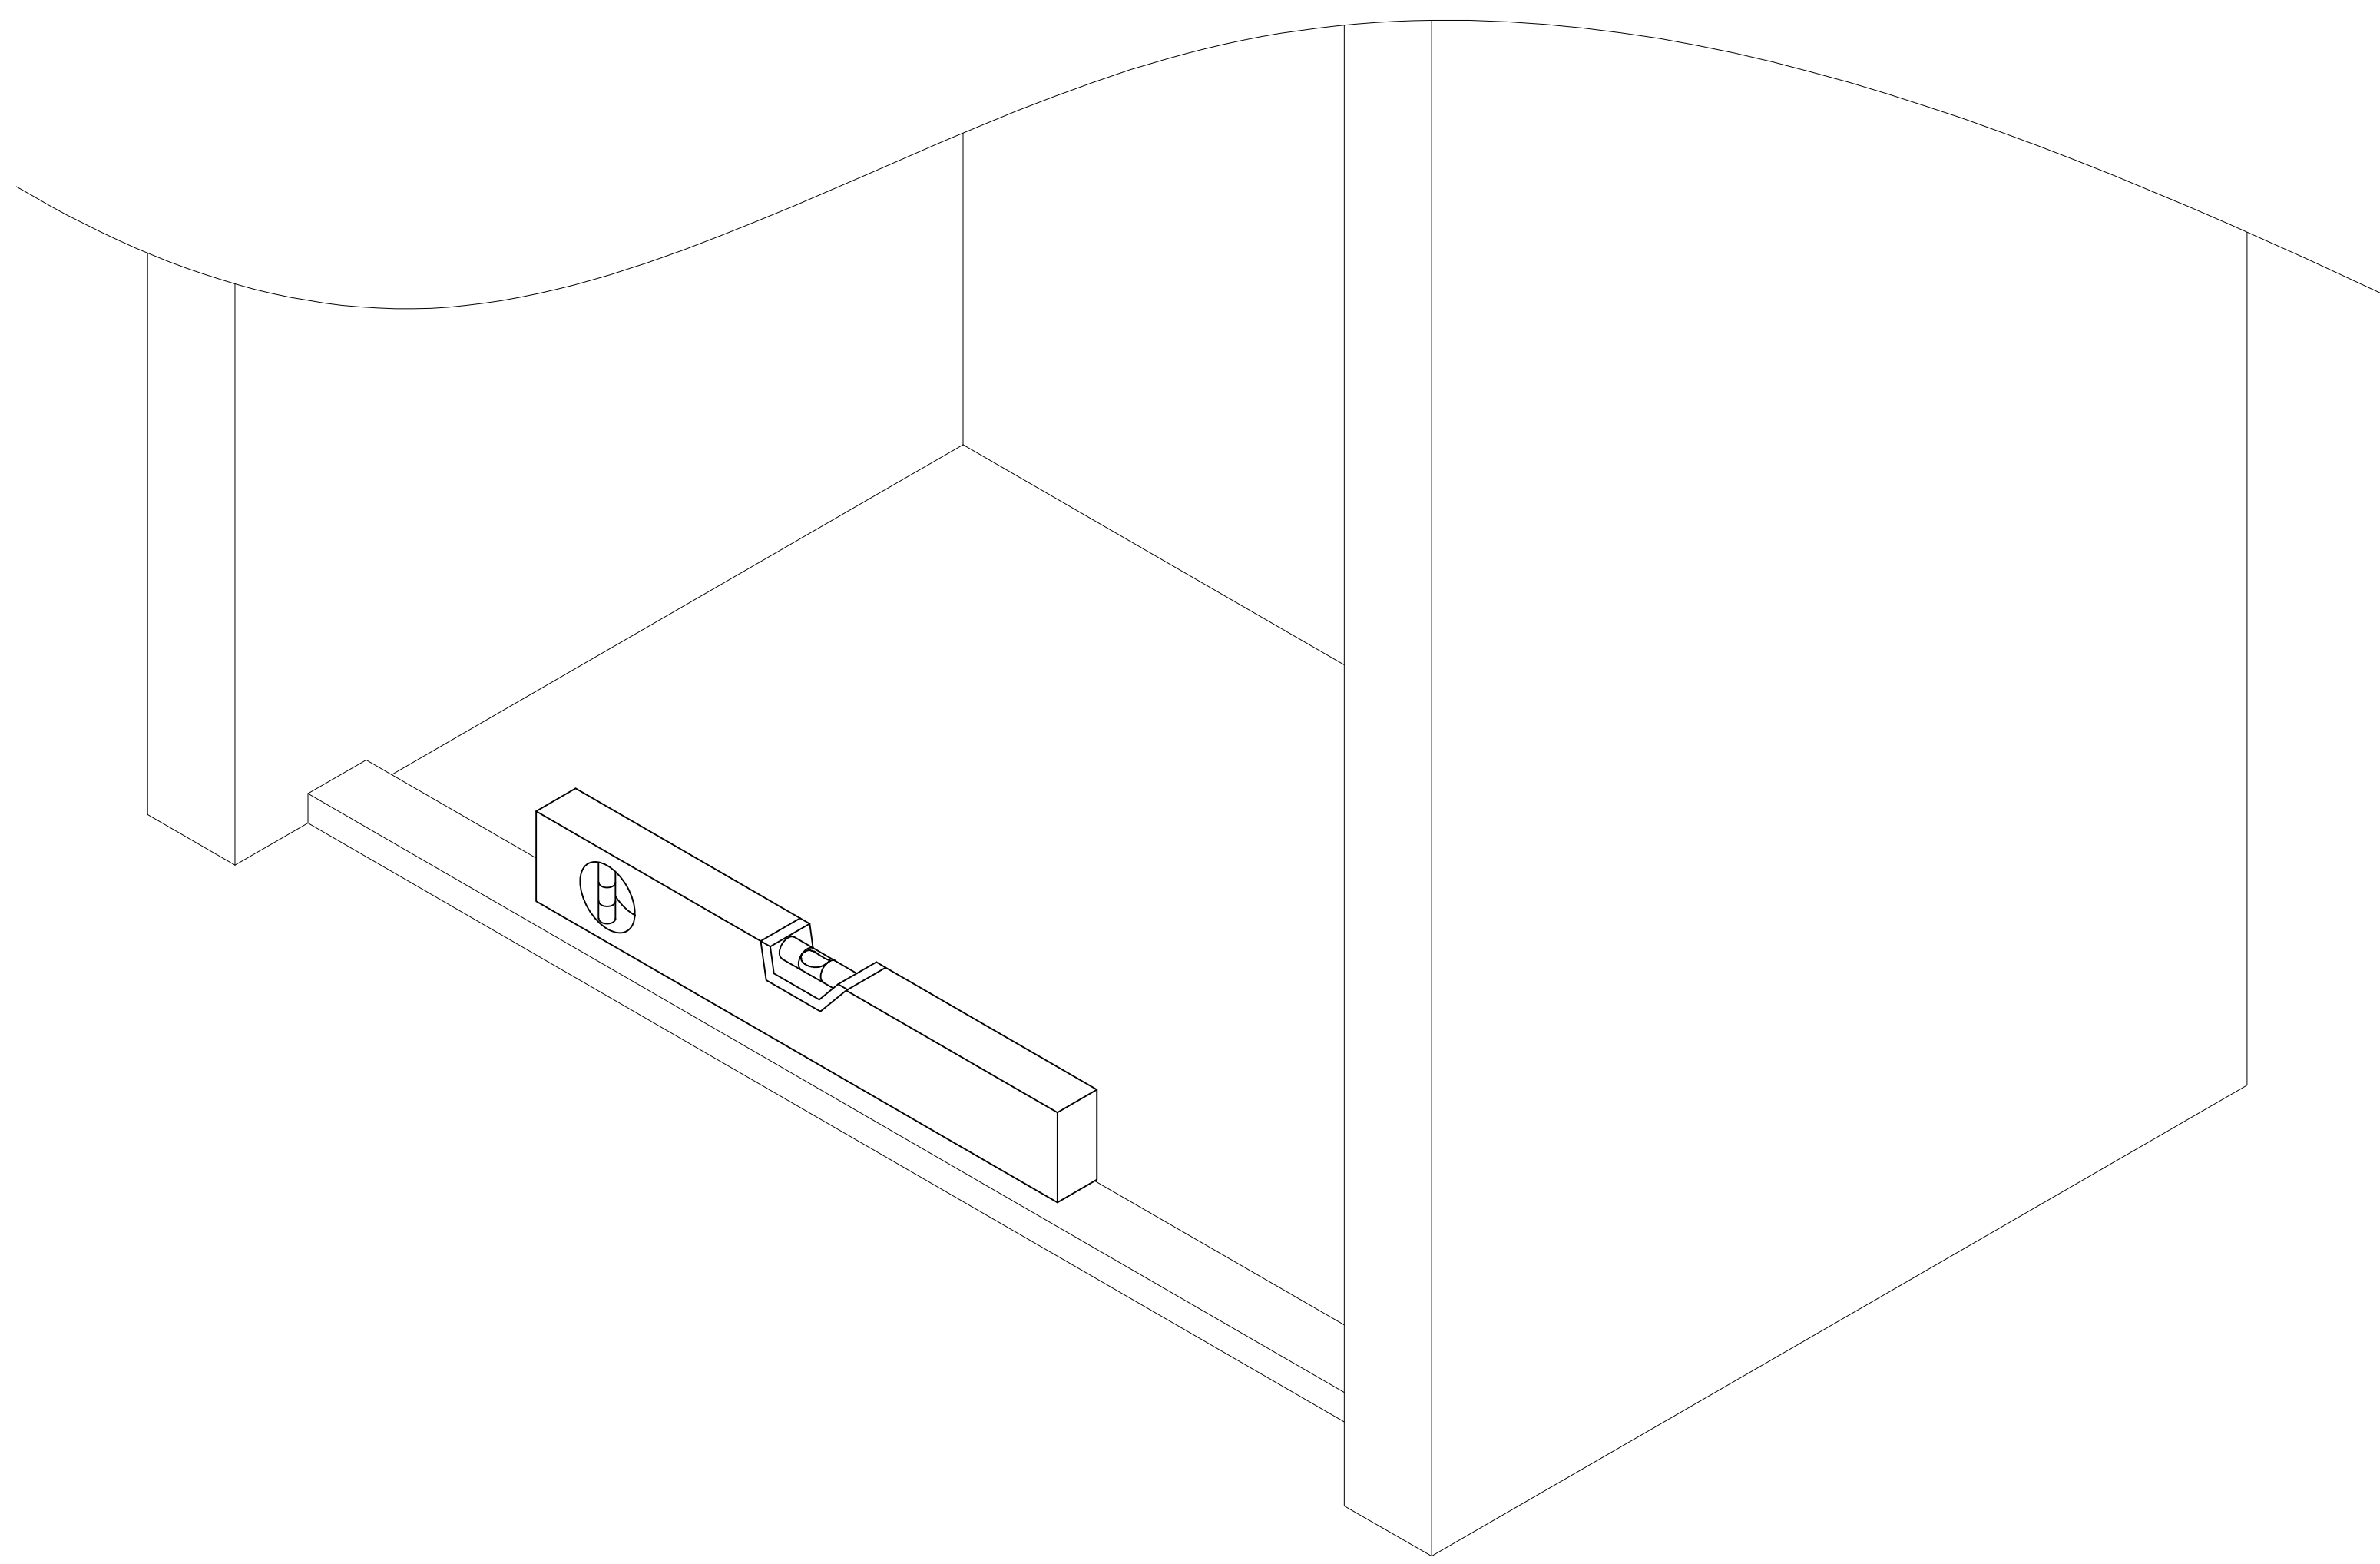



The installation shown is based on plumb finished walls and a levelled Base.if these conditions are not met, please adjust accordingly.

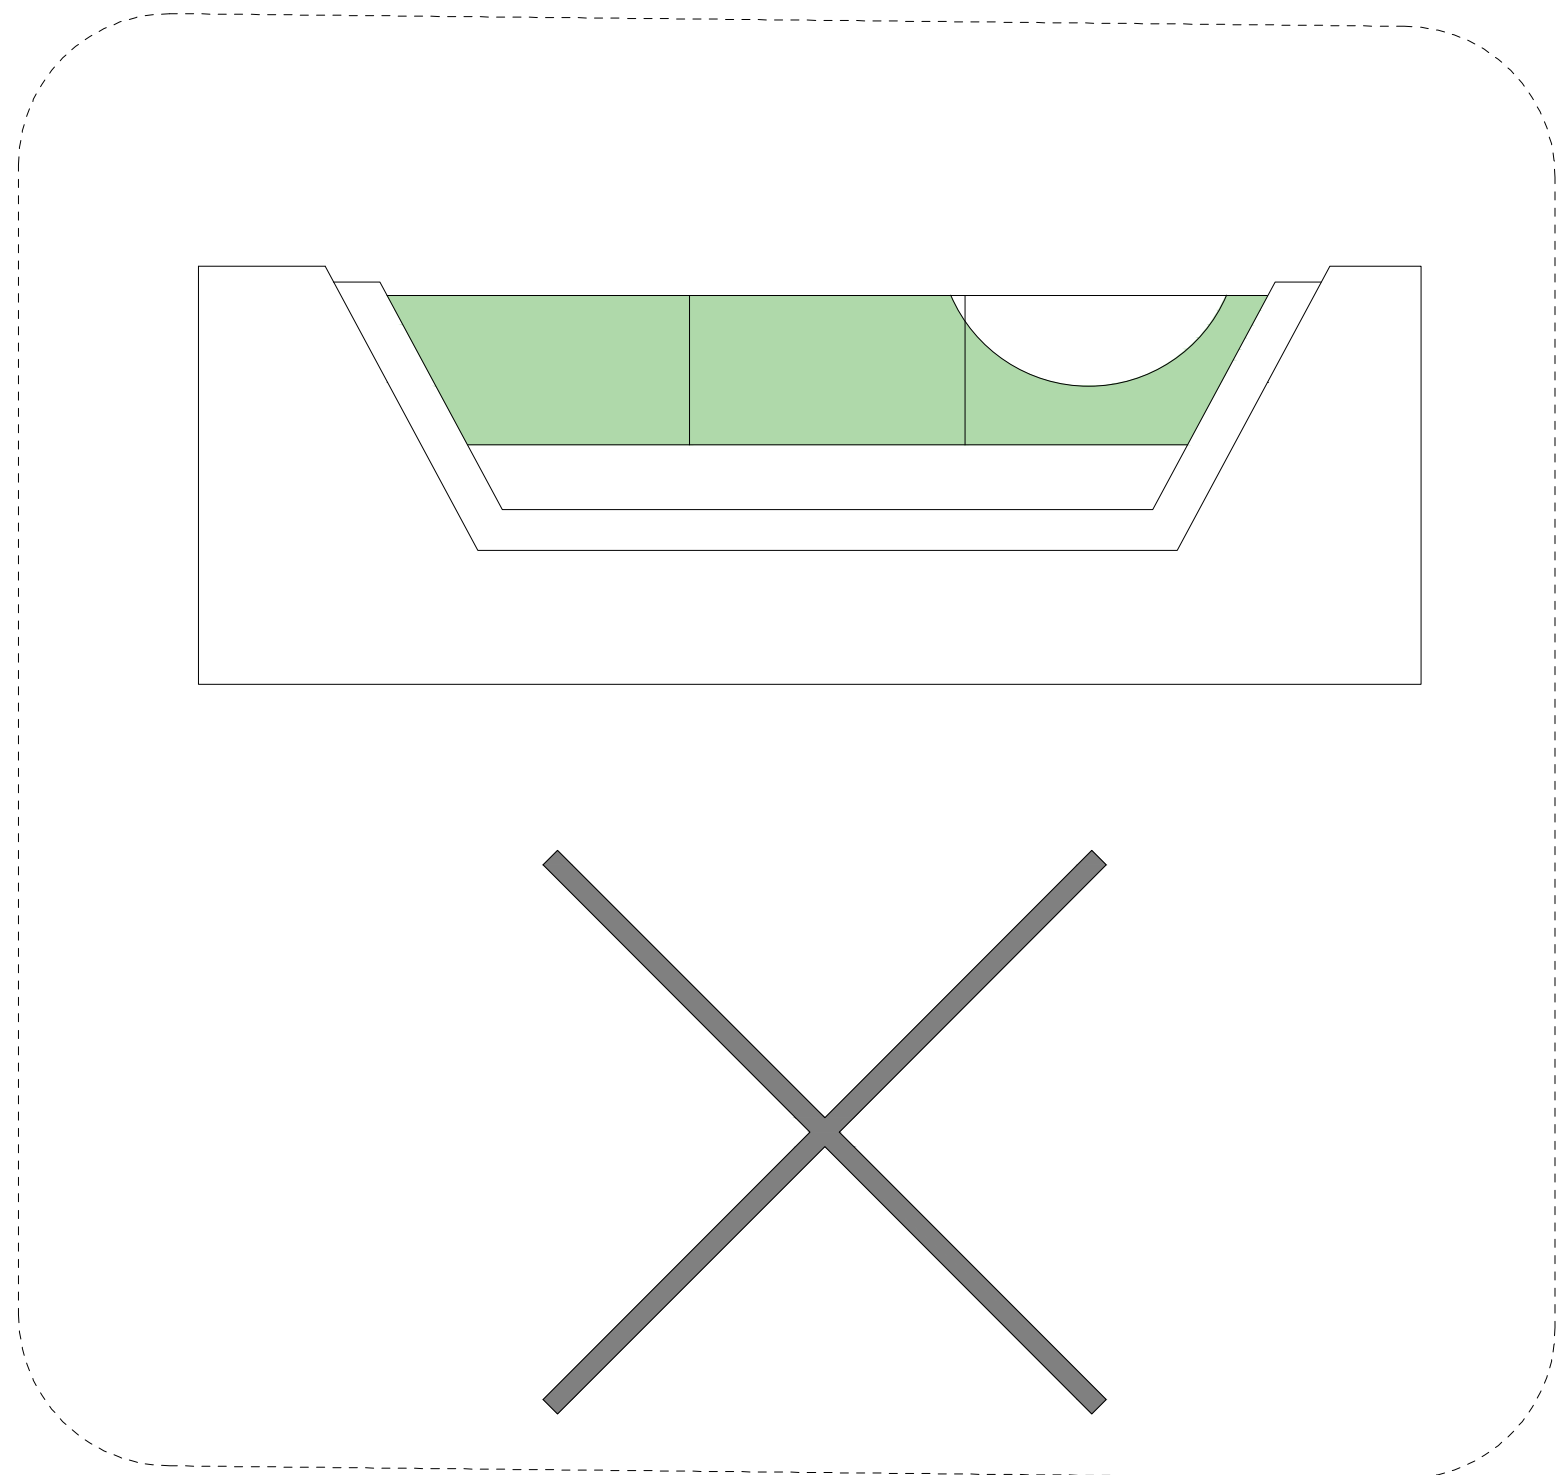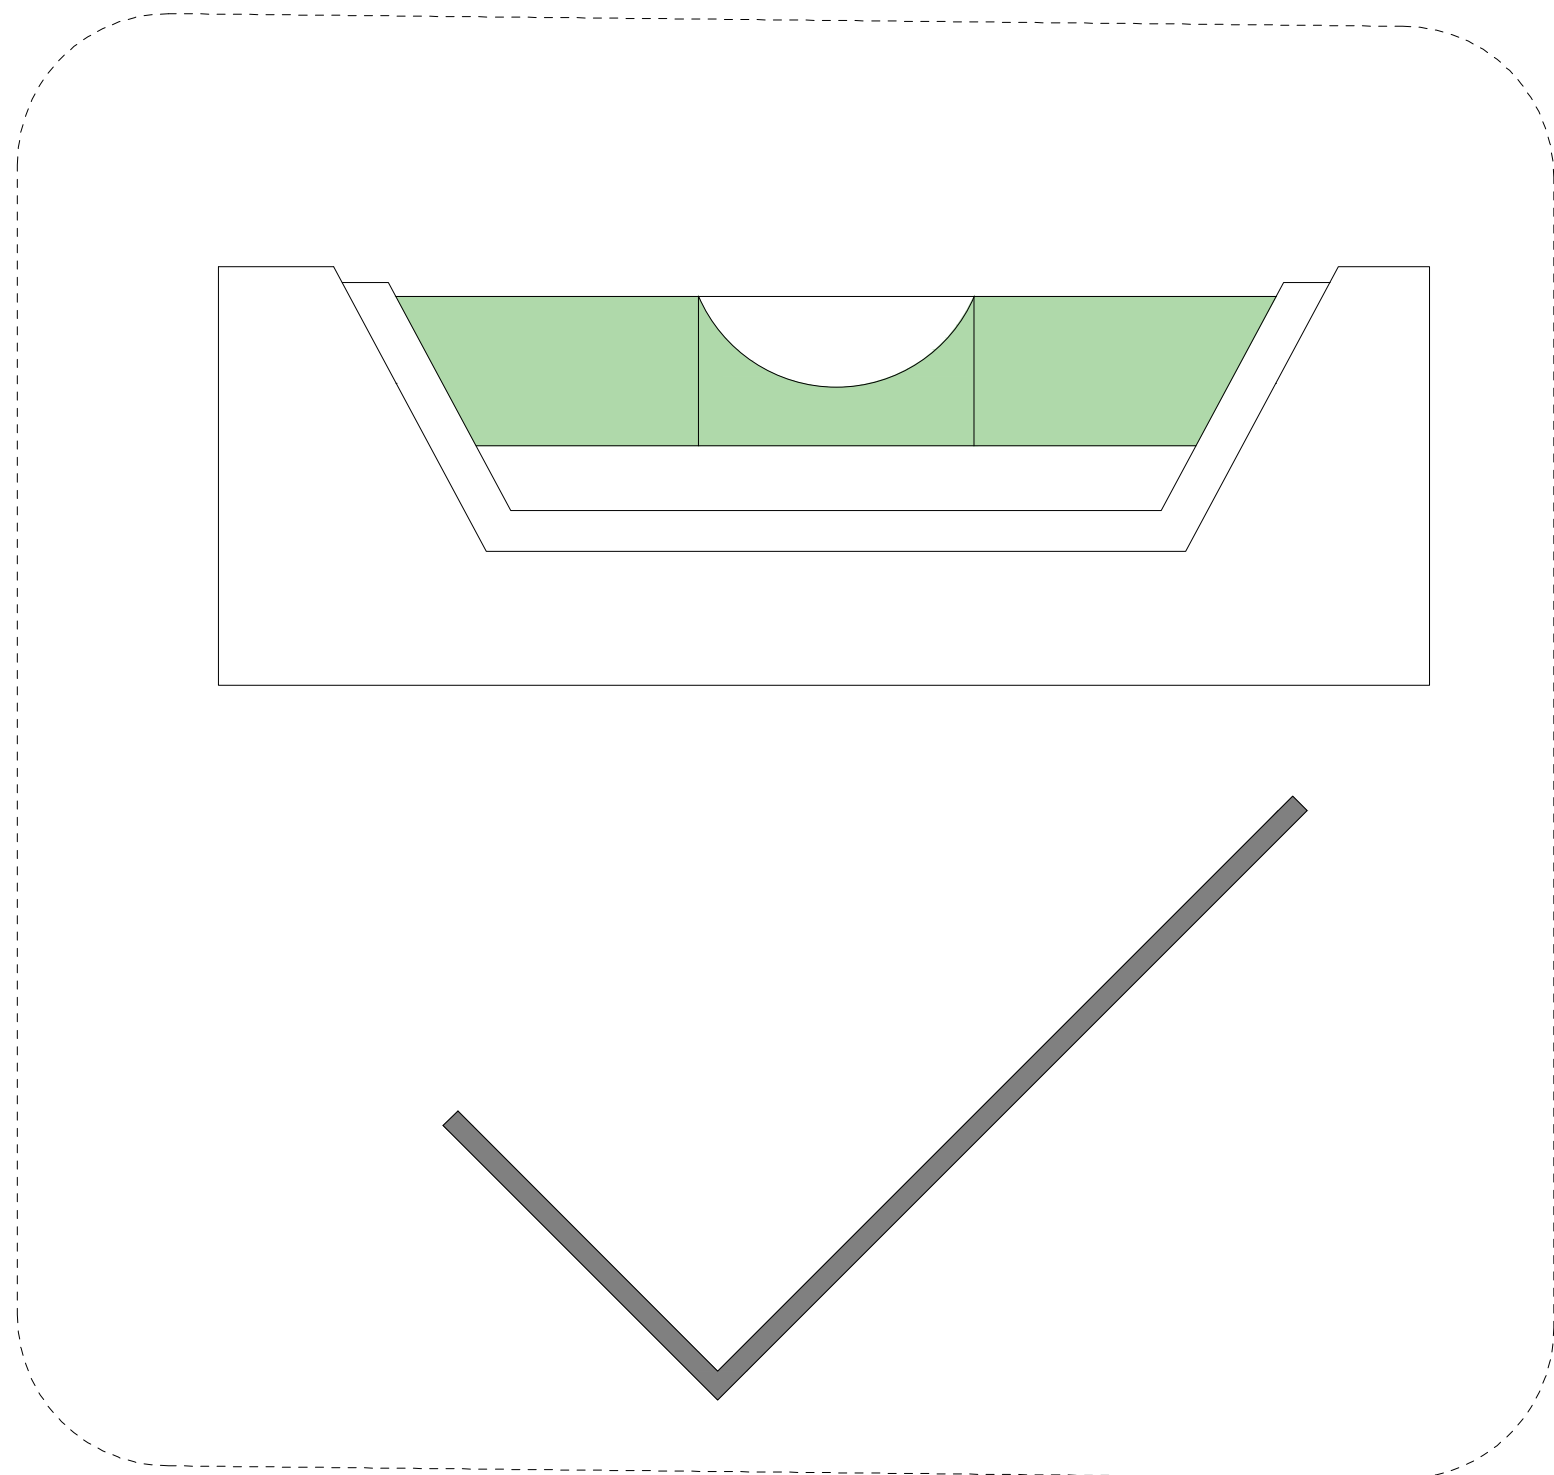

STEP 2


Install the Hinge Side Jamb

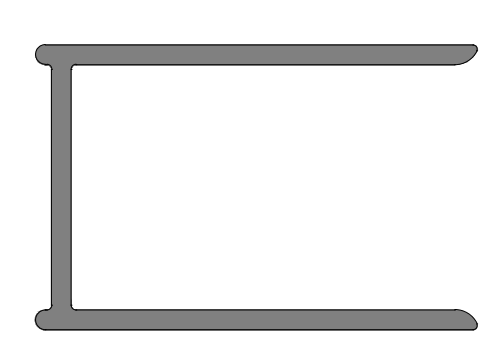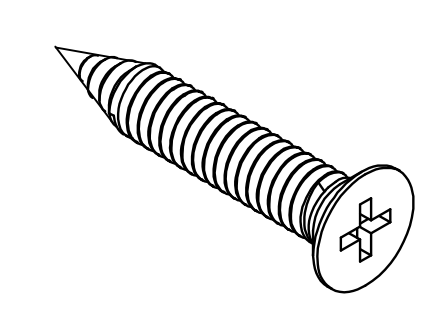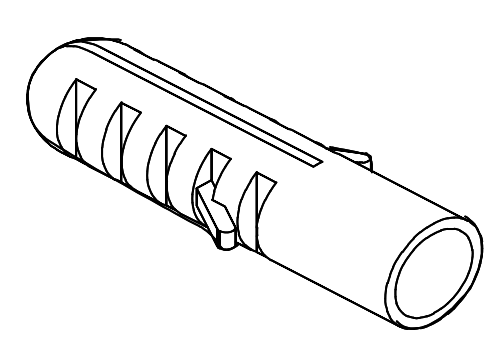B		X1
K		X3
L		X3

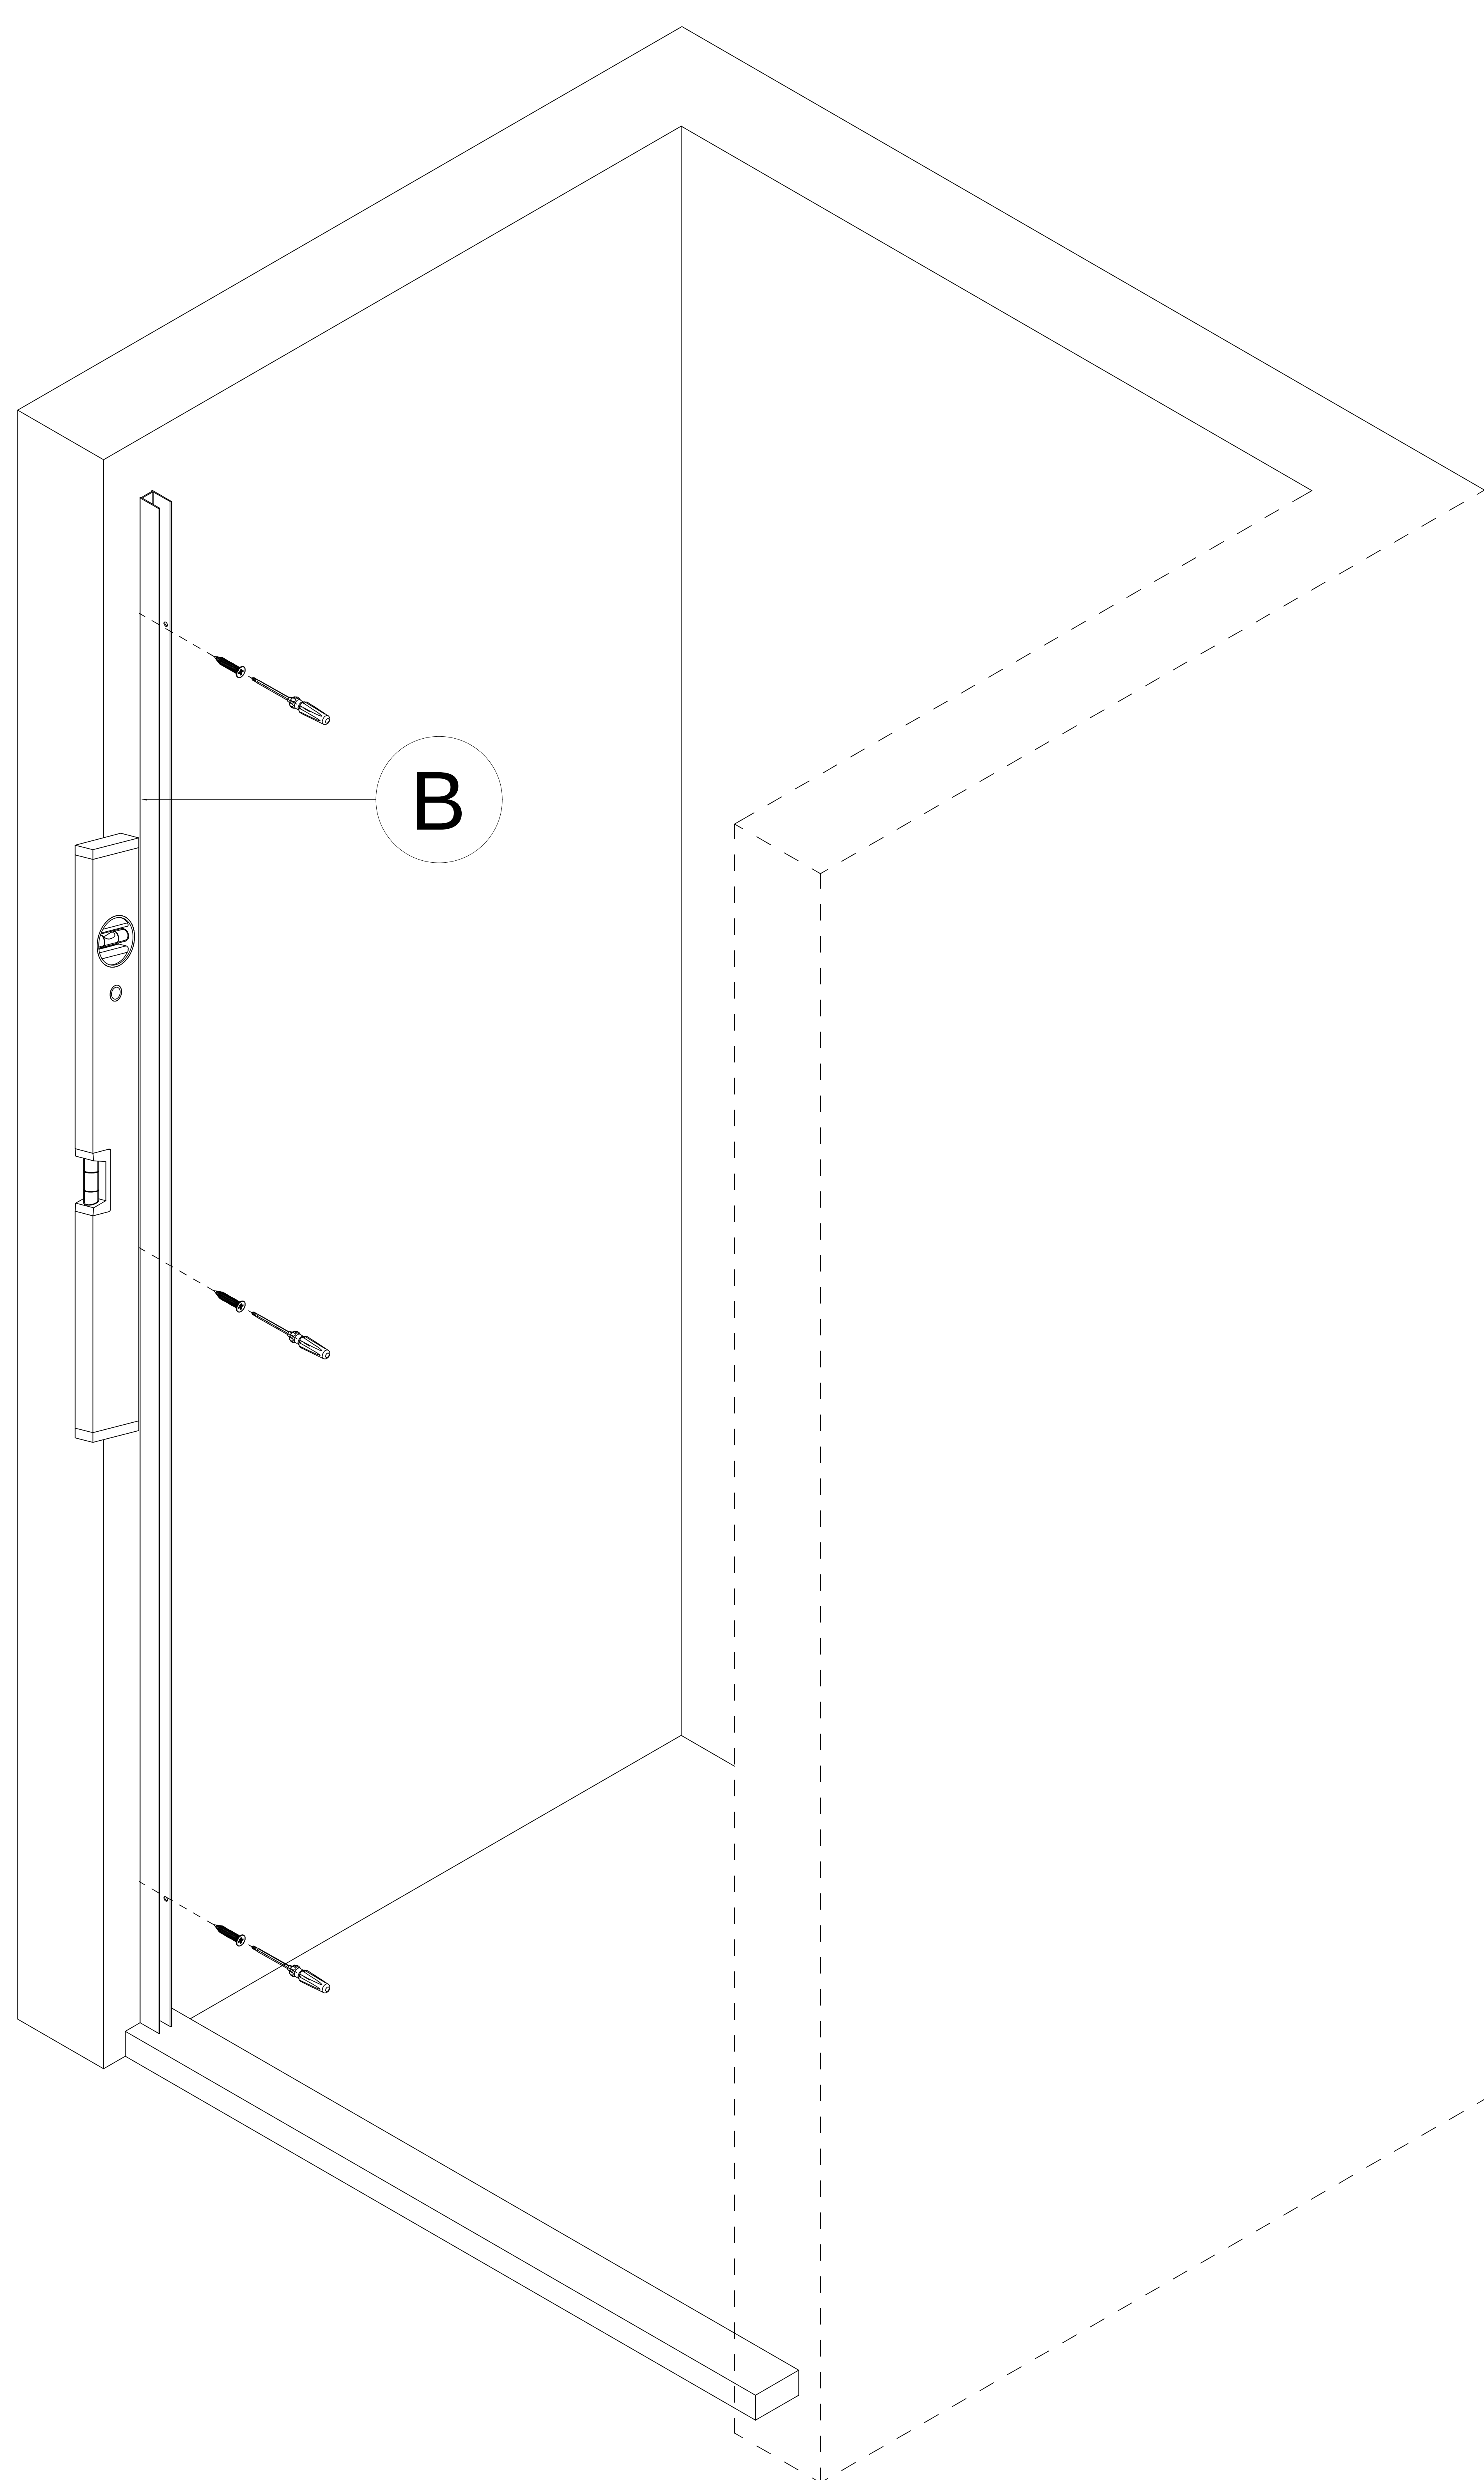


Place the hinge side jamb (B) at the installation position, ensuring it is perpendicular to the ground and wall

2-1

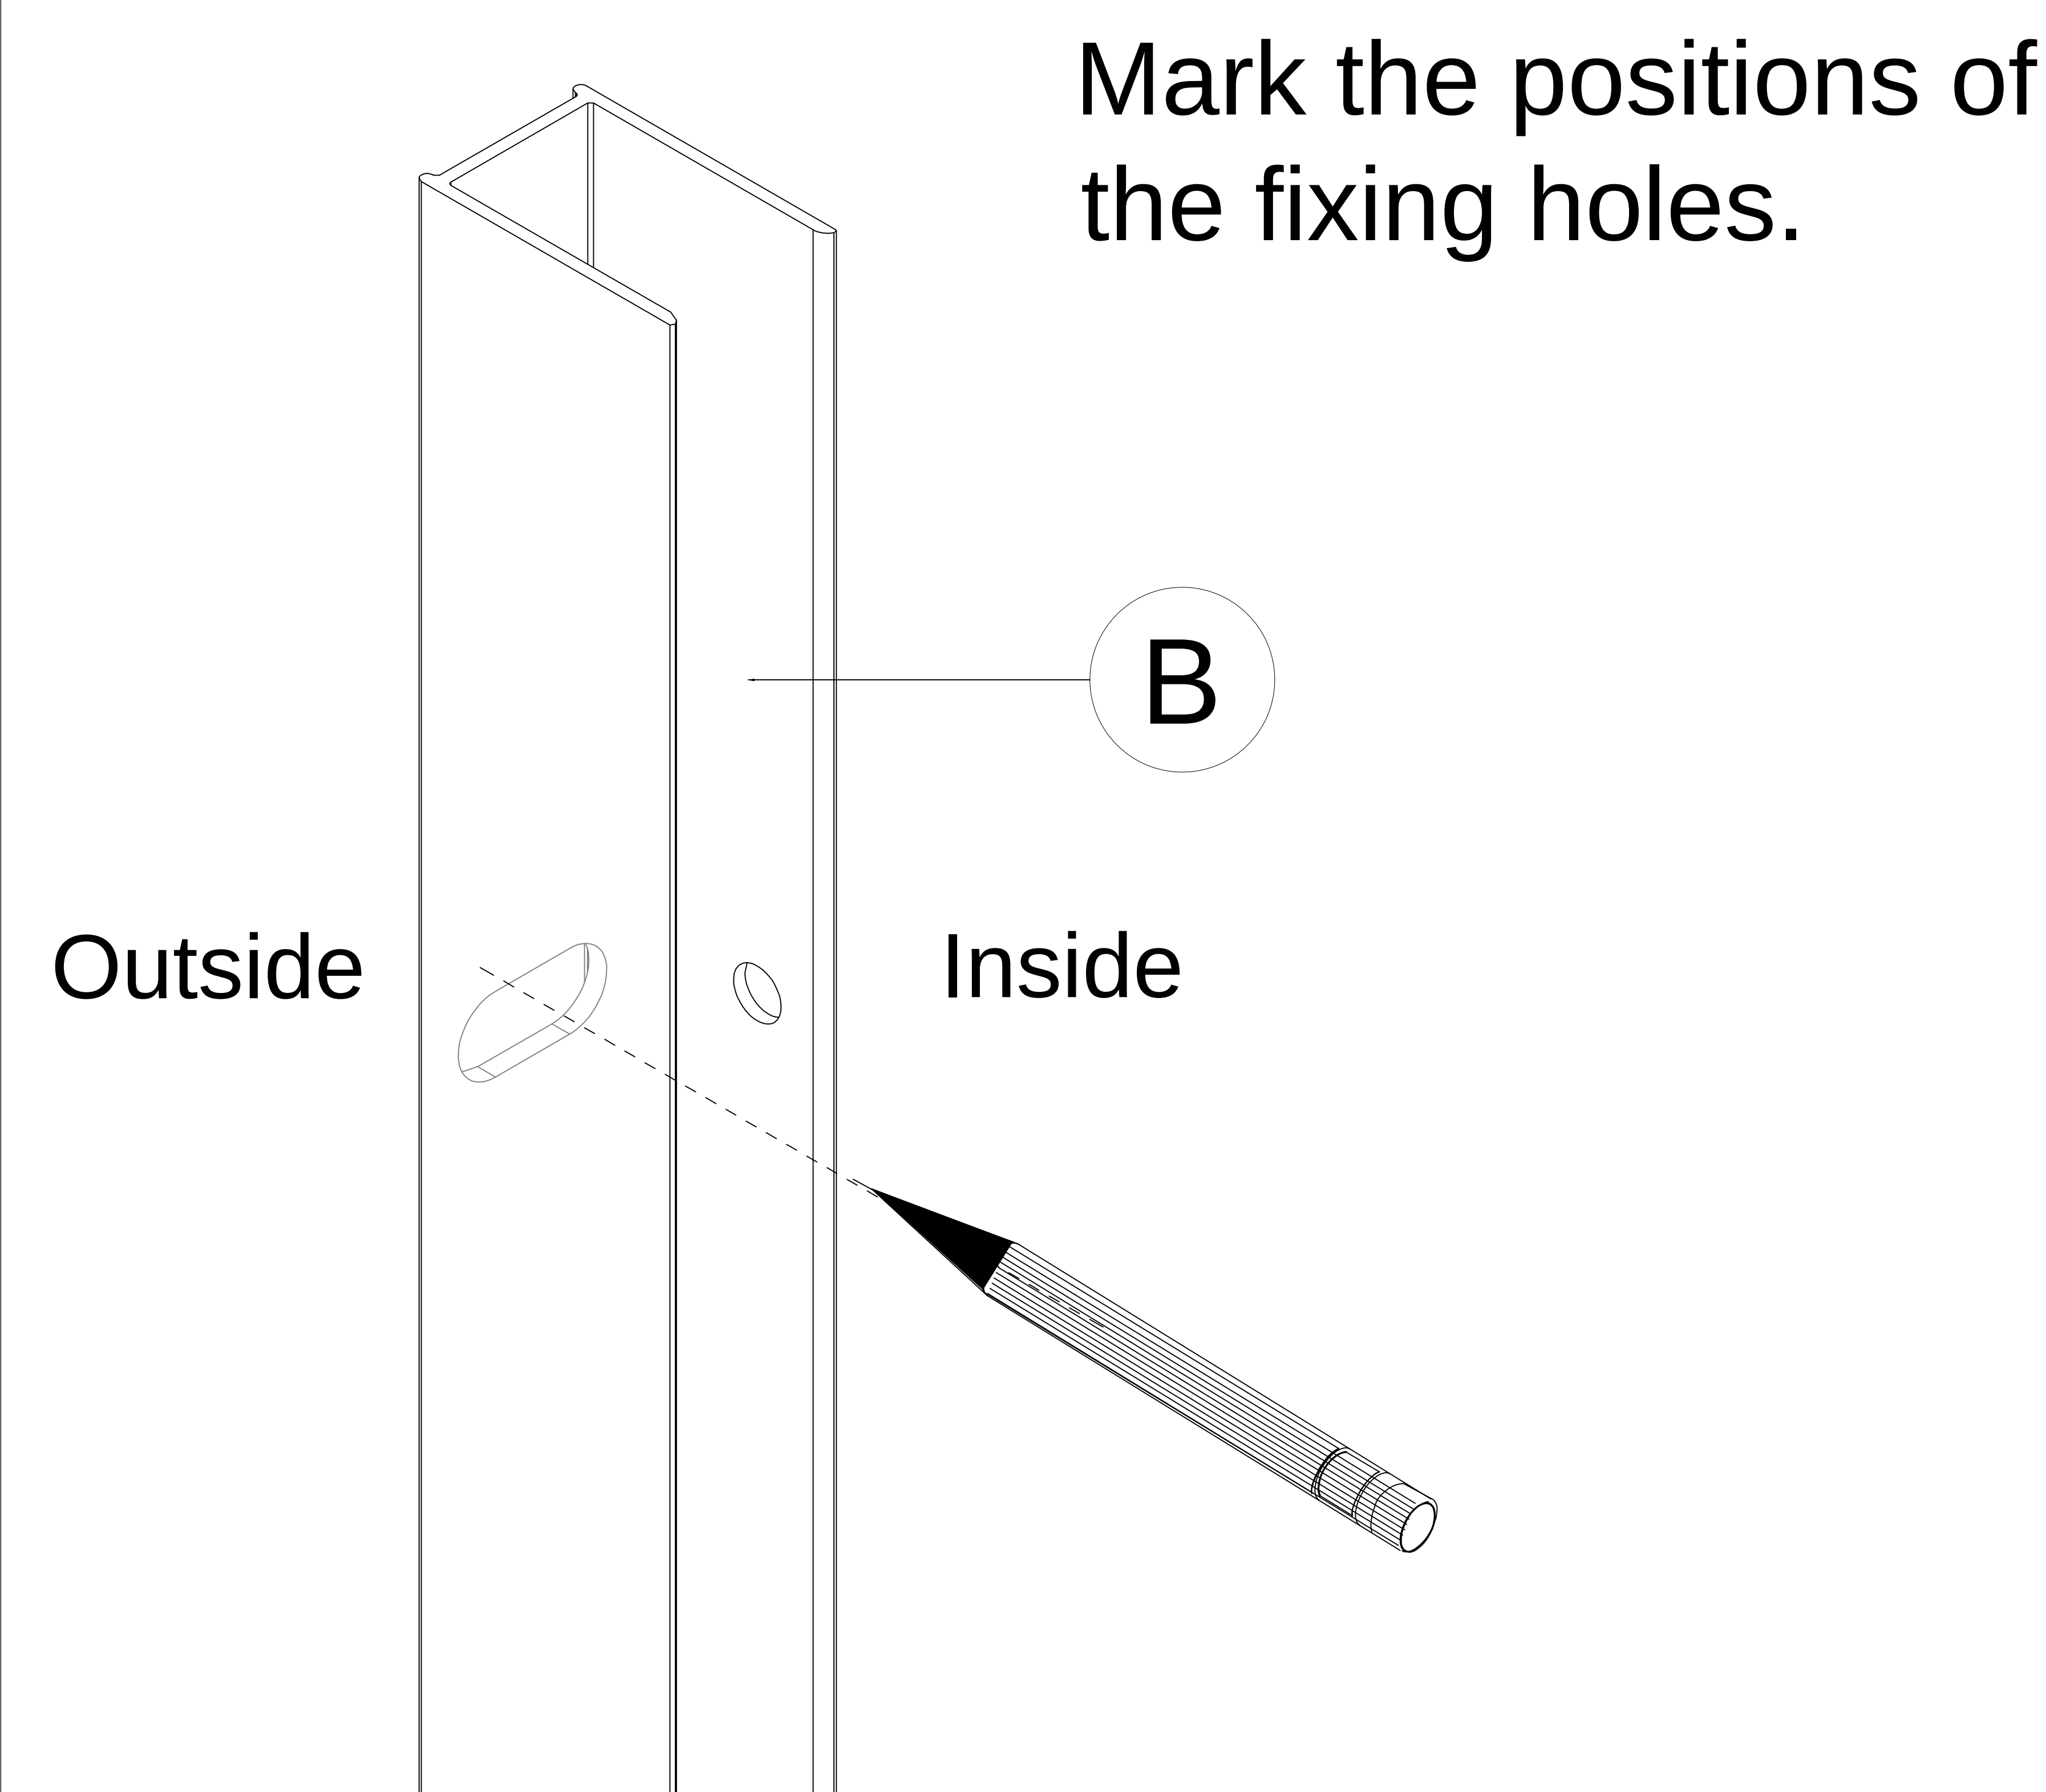


2-2

Drill 6mm (30/127") holes at the marked positions, insert the hollow wall plugs (L)

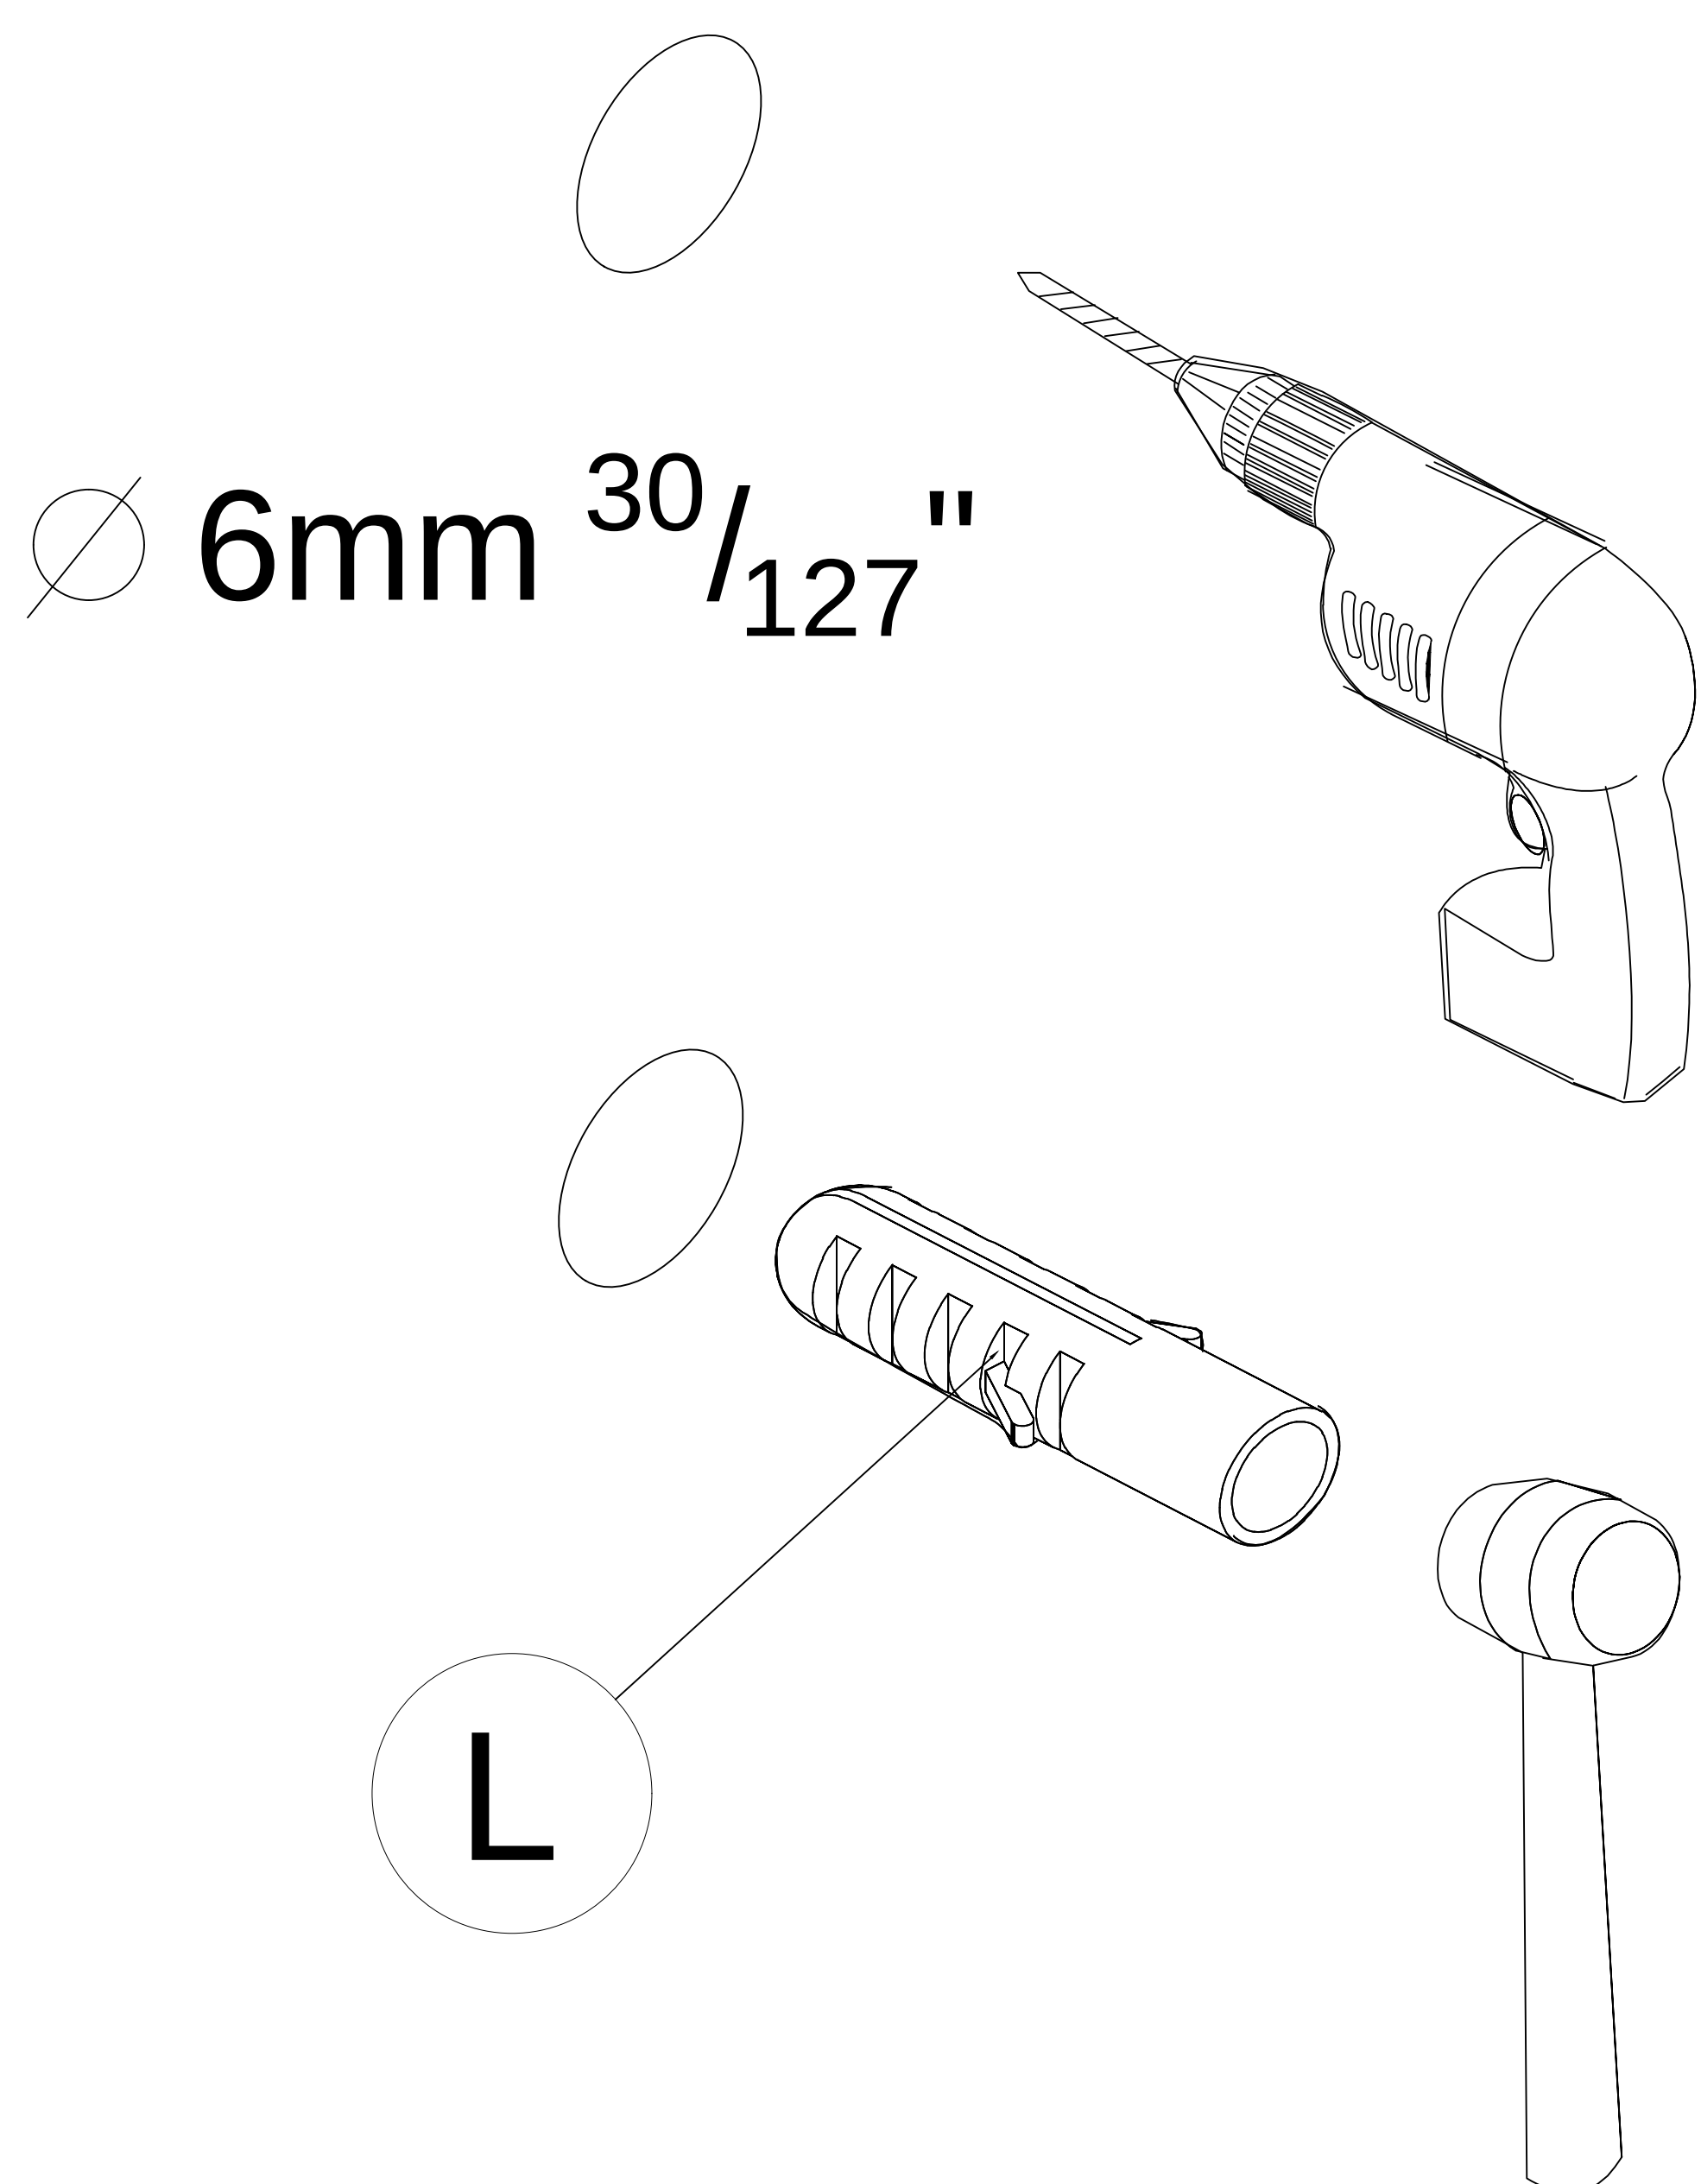

2-3


fix with screws (K)

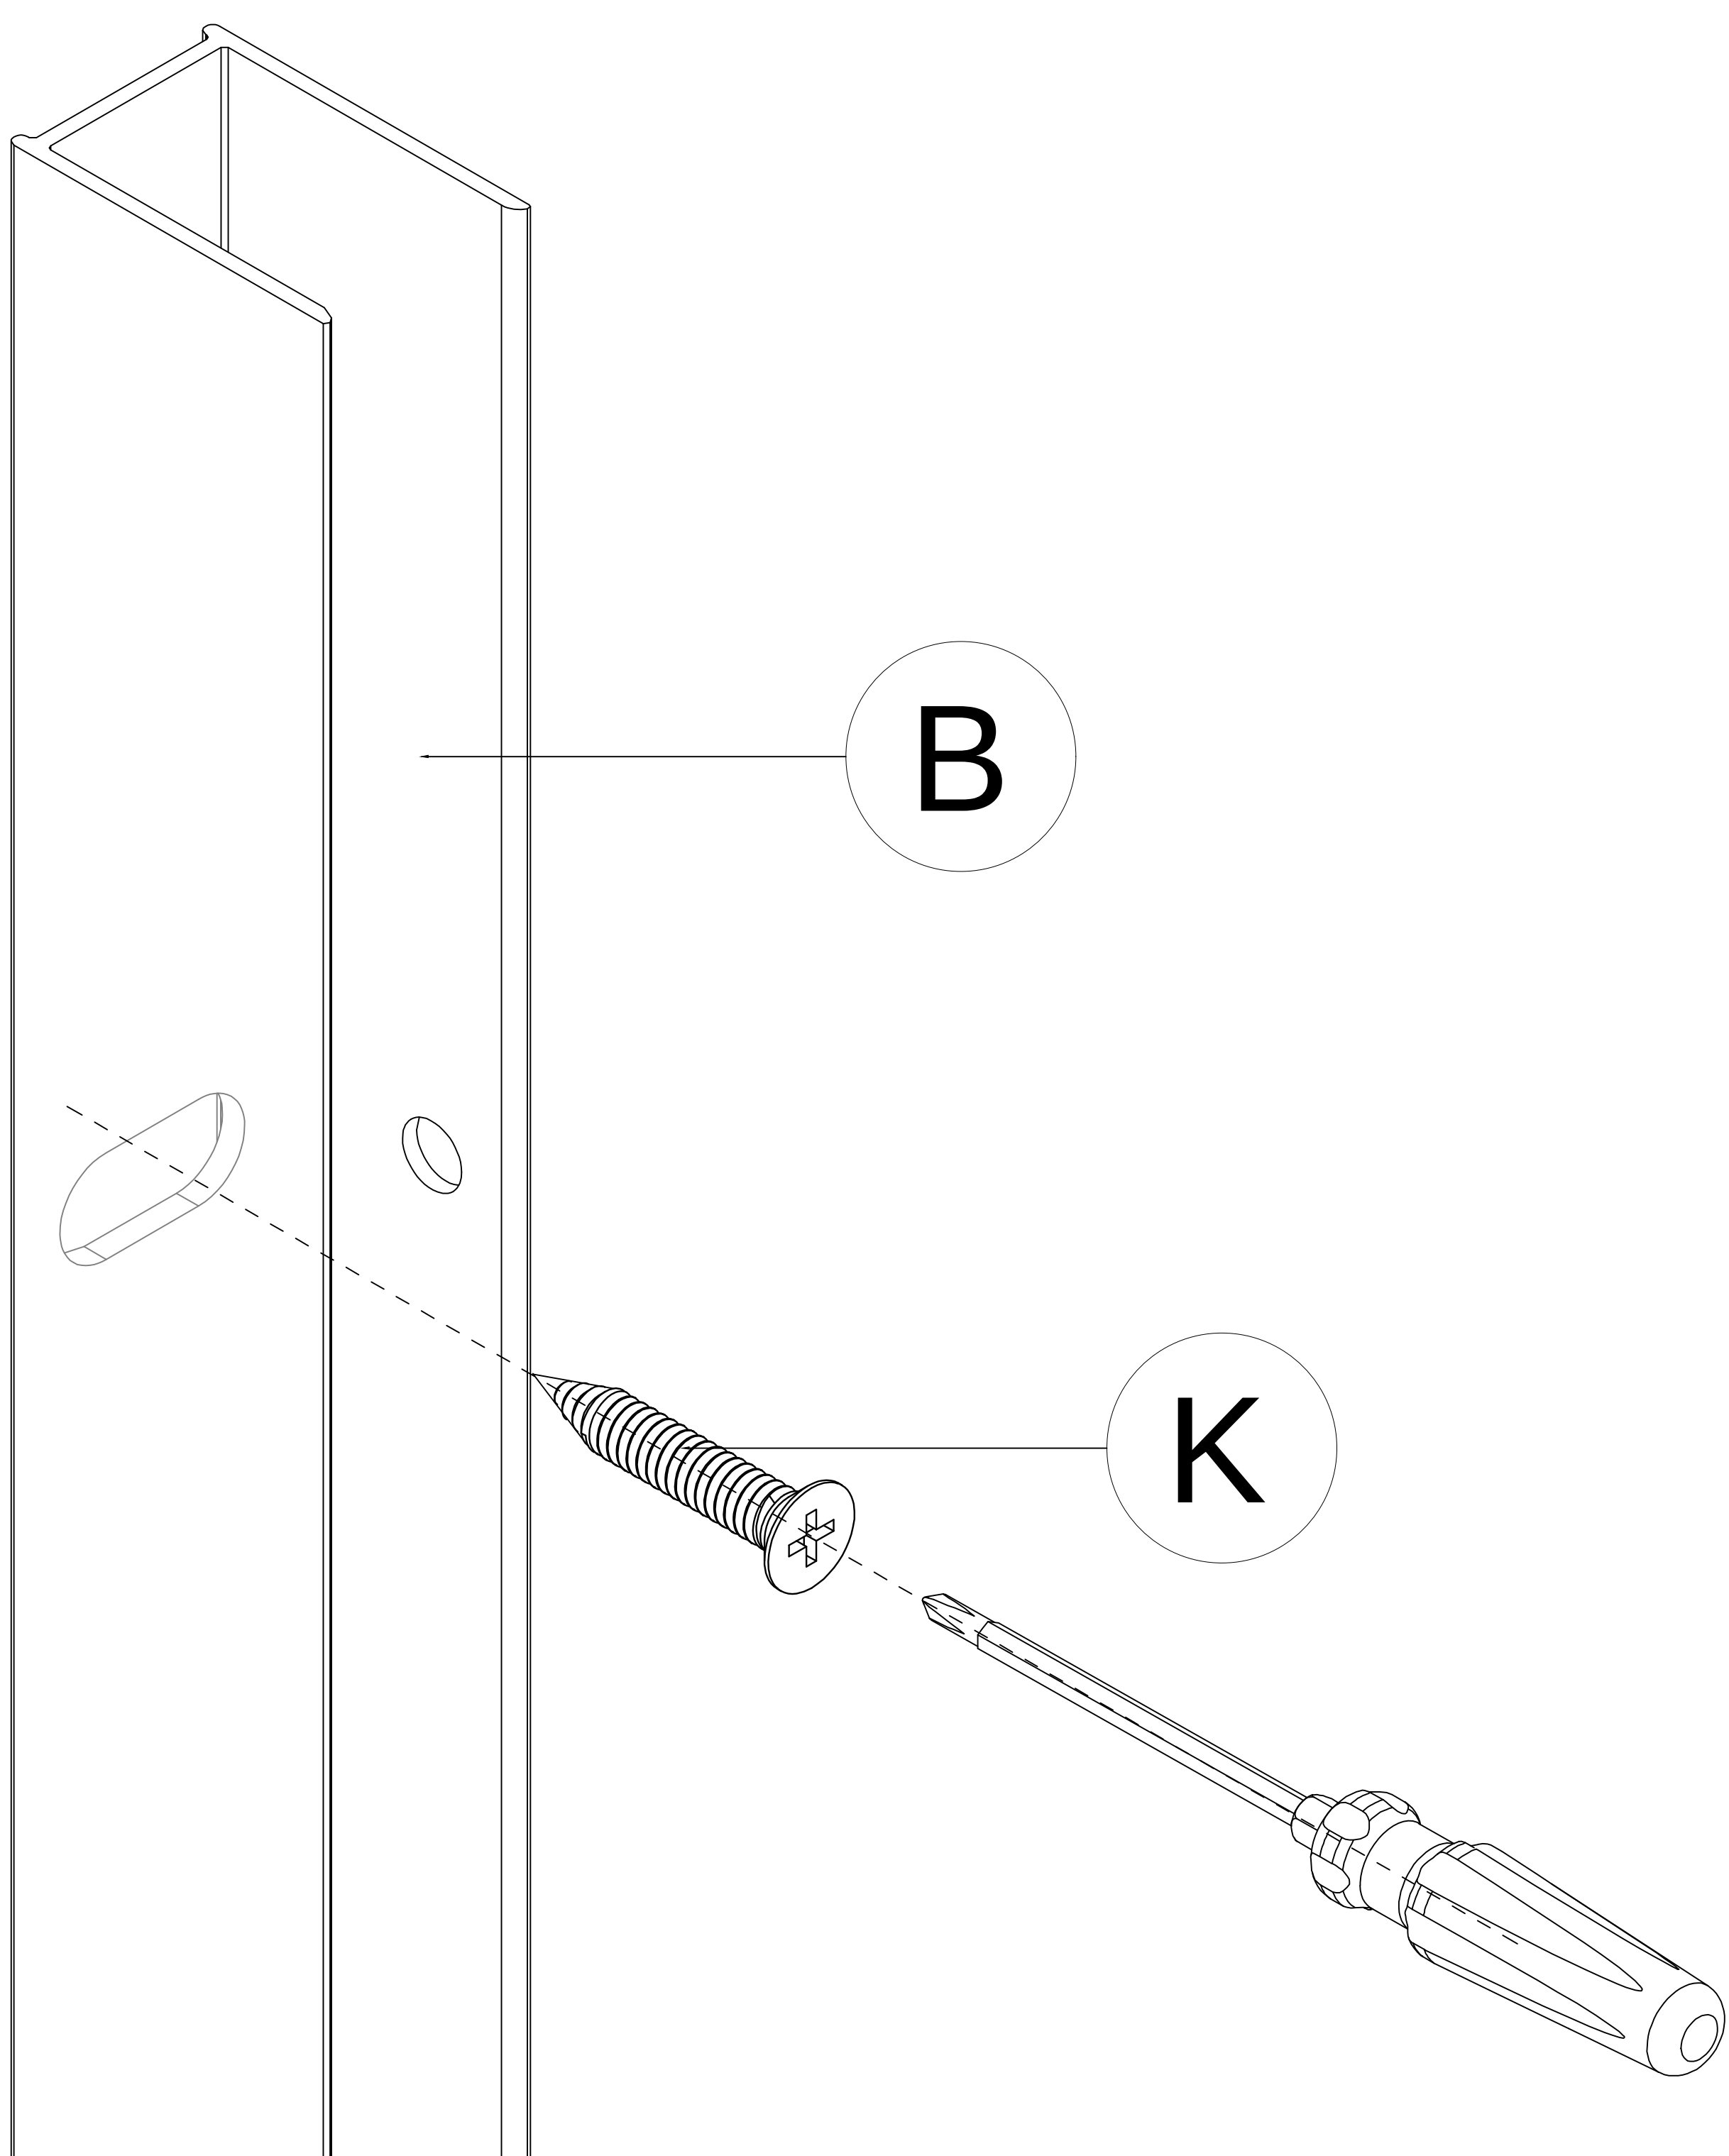


STEP 3

Install the Movable Glass Door



A

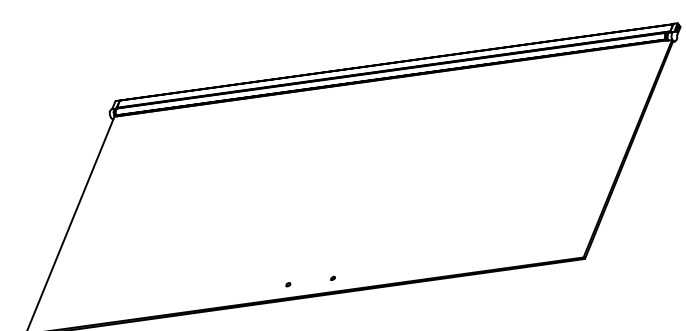



X1

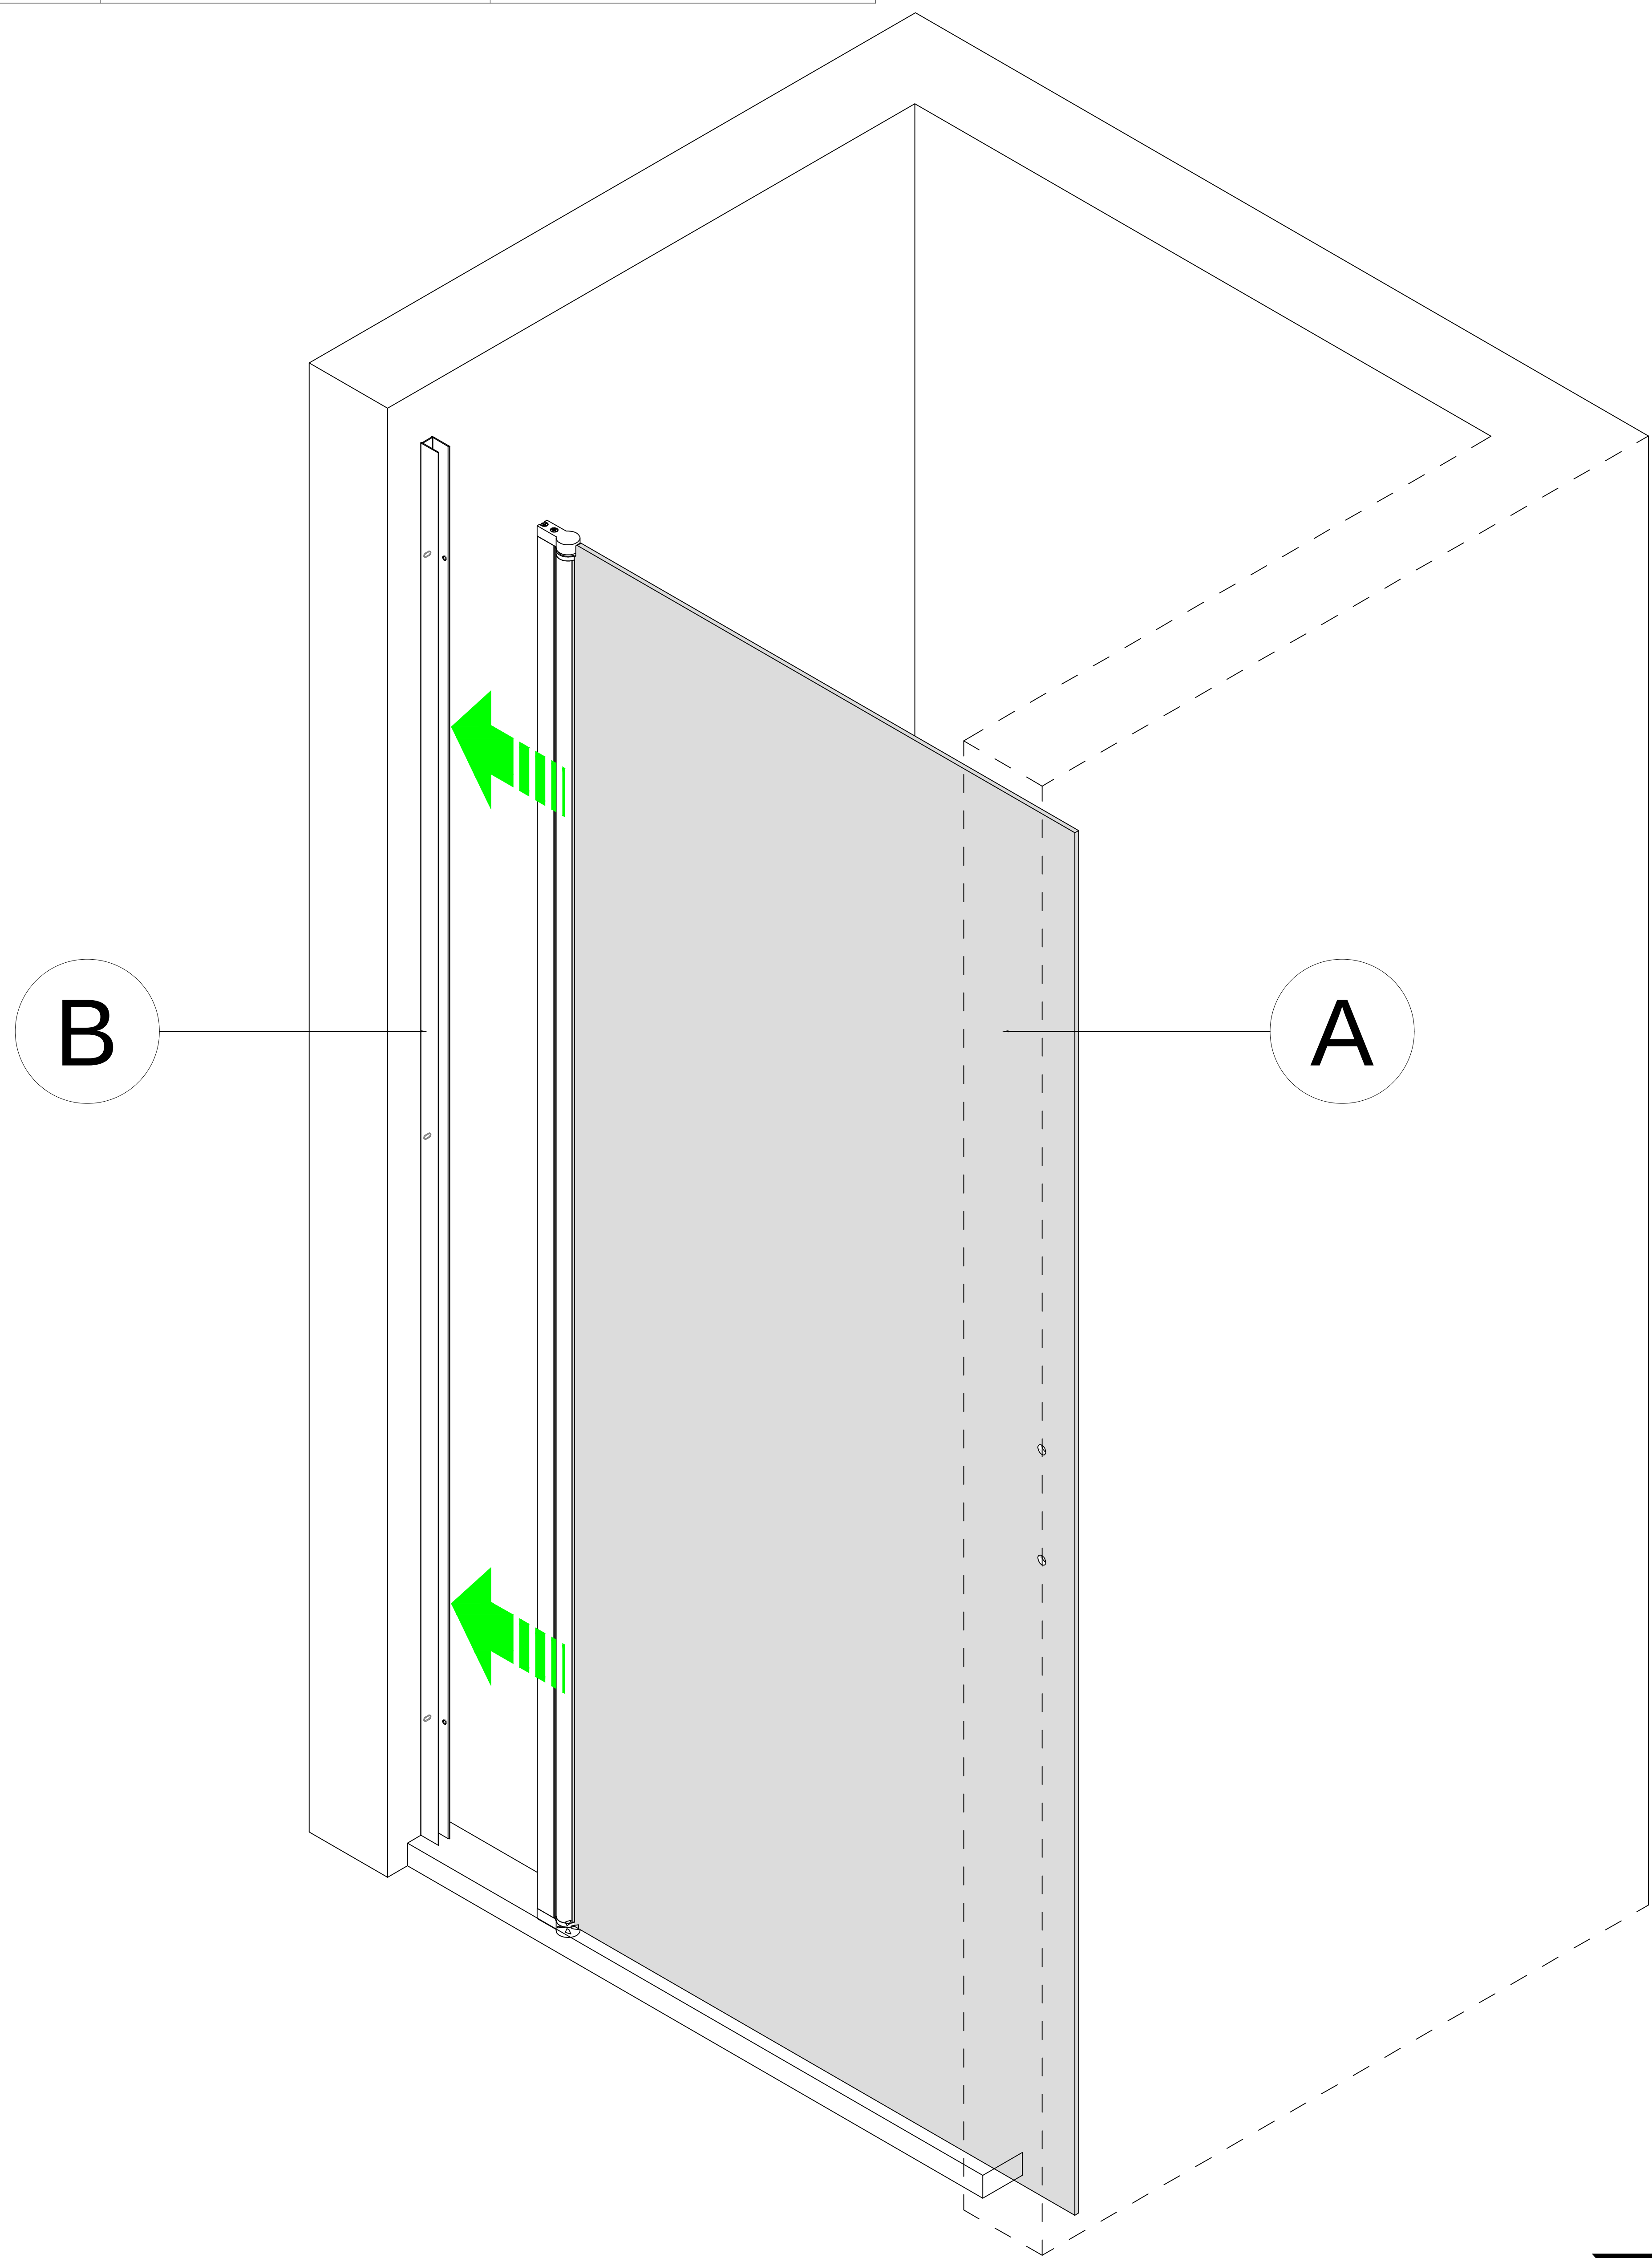

Install the movable glass door (A)
onto the hinge side jamb (B)


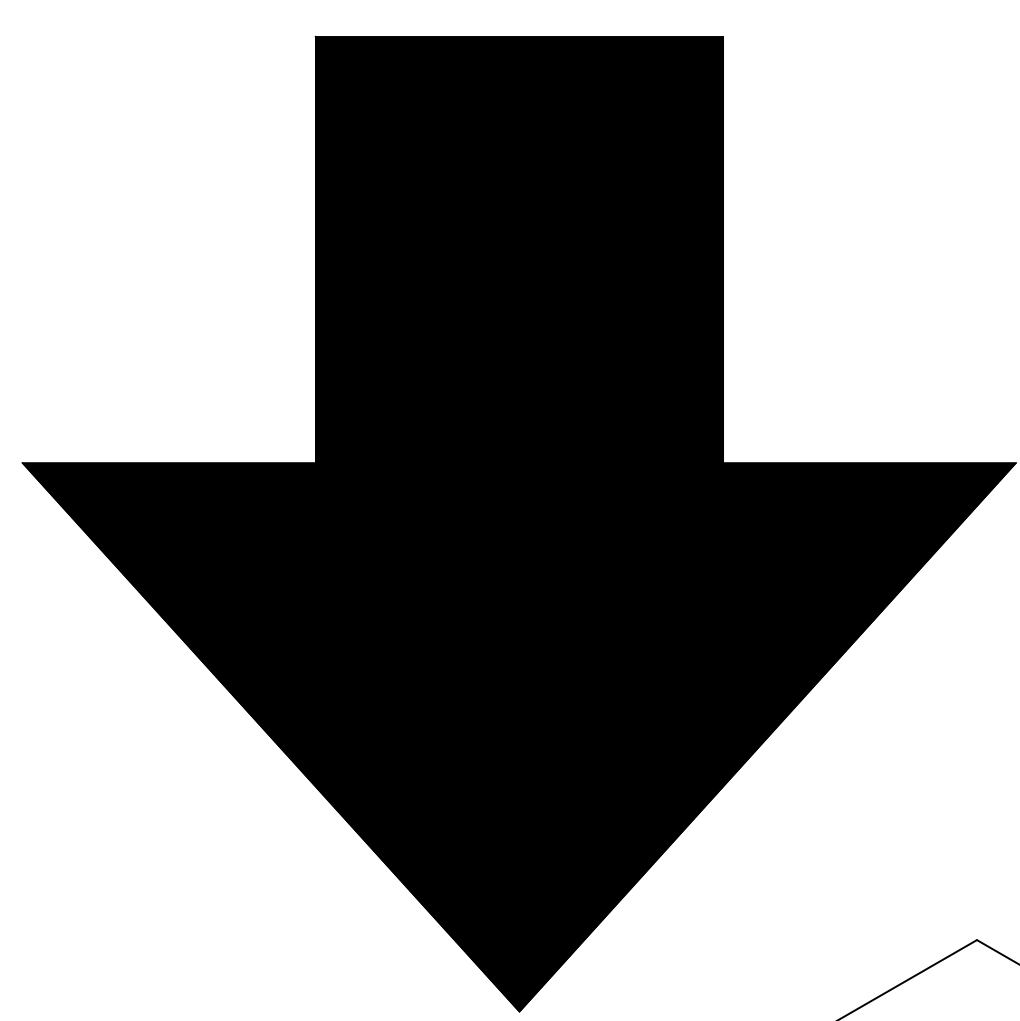
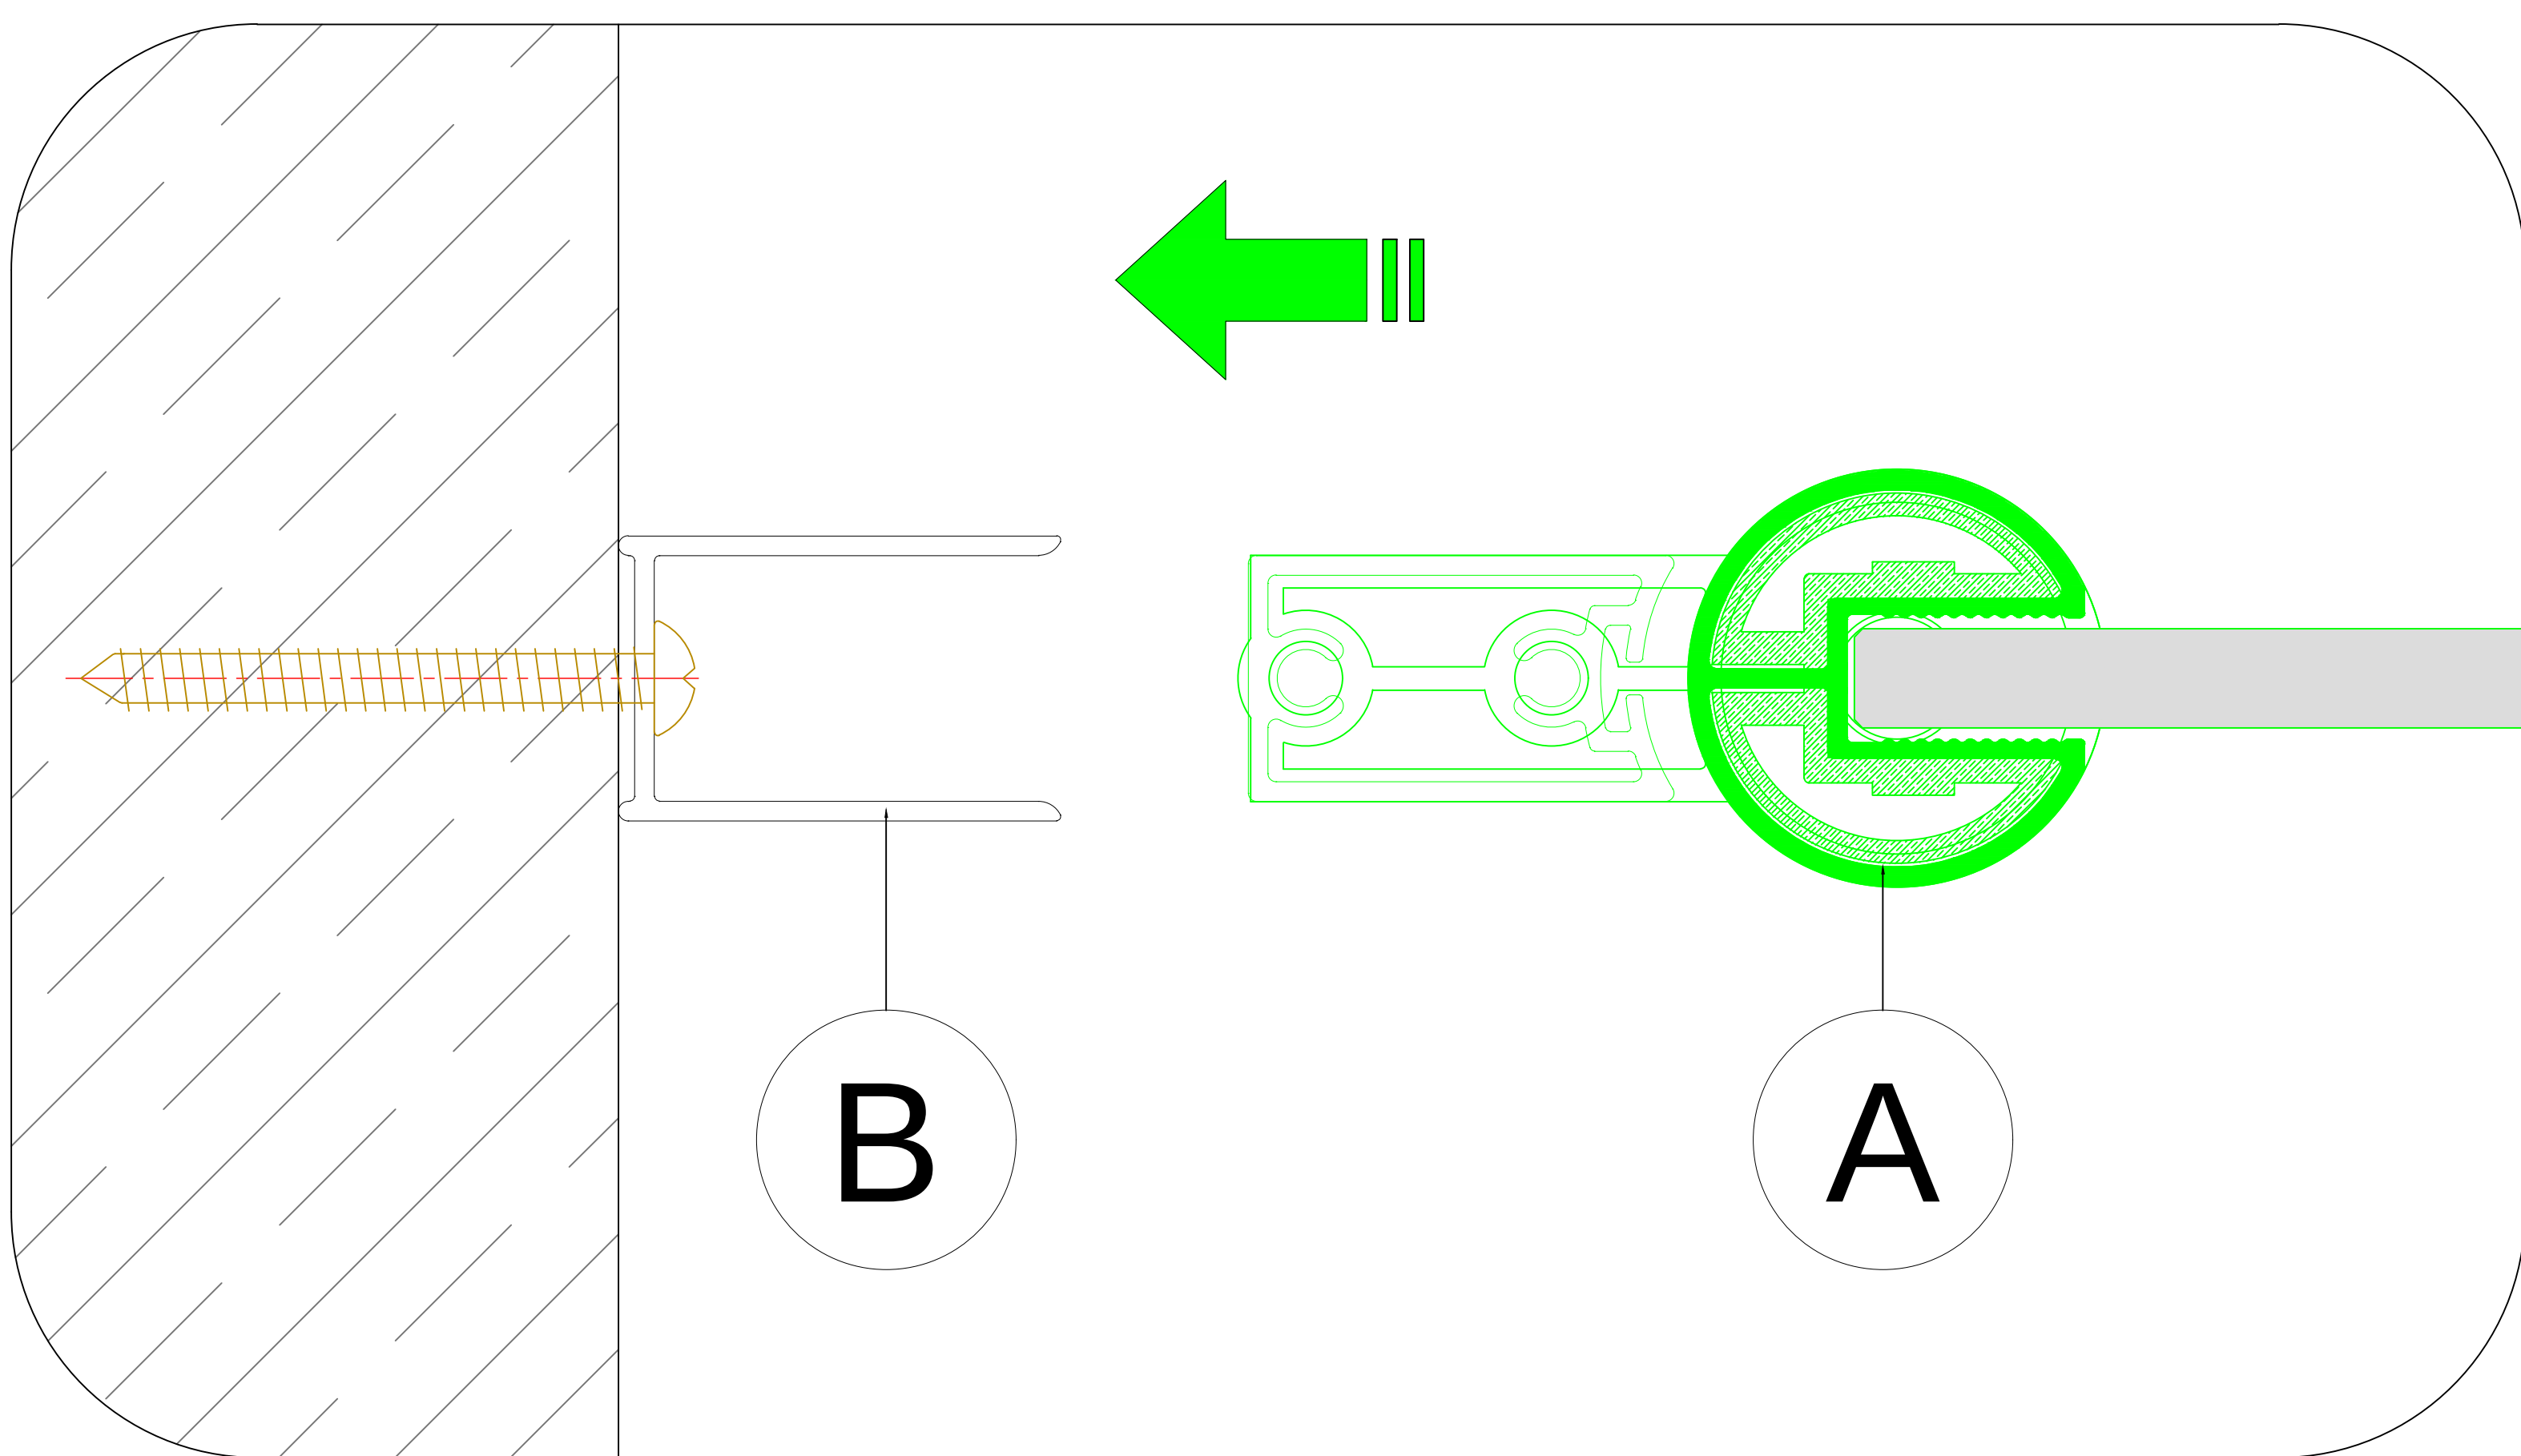



During installation,
note that the glass notch is at
the top of the door.

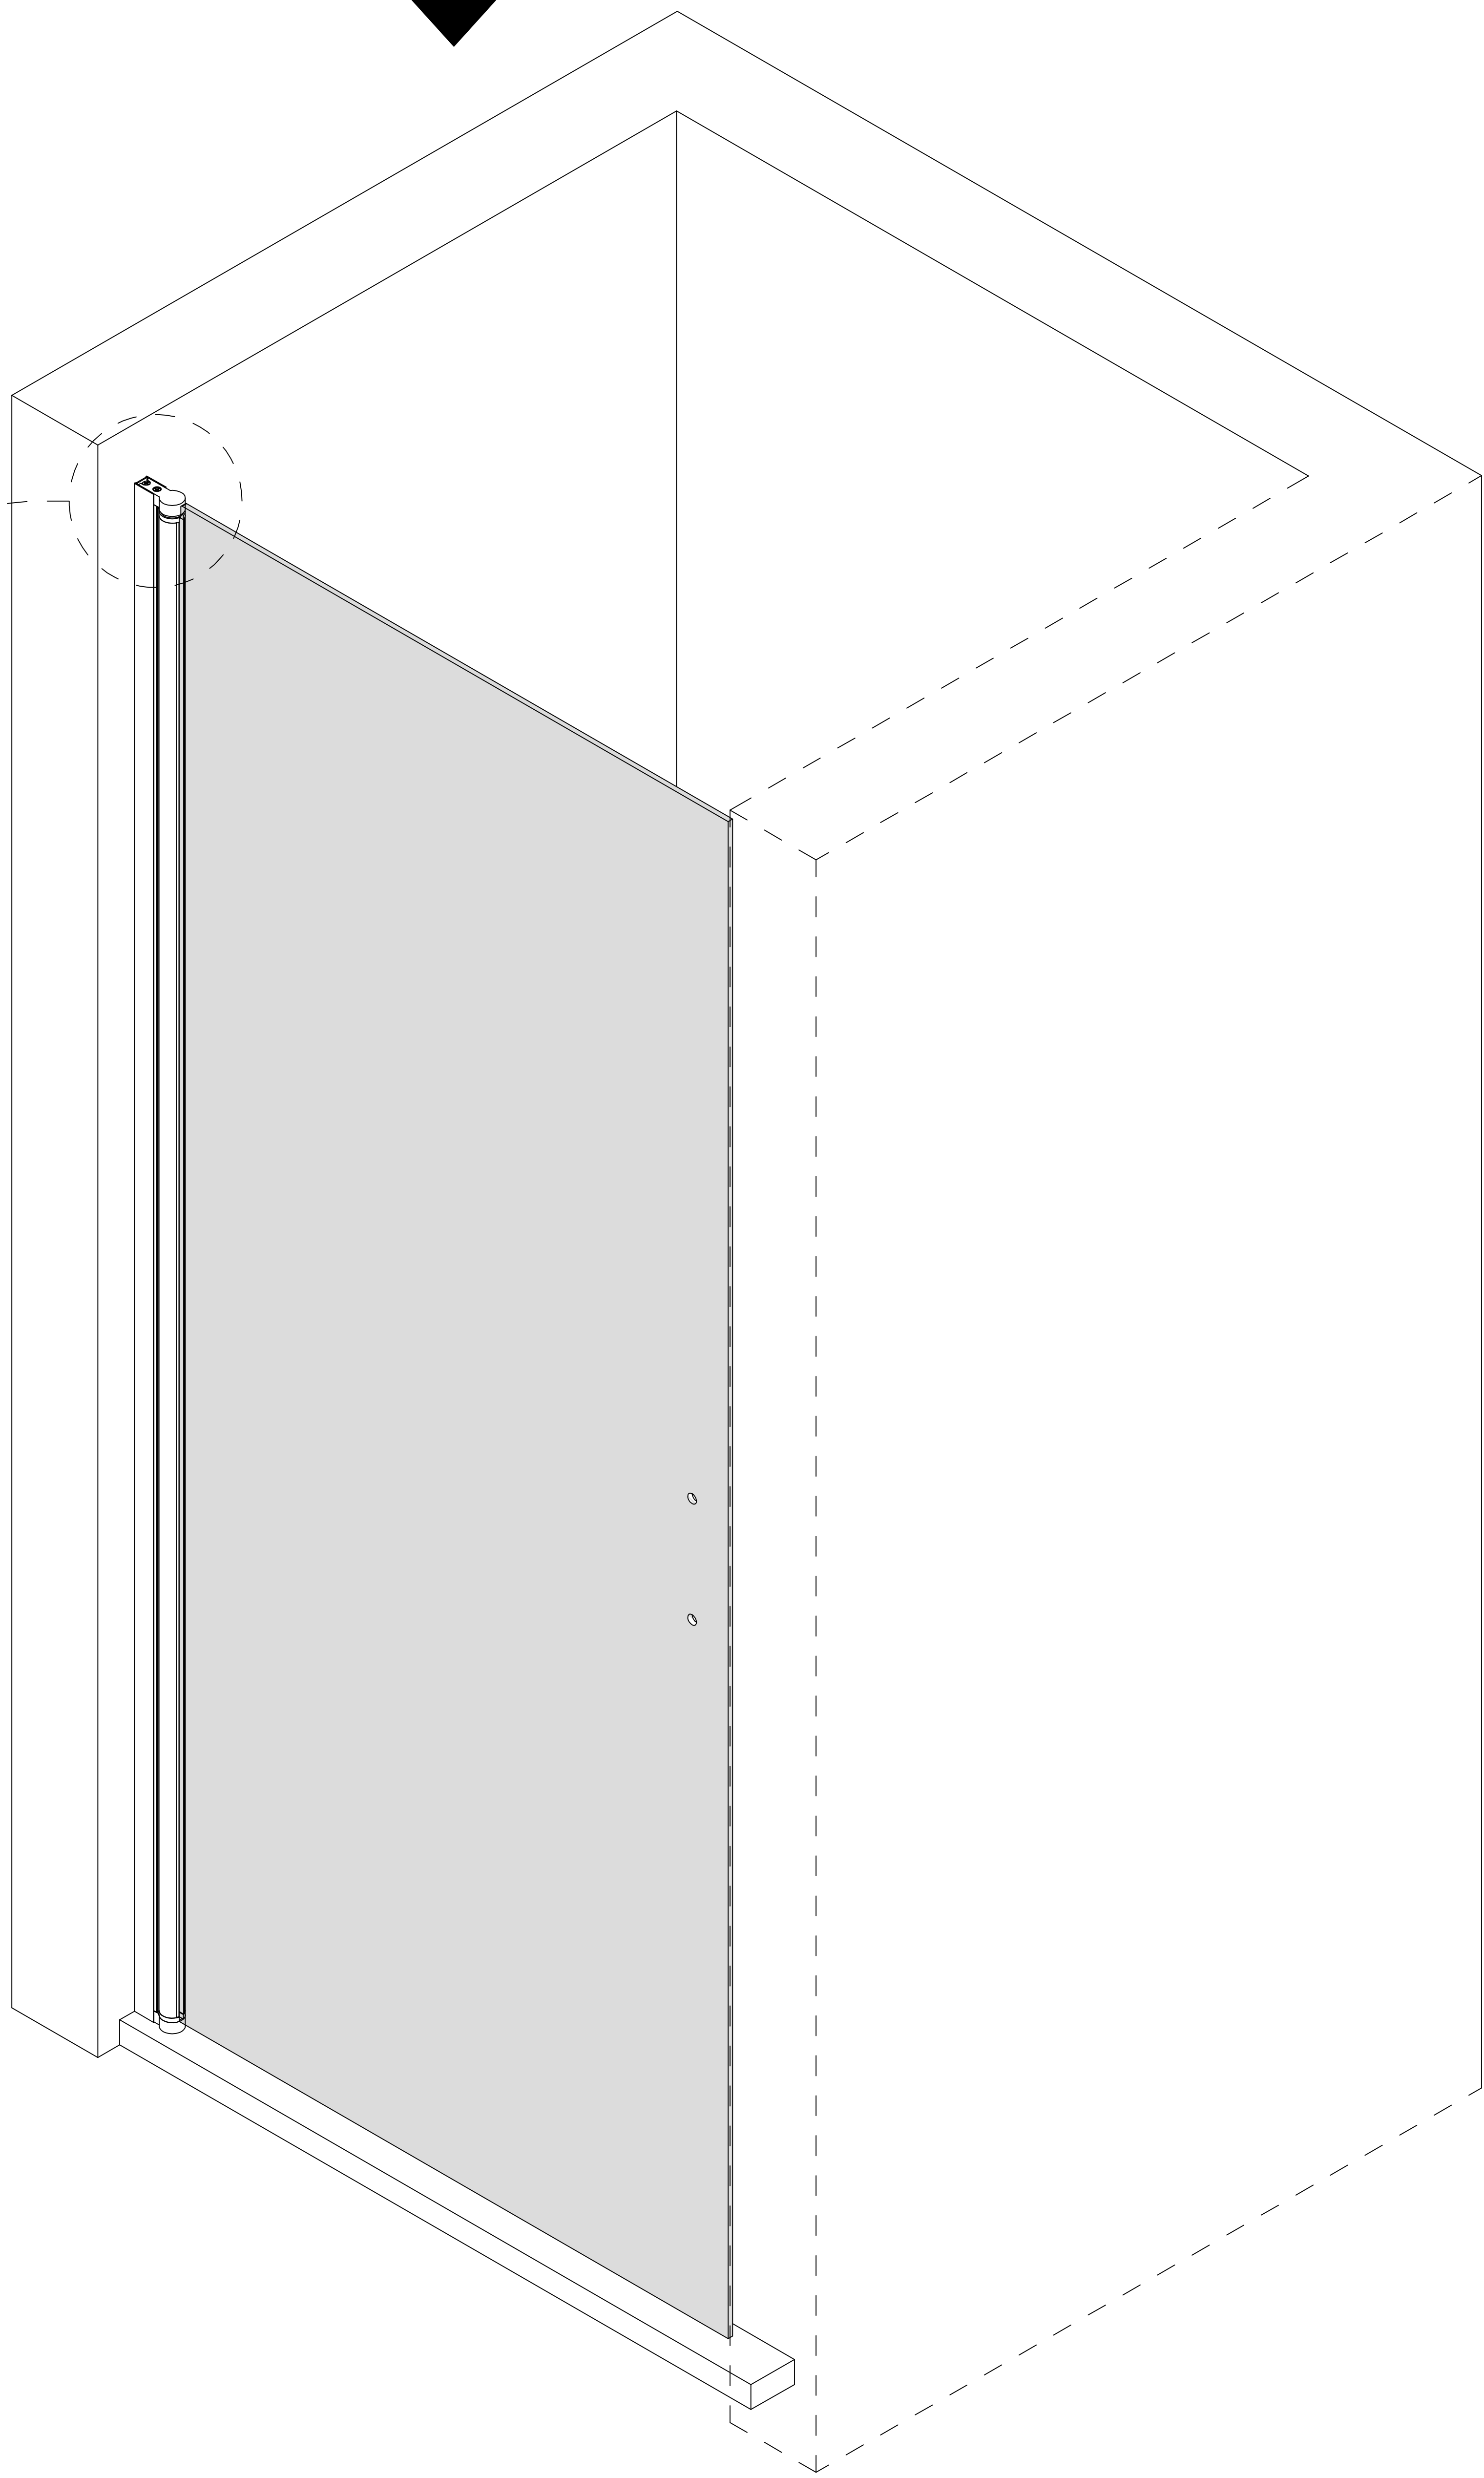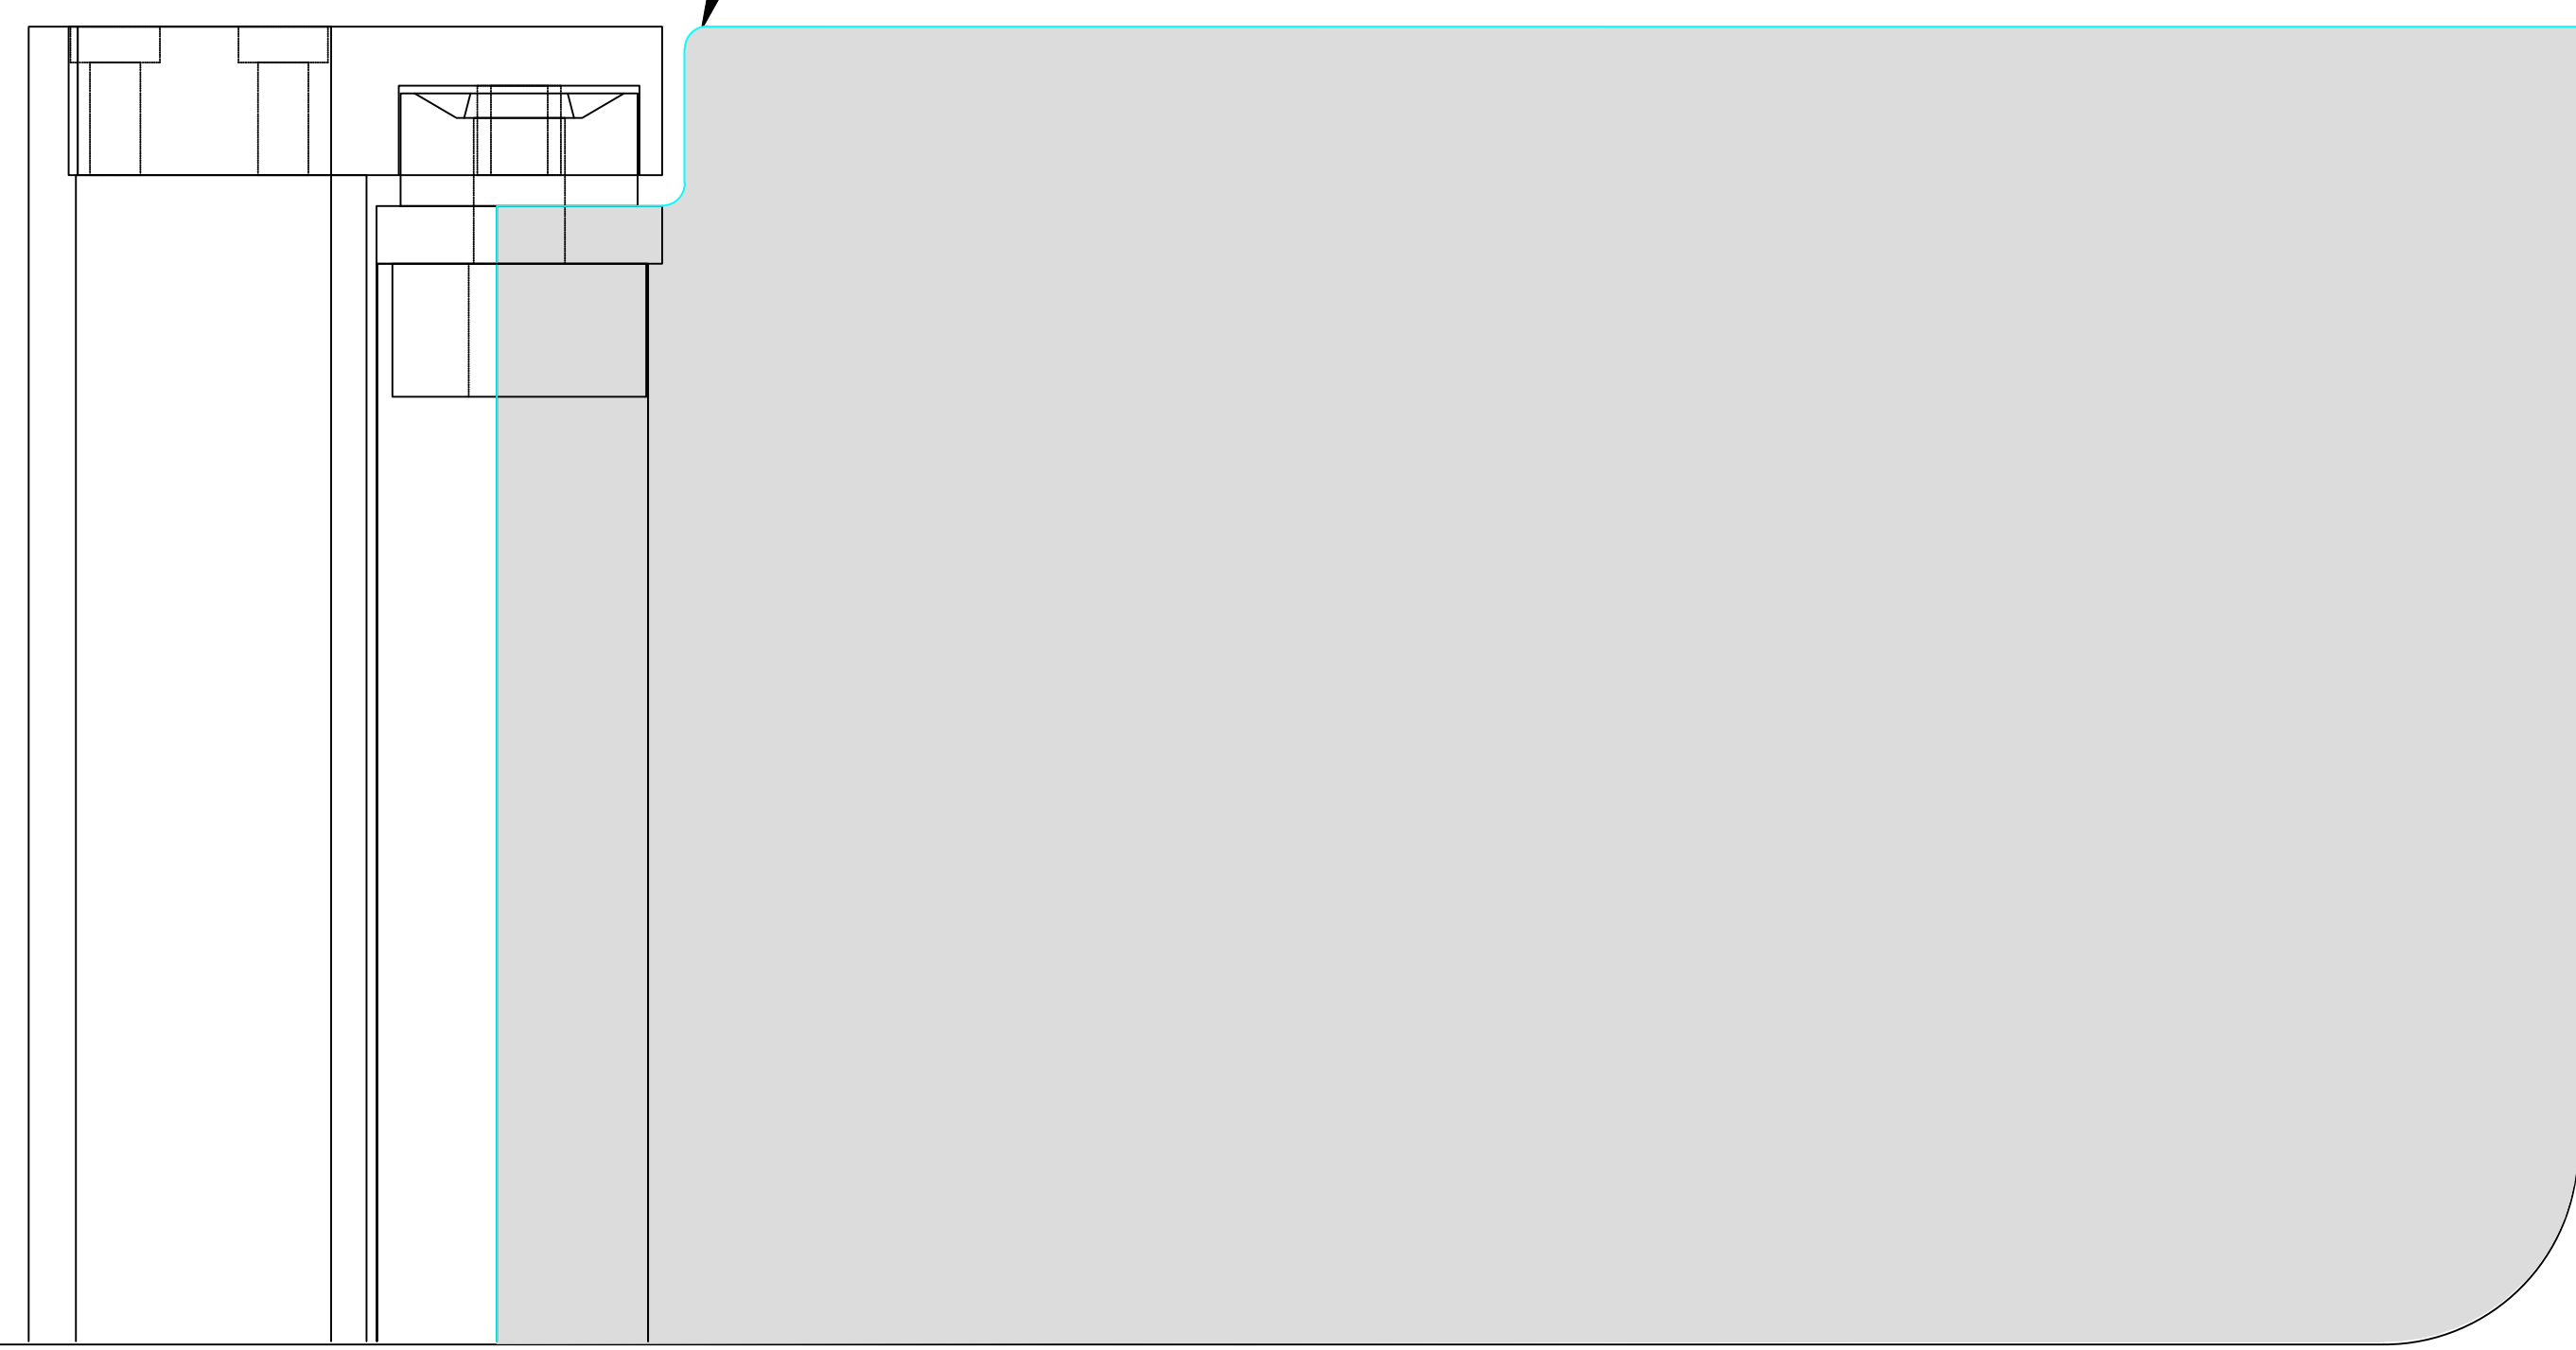


STEP 4

Install the Magnetic Side Jamb - A

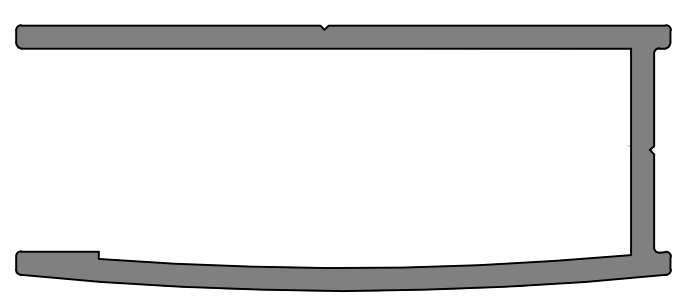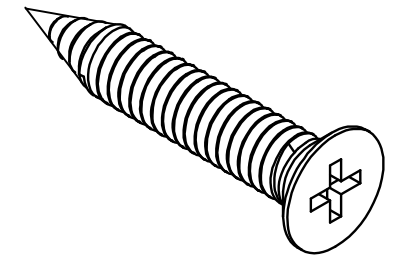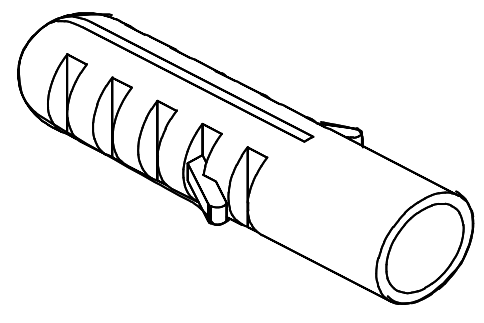C		X1
K		X3
L		X3

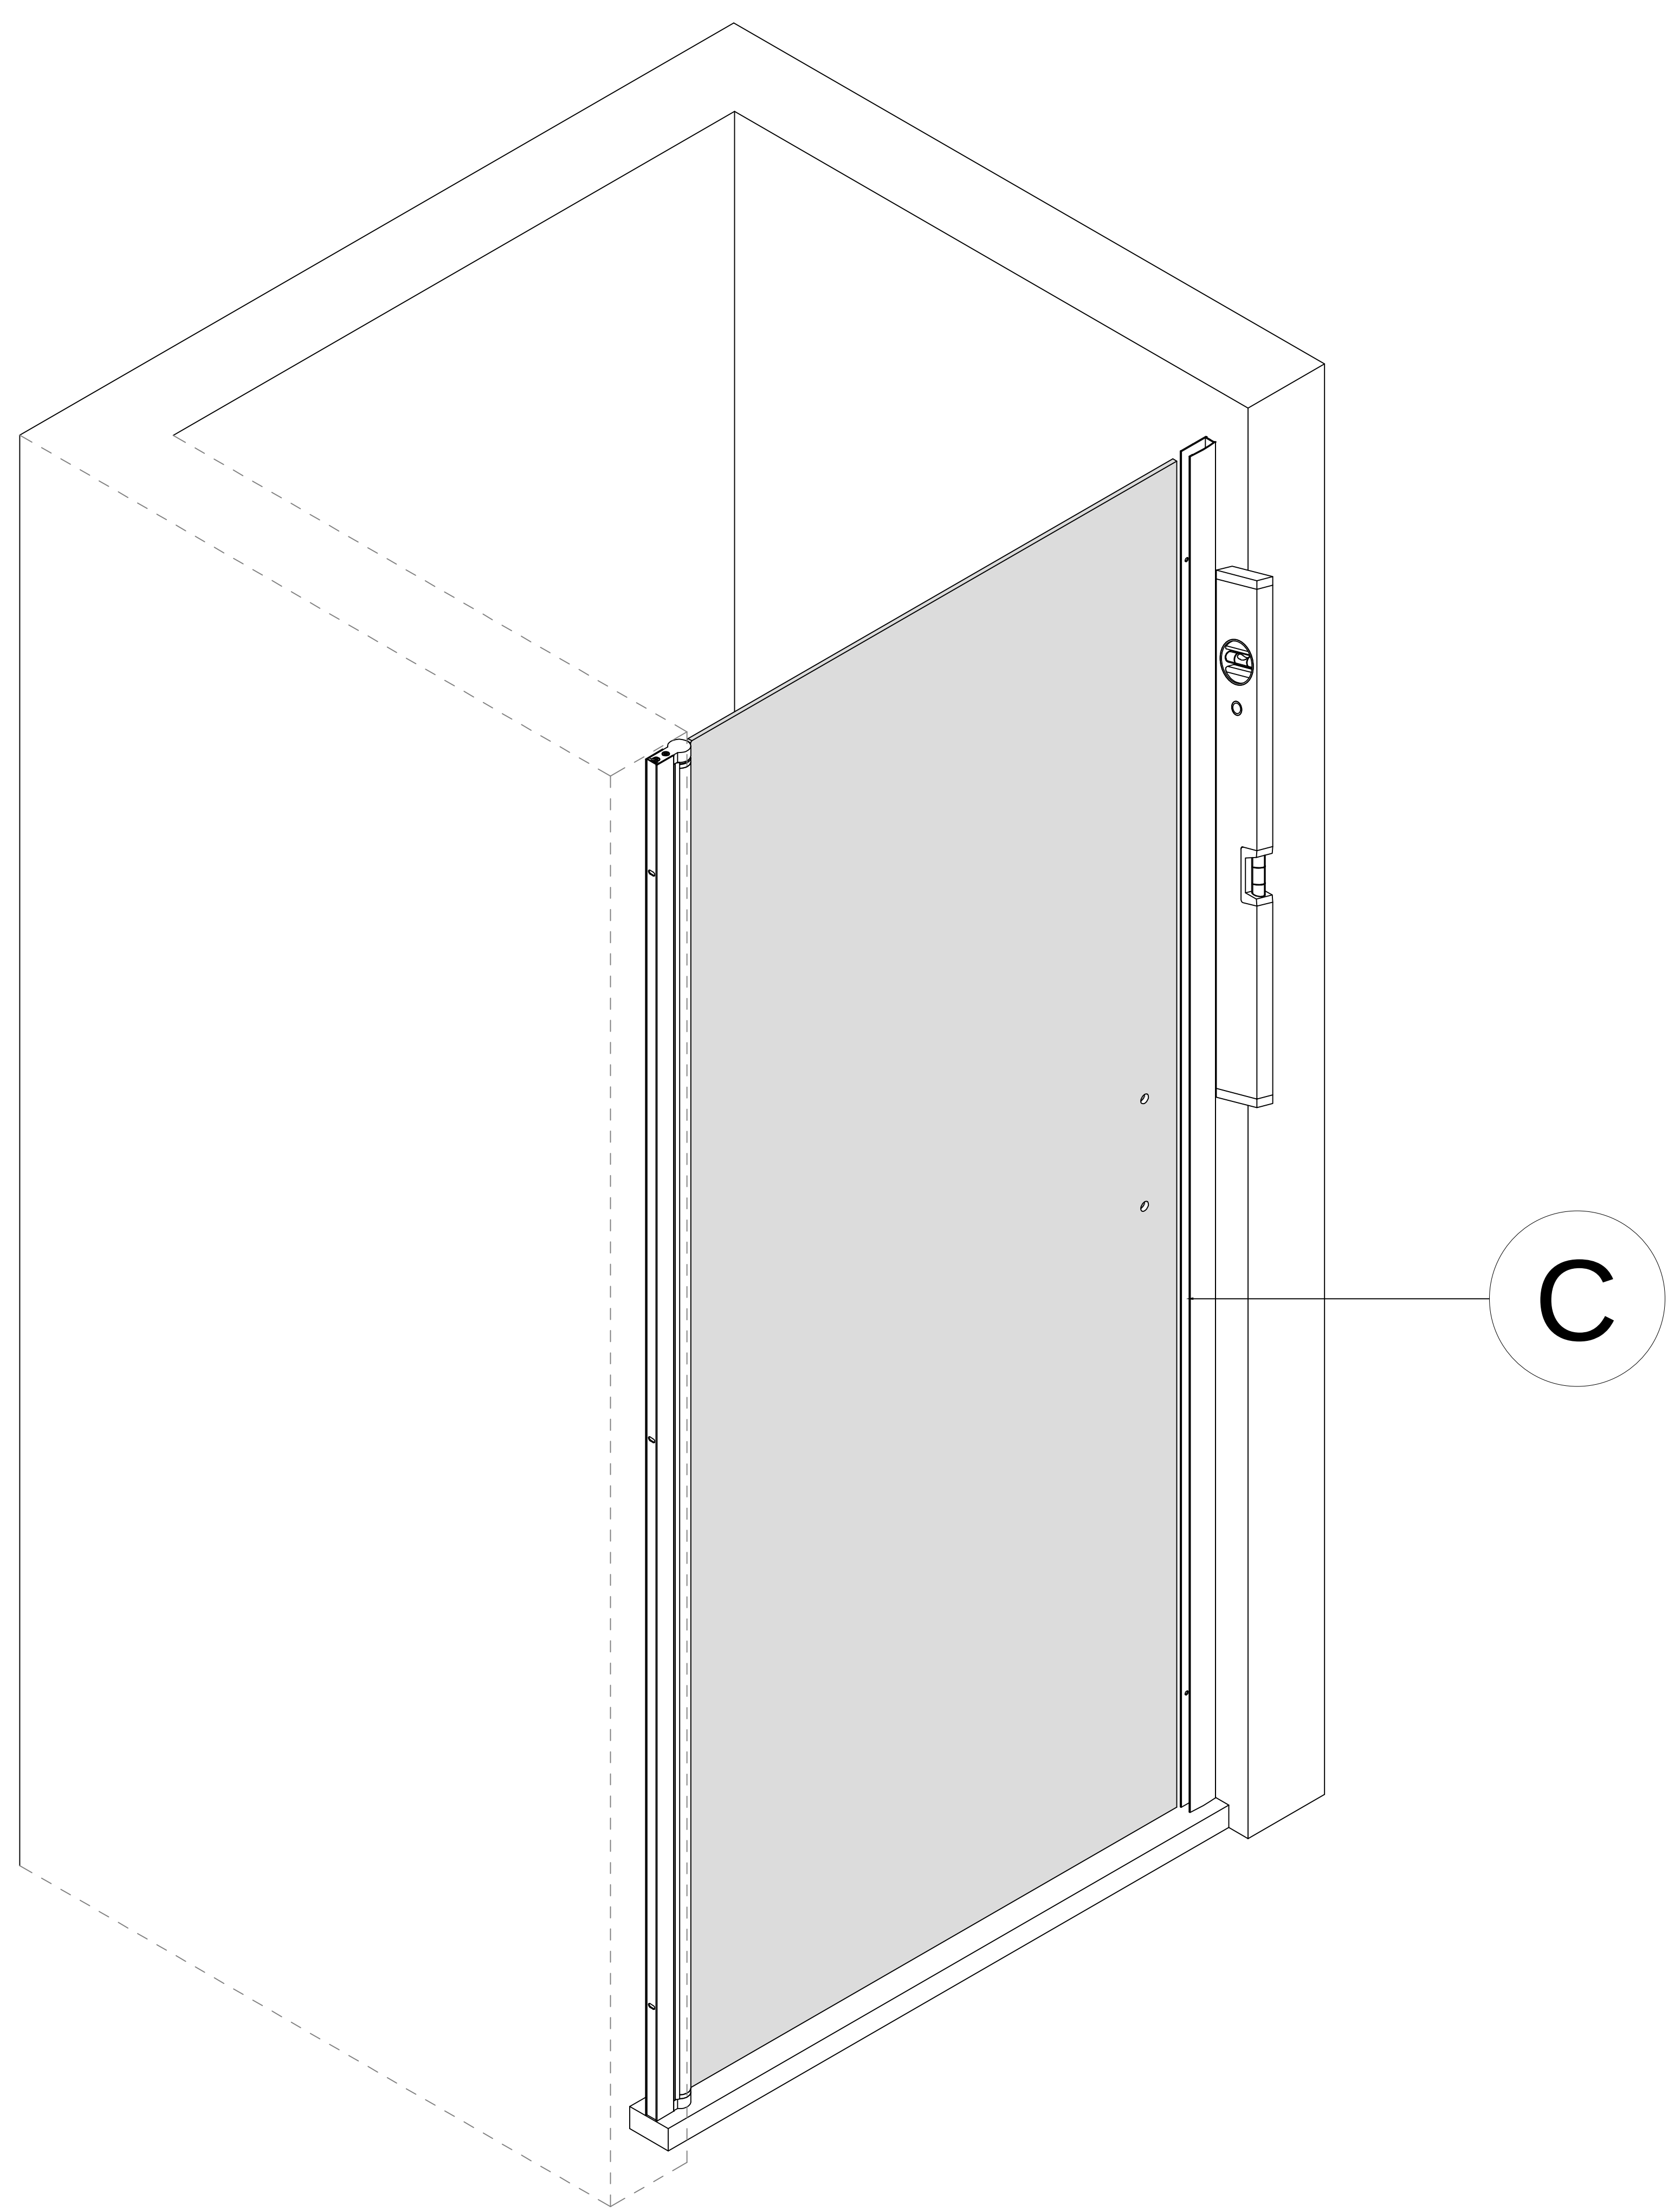


Place the magnetic side jamb - A (C) at the installation position, parallel to the movable door and perpendicular to the ground and wall.

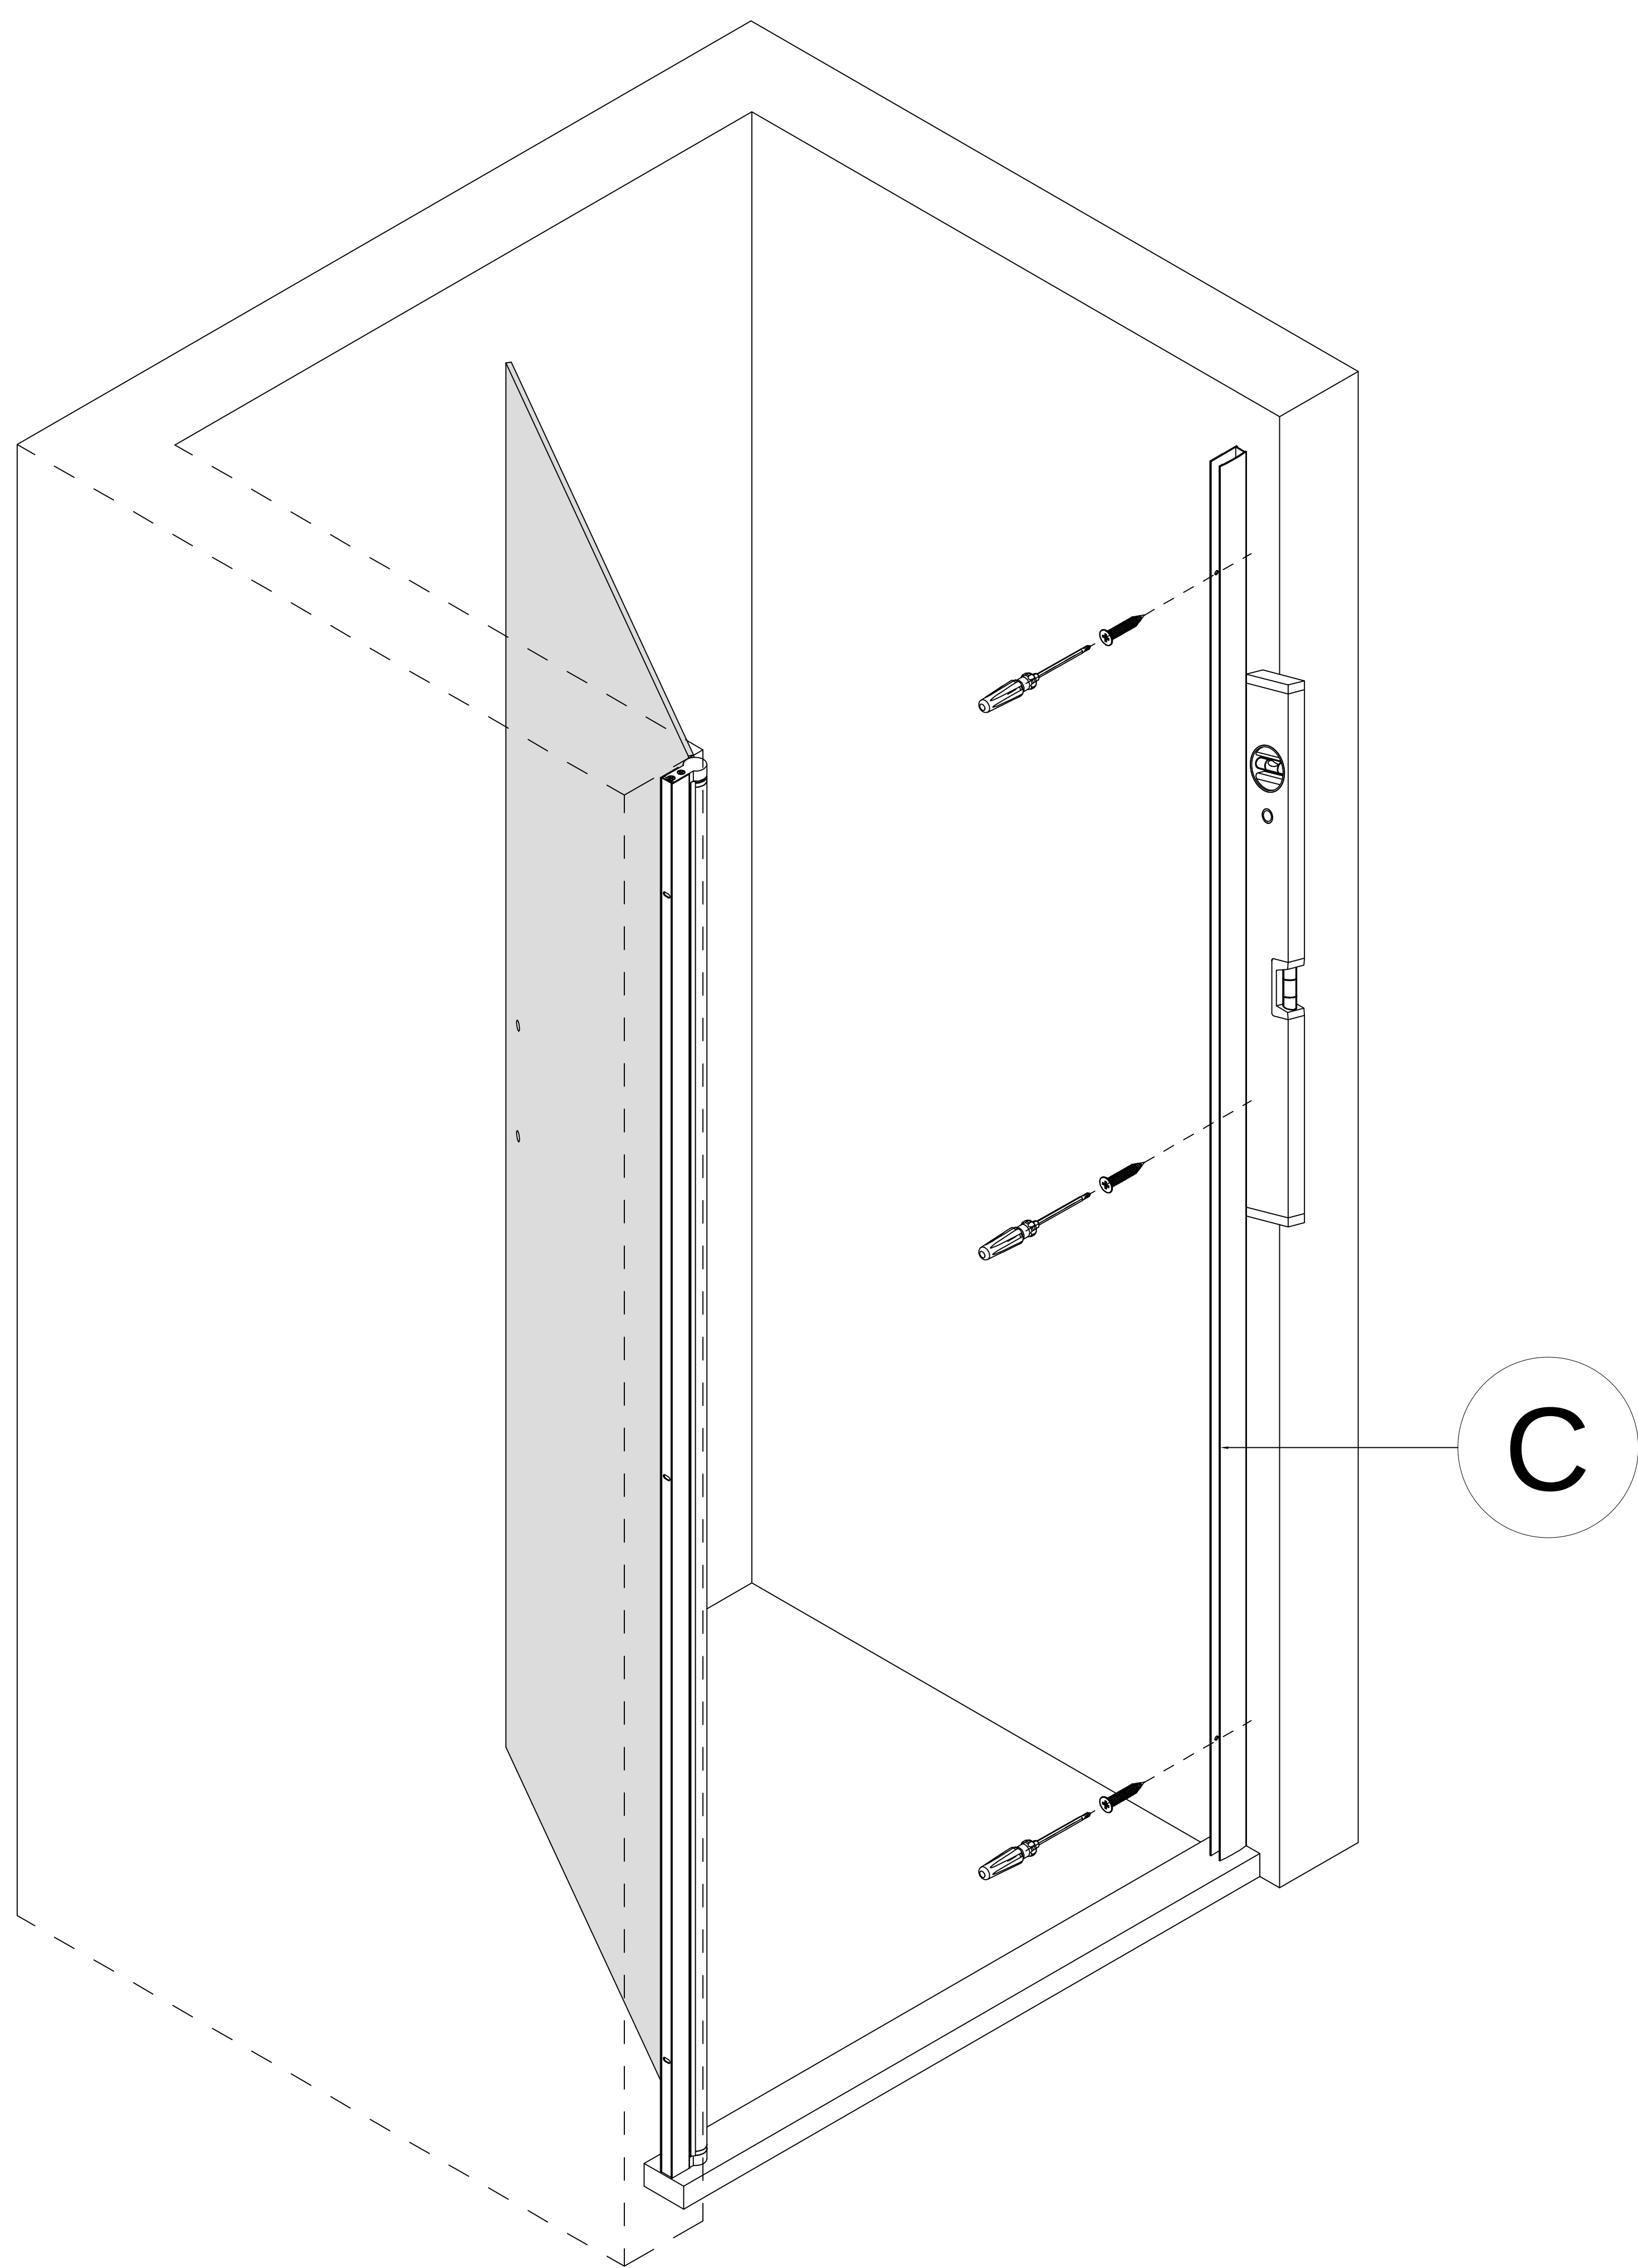


4-1

Mark the positions of the fixing holes.

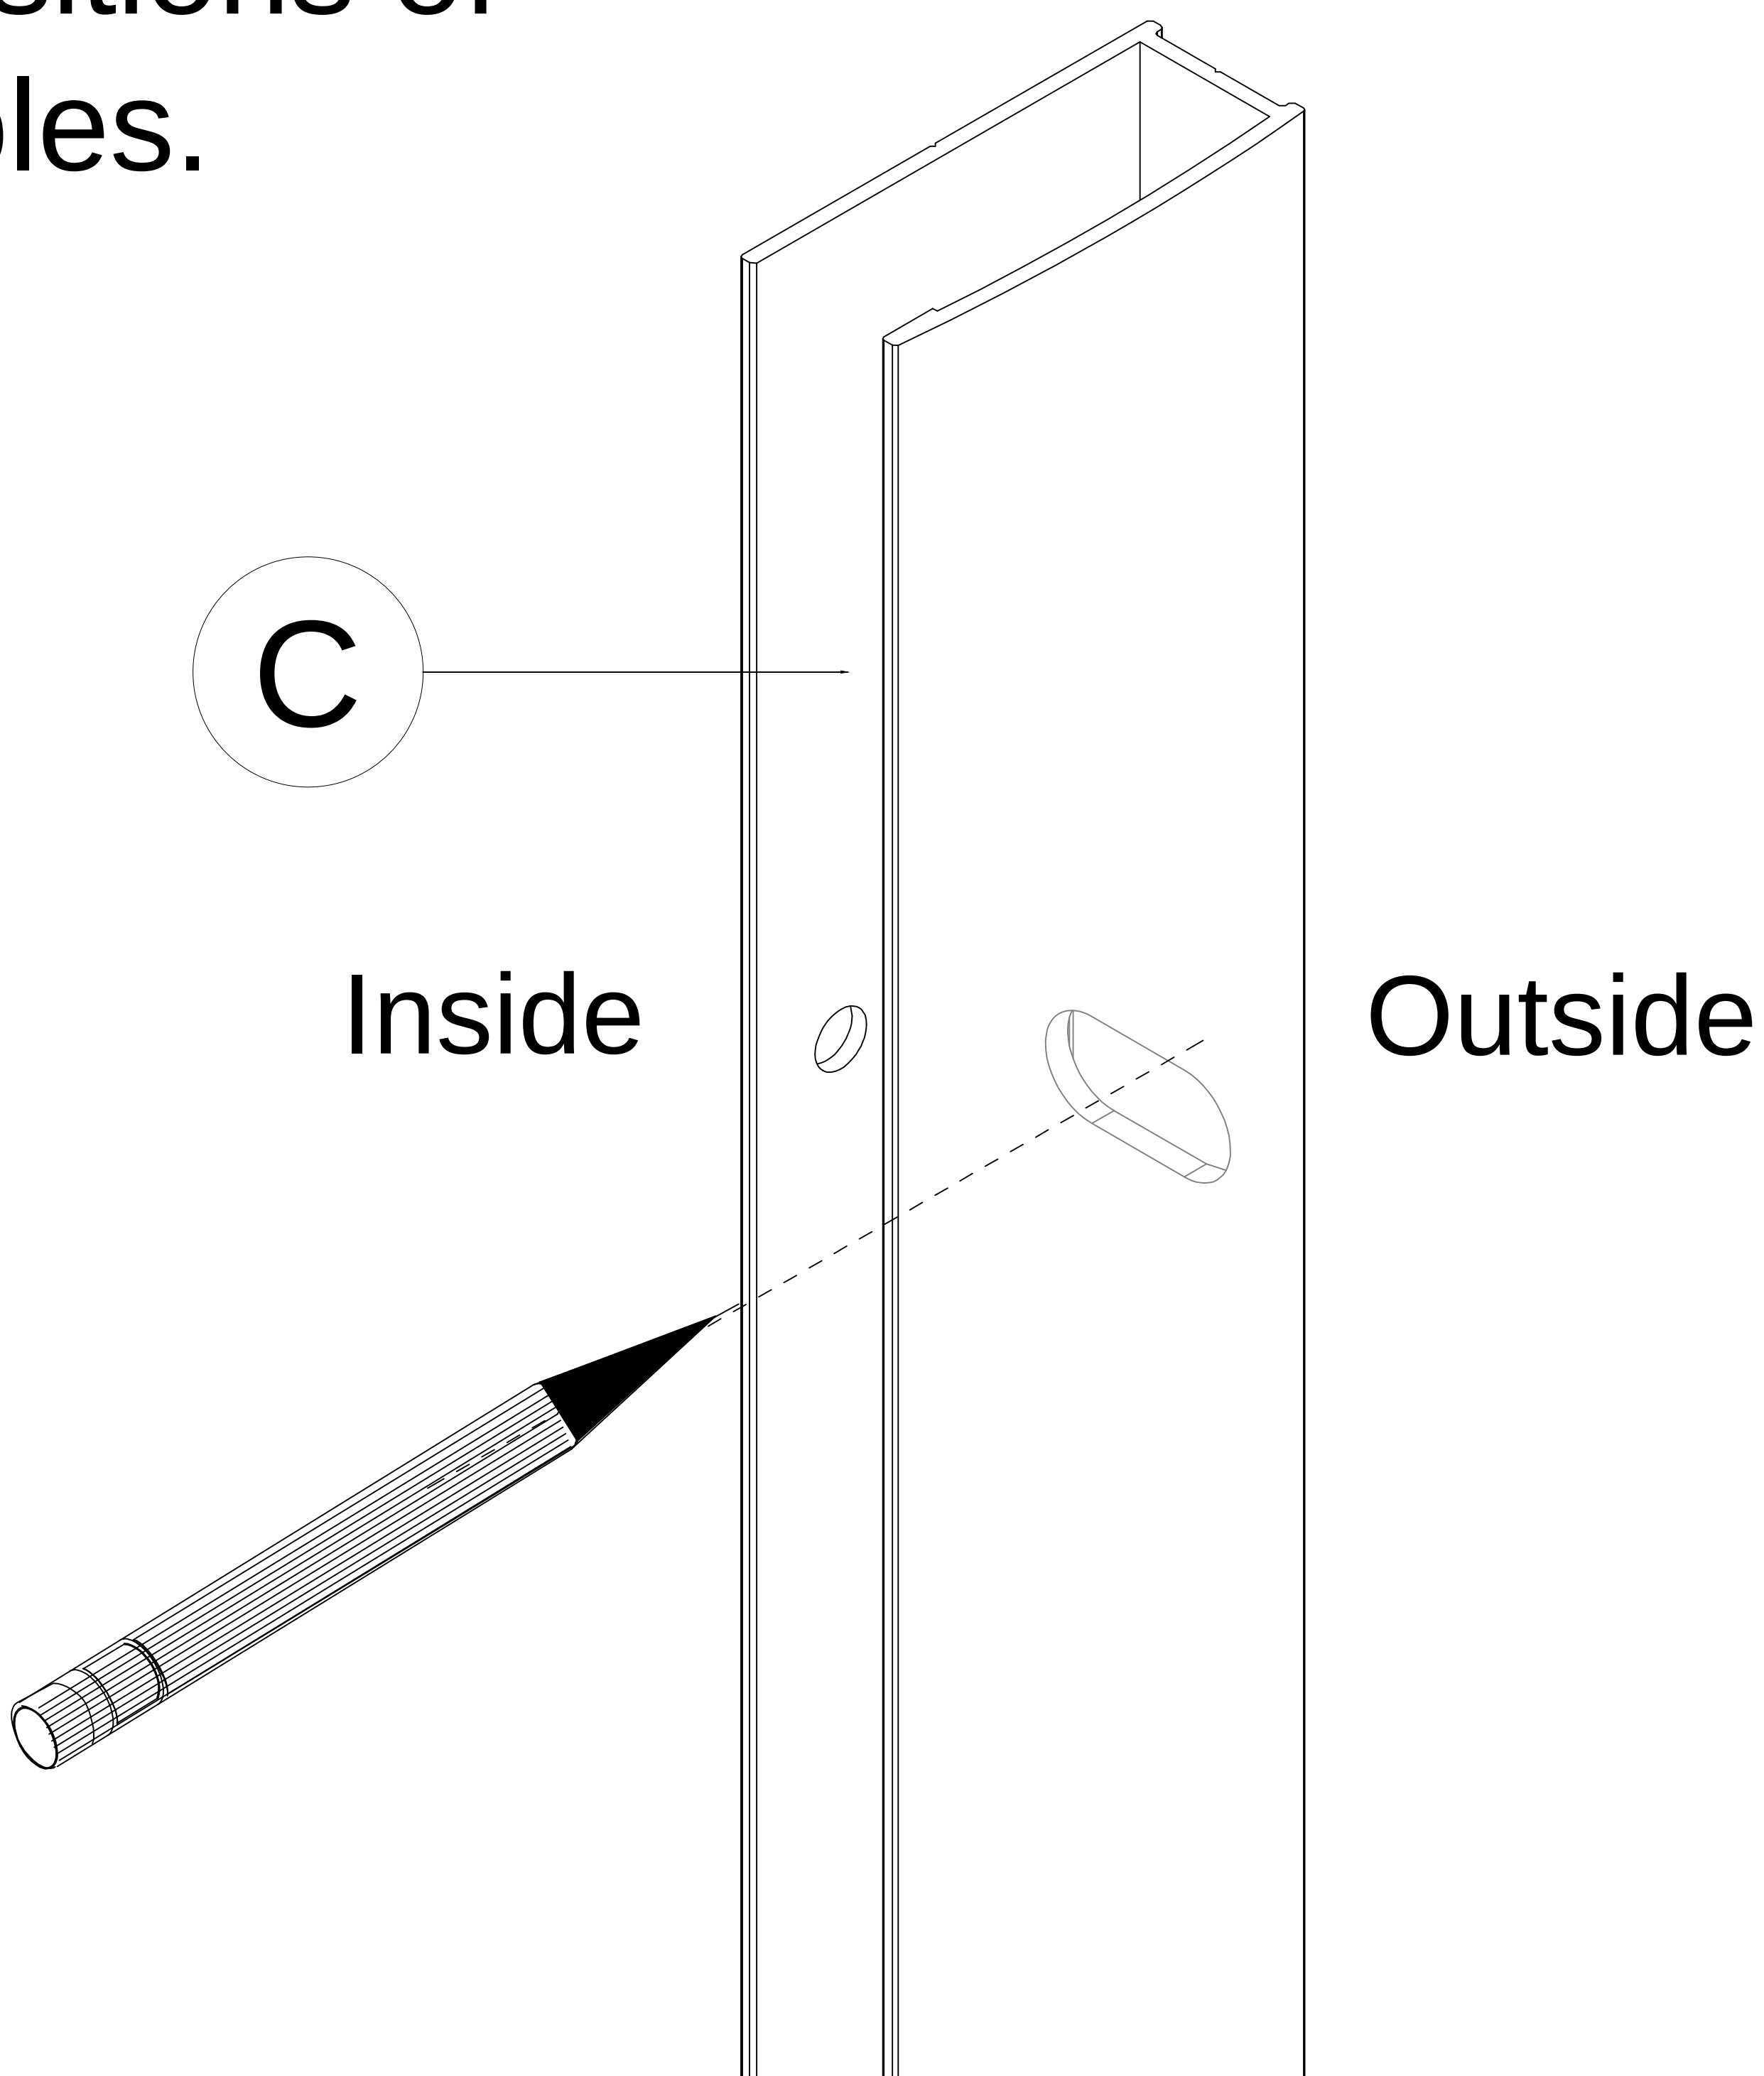


4-2

Drill 6mm (30/127") holes at the marked positions, insert the hollow wall plugs (L)

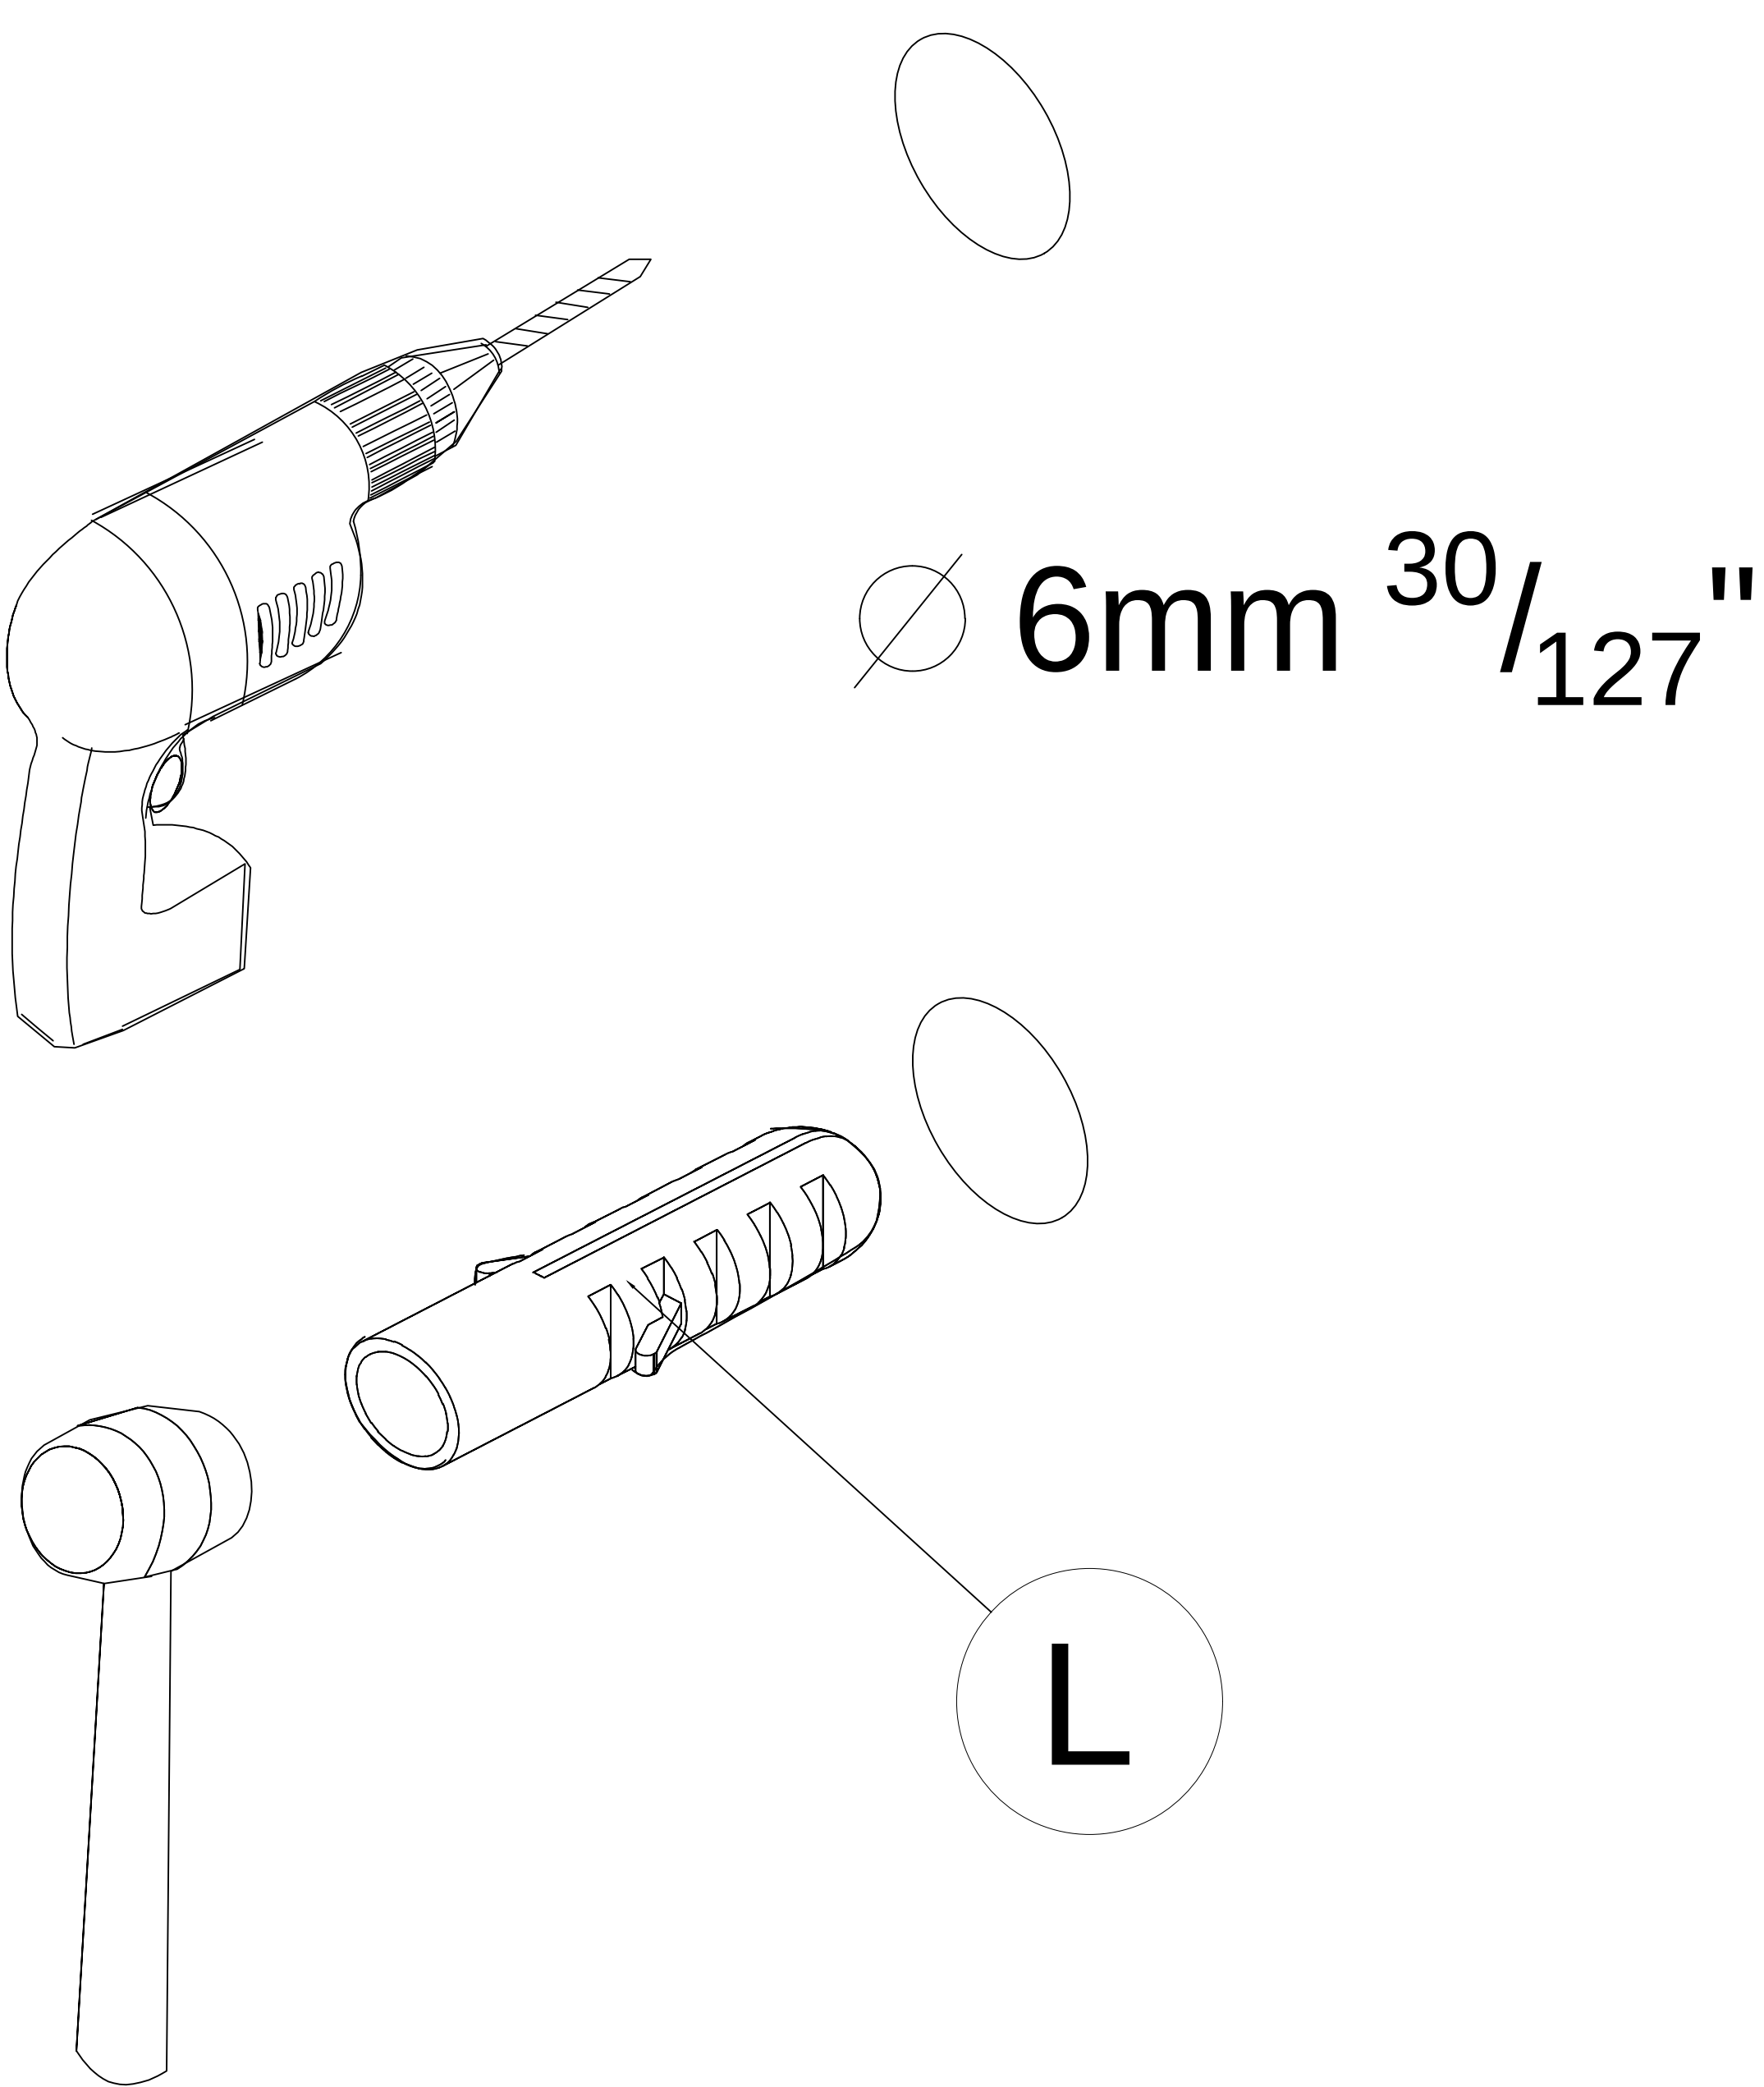

4-3

fix with screws (K)



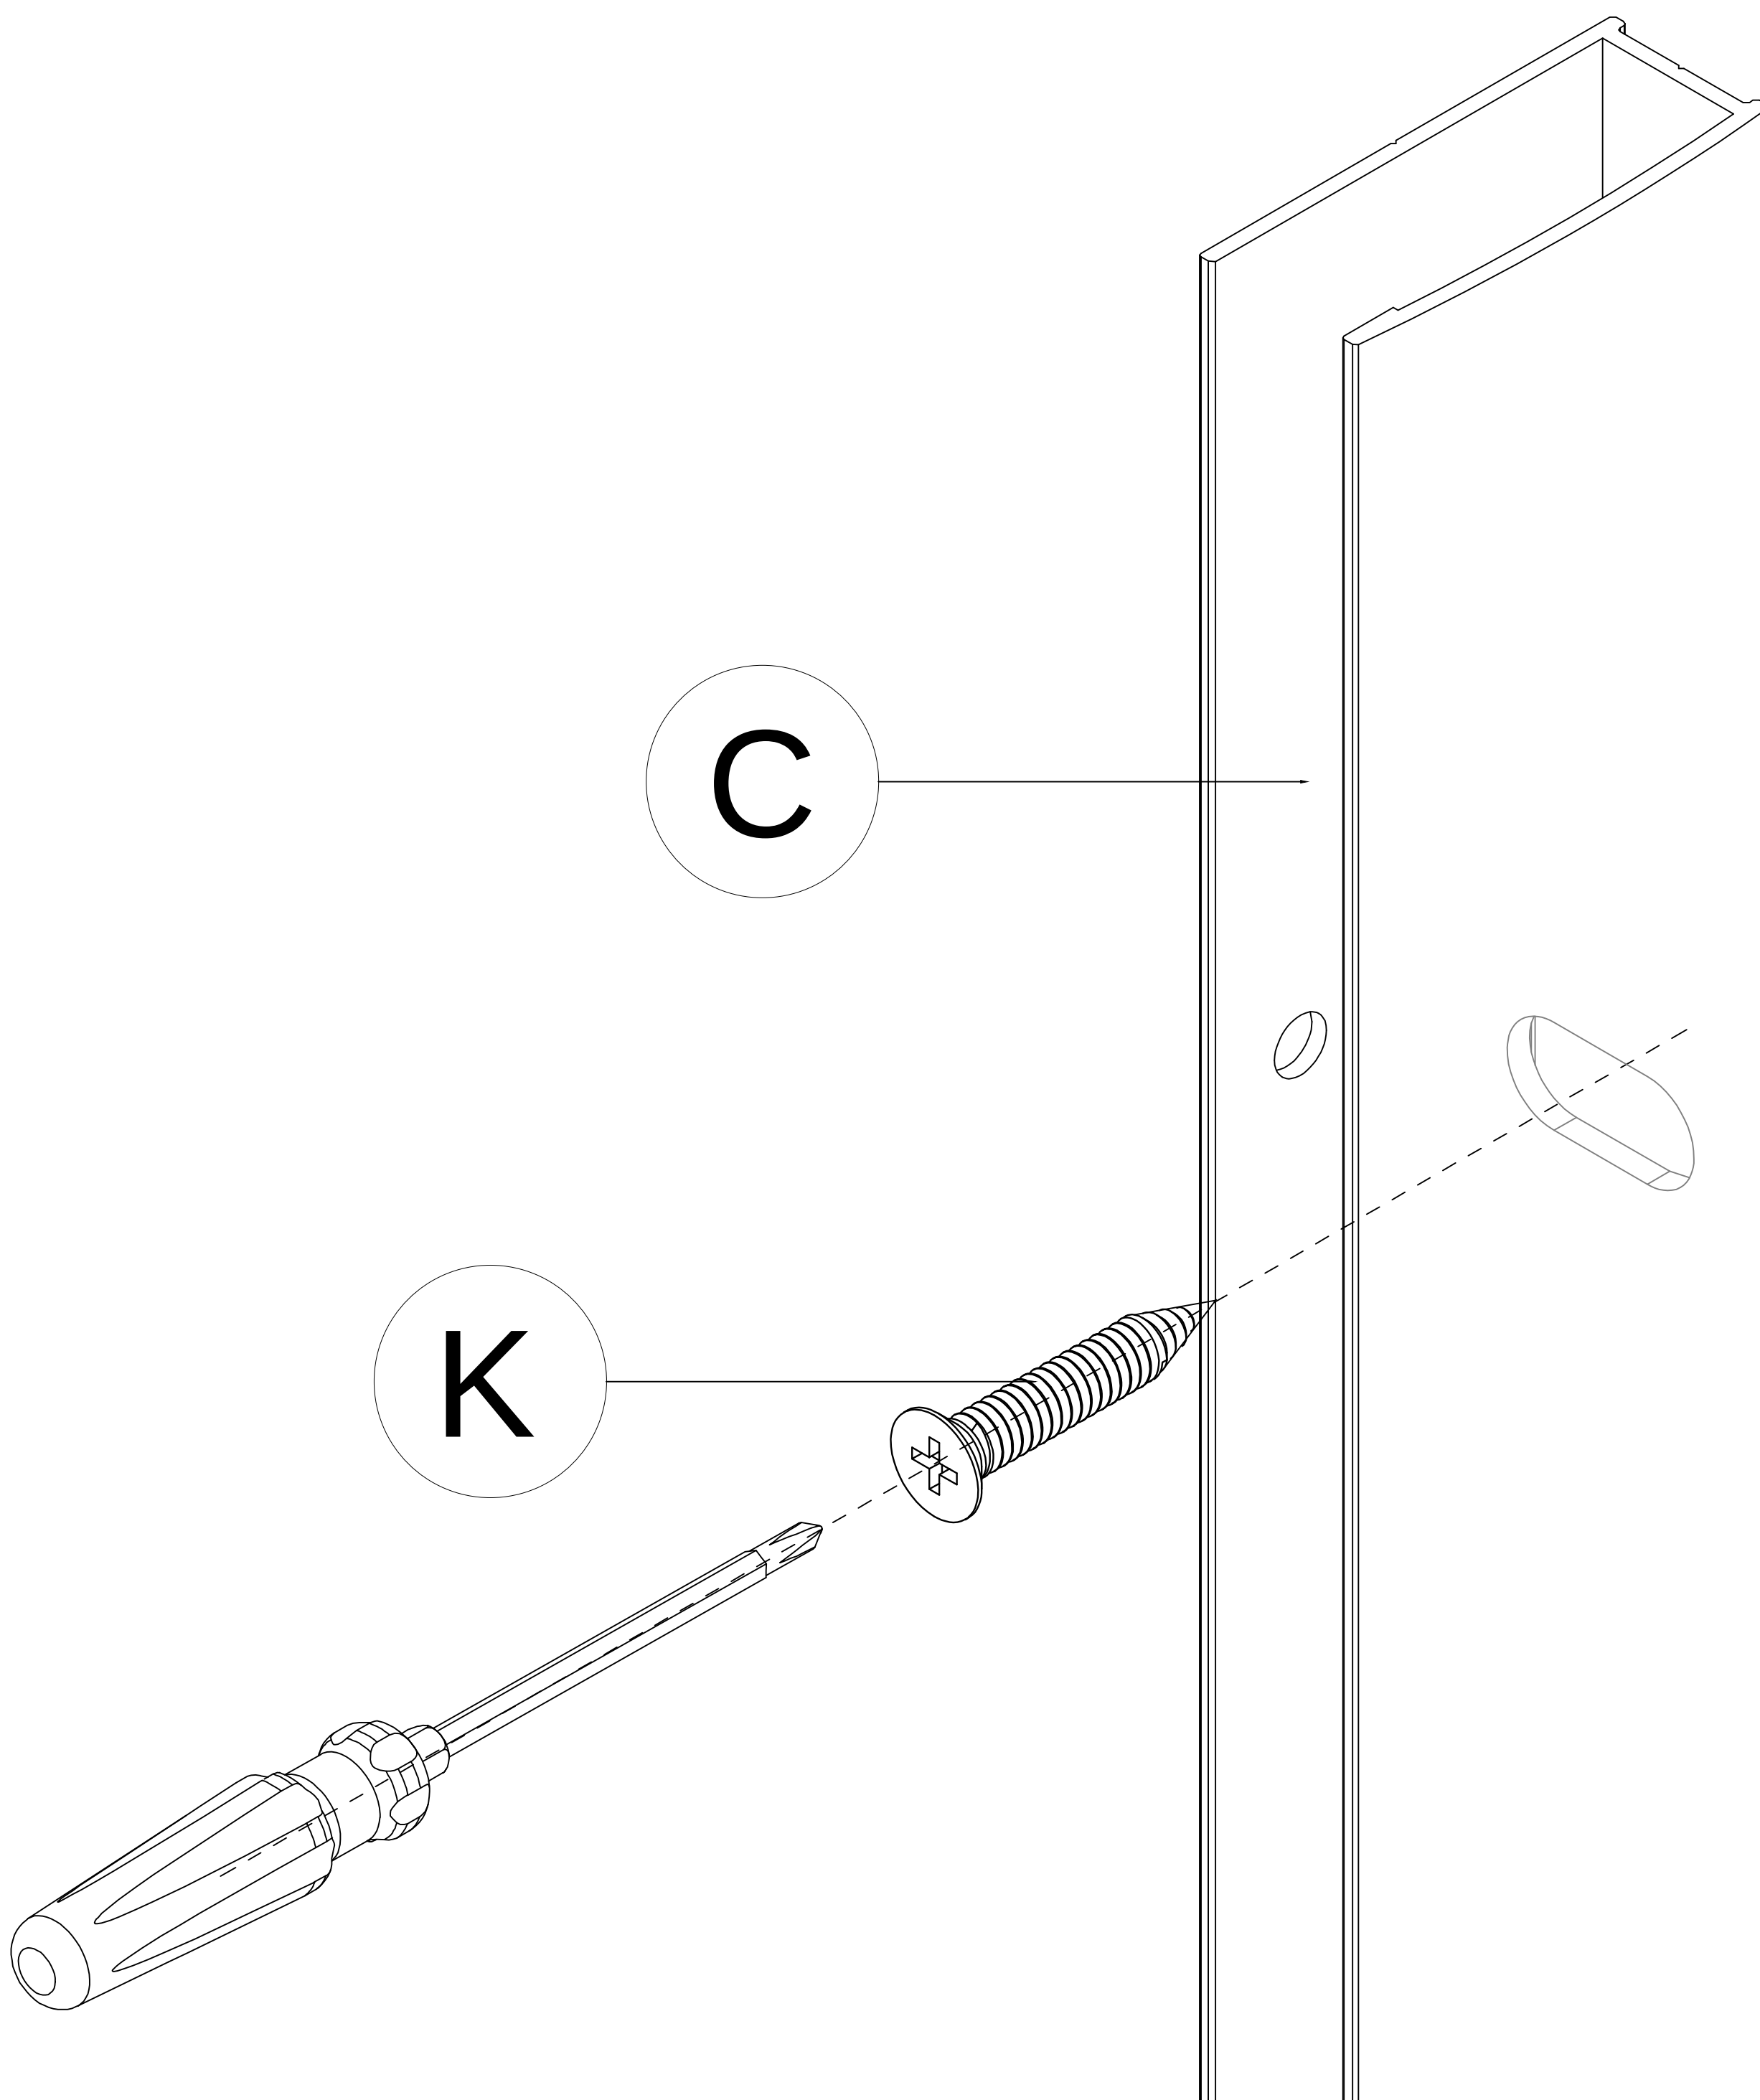


STEP 5


Install the Magnetic Strips

D		X1
F		X1
G		X1


Measure the height of the shower enclosure (H)

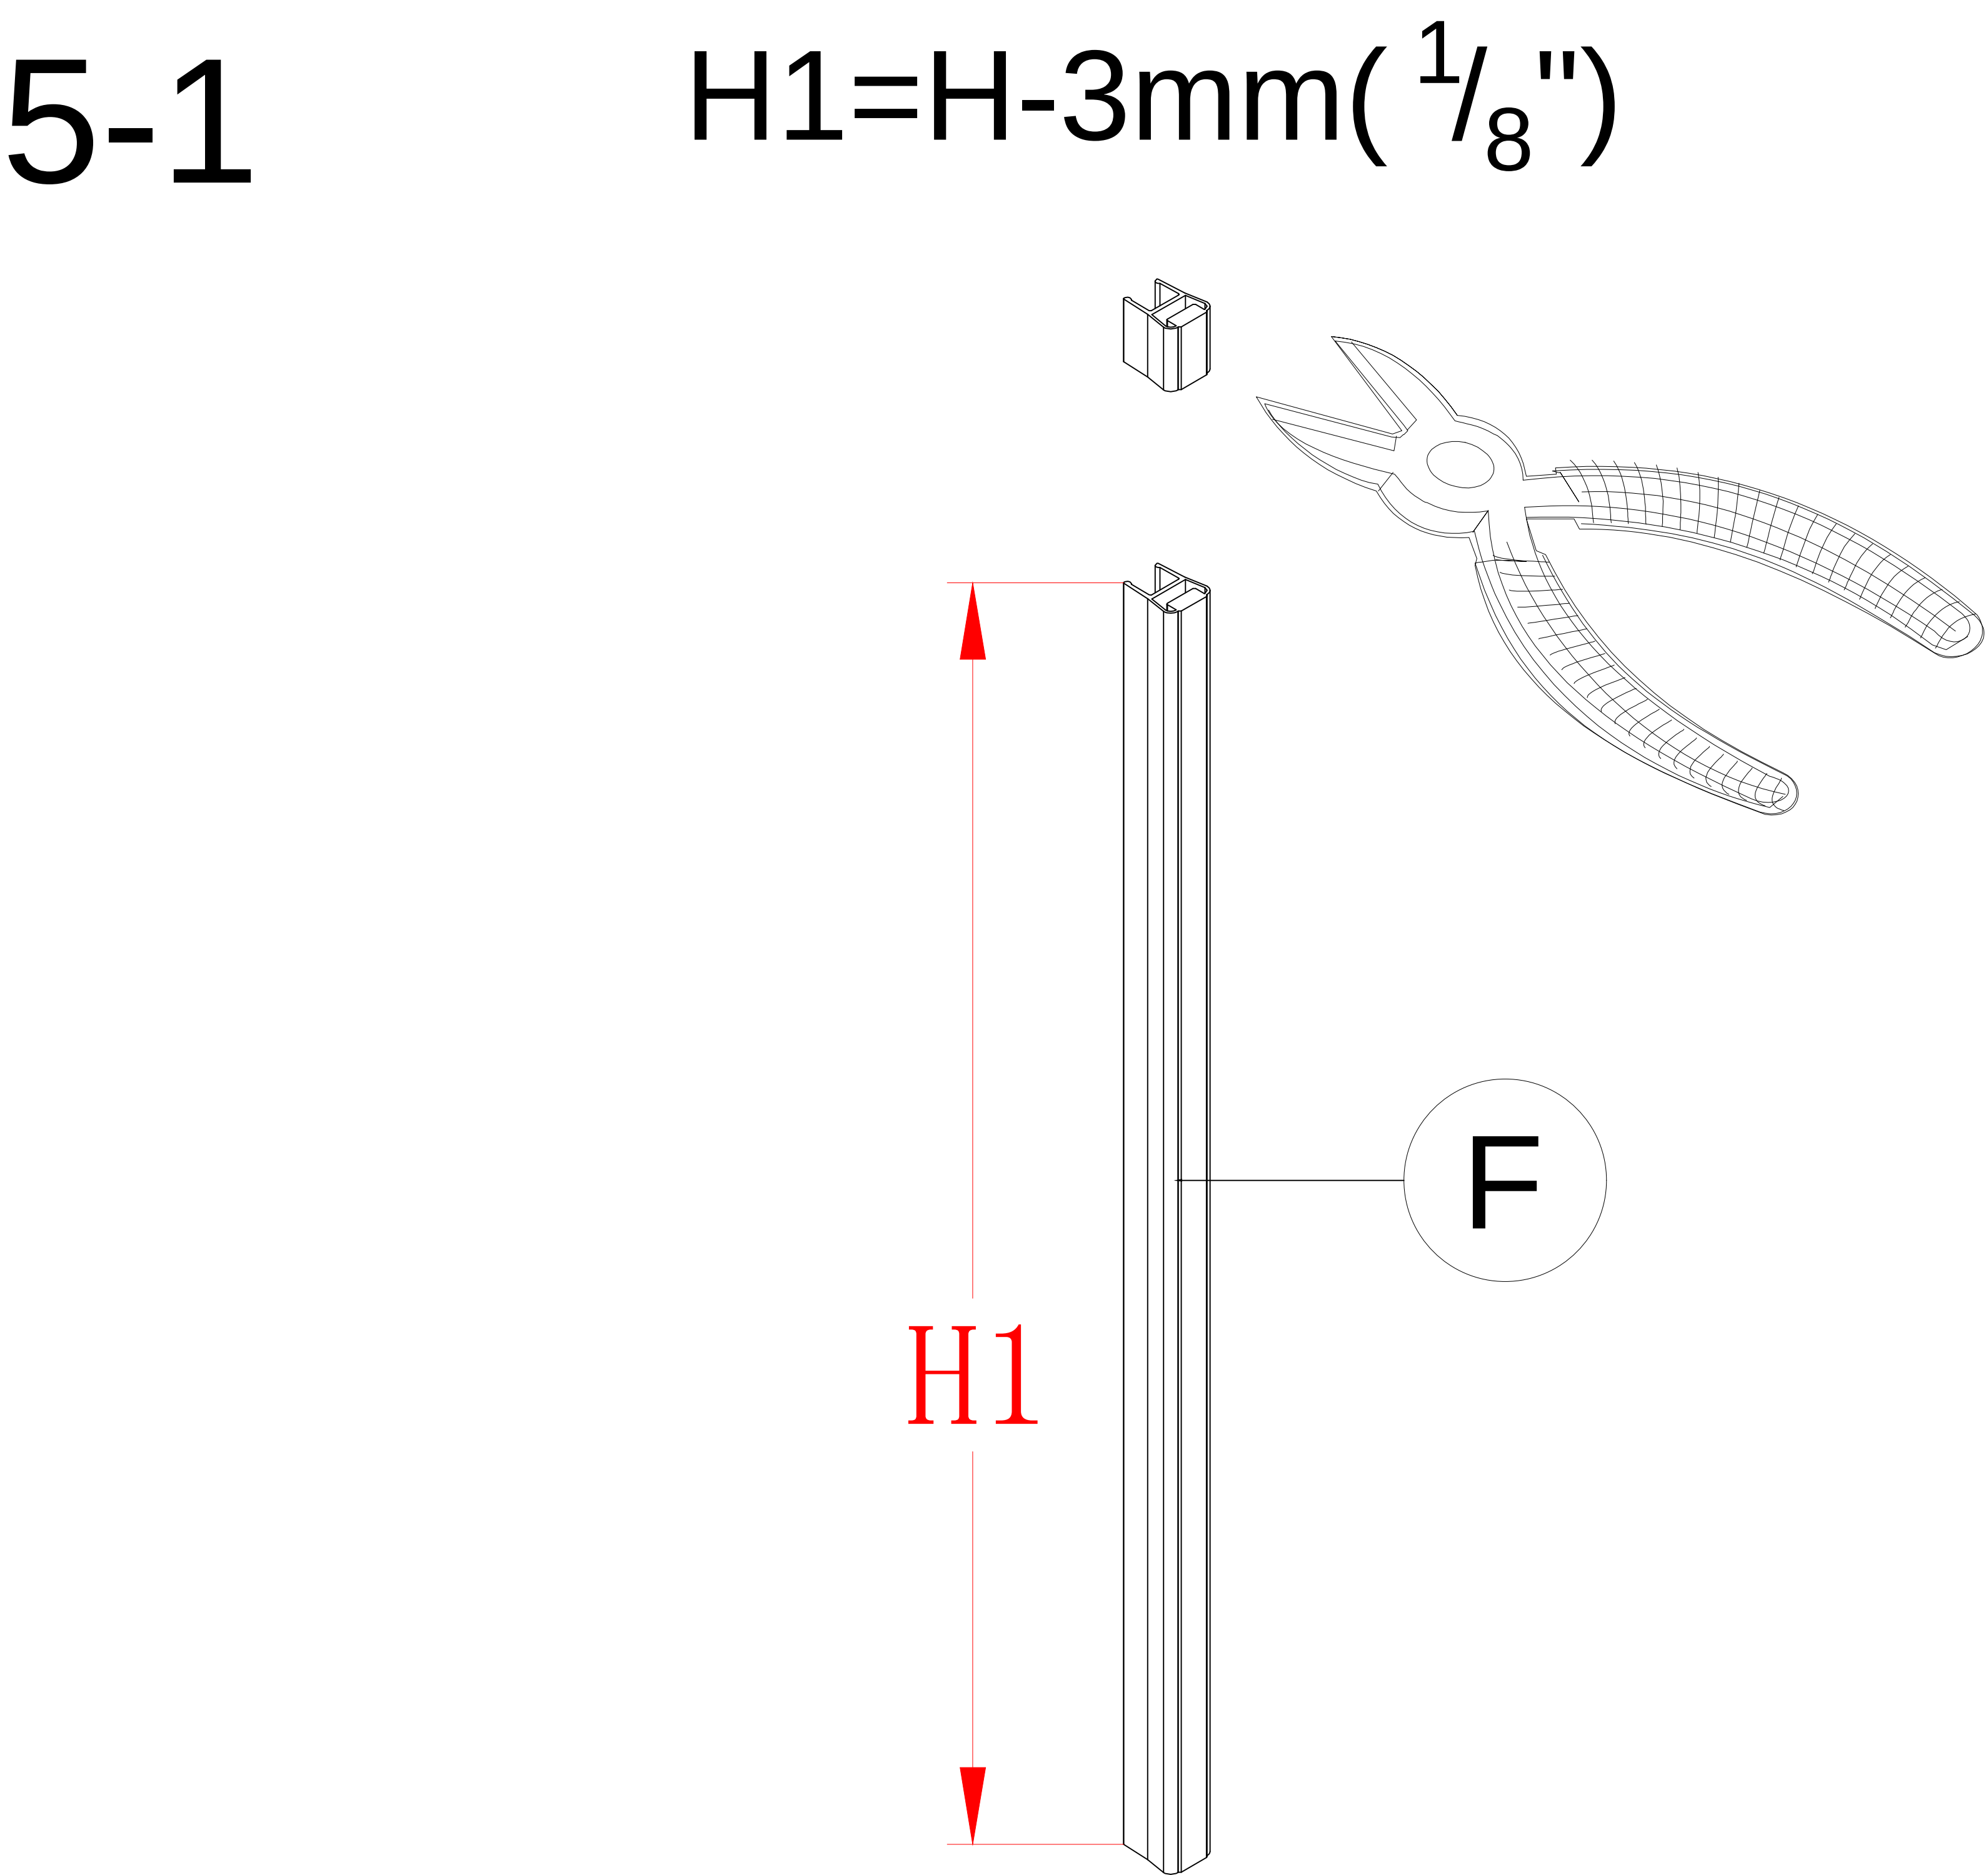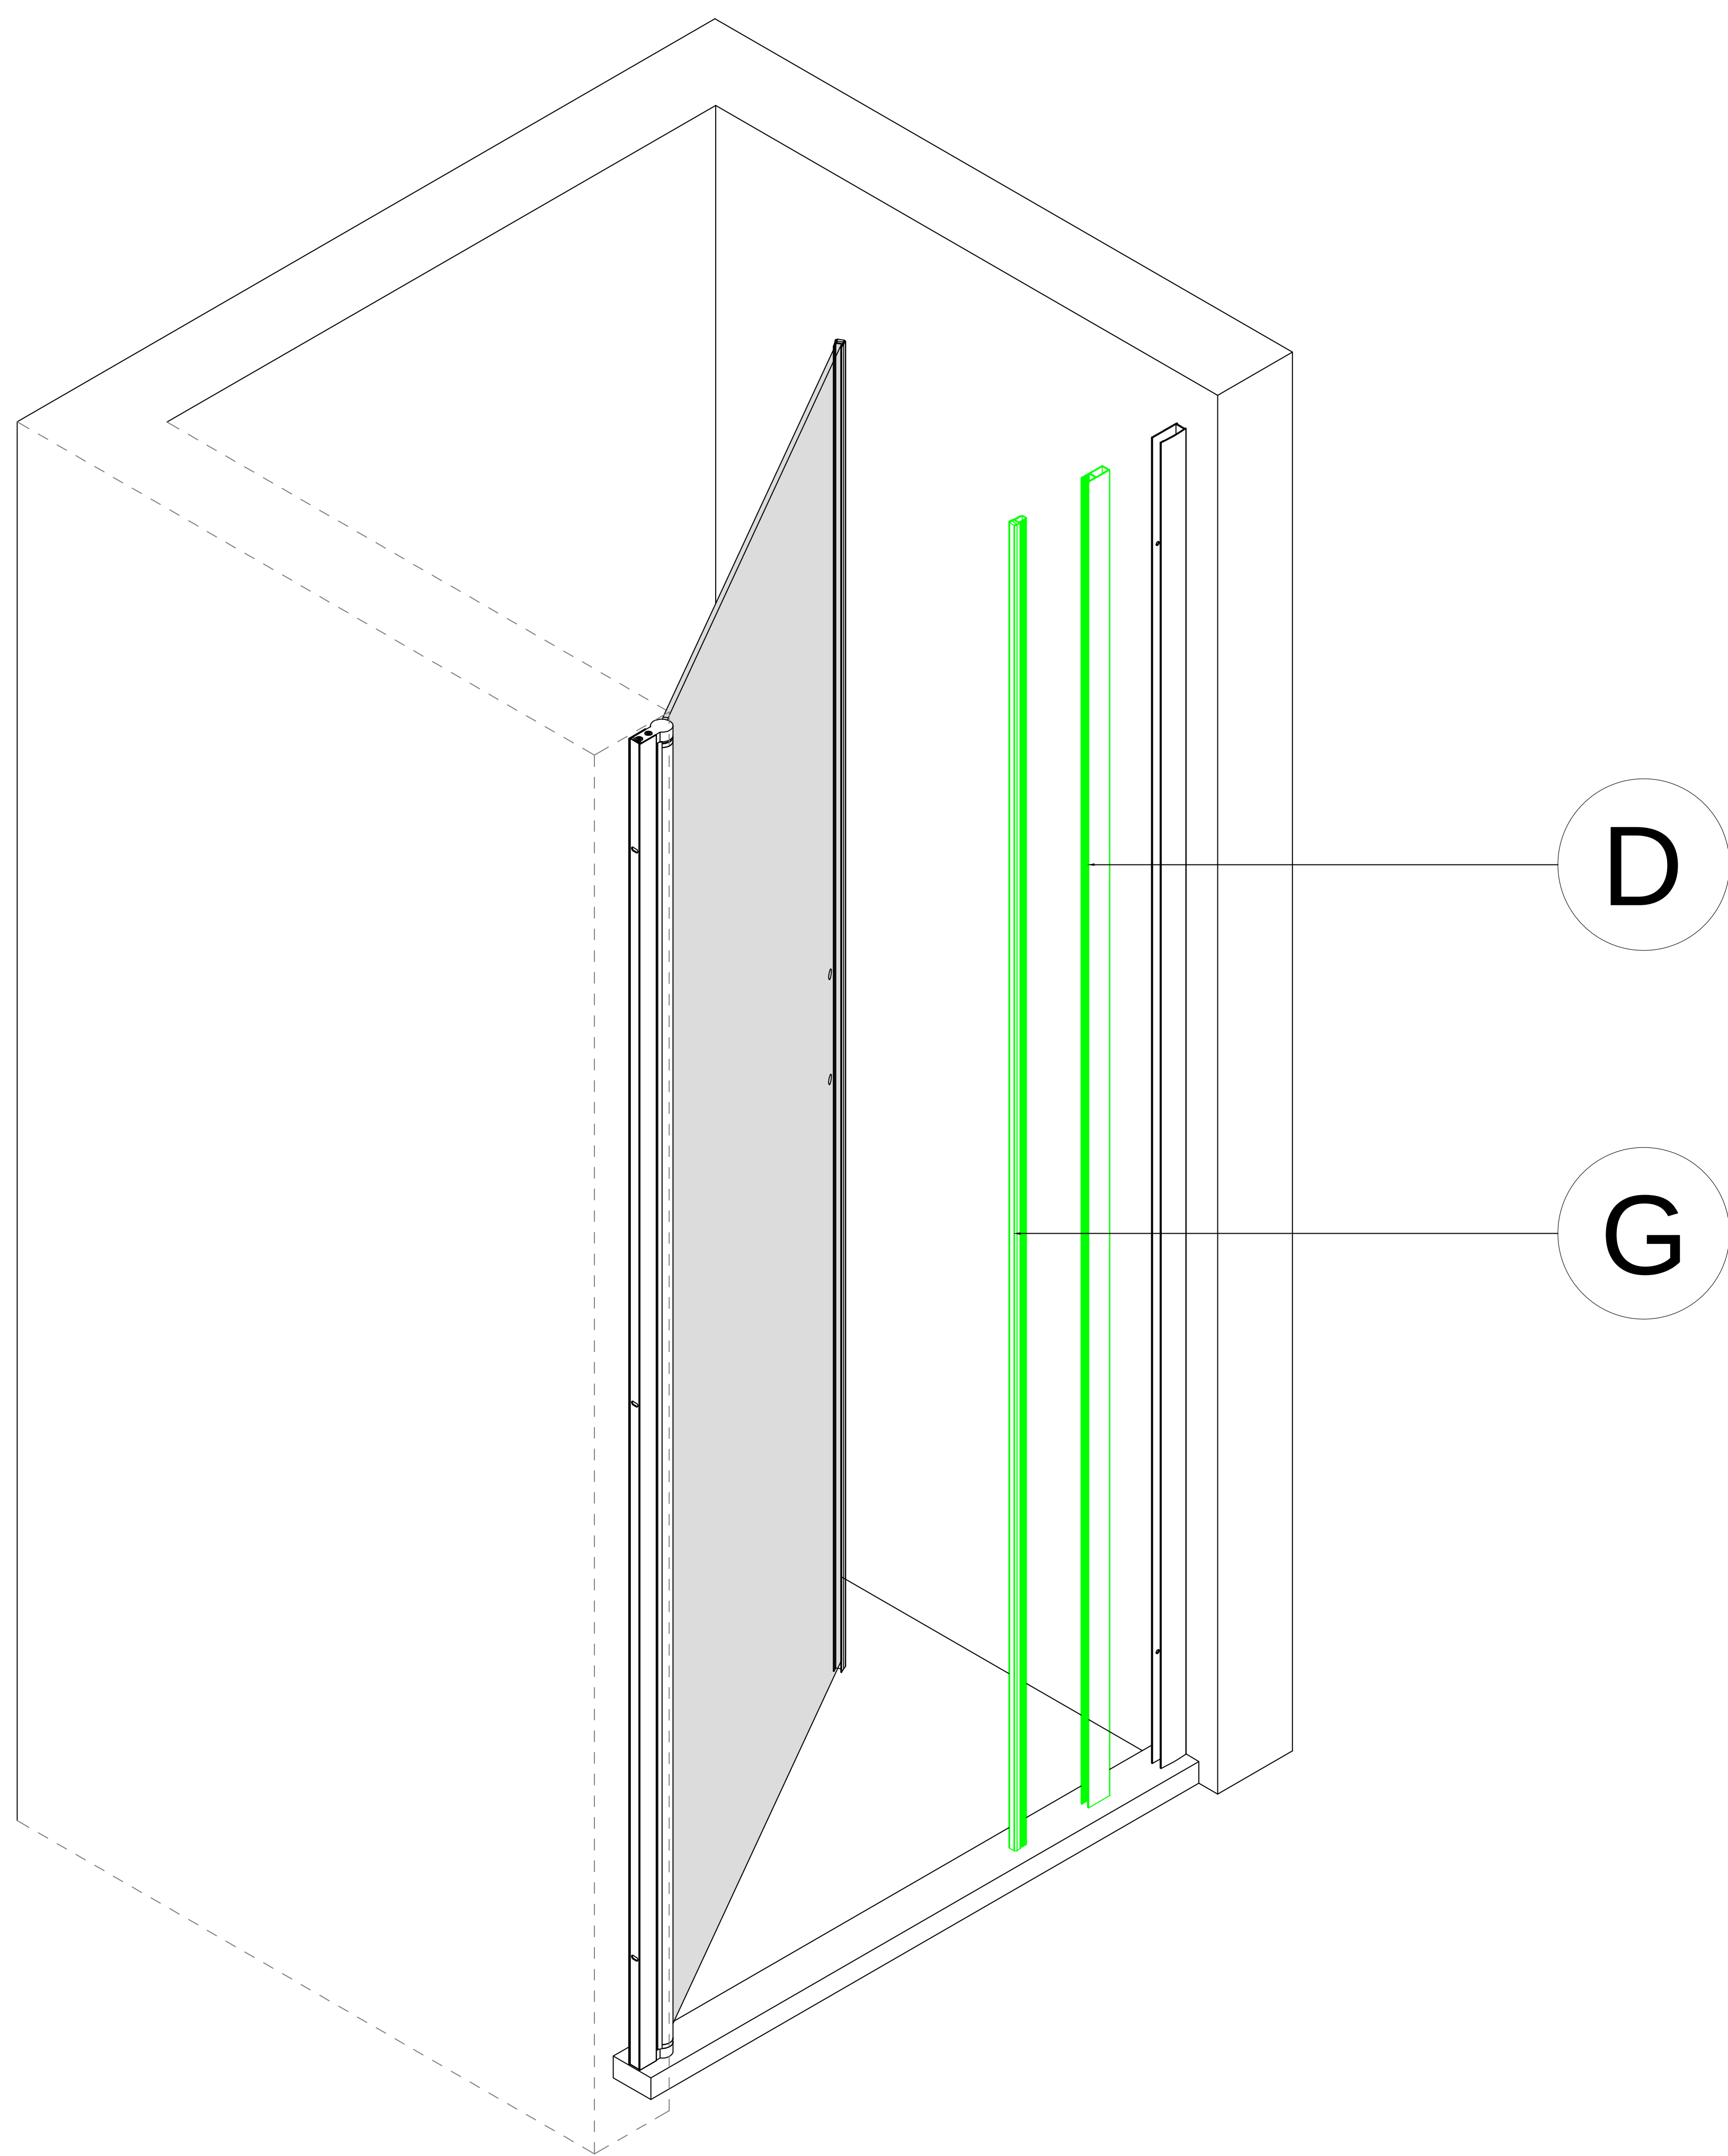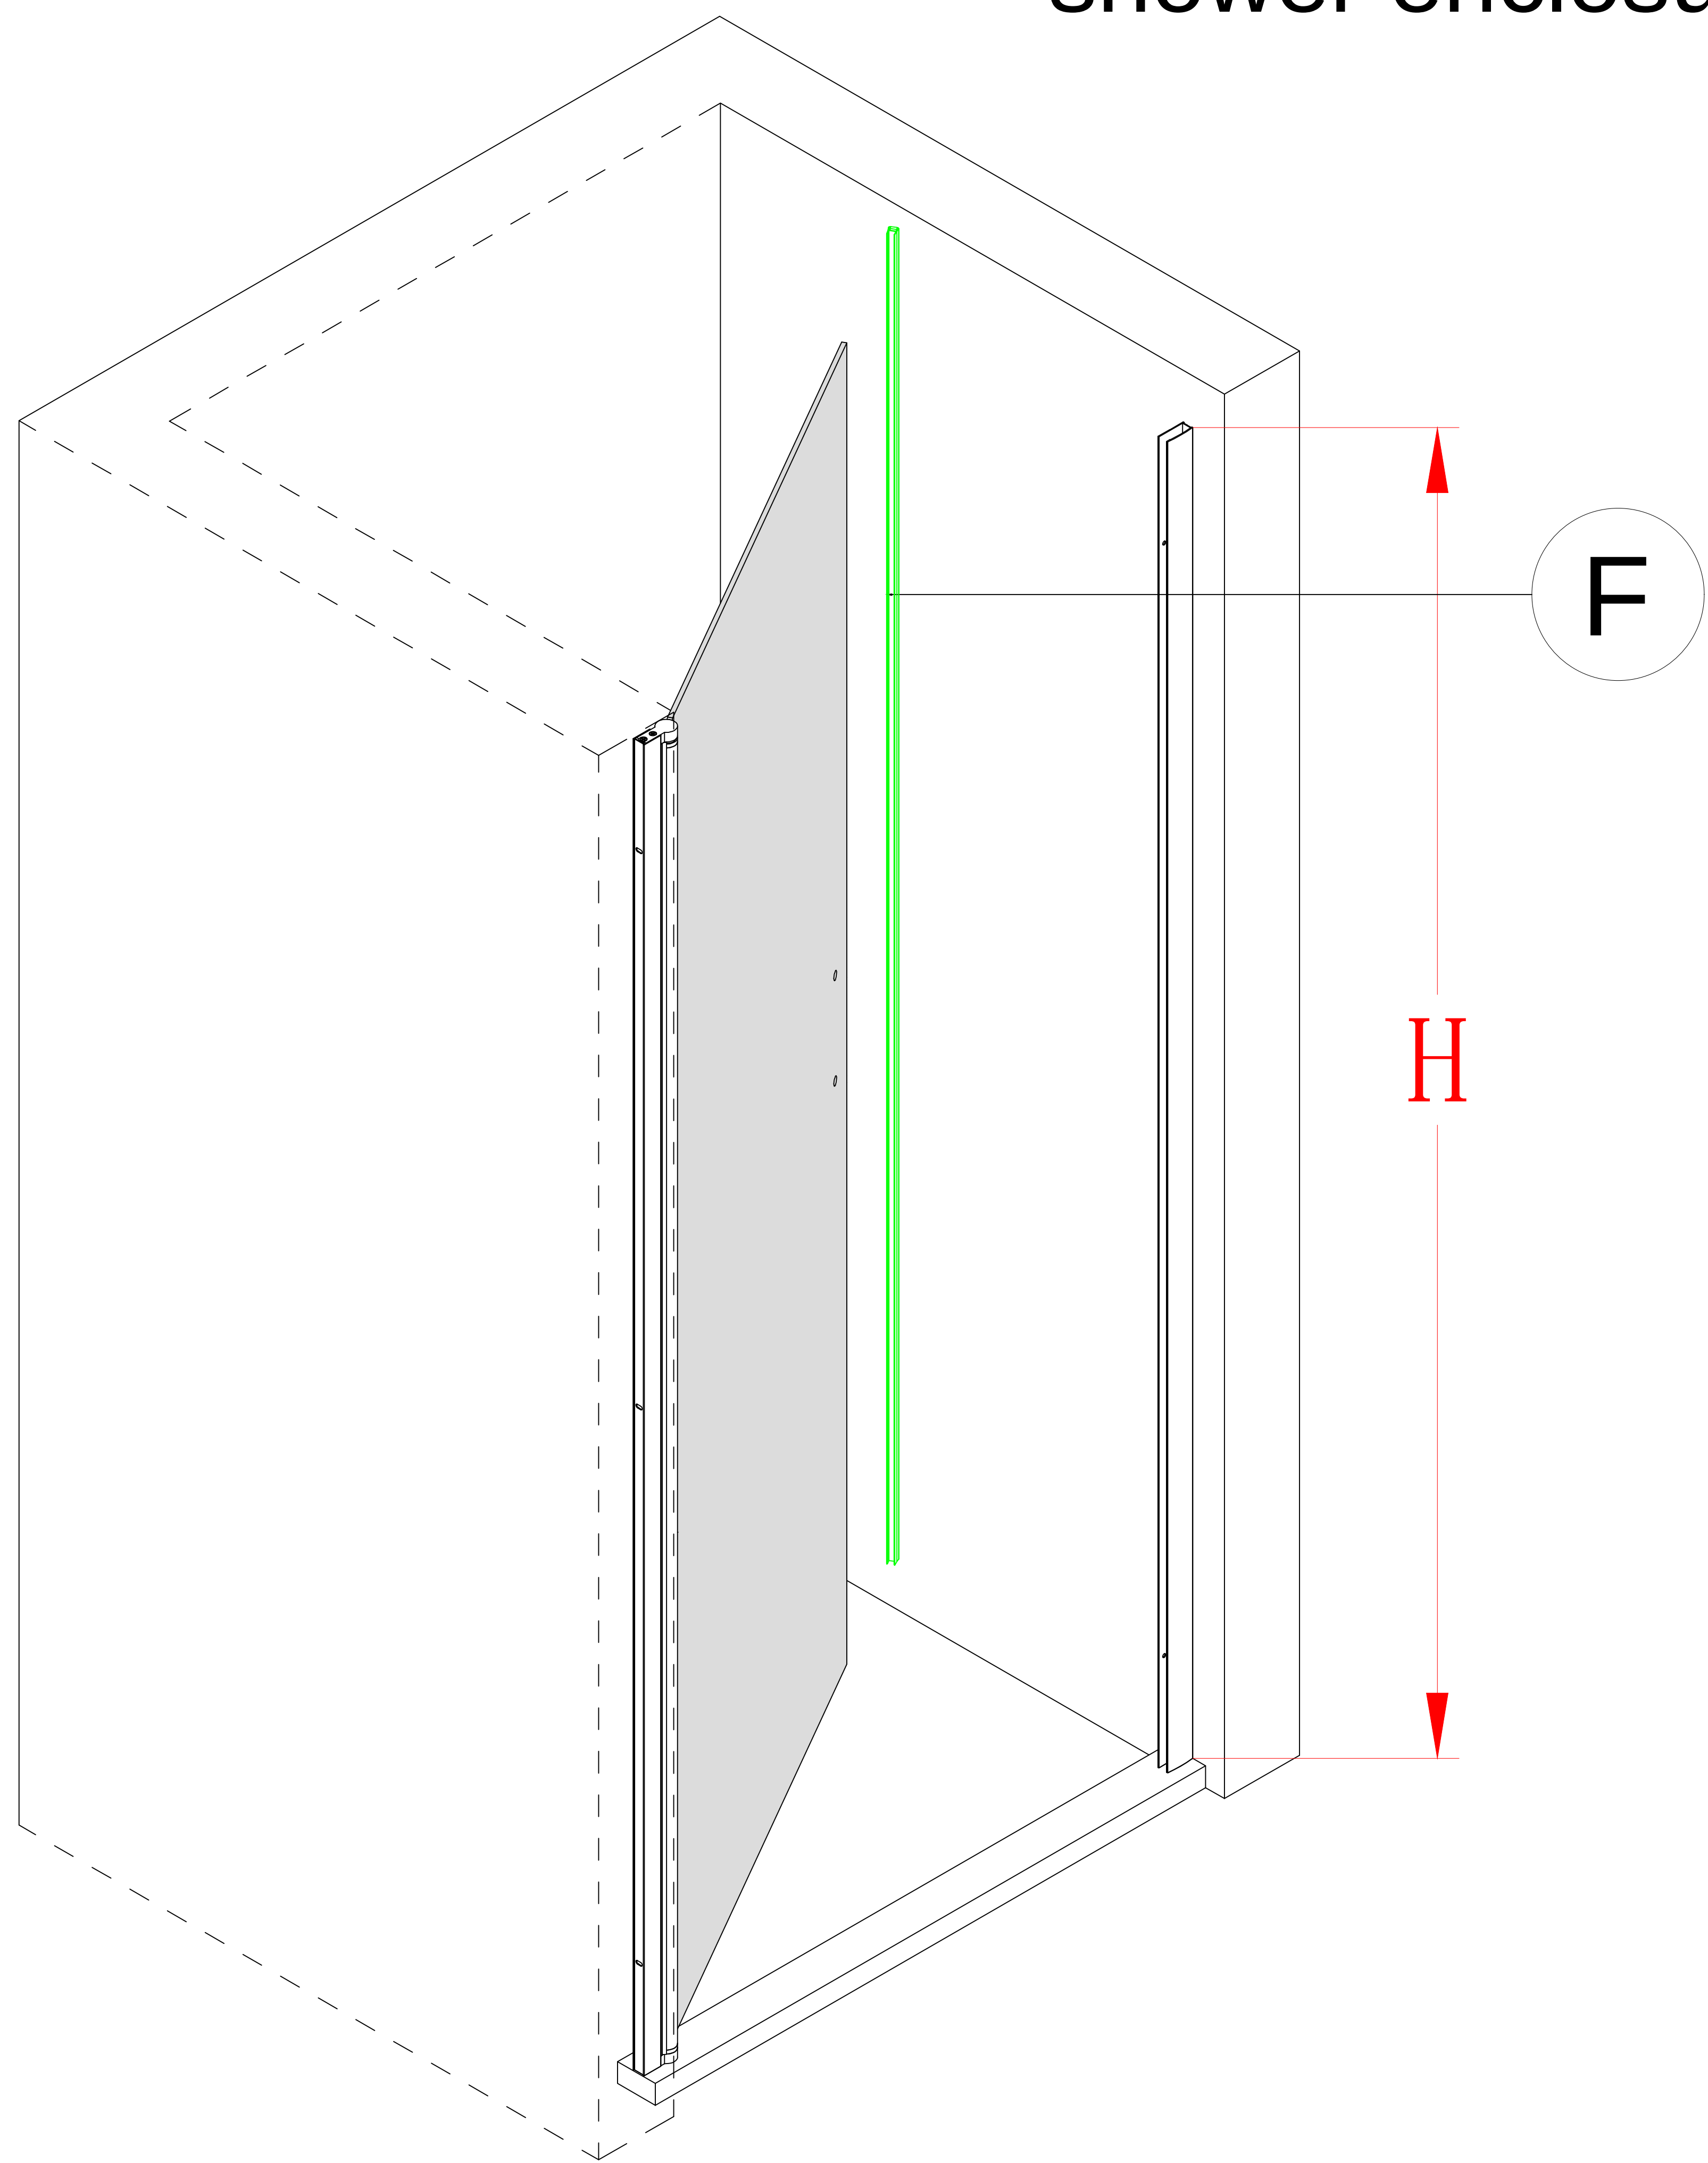

cut the magnetic strips to size: $H1 = H - 3\text{mm} (\frac{1}{8}'')$ (for strips F)

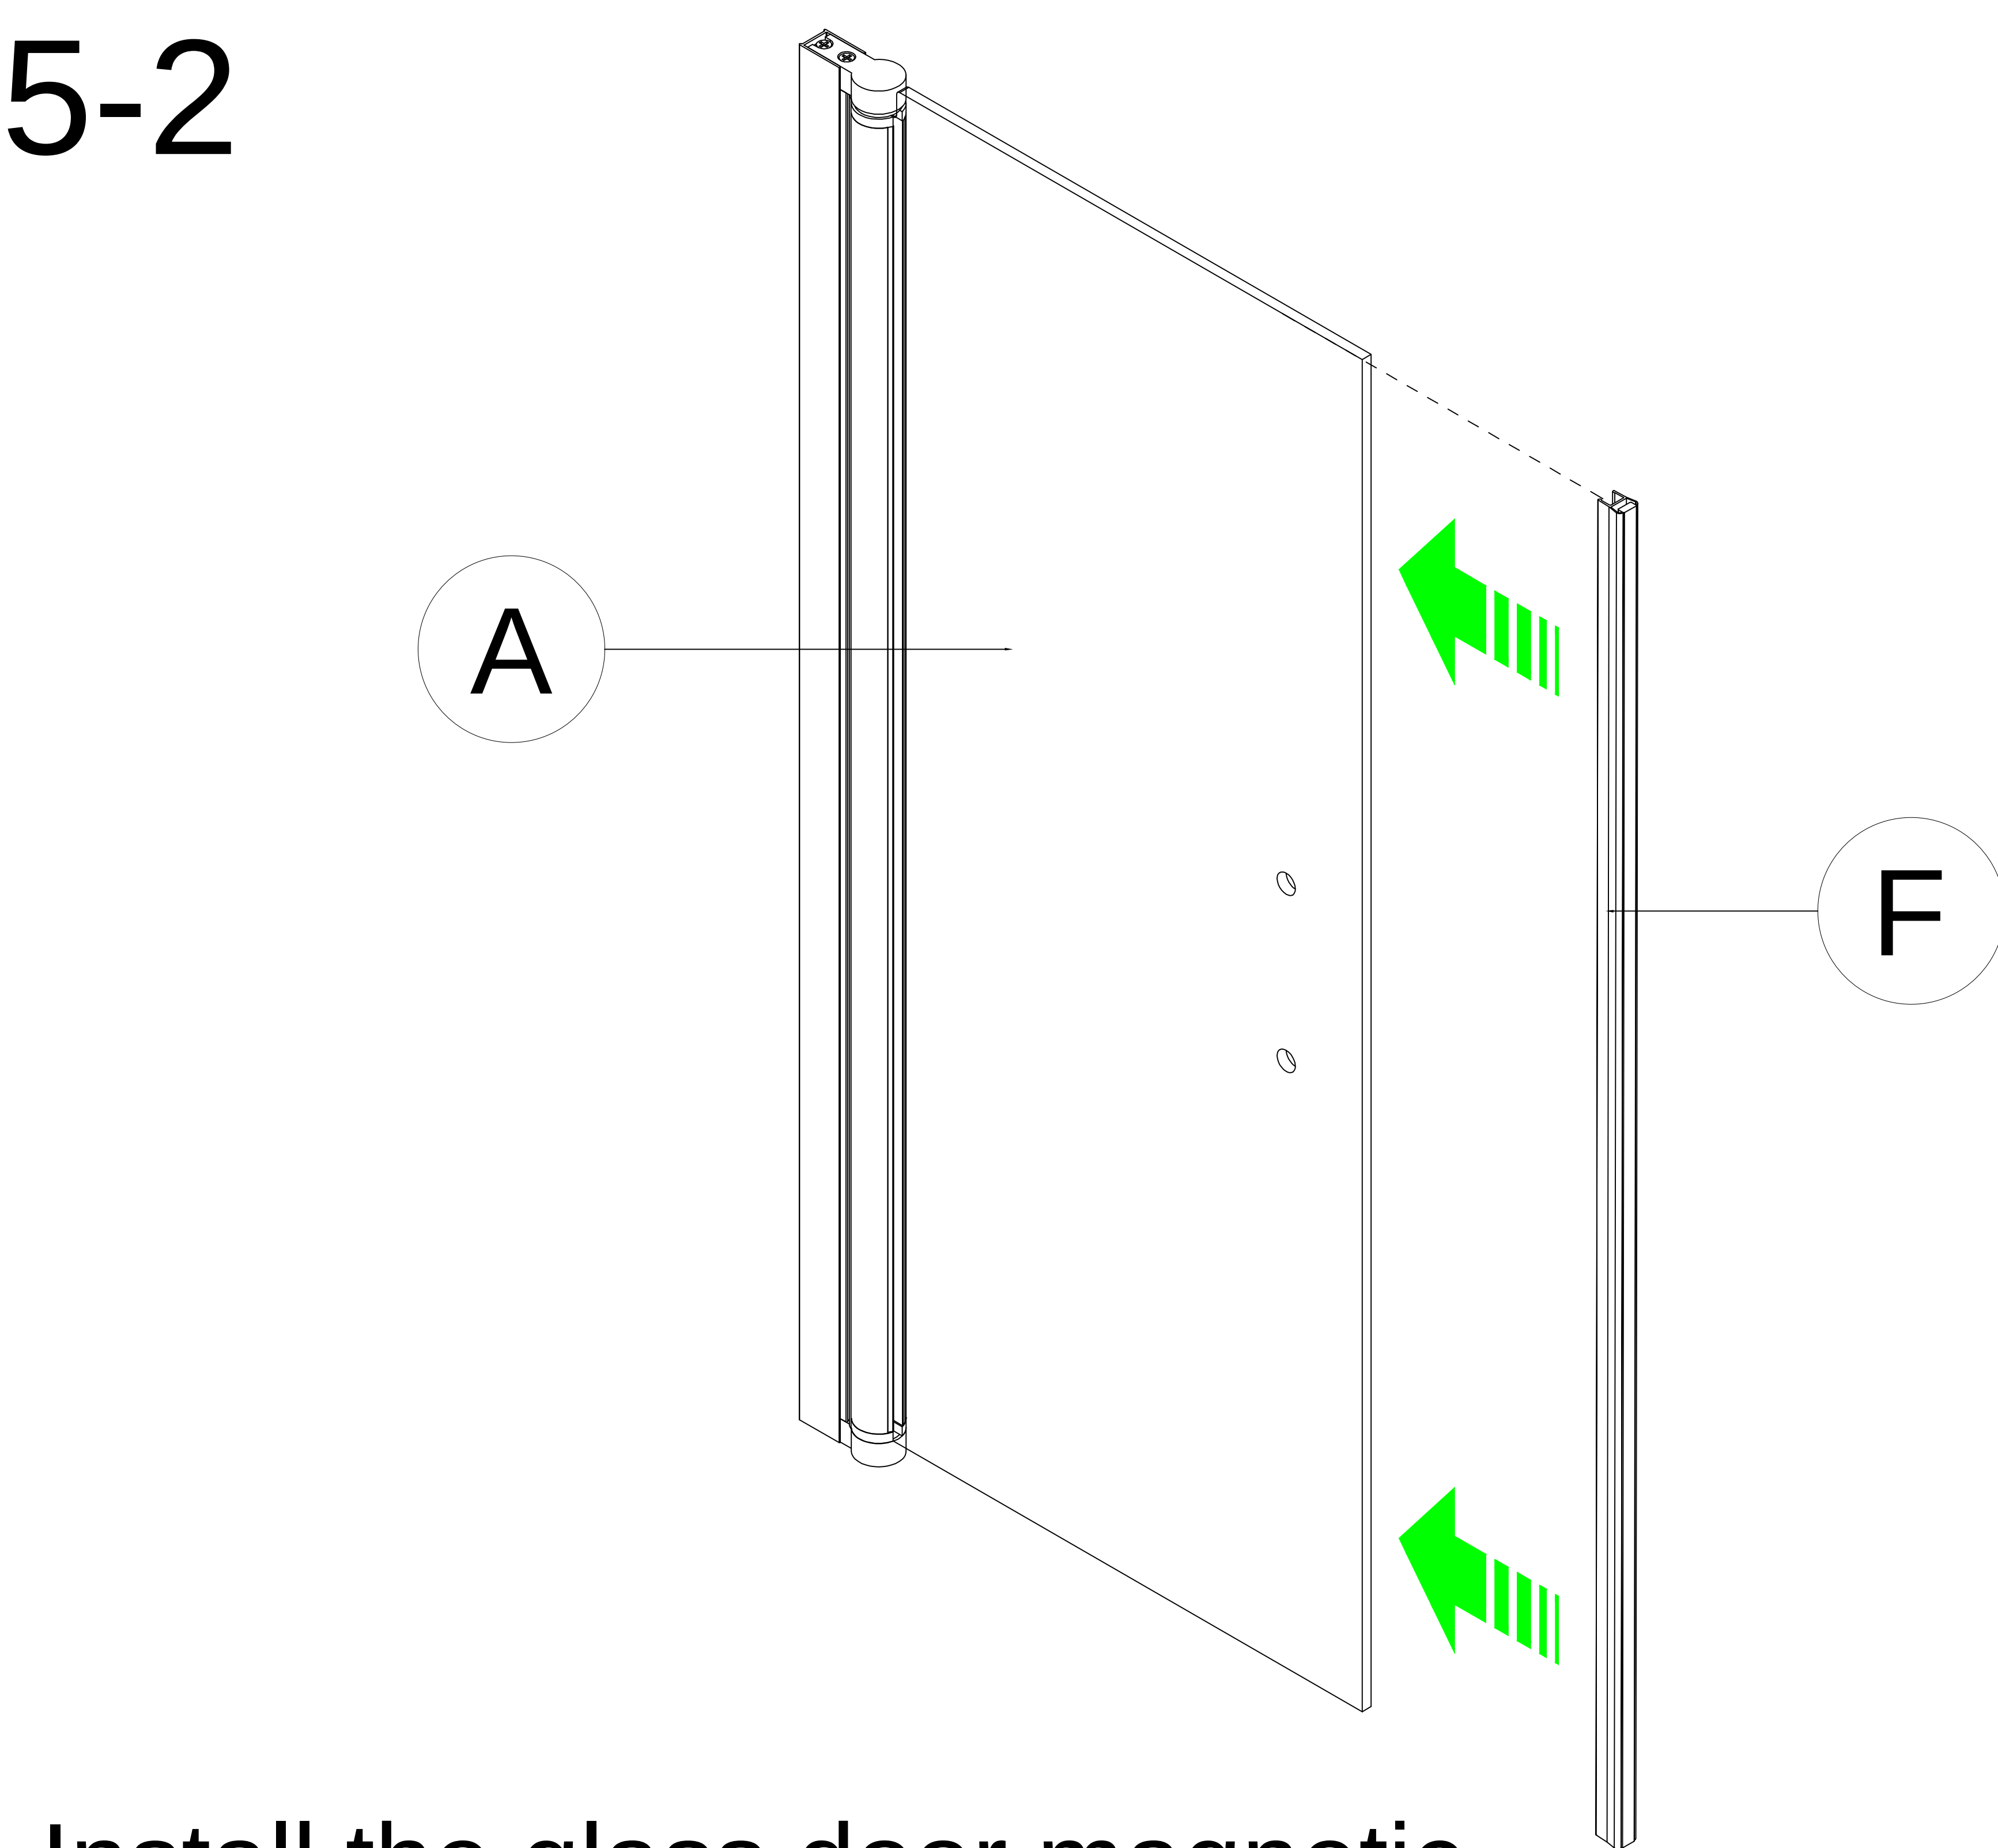


Install the glass door magnetic strip (F), aligning it with the top of the glass.

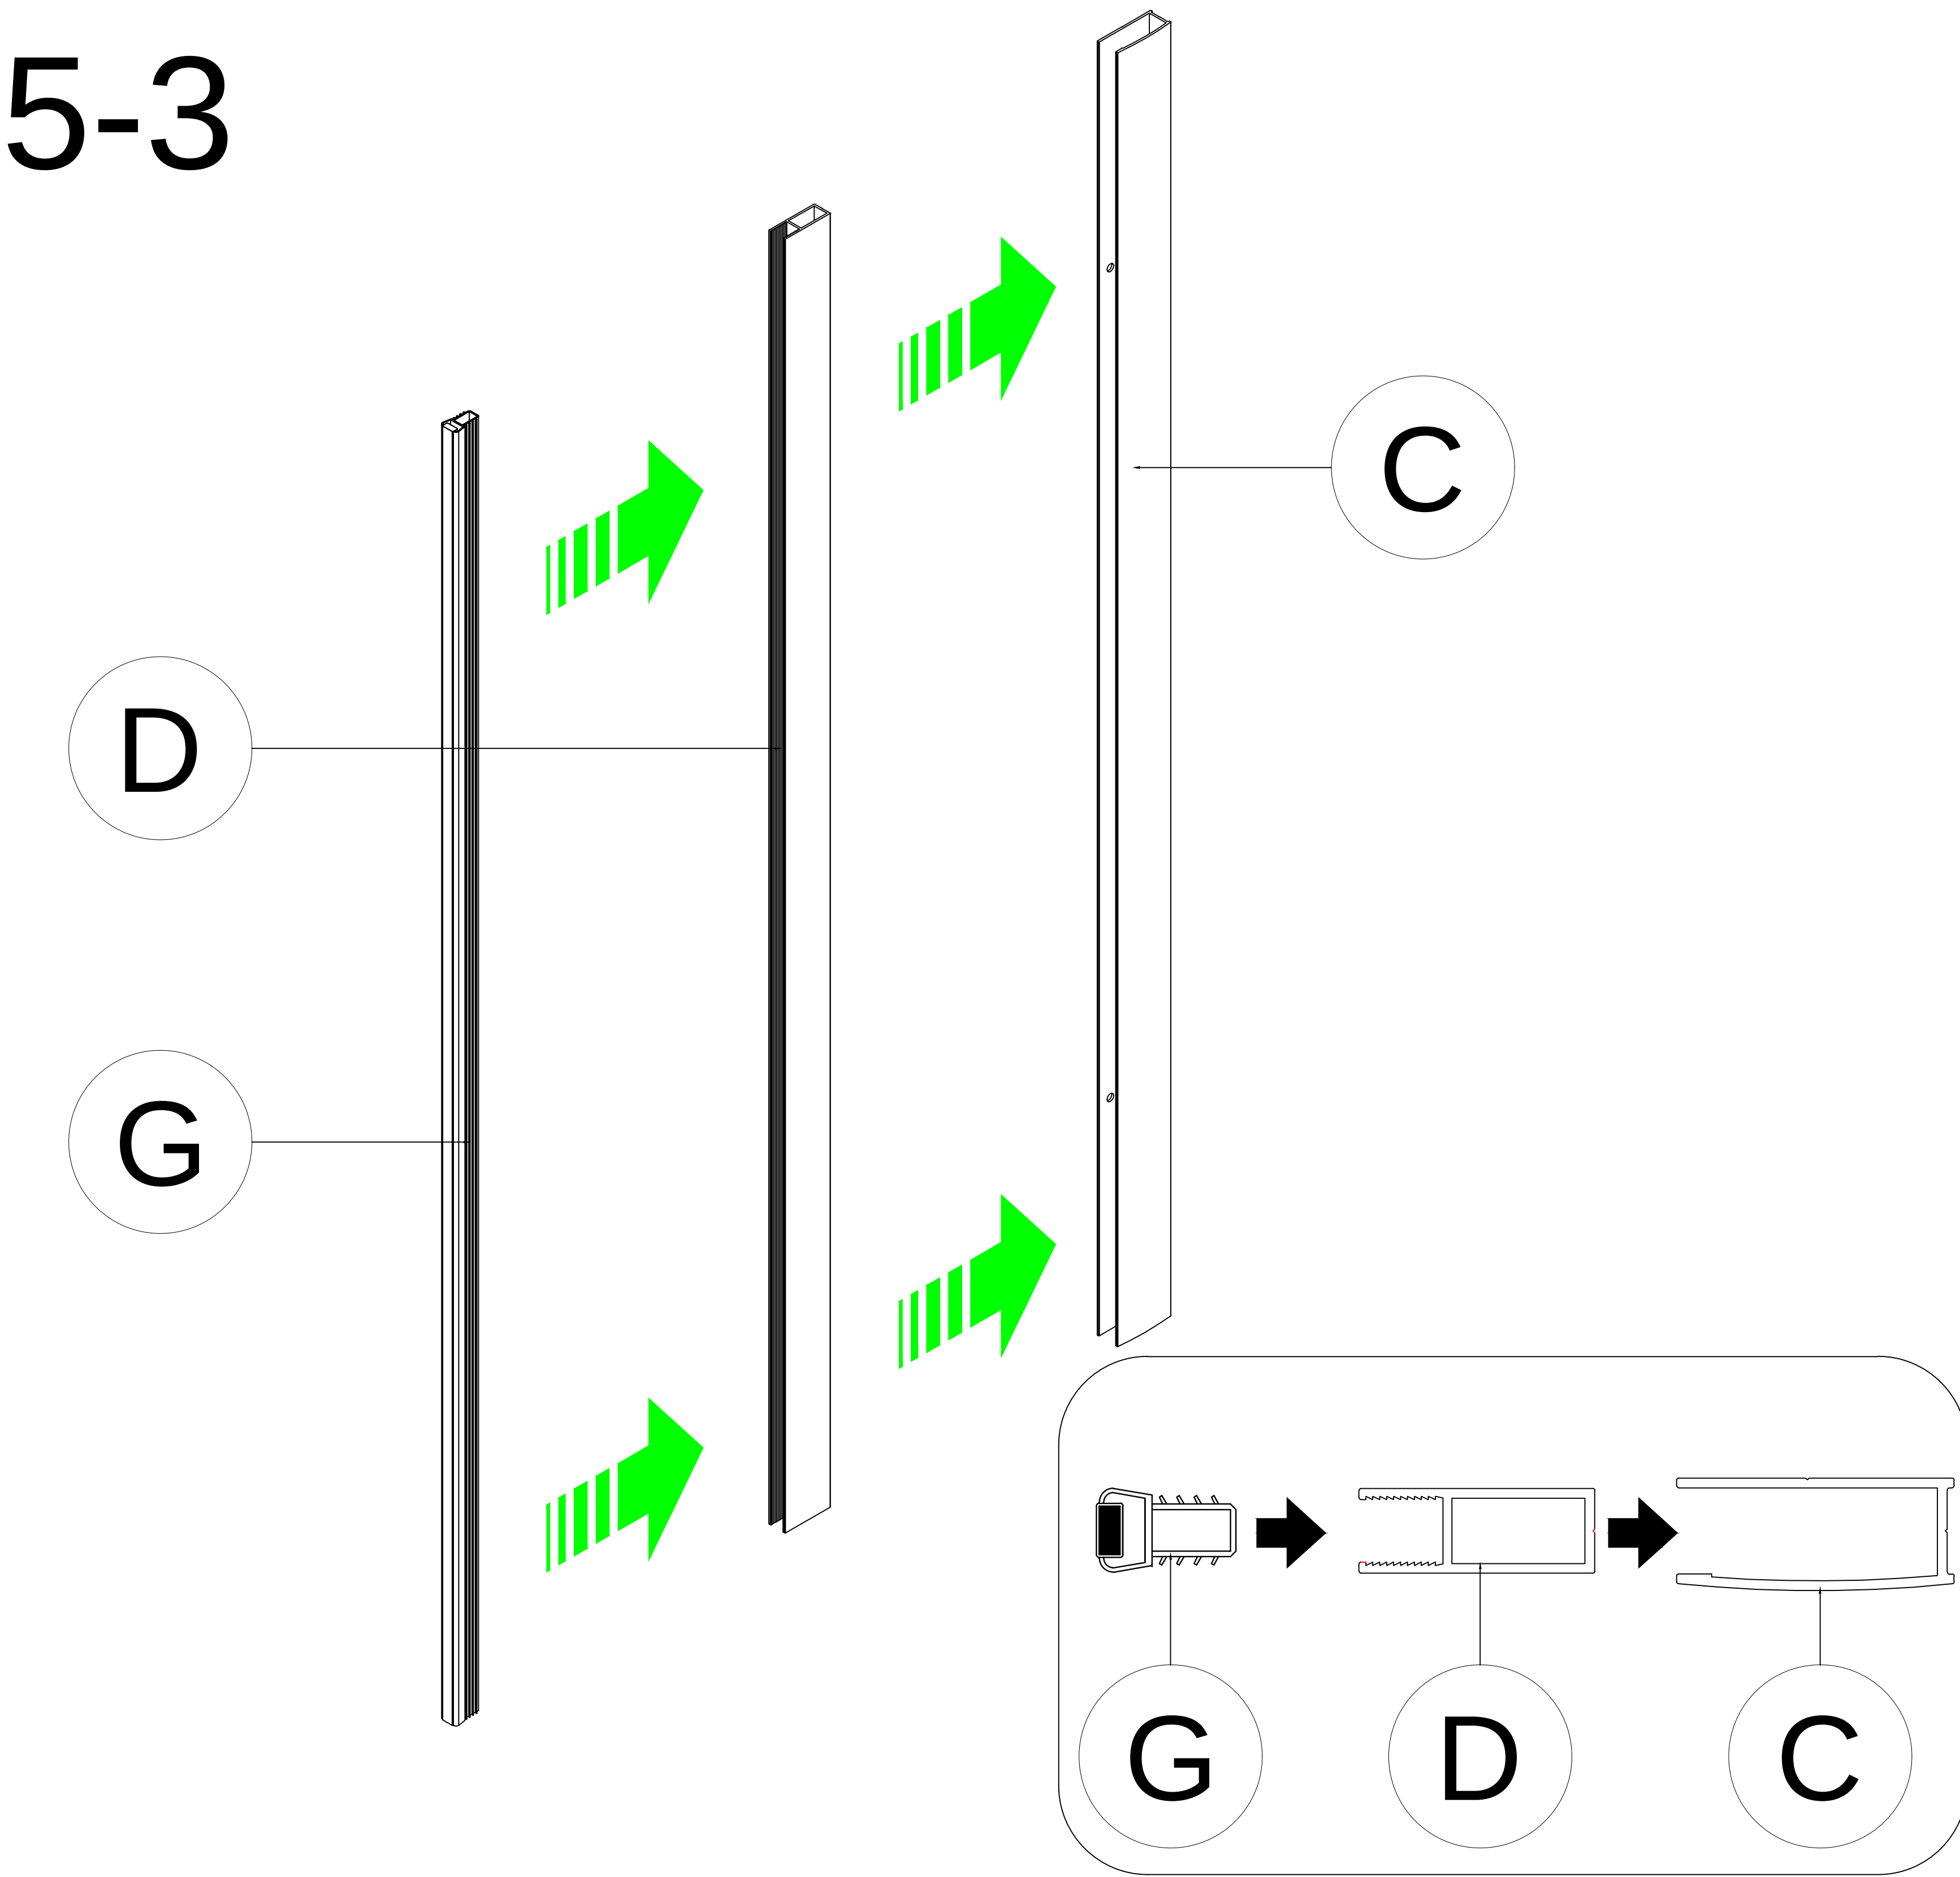



Install the magnetic side jamb - B (D) and the press-in magnetic strip (G).


STEP 6
Adjustment

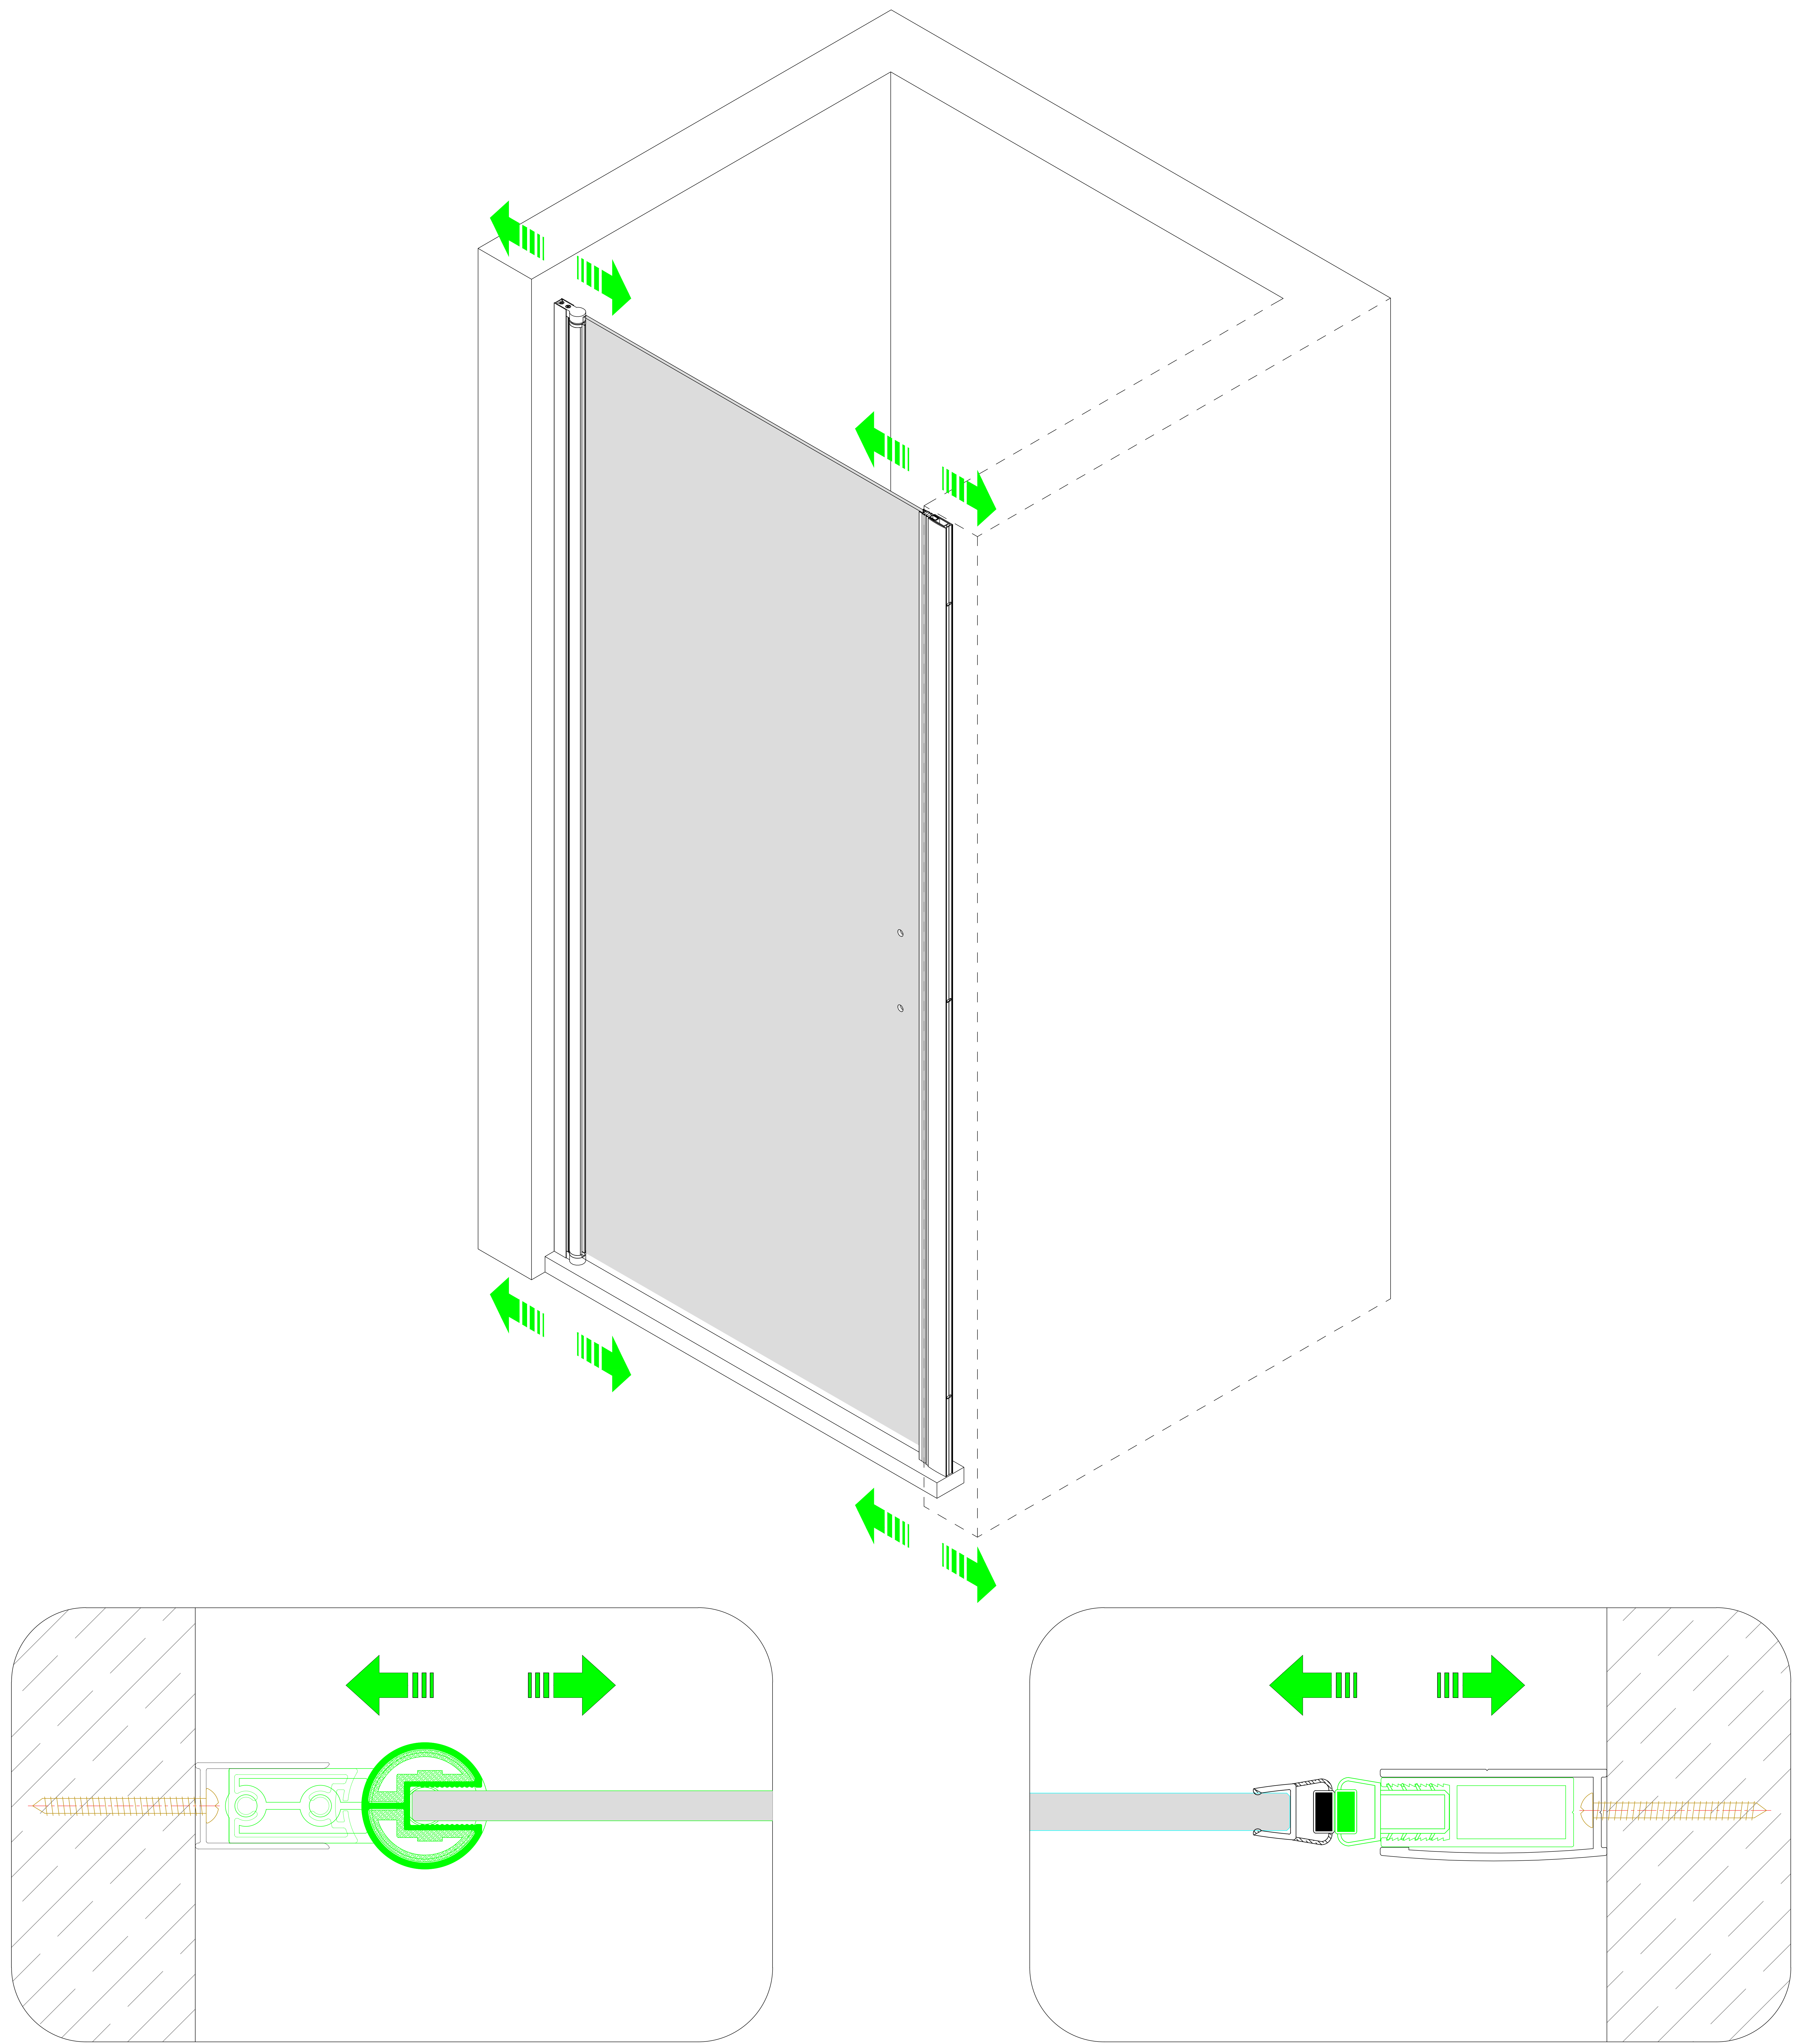

Adjust the movable glass door and magnetic side jamb - B (D)
to ensure smooth opening and closing.


STEP 7
Securing

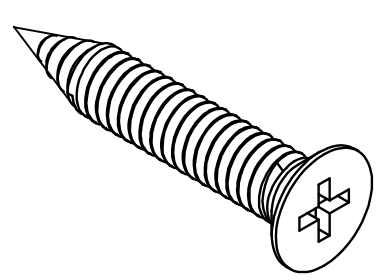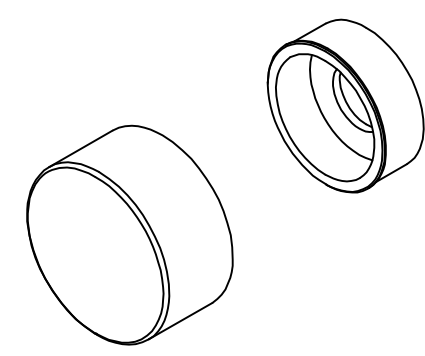I		X4
J		X4

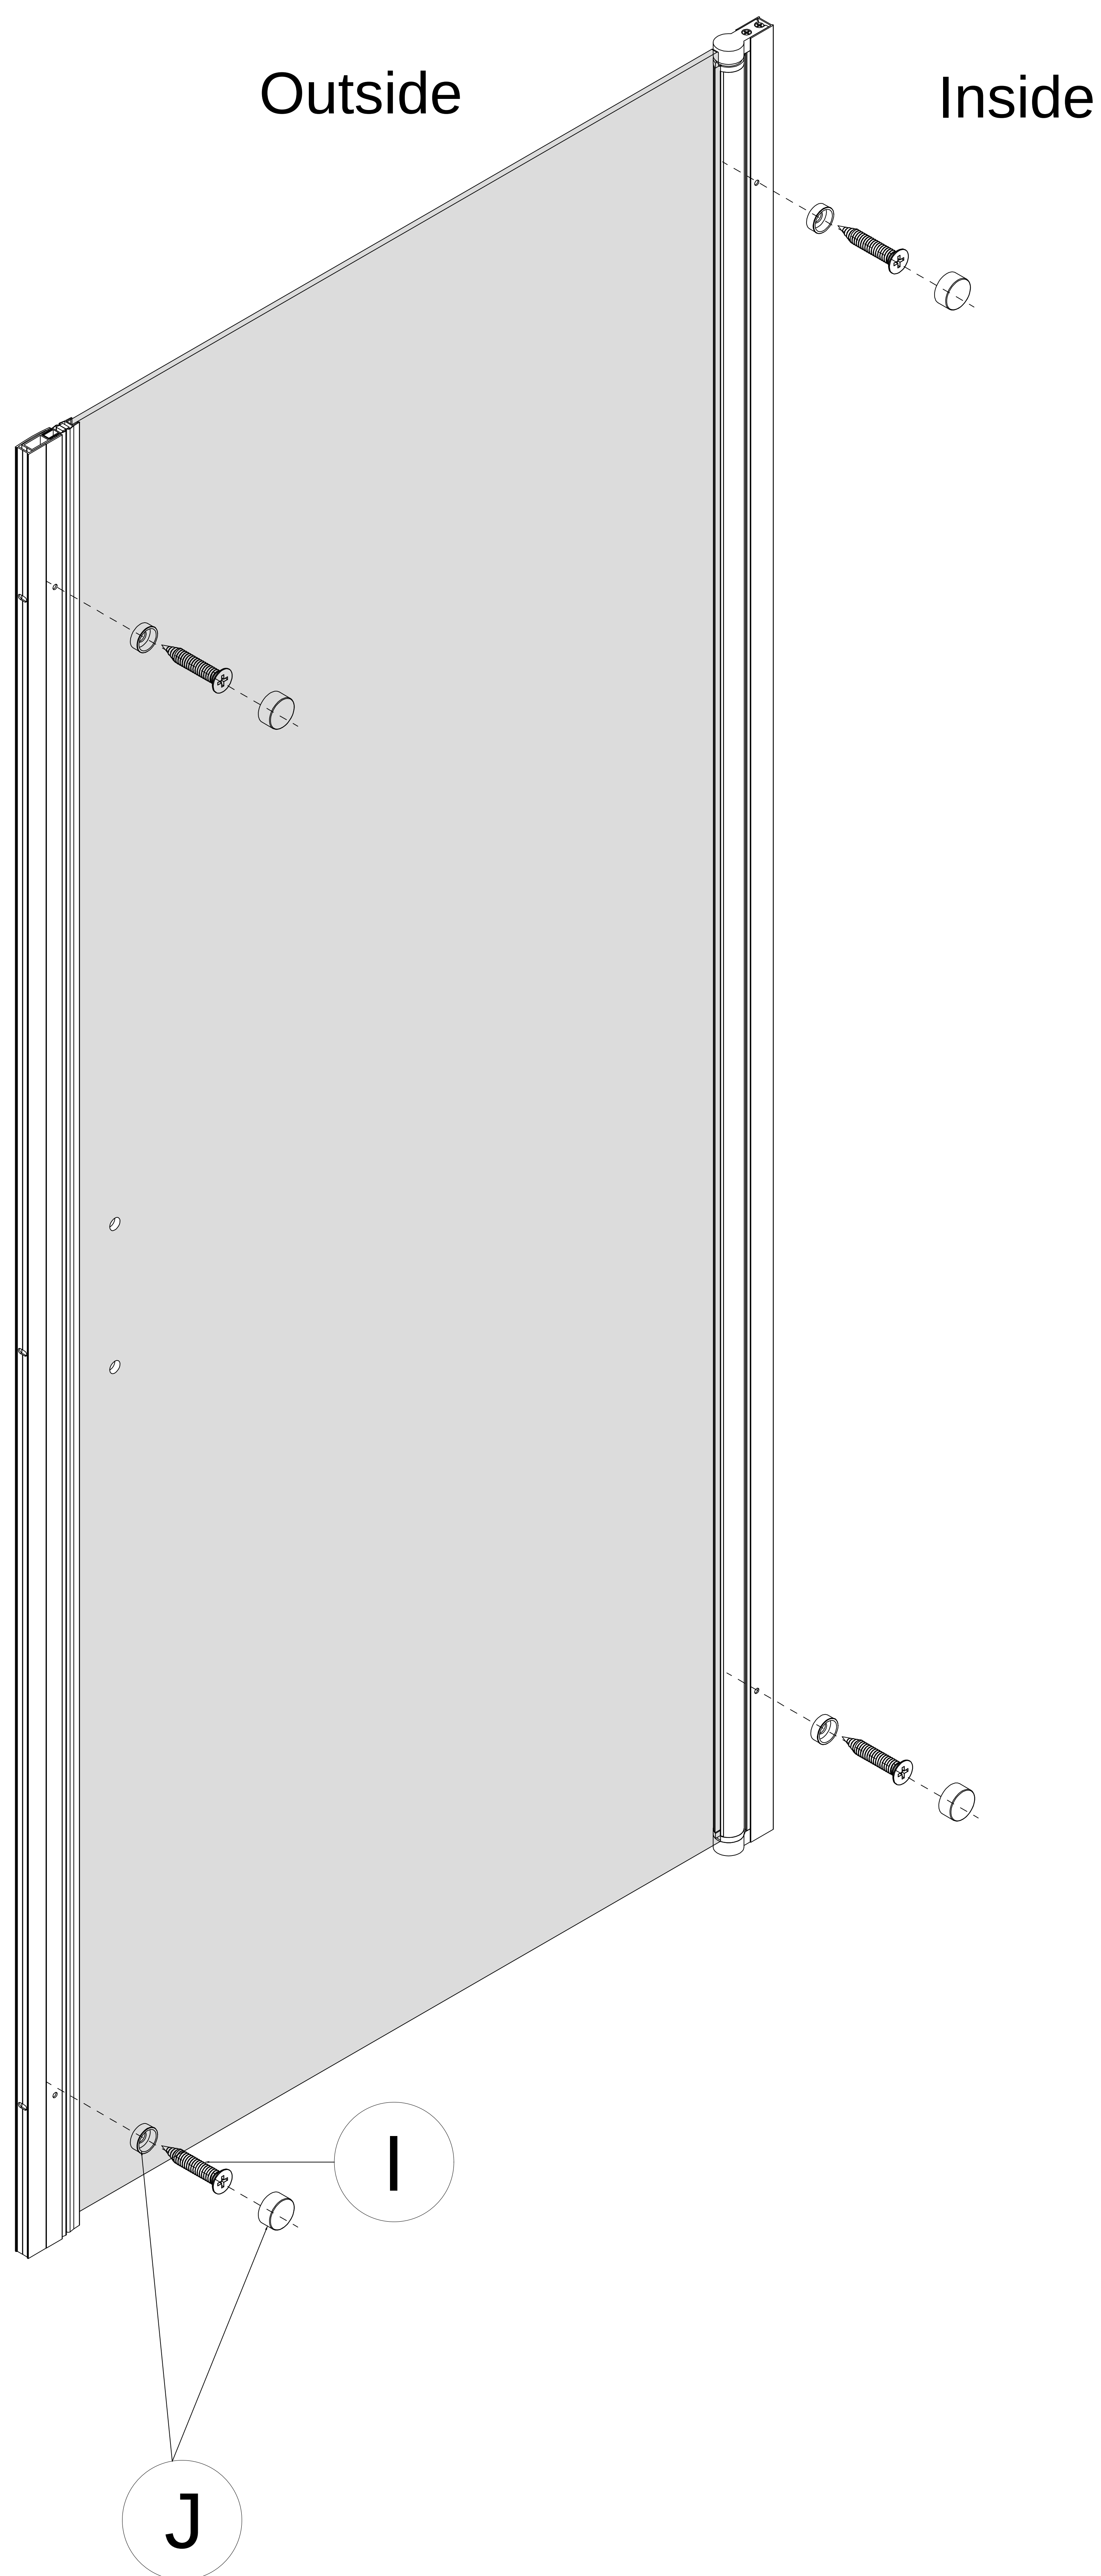


7-1

Drill 3.2mm (16/127") holes

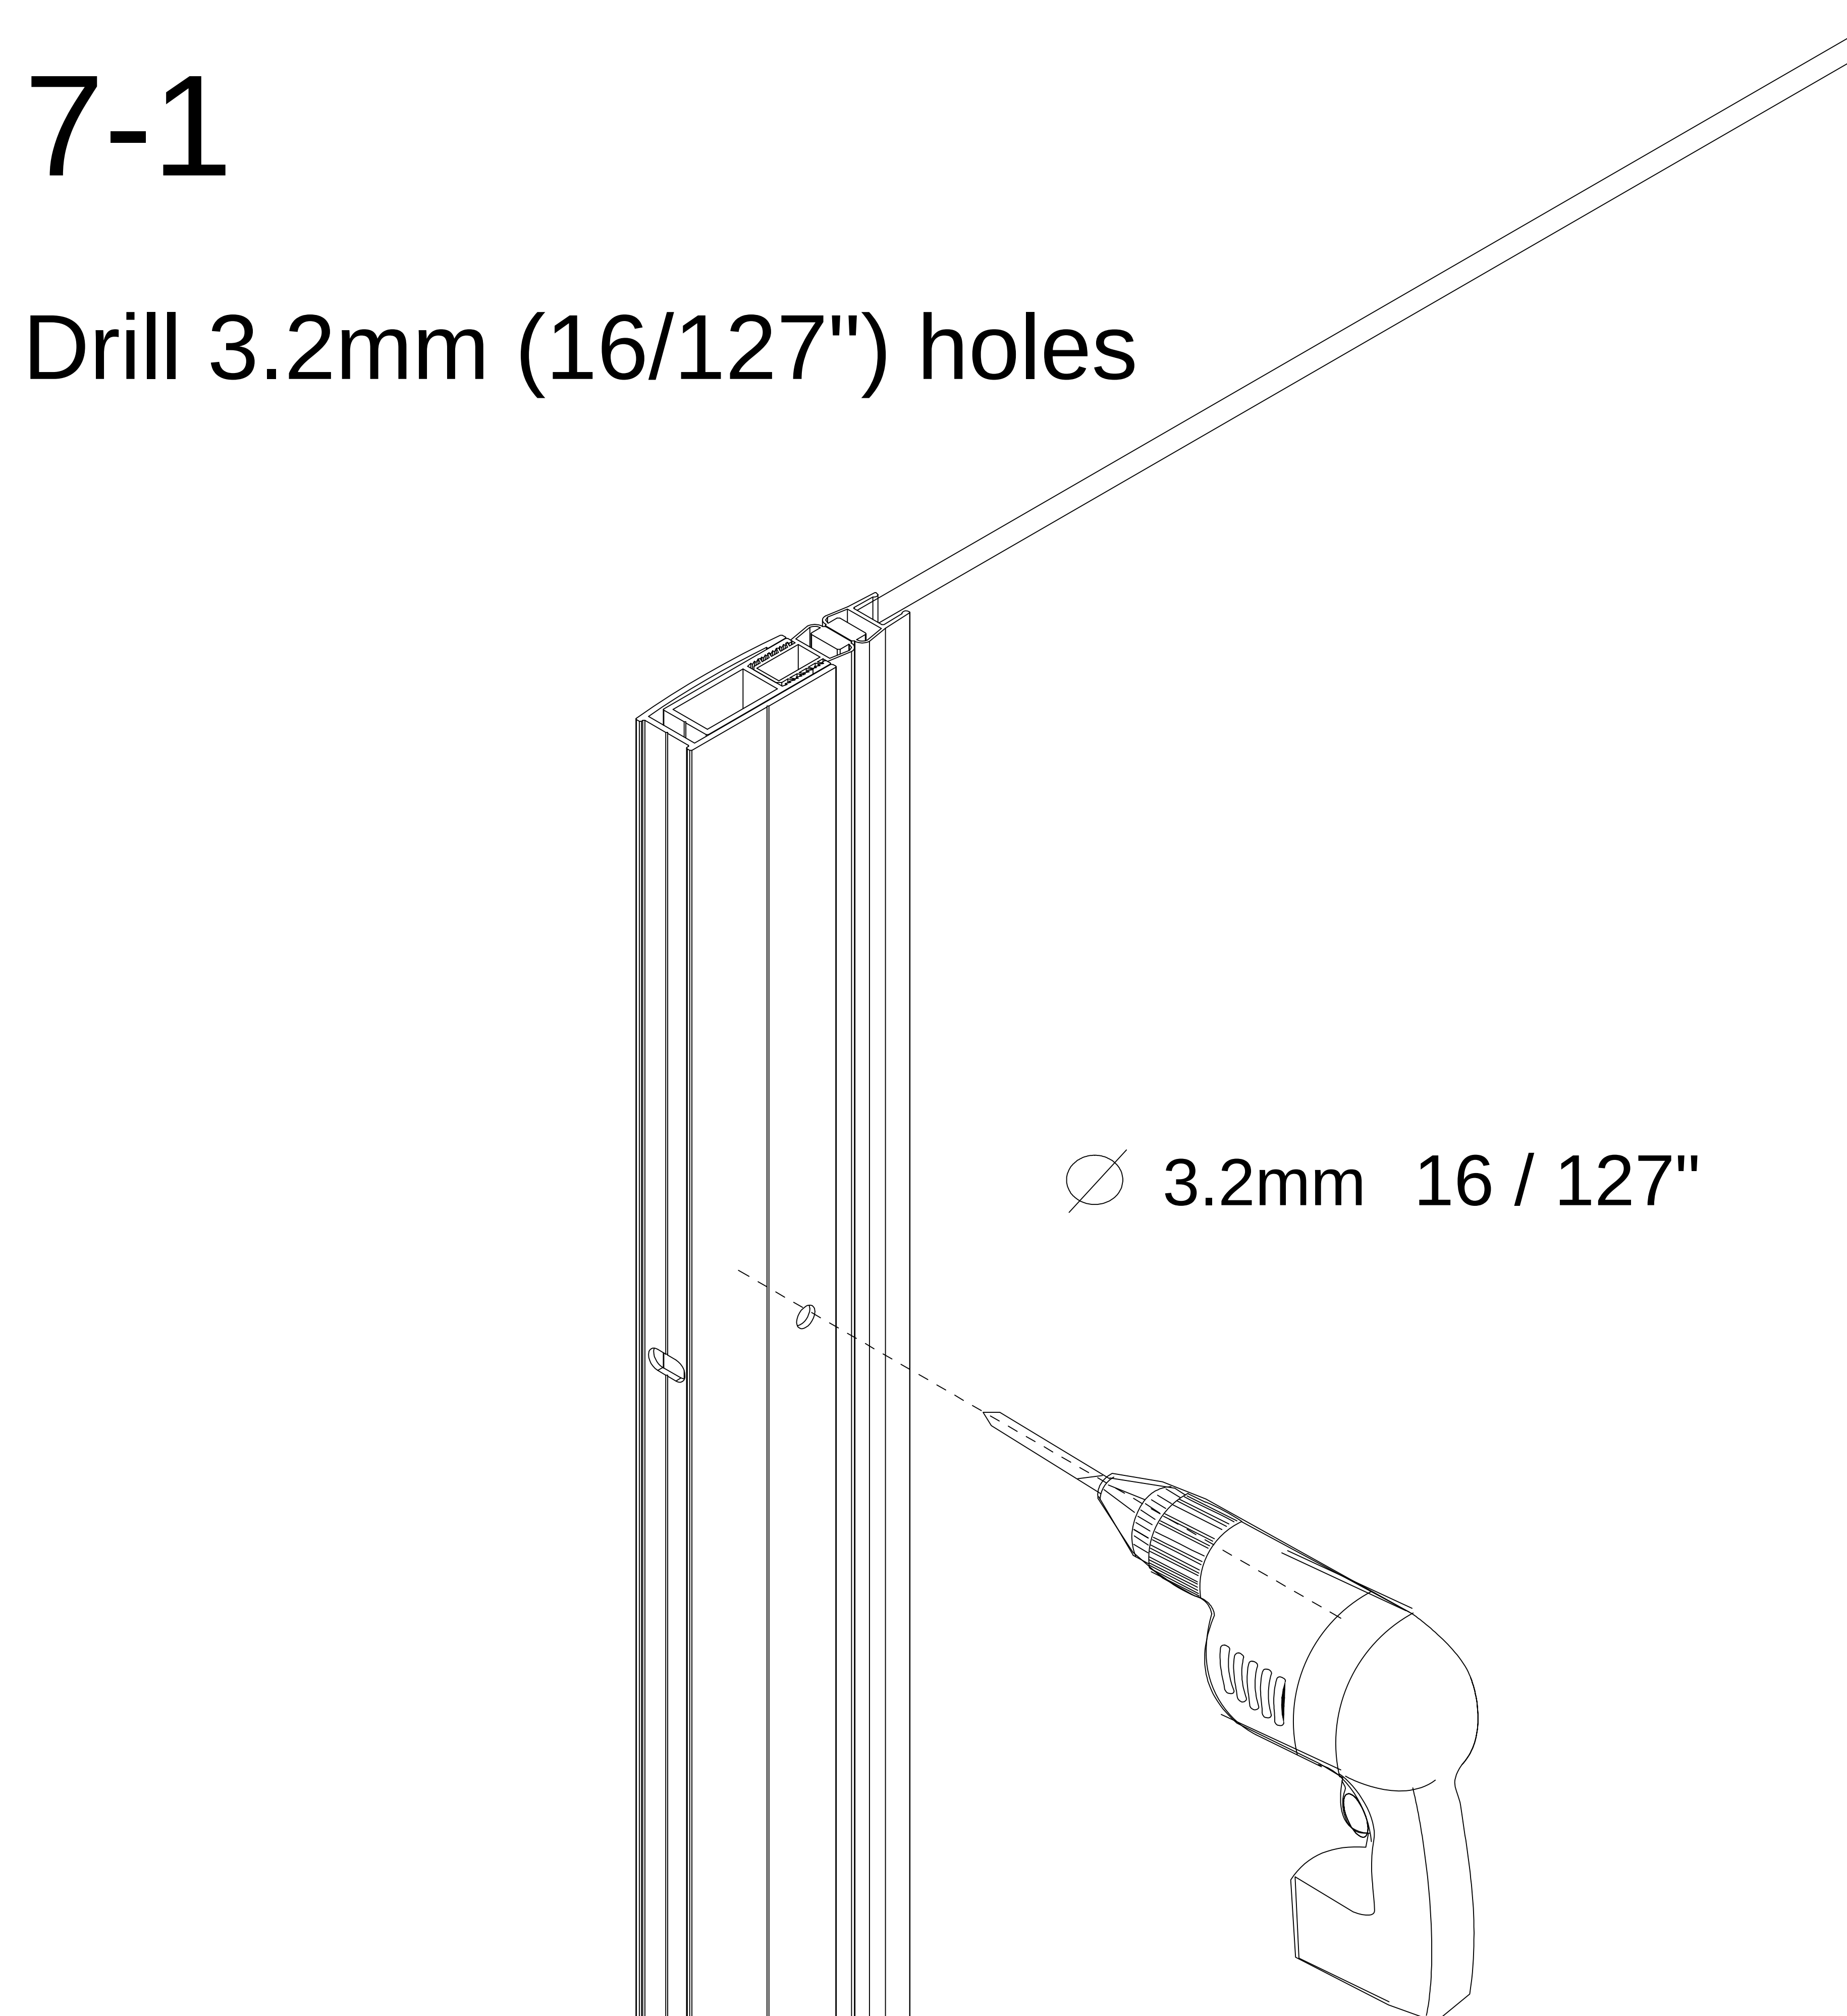


7-2

Fix with screws

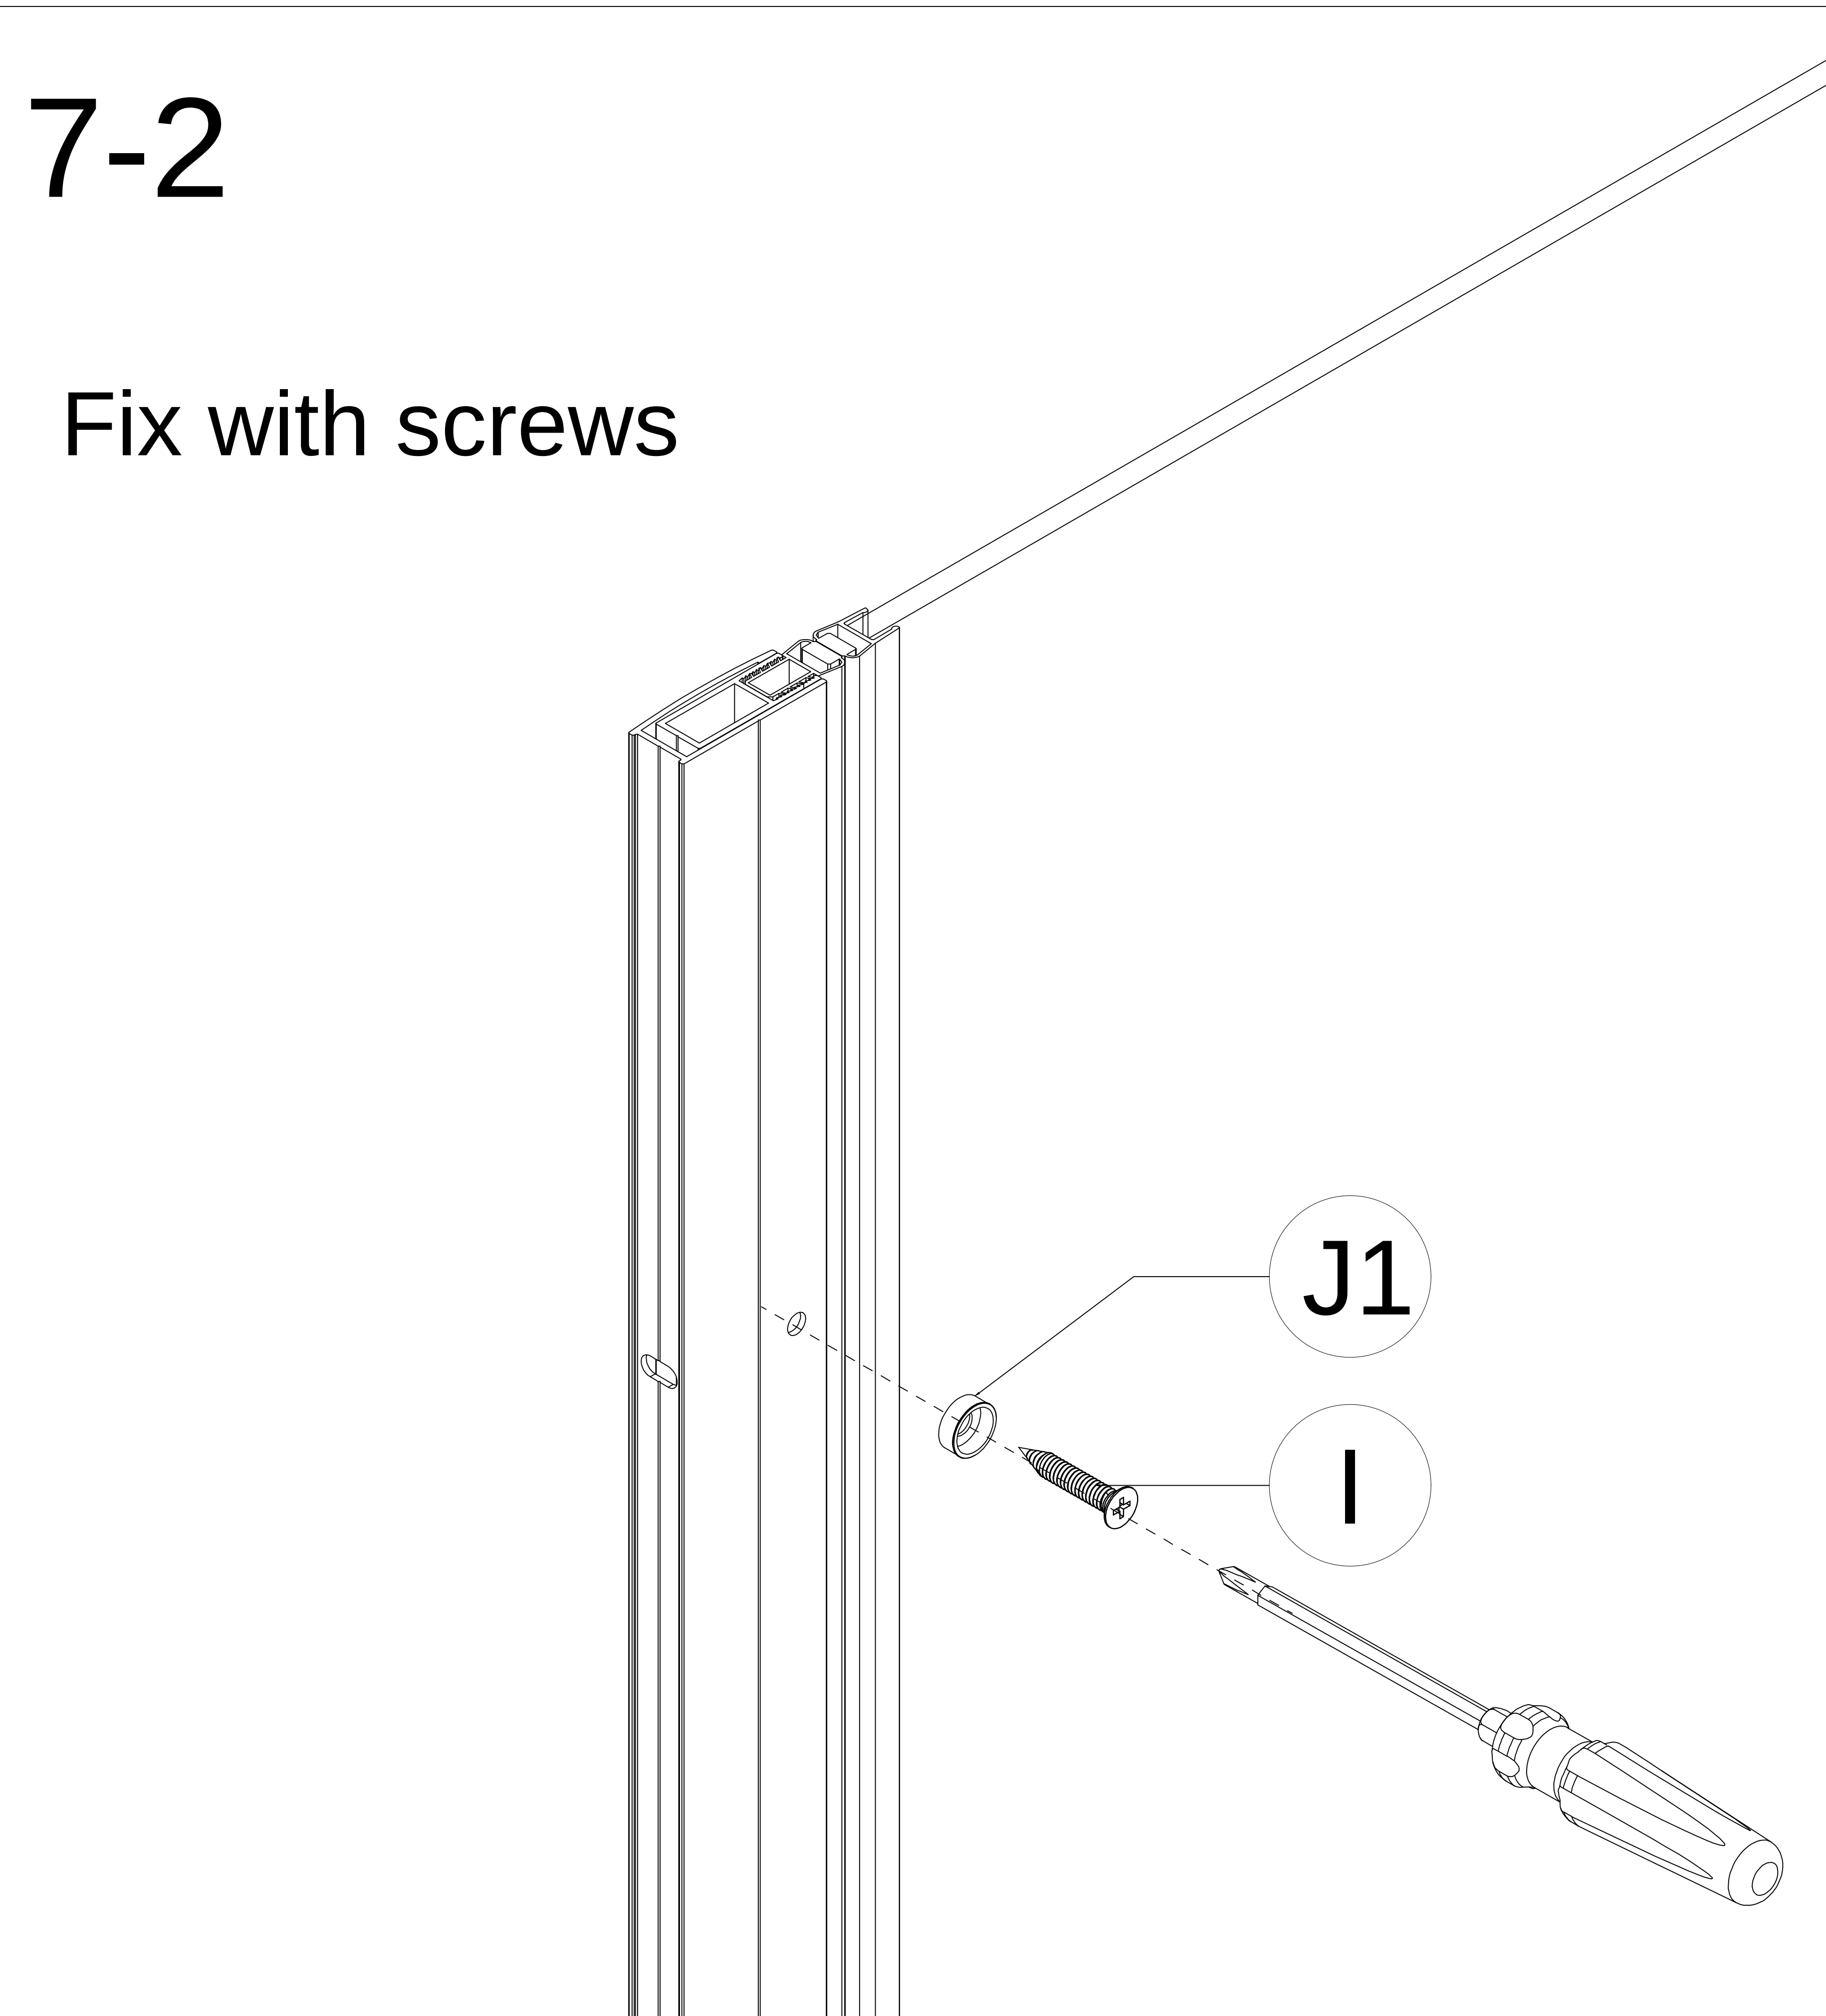


7-3

attach the decorative caps (J)

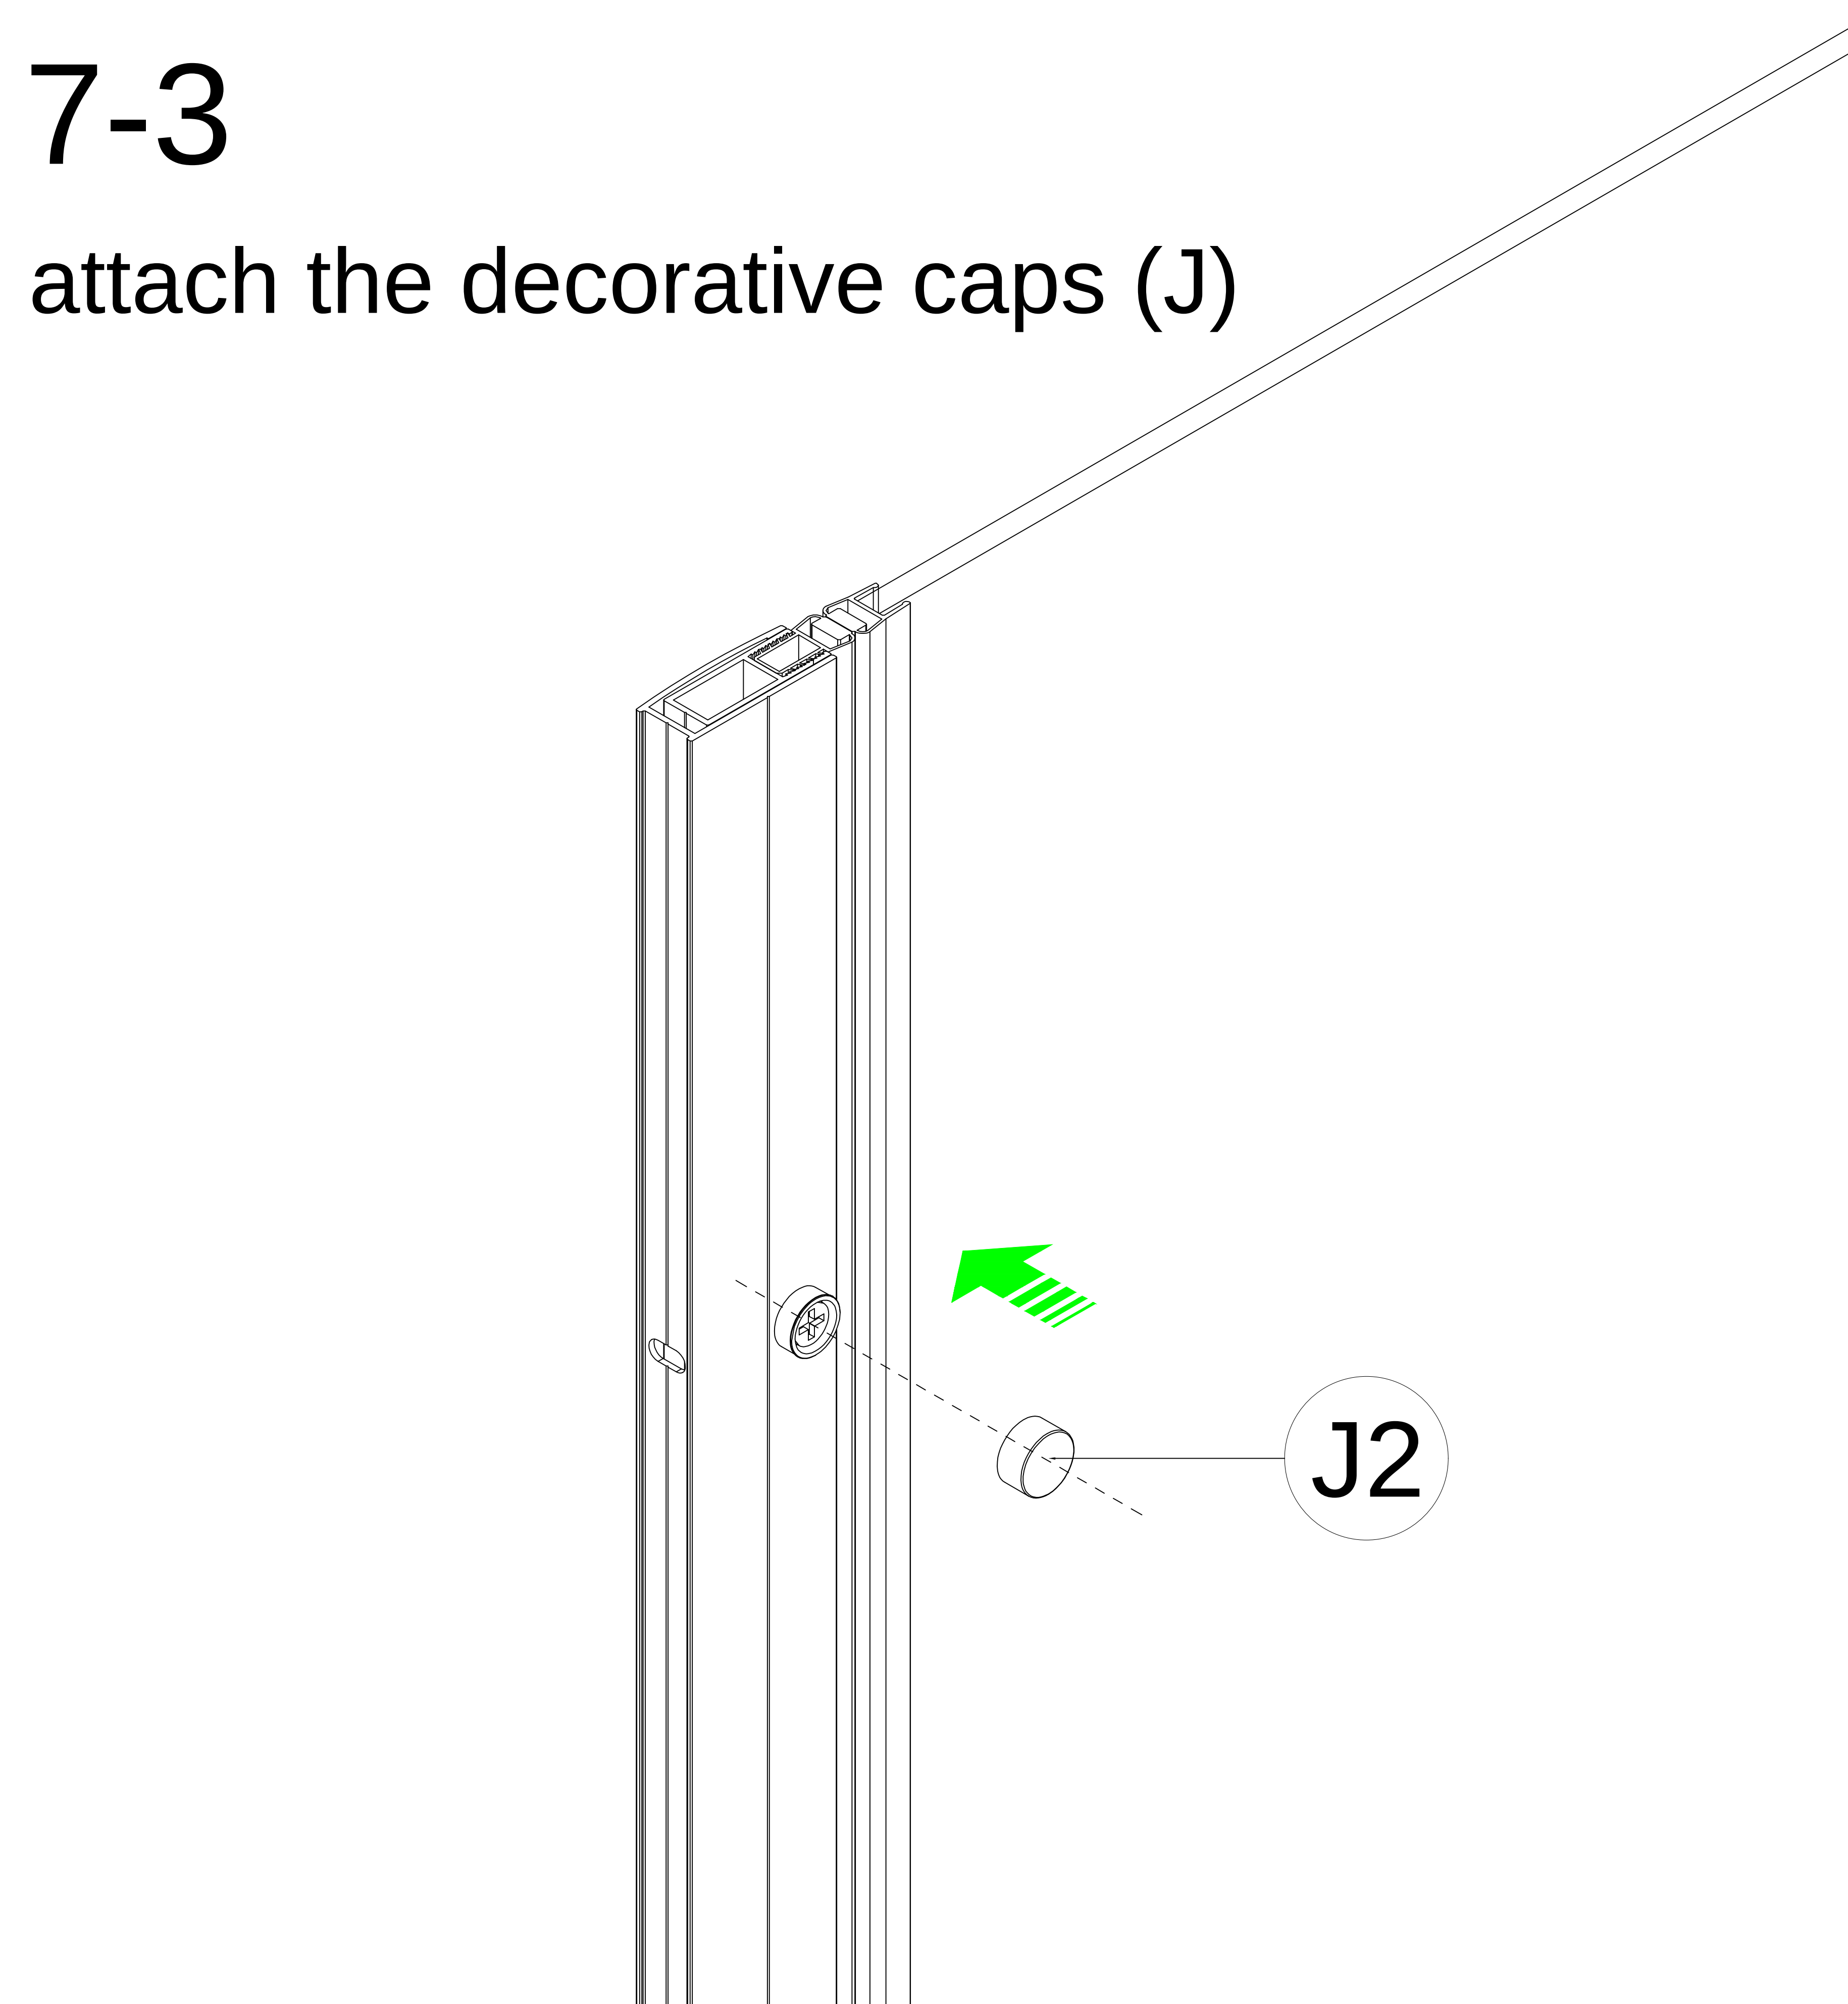


STEP 8
Install the Bottom Water Seal Strip and
Handle

E		X1
H		X1

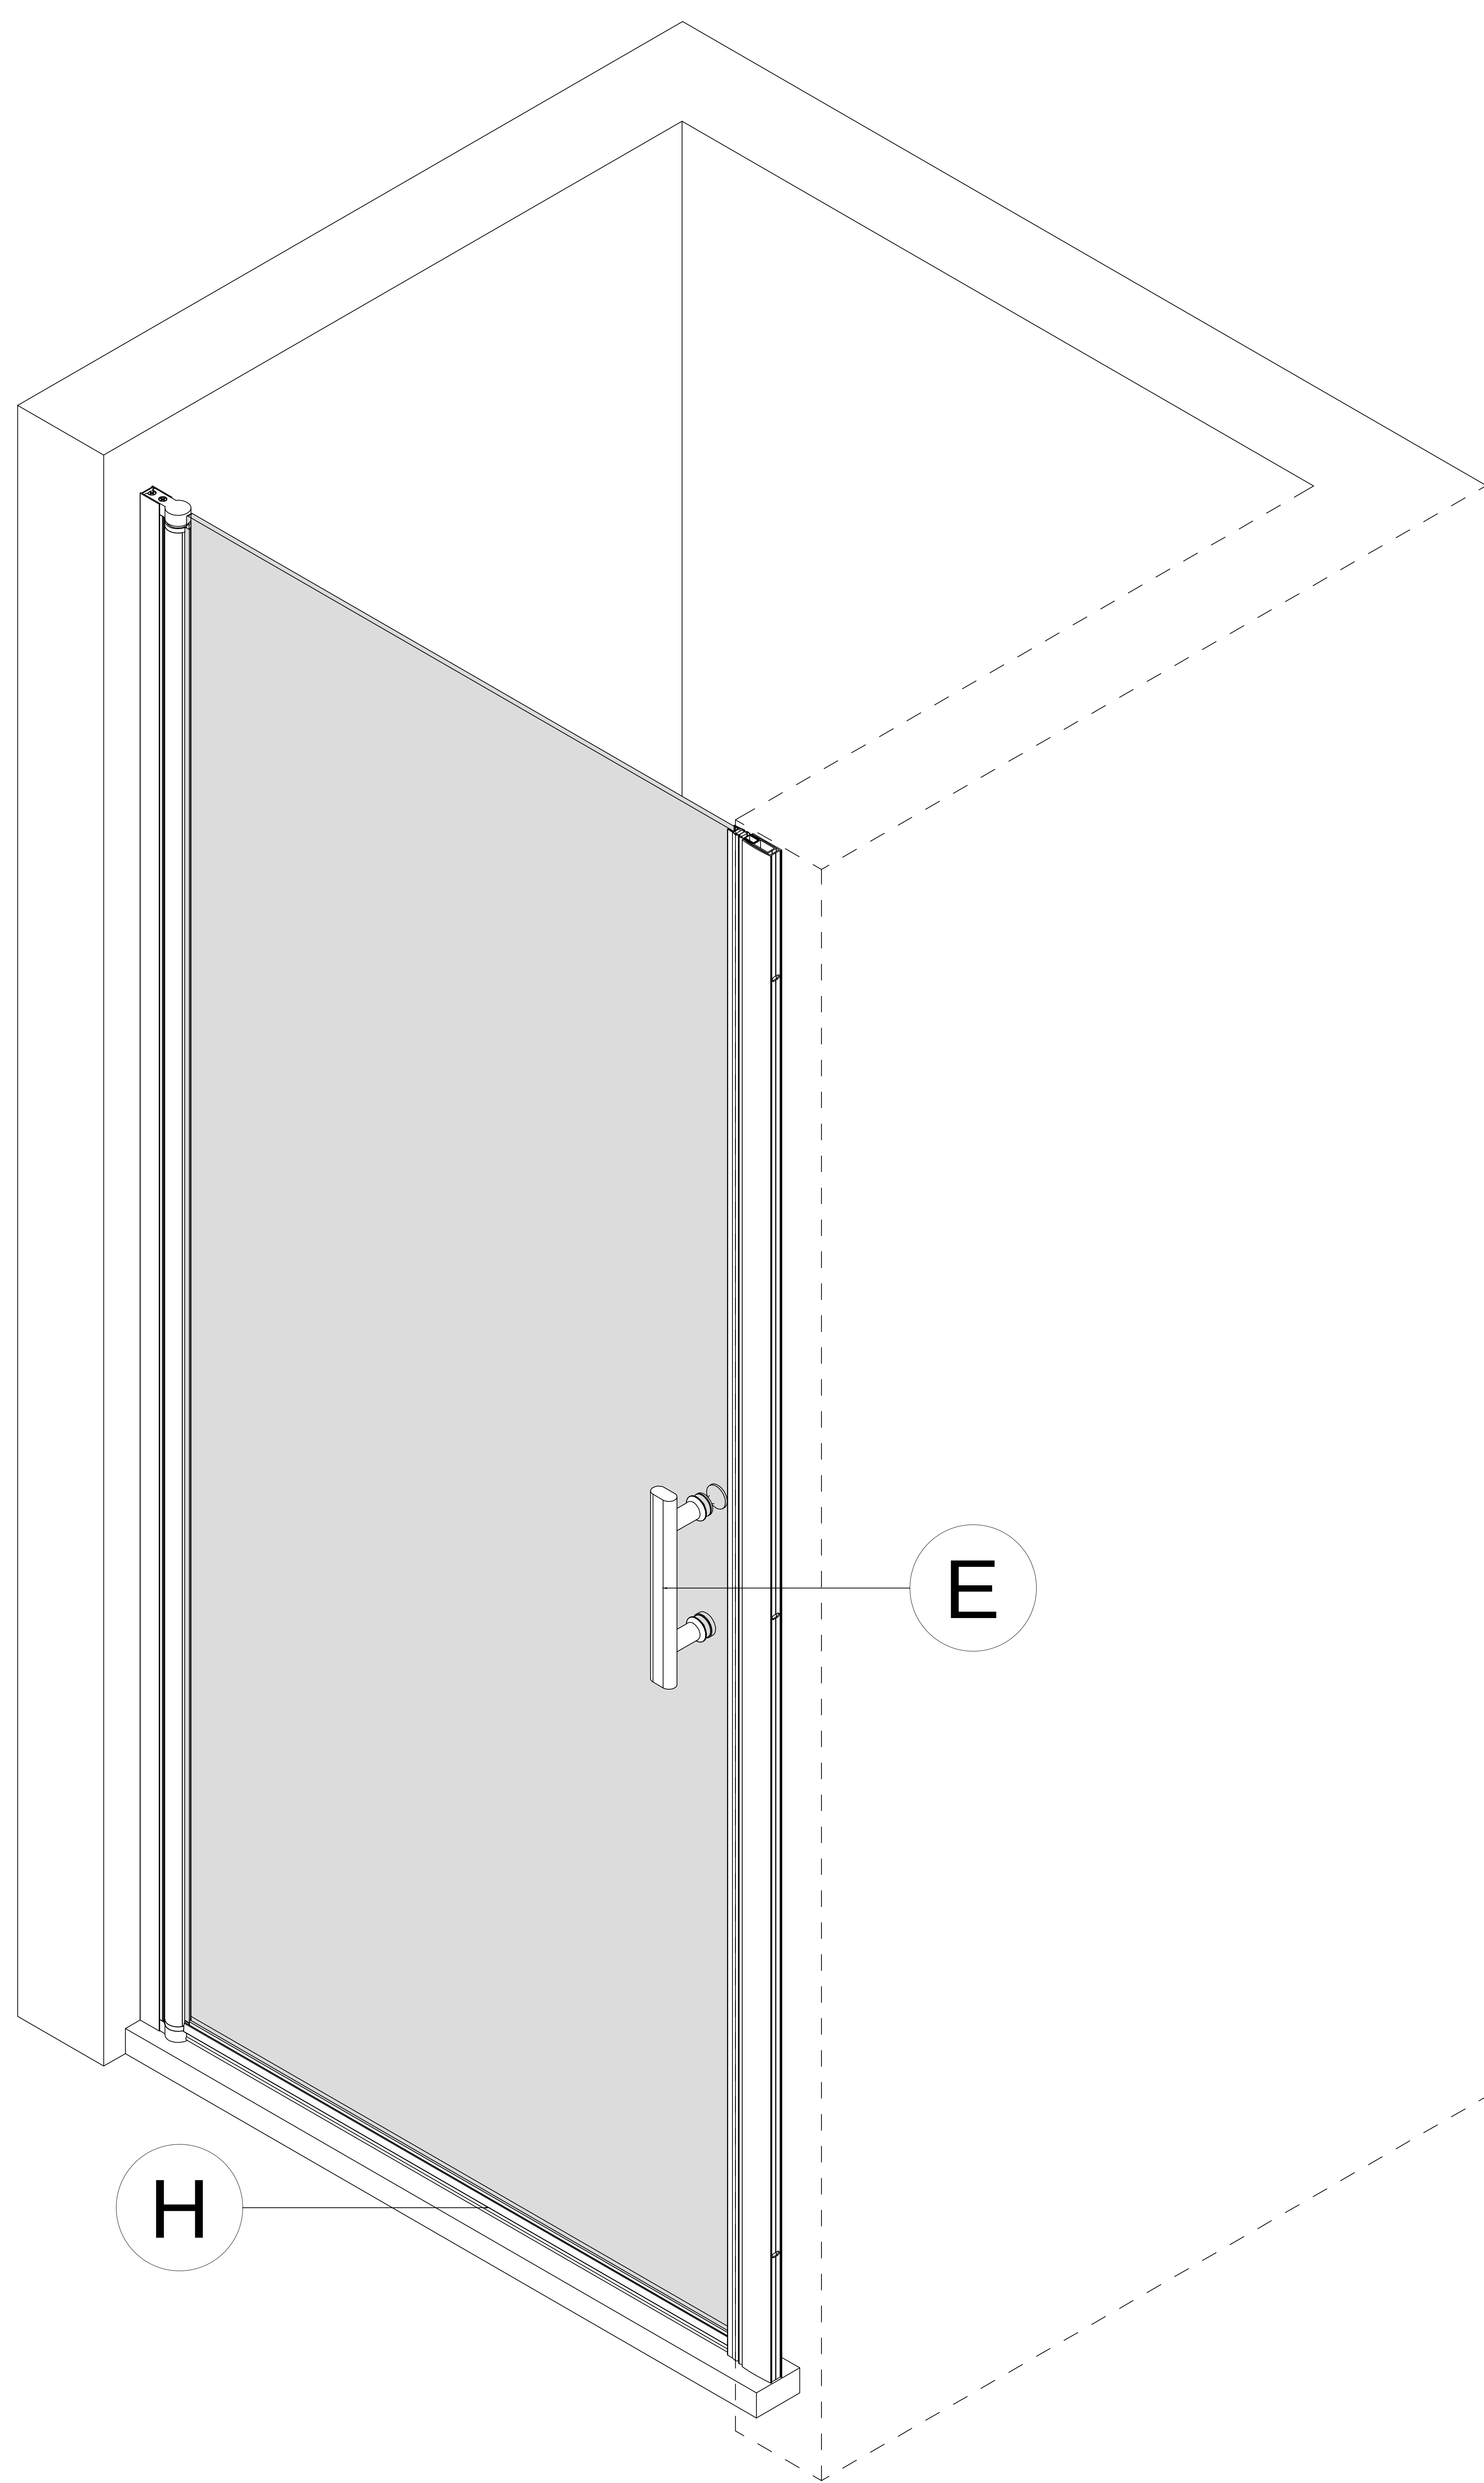


8-1

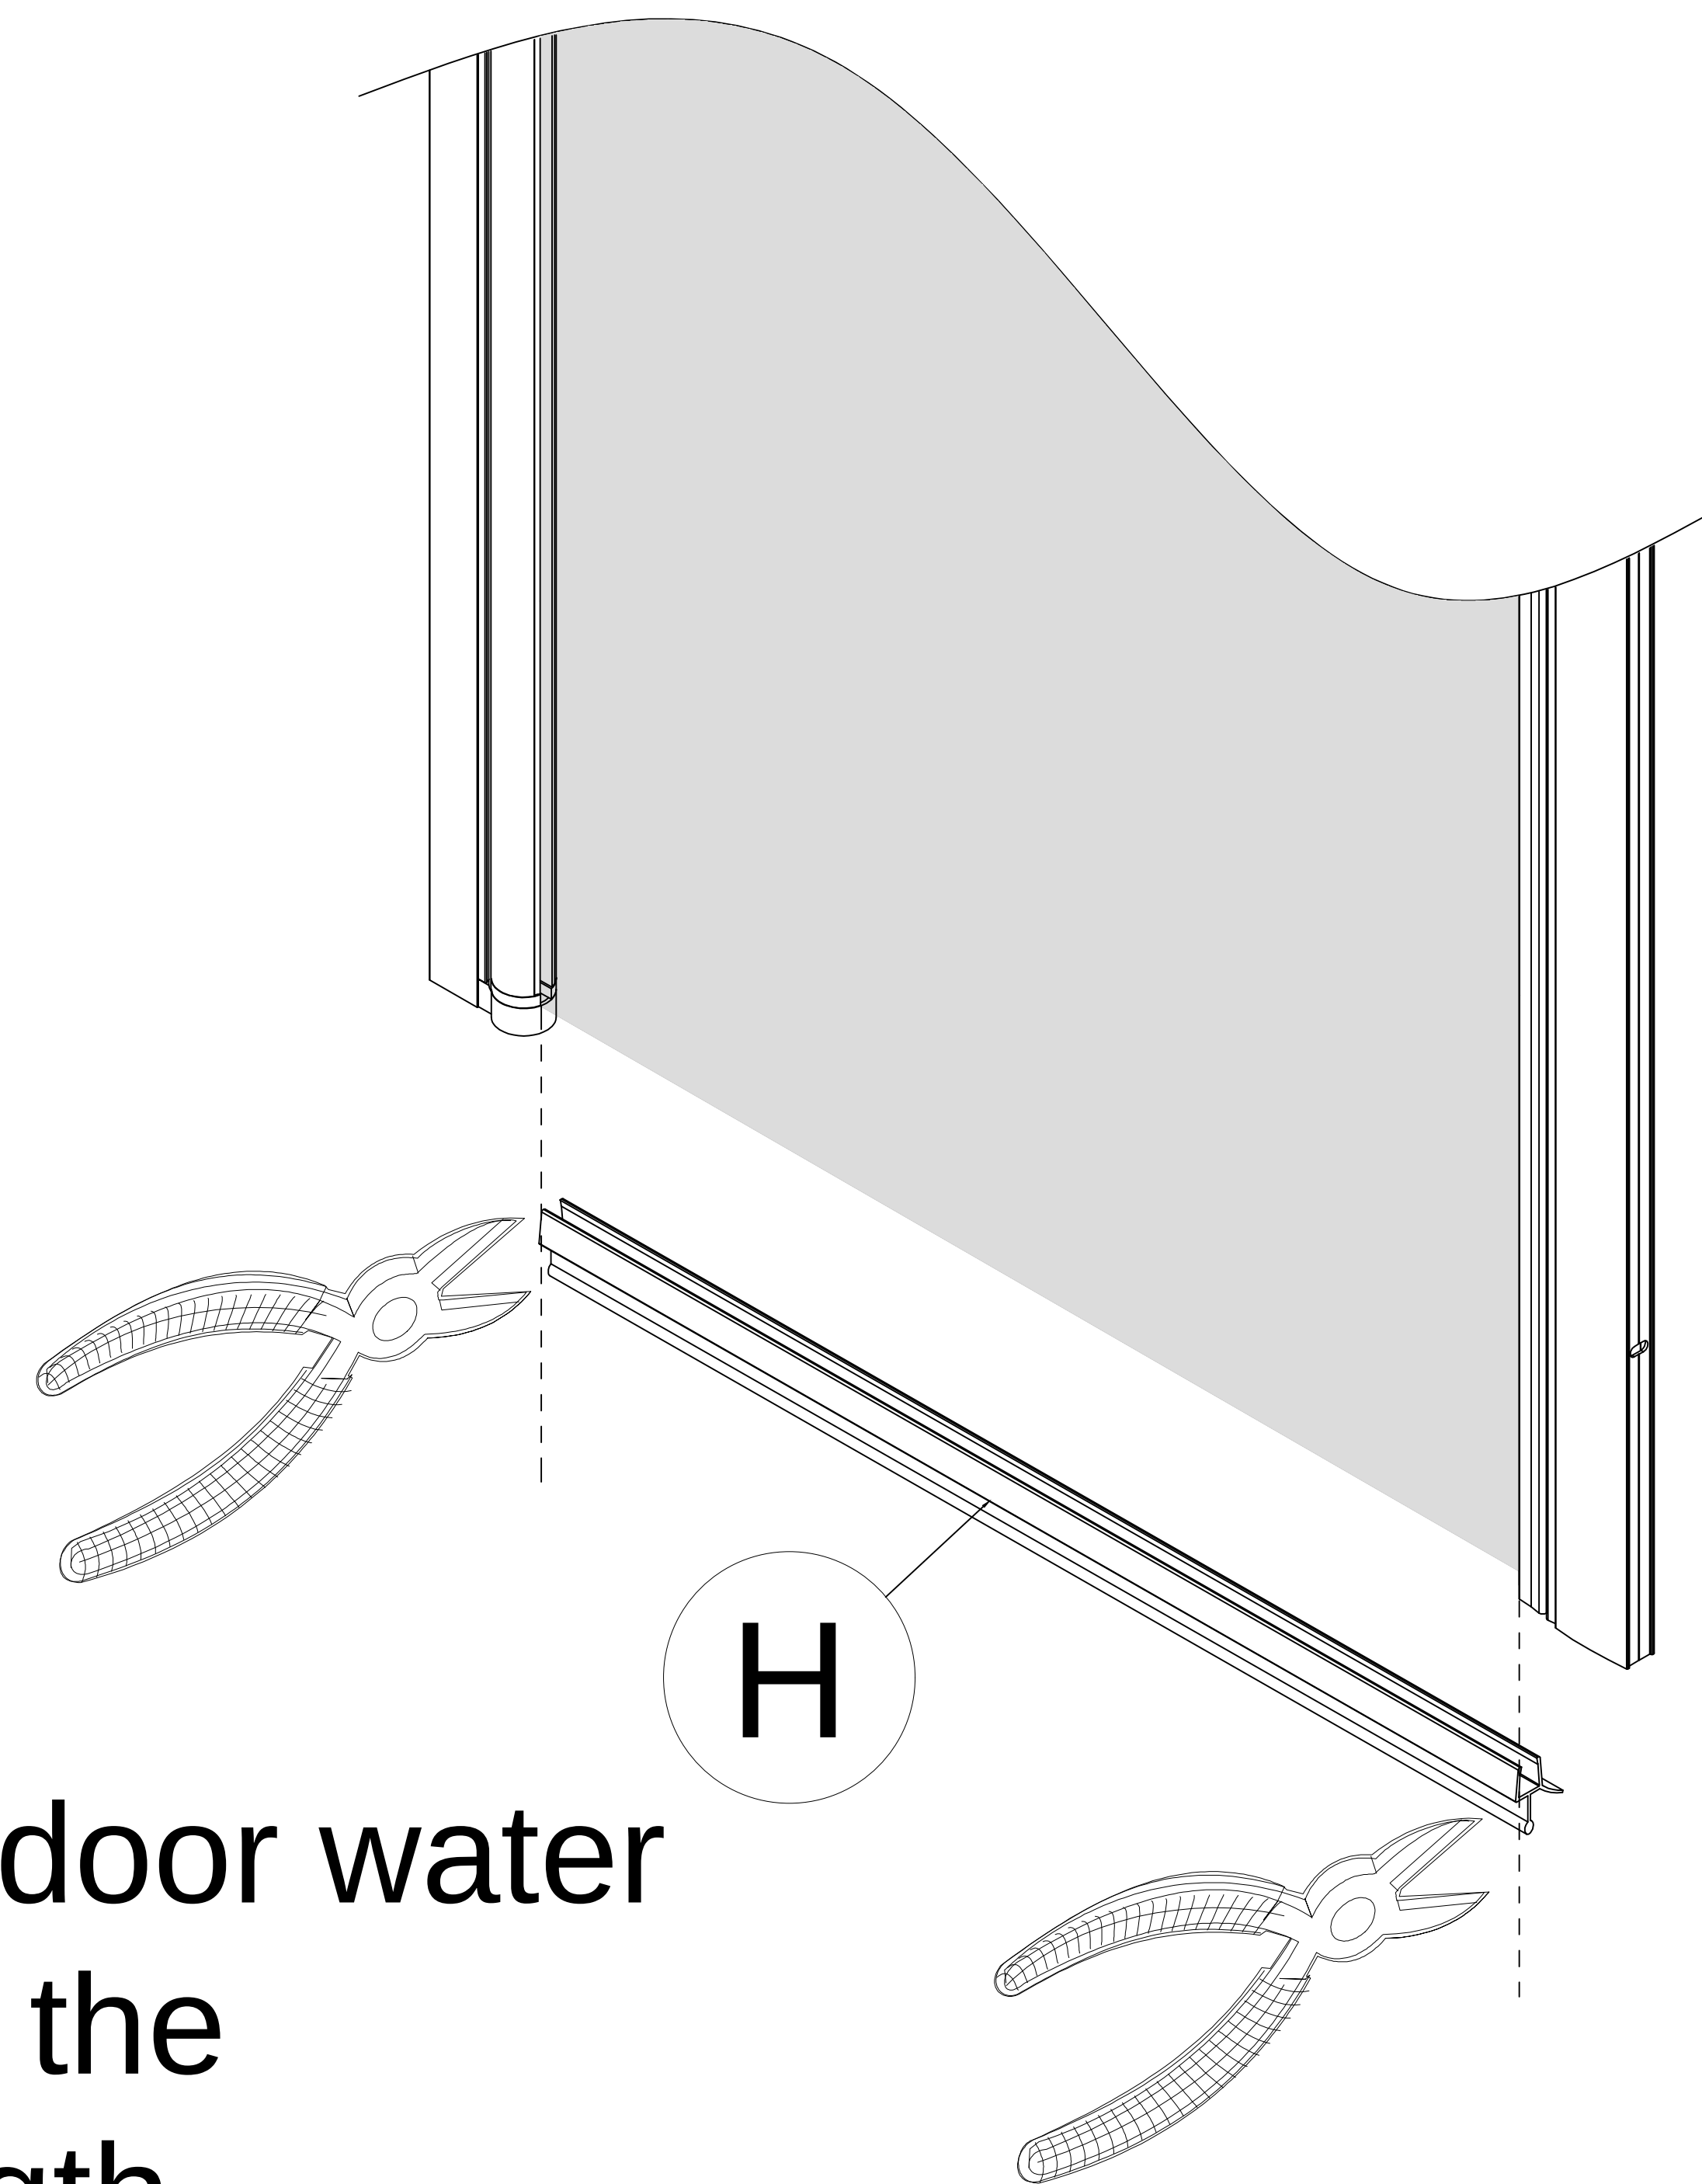


Cut the bottom door water seal strip (H) to the appropriate length.

8-2

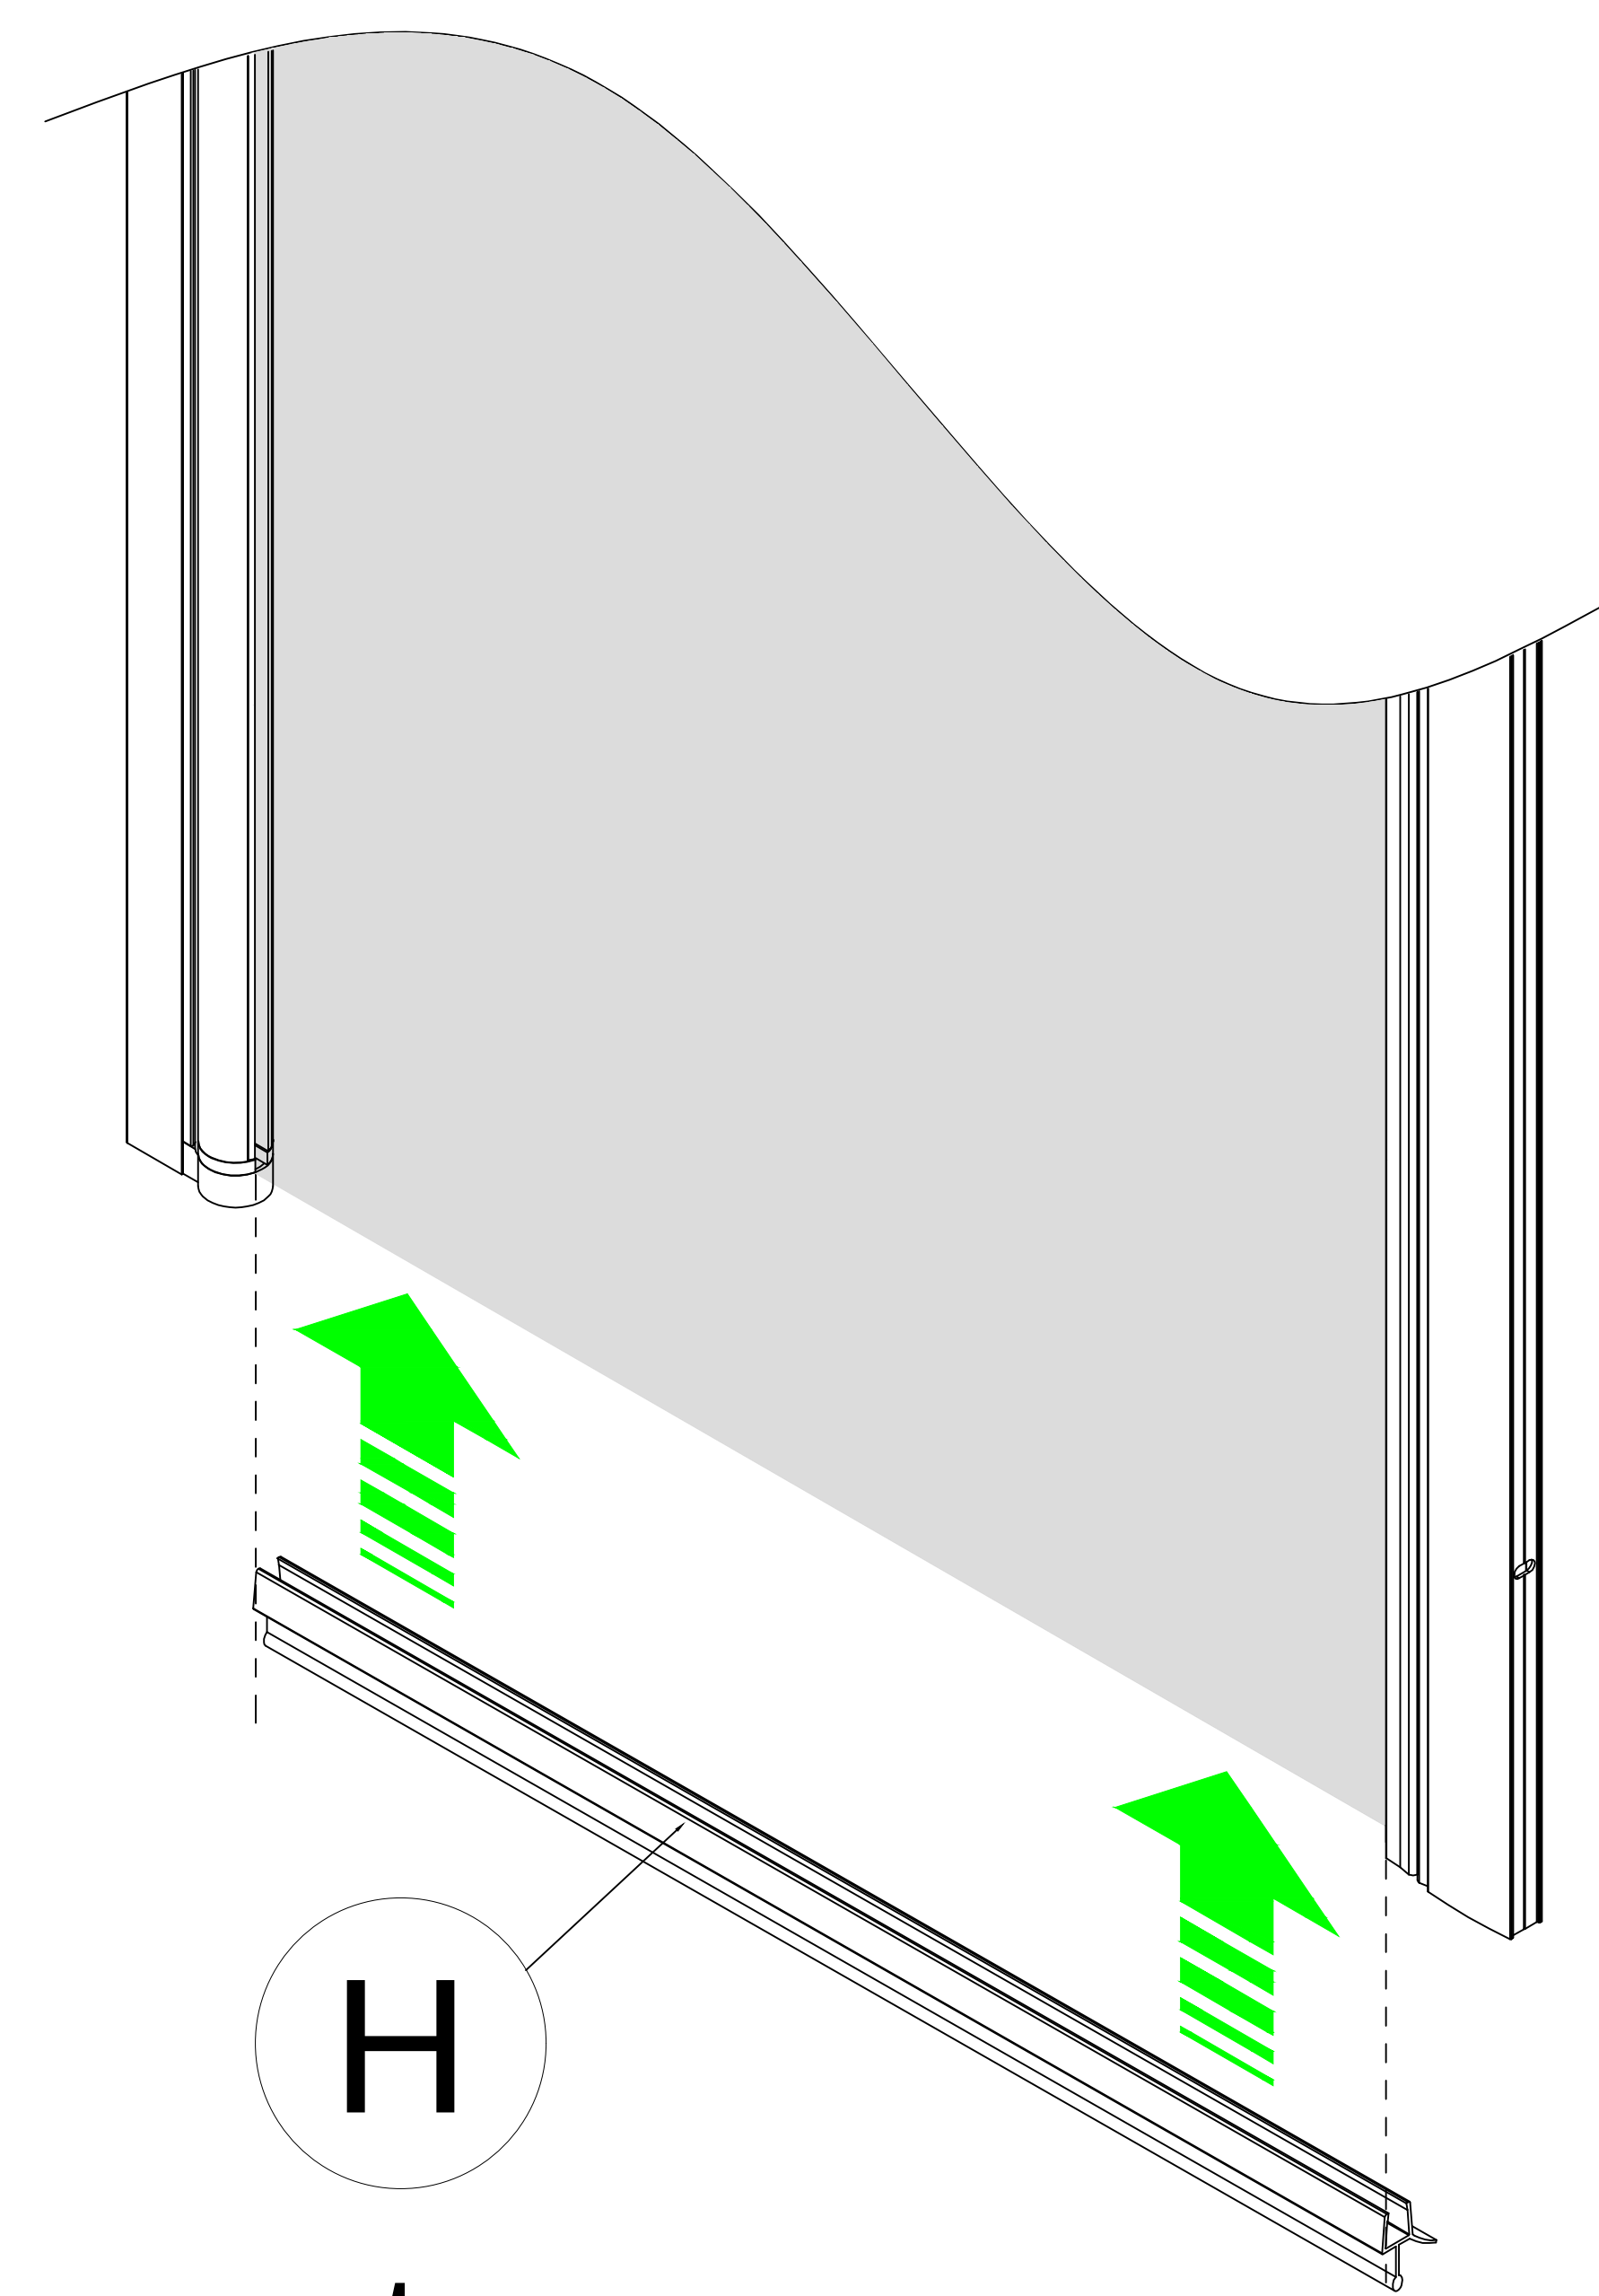


Install the bottom door water seal strip (H).

8-3

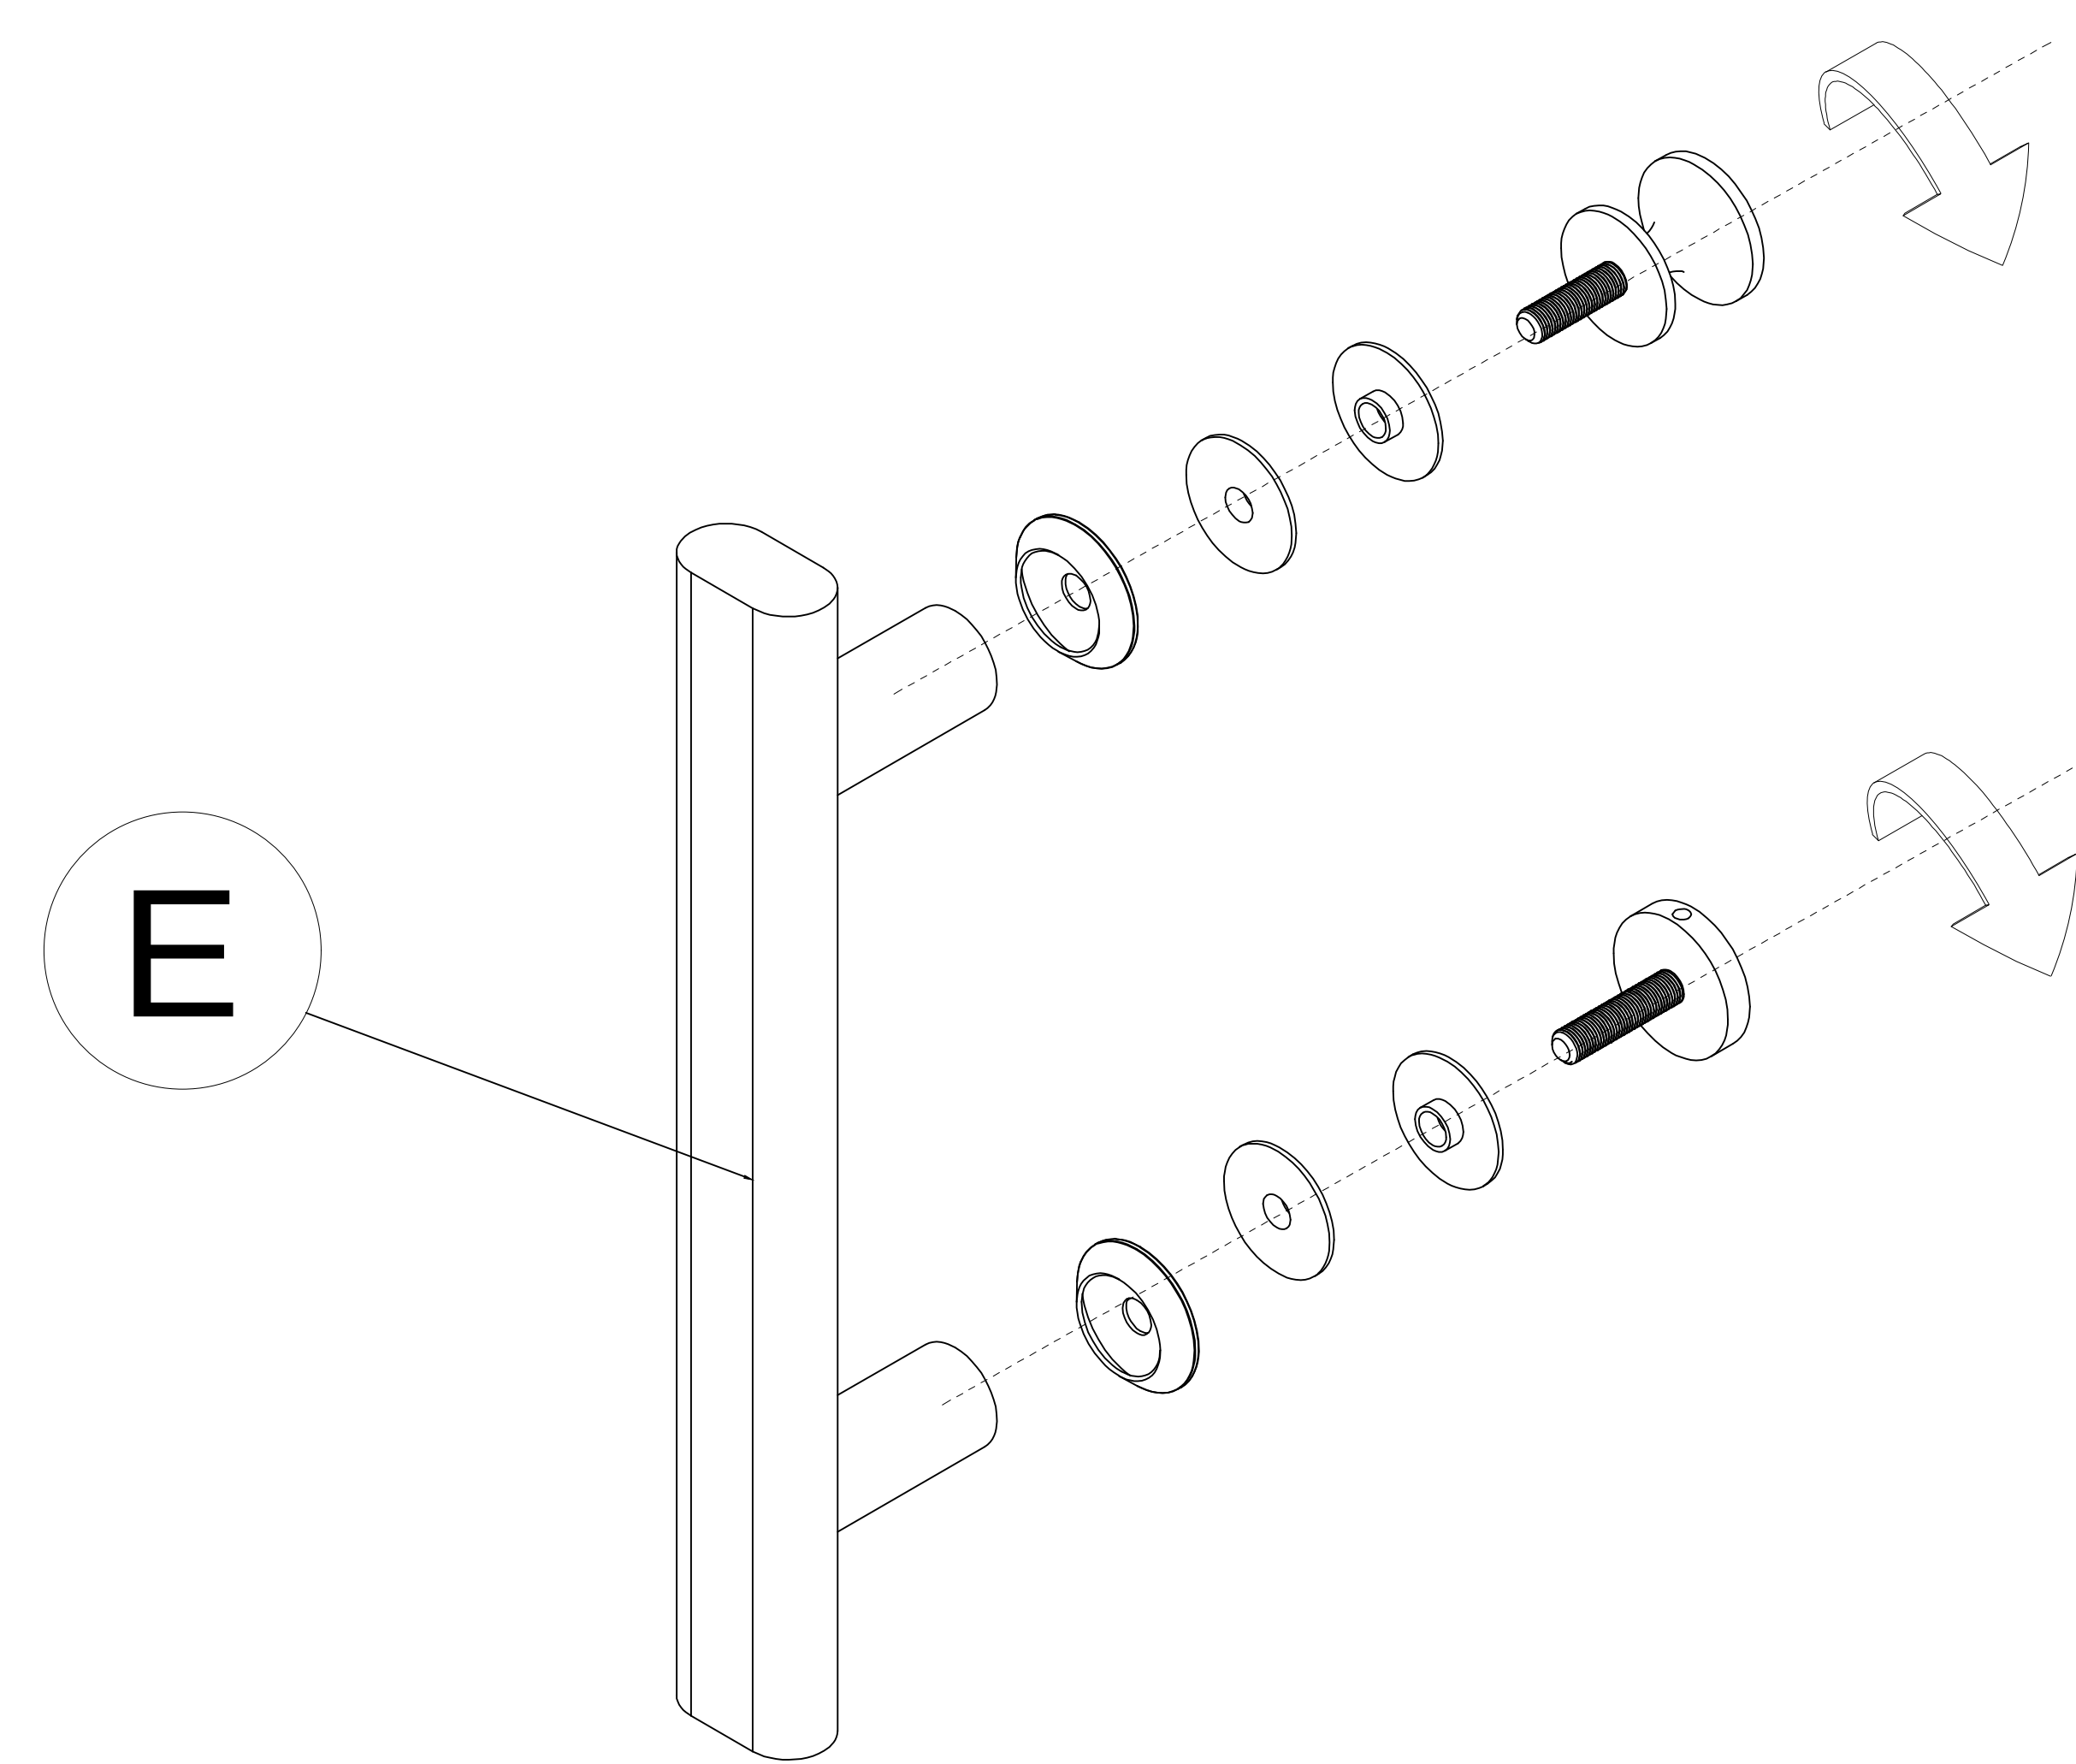

Loosen the fixing screws of the handle (E).


8-4

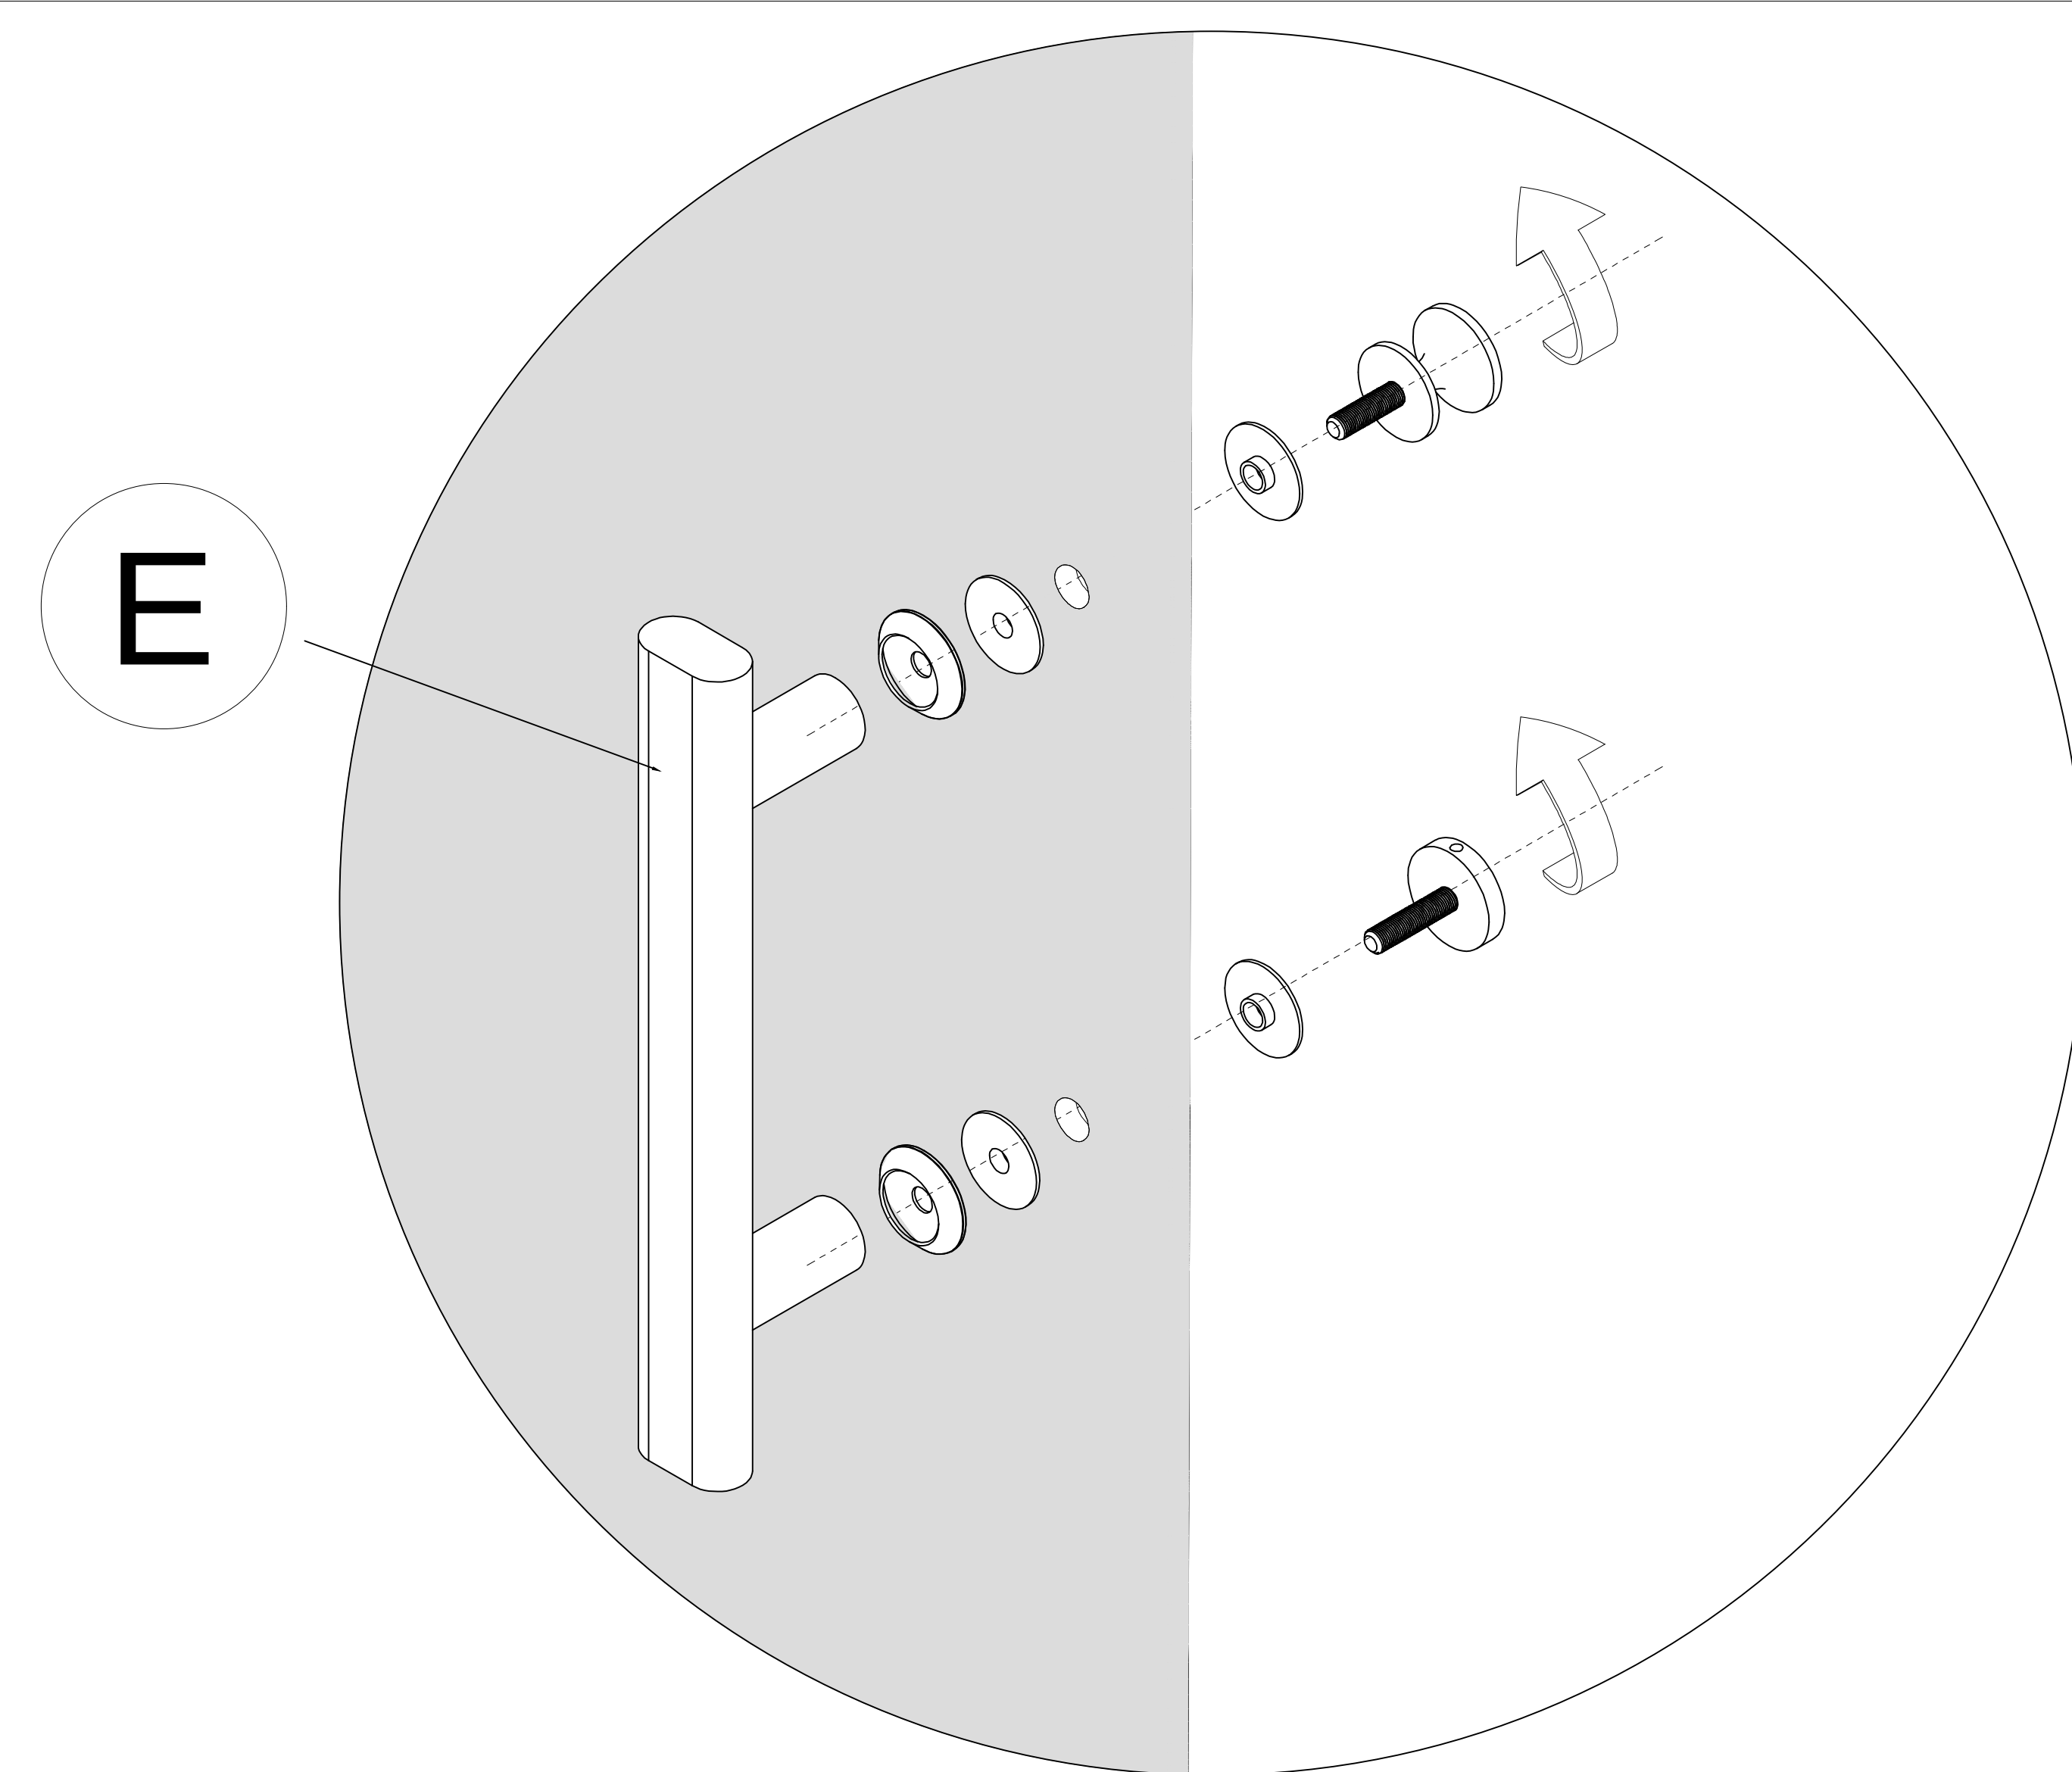

Install the handle (E) and tighten the screws.

STEP 9

Sealing

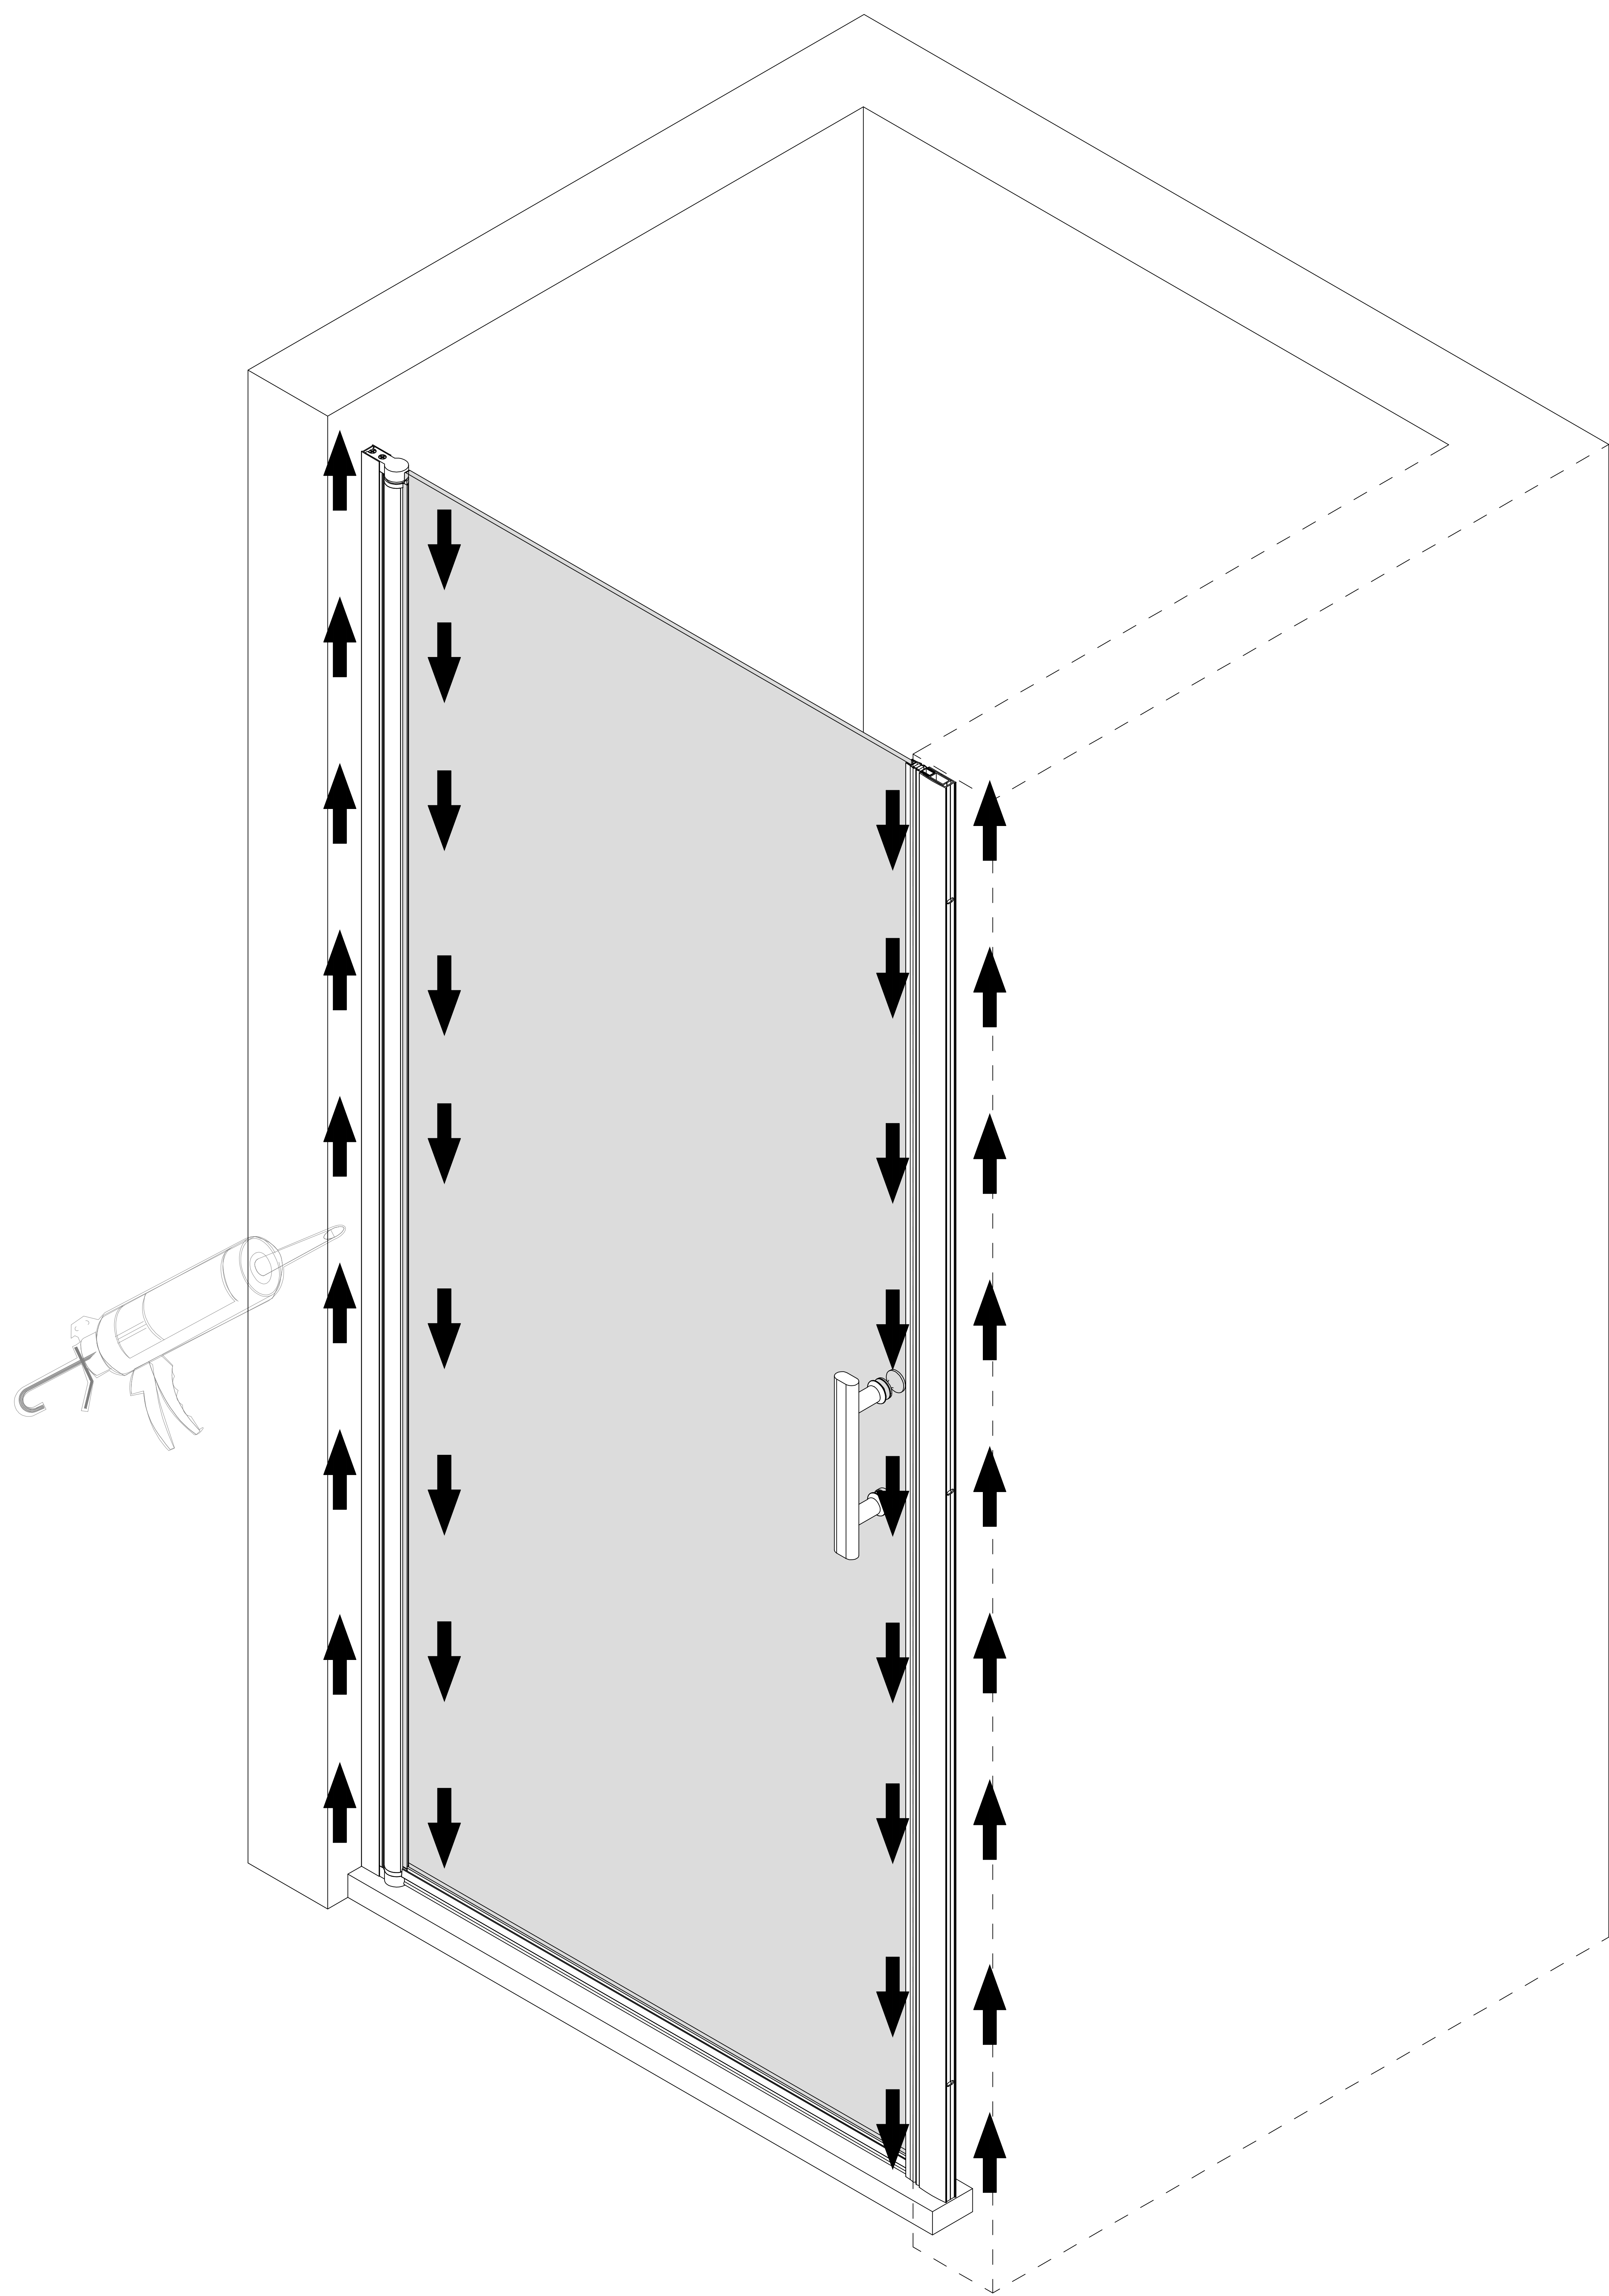

NOTE

The surfaces need to be clean and free of debris before applying silicone.

NOTE

Make sure that the shower door is tightly closed and opens smoothly.

Use silicone sealant to seal along the entire length of the Wall Jambs .



24



Allow 24 hours for the silicone to cure before using the shower.