




Assembly Instructions

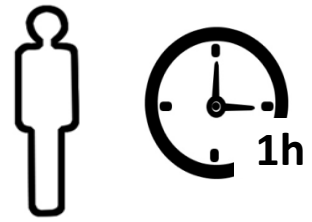

1. The wheels are installed to the bed frame by 10"-14" wrench.

NO.	SPARE PARTS	QTY (PC)
1	10"-14 "	1
2	2" wheel with brake	2
3	2" wheel without brake	2

2. The sofa functions.

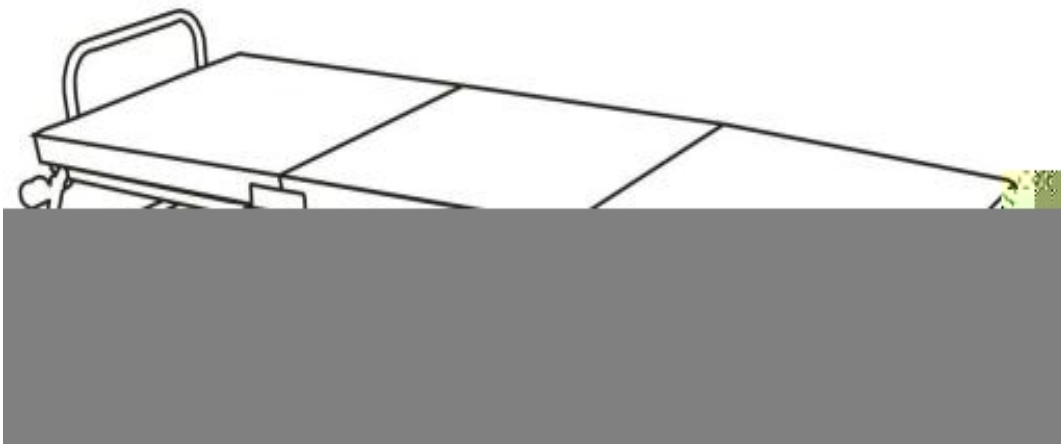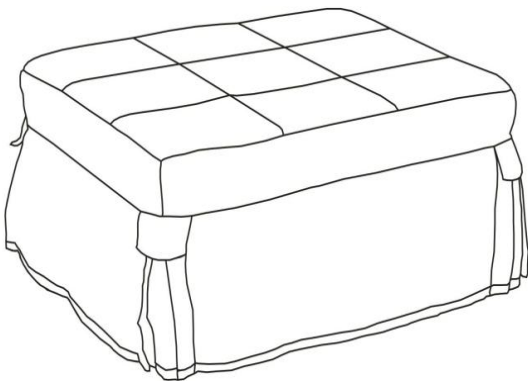

! WARNING: This product can expose you to chemicals including Lead which is known to the State of California to cause cancer/birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.