SUMRAIN®


MODEL: S2137XW


Version: 4.0

INSTALLATION GUIDE





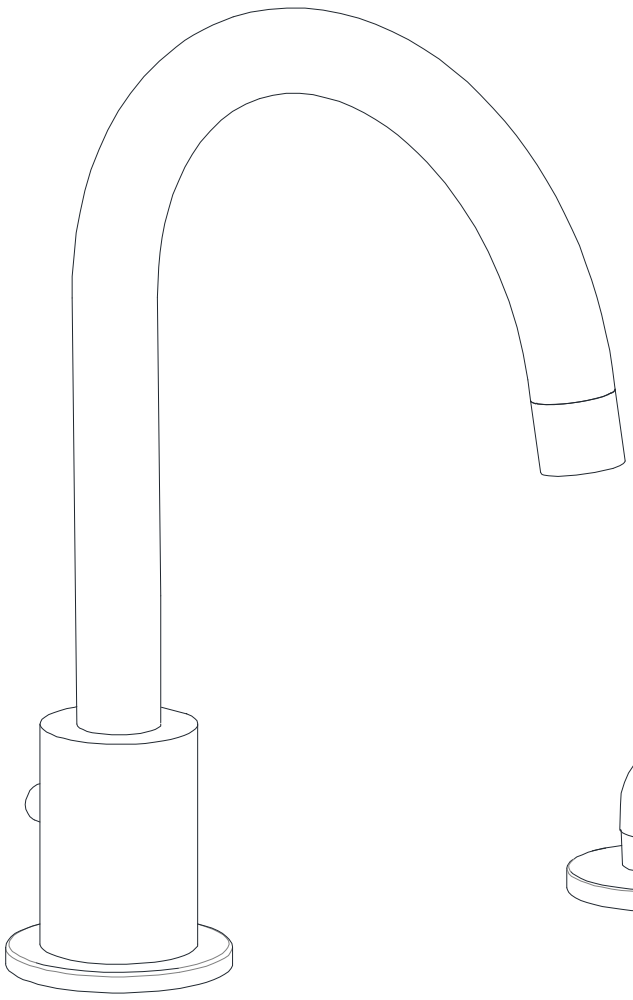


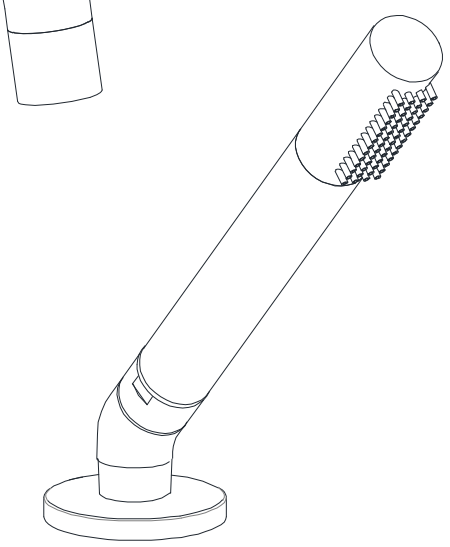


ROMAN WATERFALL BATHTUB FAUCET

CUSTOMER CARE LINE: +1-866-203-0866


TOOLS RECOMMENDED

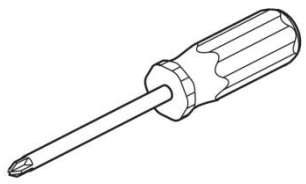

Philips screwdriver

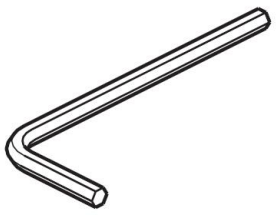


Allen wrench

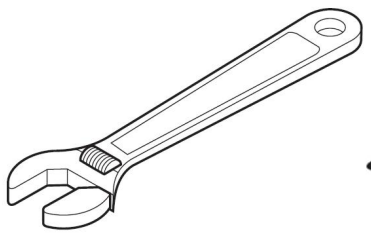

Adjustable wrench



Channel locks

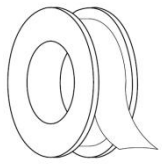

Teflon tape

INSTALLATION STEPS

1. BEFORE PROCEEDING

WARNING: Before proceeding with any operation, please read all instructions thoroughly. If you are uncertain about installing this product, please consult a professional! This product should be installed in accordance with all local and state plumbing and building codes. It is recommended to seek professional assistance.

2. SHUT OFF WATER SUPPLY

Locate the water supply inlets and shut off the corresponding water supply valves, typically found near the water meter. If replacing an existing unit, remove the old unit and thoroughly clean the mounting surface.


3. CHECKING THE CONTENTS OF THE BOX

Upon opening the box, check to ensure that all the following items are included.


4. INSTALLATION HOLES INSPECTION

Verify that the hole sizes and positions on the mounting surface are correct, the max deck thickness is “ D ”.

Code	Dimensions - Inch	Dimensions - mm
A	Ø1-3/8″	Ø35
B	7-7/8″	200
C	Ø1-3/16″	Ø30

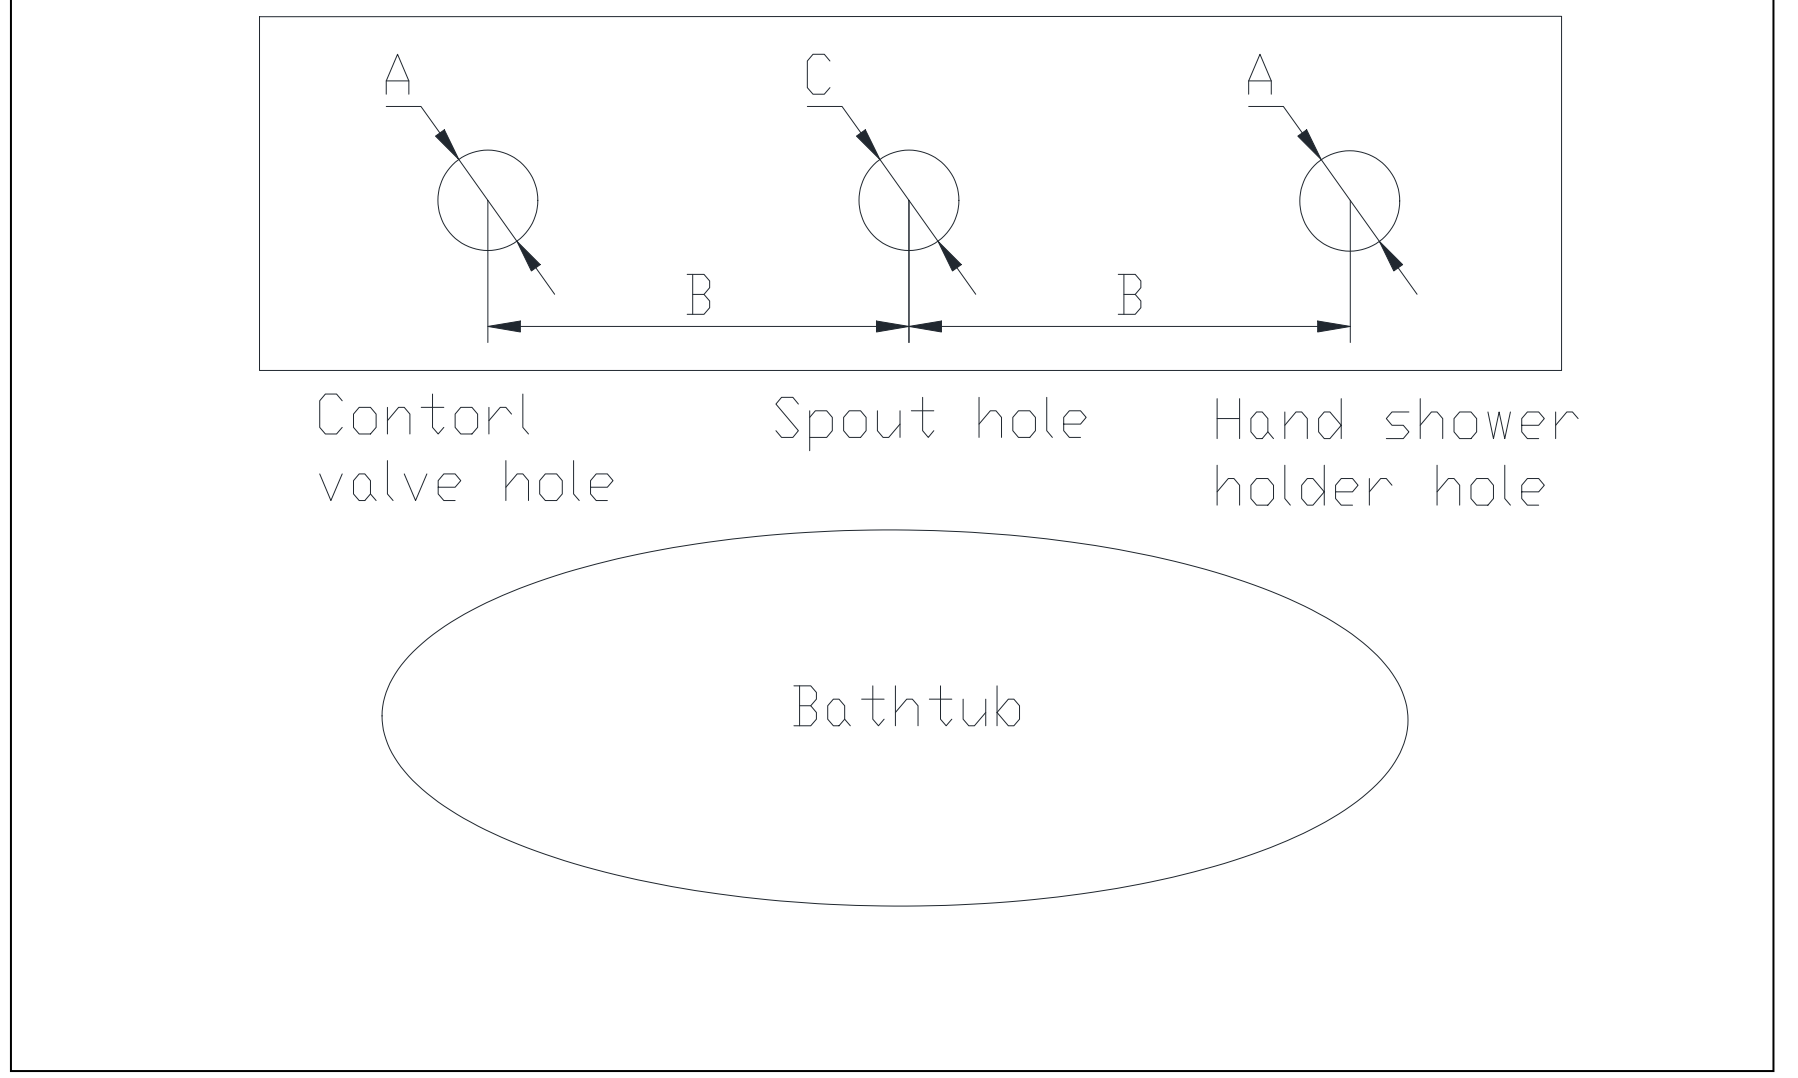

Code	Dimensions - Inch	Dimensions - mm
D	Max:1-1/2″	40

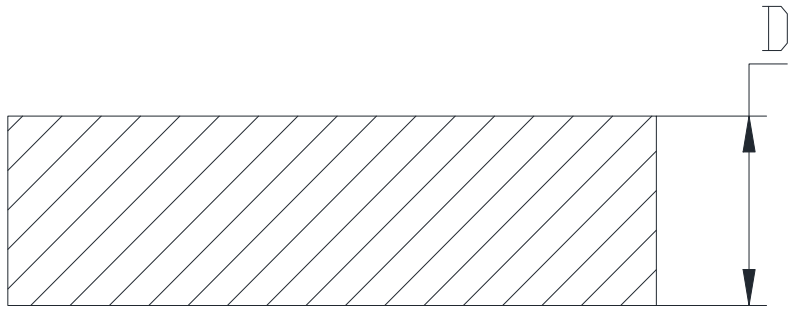


5. INSTALLATION

5.1 Turn on your shut-off valve for cleaning the hot and cold water supply pipe before connect to the faucet, allow the water flush 3~5 minutes to flush out dirt and debris. Shut off the water supply again after finish.




3~5 Min




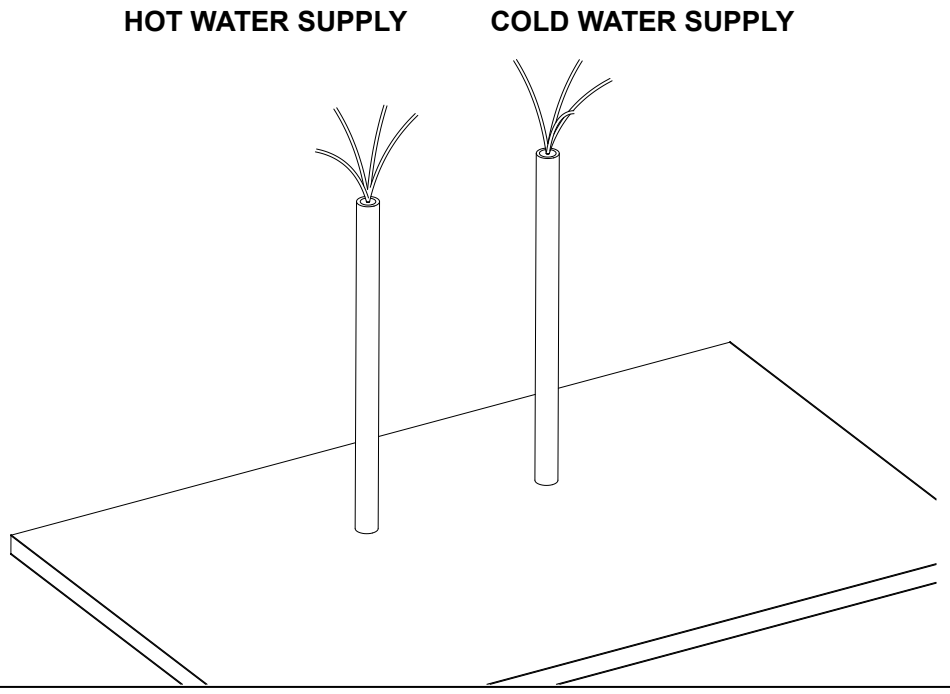


5.2 Remove the mounting hardware from the mounting shank.

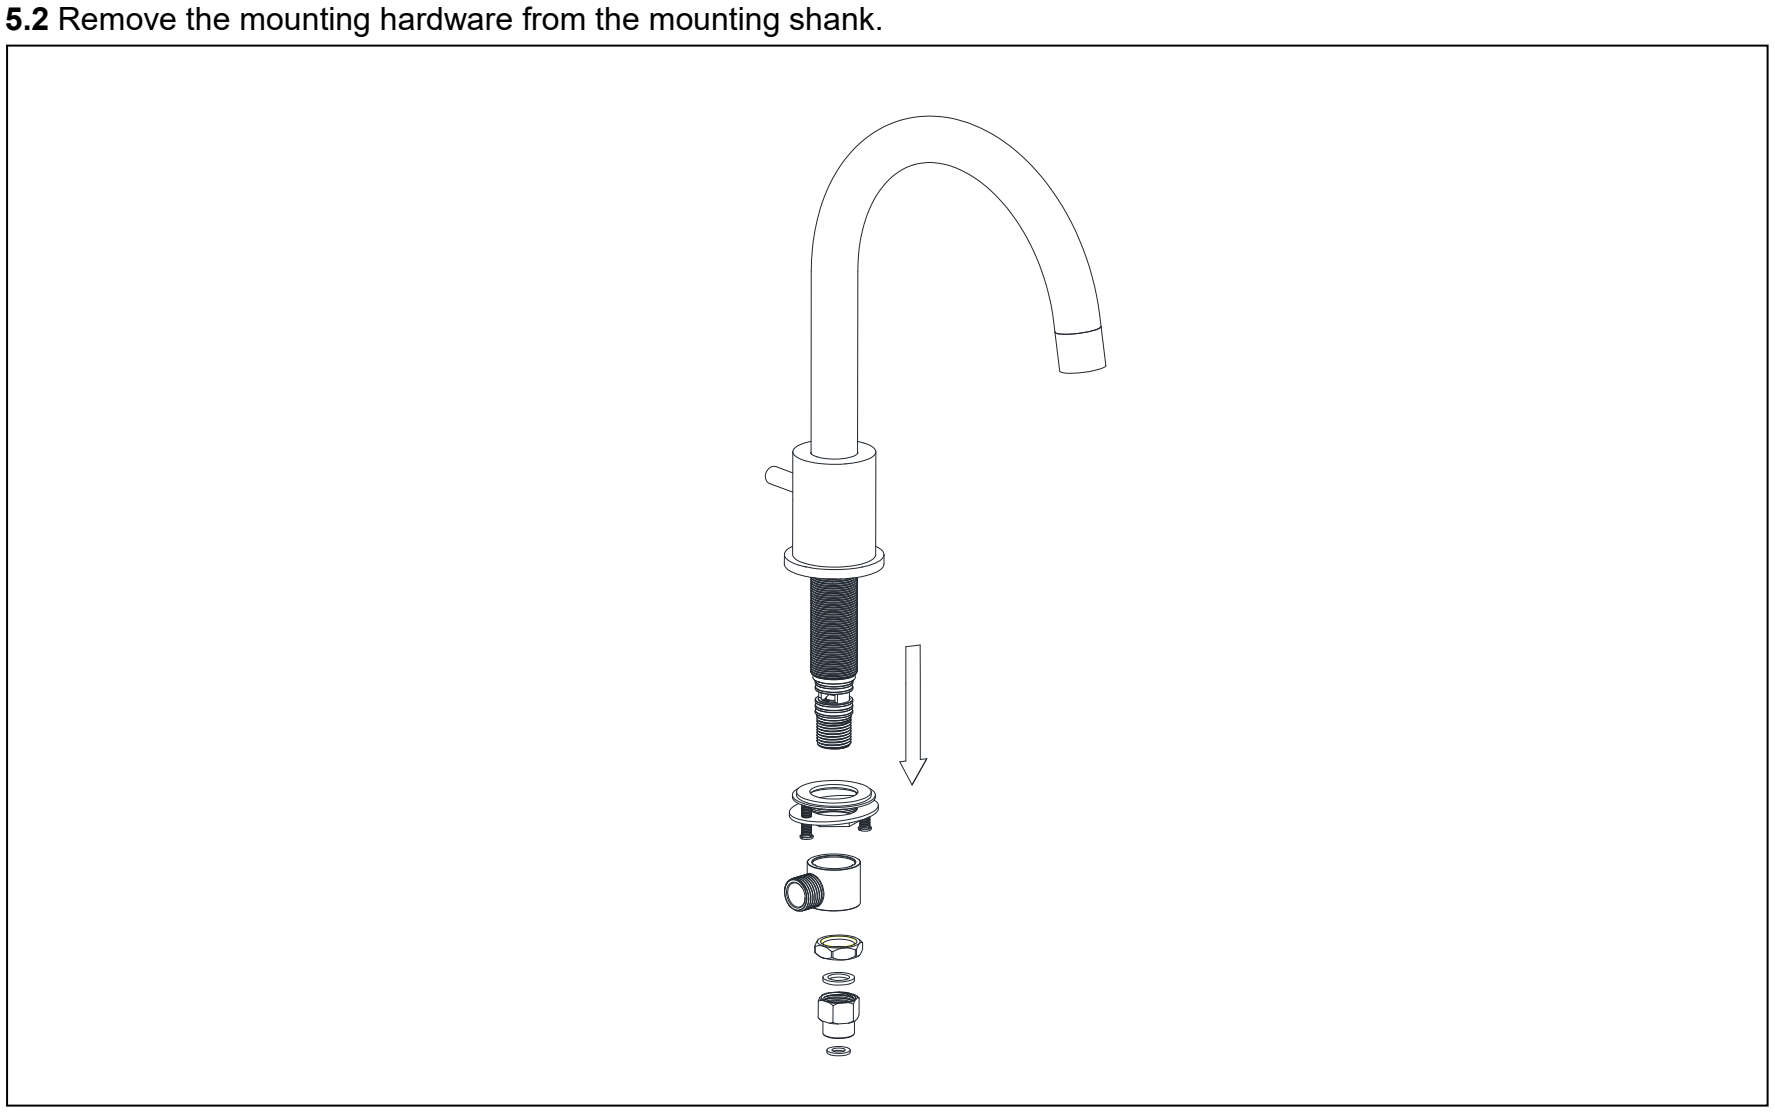


5.3 Place the spout over the hole on the mounting surface, install the rubber washer on the spout shank, and secure the spout shank lock nut from underneath using a screwdriver.

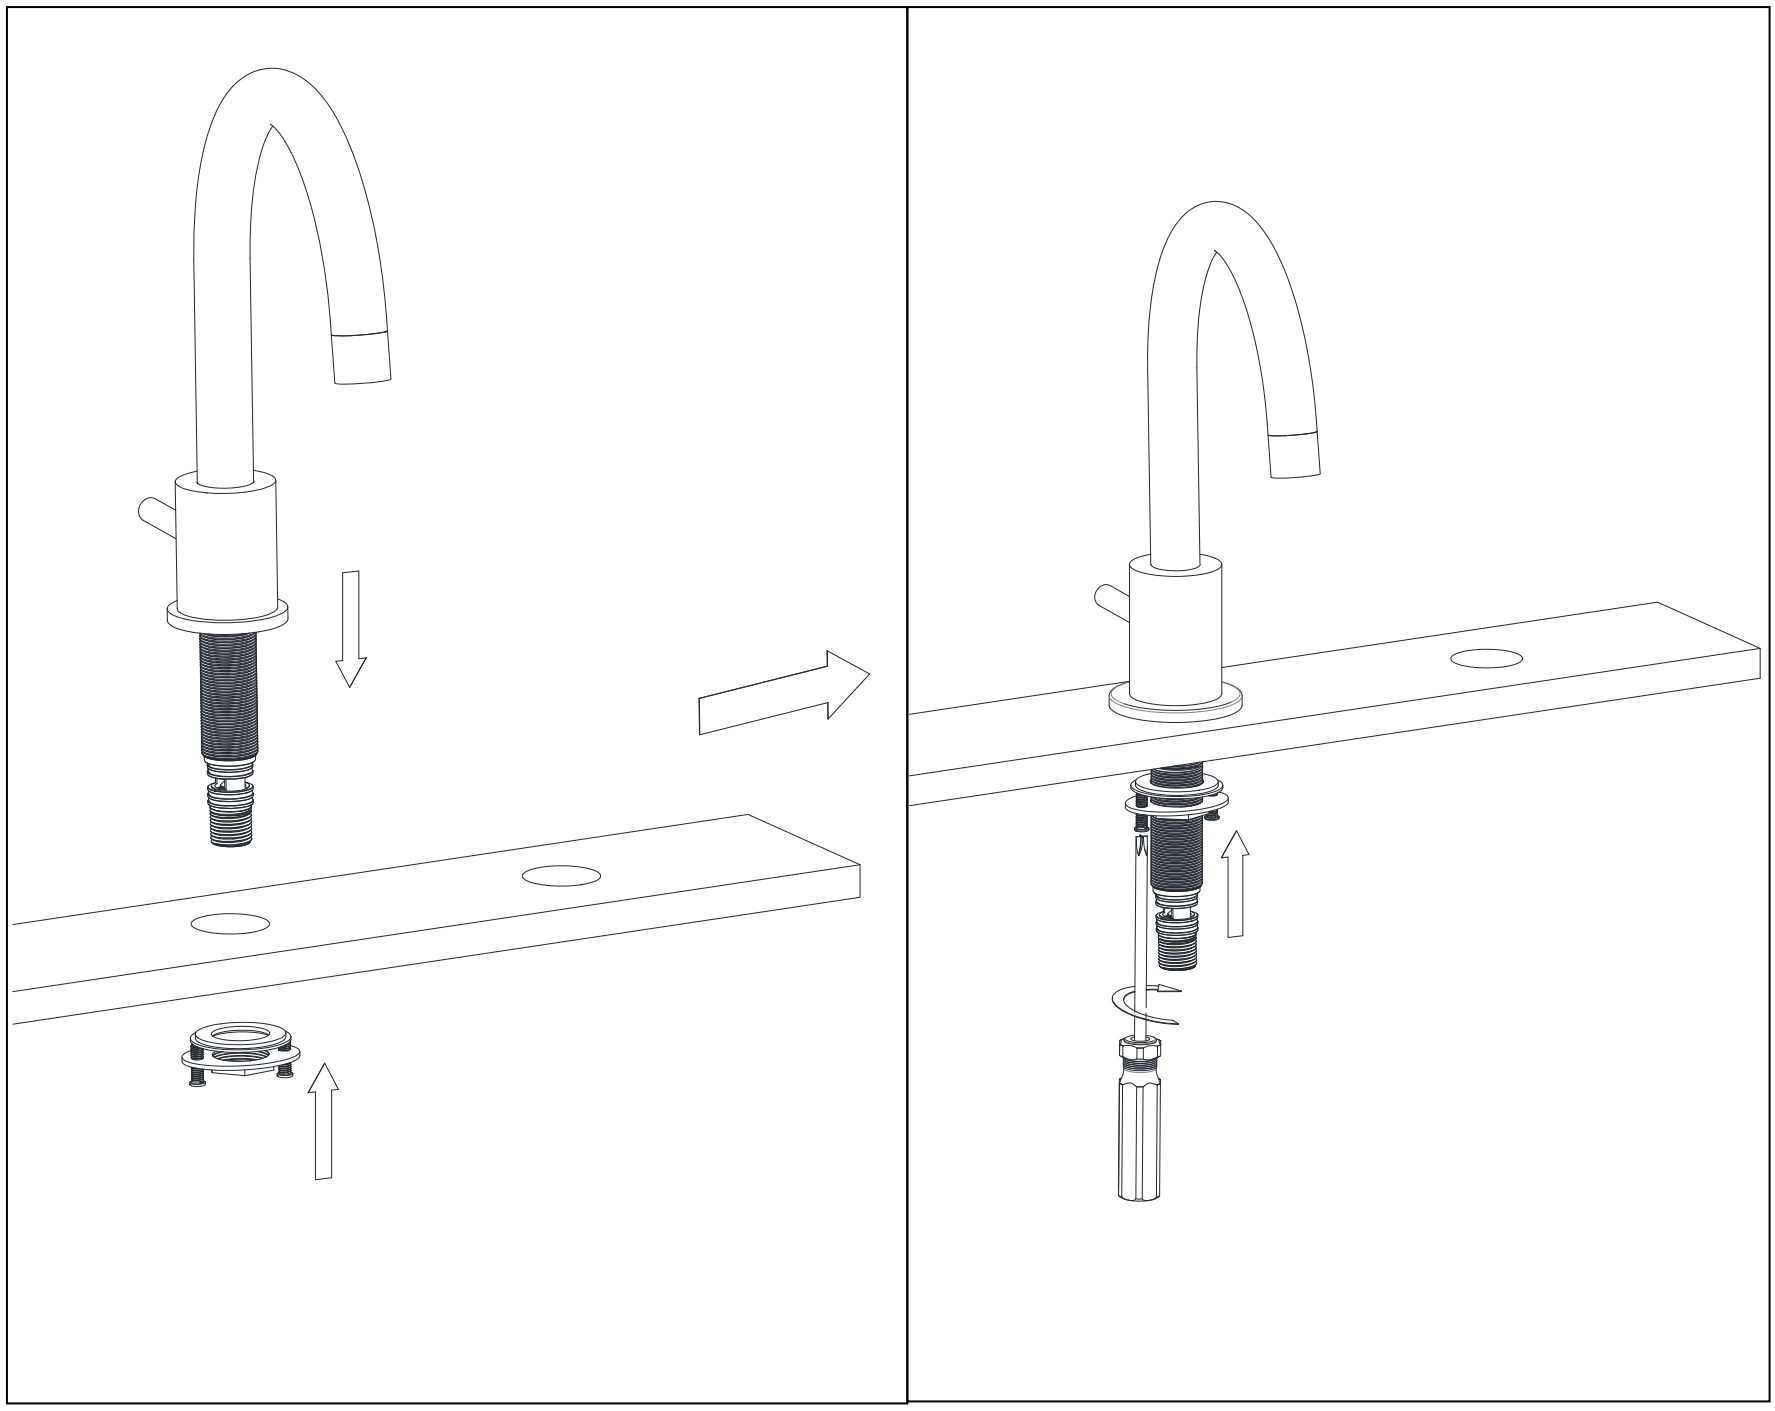

5.4 After securing the spout, install the tee fitting on the spout shank and then secure the nut with a wrench.

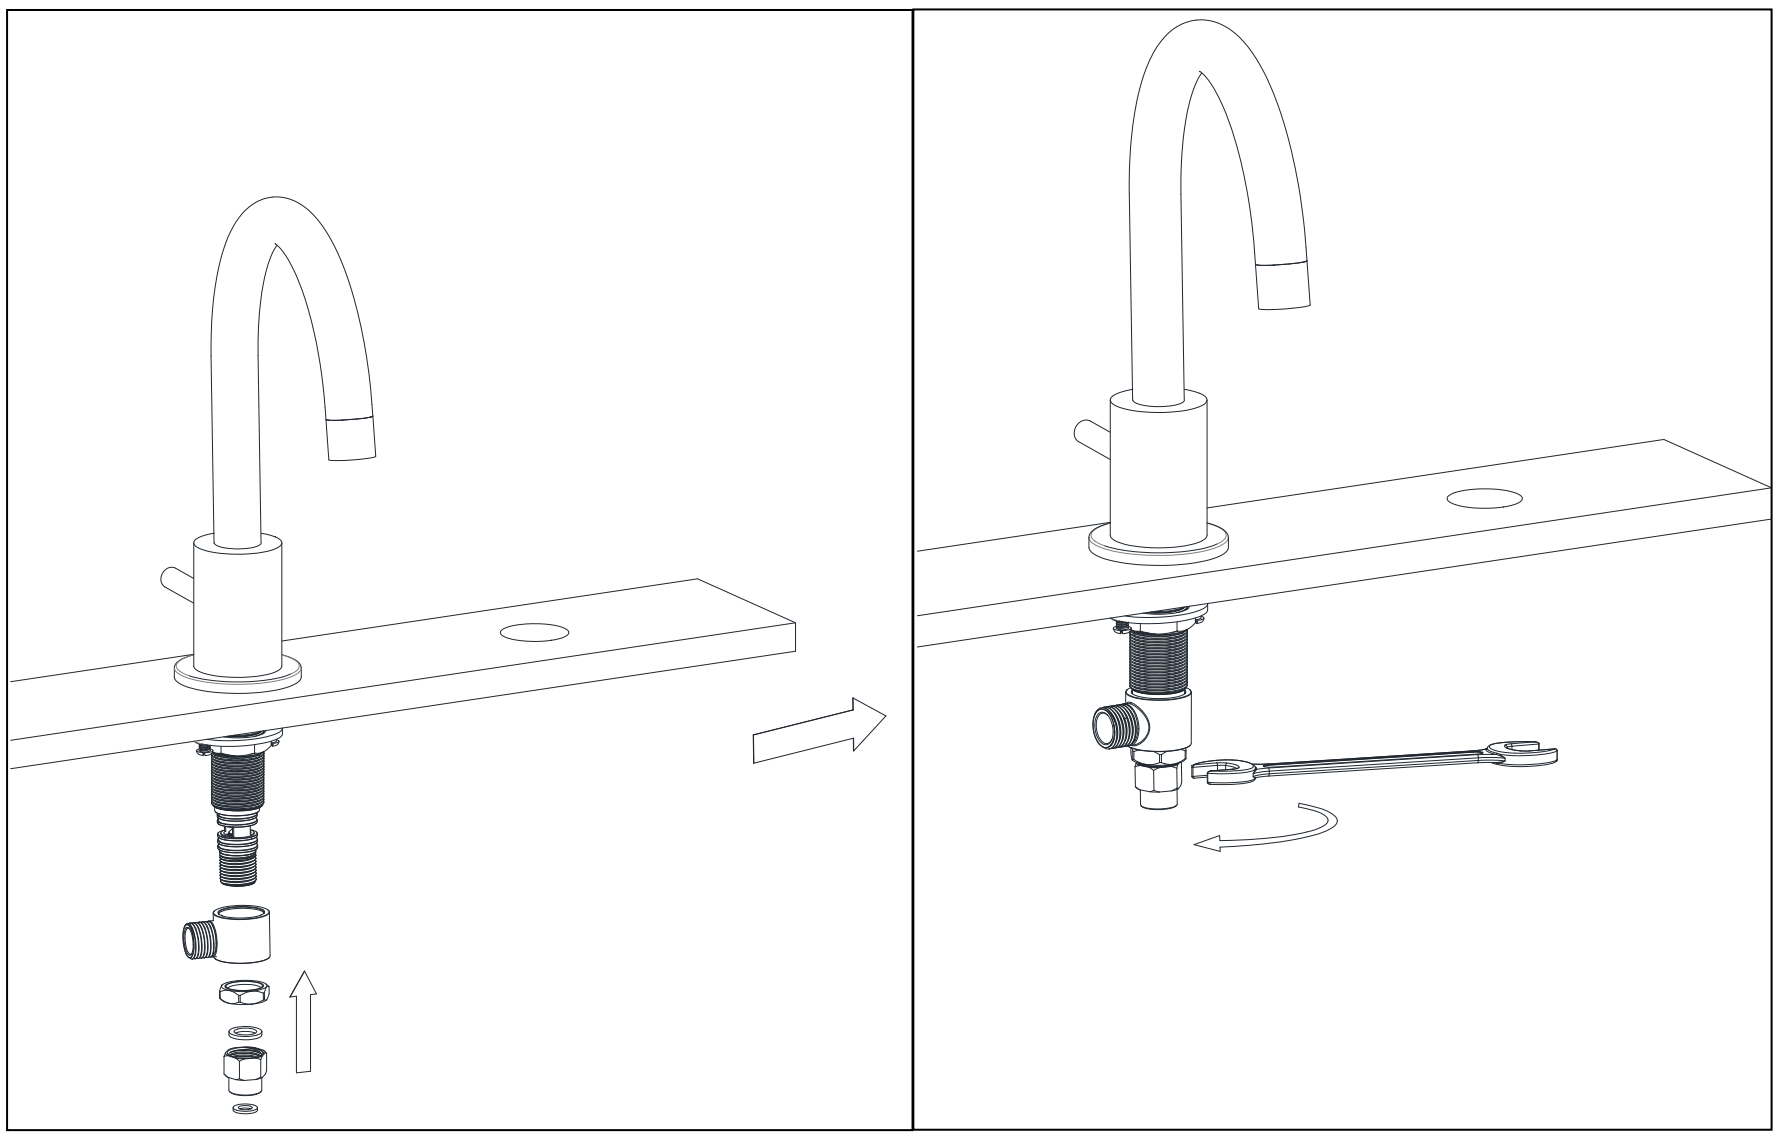

5.5 According to the diagram below, screw the hoses into the bottom of the control valve.

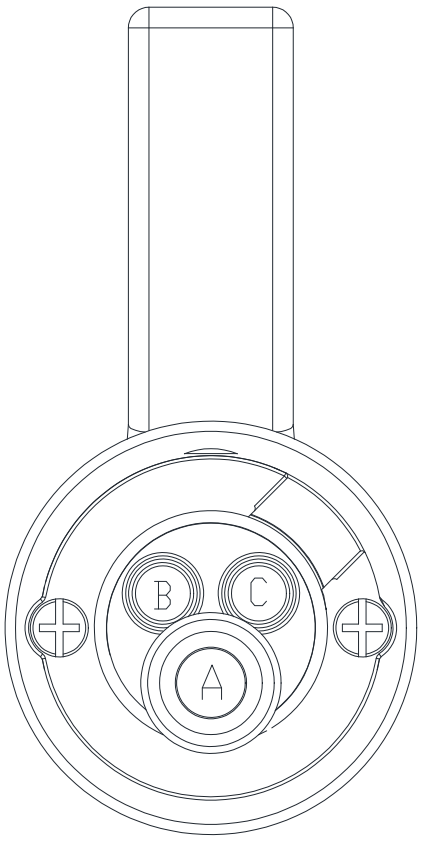


"A″: the outlet hole of the water spout

"B″: hole for hot water in


"C″: hole for cold water in

Bottom view of control valve

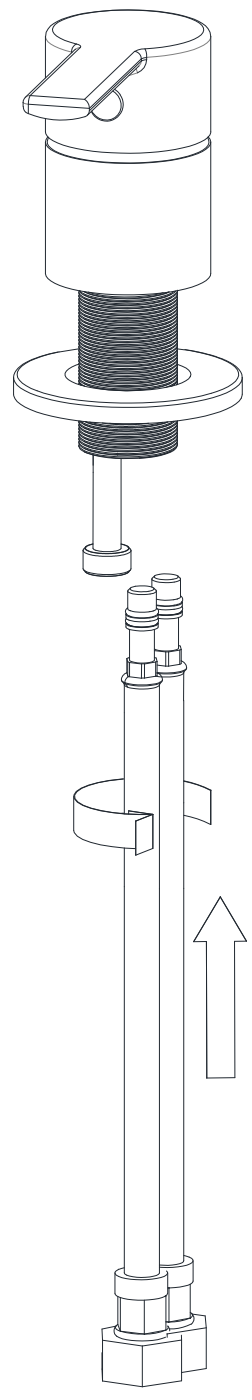


Hoses connection


5.6 Insert the control valve with hoses through the mounting surface, then from underneath the countertop, sequentially install the rubber washer, metal washer, and the provided locknut onto the shank. Tighten using a wrench and Phillips screwdriver until the control valve is securely installed.

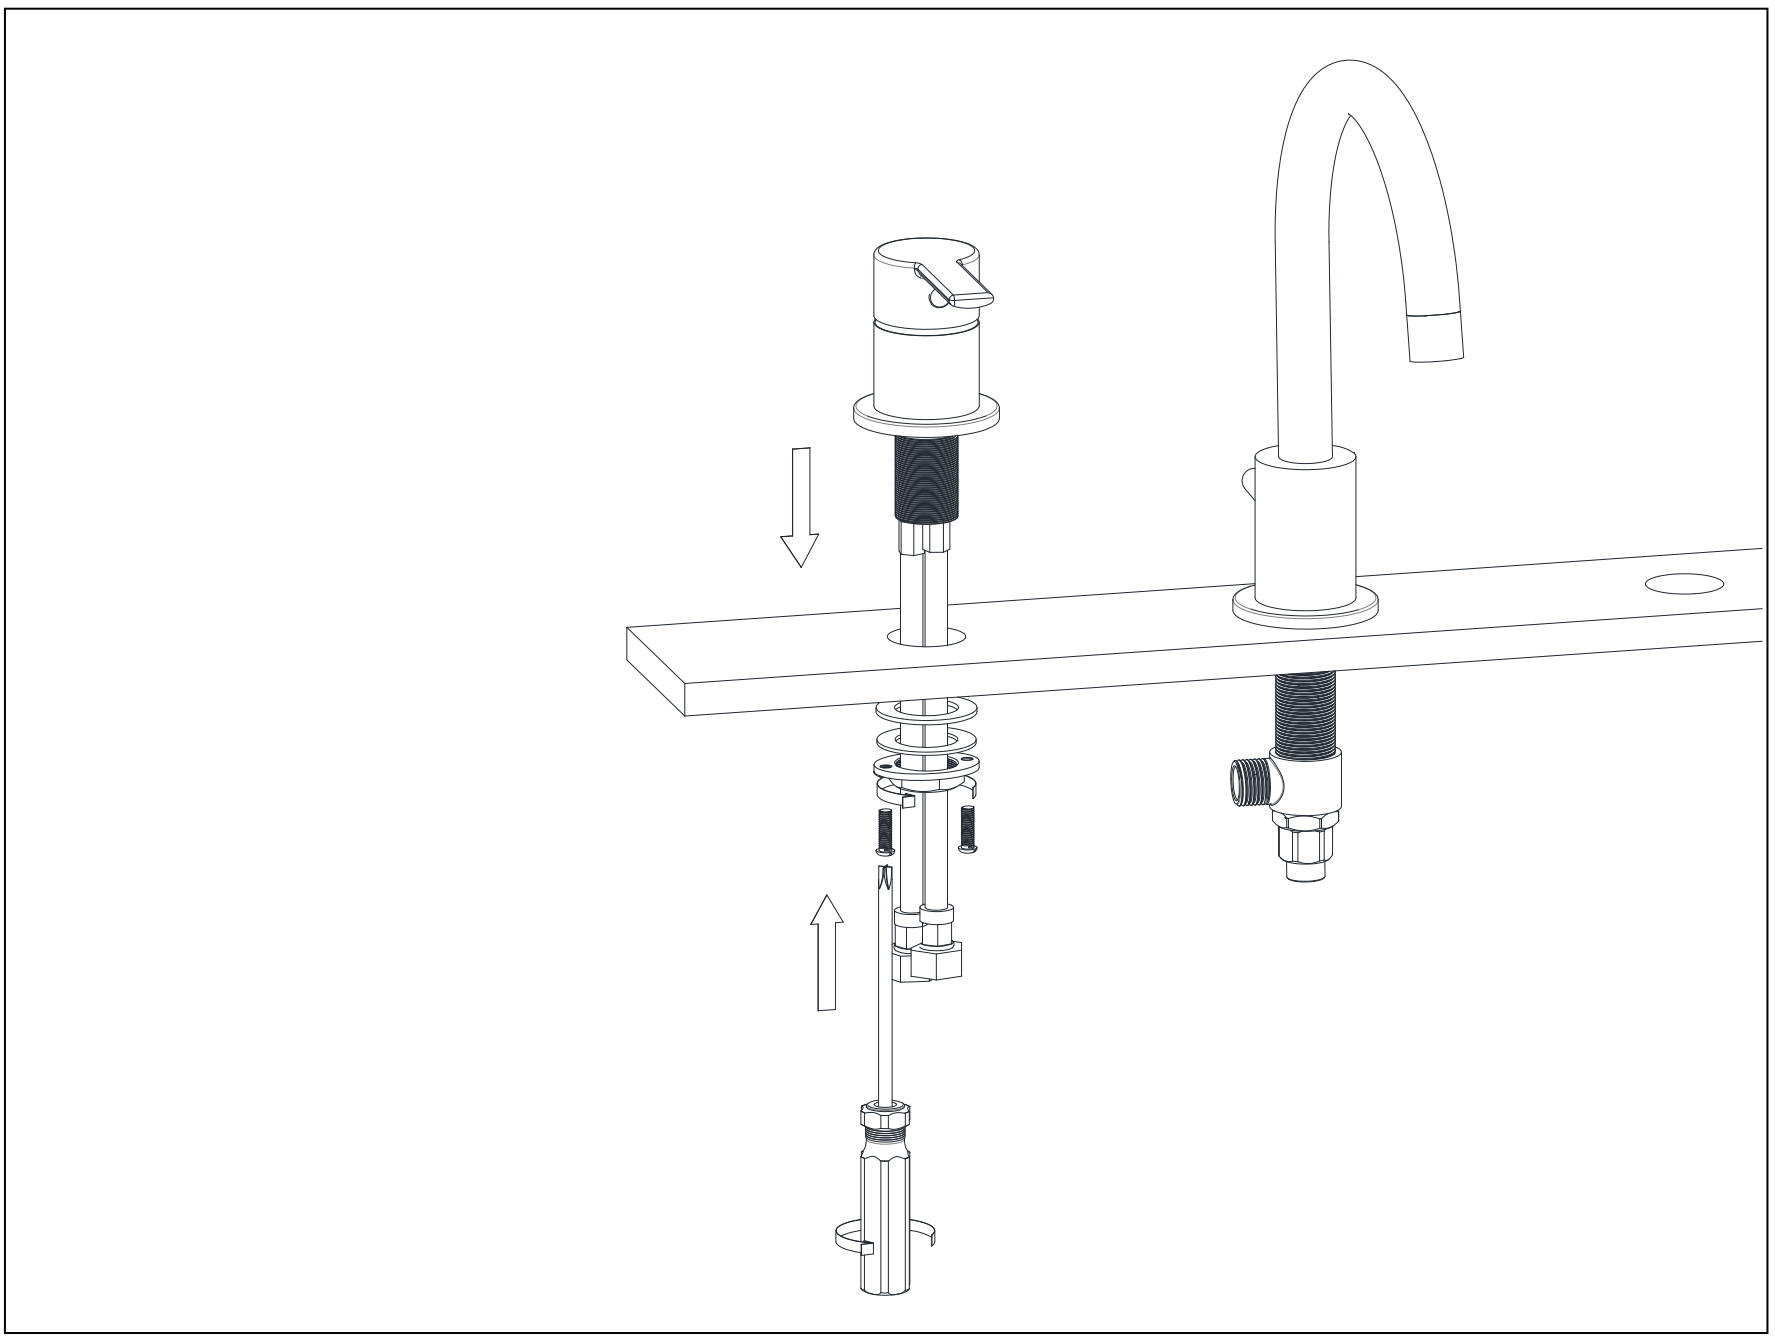


5.7 Install hand shower holder as below. Secure with the rubber gasket, metal gasket and lock nut from underside of deck.

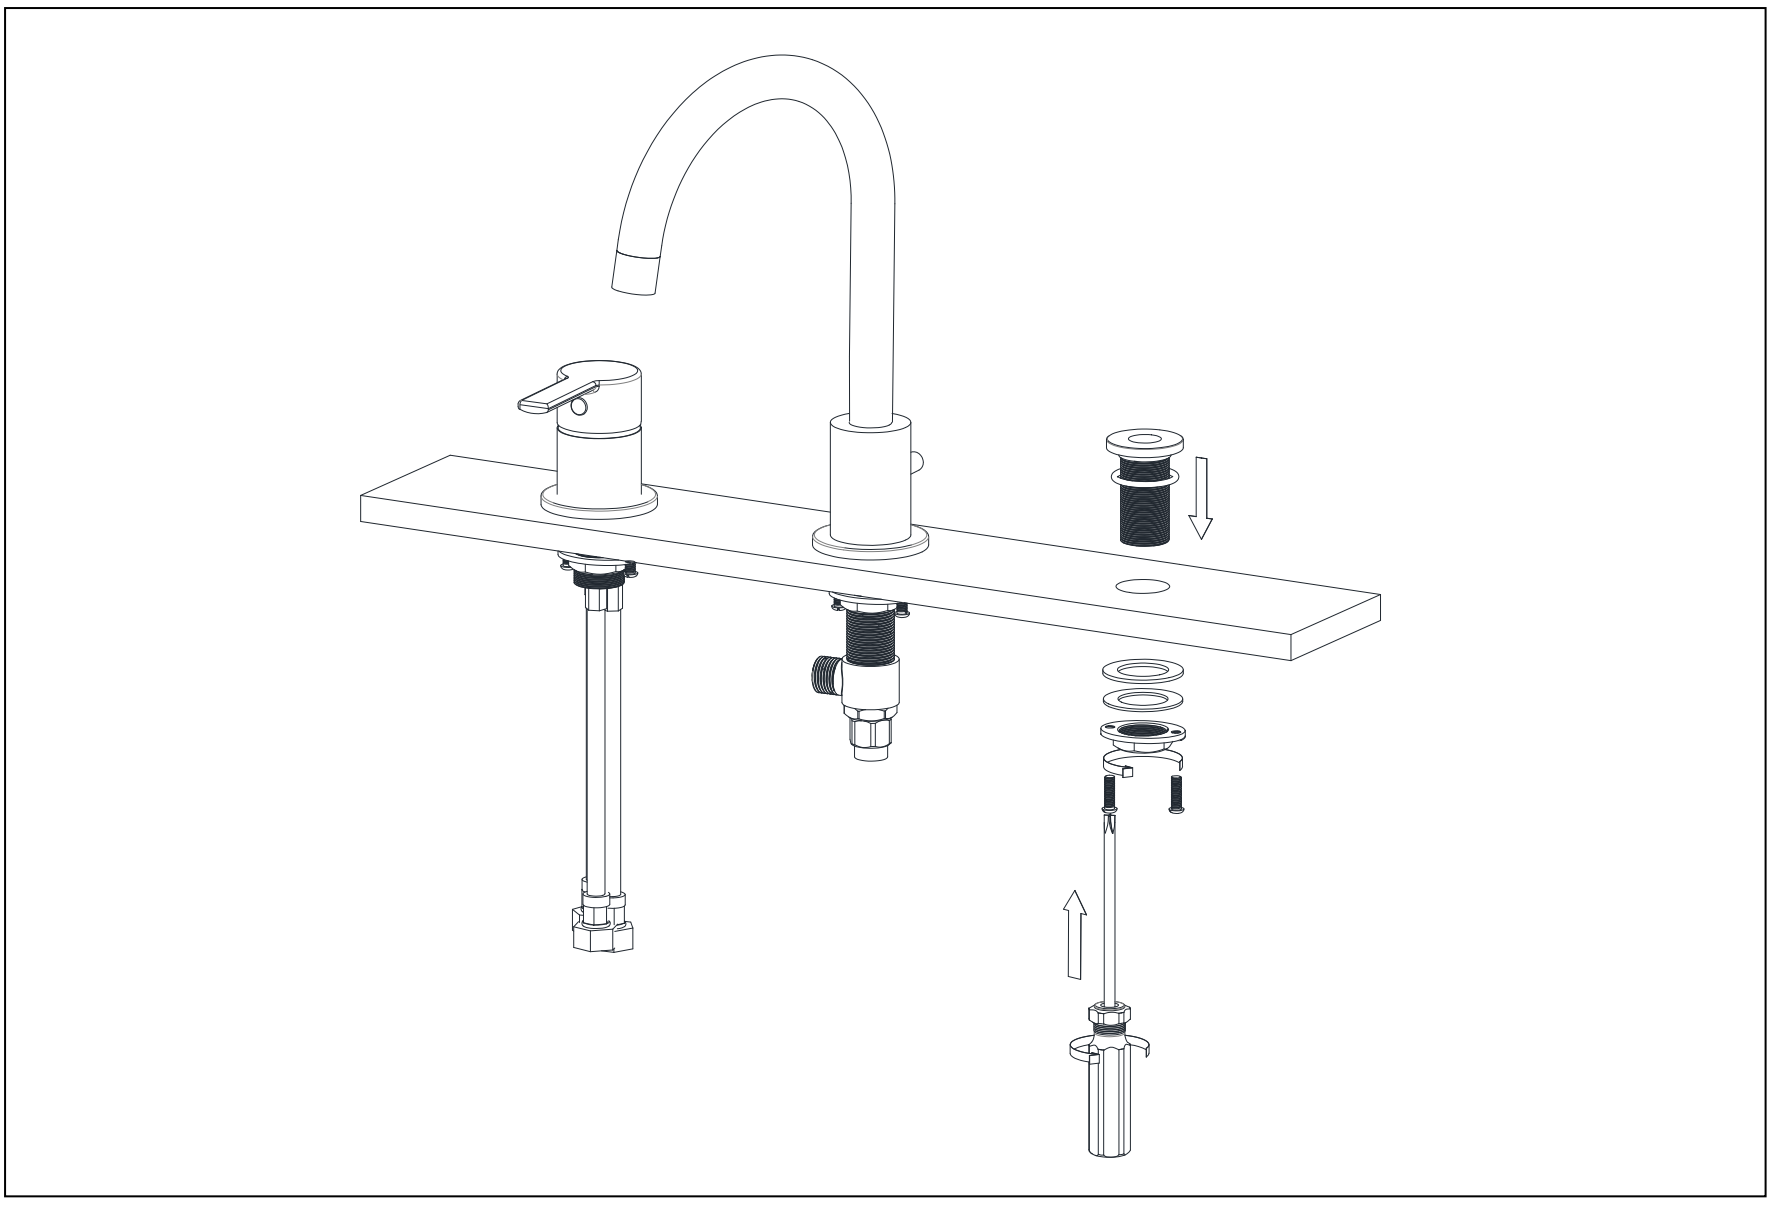


5.8 Connect control valve outlet to spout diverter valve inlet with hose.

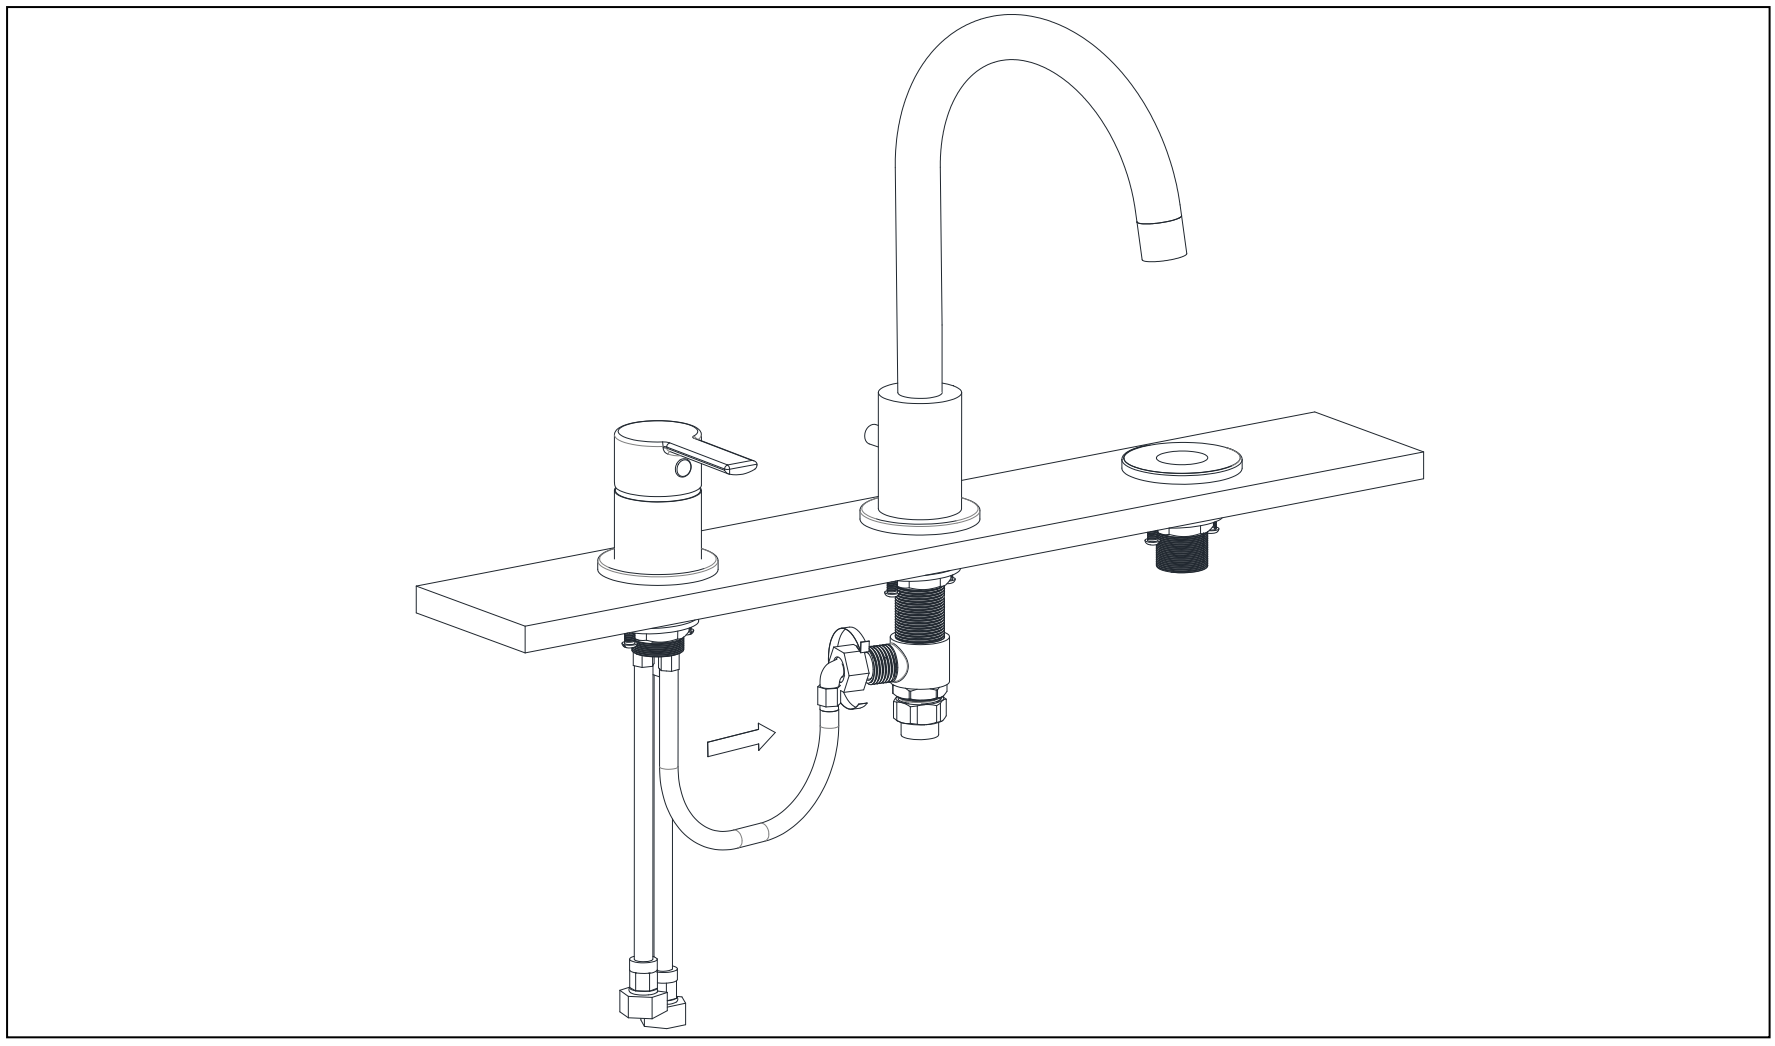


5.9 Screw the hand shower in the hand shower adapter. Please don’t forget to put into the rubber washer for leaking proof.

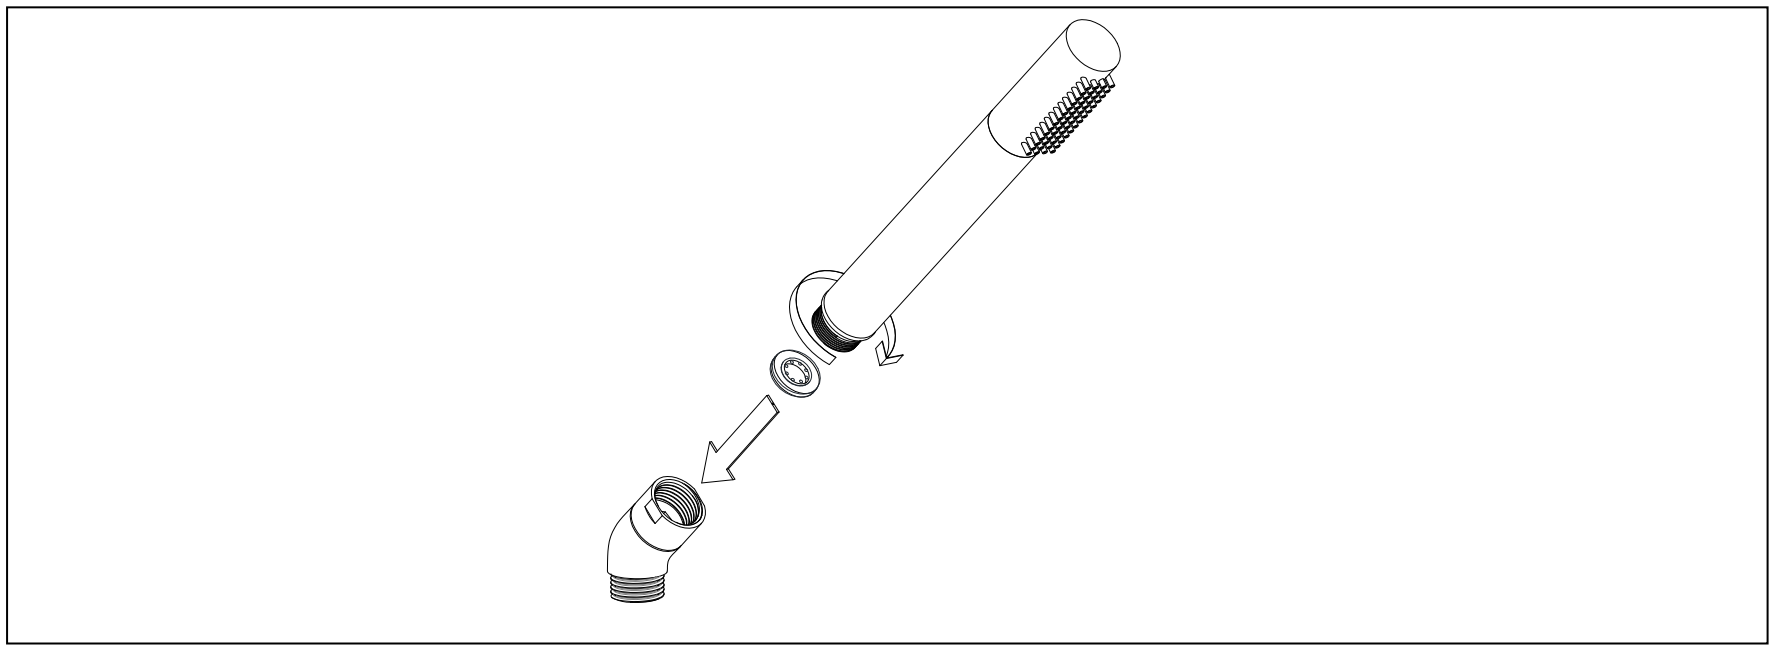

5.10 Connect the shower hose to supply joint.

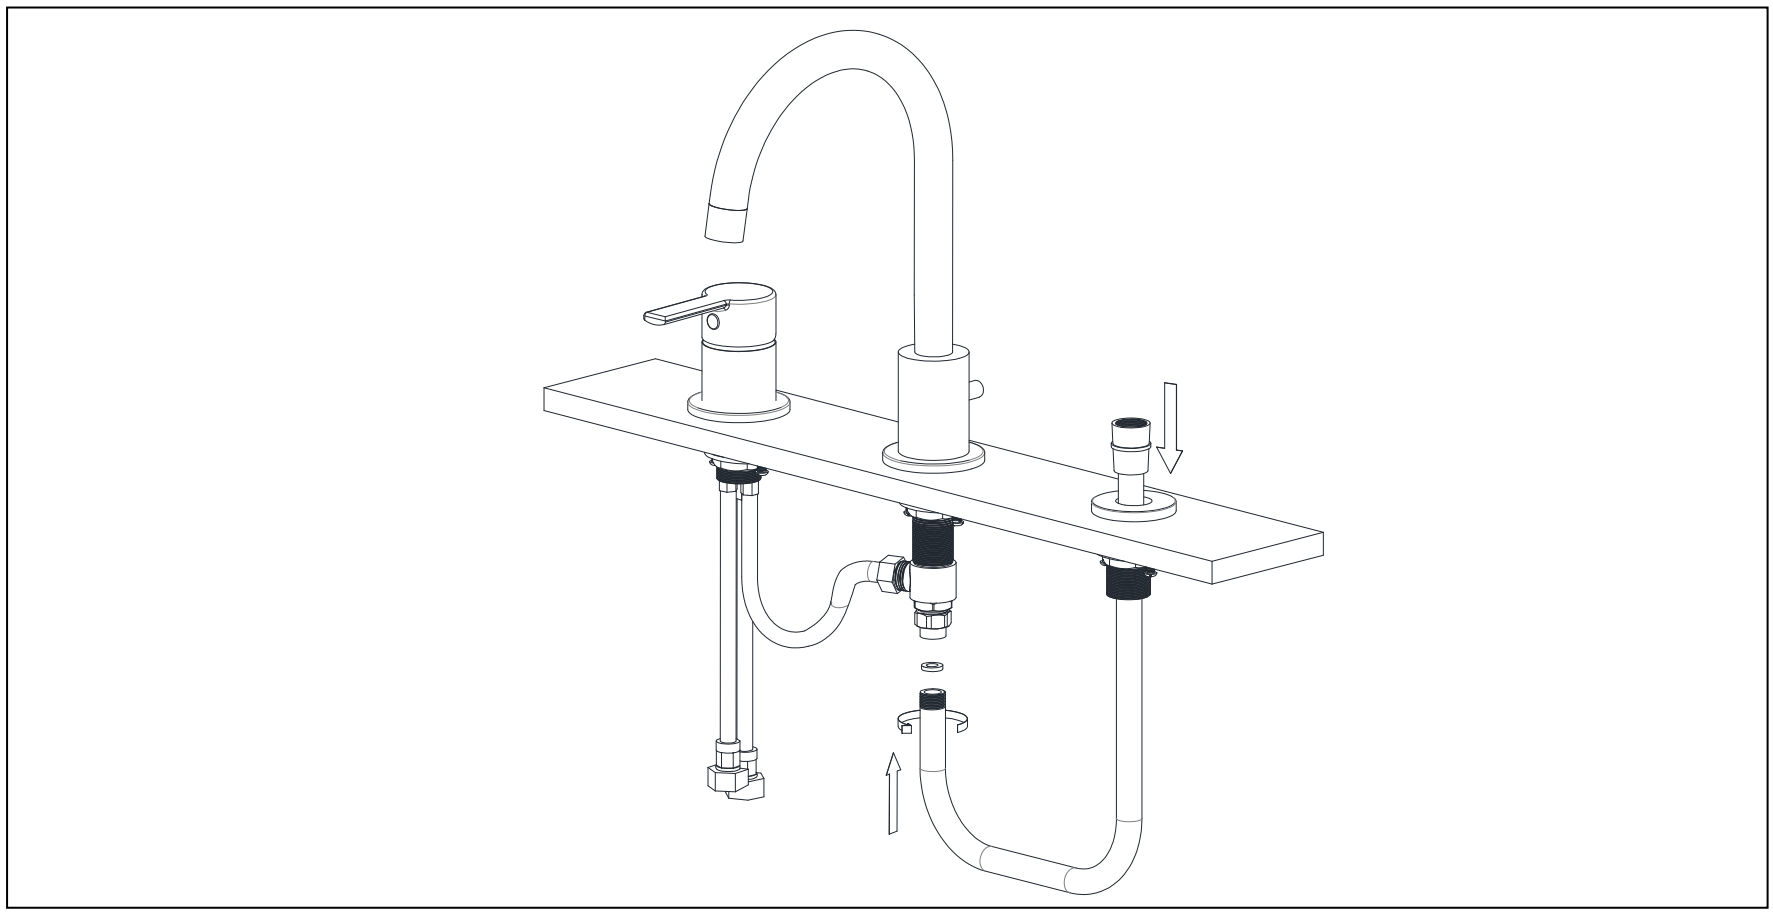


5.11 Install the hand shower into the end of shower hose with correct position.

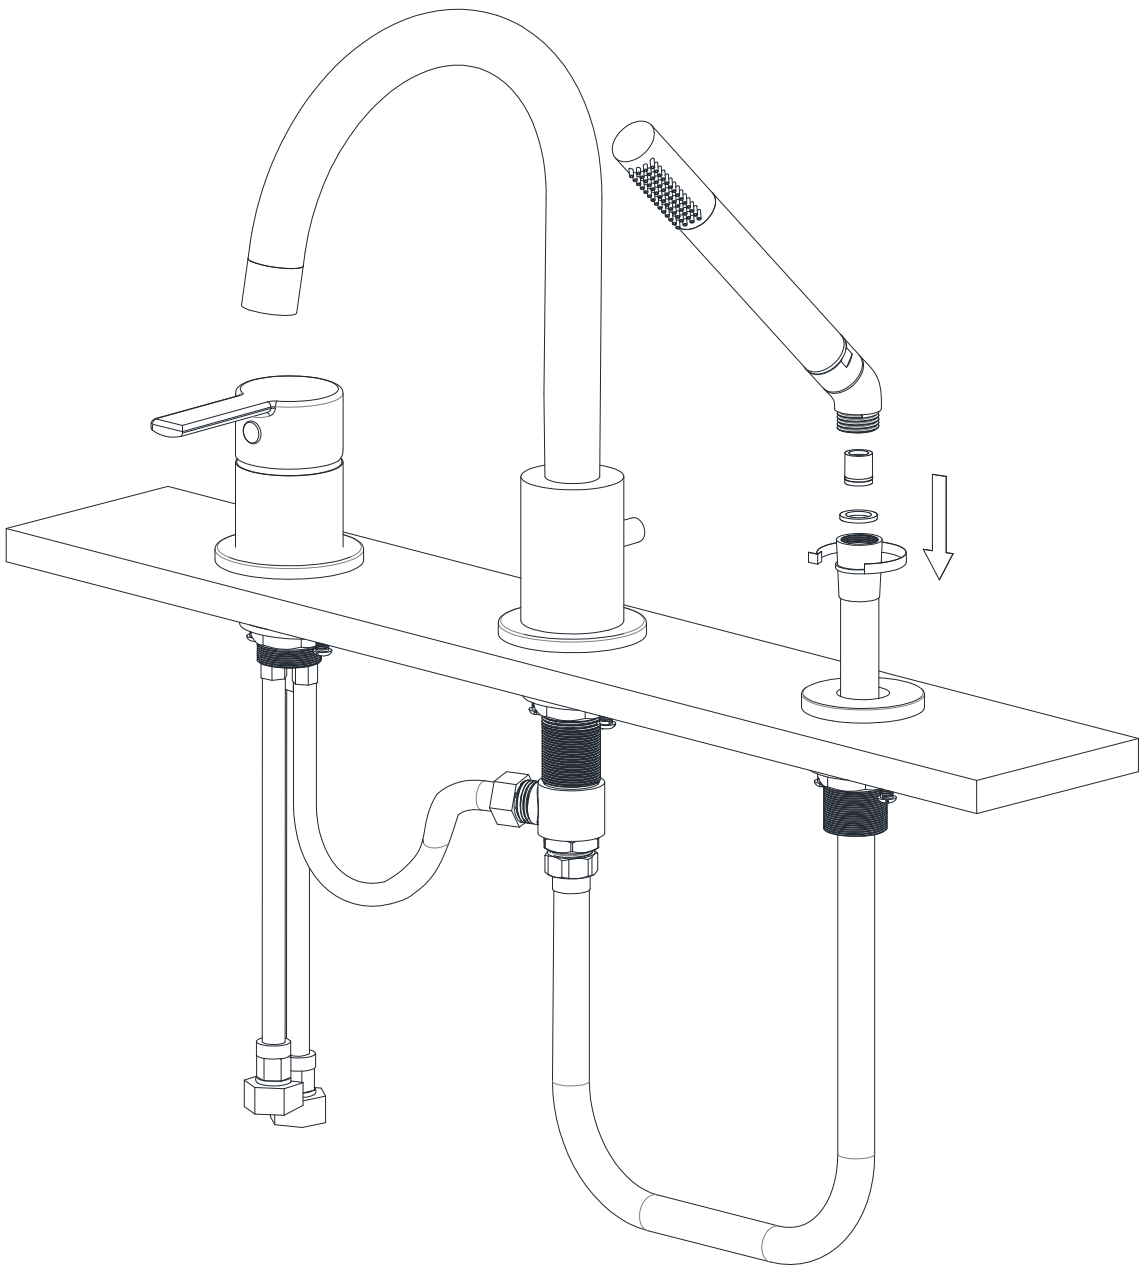


5.12 Connect the hot and cold water hoses from the control valve to the corresponding hot and cold supply valves.

Region	Code	Specifications
US	X	3/8″ Compression
Europe	X	G 1/2″
UK&Other	X	G 1/2″

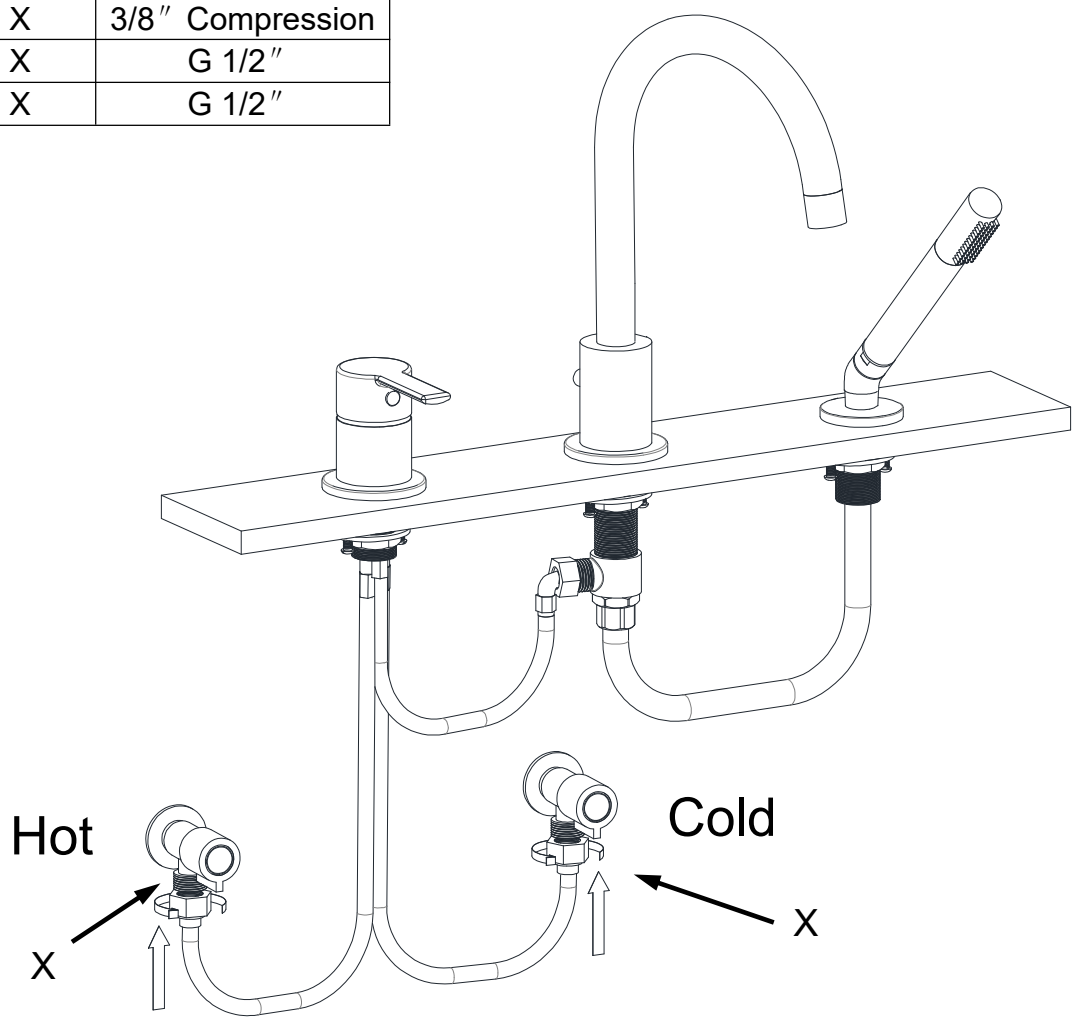

5.13 Assembly finished.

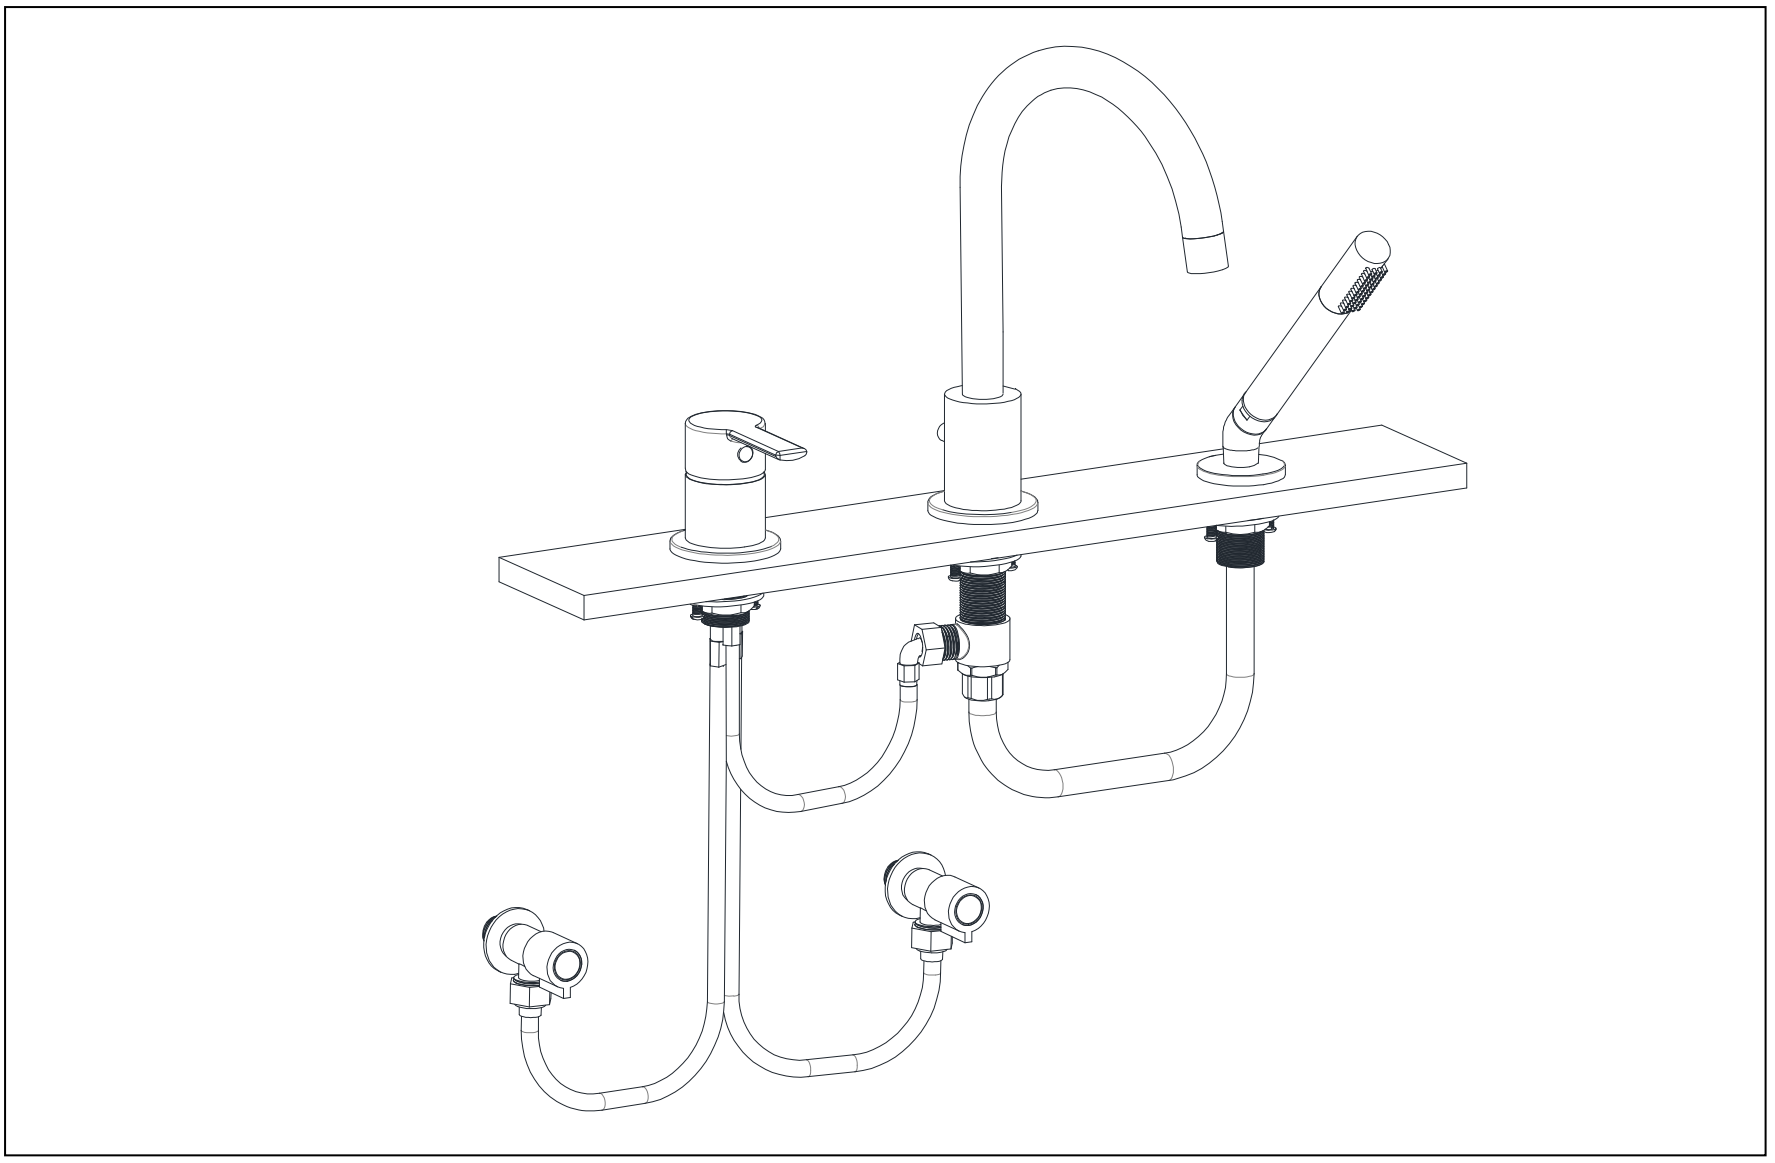

6. INSPECTION

6.1 Turn on hot and cold water supply and check all connection for ensuring no leaking anywhere.

INSTALLATION FINISHED

SUMERAIN®

North America	Asia	Europe
SUMERAIN INTERNATIONAL GROUP INC.	HONGKONG SUMERAIN SANITARY INDUSTRY CO., LIMITED	SUMERAIN EUROPE SUPPORT TEAM
Add: 1400 Summit Ave, Suite A, Plano, TX 75074, USA	Add: ROOM 14 2/F WELLBORNE COMMERCIAL CENTRE NO.8 JAVA ROAD NORTH POINT HK	Add: Flottwellstr.15 10785 Berlin, Deutschland
Tel: +1-866-203-0866	Tel: +86-750-2731579	Tel: +49 (0)30/23975898
E-mail: support@sumerain.com	E-mail: support@sumerain.com	E-mail: support@sumerain.com