


Assembling Instruction

Generating Drawings

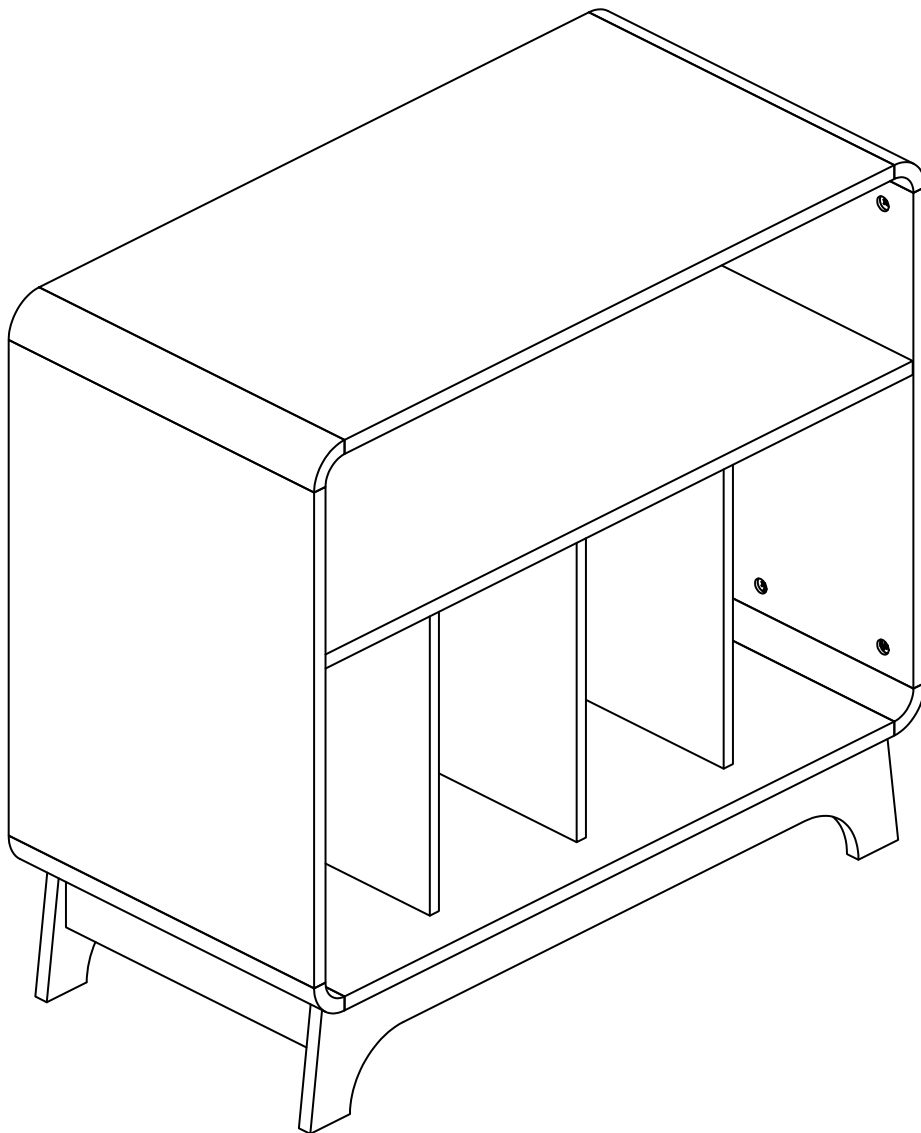


ATTENTION

If there is any missing, please kindly send us messages to let us know the name of missing part regarding to the first page of instructions. We will send replacement to you asap. We are concerned about each customer's experience, if there is any loss or damage, please contact us at any time, we will provide effective solutions.


Please attach your Oder ID so that we can assist you better.

General Assembly Guidelines




- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- VI. A Phillips head screwdriver is required for the assembly of this product .

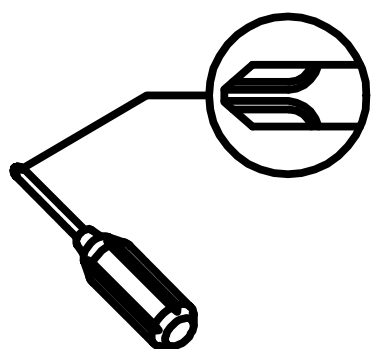

- VII. Power tools should not be used to assemble this product .

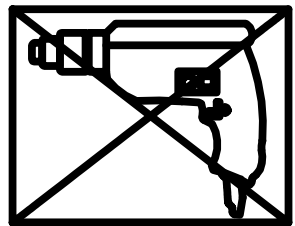


CAM LOCK/BOLT FASTENING INTRODUCTION (You will use it during assembly)

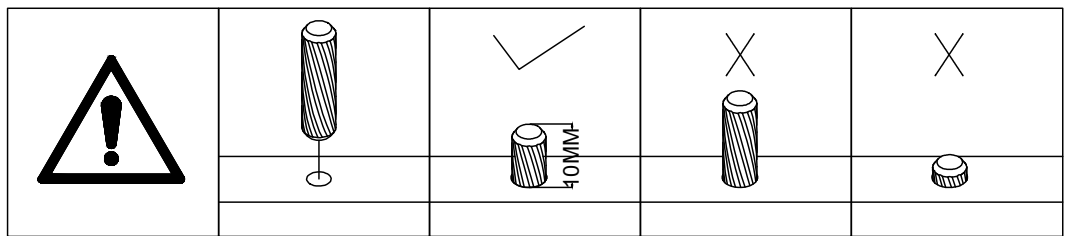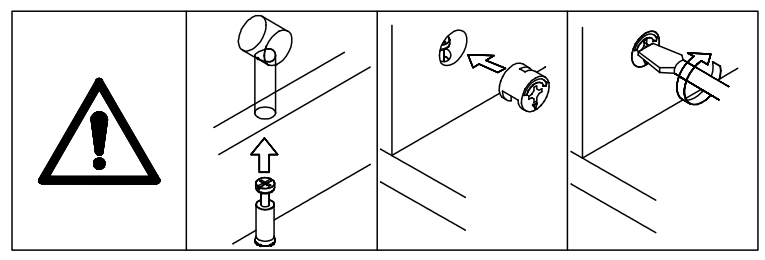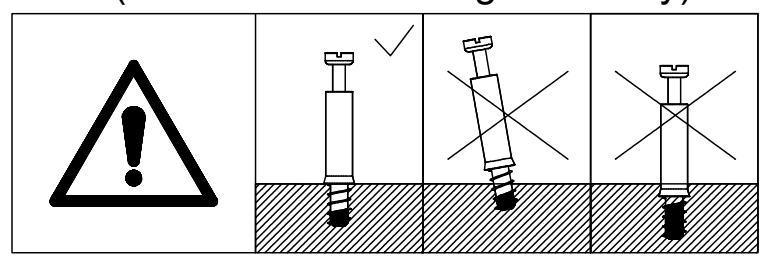

Hardware Provided

A



X46+4

B




X46+4

C



X44+4

D



X6+1

E



X4+1

F



X8+1

G



X12+1

H




X12+1

I



X28+2

J

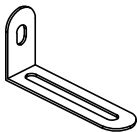

X2

K




X1

L



X2

M



X2


N



X2+1


Parts Identification

1

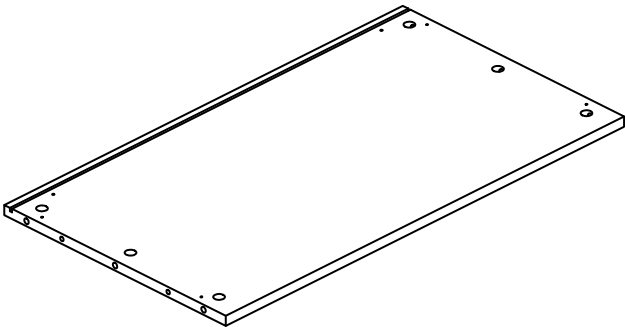


X 1

2

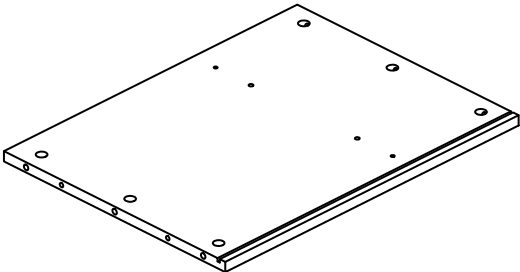


X 1

3

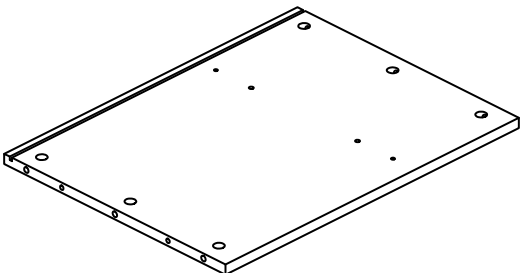


X 1

4

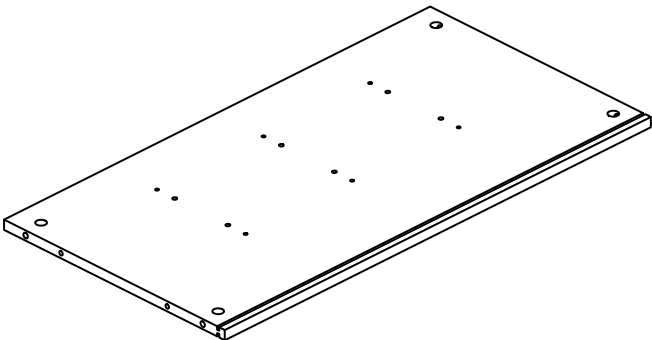


X1

5

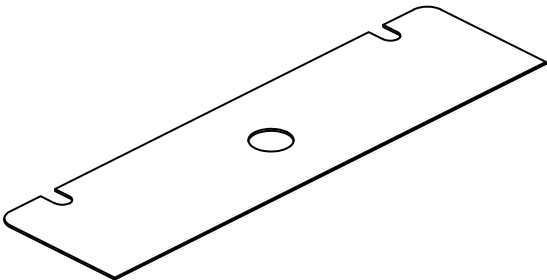

X 1


6

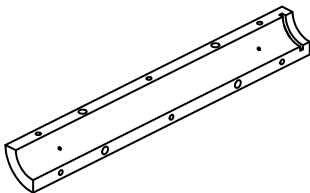

X2


Parts Identification

7

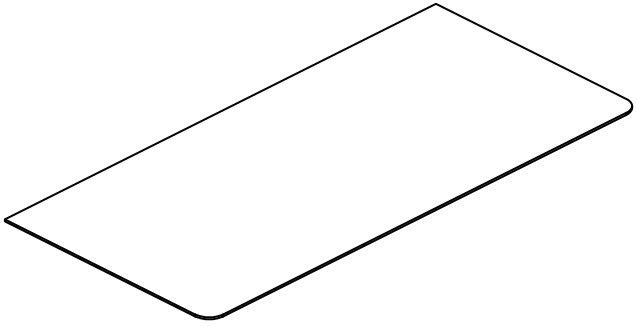


X 1

8

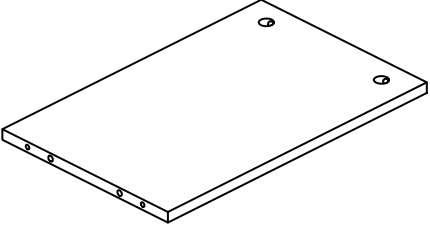


X3

9

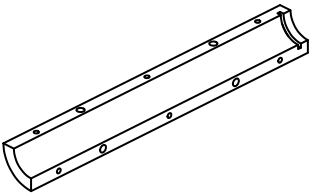


X2

10

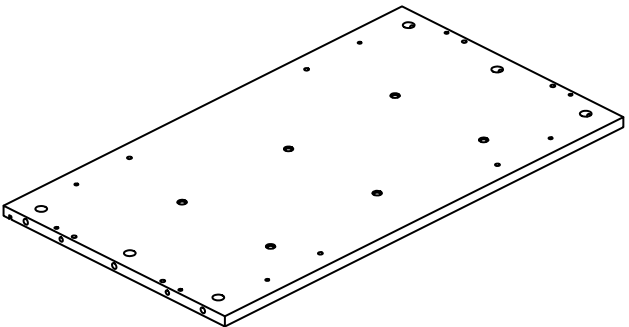


X1

11

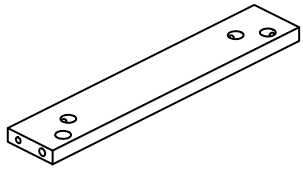


X2

12

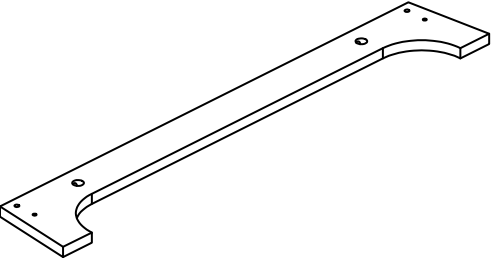

X2


Exploded View

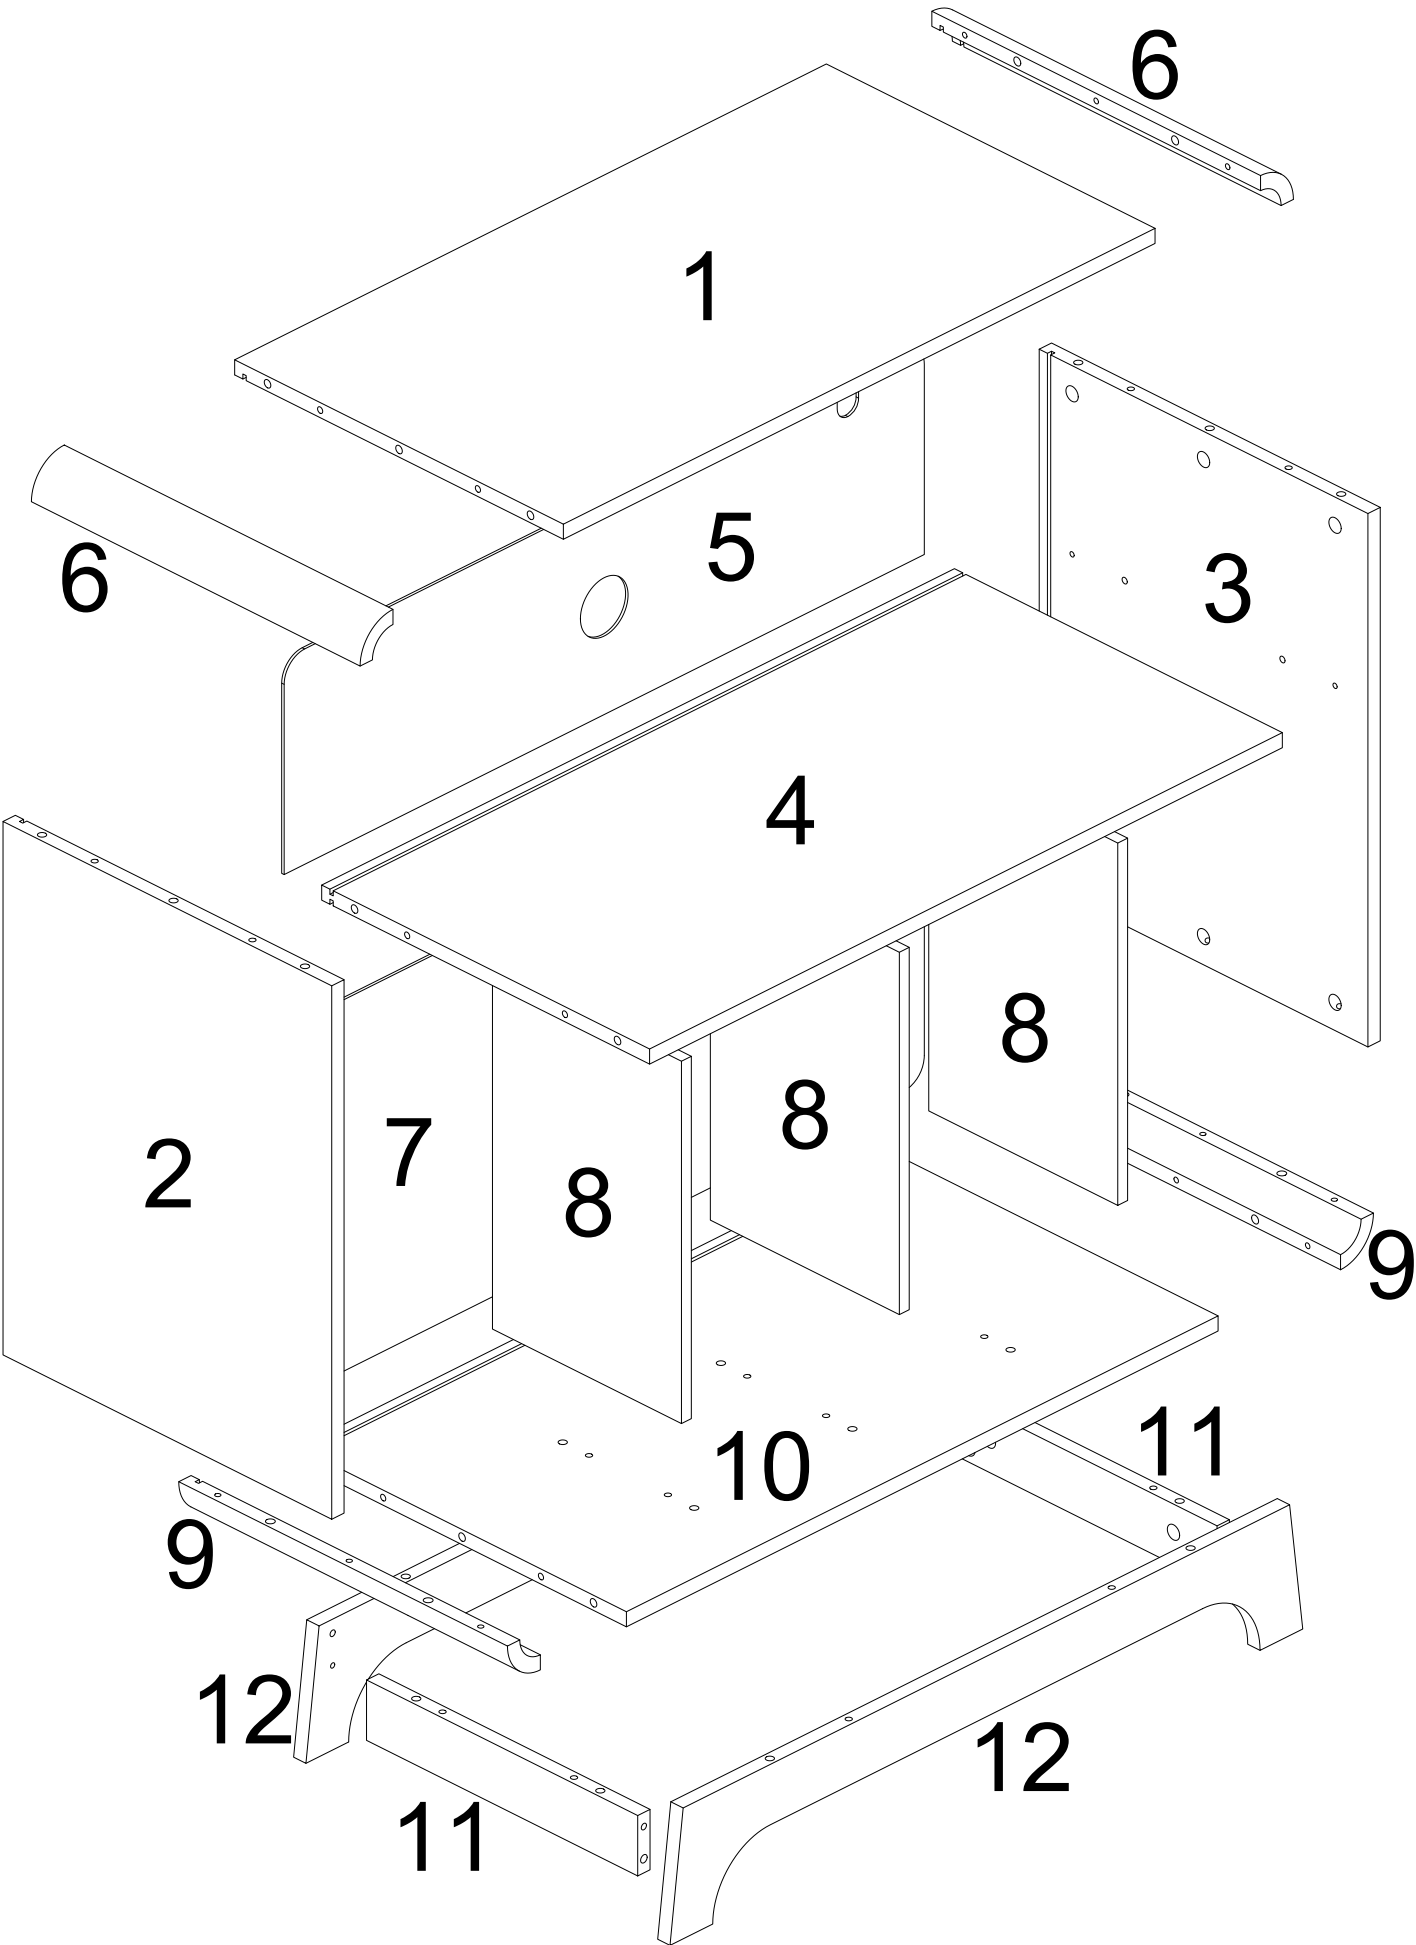

Step 1

A


x4

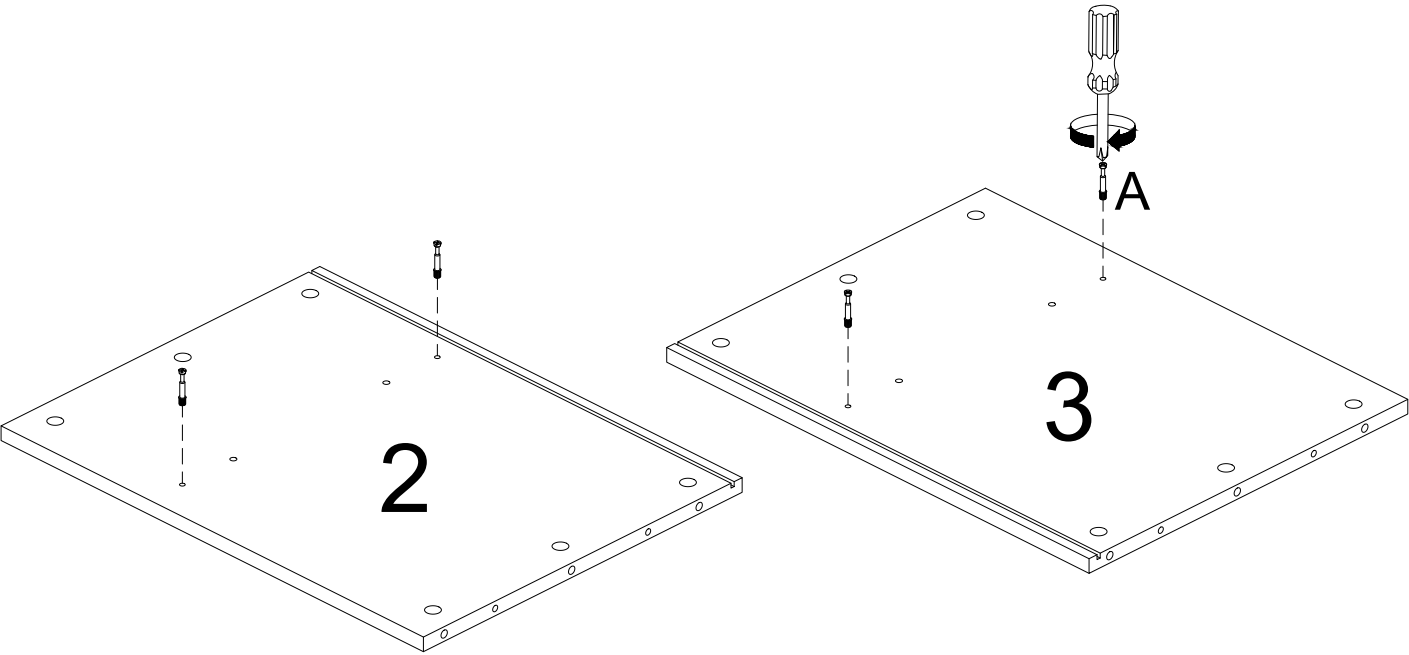

Step 2


A

x6

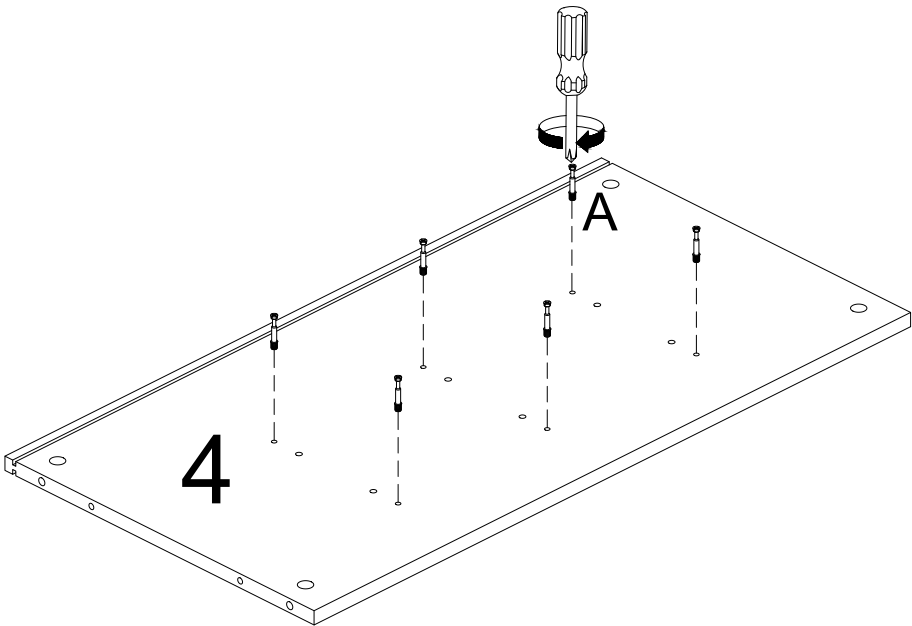


Step 3

B	C
	
Ø6*30mm	
x4	x4

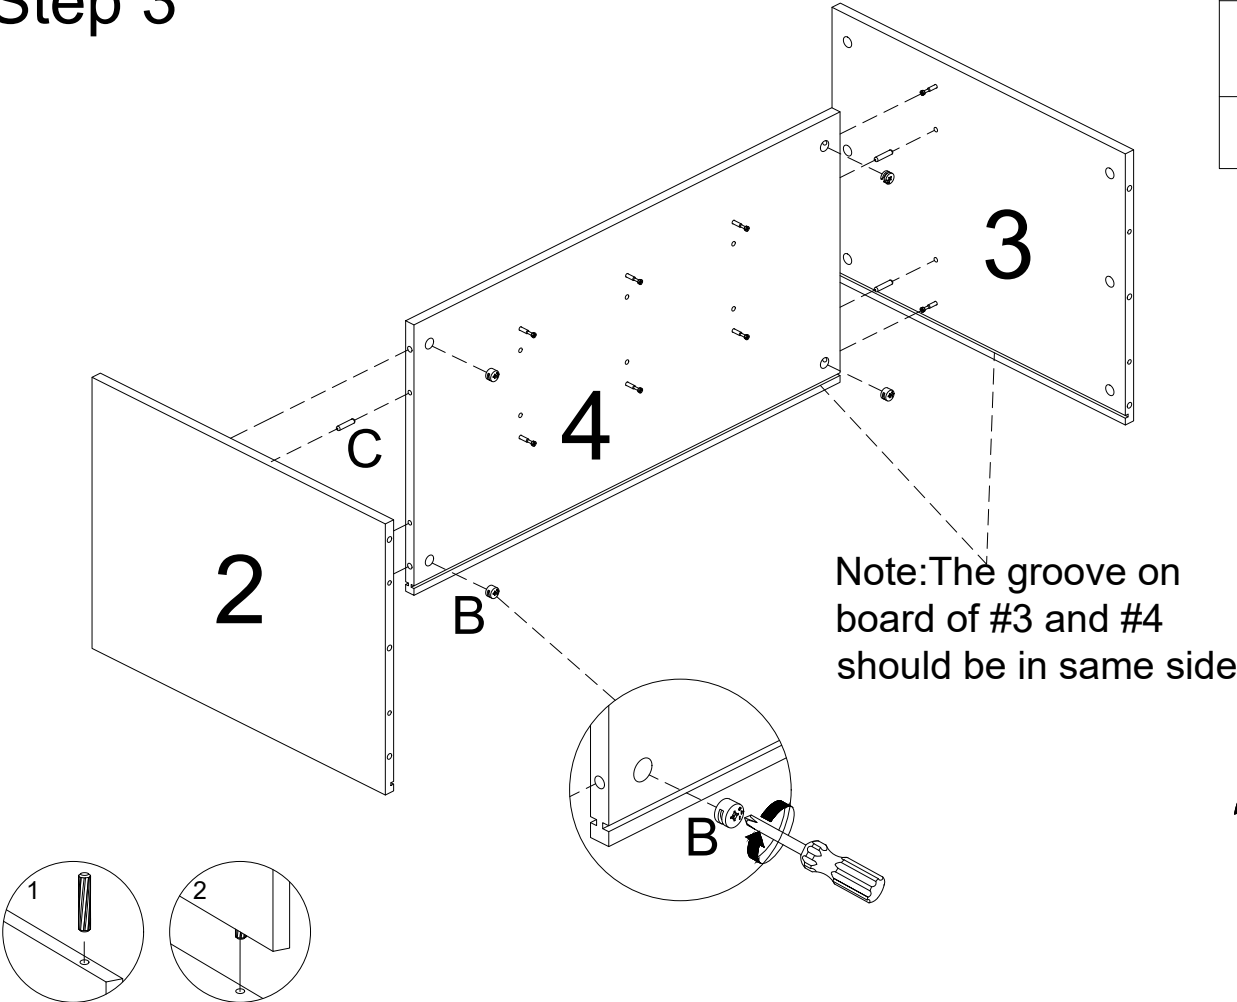


Step 4

Ensure the U-shaped holes on the #5 back panel are at the top.

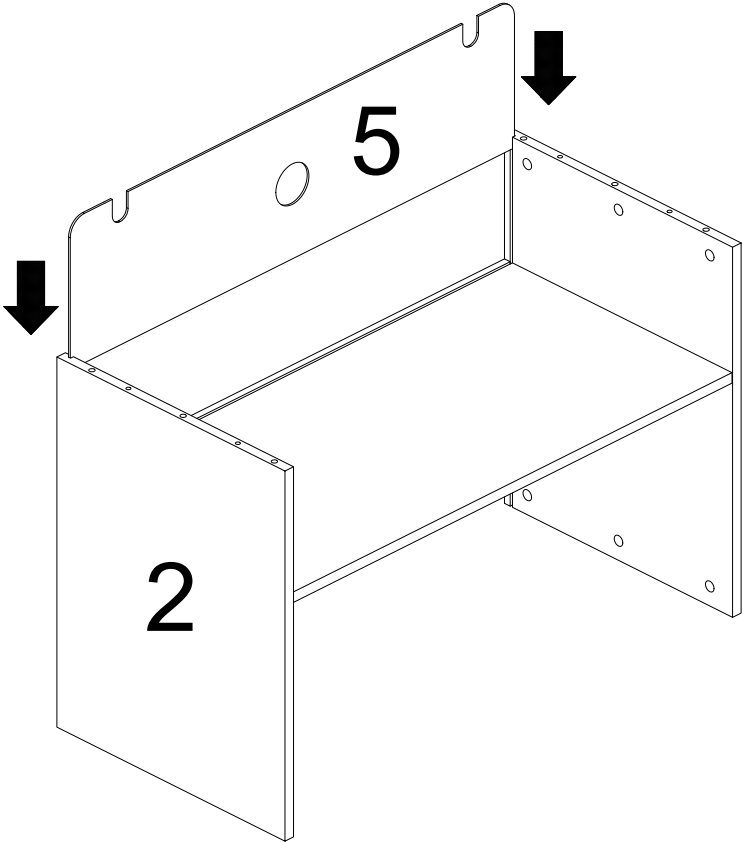


Step 5

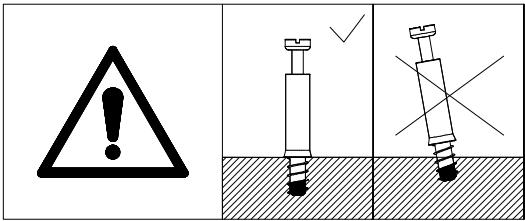


A

x12

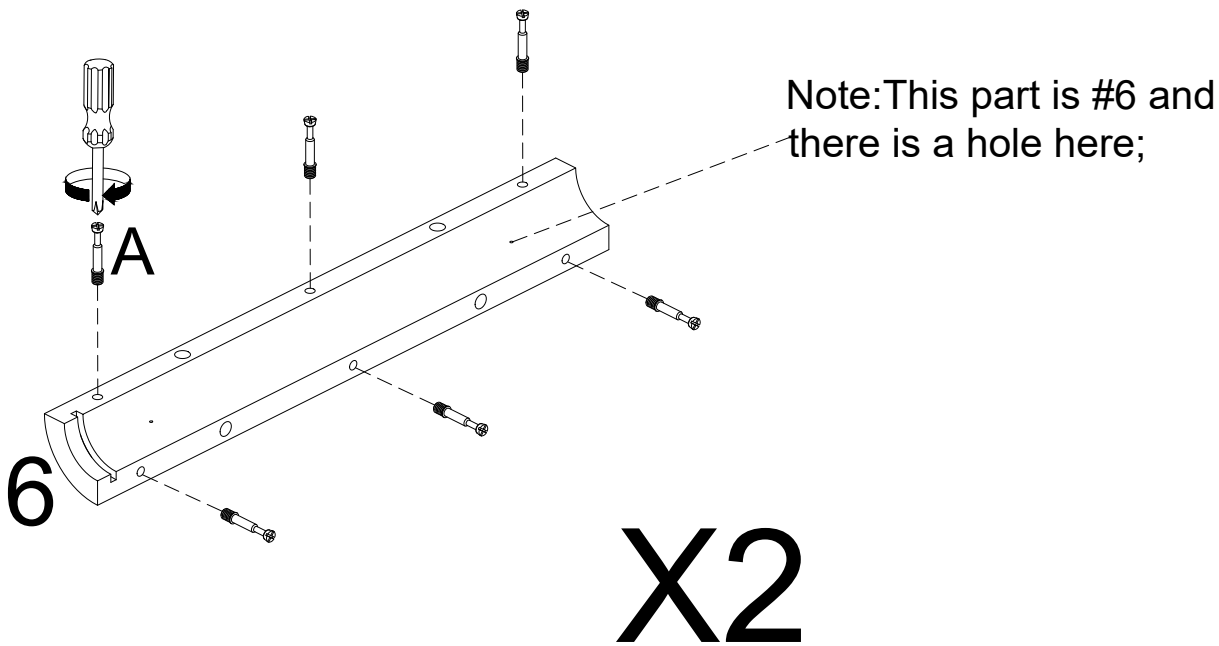


Step 6

B	C
	 Ø6*30mm
x6	x4

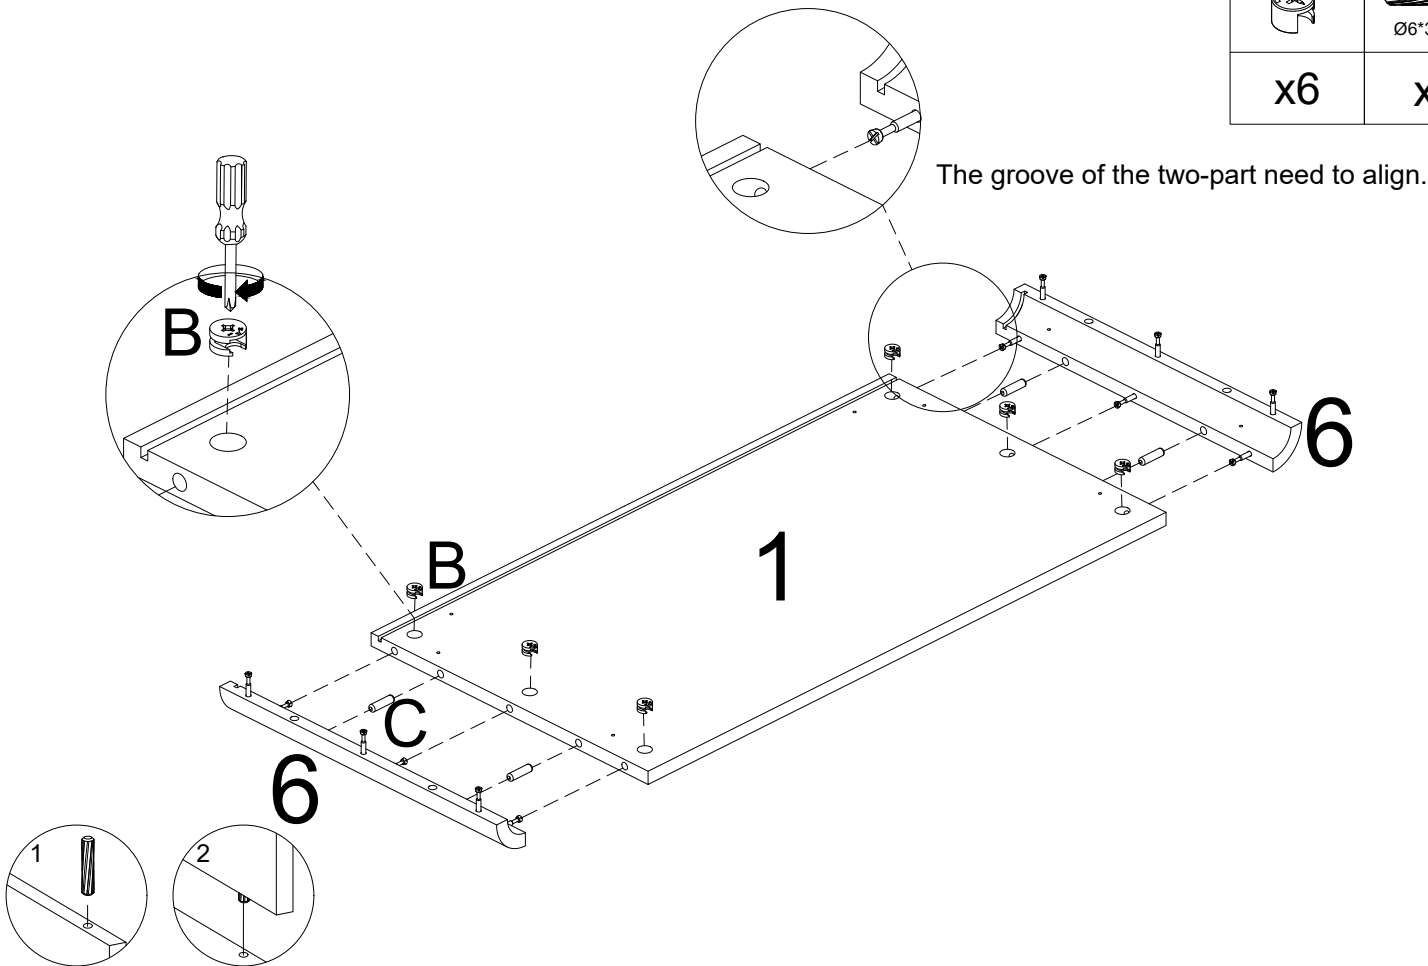


Step 7


NOTE:Secure J with N to 95% tightness,you can adjust the distance when locking the wall

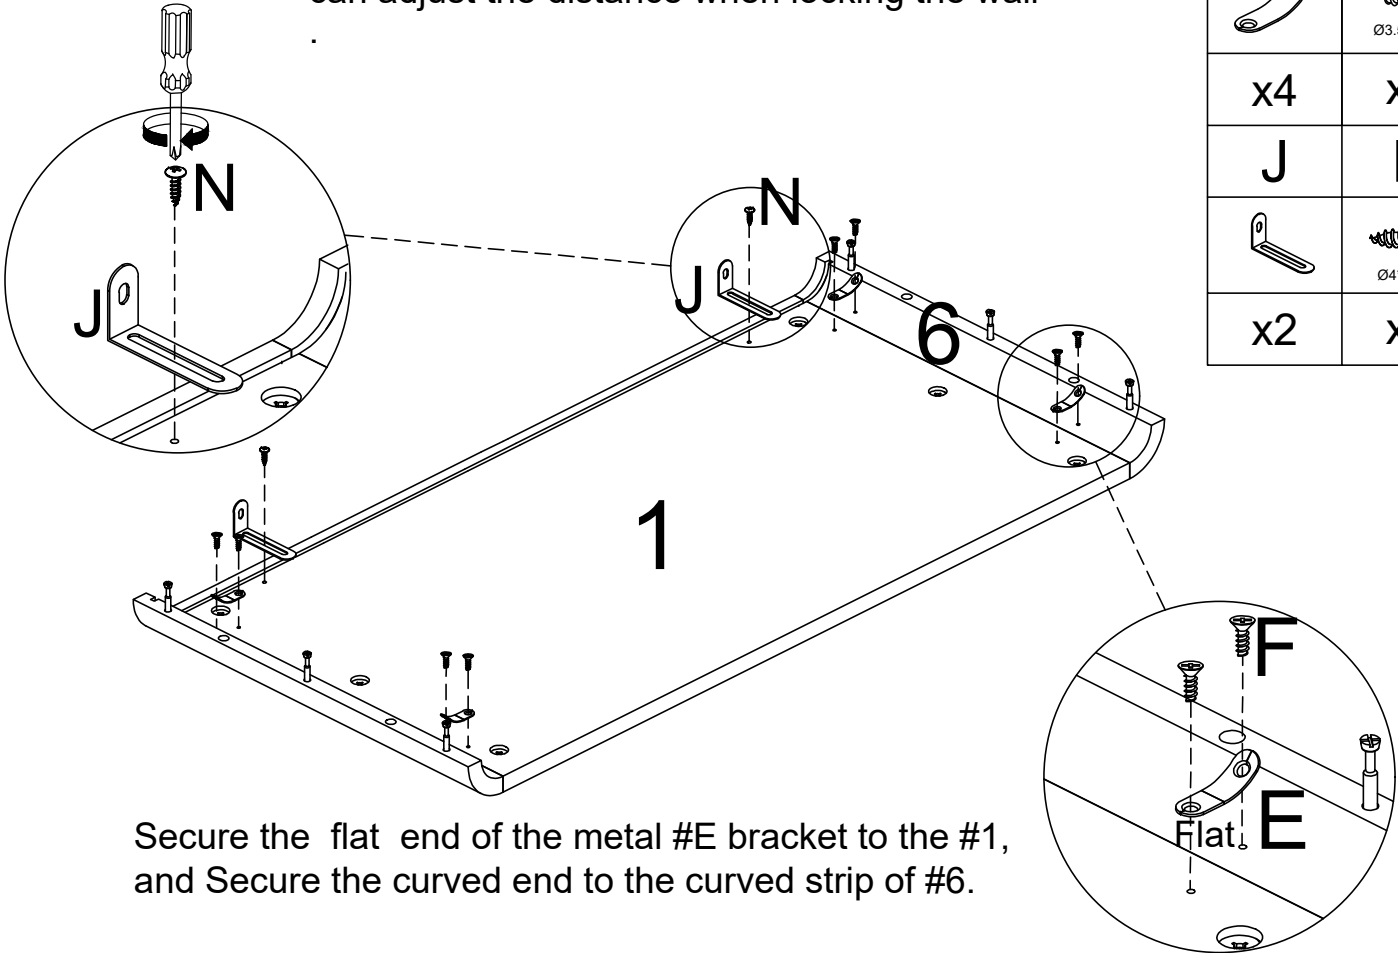


Step 8

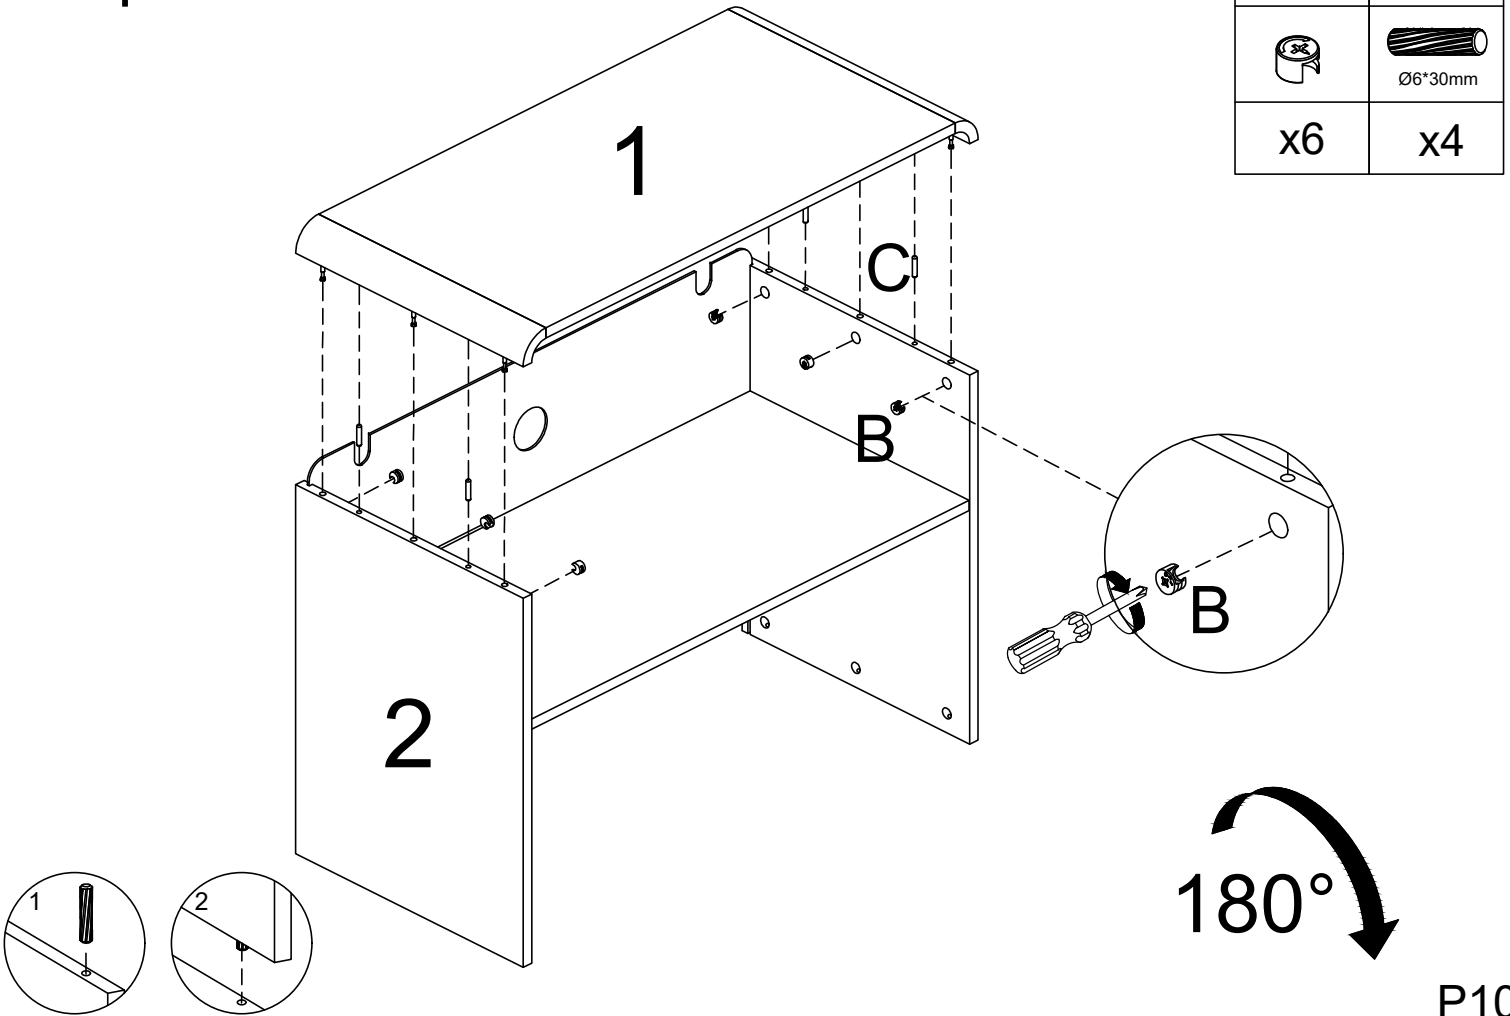


Step 9

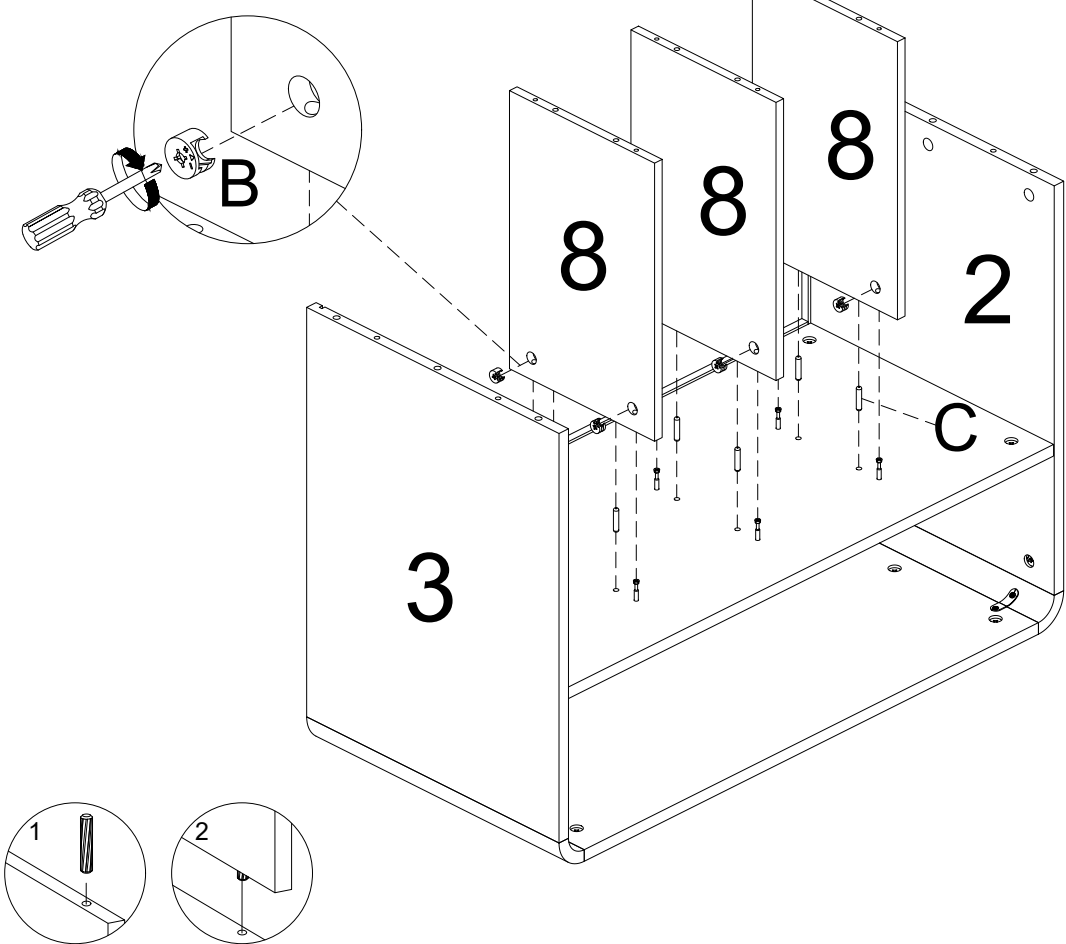


B	C
	
x6	x6

Step 10

Note: The curved corner on board of #7 should be upwards.

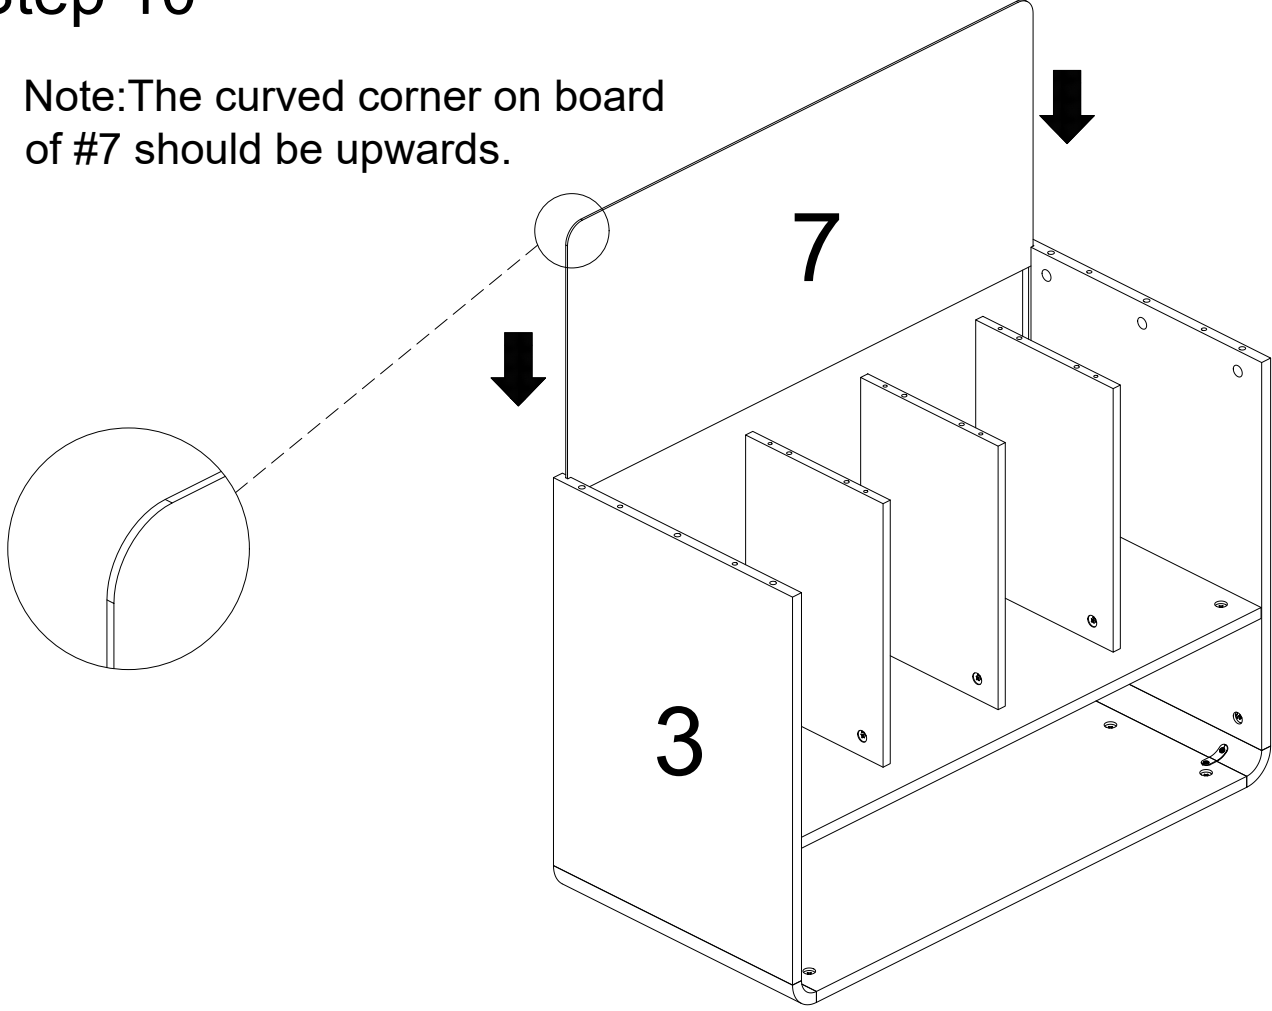


Step 11

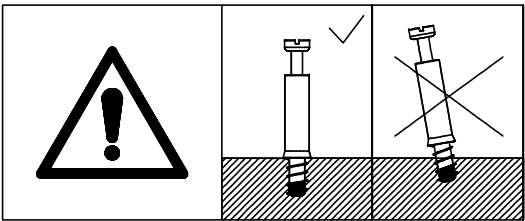


A

x12

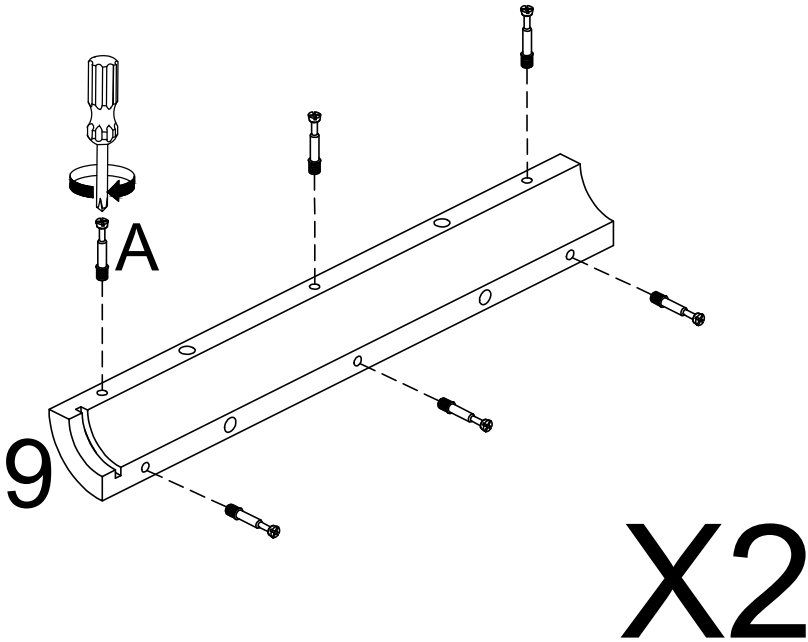


Step 12

B	C
	 Ø6*30mm
x6	x4

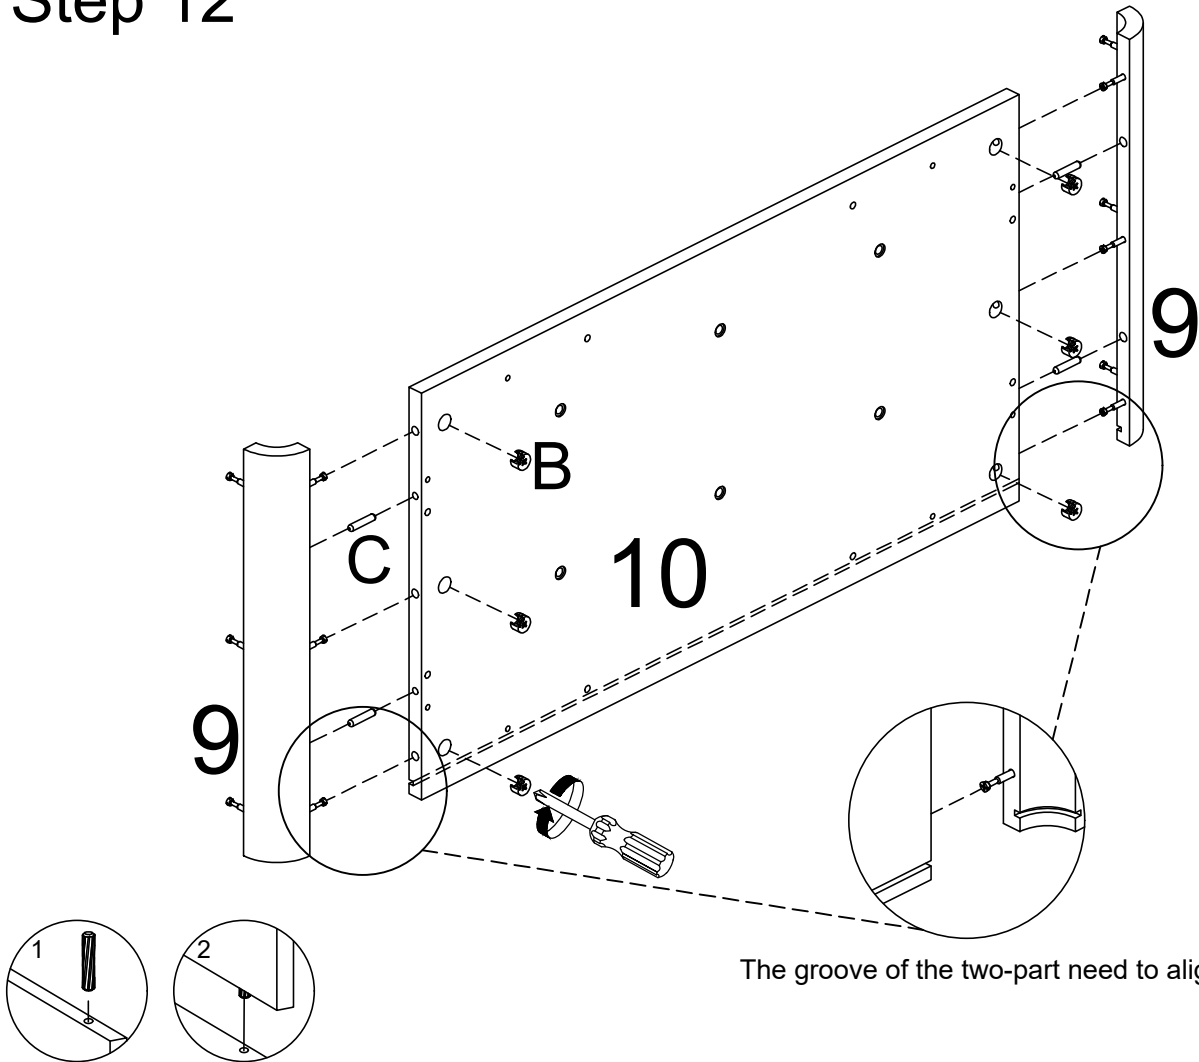


The groove of the two-part need to align.


Step 13

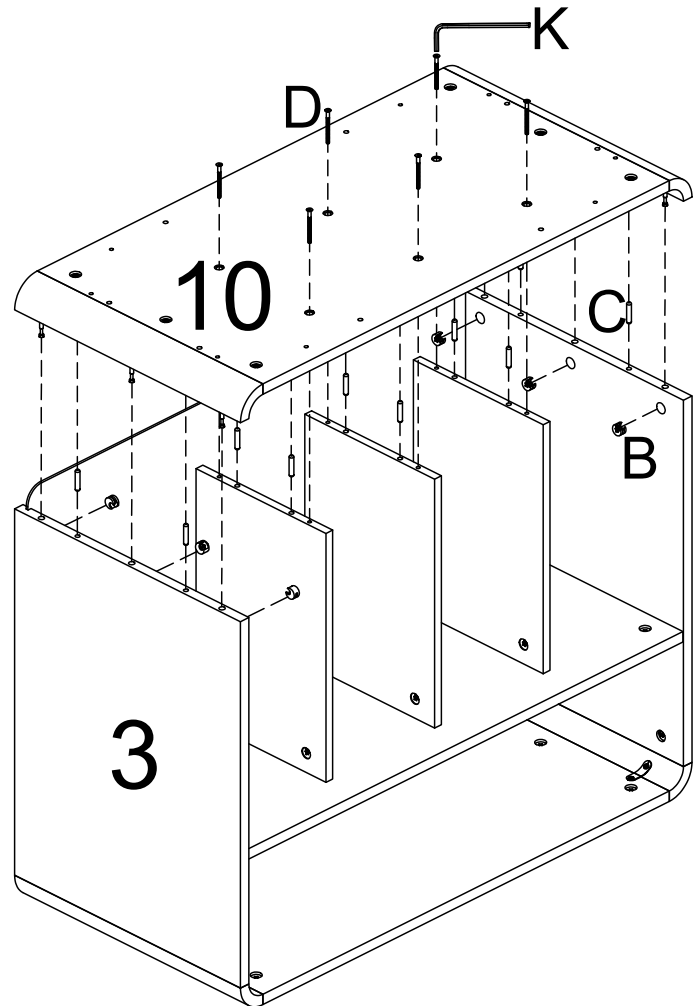

B	C
	 Ø6*30mm
x6	x10
K	D
	
x1	x6

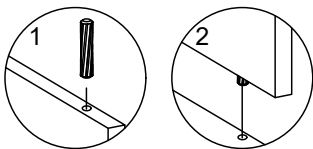

Step 14

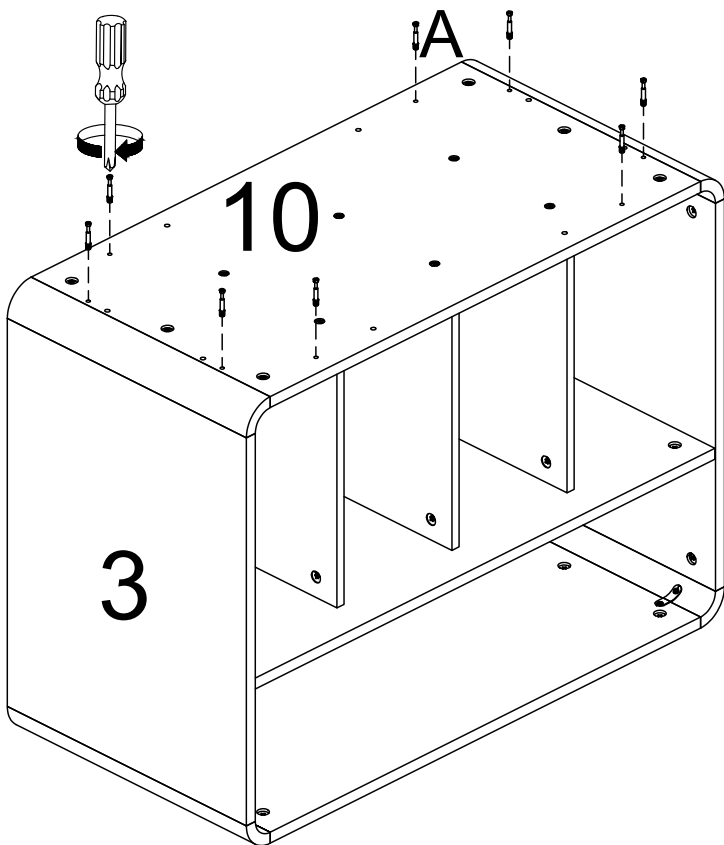


A

x8

Step 15

A



x4

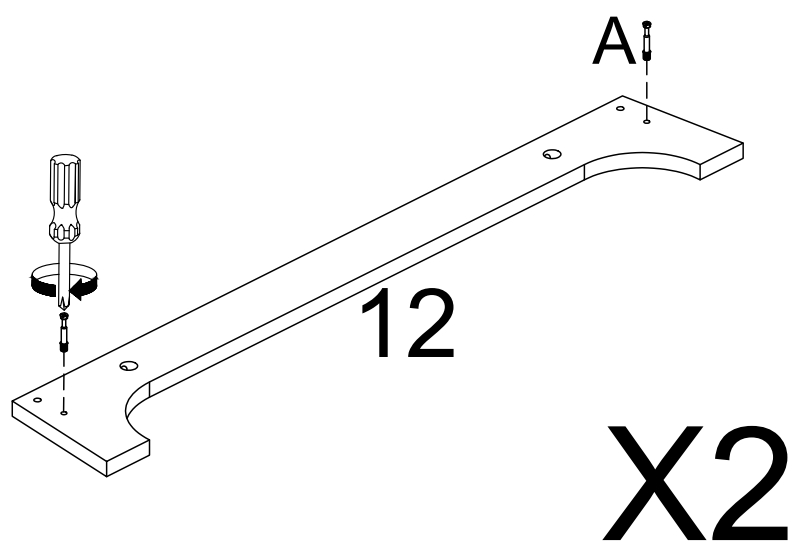

Step 16



NOTE: The cam lock holes on panel #11 should be face inward

B	C
	 Ø6*30mm
x2	x2

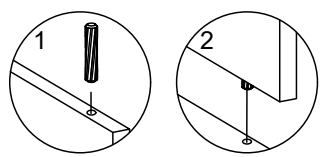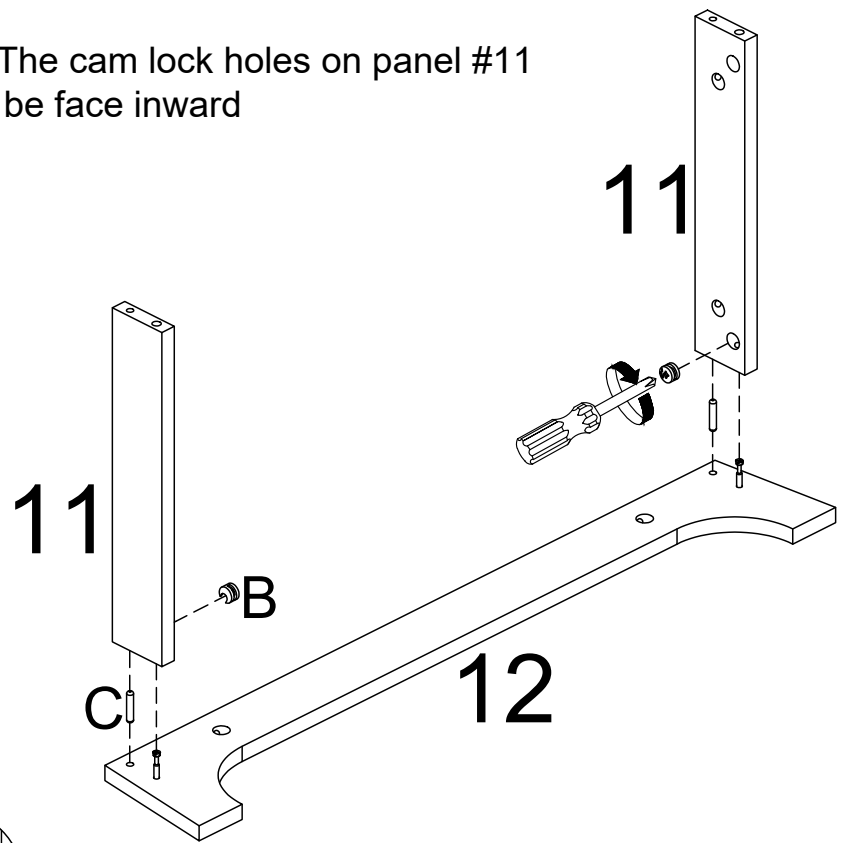




Step 17

B	C
	 Ø6*30mm
x2	x2

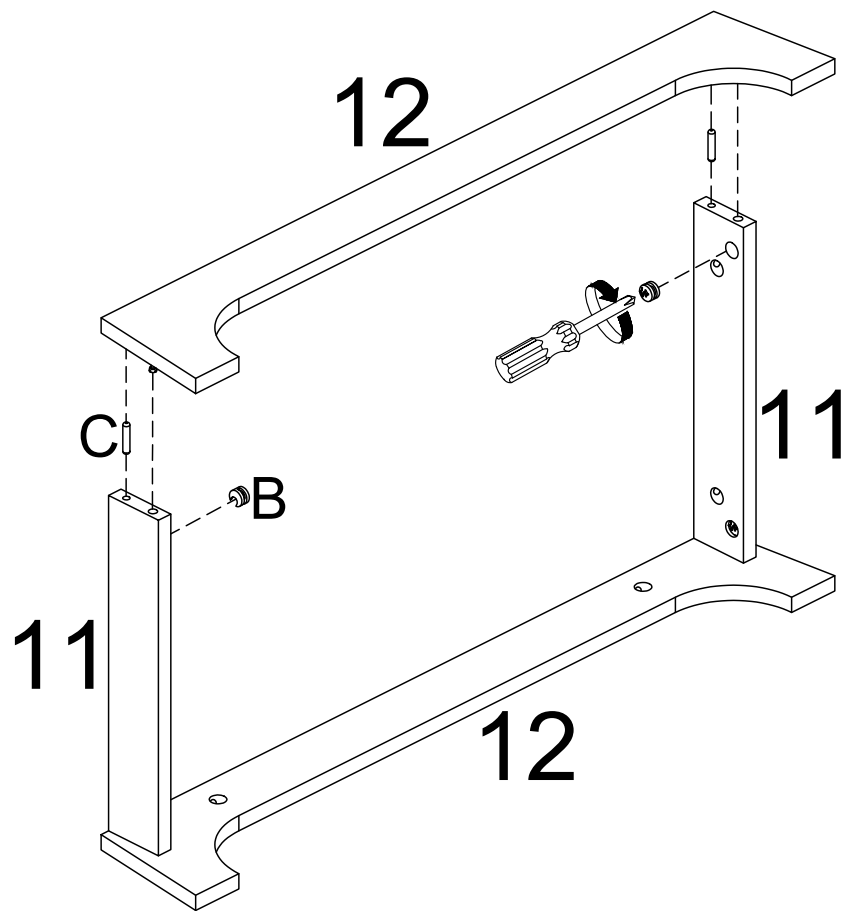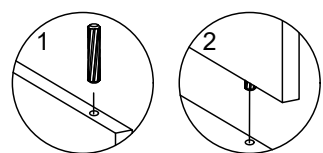

Step 18


B	C
	 Ø6*30mm
x8	x8

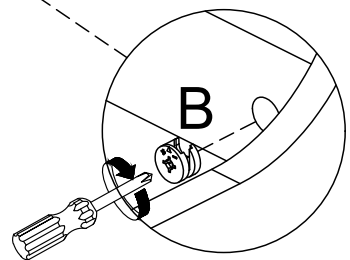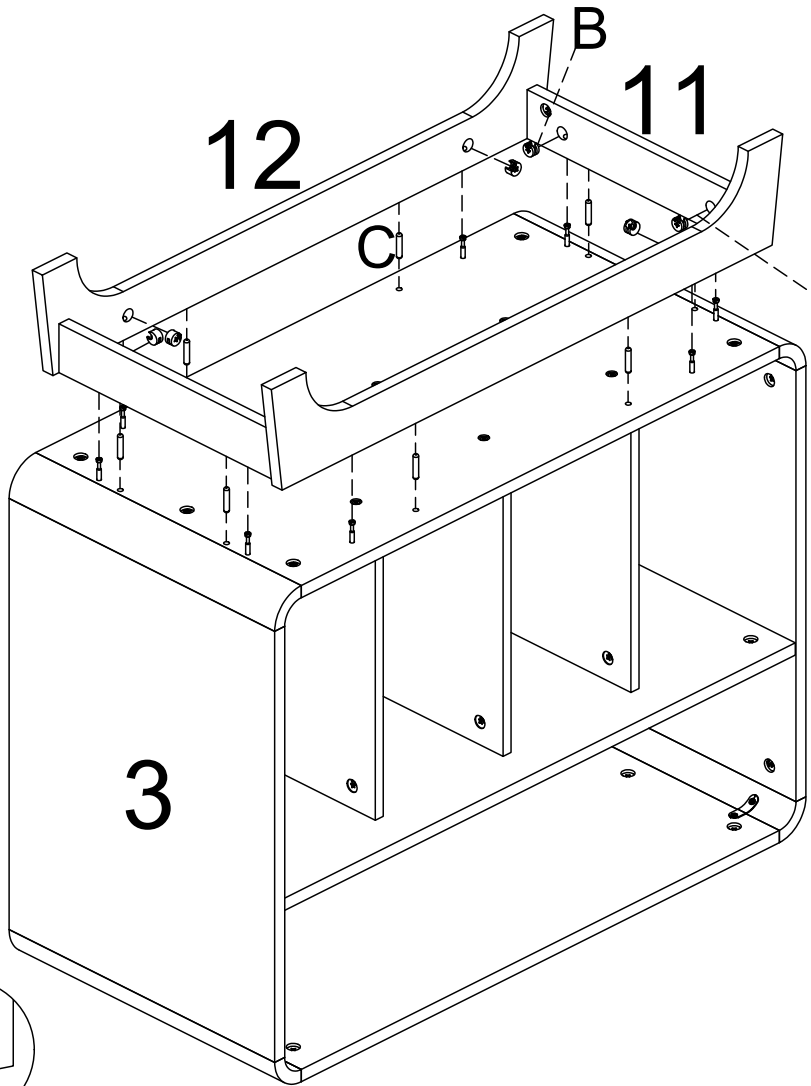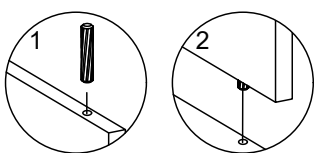

Step 19



I

x28

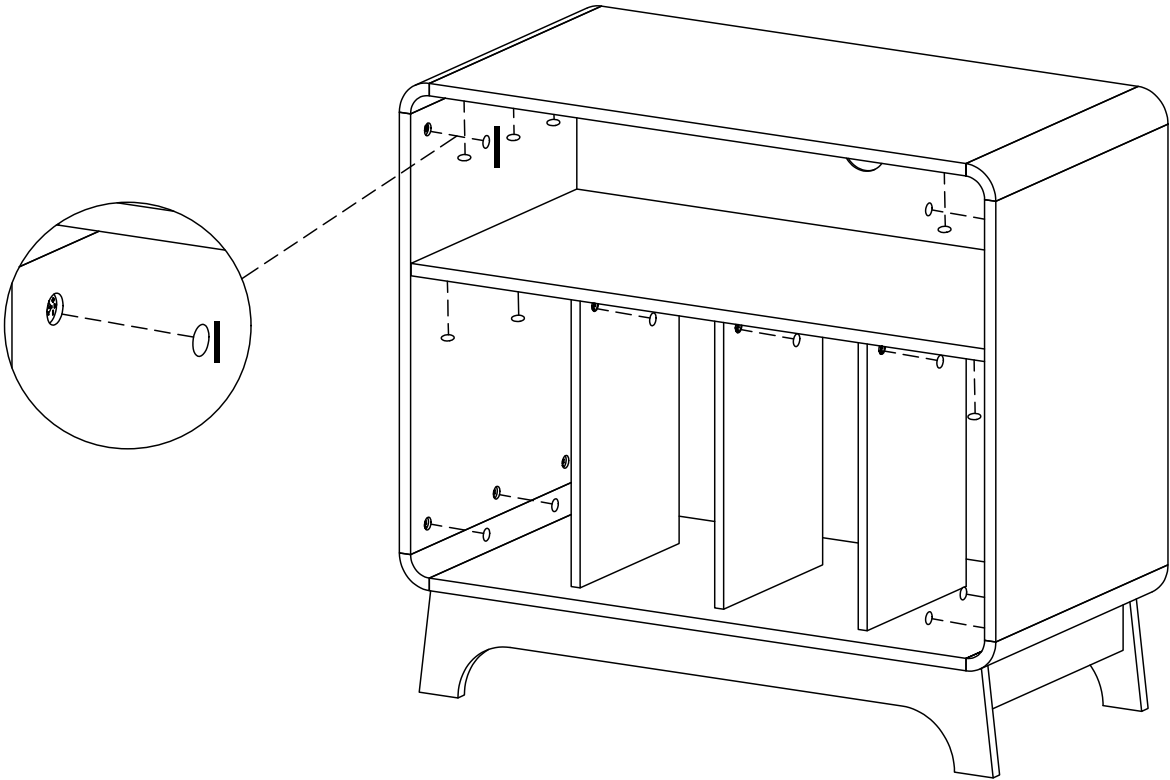


Step 20

G	H
	 Ø3*16mm
x12	x12

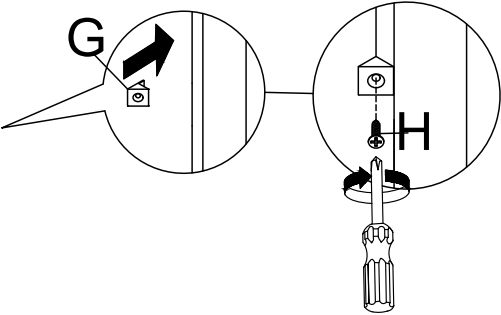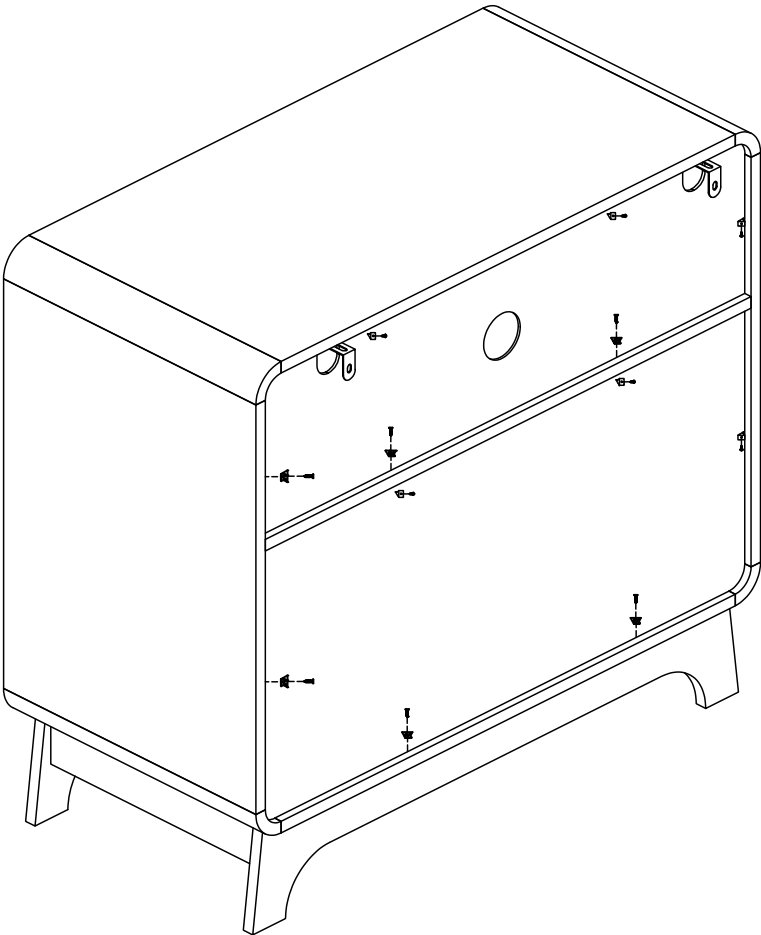


Step 21


L	M
	 Ø4*40
x2	x2

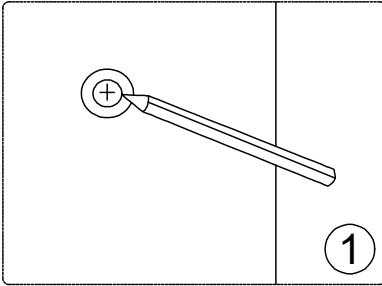

1. Mark the drill position on the wall with pencil.

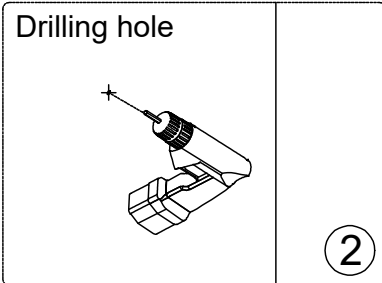



2. Make 2 holes with a bit at the marked locations.

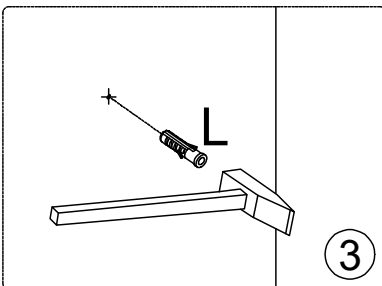


3. Tap the wall anchor(L) into the drilled holes with a hammer.

4. Fixed the cabinet to the wall with screws(M)

NOTE: According to the distance between the cabinet and the wall, adjust the #J fitting to the appropriate position, and then tighten all the screws on the #J fitting.

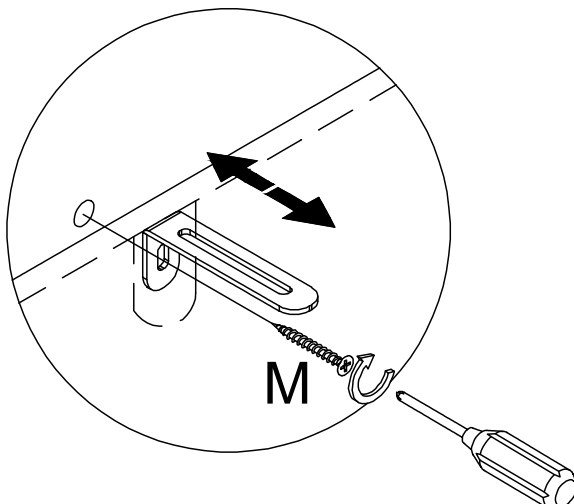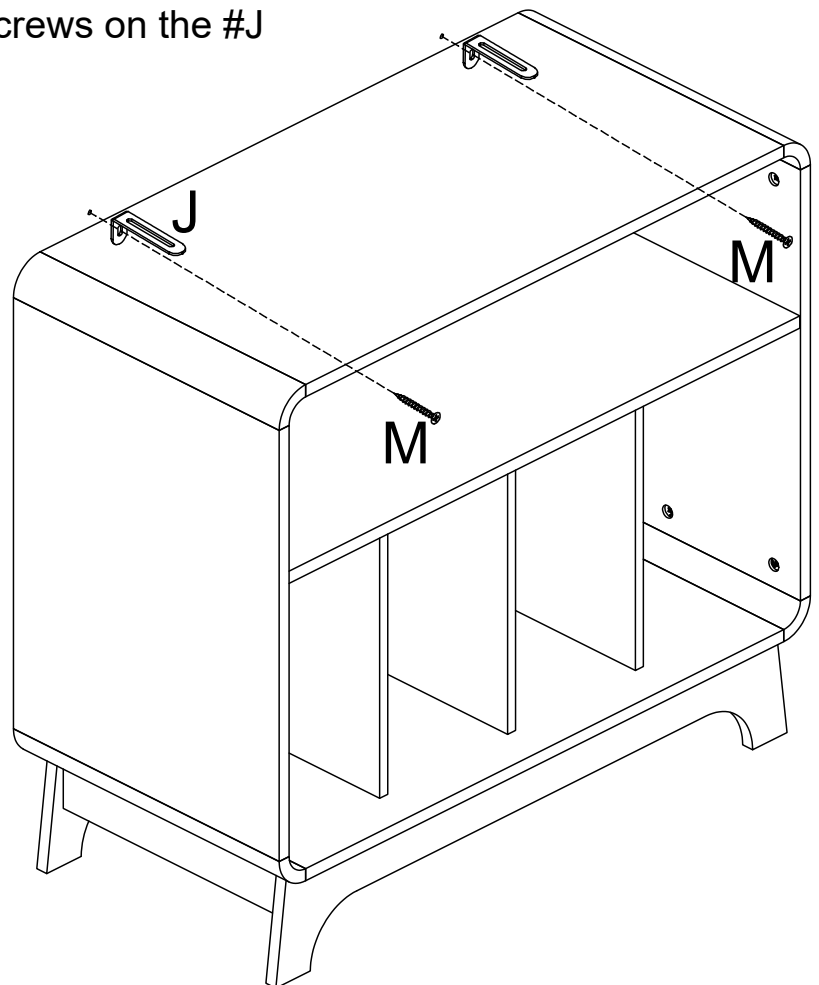

Step 22

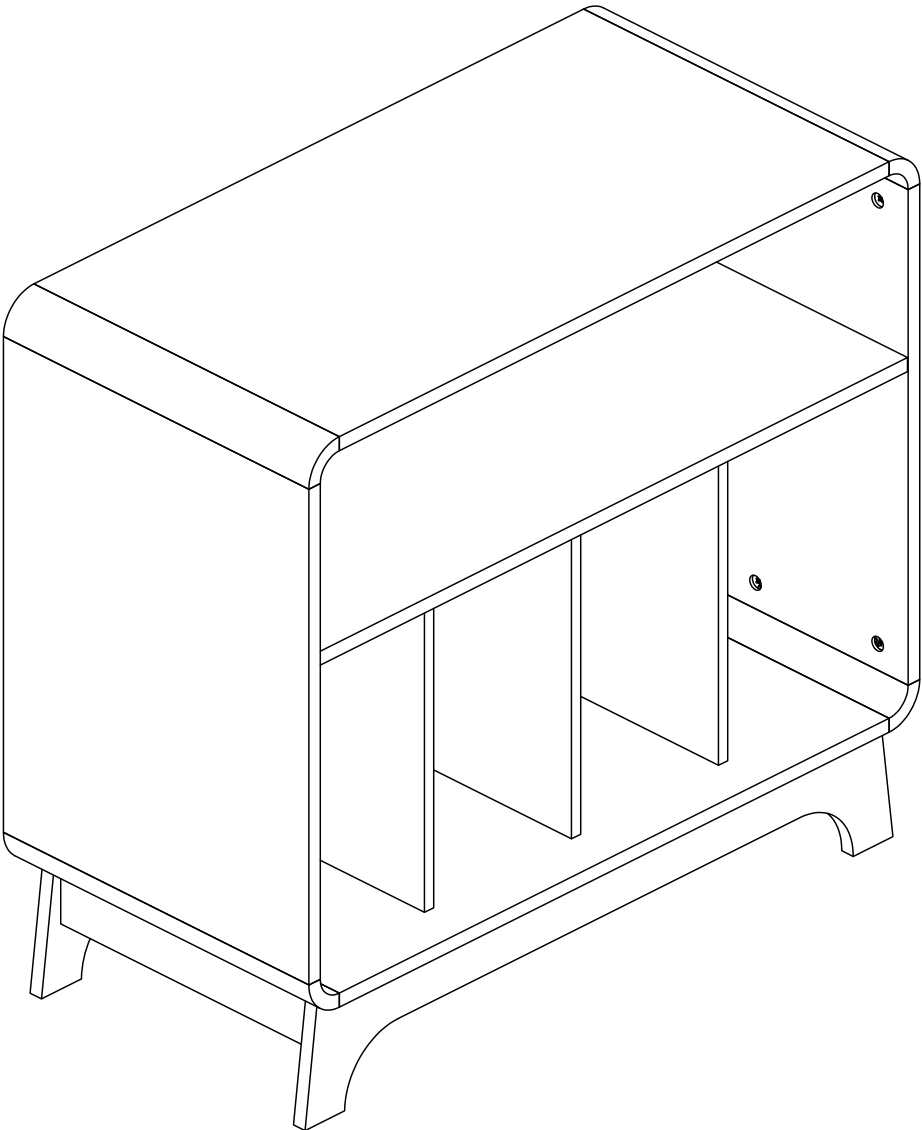

WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- **ALWAYS** install Anti-tip device provided.
- **NEVER** put a TV on this product.
- **NEVER** allow children to stand, climb or hang on drawers, doors, or shelves.
- **NEVER** open more than one drawer at a time.
- Place heaviest items in the lowest drawers.