

Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance



- Not for commercial use. For residential use only.



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Stains may be removed with mild soap solution and damp cloth.




- Children should not climb or jump on the furniture.



- Dust and pick-up spills using a clean, non-colored, lint-free cloth.






Please look in the box for hardware packs and legs.





Bed
N757P490151

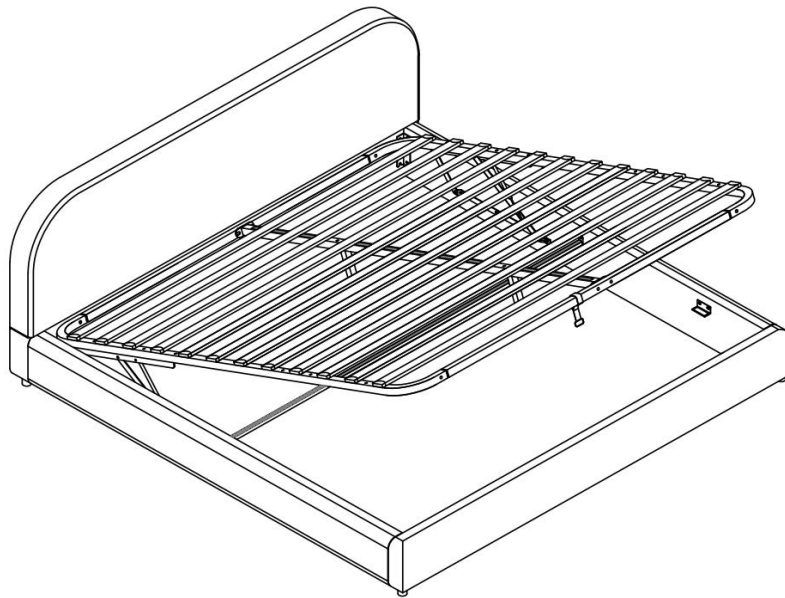

Part List

N757P490151

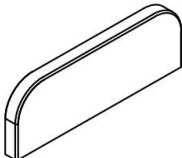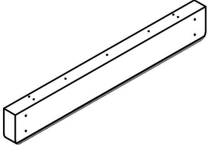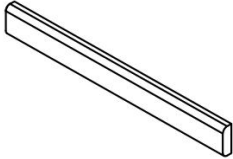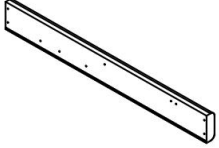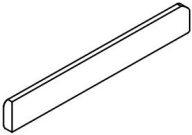Label	Picture	Description	QTY
A		Head board	1
B		Base board	1
C		Side rail	1
D		Side rail	1
E		Foot board	1
F		Gas lift	1
G		Gas lift	1

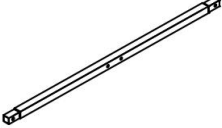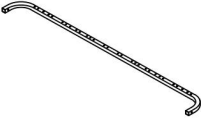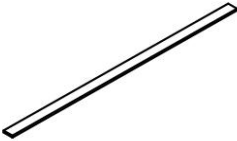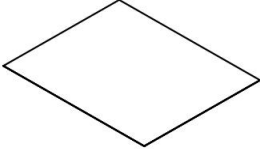
H		Metal cross bar	1
I		Metal frame cross bar	2
J		Metal frame side bar	2
K		Metal frame middle bar	1
L		Middle support legs	2
M		Salts	12
N		Black non woven fabric	1
O		Bed legs	4

Hardware**N757P490151**

Label	Picture	Description	QTY
①		Allen Wrench	1
②		Bolts (M8x18mm)	32
③		Bolts (M8x40mm)	23
④		Nuts	14
⑤		Nuts	4
⑥		Washer	6
⑦		Spanner	7
⑧		"7" Connector	4
⑨		Hinge	4
⑩		End slats cap	24
⑪		Pull tape	1
⑫		Twist gasket	4

Assembly Preparation

Before Beginning
Assembly:

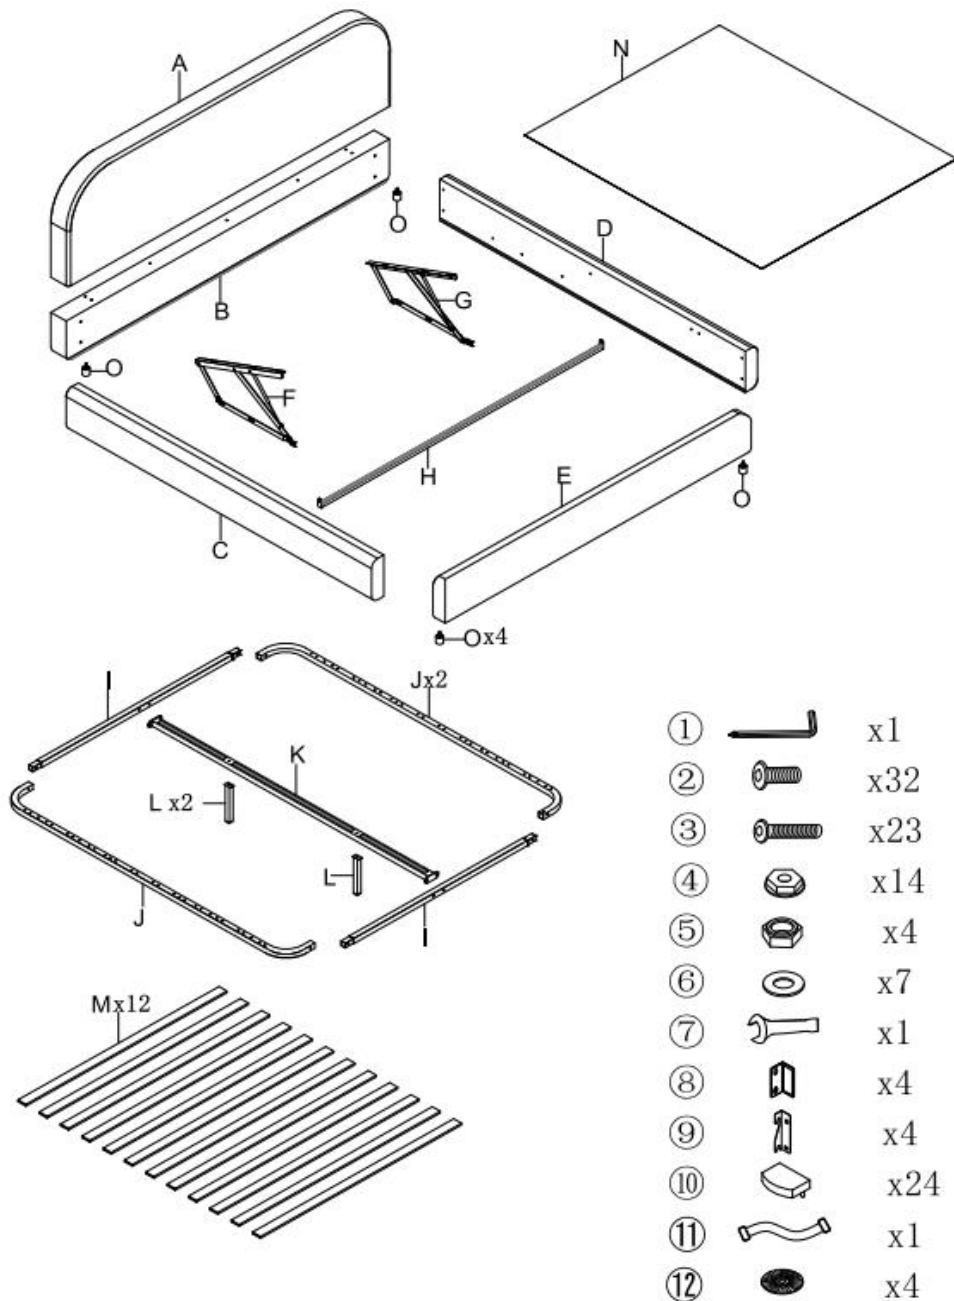

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-

Assembly Steps

OVERVIEW

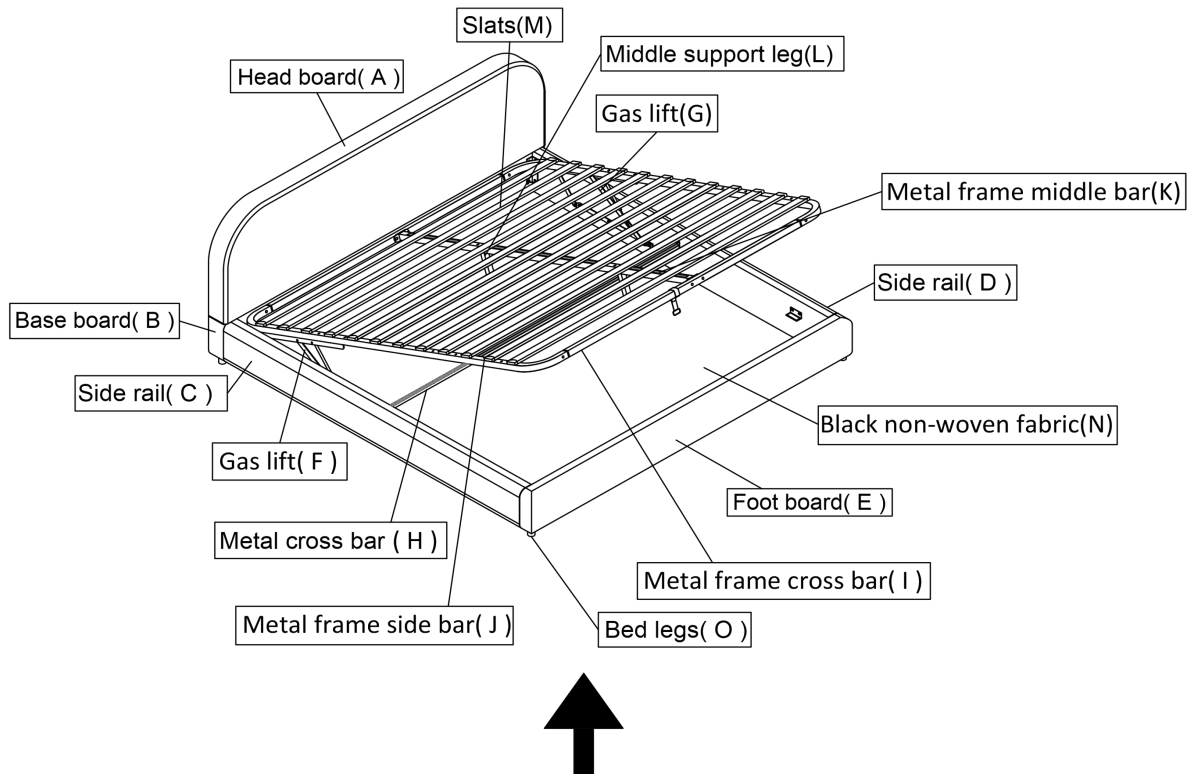


FRONT FACING

This Bed have multiple parts and may require up to 45 minutes to assemble. To give you an overview of the Bed parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.


Note: It is recommended that you have an adult partner to assist during the entire assembly process.

Step 1

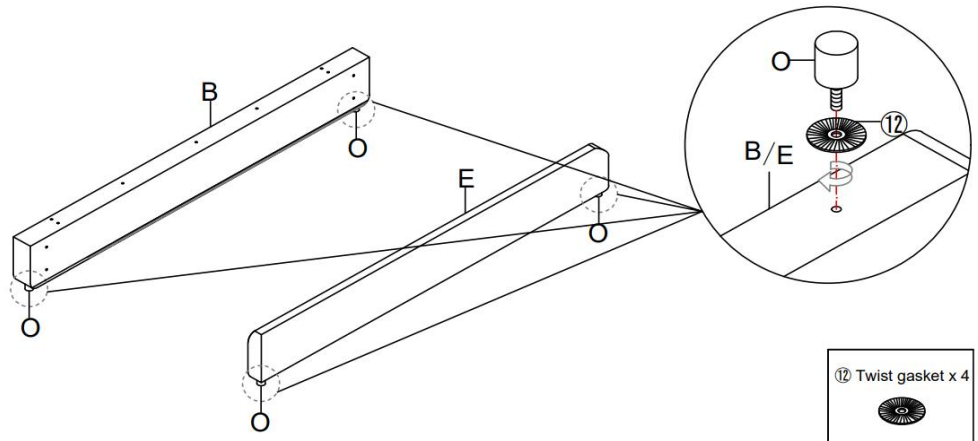


Attach the Bed legs (O) and Twist gasket (12) **to** the Foot board (E) and Base board (B).

Step 2

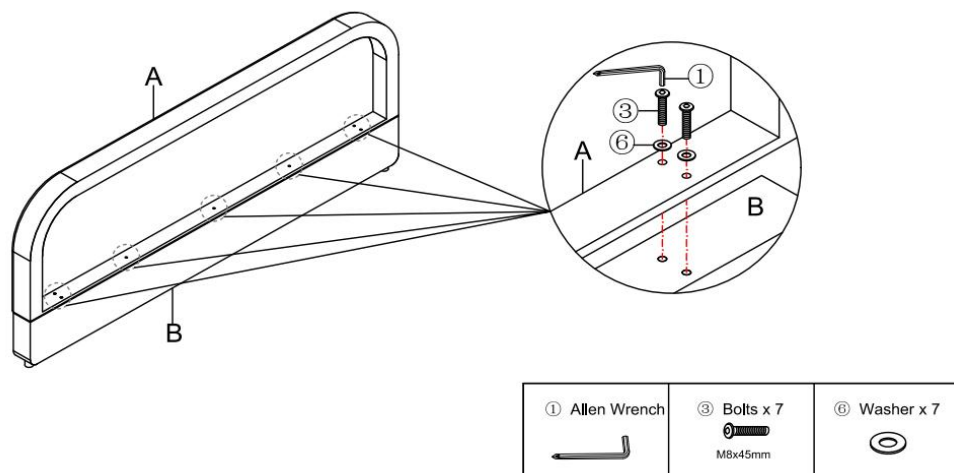


Attach the Base board (B) **to** the Head board (A) **with** Bolts (3) and Washer (6) **by using** Allen Wrench (1).

Step 3

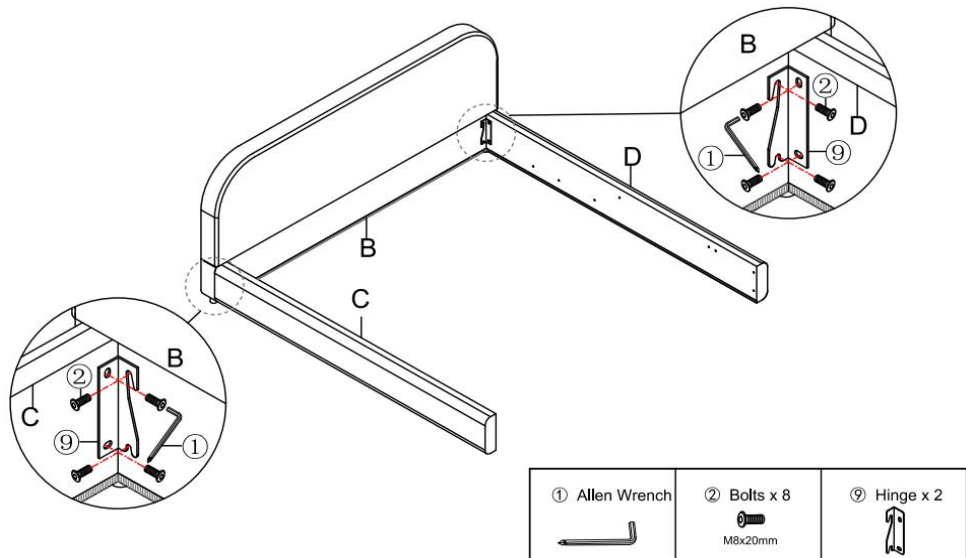



Attach the Side rail (C) and (D) **to** the Base board (B) **with** Bolts (②) and Hinge (⑨) **by using** Allen Wrench (①).

Step 4

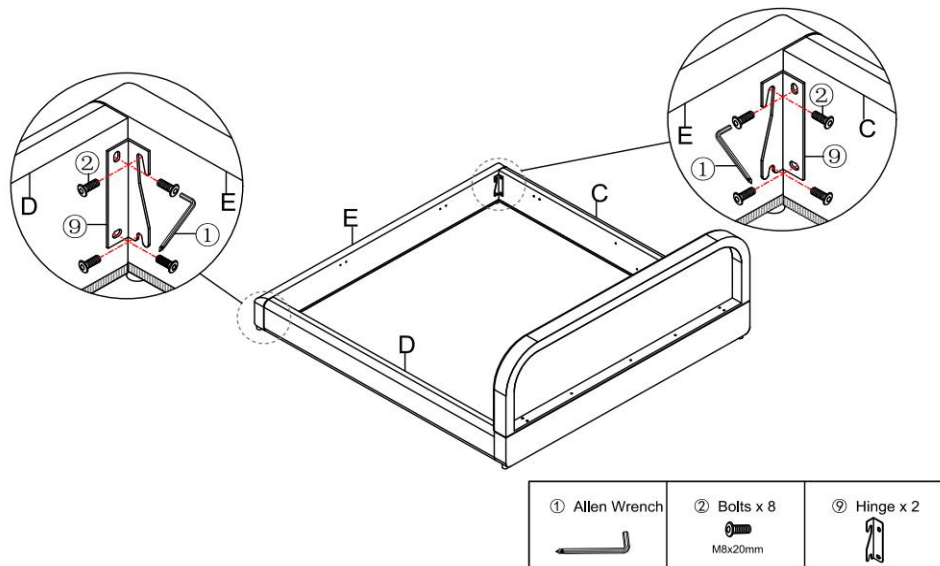


Attach the Foot board (E) **to** the Side rail (C) and (D) **with** Bolts (②) and Hinge (⑨) **by using** Allen Wrench (①).

Step 5

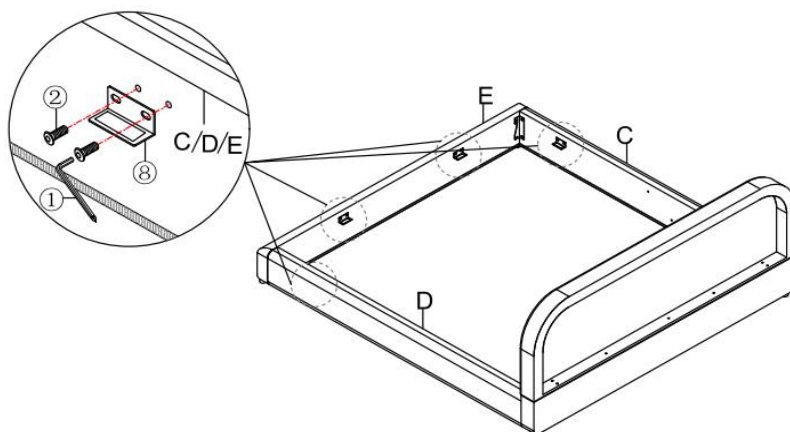



Attach the "7" Connector (③) **to** the Side rail (C),(D) and Foot board (E) **with** Bolts (②) **by using** Allen Wrench (①).

Step 6

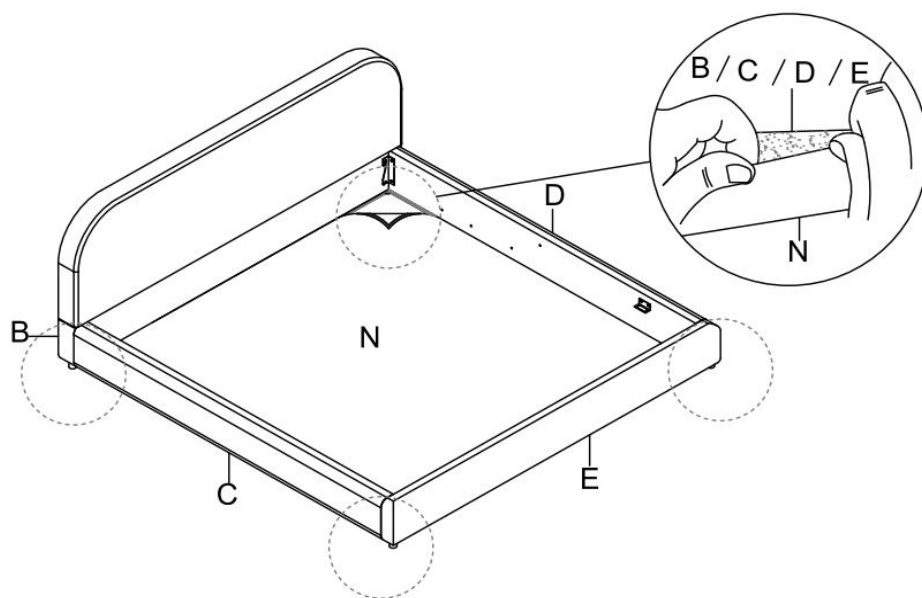



Stick the Black non woven fabric (N) **to** the side rail (C) , (D) , Foot board (E) and Base board (B).

Step 7

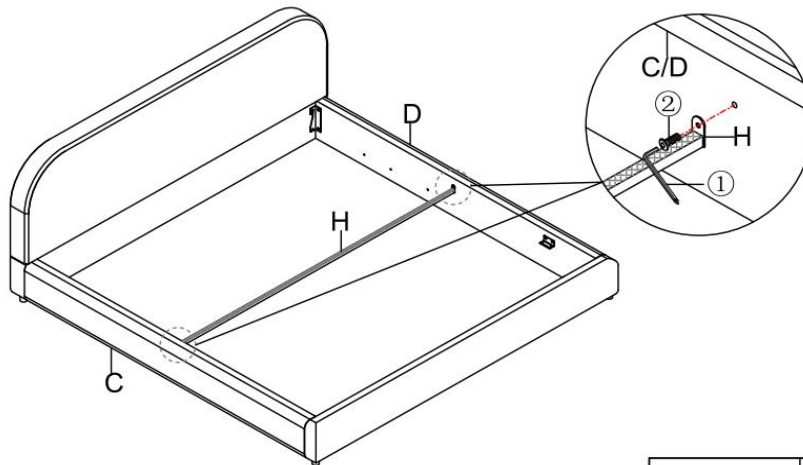


Attach the Metal cross bar (H) to the Side rail (C) and (D) **with** Bolts (②) **by using** Allen Wrench (①).

Step 8

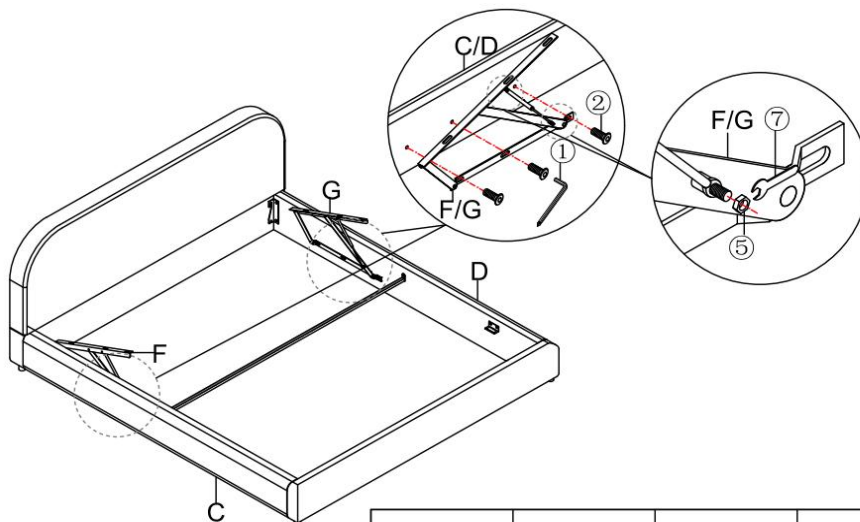

Attach the Gas lift (F) and (G) to the Side rail (C) and (D) **with** Bolts (②) **by using** Allen Wrench (①) ,**Attach** the gas lift bar to the gas lift **with** Nuts (⑤) **by using** Spanner (⑦).


Step 9

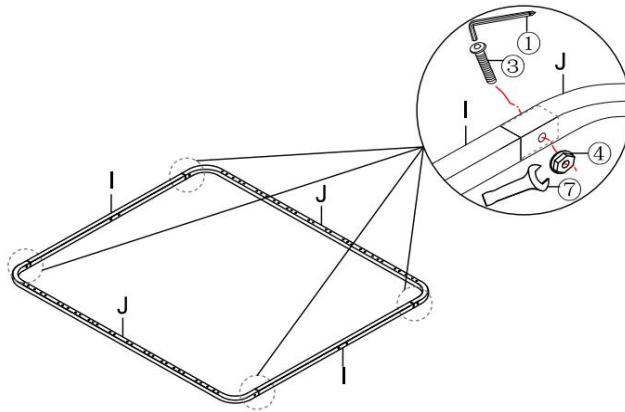

① Allen Wrench	③ Bolts x 4 M8x45mm	④ Nuts x 4	⑦ Spanner
----------------	------------------------	------------	-----------

Attach the Metal cross bar (I) to the Metal frame side bar (J) **with** Bolts (③) and Nuts (④) **by using** Allen Wrench (①) and Spanner (⑦).


Step 10

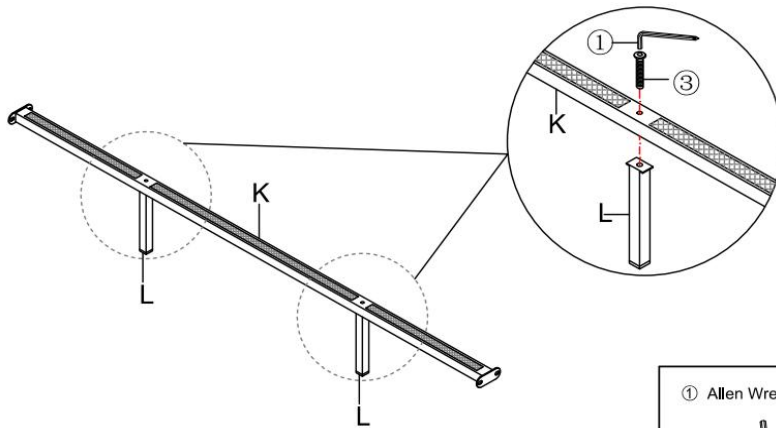

① Allen Wrench	③ Bolts x 2 M8x45mm
----------------	------------------------

Attach the Middle support leg (L) to the Metal frame middle bar (K) **with** Bolts (③) **by using** Allen Wrench (①) .


Step 11

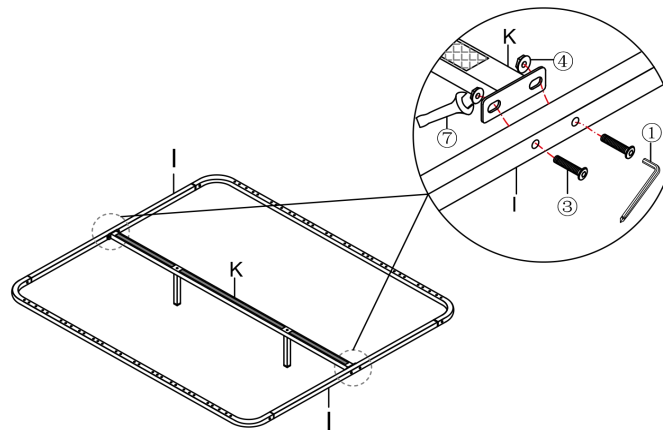

① Allen Wrench	③ Bolts x 4 M8x45mm	④ Nuts x 4	⑦ Spanner
----------------	------------------------	------------	-----------

Attach the Metal frame middle bar (K) **to** the Metal cross bar (I) **with** Bolts (③) and Nuts (④) **by using** Allen Wrench (①) and Spanner (⑦).

Step 12

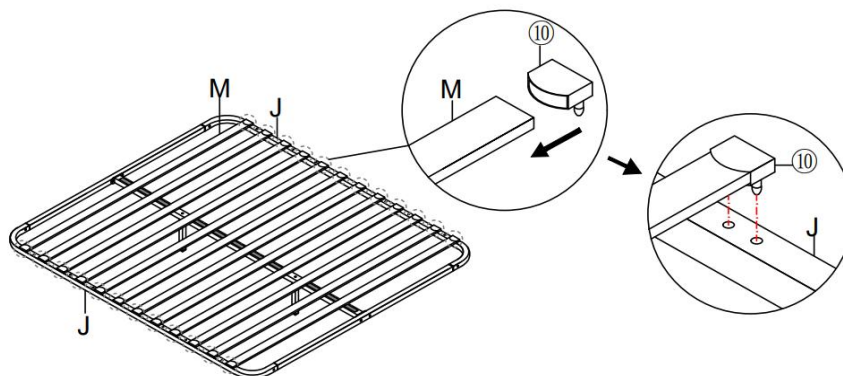


⑩ End slats cap x 24



Assemble the slats **into** the assembled slats frame **with** End slats cap (⑩).

Step 13

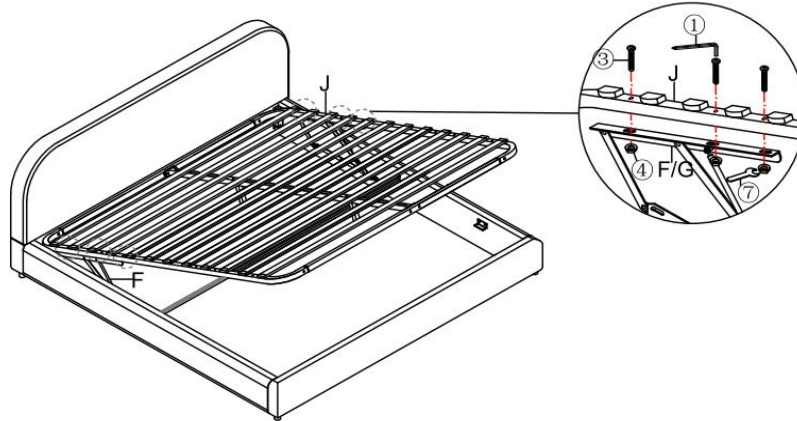

① Allen Wrench



③ Bolts x 6



M8x45mm

④ Nuts x 6




⑦ Spanner



Attach the assembled slats frame **to** the Gas lift (F) and (G) **with** Bolts (③) and Nuts (④) **by using** Allen Wrench (①) and Spanner (⑦).

Step 14

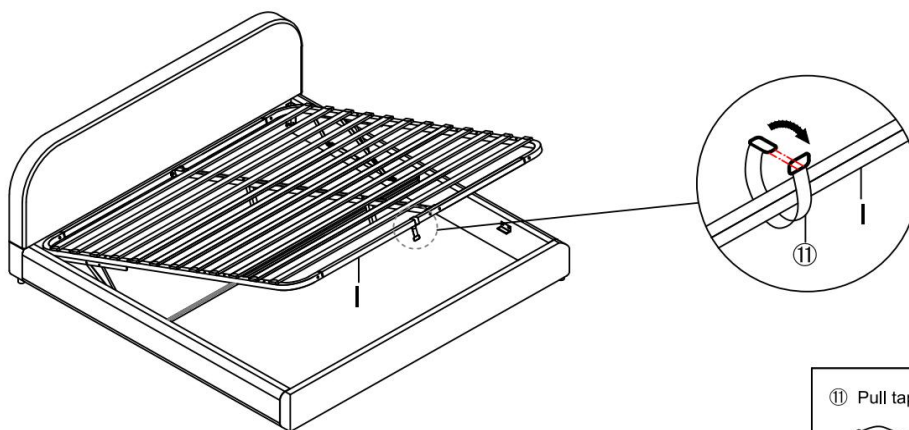


⑪ Pull tape x 1



Put the pull tape (⑪) **to** the end of the slat frame.

Step 15

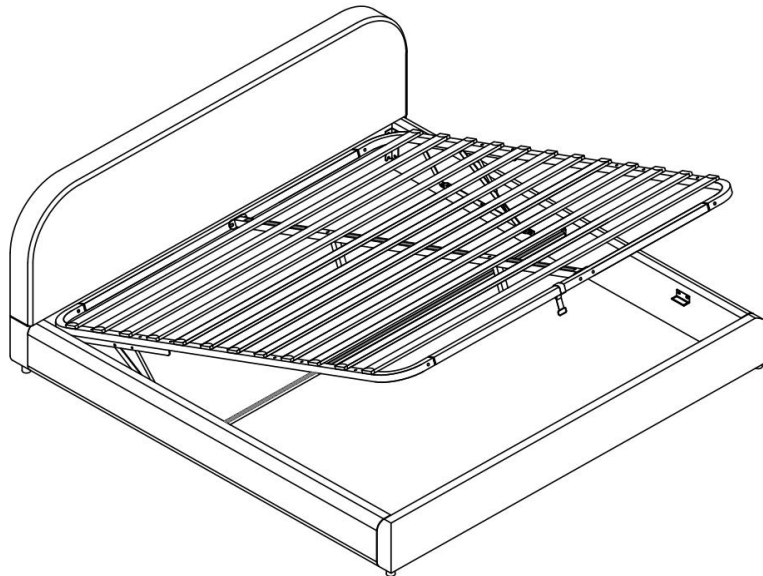

Your Bed is ready for use.
This Bed can only be used on a flat, level surface.

Place the Bed on a **LEVEL SURFACE**.

Inspect it and make sure all parts are adequately connected.

Don't push too hard, shake on the bed.

This would help to align all the parts at all the joint areas.

CAUTION 1: When tightening these screws, tighten sequentially.

DO NOT tighten any screw fully and then towards the next one.

This would cause the frame to warp.

If there is still wobbles, loosen the screws and execute this same process.**DO NOT**

tighten any screw fully and then towards the next one.

WARNING!! IF BED IS NOT STABLE, IT COULD LEAD TO DAMAGING THE PRODUCT.

Ensure all screws are fully locked into position.