



Fullerton Corner Wall Shelf Installation

TOOLS REQUIRED



Hammer

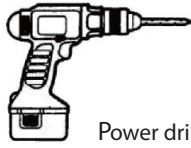


Power drill




3/8 in. drill bit



Level





Pencil




Screwdriver

INSTRUCTION

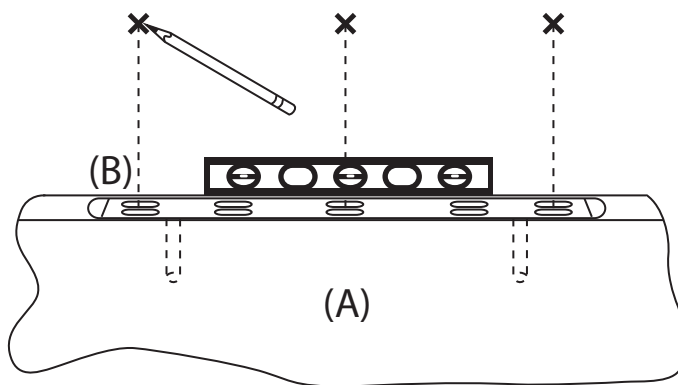


1. Place the shelf board (A) on the desired spot, level it, and mark the hanging position on the desired spot with a pencil.

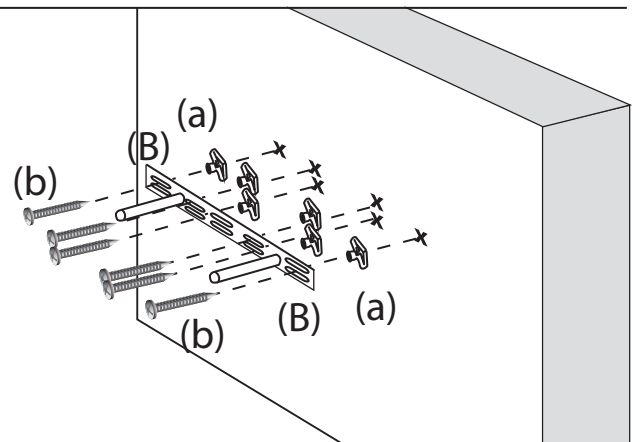


2. ① If the holes don't hit the studs, you will need to use the drywall anchors. Drill holes in marked position by Power drill and 3/8 in. drill bit, tap the anchors (a) into the marked holes with a hammer.

2. ② Place the shelf bracket (B) on the desired spot, use a power drill or a screwdriver to drive the screws (b) into the studs or drywall anchors.

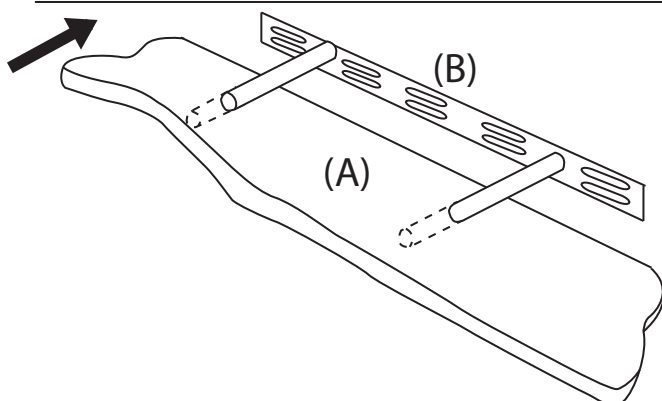

3. Slide the shelf board onto the bracket, push it ultimately against the wall.

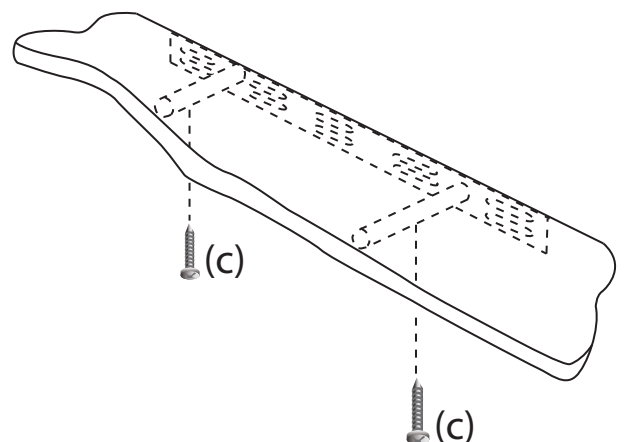

4. Finish. Slide the shelf board onto the bracket push it ultimately against the wall. Drive the screws in and tighten.

DISCLAIMER: Install our shelf and shelving units according to instructions provided.

We are not responsible for injury or damage resulting from incorrect installation or use.

Our products are for use only as shelves units and are not intended for any other purposes.

For assistance with installation or missing parts, please contact us via customerservice643@gmail.com

* The emission of the chemicals listed in Prop 65 in this product has been tested to meet the standard of CARB ATCM.