



1.5 hours

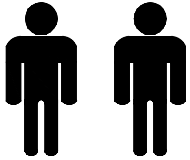

2 People

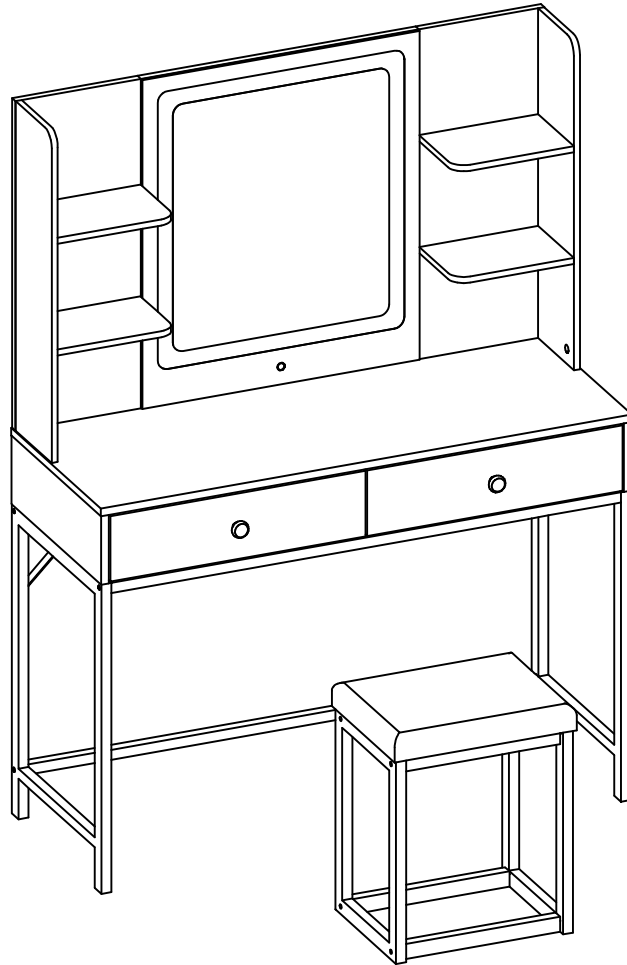


CUSTOMER FIRST, SERVICE FOREMOST!

ANY QUESTIONS OR ISSUES?


CONTACT US!

REPLY WITHIN 24 HOURS ON WEEKDAYS!

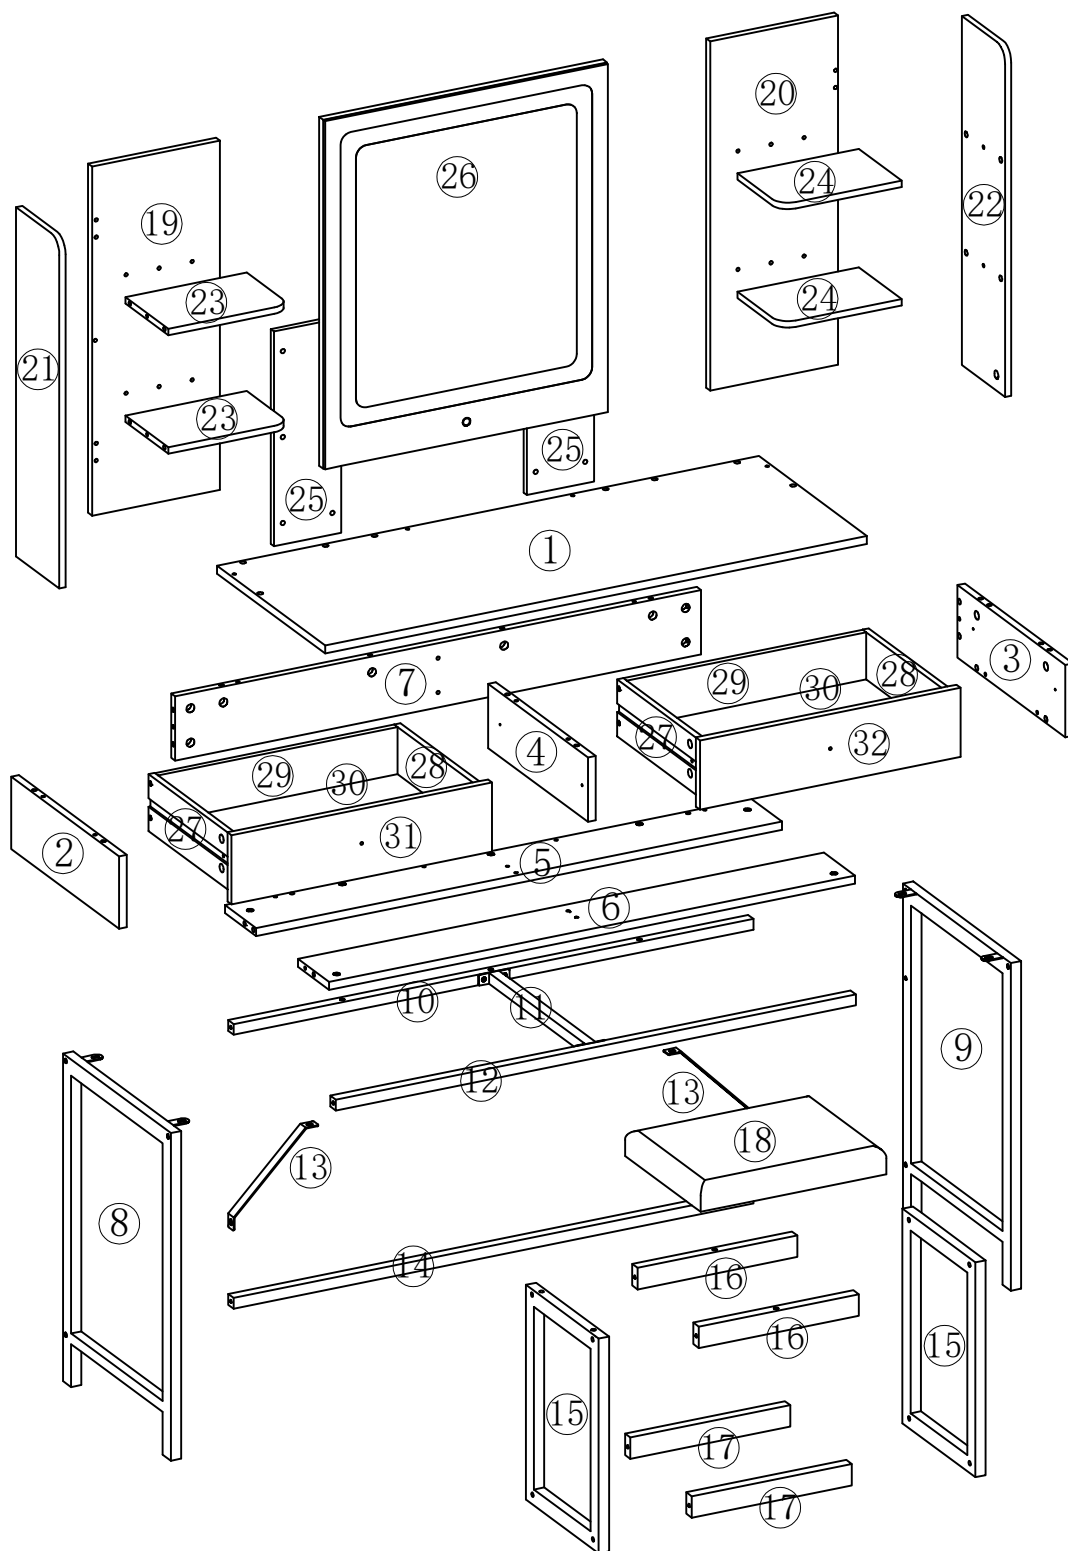




Ax42+4



Bx42+2




Cx35+2
ø6*30mm



Dx8+1
ø4*35mm



Ex2

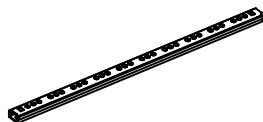

Fx4



Gx4+1
M4*12mm



Hx12+1
ø3*12mm



Jx22+2
ø5*40mm



Kx20+2
M6*40mm




Lx3
M6*30mm



Mx12+1
M6*22mm




Nx12+1
M6*12mm




Px4



Qx8

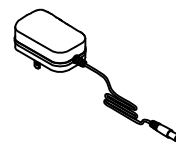

Rx1



Sx2



Tx2+1













Ux1









Parts List

4/25

Label	Part Image	Description	Qty
①		Desk Board	1
②		Left Side Board	1
③		Right Side Board	1
④		Middle Vertical Board	1
⑤		Bottom Support Board	1
⑥		Bottom Support Board	1
⑦		Back Support Board	1
⑧		Left Frame	1
⑨		Right Frame	1
⑩		Bottom Metal Rod	1
⑪		Middle Metal Rod	1
⑫		Bottom Metal Rod	1








Parts List

5/25

Label	Part Image	Description	Qty
⑬		Side Fixing Rod	2
⑭		Bottom Support Rod	1
⑮		Stool Frame	2
⑯		Upper Metal Rod of the Stool	2
⑰		Lower Metal Rod of the Stool	2
⑱		Stool Seat Cushion	1
⑲		Left Back Board	1
⑳		Right Back Board	1
㉑		Left Side Board	1
㉒		Right Side Board	1
㉓		Left Storage Board	2
㉔		Right Storage Board	2



Parts List

6/25

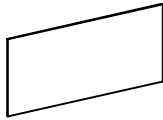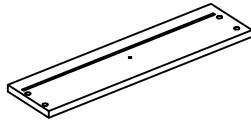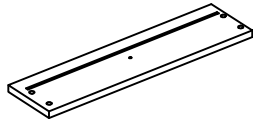
Label	Part Image	Description	Qty
25		Back Fixing Slat	2
26		Mirror Board	1
27		Draw er Left Side Board	2
28		Draw er Right Side Board	2
29		Draw er Back Board	2
30		Draw er Bottom Board	2
31		Left Draw er Front Board	1
32		Right Draw er Front Board	1

Step1


7/25

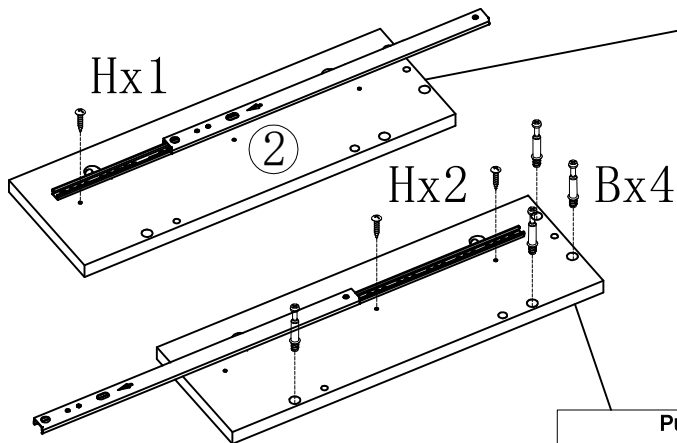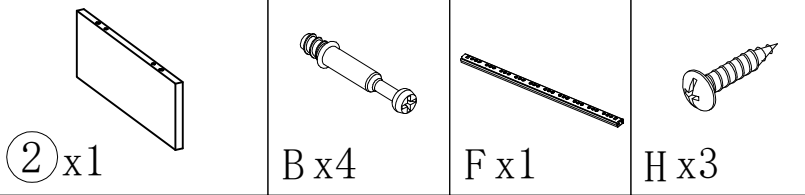



① Pull the rail to the right and install the second hole from the left →



② Pull the rail to the left and install thesecond and penultimate holes from the right ←



Step2

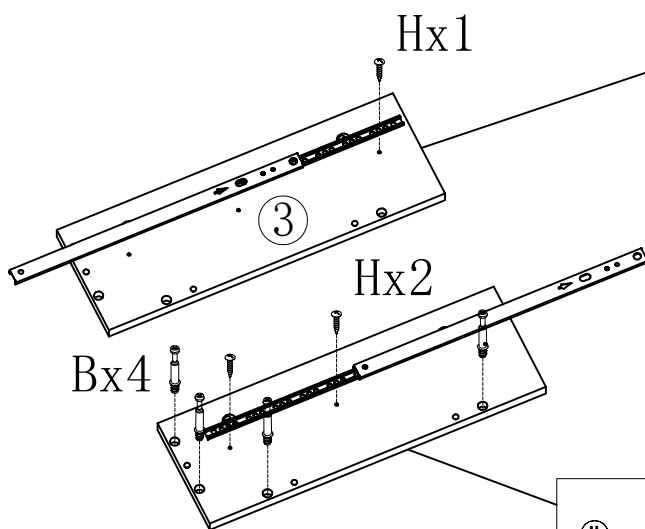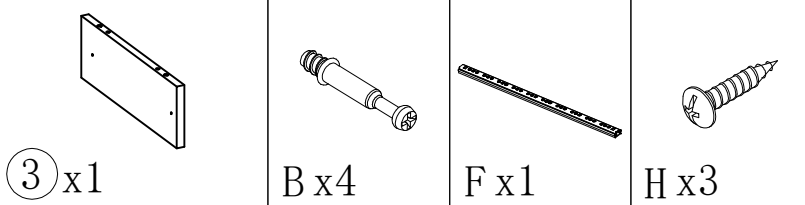

① Install the second hole from the right ←







② Install the second and penultimate holes from the left →







Step3

8/25

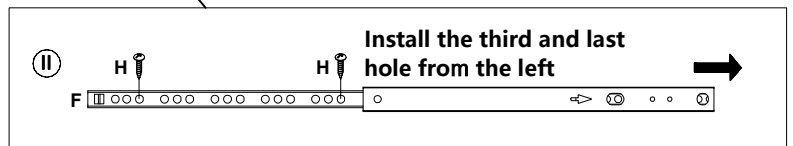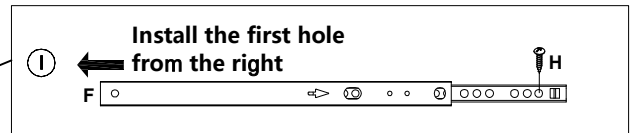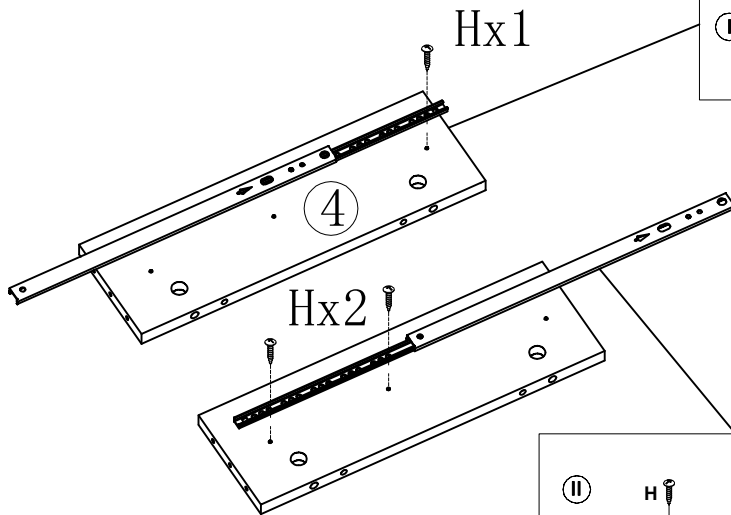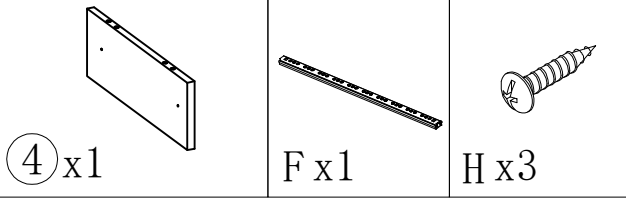


Step4

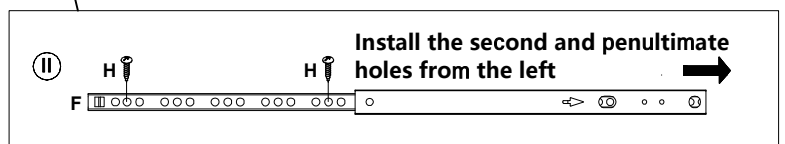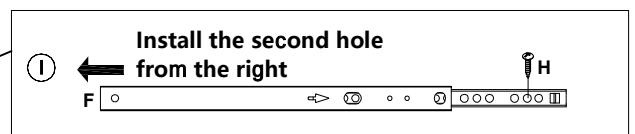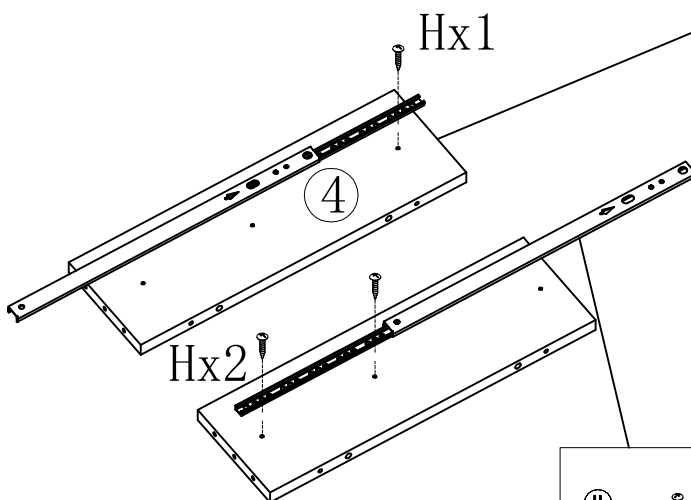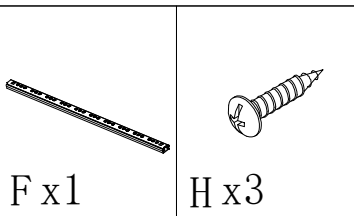

Step5

9/25




⑦x1



Cx1



J x2

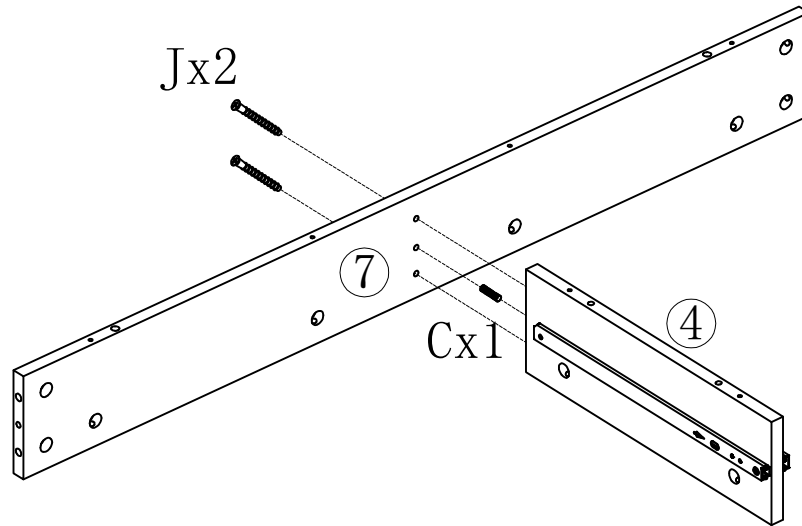

Step6




⑤x1




⑥x1



Jx6




Cx4

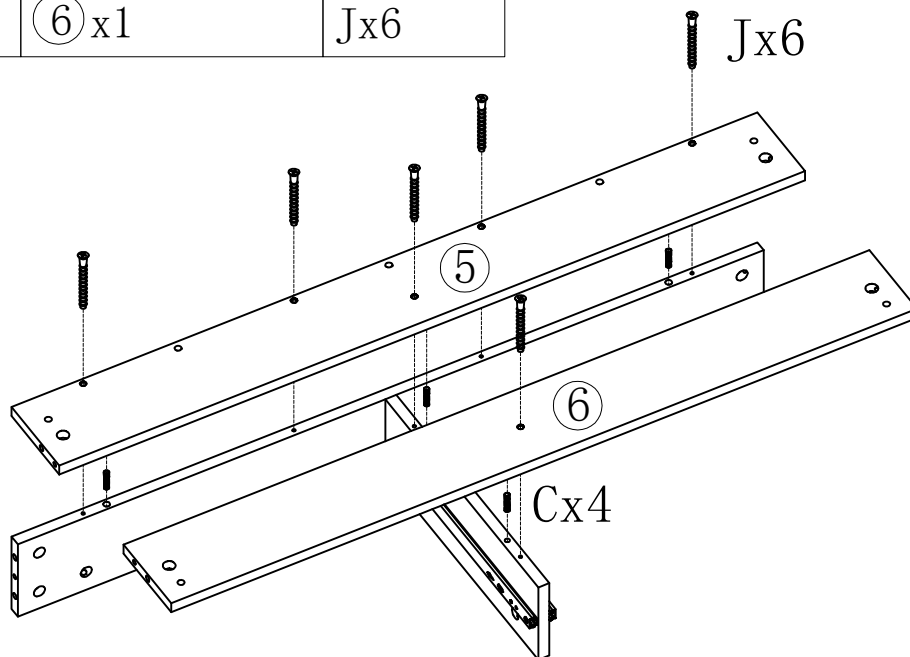


Step7

10/25

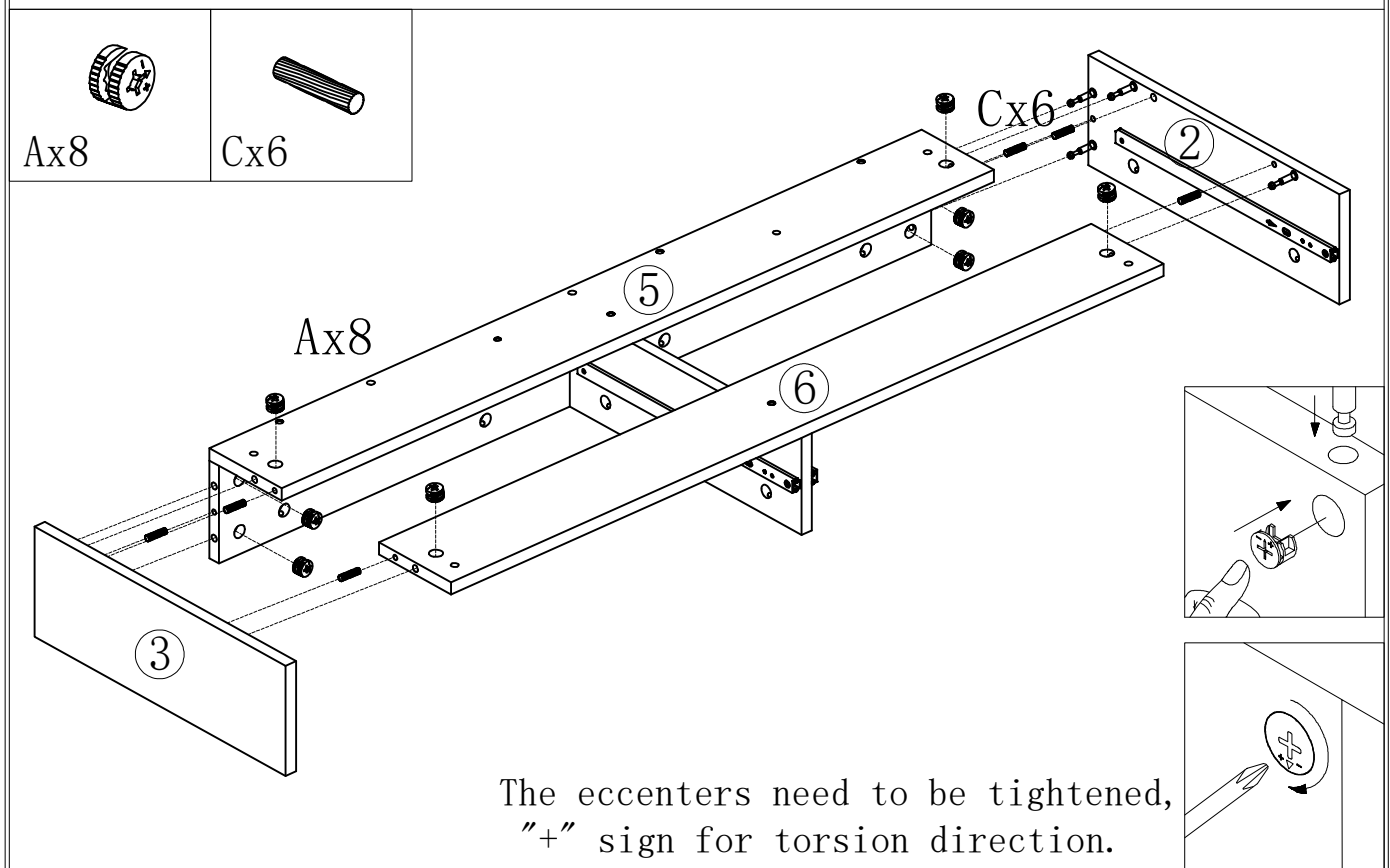

Step8

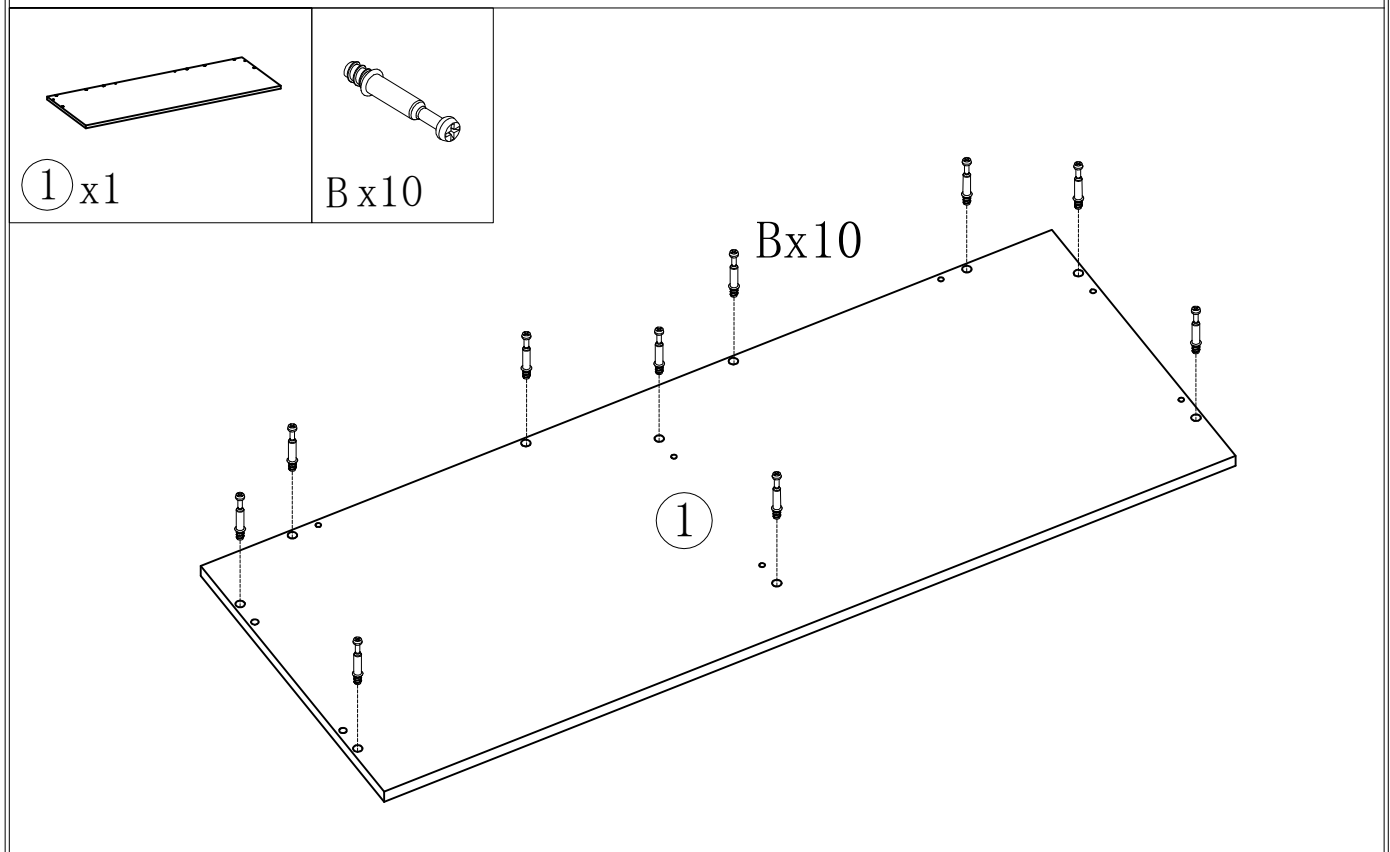

Step9


11/25



Ax10




Cx8

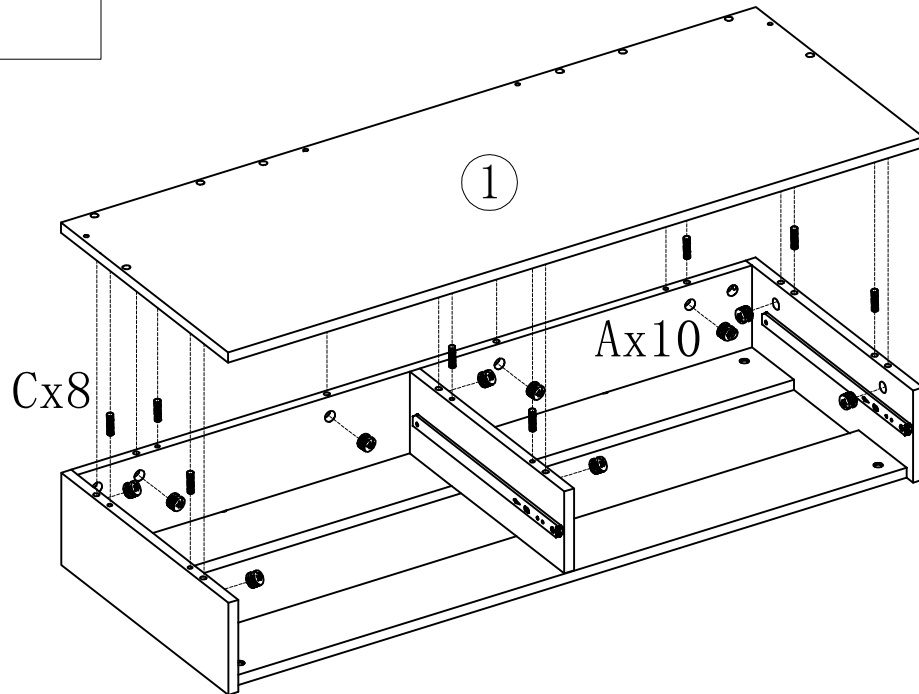

Step10



⑩x1




⑪x1



⑫x1




Nx4

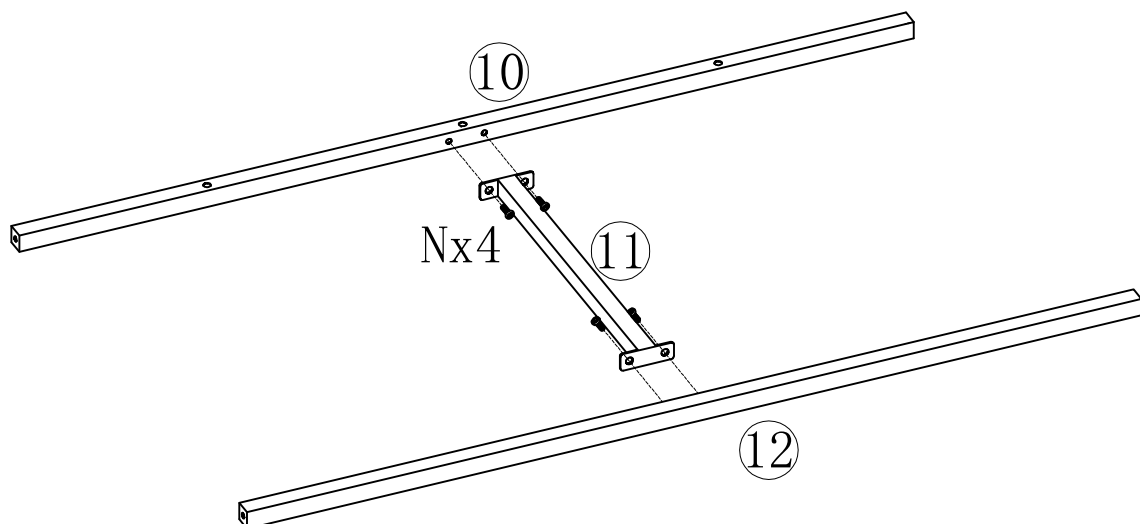


Step11

12/25



⑧ x1




⑨ x1



⑭ x1



K x6

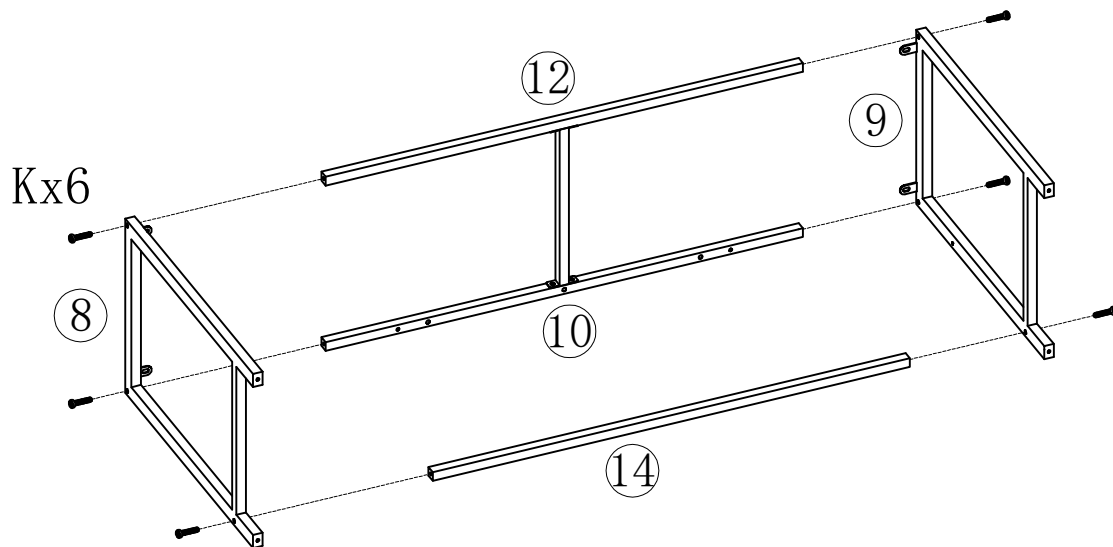


Step12



⑬ x2





N x4


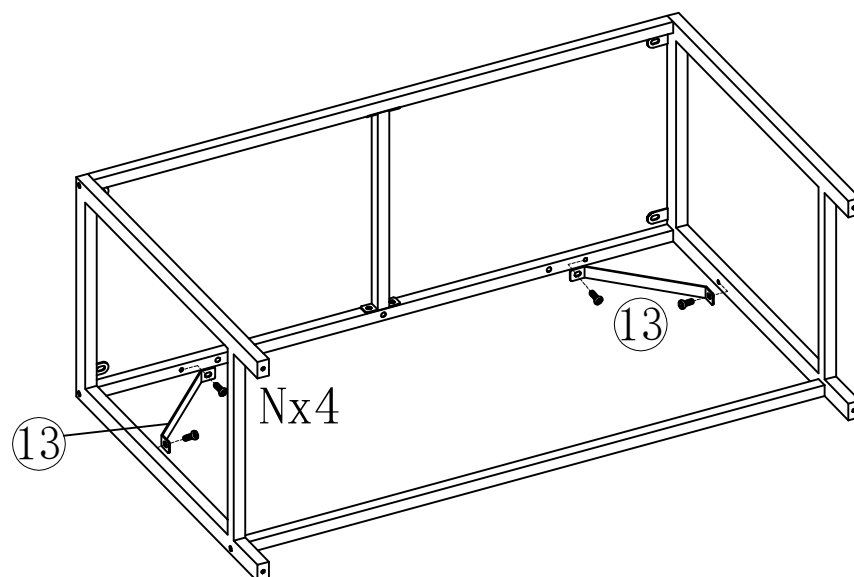


Step13

13/25

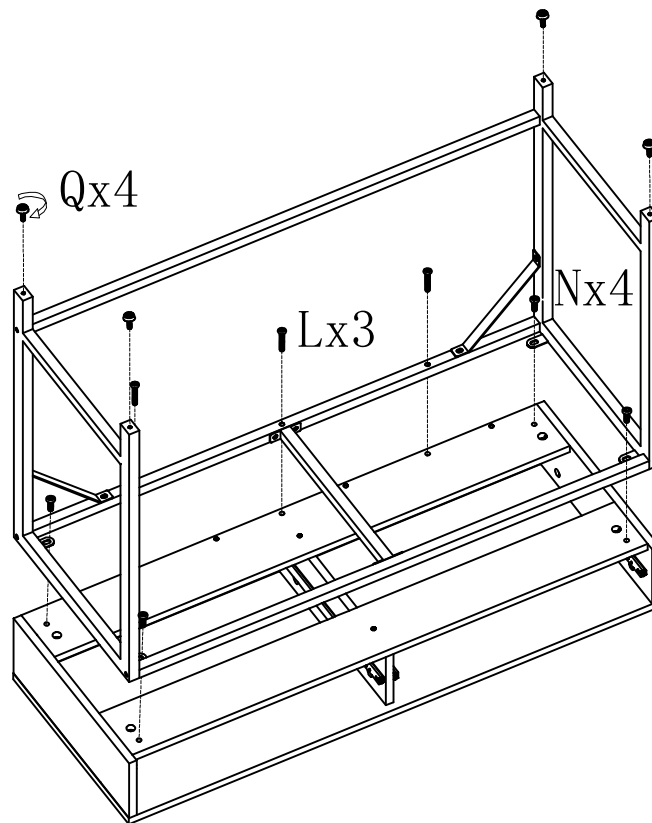
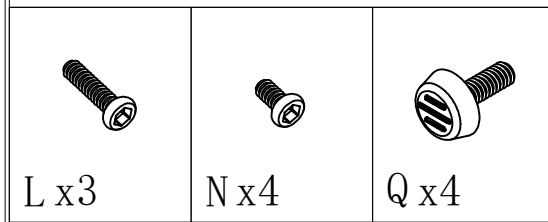


Step14

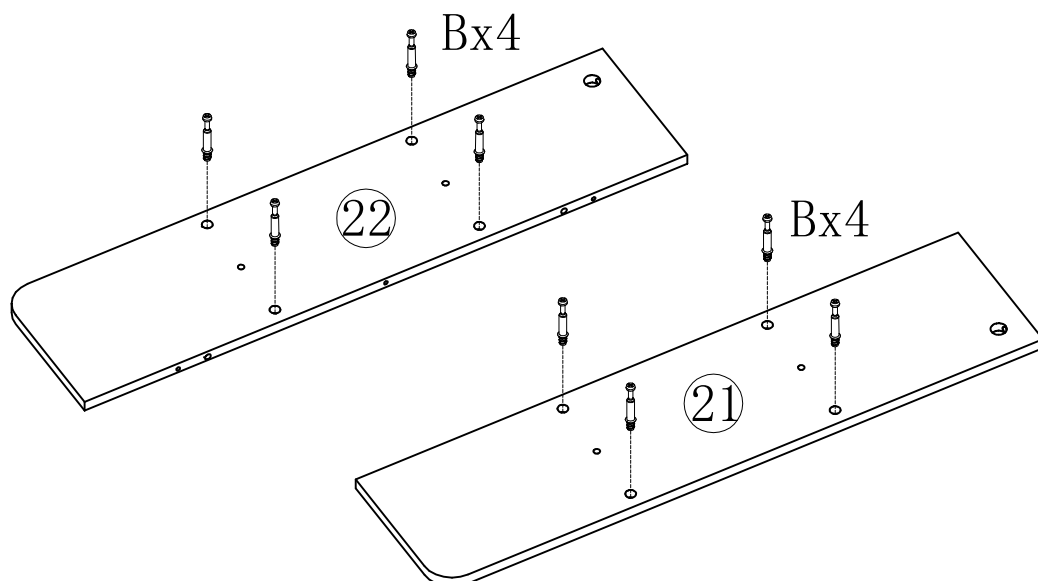
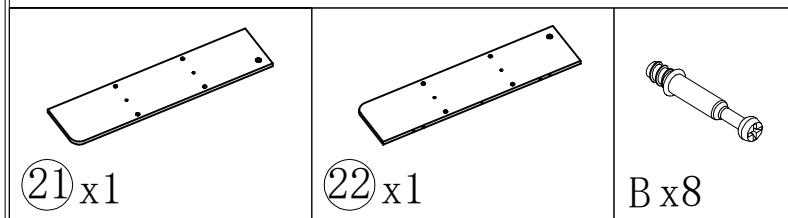


Step15

14/25

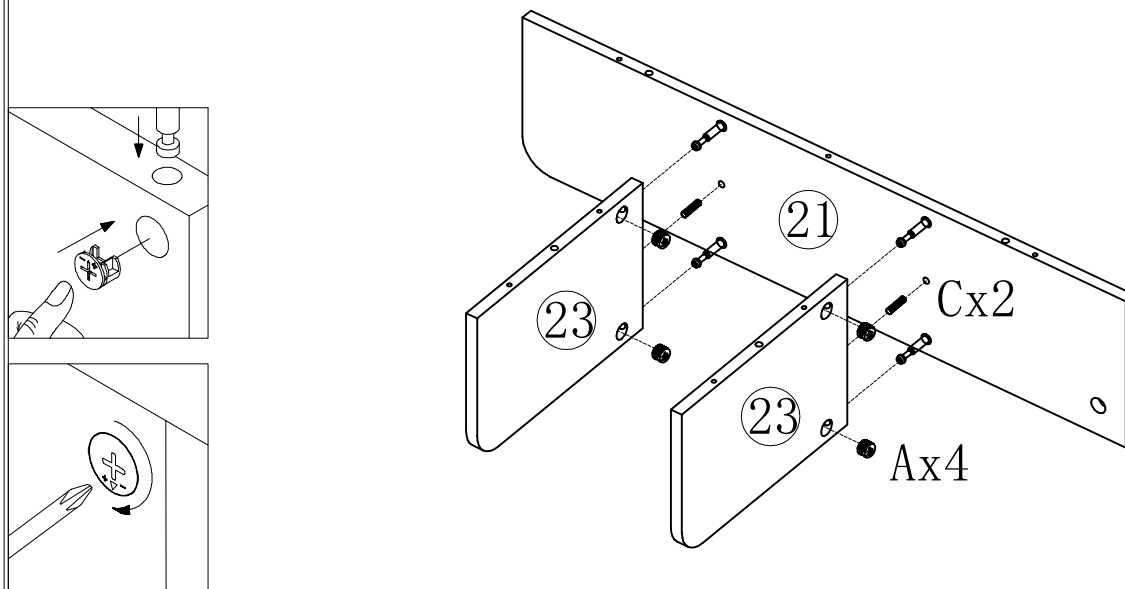
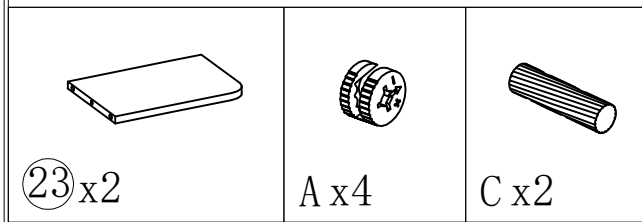


Step16

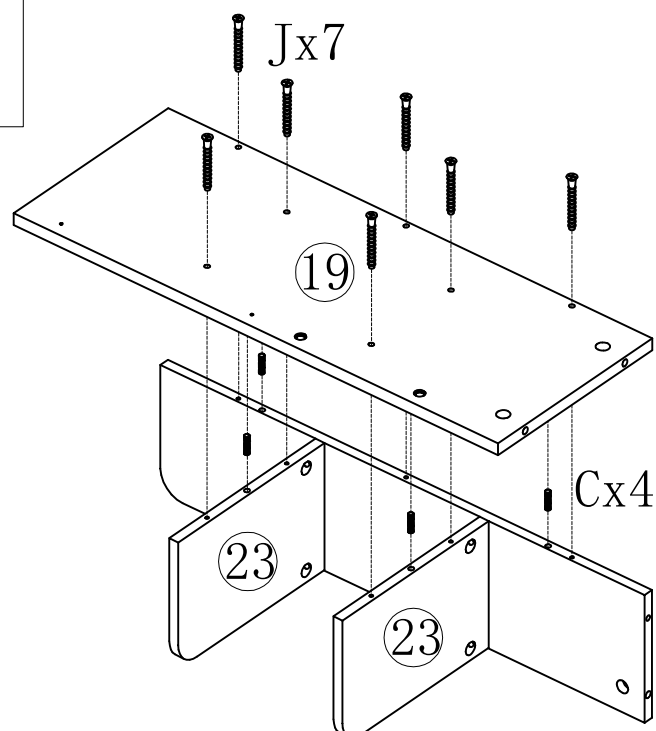
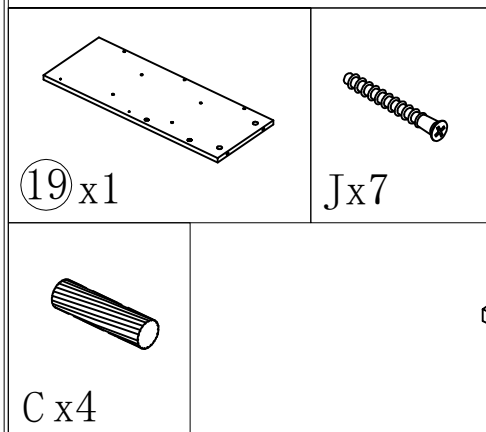


Step17

15/25

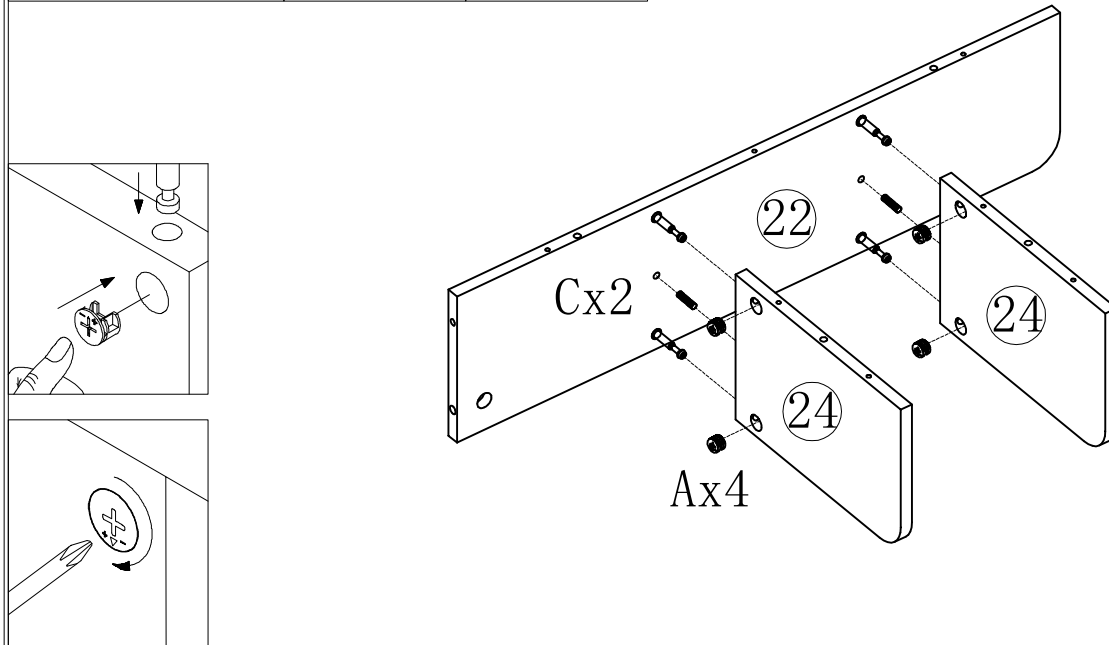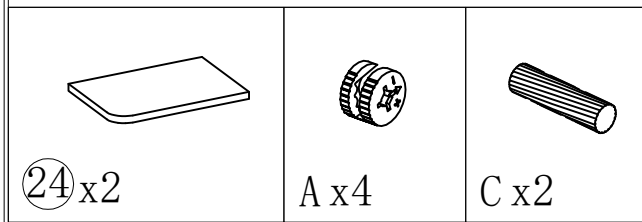


Step18

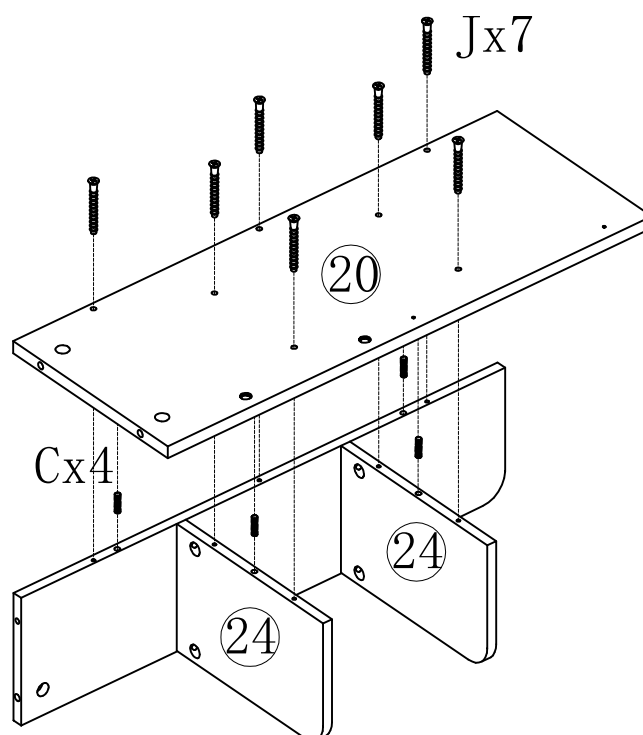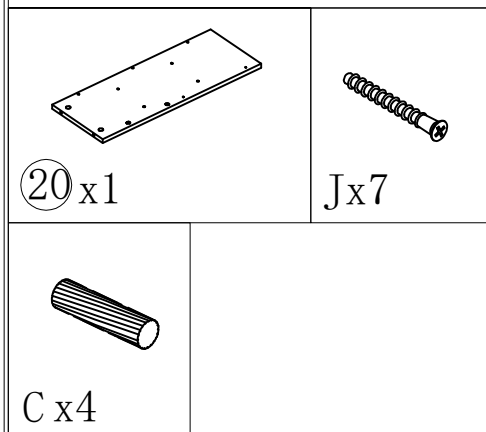


Step19

16/25



B x 8

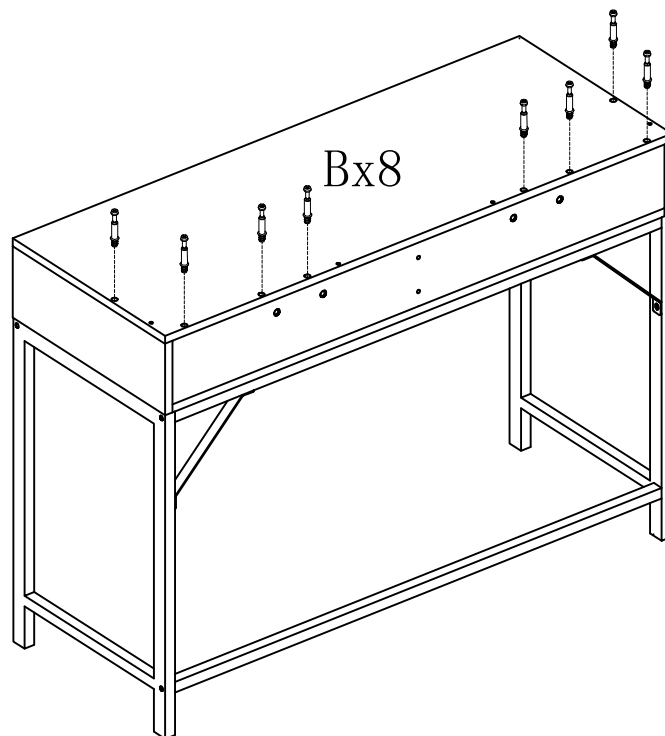


Step20



Ax 3




Cx 1

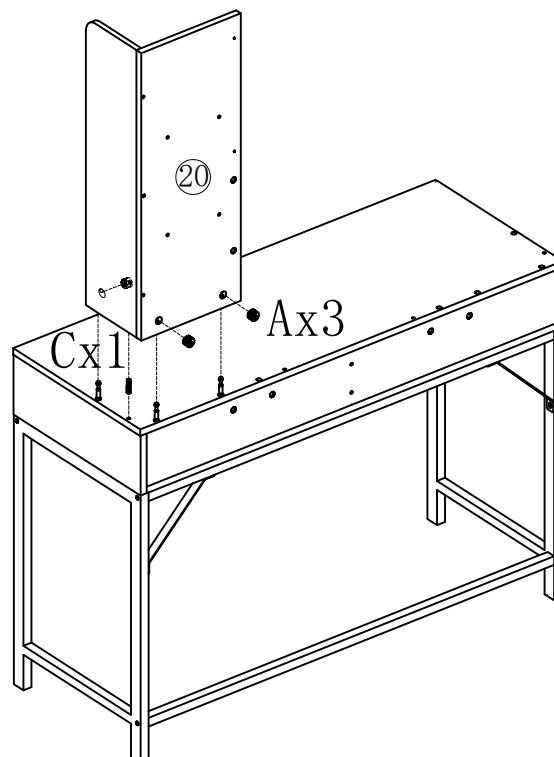

Step21

17/25




②6x1




Ax2



Cx2

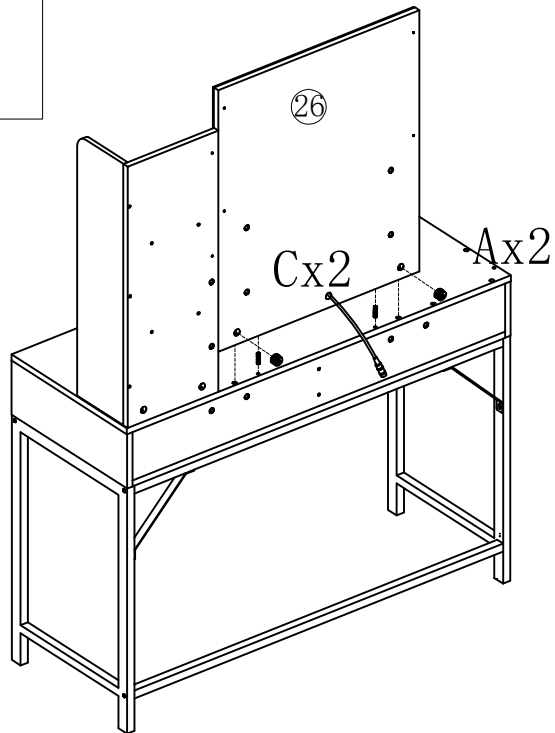


Step22



②5x1



Mx6

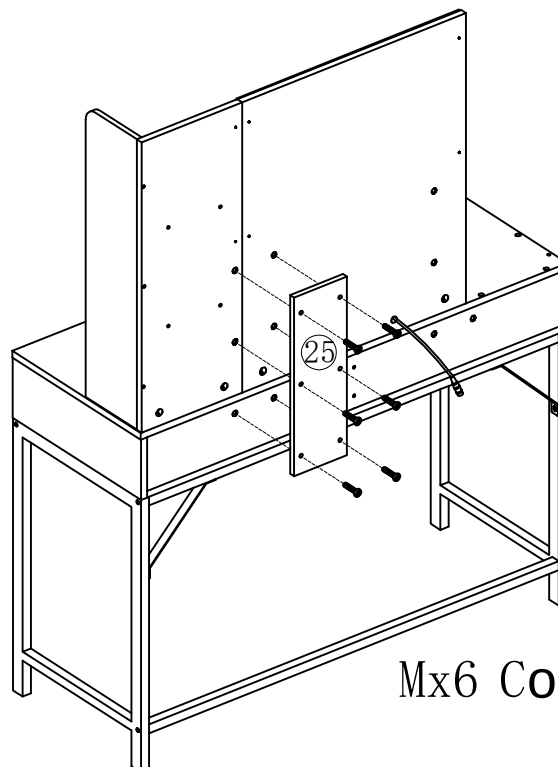

Mx6 Color Black

Step23


18/25




Ax3



Cx1

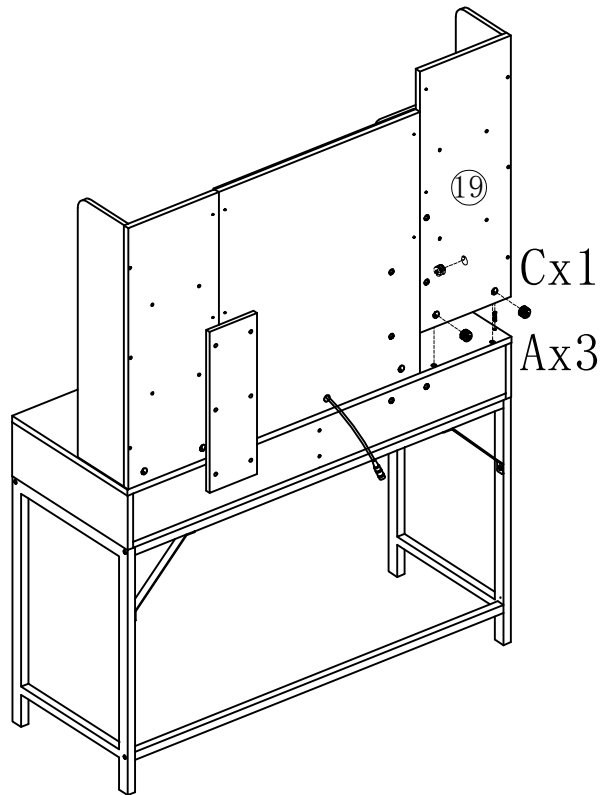


Step24



25 x1





Mx6

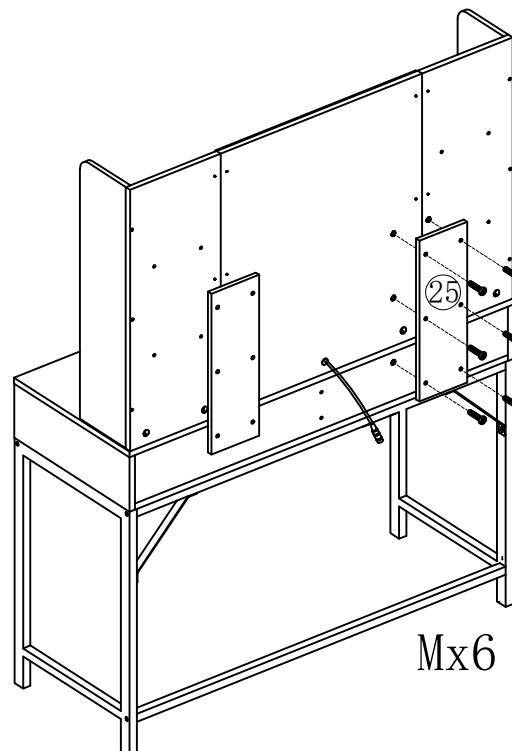



Mx6 Color Black

Step25

19/25

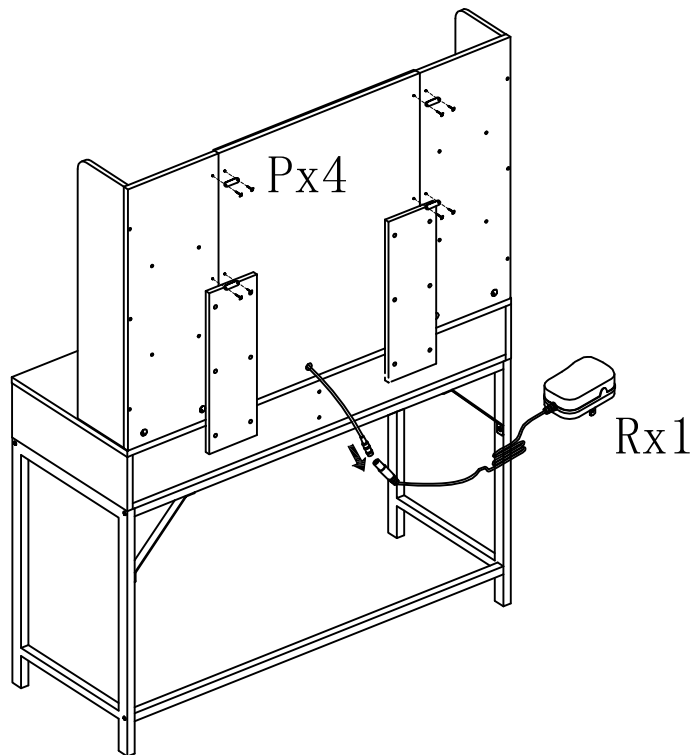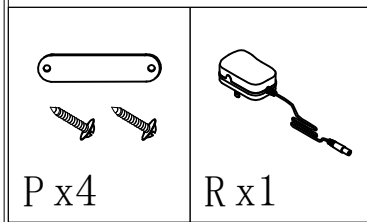


Step26

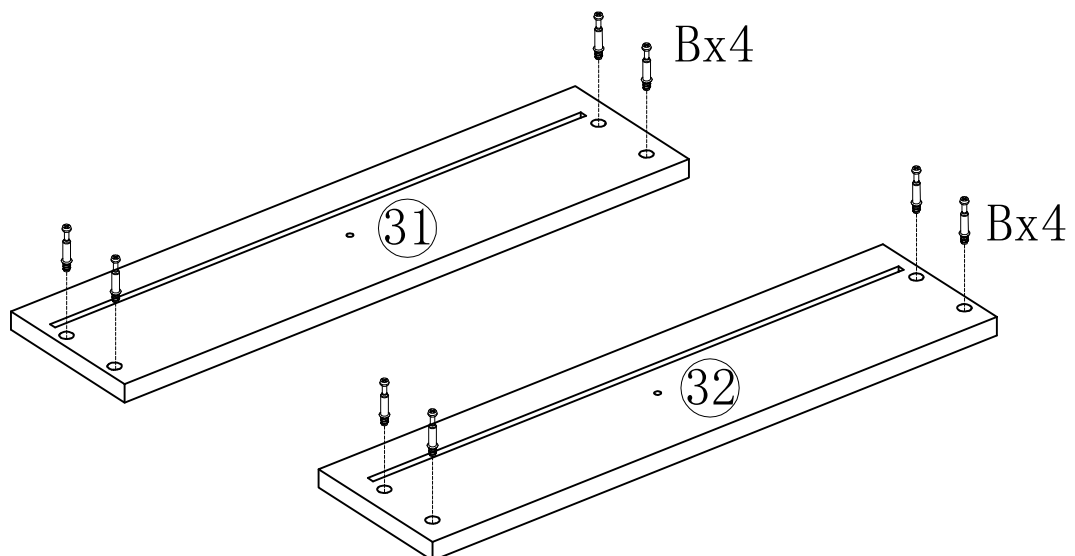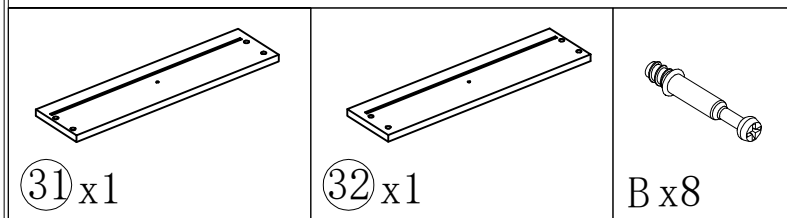

Step27

20/25





27 x2




28 x2





A x8

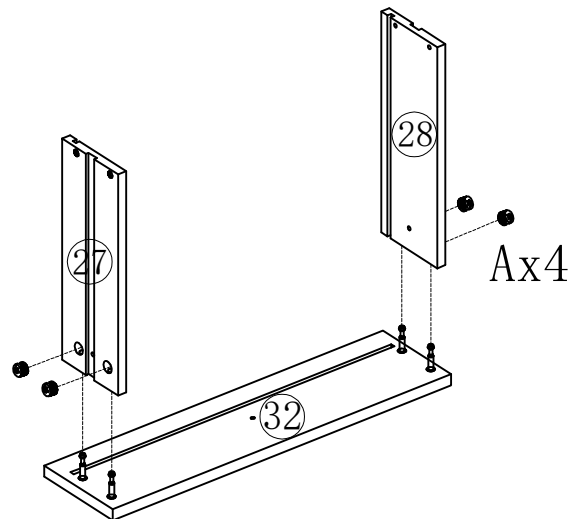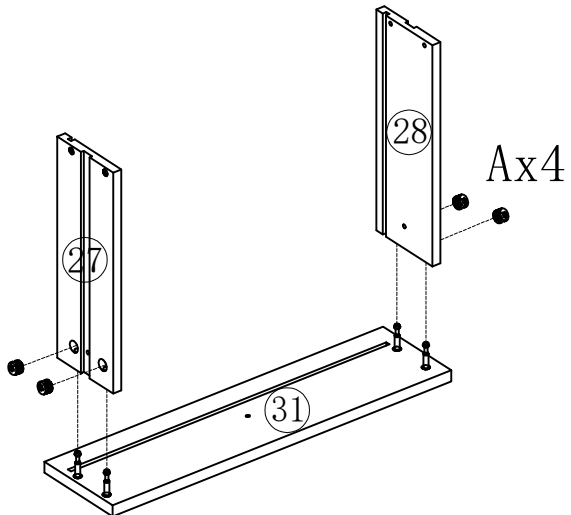

Step28






30 x2


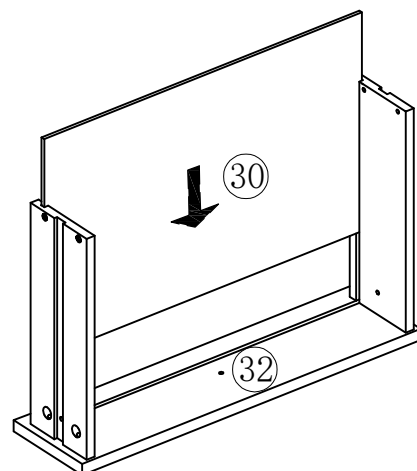
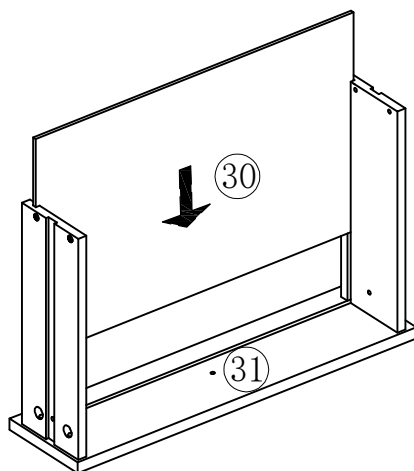


Step29

21/25

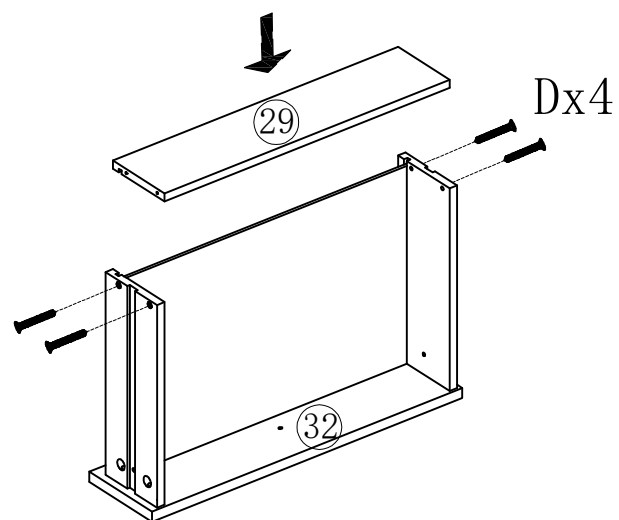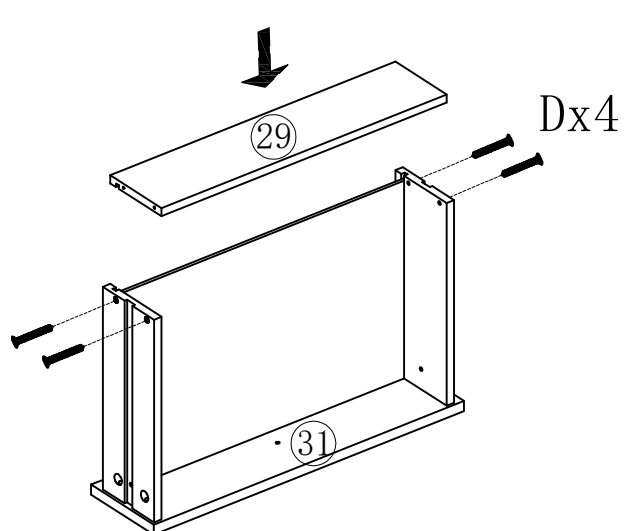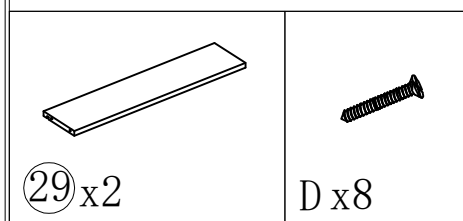

Step30

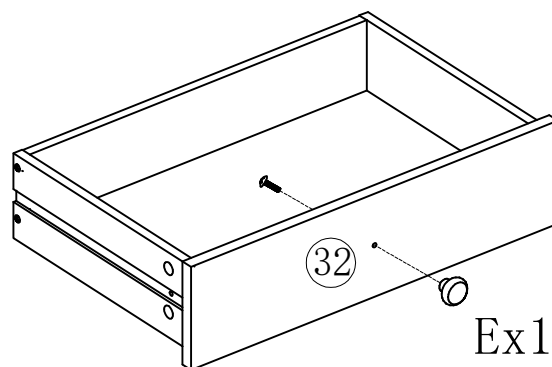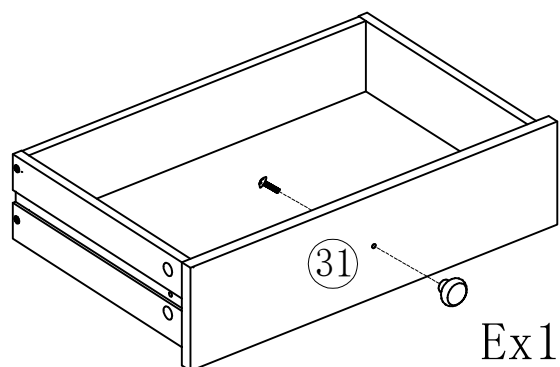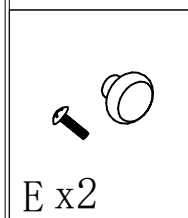


Step31

22/25




Gx4


For proper use, please make sure the left drawer front panel is ③① and the right drawer front panel is ③②.

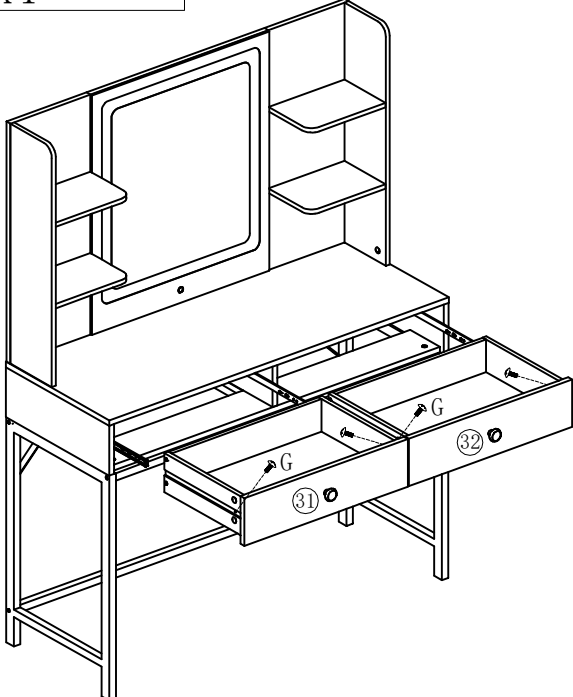


I pull out the rail from the cabinet frame

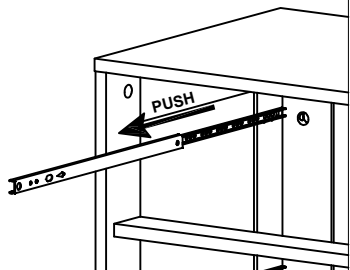


II Put the drawer in and align the groove of the drawer with the rail

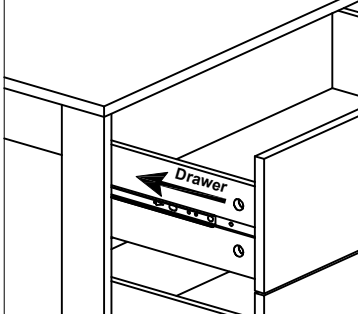


III align the hole circled in Figure IV with the hole of the drawer and screw the G to holes from the inside of the drawer

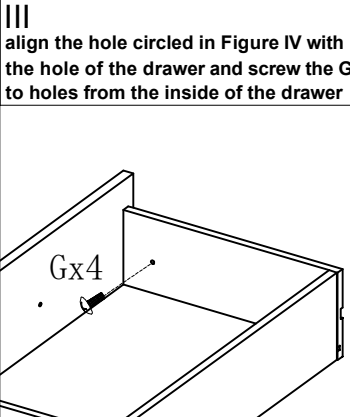

IV ✓

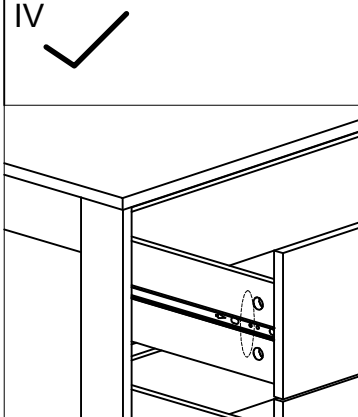

Step32



①⑤ x2




①⑥ x2



①⑦ x2





K x8

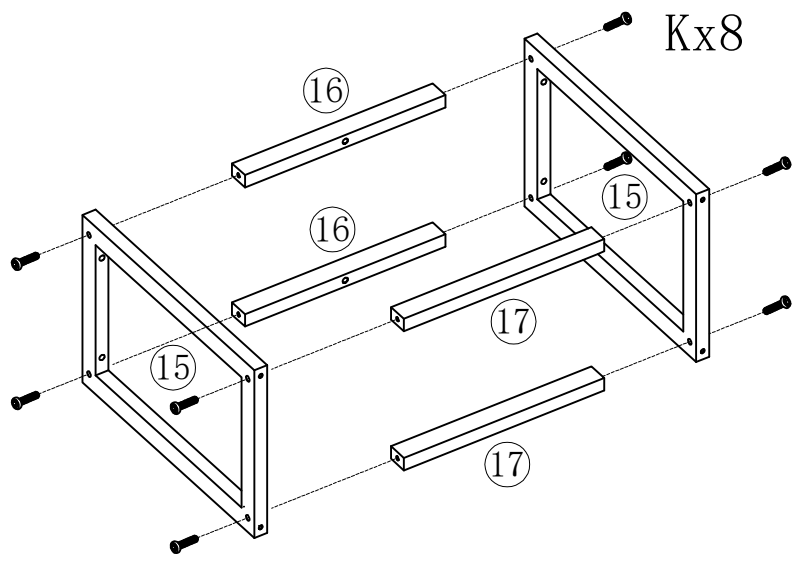



Kx8

Step33

23/25

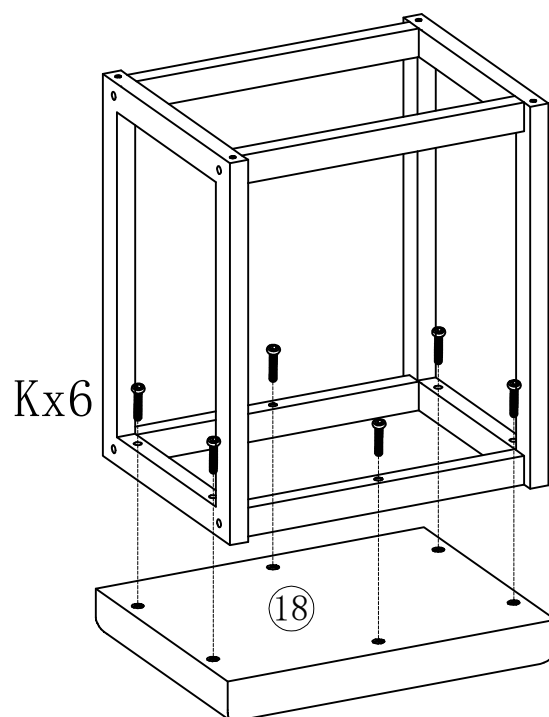
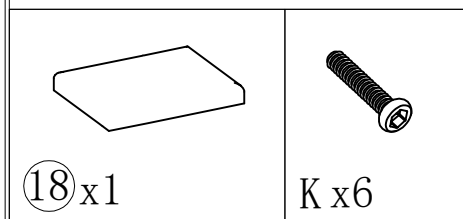


Step34




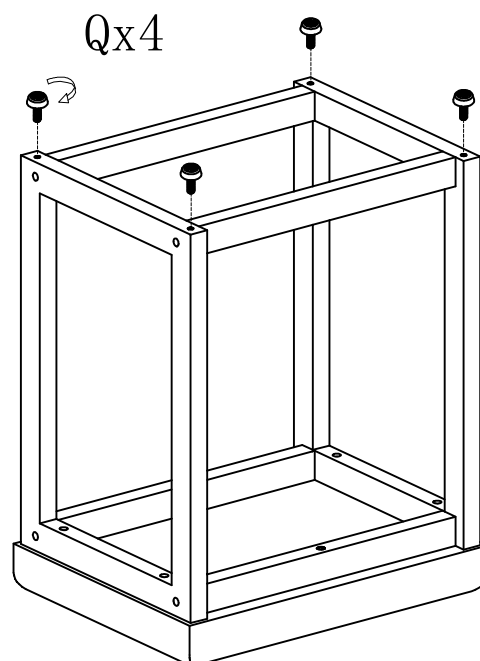
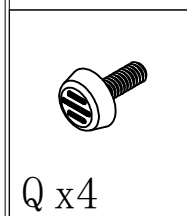



Step35

24/25

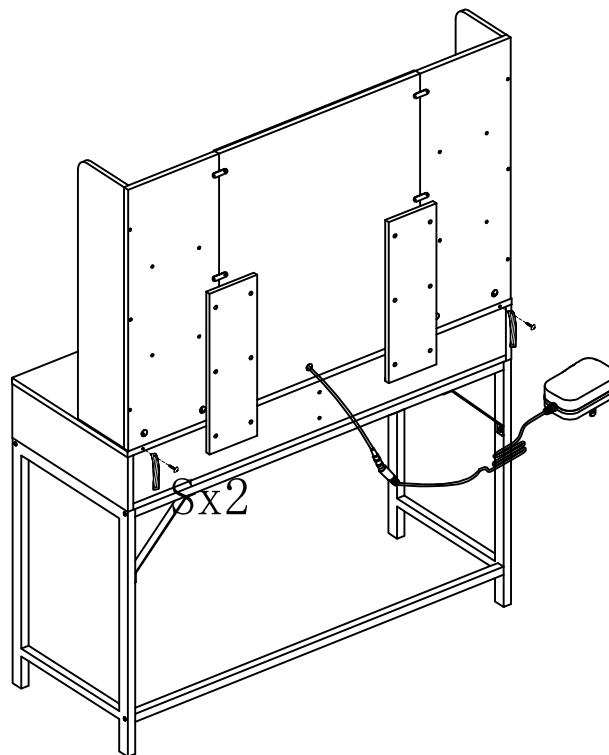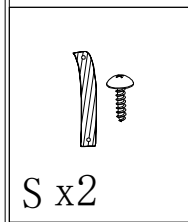

Step36

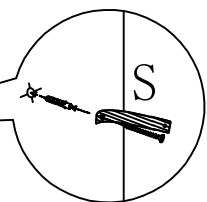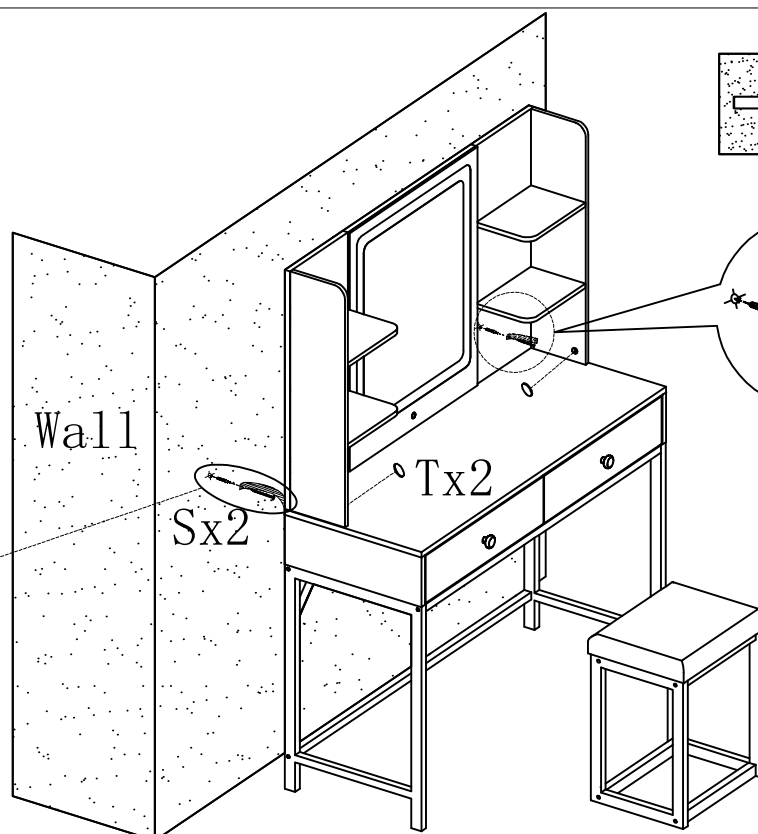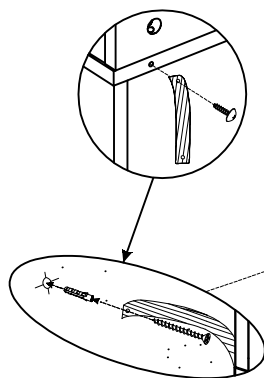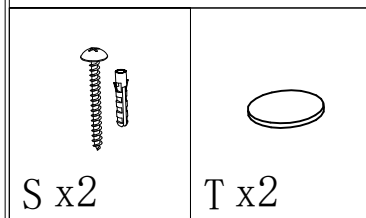

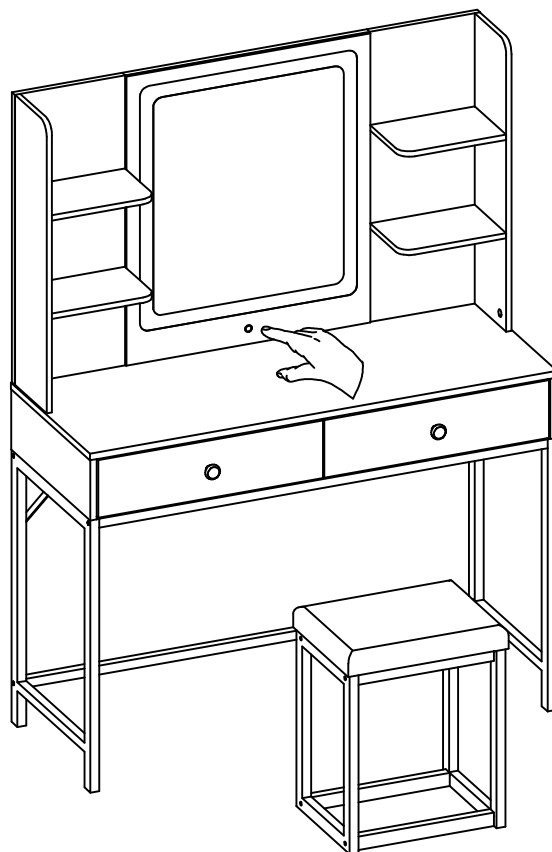

When the power is turned on, the switch key lights up in white.

- Touch the switch for the first time, the mirror light is Warm Yellow, and the switch key is blue.
- Touch the switch for the second time, the mirror light is Cold White.
- Touch the switch for the third time, the mirror light is Warm White.
- Touch the switch for the fourth time, the mirror light turns off, and the switch changes from blue to white.

Note: When the mirror light is turned on, you can long press the switch button to adjust the brightness of the mirror light, and the color of the light will not be changed.