


# Assembly Instructions

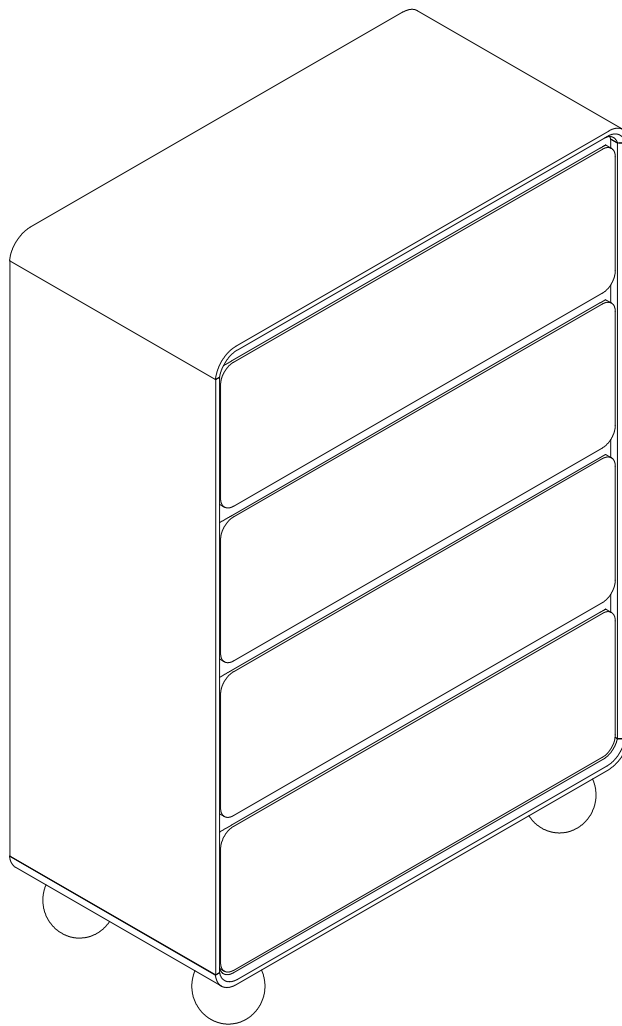

“Please check all parts and hardware against the list before assembly. If any parts are missing or damaged, please contact us immediately.”


## Before Assembly

1. Assembly requires two or more people to complete.
2. Using power tools will make the installation finish faster.

### Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

## QUICKFIT

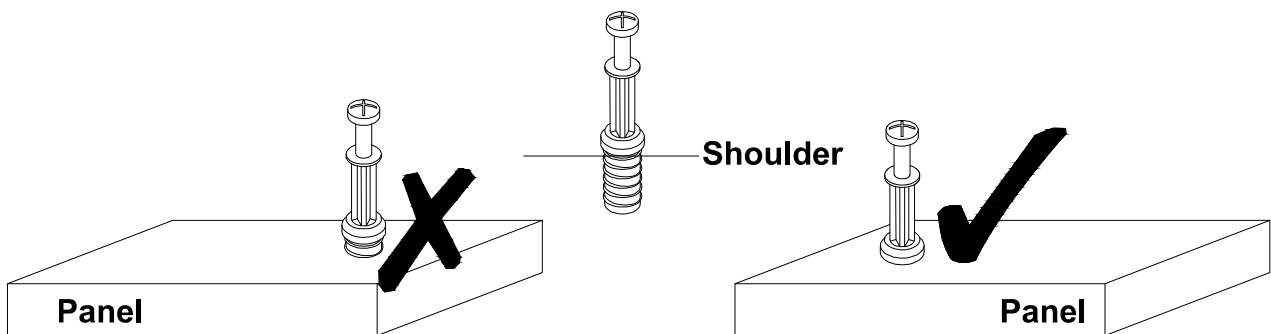


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

## CAM LOCK

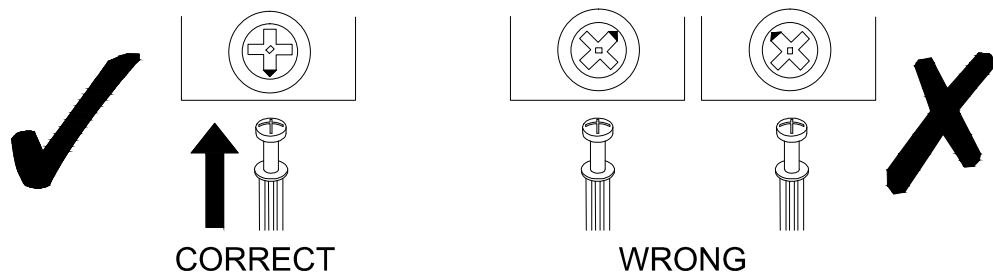


When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT

"Ensure the arrow on the Cam Lock (B) is pointing towards the hole for the Cam Lock Dowel (A) before inserting."

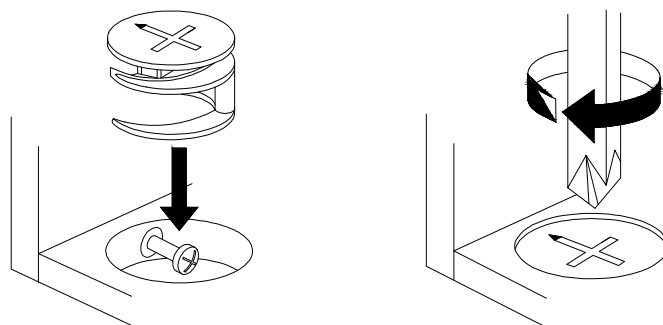

Turn cam lock clockwise to tighten.

# Product structure






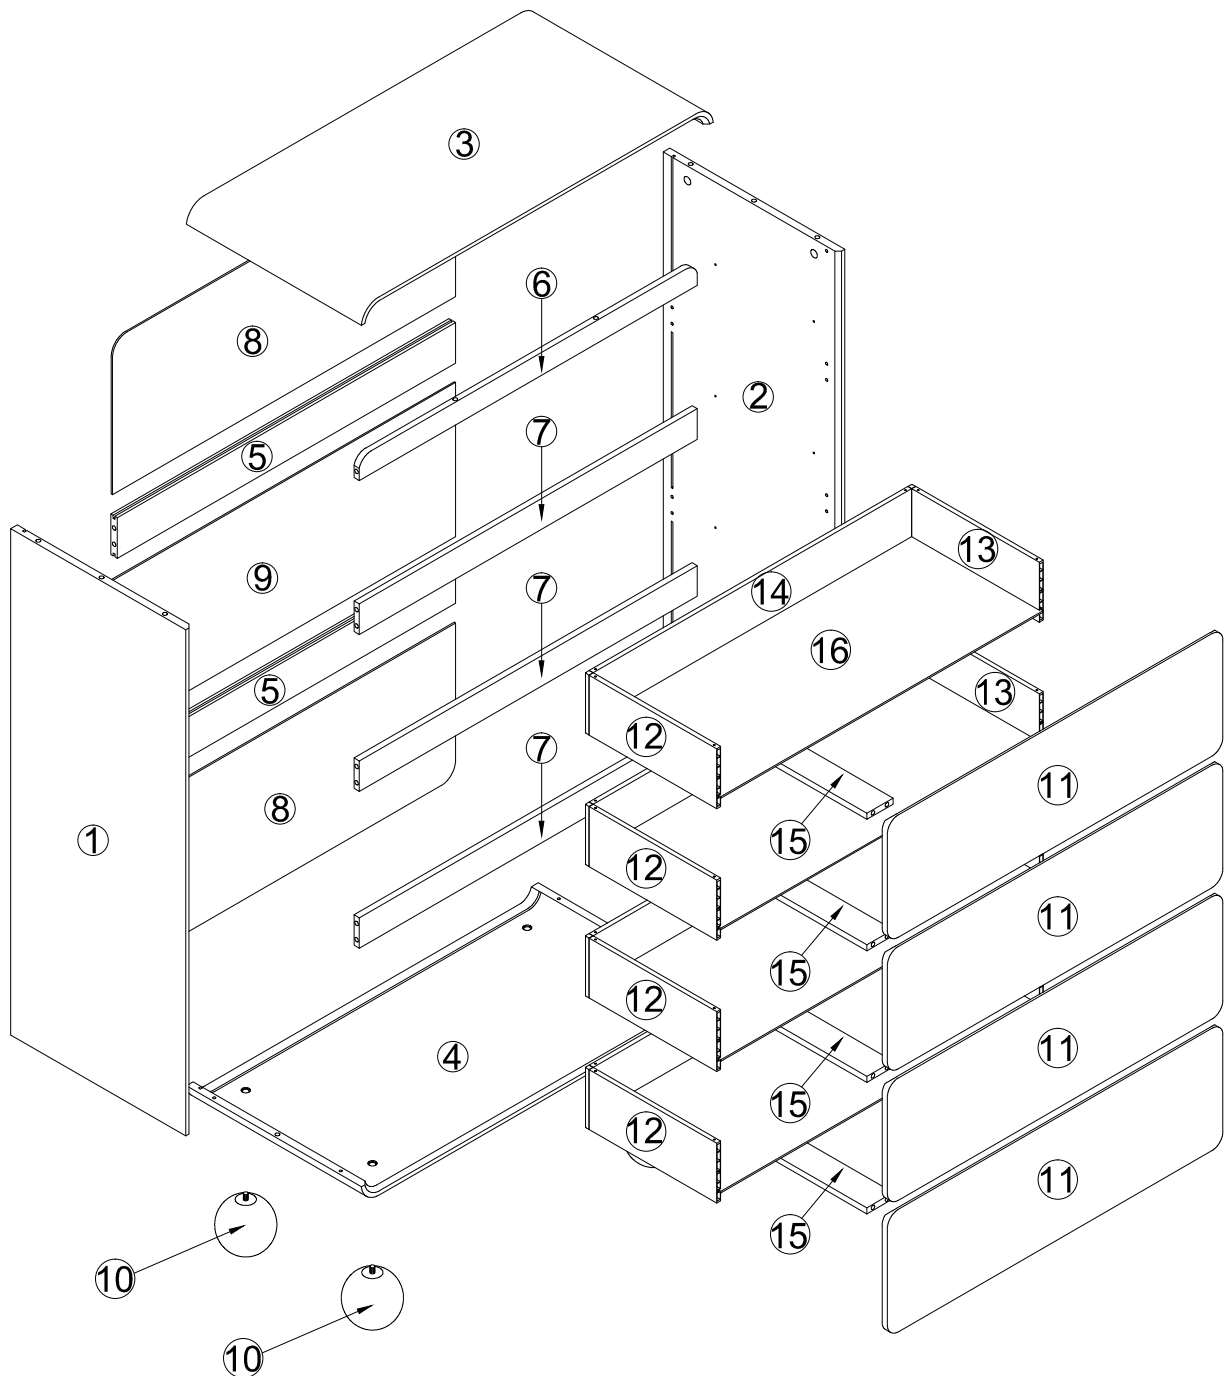


“Assemble on a soft surface, such as a carpet or the original packaging box, to avoid scratches to the panels.”


# Part List




“Please check all parts and hardware against the list before assembly. If any parts are missing or damaged, please contact us immediately.”
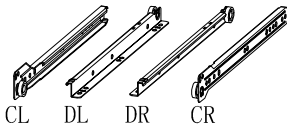
|                                                                                                                                                               |                                                                                                                                                    |                                                                                                                                                        |                                                                                                                                             |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| <b>No. A</b><br>Quantity:40 Pcs<br>Cam Lock Dowel<br>8*28mm<br>              | <b>No. B</b><br>Quantity:40 Pcs<br>Cam<br>φ15<br>                 | <b>No. C</b><br>Quantity:40 Pcs<br>Sticker<br>Ø20<br>                | <b>No. D</b><br>Quantity:4 Pcs<br>Dowel<br>8*30mm<br>    |
| <b>No. E</b><br>Quantity:4 Sets<br>Ordinary bottom-dragging rail<br>12"<br> | <b>No. F</b><br>Quantity:32 Pcs<br>Screw<br>M3.5*12mm<br>        | <b>No. G</b><br>Quantity:8 Pcs<br>Screw<br>M4*30mm<br>              | <b>No. H</b><br>Quantity:12 Sets<br>Plastic Wedge<br>   |
| <b>No. I</b><br>Quantity:4 Pcs<br>Foot Pad<br>Ø20<br>                      | <b>No. J</b><br>Quantity:16 Pcs<br>Cam Lock Dowel<br>8*25mm<br> | <b>No. K</b><br>Quantity:16 Pcs<br>Rubber particles<br>Ø6*12mm<br> | <b>No. L</b><br>Quantity:8 Pcs<br>Drawer Connector<br> |
| <b>No. M</b><br>Quantity:32 Pcs<br>Screw<br>M3*12mm<br>                    | <b>No. N</b><br>Quantity:2 Sets<br>Anti-falling Parts<br>       |                                                                                                                                                        |                                                                                                                                             |


# STEP 1

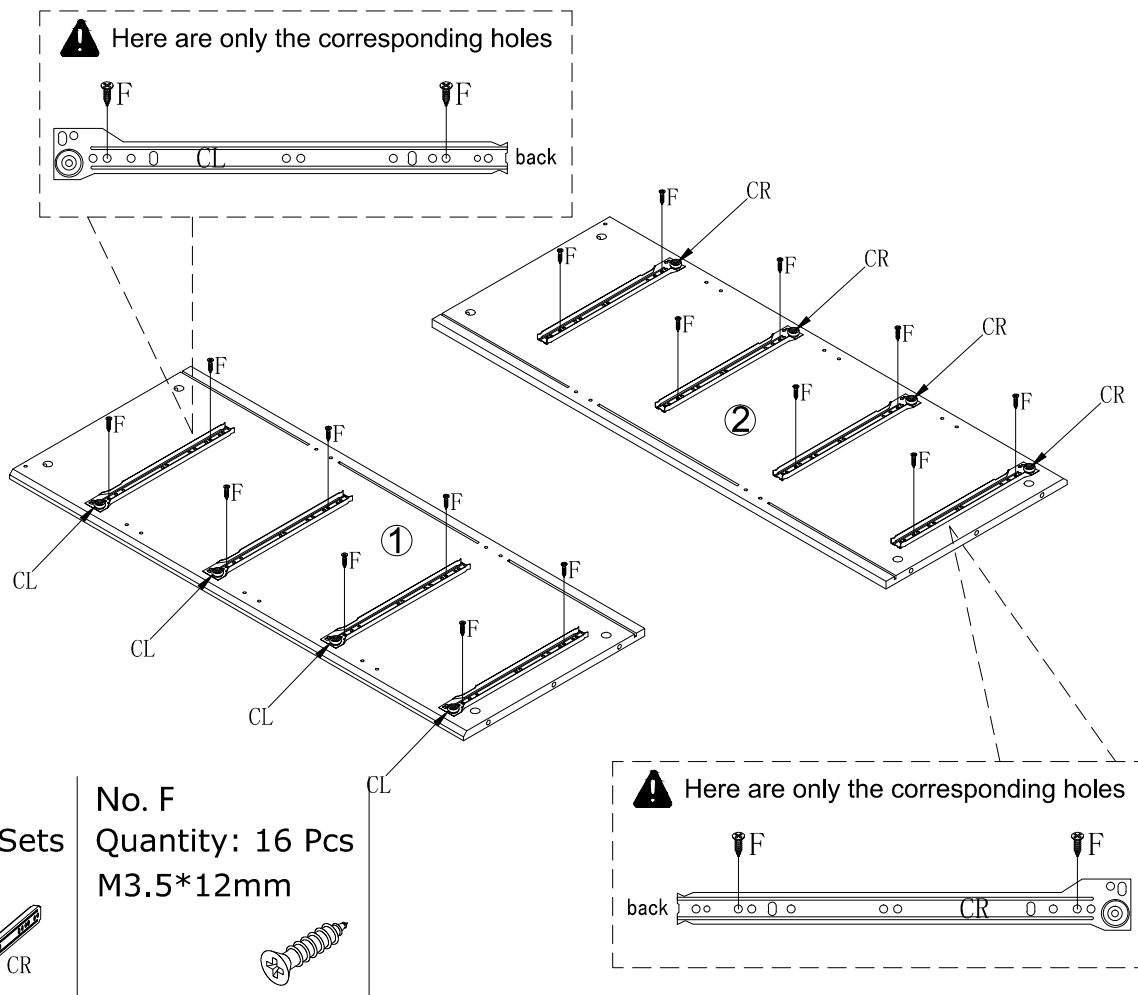

# STEP 2

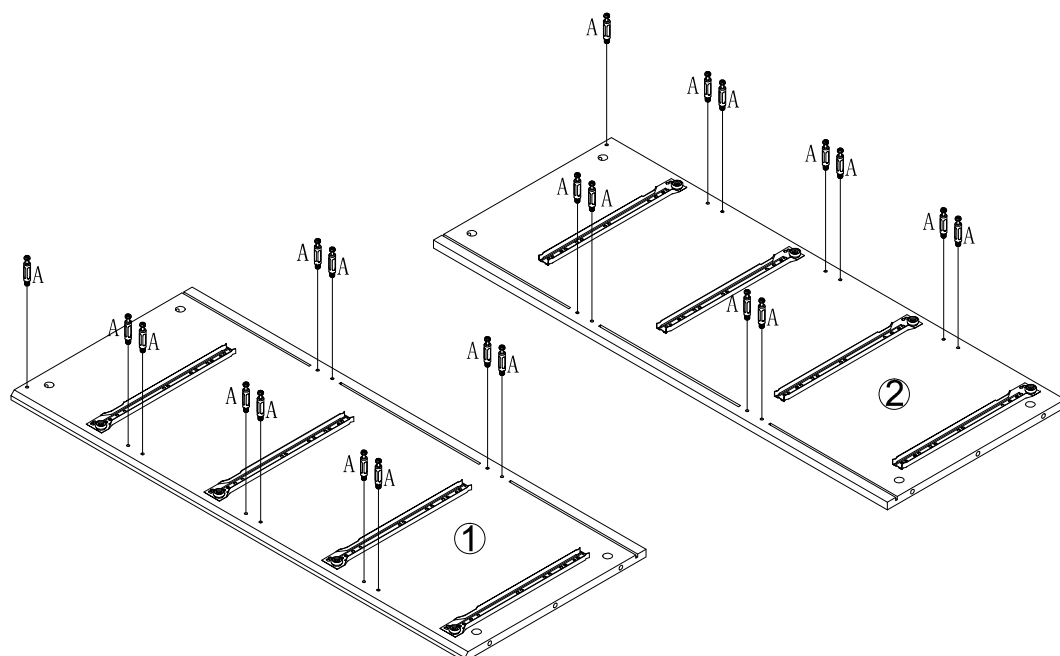

## STEP 3

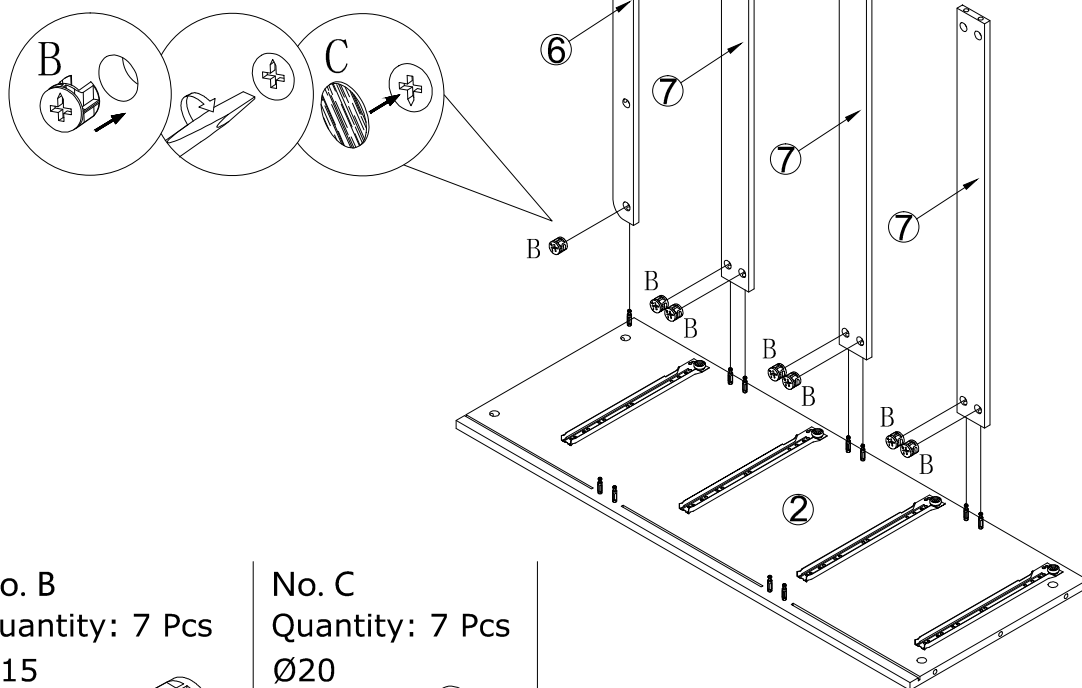


No. B  
Quantity: 7 Pcs  
Ø15



No. C  
Quantity: 7 Pcs  
Ø20



## STEP 4

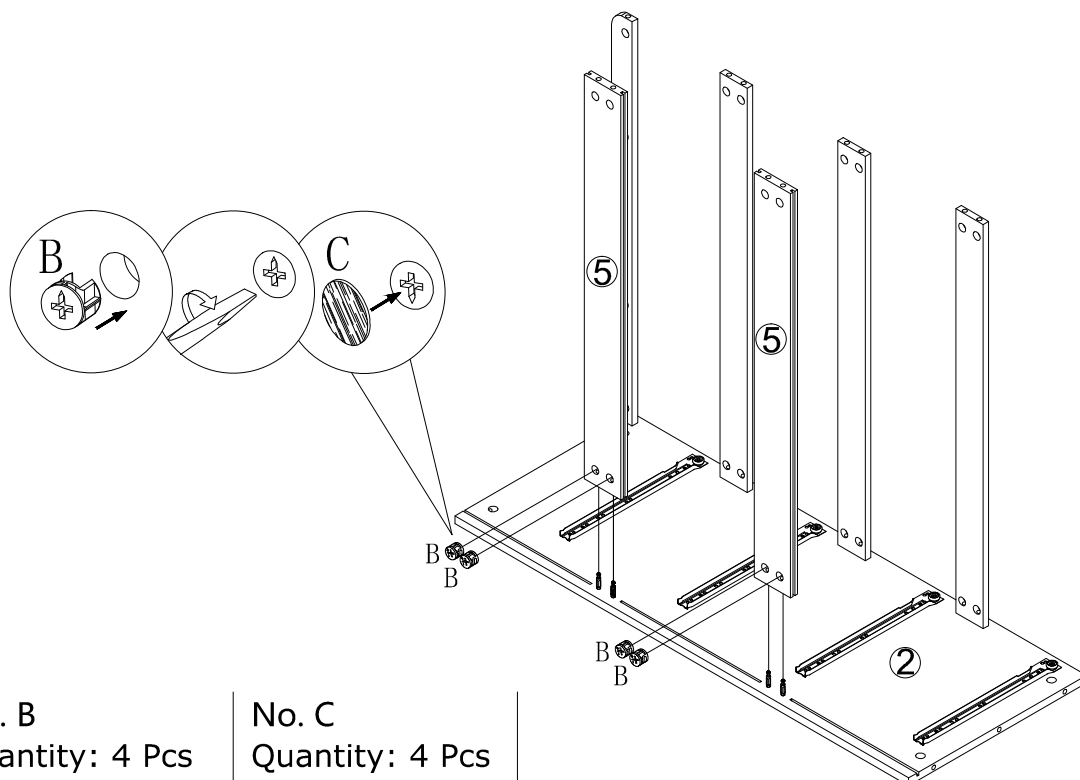


No. B  
Quantity: 4 Pcs  
Ø15




No. C  
Quantity: 4 Pcs  
Ø20



## STEP 5

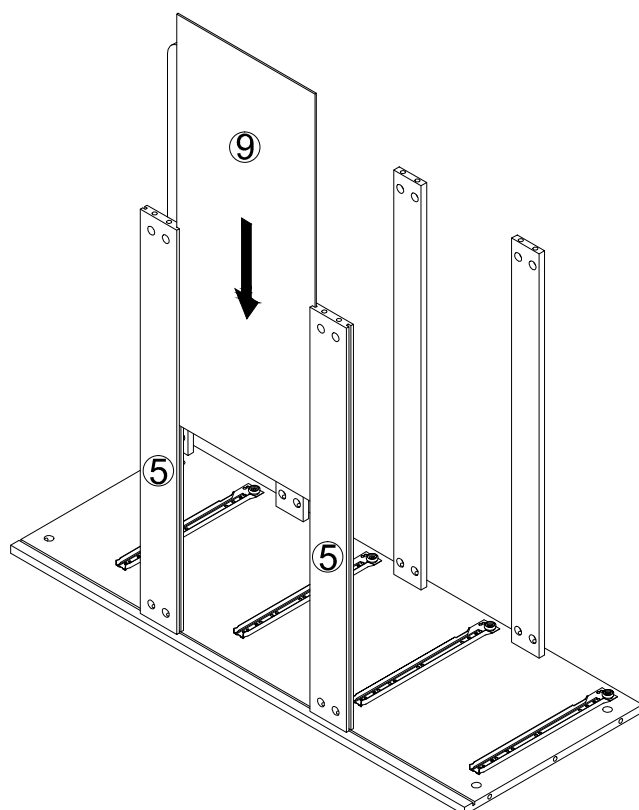

## STEP 6

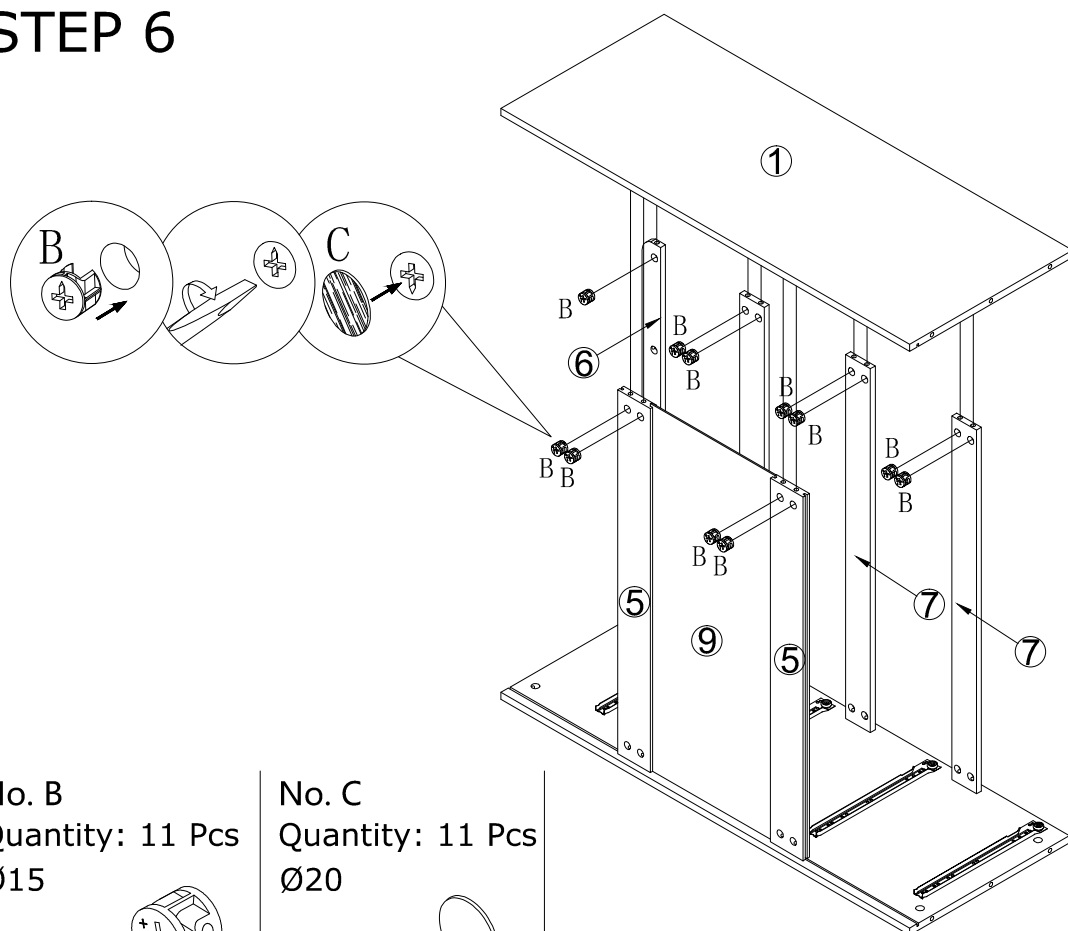


No. B  
Quantity: 11 Pcs  
Ø15



No. C  
Quantity: 11 Pcs  
Ø20




## STEP 7

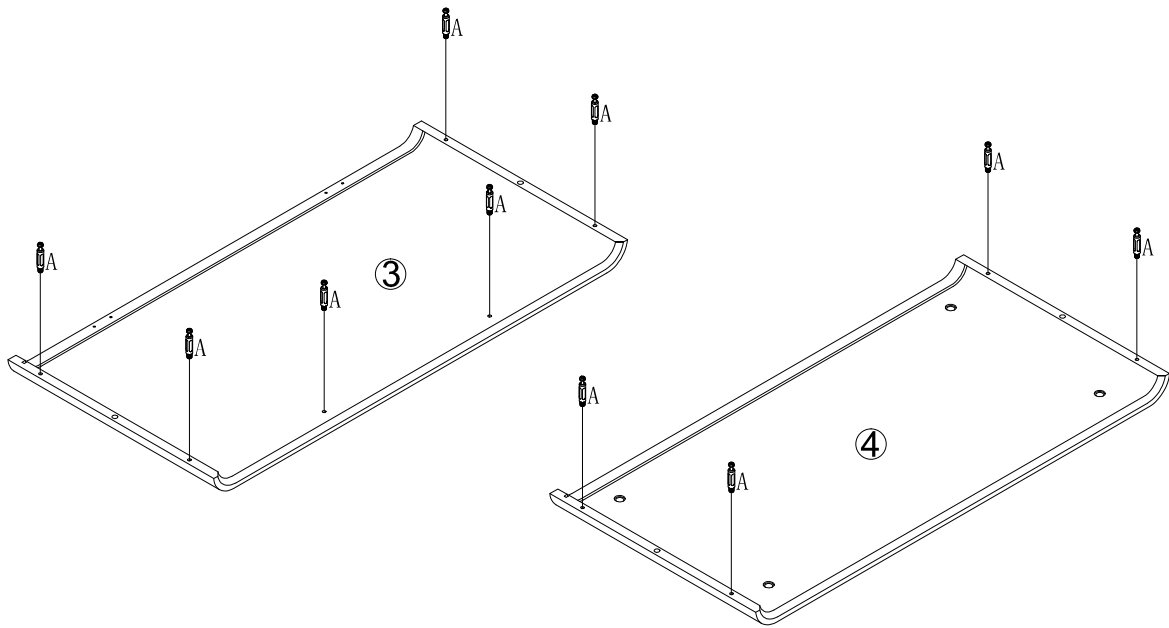

No. A  
Quantity: 10 Pcs  
8\*28 mm



## STEP 8

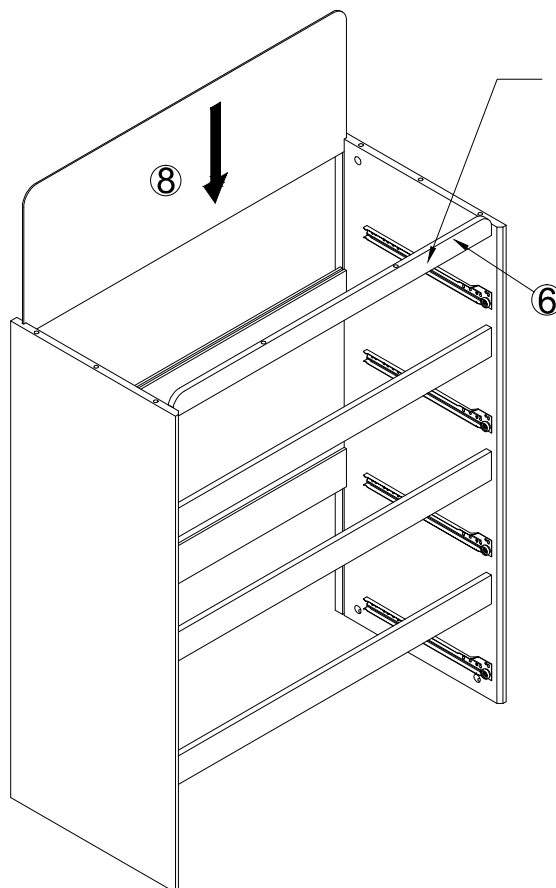

Please note when  
assembling to this step: the  
board numbered 6 is on top.

## STEP 9



No. B  
Quantity: 6 Pcs  
Ø15




No. C  
Quantity: 6 Pcs  
Ø20



No. D  
Quantity: 2 Pcs  
8\*30mm

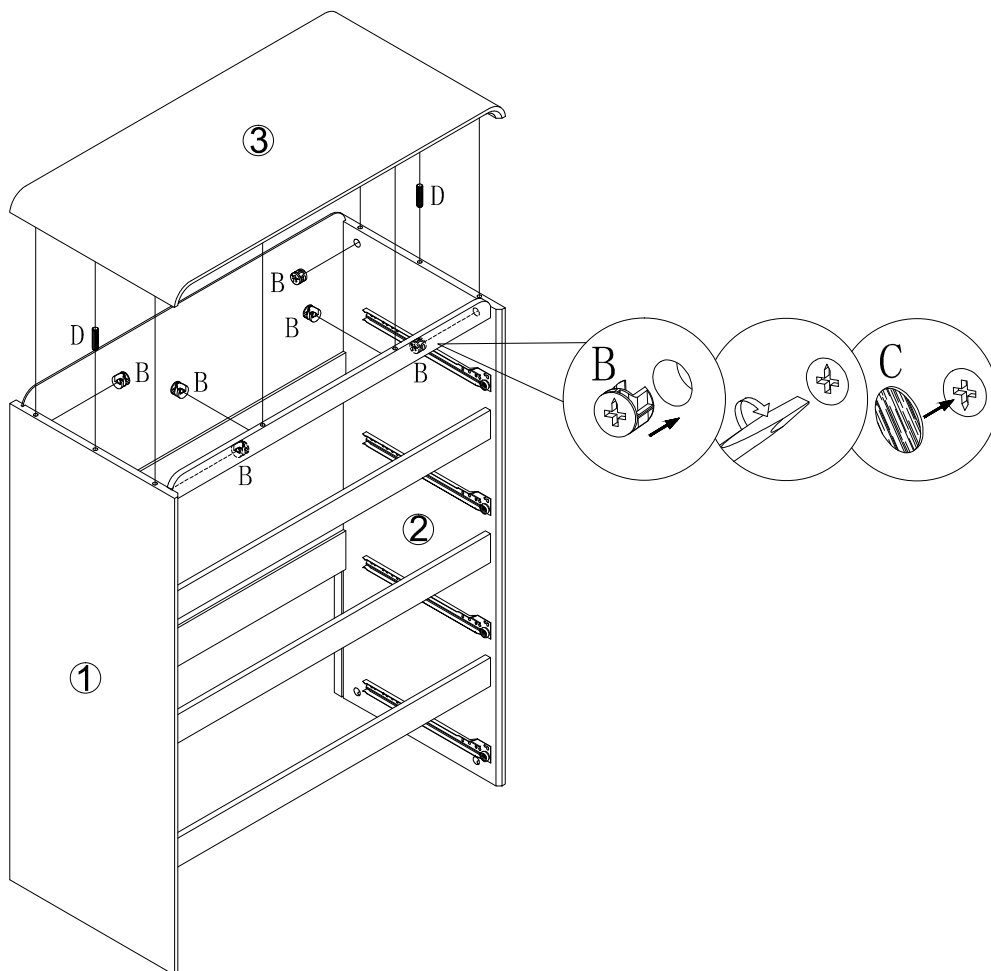

## STEP 10

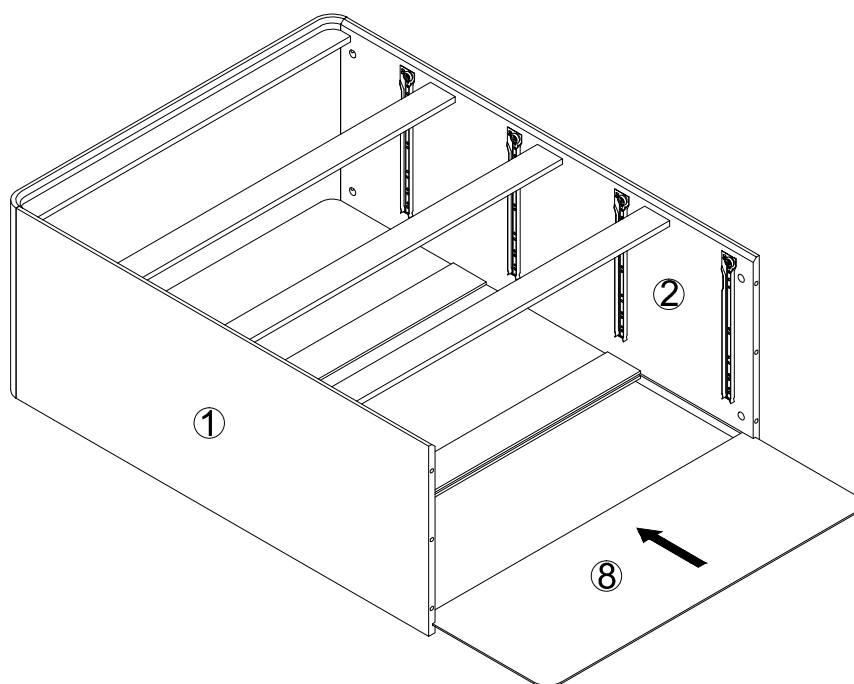

## STEP 11



No. B  
Quantity: 4 Pcs  
Ø15




No. C  
Quantity: 4 Pcs  
Ø20




No. D  
Quantity: 2 Pcs  
8\*30mm

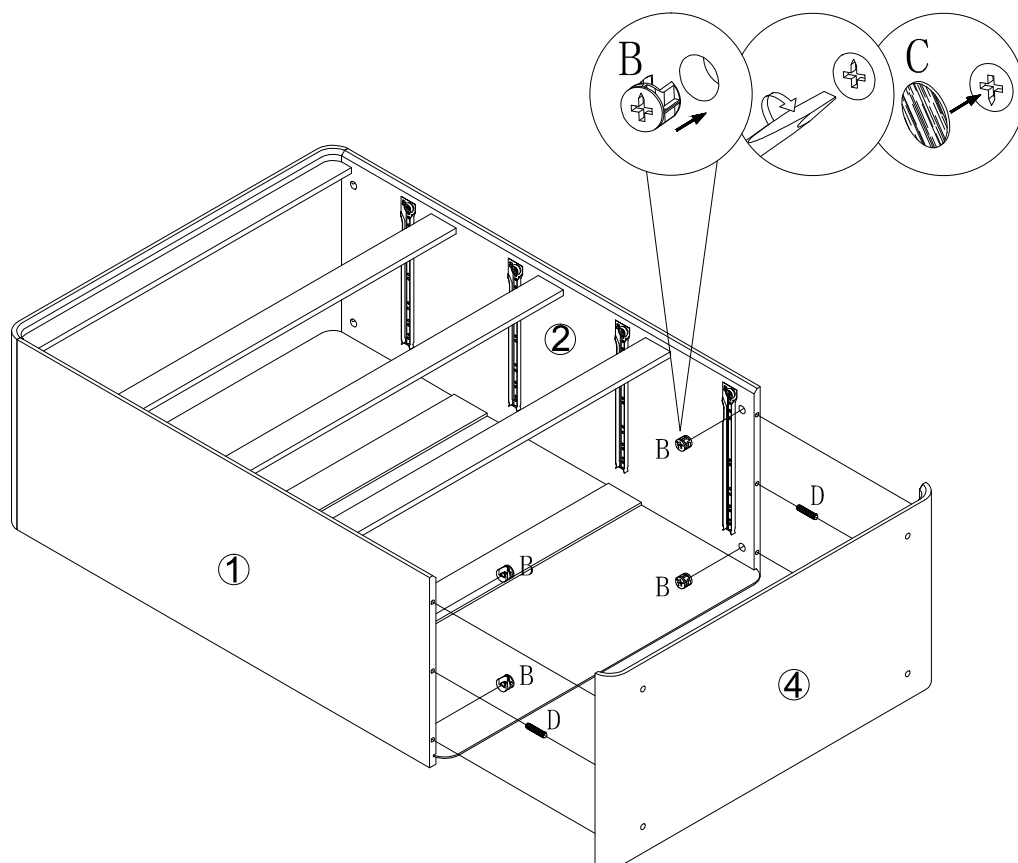

## STEP 12

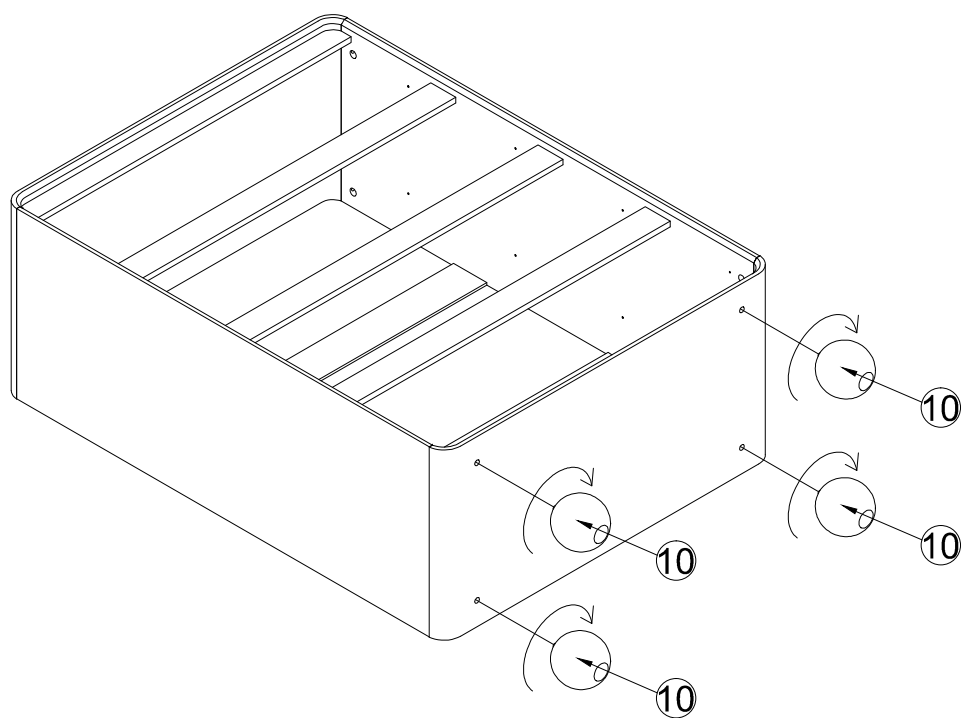

## STEP 13

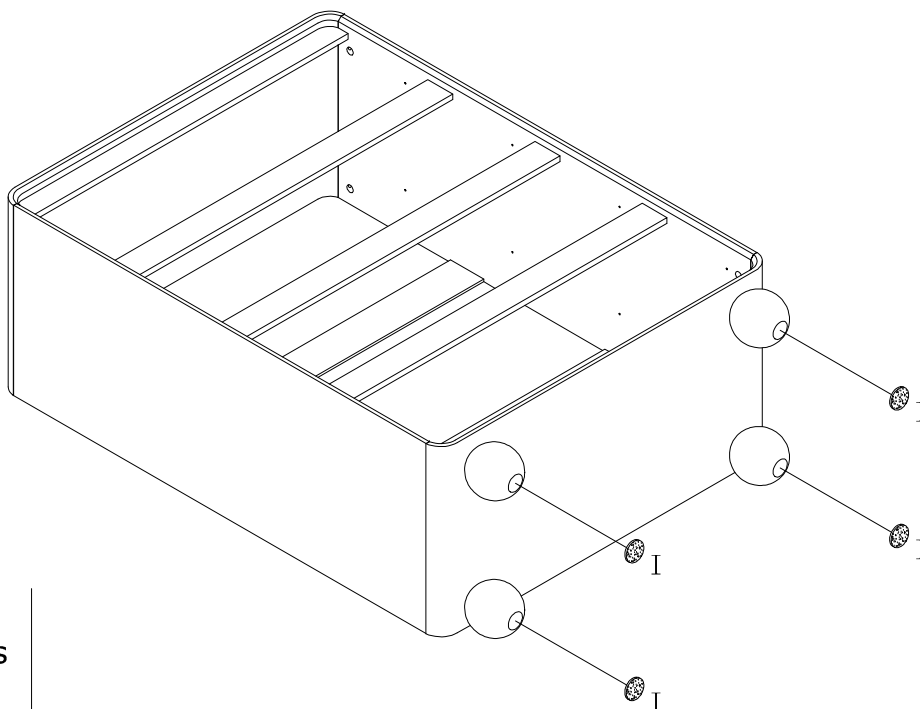


No. I  
Quantity: 4 Pcs  
Ø20



## STEP 14



Please note that two types of hardware are used here; please distinguish them before assembly.

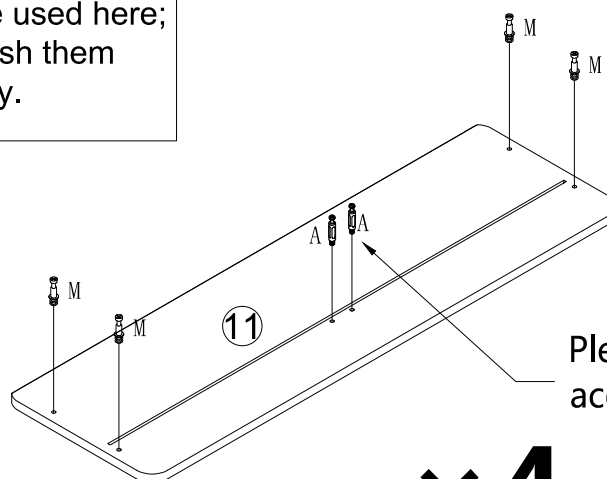


**×4**

No. A  
Quantity: 8 Pcs  
8\*28 mm




No. J  
Quantity: 16 Pcs  
8\*25mm



## STEP 15


Please note that at the connection, both above and below, the glue beads need to be tapped into place.

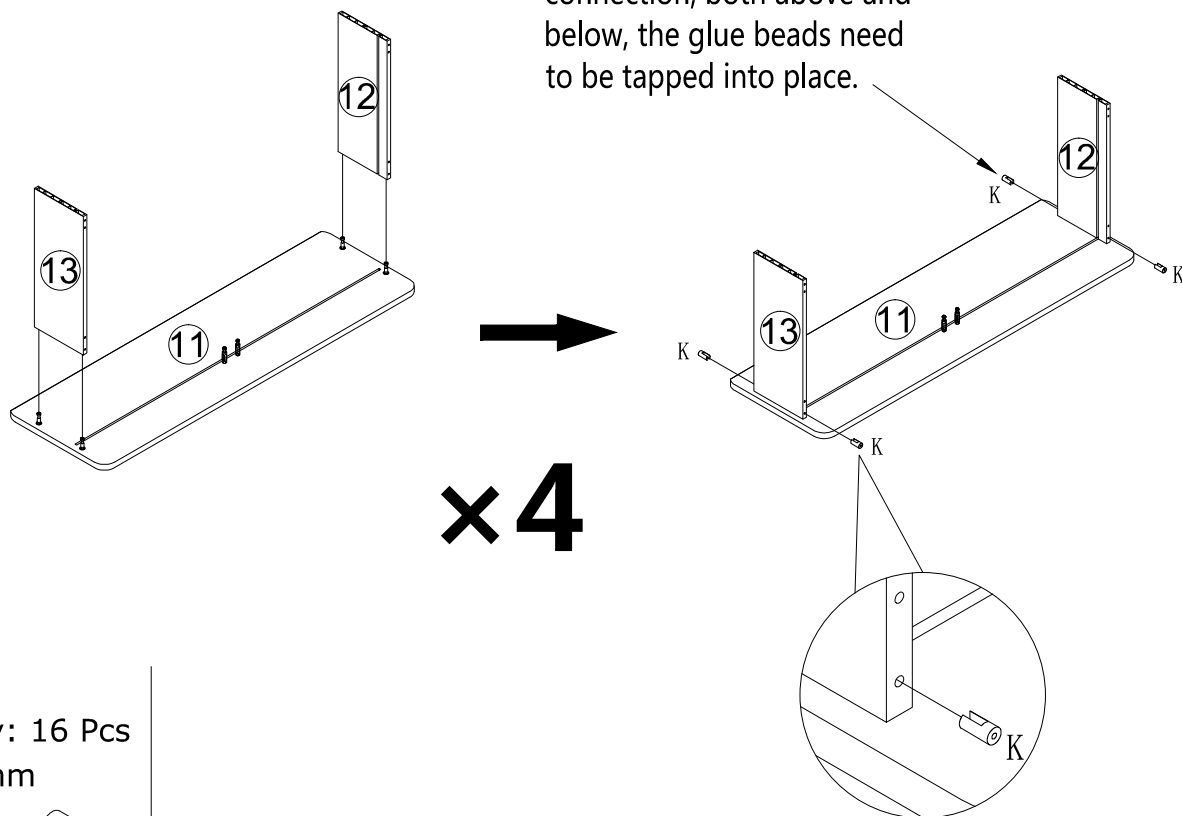

No. K  
Quantity: 16 Pcs  
Ø6\*12mm



## STEP 16

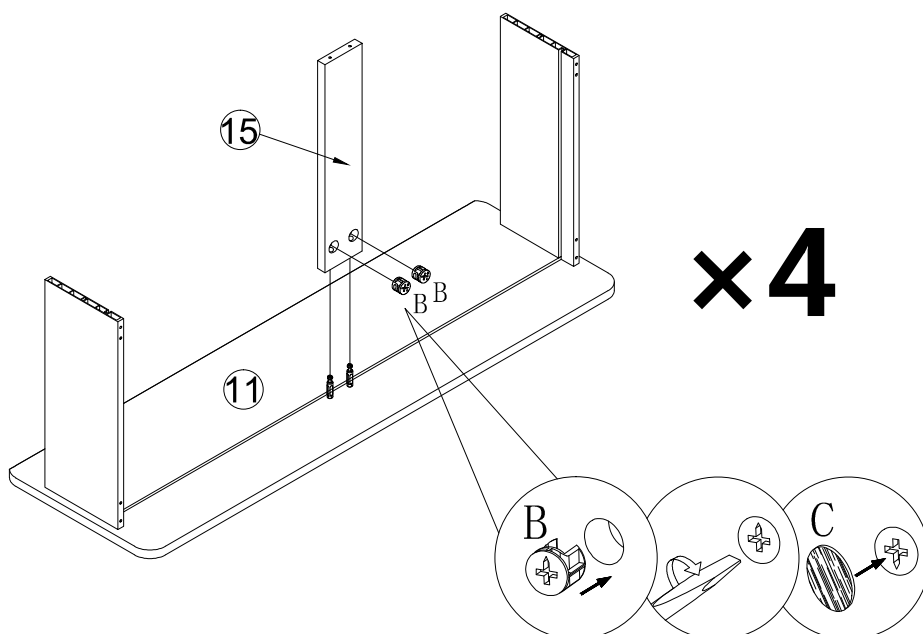


No. B  
Quantity: 8 Pcs  
Ø15



No. C  
Quantity: 8 Pcs  
Ø20





## STEP 17

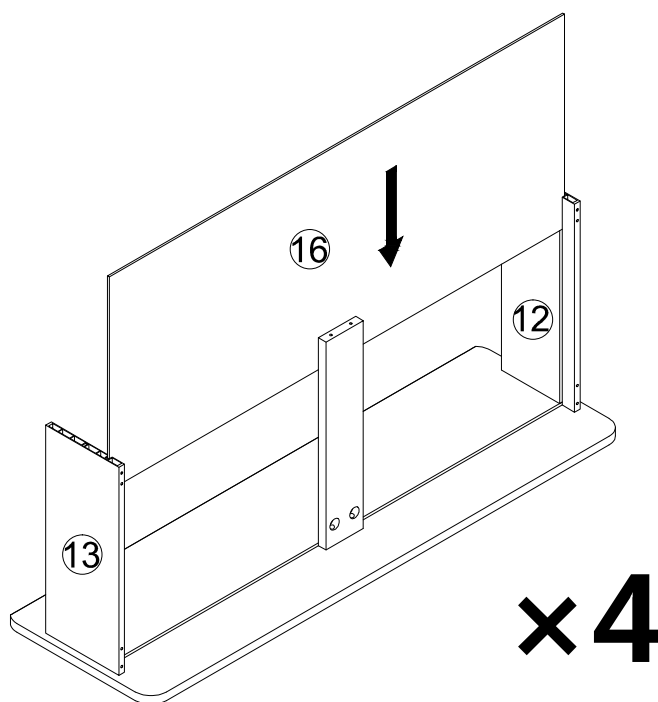


## STEP 18

Please note that at the connection, both above and below, the glue beads need to be tapped into place.

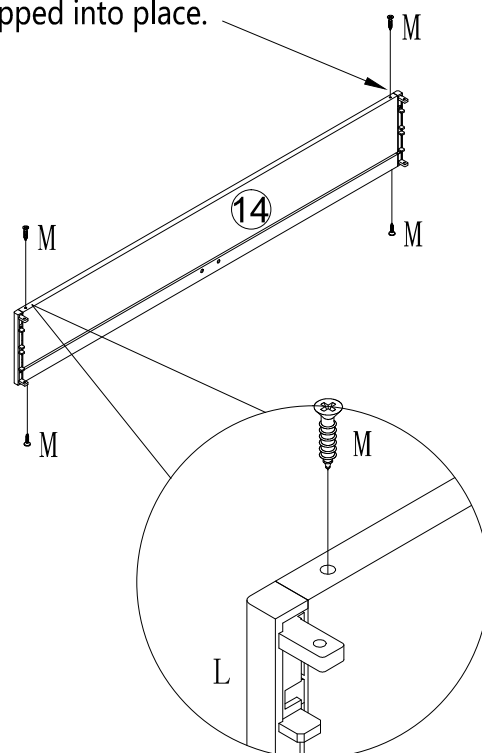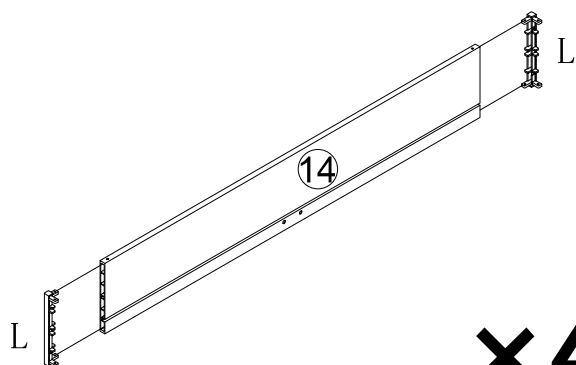

No. L  
Quantity: 8 Pcs




No. M  
Quantity: 16 Pcs  
M3\*12mm




## STEP 19

Please note that at the connection, both above and below, the glue beads need to be tapped into place.

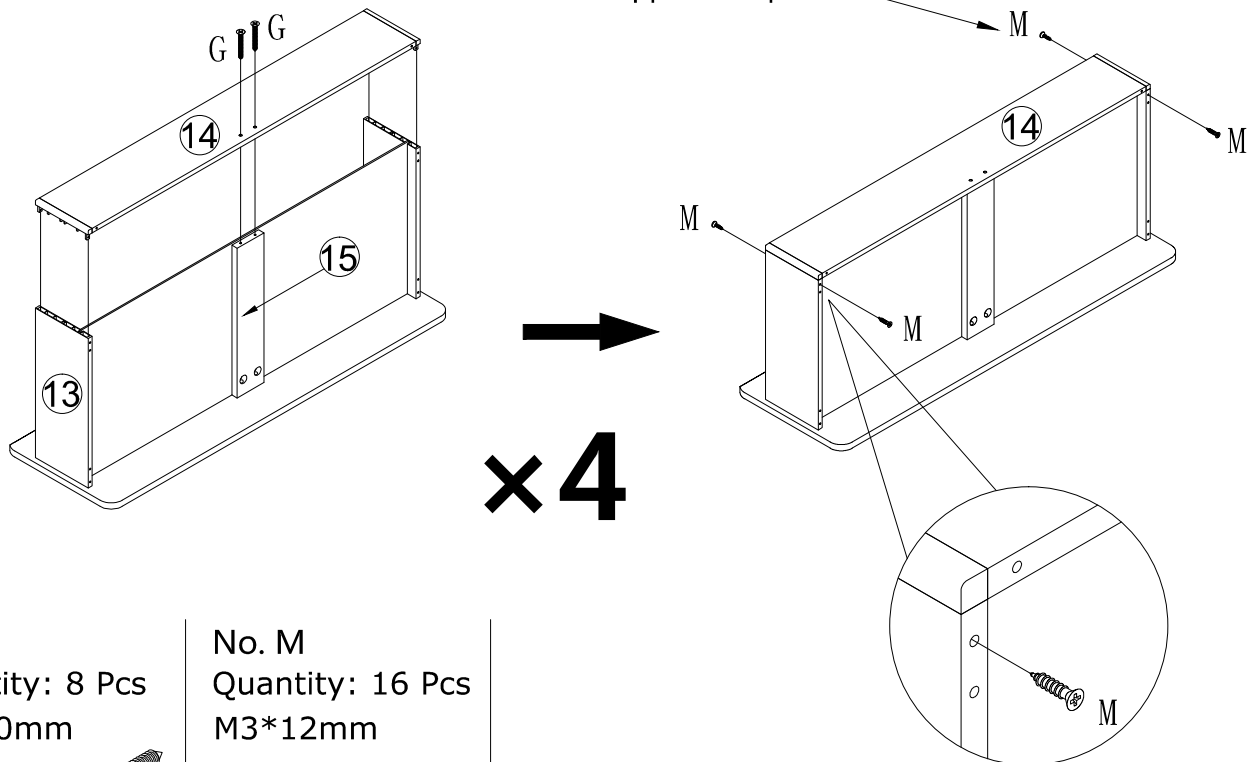


No. G  
Quantity: 8 Pcs  
M4\*30mm





No. M  
Quantity: 16 Pcs  
M3\*12mm




## STEP 20

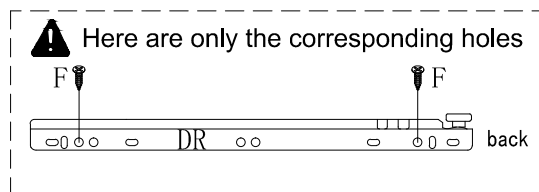

**x4**

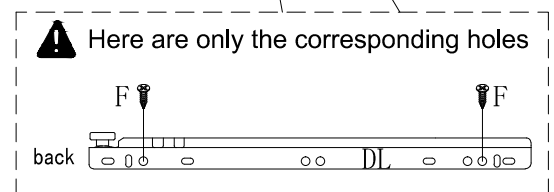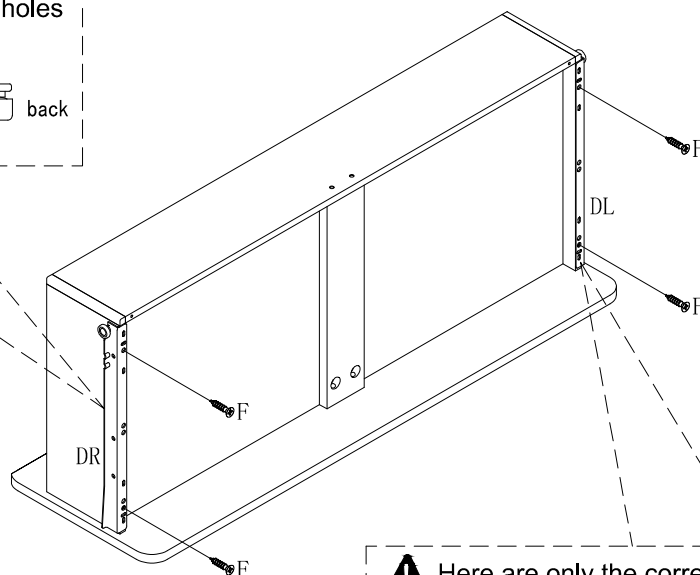


No. E  
Quantity: 4 Sets  
12"



No. F  
Quantity: 16 Pcs  
M3.5\*12mm




## STEP 21

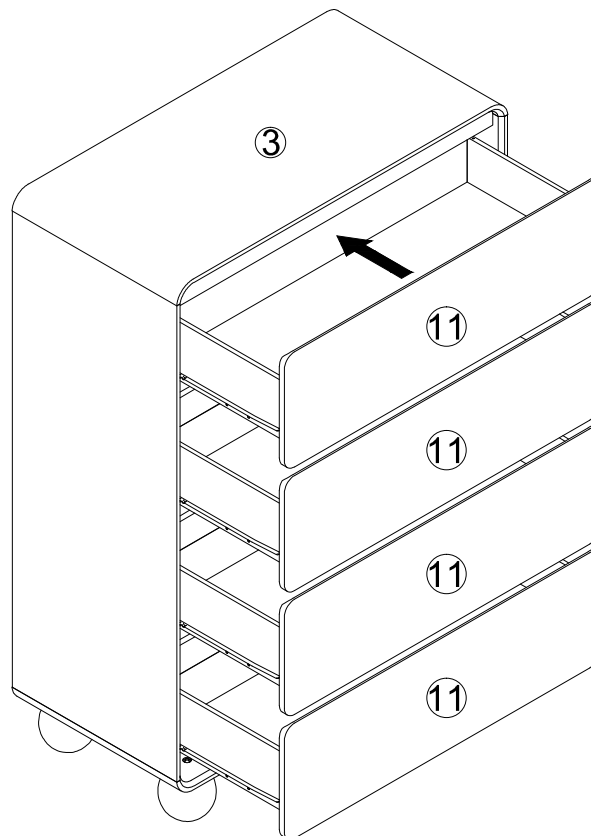


## STEP 22



**CRITICAL STEP: DO NOT skip Step 22. Failure to install all Plastic Wedges (H) will result in a wobbly cabinet.**

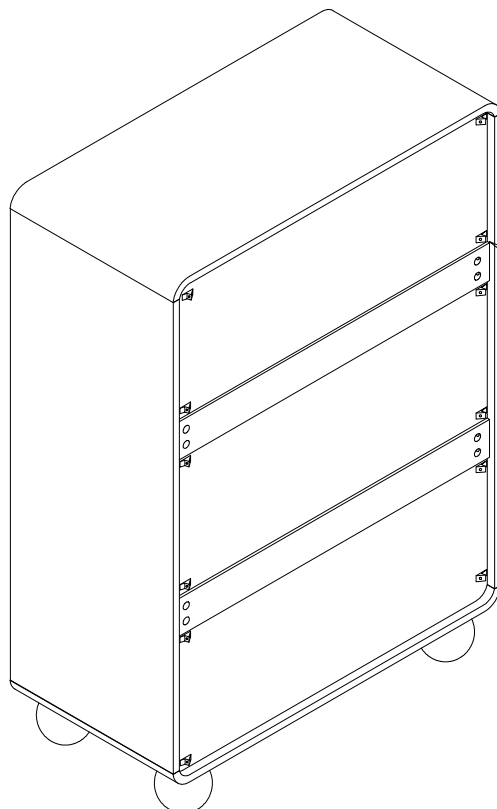

No. H  
Quantity: 12 Sets








Description: Insert the thinner end of the reinforcement into the gap in this back panel, then tighten the screws. This will make the cabinet more stable.

# STEP 23

## Anti-tipping Kit




**WARNING: ALWAYS LIFT** the cabinet when moving it. **NEVER DRAG** it across the floor. Dragging will cause the legs to fail and may lead to serious injury or property damage.

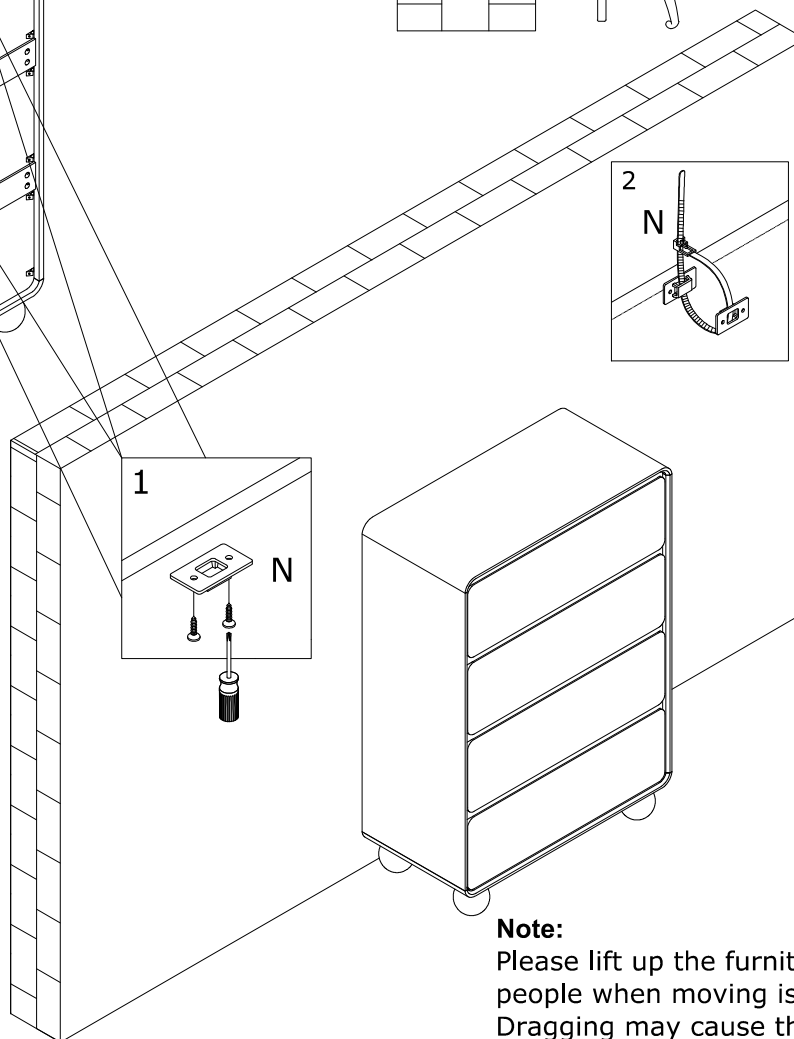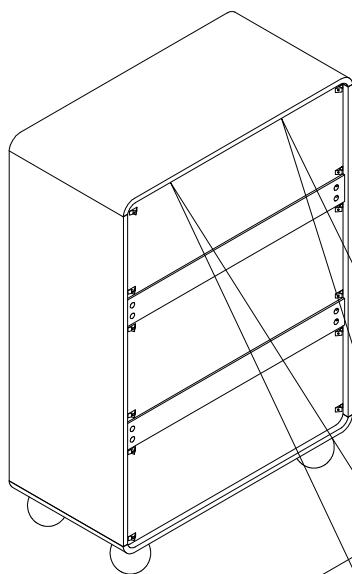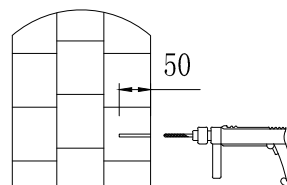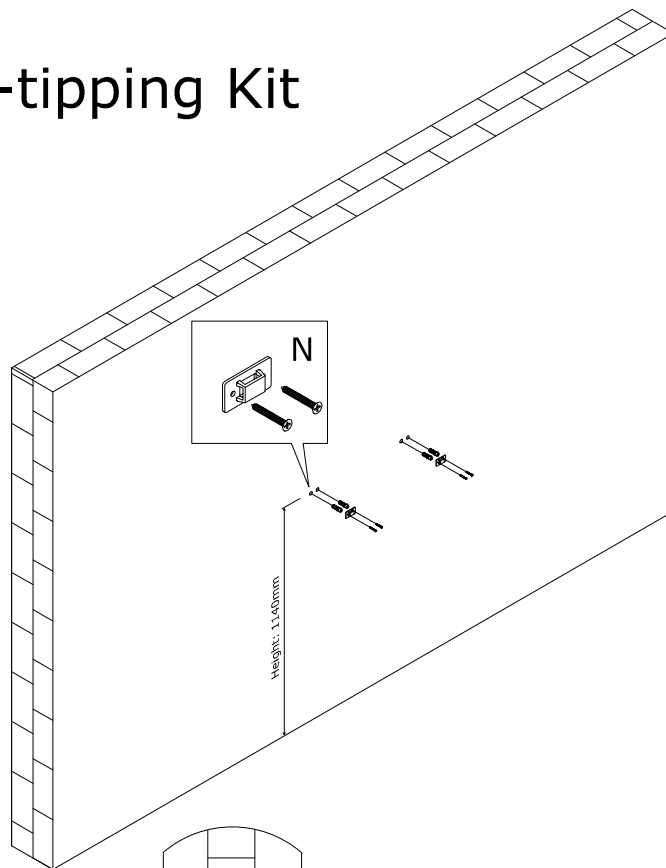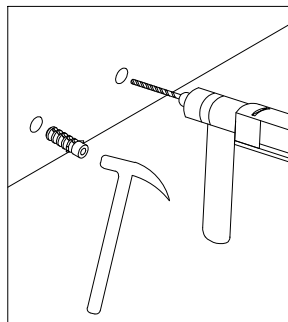

No. N

Quantity: 2 Sets



### Note:

Please lift up the furniture by two people when moving is needed. Dragging may cause the legs failure.