
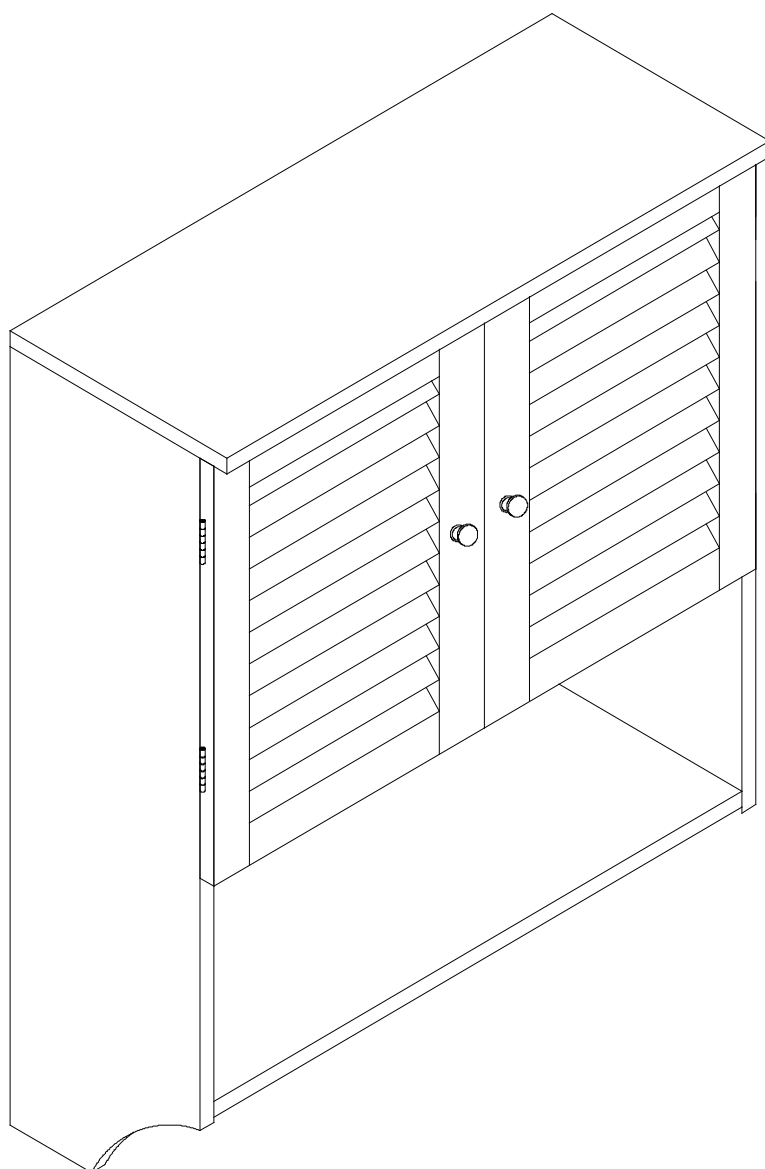


2-Door Wall Cabinet with Towel Bar

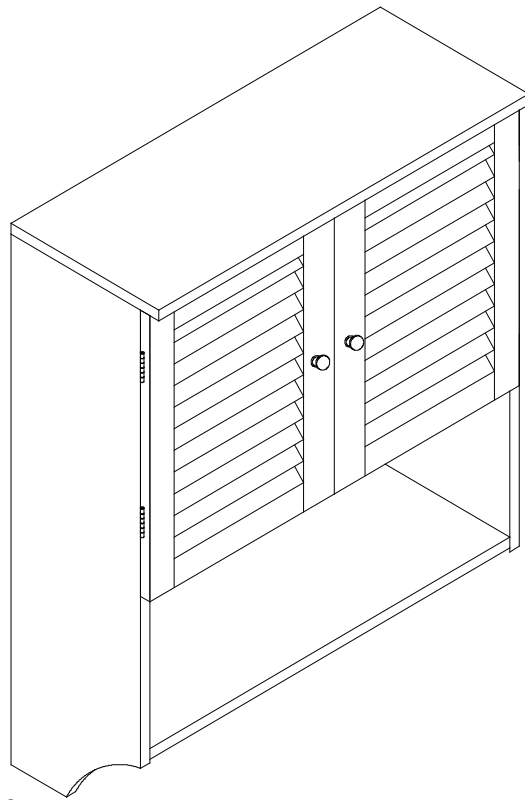


Assembly Instructions
















We have designed our furniture with you, the customer in mind. Our clear, easy to follow step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.


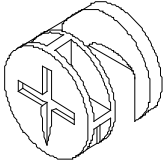

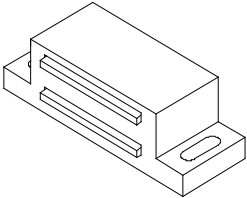

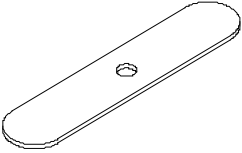


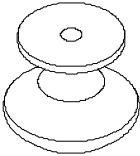

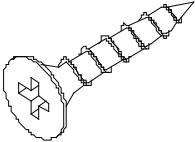
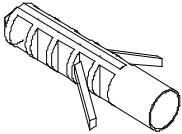
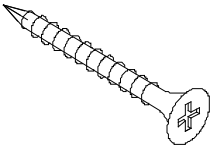
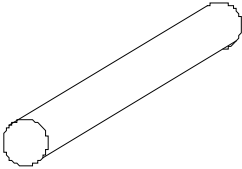


Completed Assembly

Parts Description

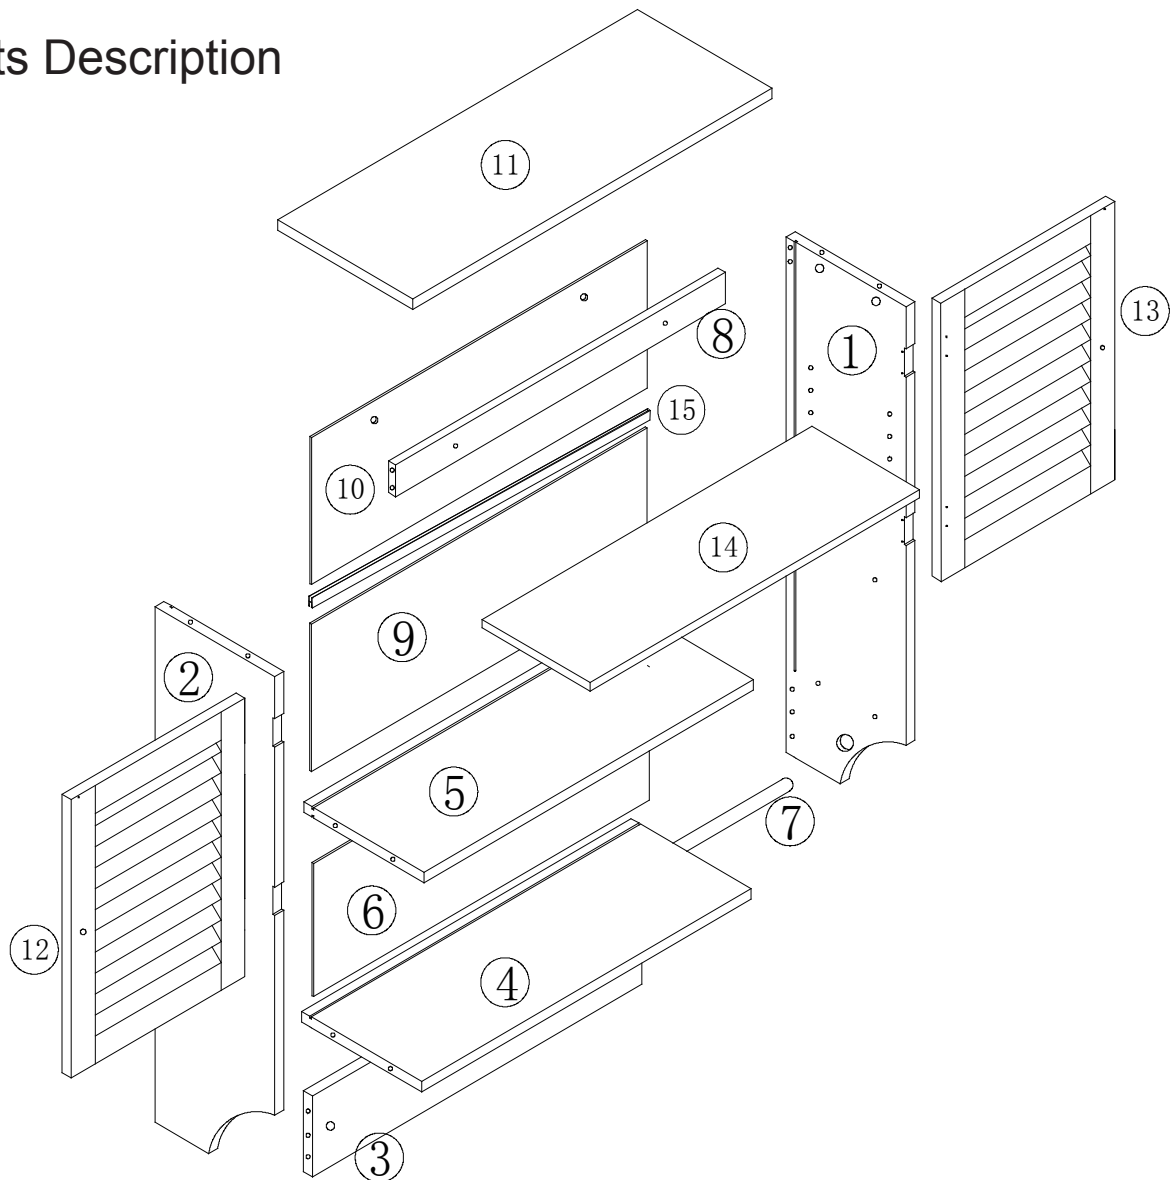
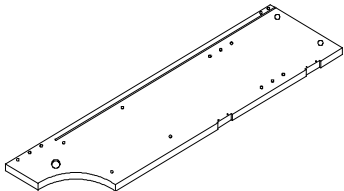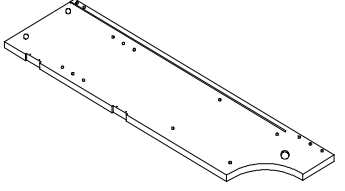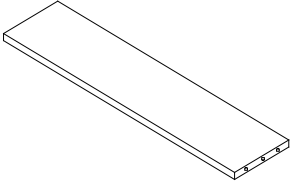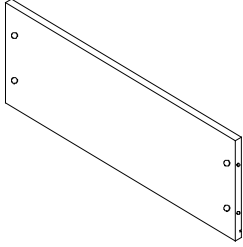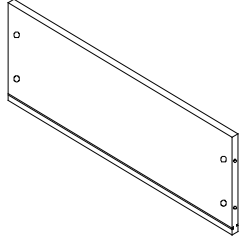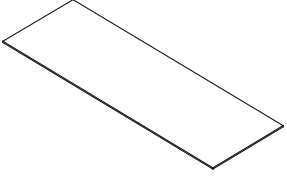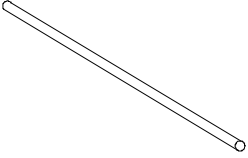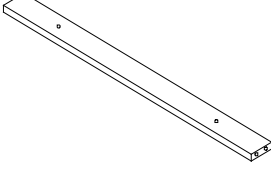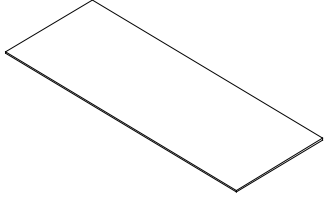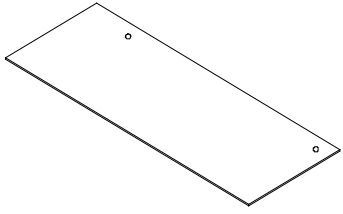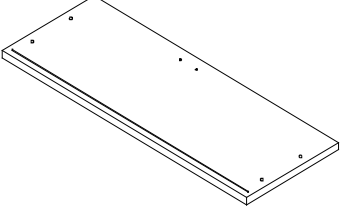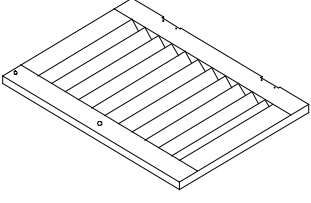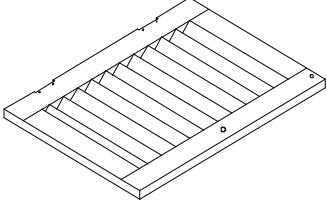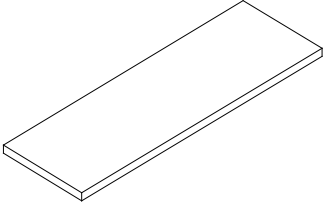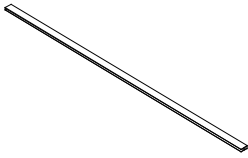
<p>1</p>  <p>Right Side Panel 1pc</p>	<p>2</p>  <p>Left Side Panel 1pc</p>	<p>3</p>  <p>Big Rear Cross bar 1pc</p>	<p>4</p>  <p>Bottom Panel 1pc</p>
<p>5</p>  <p>Middle Shelf 1pc</p>	<p>6</p>  <p>Back Panel 1pc</p>	<p>7</p>  <p>Towel Bar 1pc</p>	<p>8</p>  <p>Small Rear Cross Bar 1pc</p>
<p>9</p>  <p>Back Panel 1pc</p>	<p>10</p>  <p>Back Panel 1pc</p>	<p>11</p>  <p>Top Panel 1pc</p>	<p>12</p>  <p>Left Side Door 1pc</p>
<p>13</p>  <p>Right Side Door 1pc</p>	<p>14</p>  <p>Adjustable Shelf 1pc</p>	<p>15</p>  <p>Panel Connector 1pc</p>	




<p>A</p>  <p>Cam Bolt 14 pcs</p>	<p>B</p>  <p>Cam Lock 14 pcs</p>	<p>C</p>  <p>6mm*30mm Wooden Dowel 8 pcs</p>	<p>D</p>  <p>Magnet 1 pc</p>
<p>E</p>  <p>3mm*14mm Screw 2 pcs</p>	<p>F</p>  <p>Metal Plate 2 pcs</p>	<p>G</p>  <p>3mm*12mm Screw 2 pcs</p>	<p>H</p>  <p>Bolt 2 pcs</p>
<p>I</p>  <p>Knob 2 pcs</p>	<p>J</p>  <p>Metal Hinge 4 pcs</p>	<p>K</p>  <p>3mm*12mm Screw 16 pcs</p>	<p>L</p>  <p>Plastic Anchor 2 pcs</p>
<p>M</p>  <p>4mm*40mm Screw 2 pcs</p>	<p>N</p>  <p>Metal Shelf Support 4 pcs</p>		



A×5

Step 1 Screw Cam Bolt (A) into Left Side Panel (2)

2 Left Side Panel

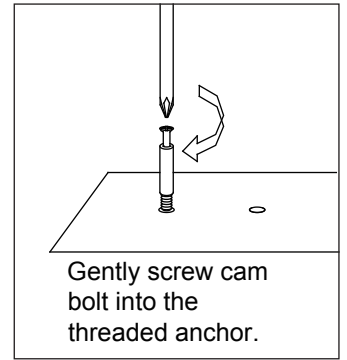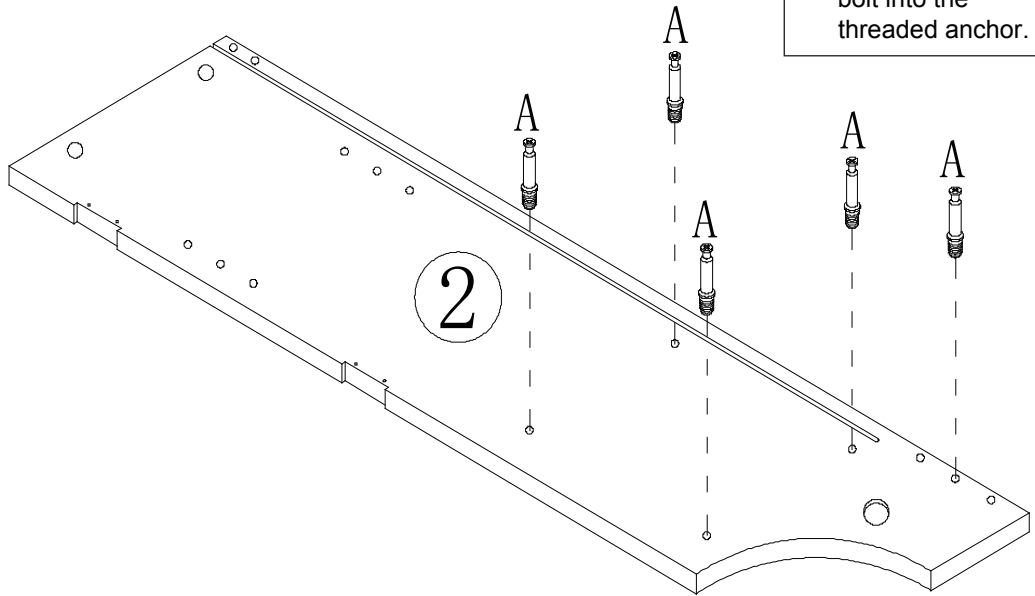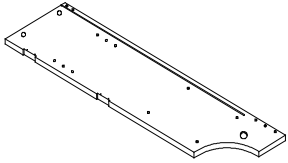



Gently screw cam bolt into the threaded anchor.




A×5

Step 2 Screw Cam Bolt (A) into Right Side Panel (1)

1 Right Side Panel

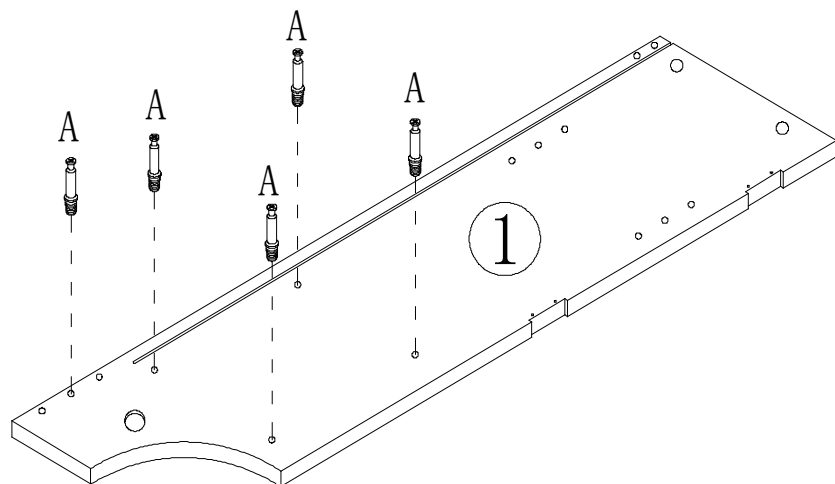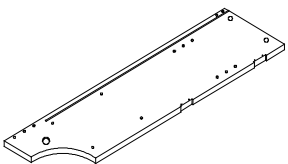




B×1





C×2


3 Big Rear Cross Bar

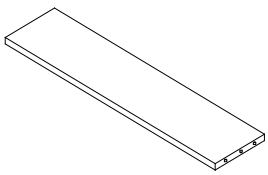

Step 3

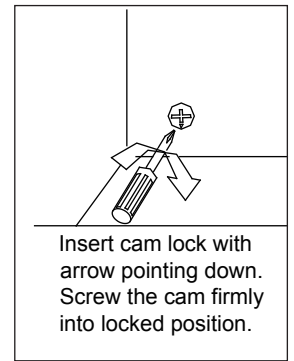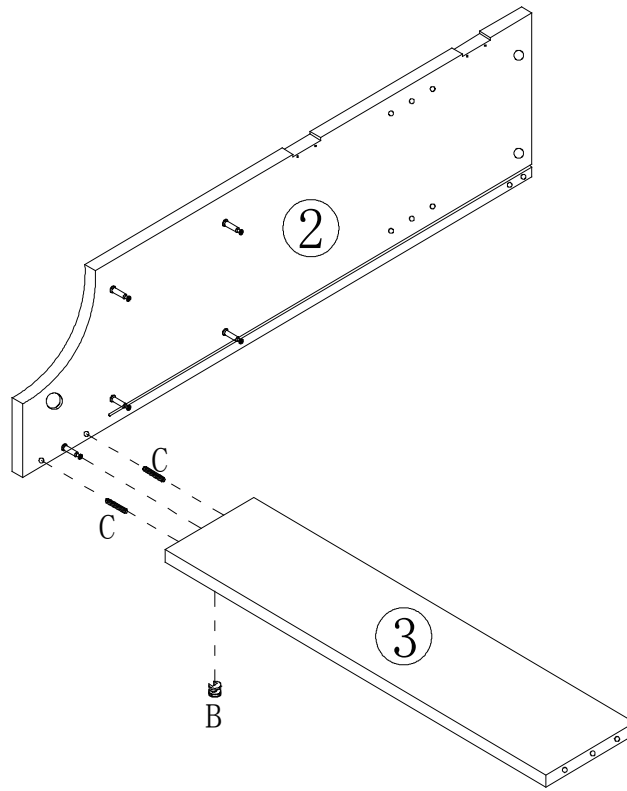


Attach Big Rear Cross Bar (3) to Left Side Panel (2) by inserting Wooden Dowel (C) and Cam Lock (B) into Big Rear Cross Bar (3). Rotate clockwise to secure Cam Lock (B) in place.





B×2

4 Bottom Panel

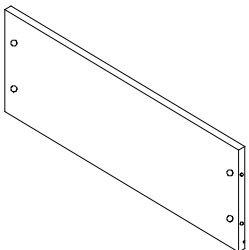


Step 4 Attach Bottom Panel (4) to Left Side Panel (2) by inserting Cam Lock (B) into Bottom Panel (4). Rotate clockwise to secure Cam Lock (B) in place.

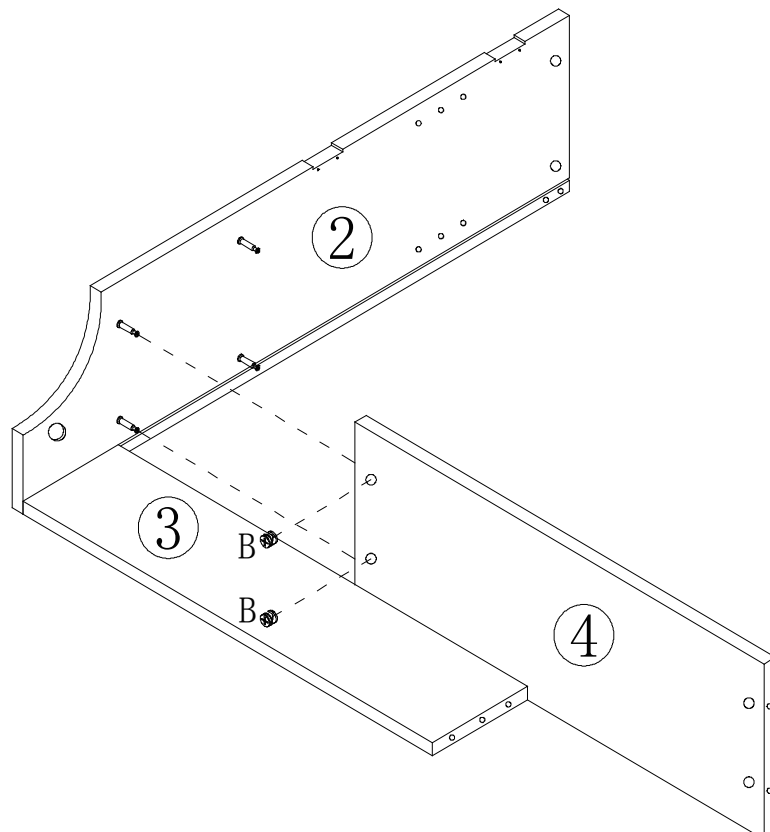




B×2


5 Middle Shelf

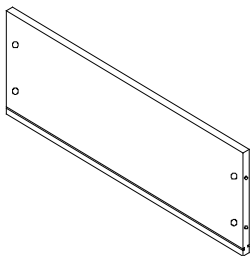


Step 5 Attach Middle Shelf (5) to Left Side Panel (2) by inserting Cam Lock (B) into Middle Shelf (5). Rotate clockwise to secure Cam Lock (B) in place.

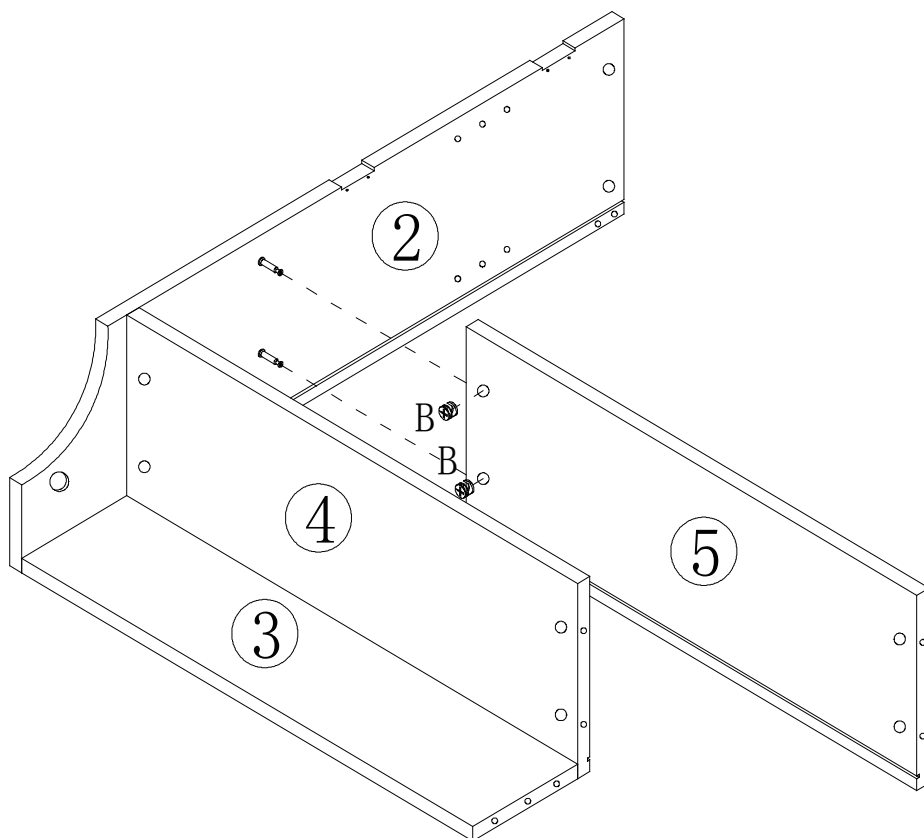

6 Back Panel

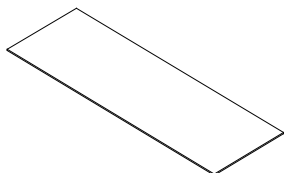

Step 6 Insert Back Panel (6) into the assembly.

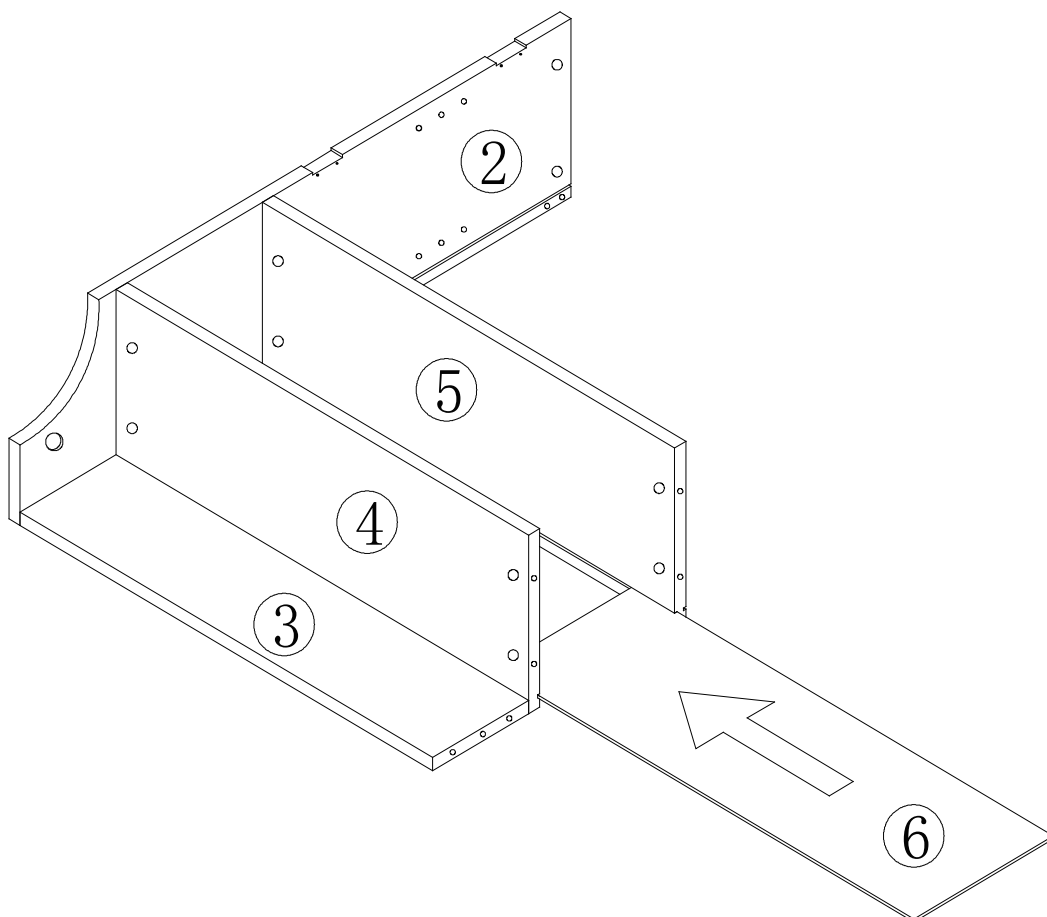







C×2

Step7 Attach Small Rear Cross Bar (8) to Left Side Panel (2) by inserting Wooden Dowel (C). Insert Towel Bar (7) into the bottom of Left Side Panel (2).

7 Towel Bar

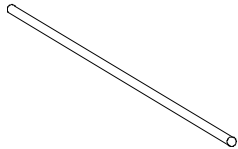

8 Small Rear Cross Bar

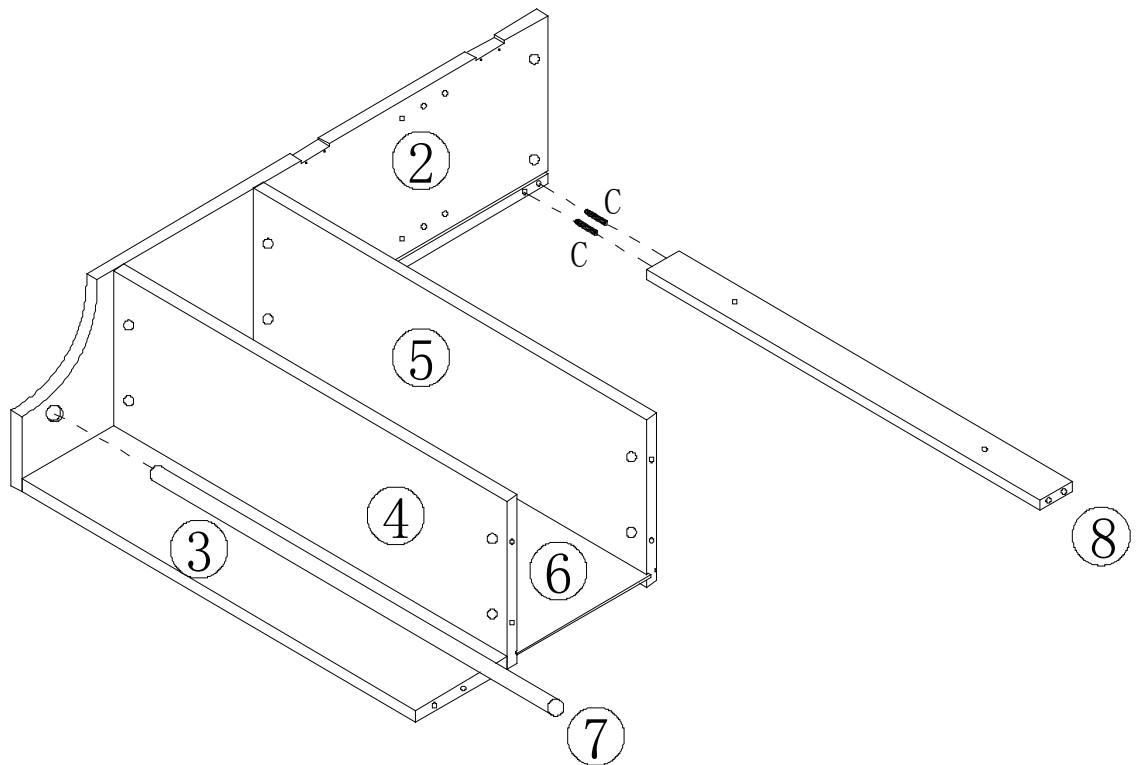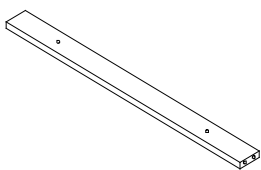



B×5

Step 8




C×4

1 Right Side Panel

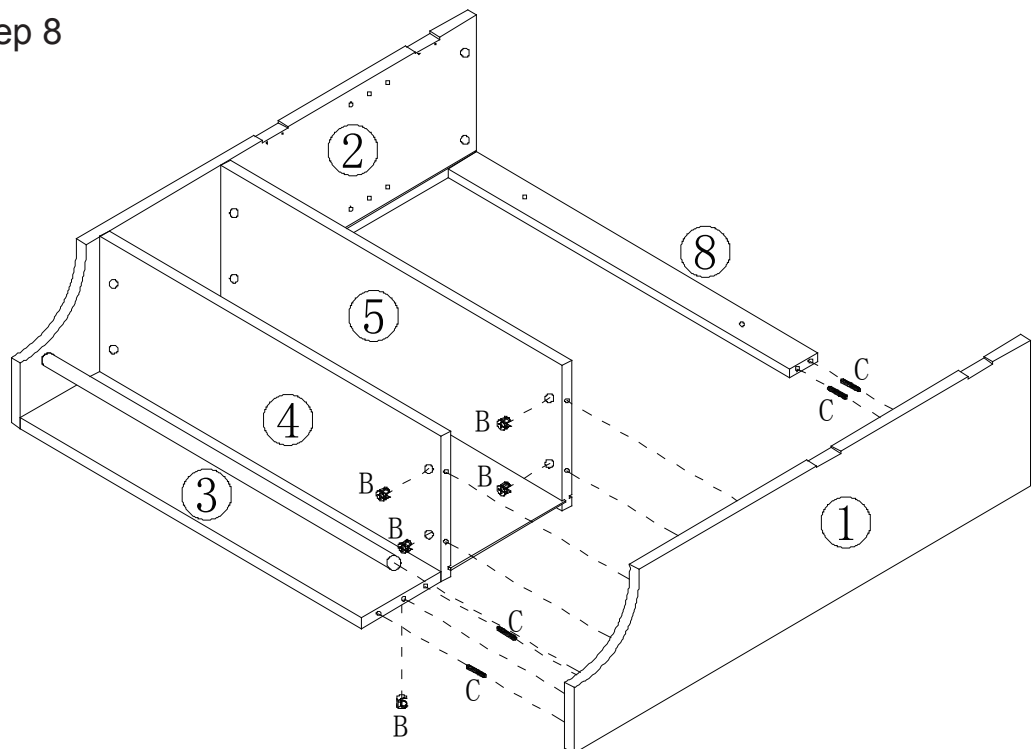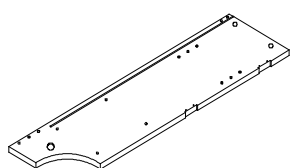


1. Insert Cam Lock (B) to Middle Shelf (5), Bottom Panel (4) and Big Rear Cross Panel (3).
2. Attach Right Side Panel (1) to the assembly by inserting Wooden Dowel (C).
3. Rotate clockwise to secure Cam Lock (B) in place.


9 Back Panel

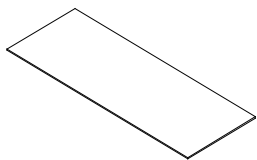


10 Back Panel

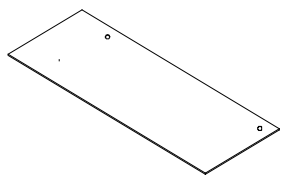


15 Panel Connector

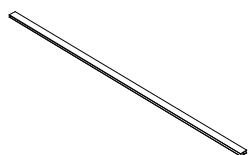

Step 9 Insert Back Panel (9), Back Panel (10) and Panel Connector (15) into the assembly.

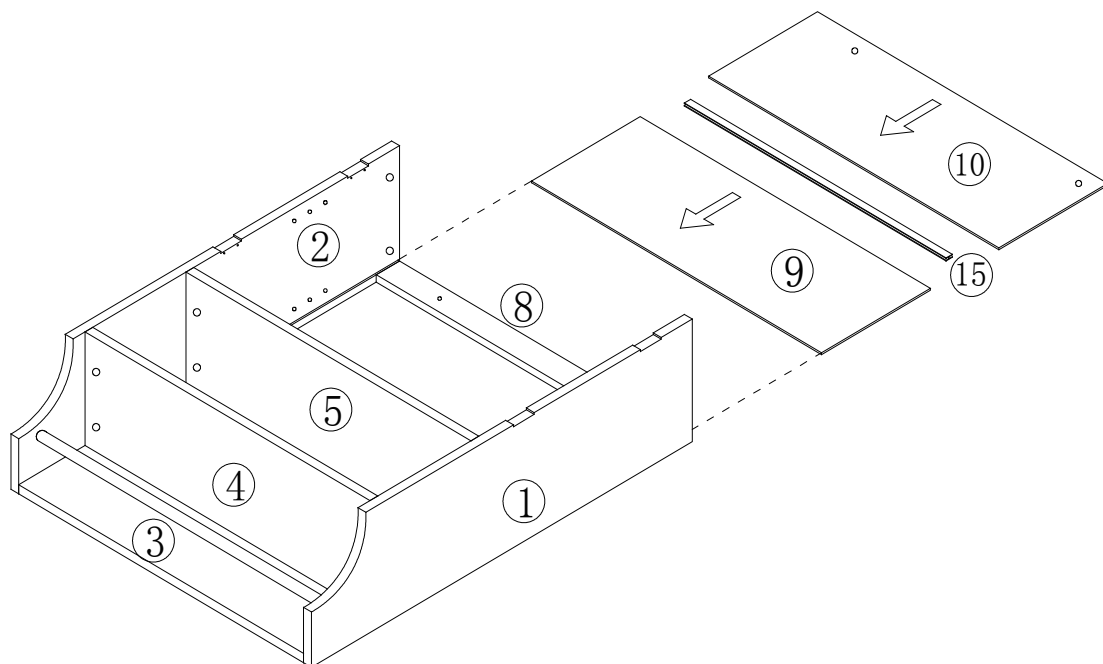

A×4




D×1




E×2


11 Top Panel

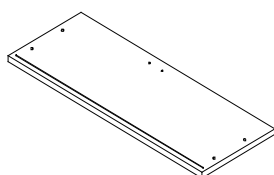

Step 10

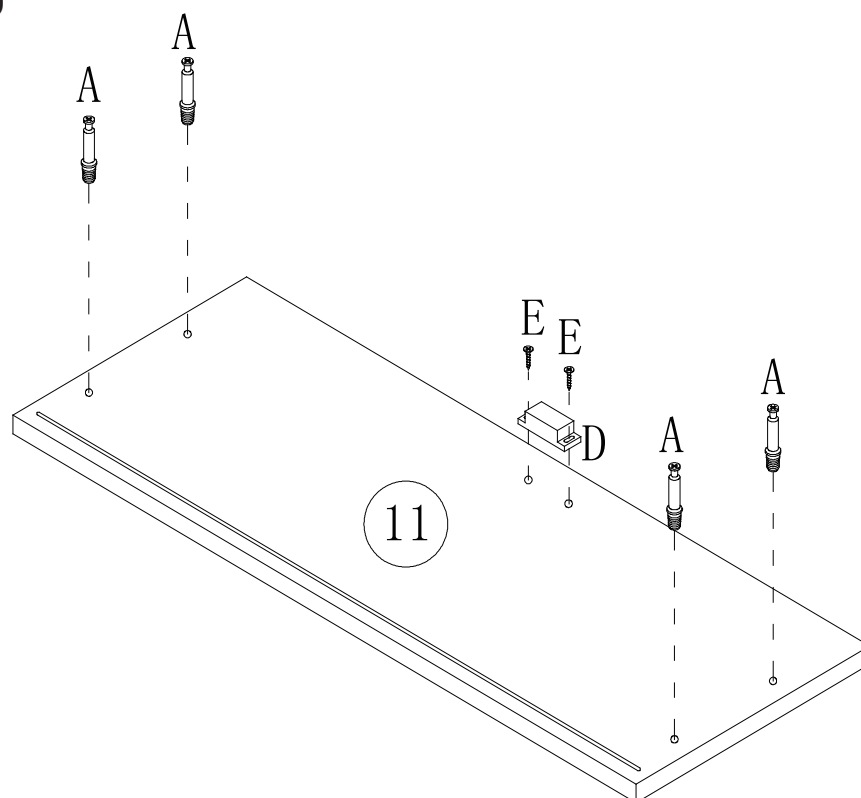


Screw Cam Bolt (A) into the inner side of Top Panel (11). Attach Magnet (D) to Top Panel (11) using Screw (E), with the open side near the front edge.



B×4

Step 11 Attach Top Panel (11) to the assembly using Cam Lock (B). Rotate clockwise to secure Cam Lock (B) in place.

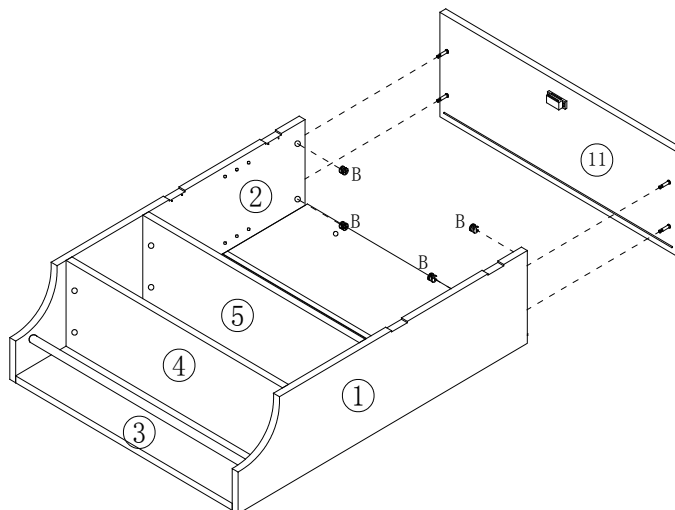

F×2



G×2

Step 12



1. Lay down Right Side Door (13), inner side up.
2. Screw Metal Hinges (J) into Right Side Door (13) using Screw (K).
3. Screw Metal Plate (F) into Right Side Door (13) using Screw (G).
4. Screw Knob (I) into Right Side Door (13) using Bolt (H).
5. Repeat the steps to Left Side Door (12).



H×2



I×2

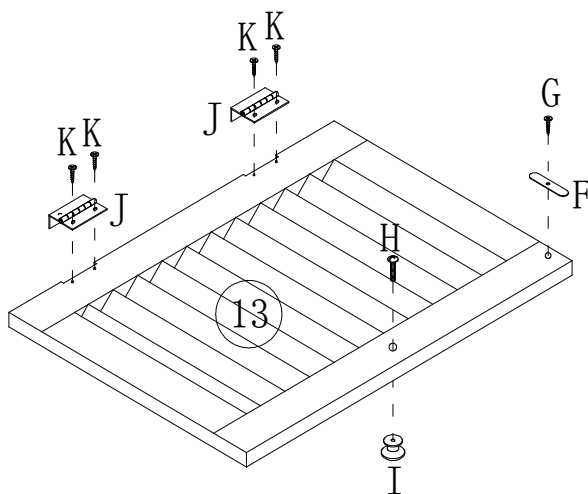


J×4






K×8

12 Left Side Door

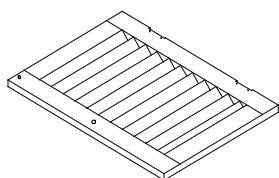



13 Right Side Door

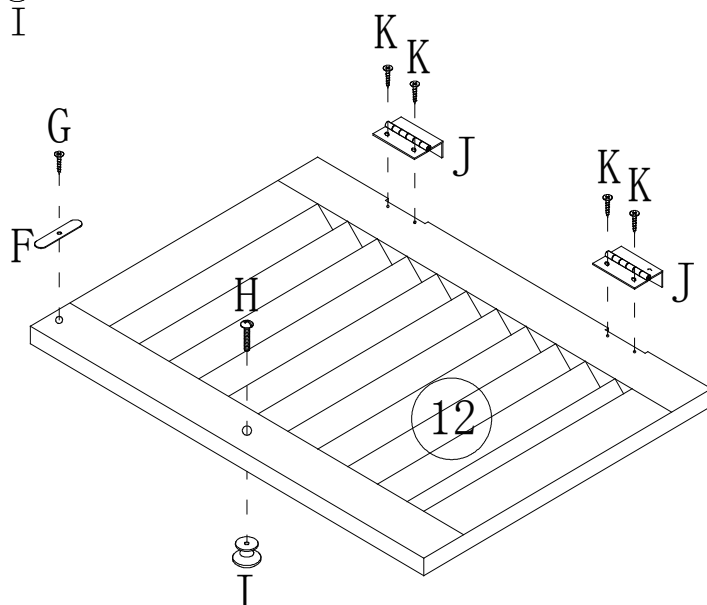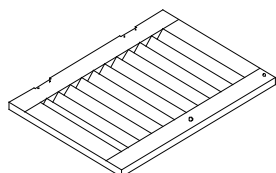




Kx8

Step 13 Attach the doors to the assembly using Screw (K).

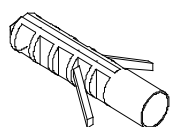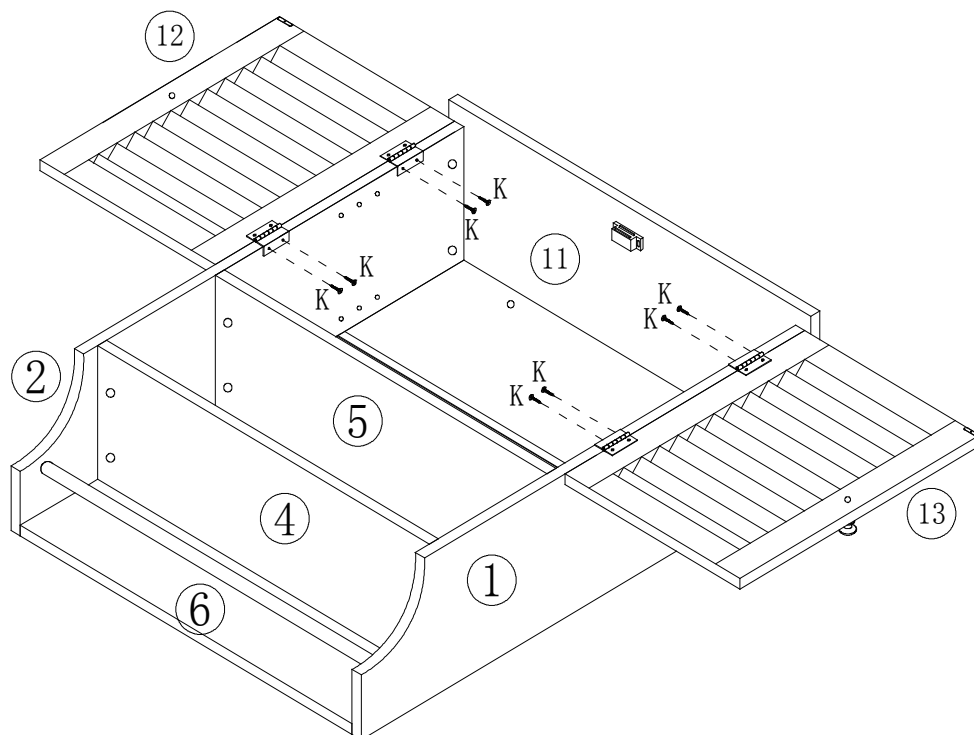


Lx2

Step 14




Mx2

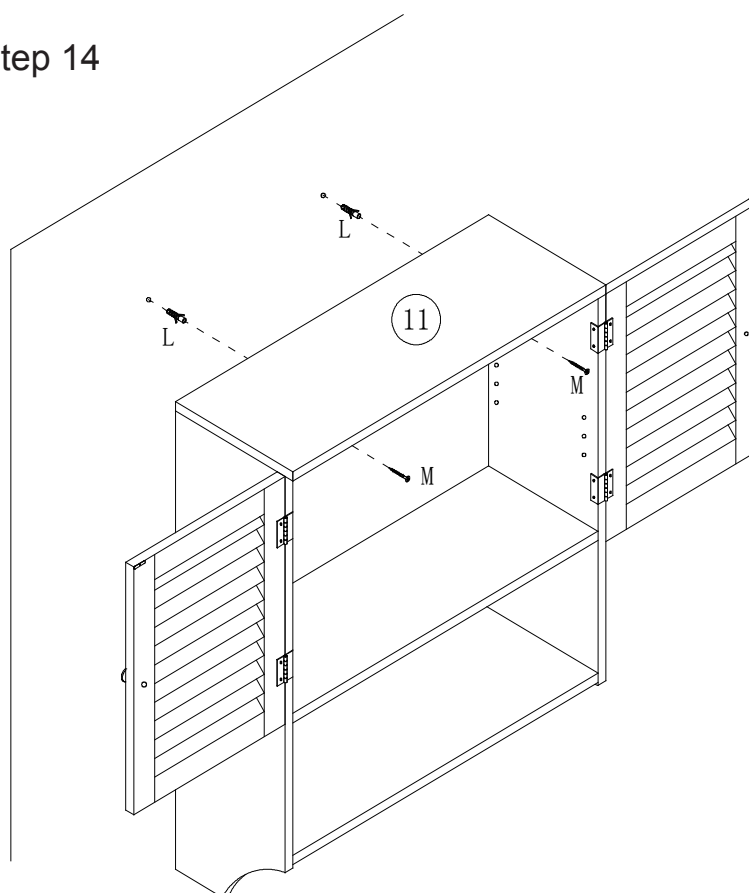




1. According to position of the pre-drilled holes in the Top Panel (11), drill two holes smaller than Anchor (L).
2. Insert Plastic Anchor (L) into holes on the wall, then hang the cabinet using Screw (M).

Step 15 Place Adjustable Shelf (14) inside the cabinet using Metal Shelf Support (N).



N×4

14 Adjustable Shelf

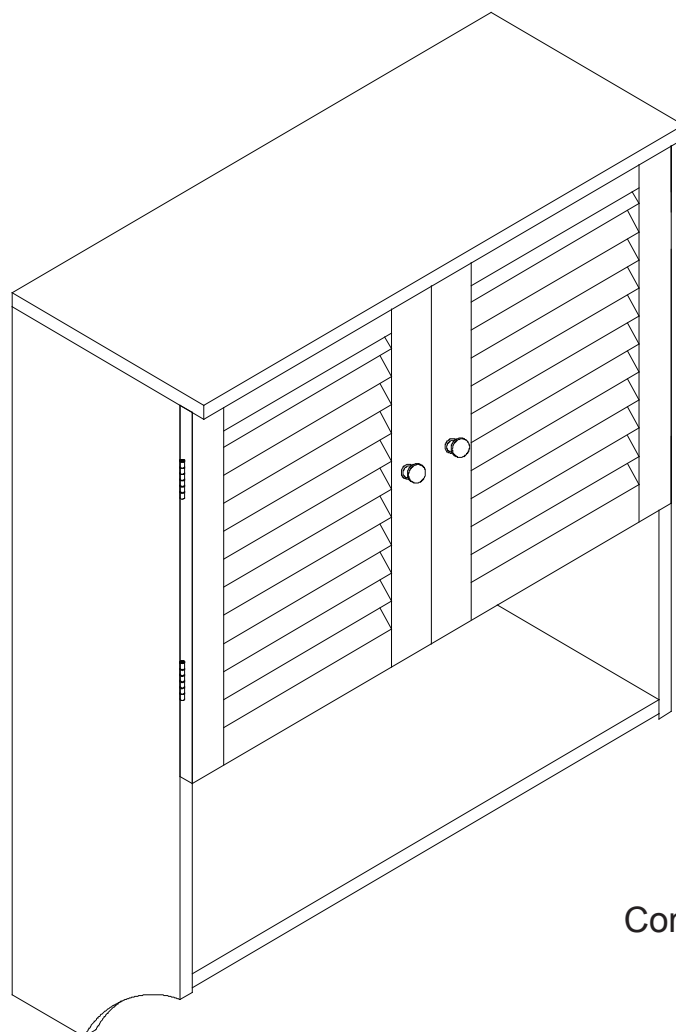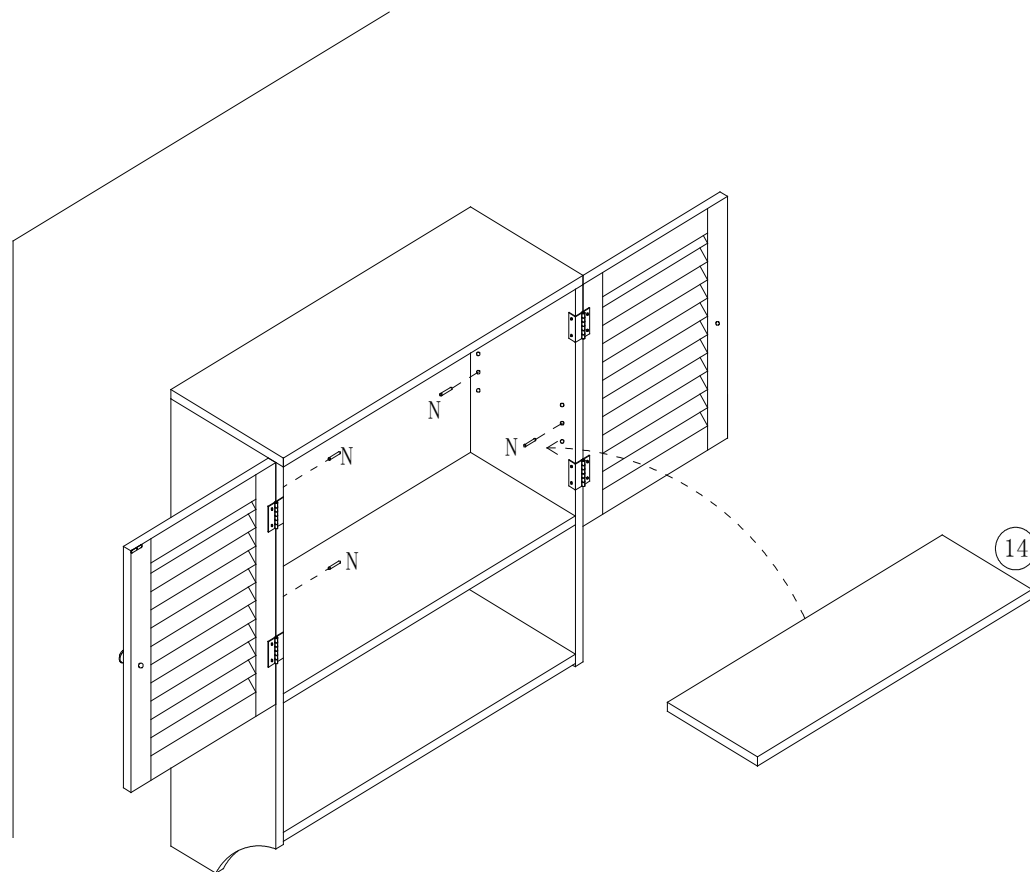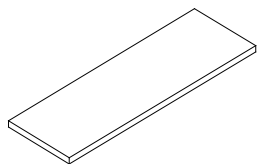

Completed Assembly