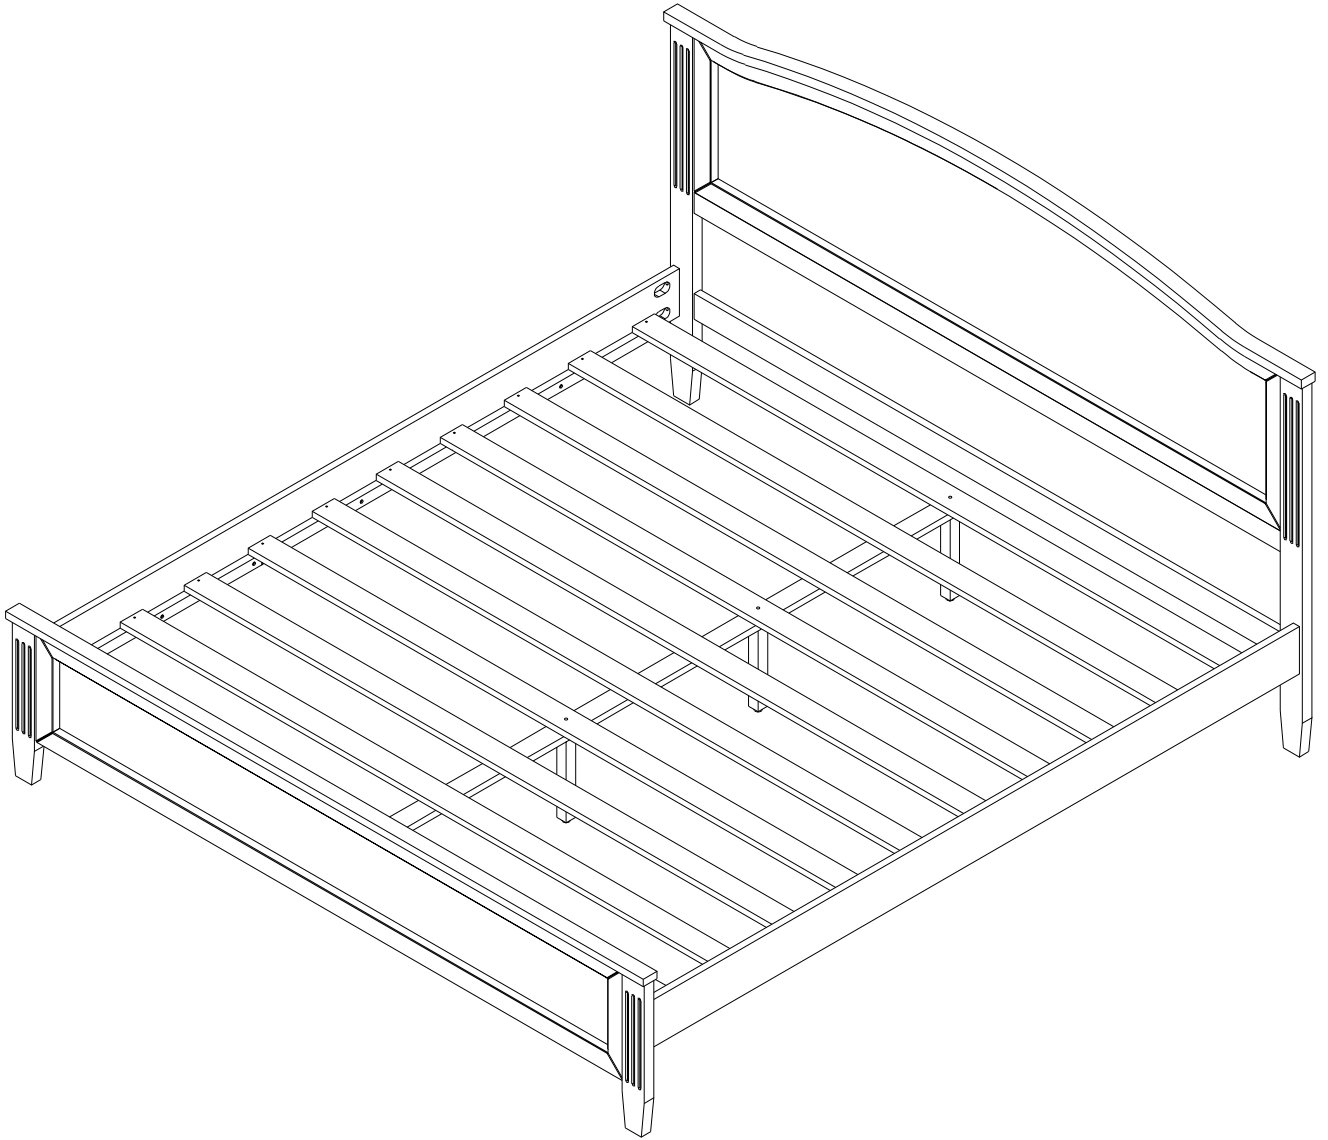
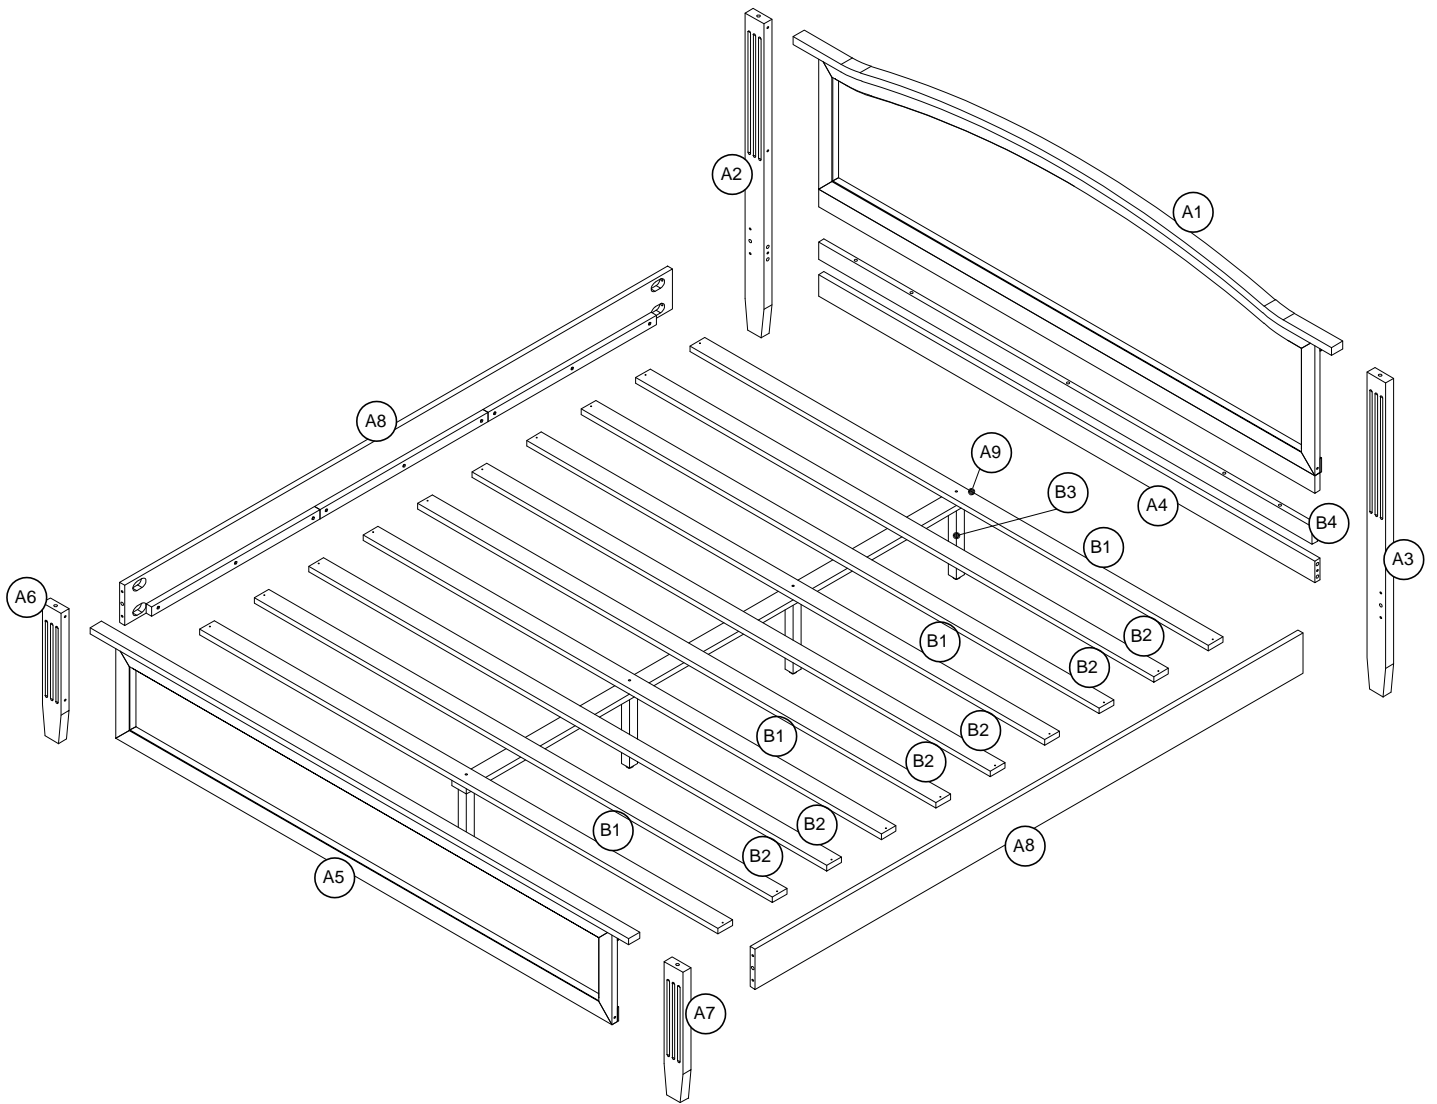


ASSEMBLY INSTRUCTIONS
INSTRUCTIONS DE MONTAGE



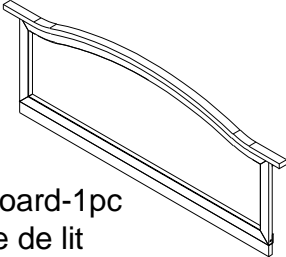


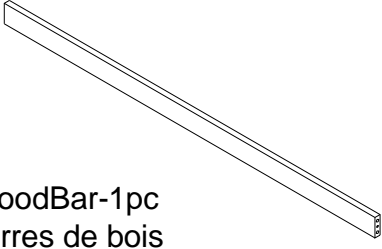
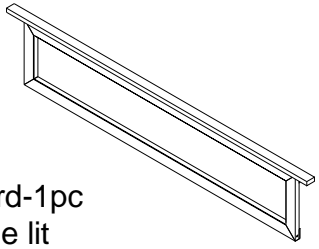


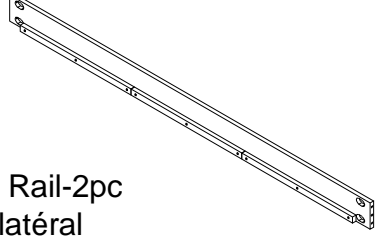
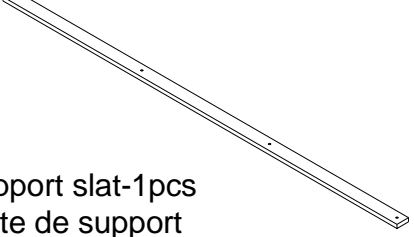
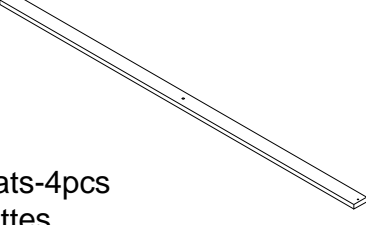
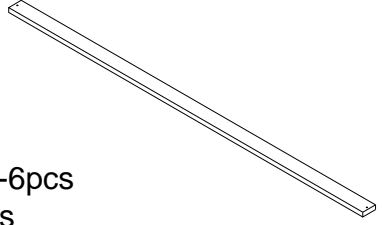

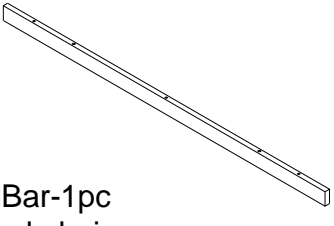
ASSEMBLY INSTRUCTION

INSTRUCTIONS DEMONTAGE



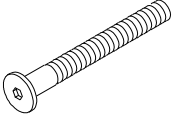






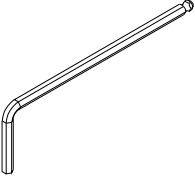
Part List & Hardware List

Liste des pièces et liste du matériel

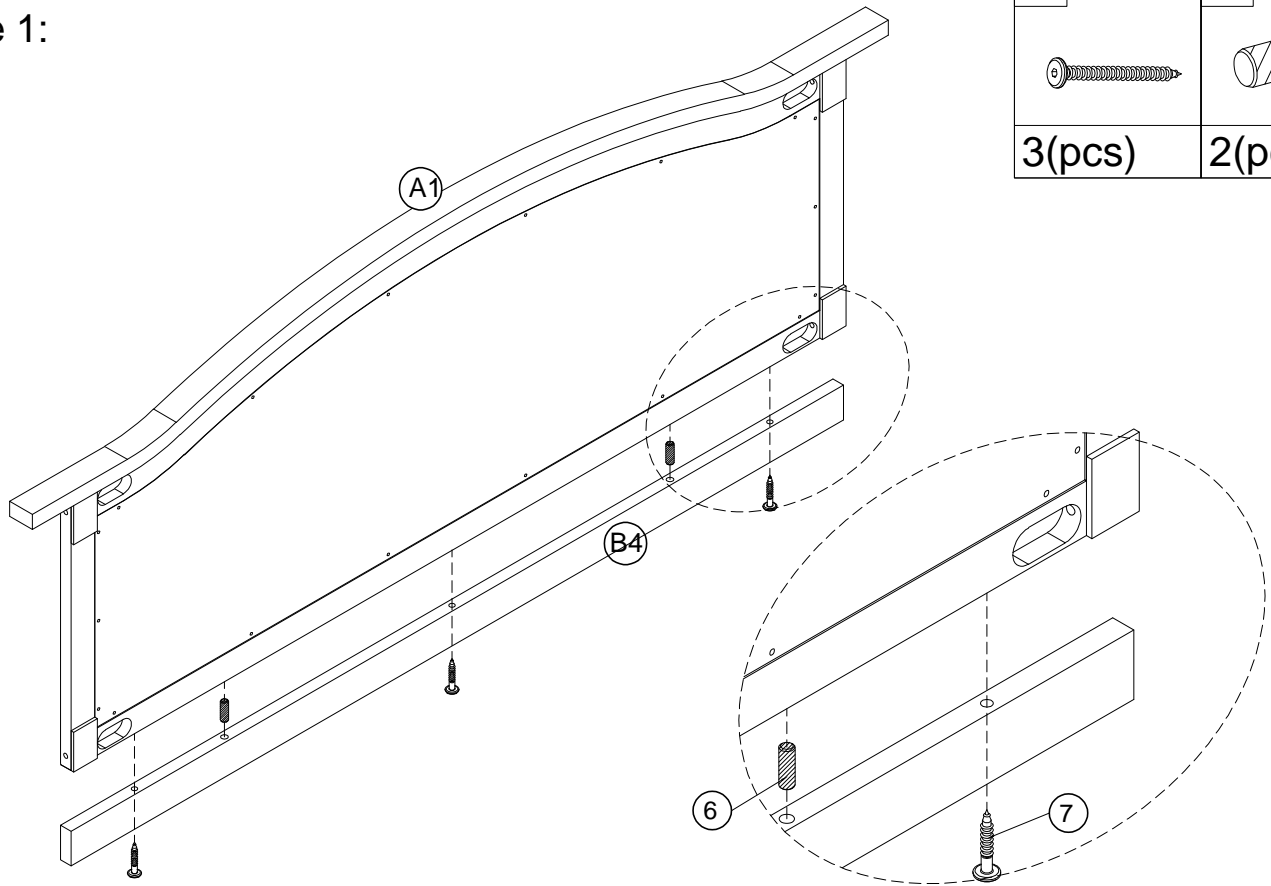
A1  Headboard-1pc Tête de lit	A2  Leg-1pc Jambe	A3  Leg-1pc Jambe
A4  WoodBar-1pc Barres de bois	A5  Footboard-1pc Pied de lit	A6  Leg-1pc Jambe
A7  Leg-1pc Jambe	A8  Side Rail-2pc Rail latéral	A9  Support slat-1pcs latte de support
B1  Slats-4pcs Lattes	B2  Slats-6pcs Lattes	B3  Leg-4pcs Jambe
B4  WoodBar-1pc Barres de bois		



Hardware List

Liste du matériel

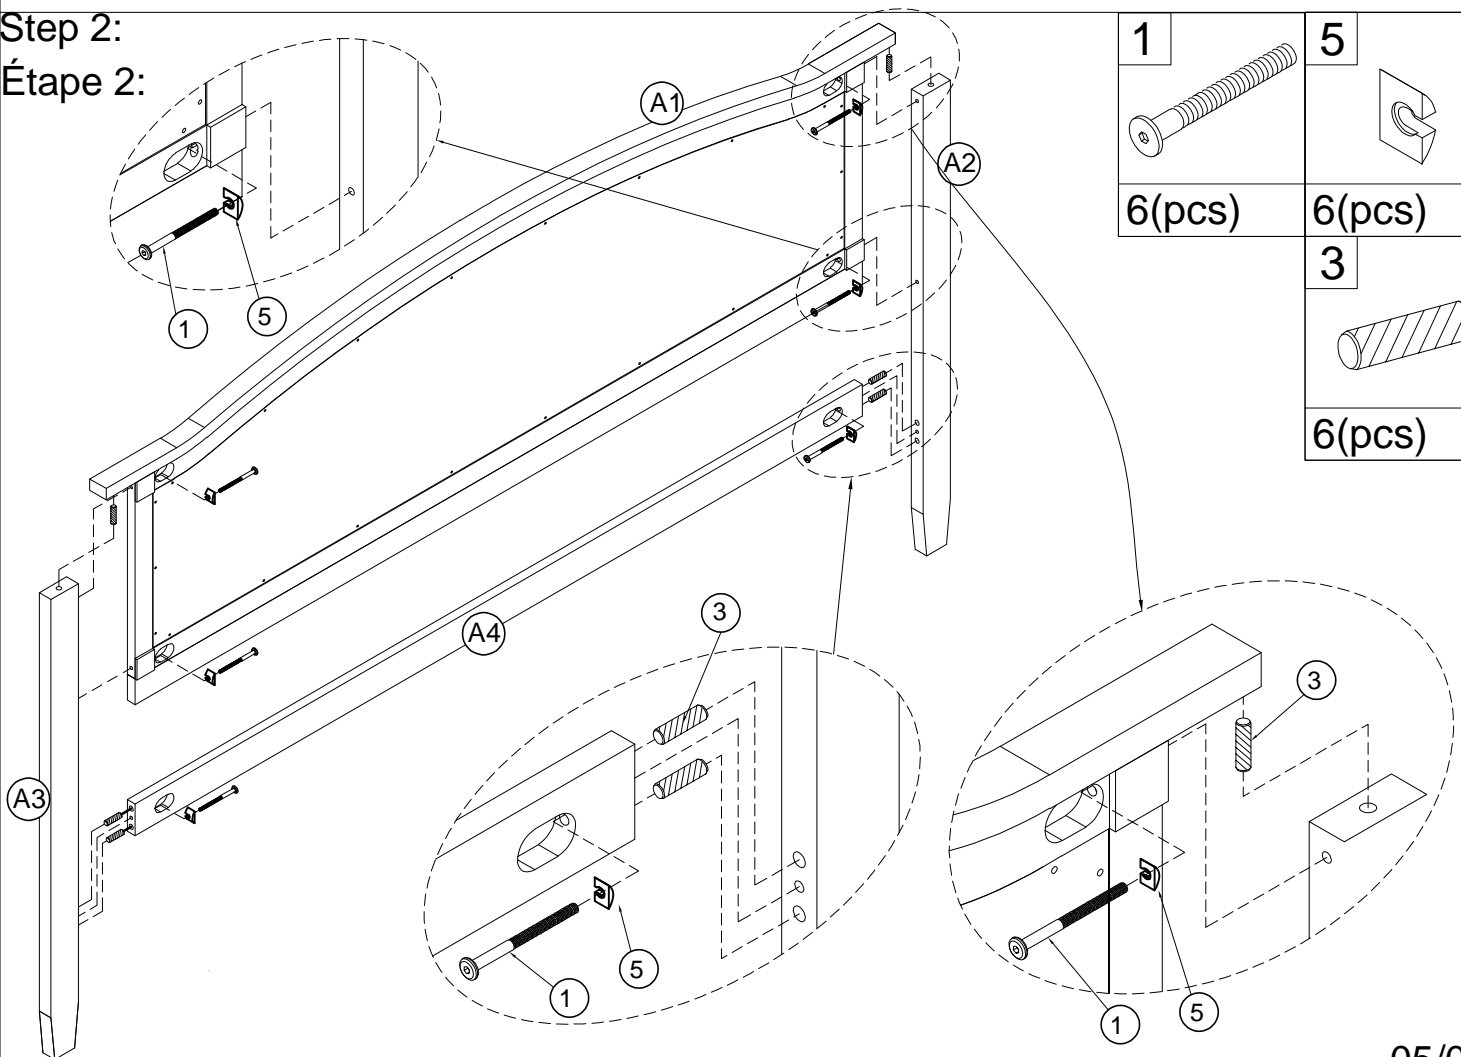
<p>1</p>  <p>Bolts Ø1/4" x70 mm - 10pcs Boulon</p>	<p>2</p>  <p>Bolts Ø1/4" x50 mm - 12pcs Boulon</p>	<p>3</p>  <p>Wood dowel Ø10 x 40 mm - 14pcs Cheville en bois</p>
<p>4</p>  <p>Wood Screws M4 x 30mm - 20pcs Les vis à bois</p>	<p>5</p>  <p>Washer - 18pcs rondelle frein</p>	<p>6</p>  <p>Screws 1/4" x 70mm -3pcs Vis</p>
<p>7</p>  <p>Wood dowel Ø8 x 30 mm - 2pcs Cheville en bois</p>	<p>8</p>  <p>Allen Key - 1pc</p>	

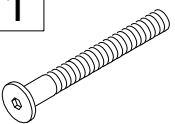


Step 1:
Étape 1:



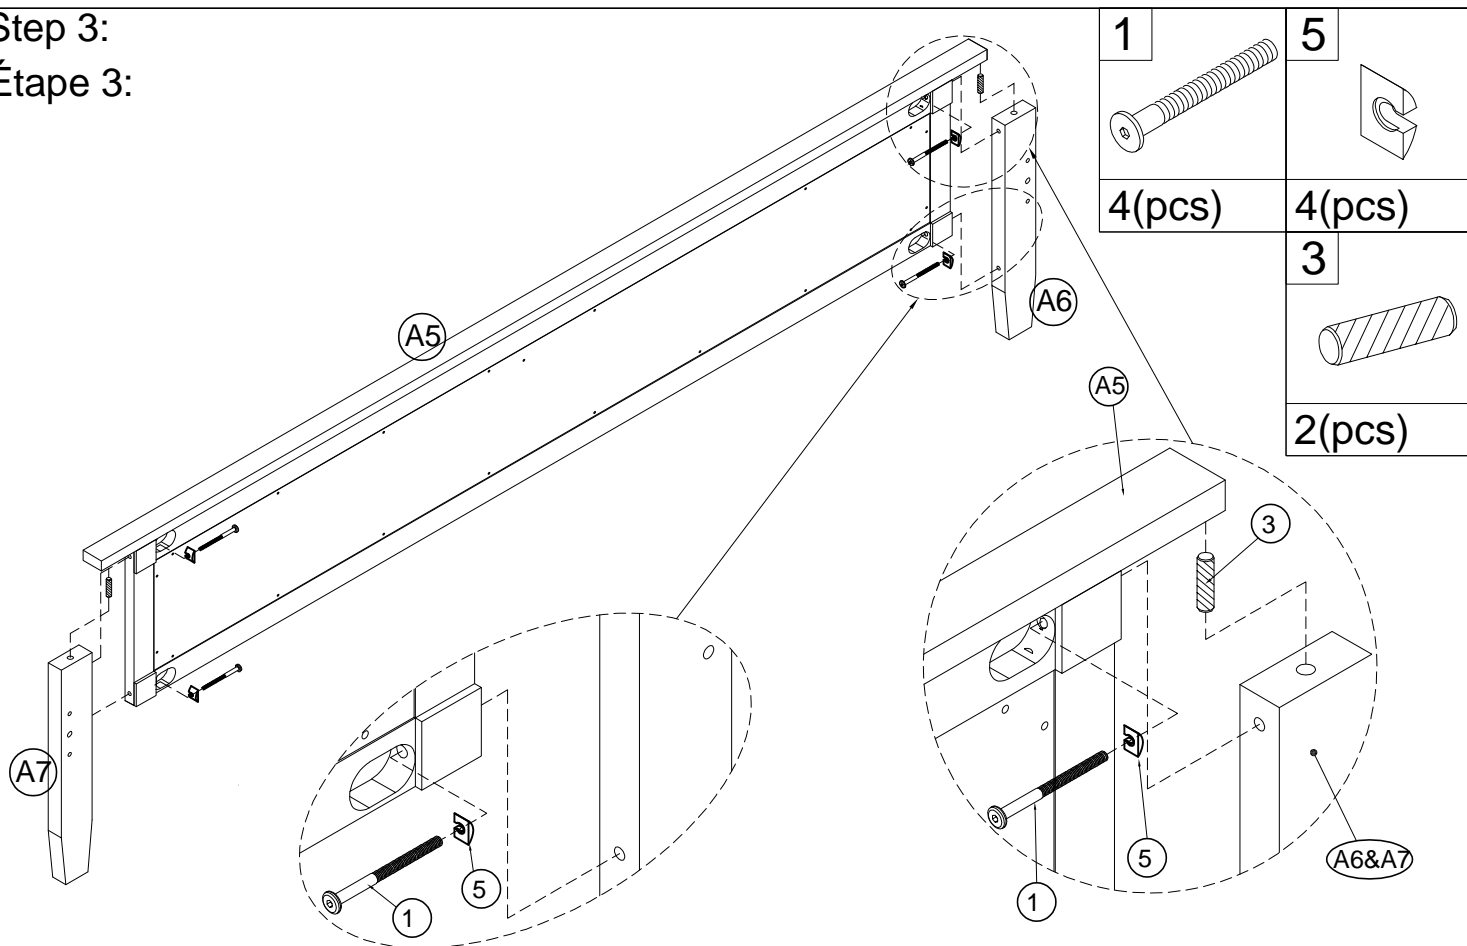
6	7
	
3(pcs)	2(pcs)

Step 2:
Étape 2:

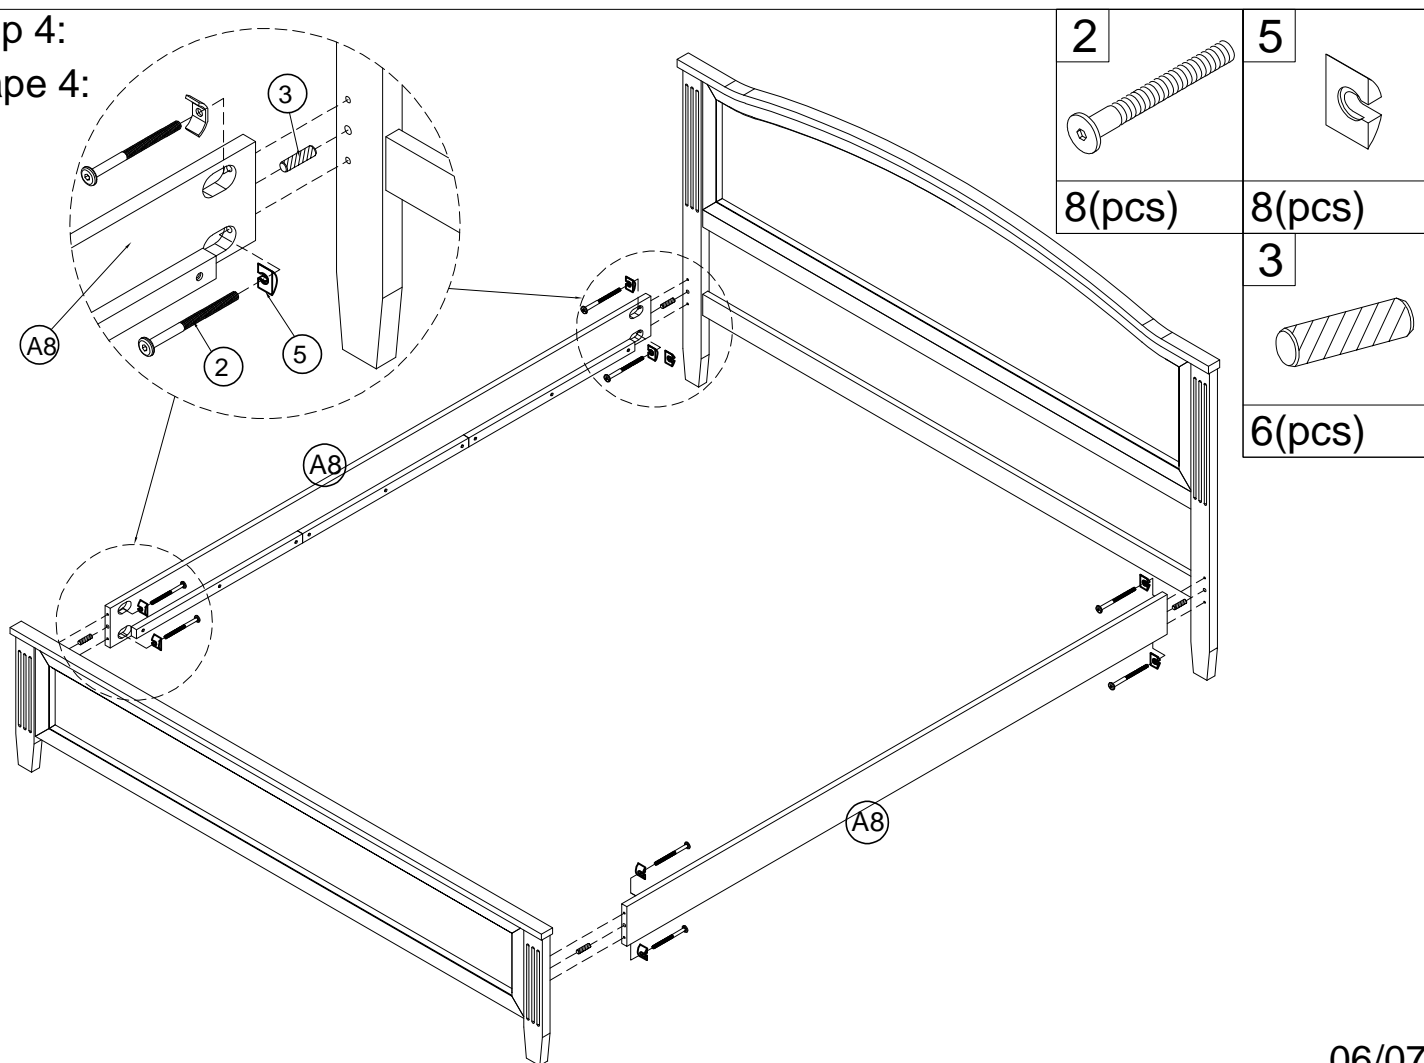


1	5
	
6(pcs)	6(pcs)
	3
	
	6(pcs)

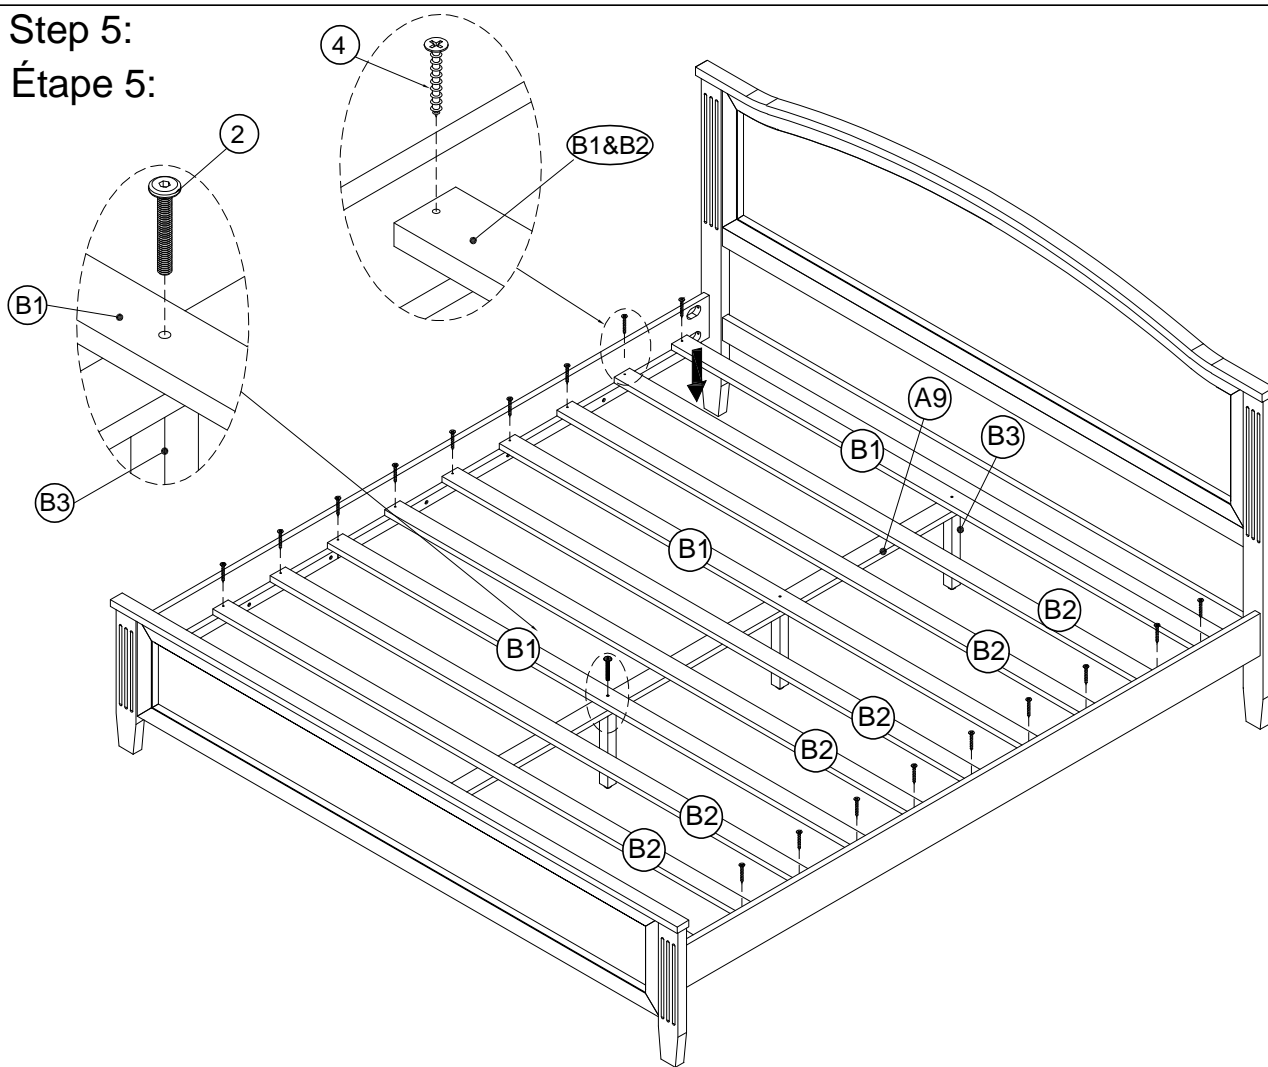
Step 3:
Étape 3:





Step 4:
Étape 4:



Step 5:
Étape 5:



4	
20(pcs)	
2	
4(pcs)	

Finish

