



Installation instruction

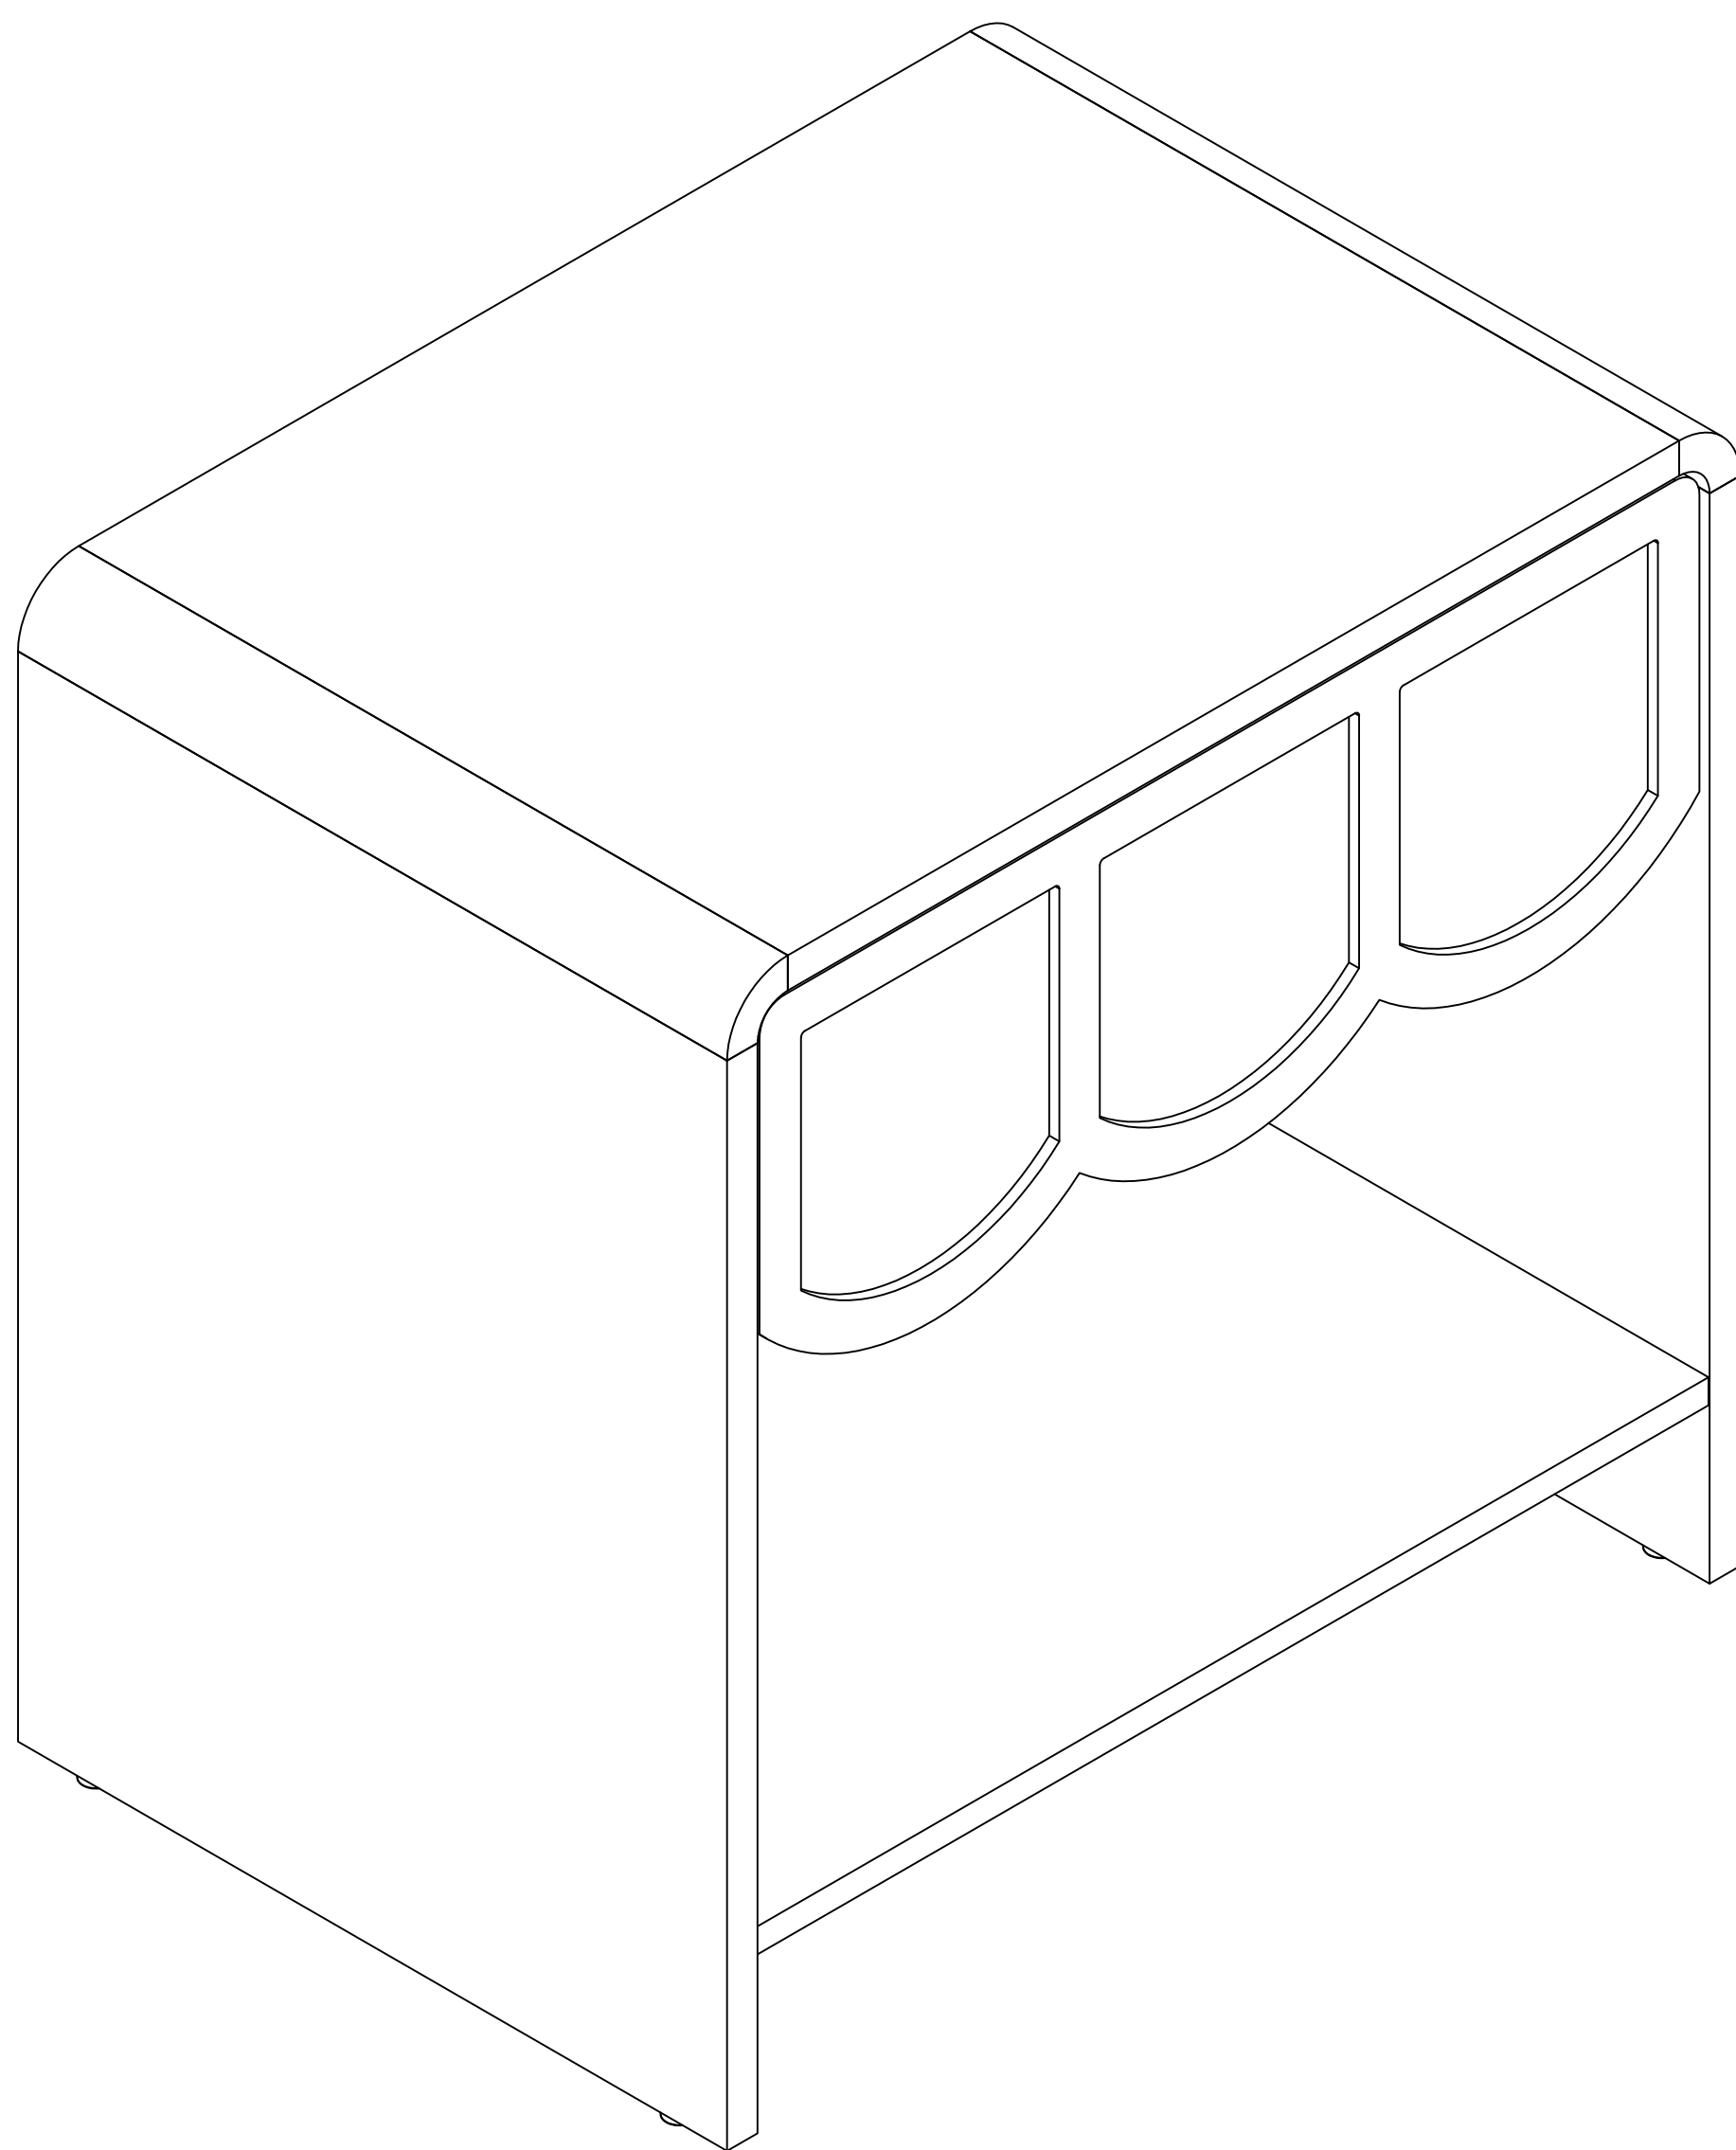

Assembling


Estimated time for assembly

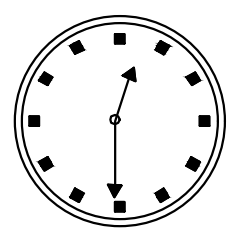


45 : 00

What you need


- Use the packaging carton as a working surface to prevent product damage during assombly
- Phillips head screwdriver

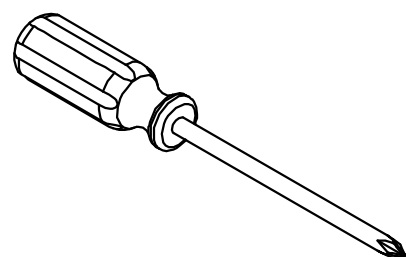

Weight Limitation

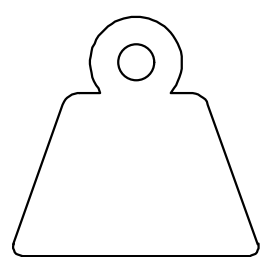

100 | 35
lbs table top lbs per

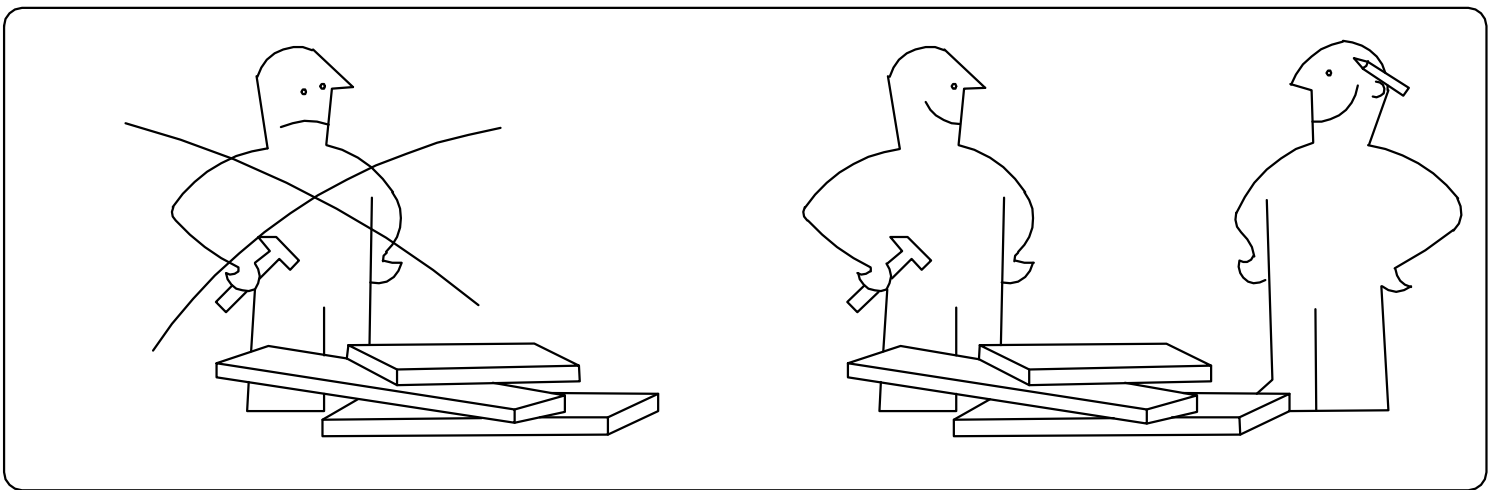


What' included

Code	Description	Qty
A	Cam Bolt M6X35MM	26
B	Cam Lock Ø15X10MM	26
C	Wooden Dowel Ø8X30MM	14
D	Screw M3X14MM	8
E	Screw M4X35MM	4
F	Tack	4
G	Perforated paste	4
CL	Left mother extended orbit	1
CR	Left mother extended orbit	1
DL	Left public extension track	1
DR	Right public extension track	1


The Hardwares

A x 26

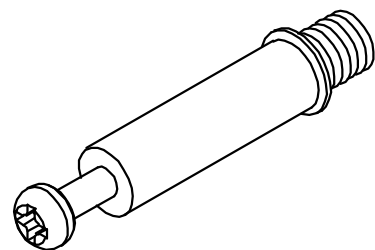


Ø6×35 mm

B x 26

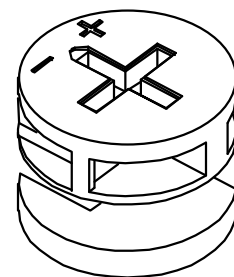


Ø15×10 mm

C x 14

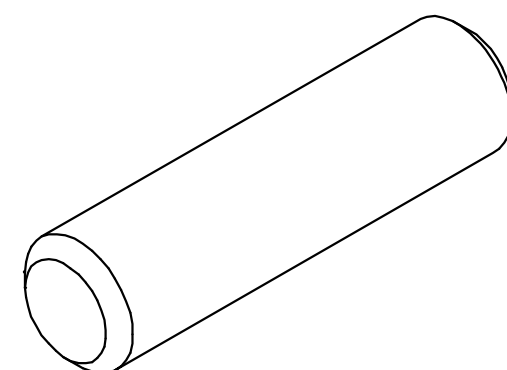


Ø8×30 mm

D x 8

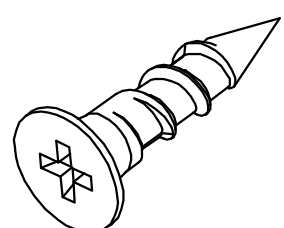


Ø3×14 mm

E x 4

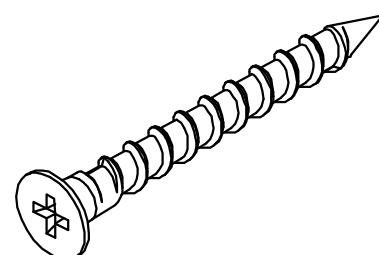


Ø4×35 mm


F x 4

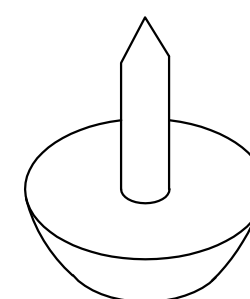


G x 4

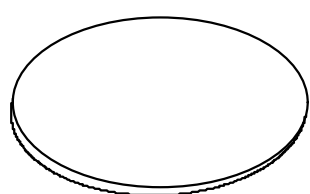


CL x 1

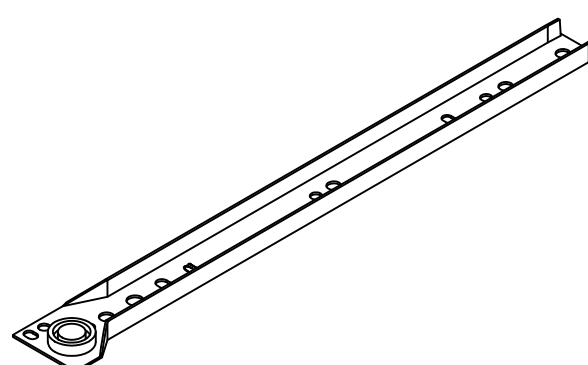


CR x 1

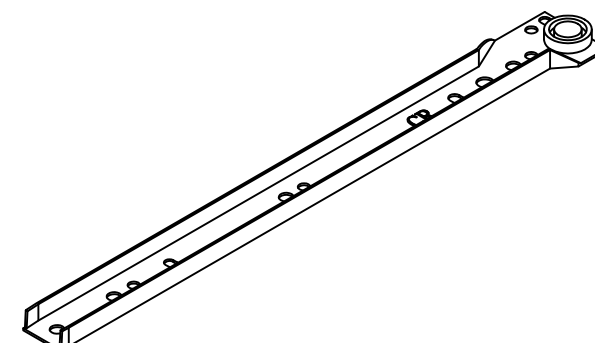

DL x 1

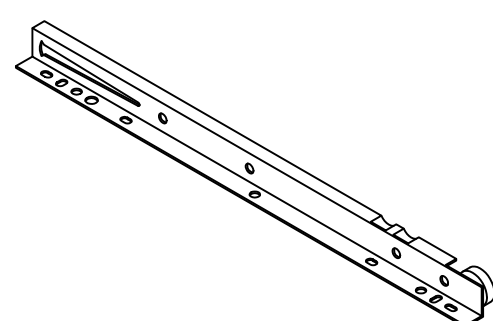

DR x 1

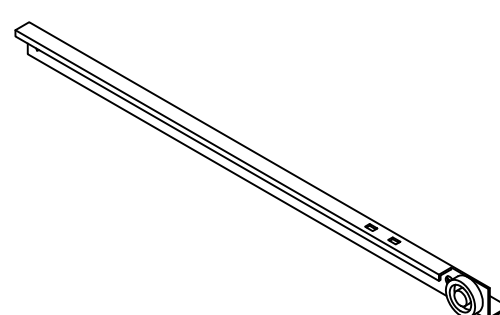


IMPORTANT:

- 1.Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
- 2.Do not over tighten screws and bolts to avoid stripping
- 3.Please use hand tools to assemble this product. Do not use power tools.


Included Accessories



Code	Description	Qty
1	Top panel	1
2	Bottom plate	1
3	Left side plate	1
4	Right side plate	1
5	Trim strip	2
6	Back plate	1
7	Front brace	1
8	Draw-panel	1
9	Left drawer side	1
10	Right drawer side	1
11	Extraction backboard	1
12	Draw bottom plate	1

The Accessoriess

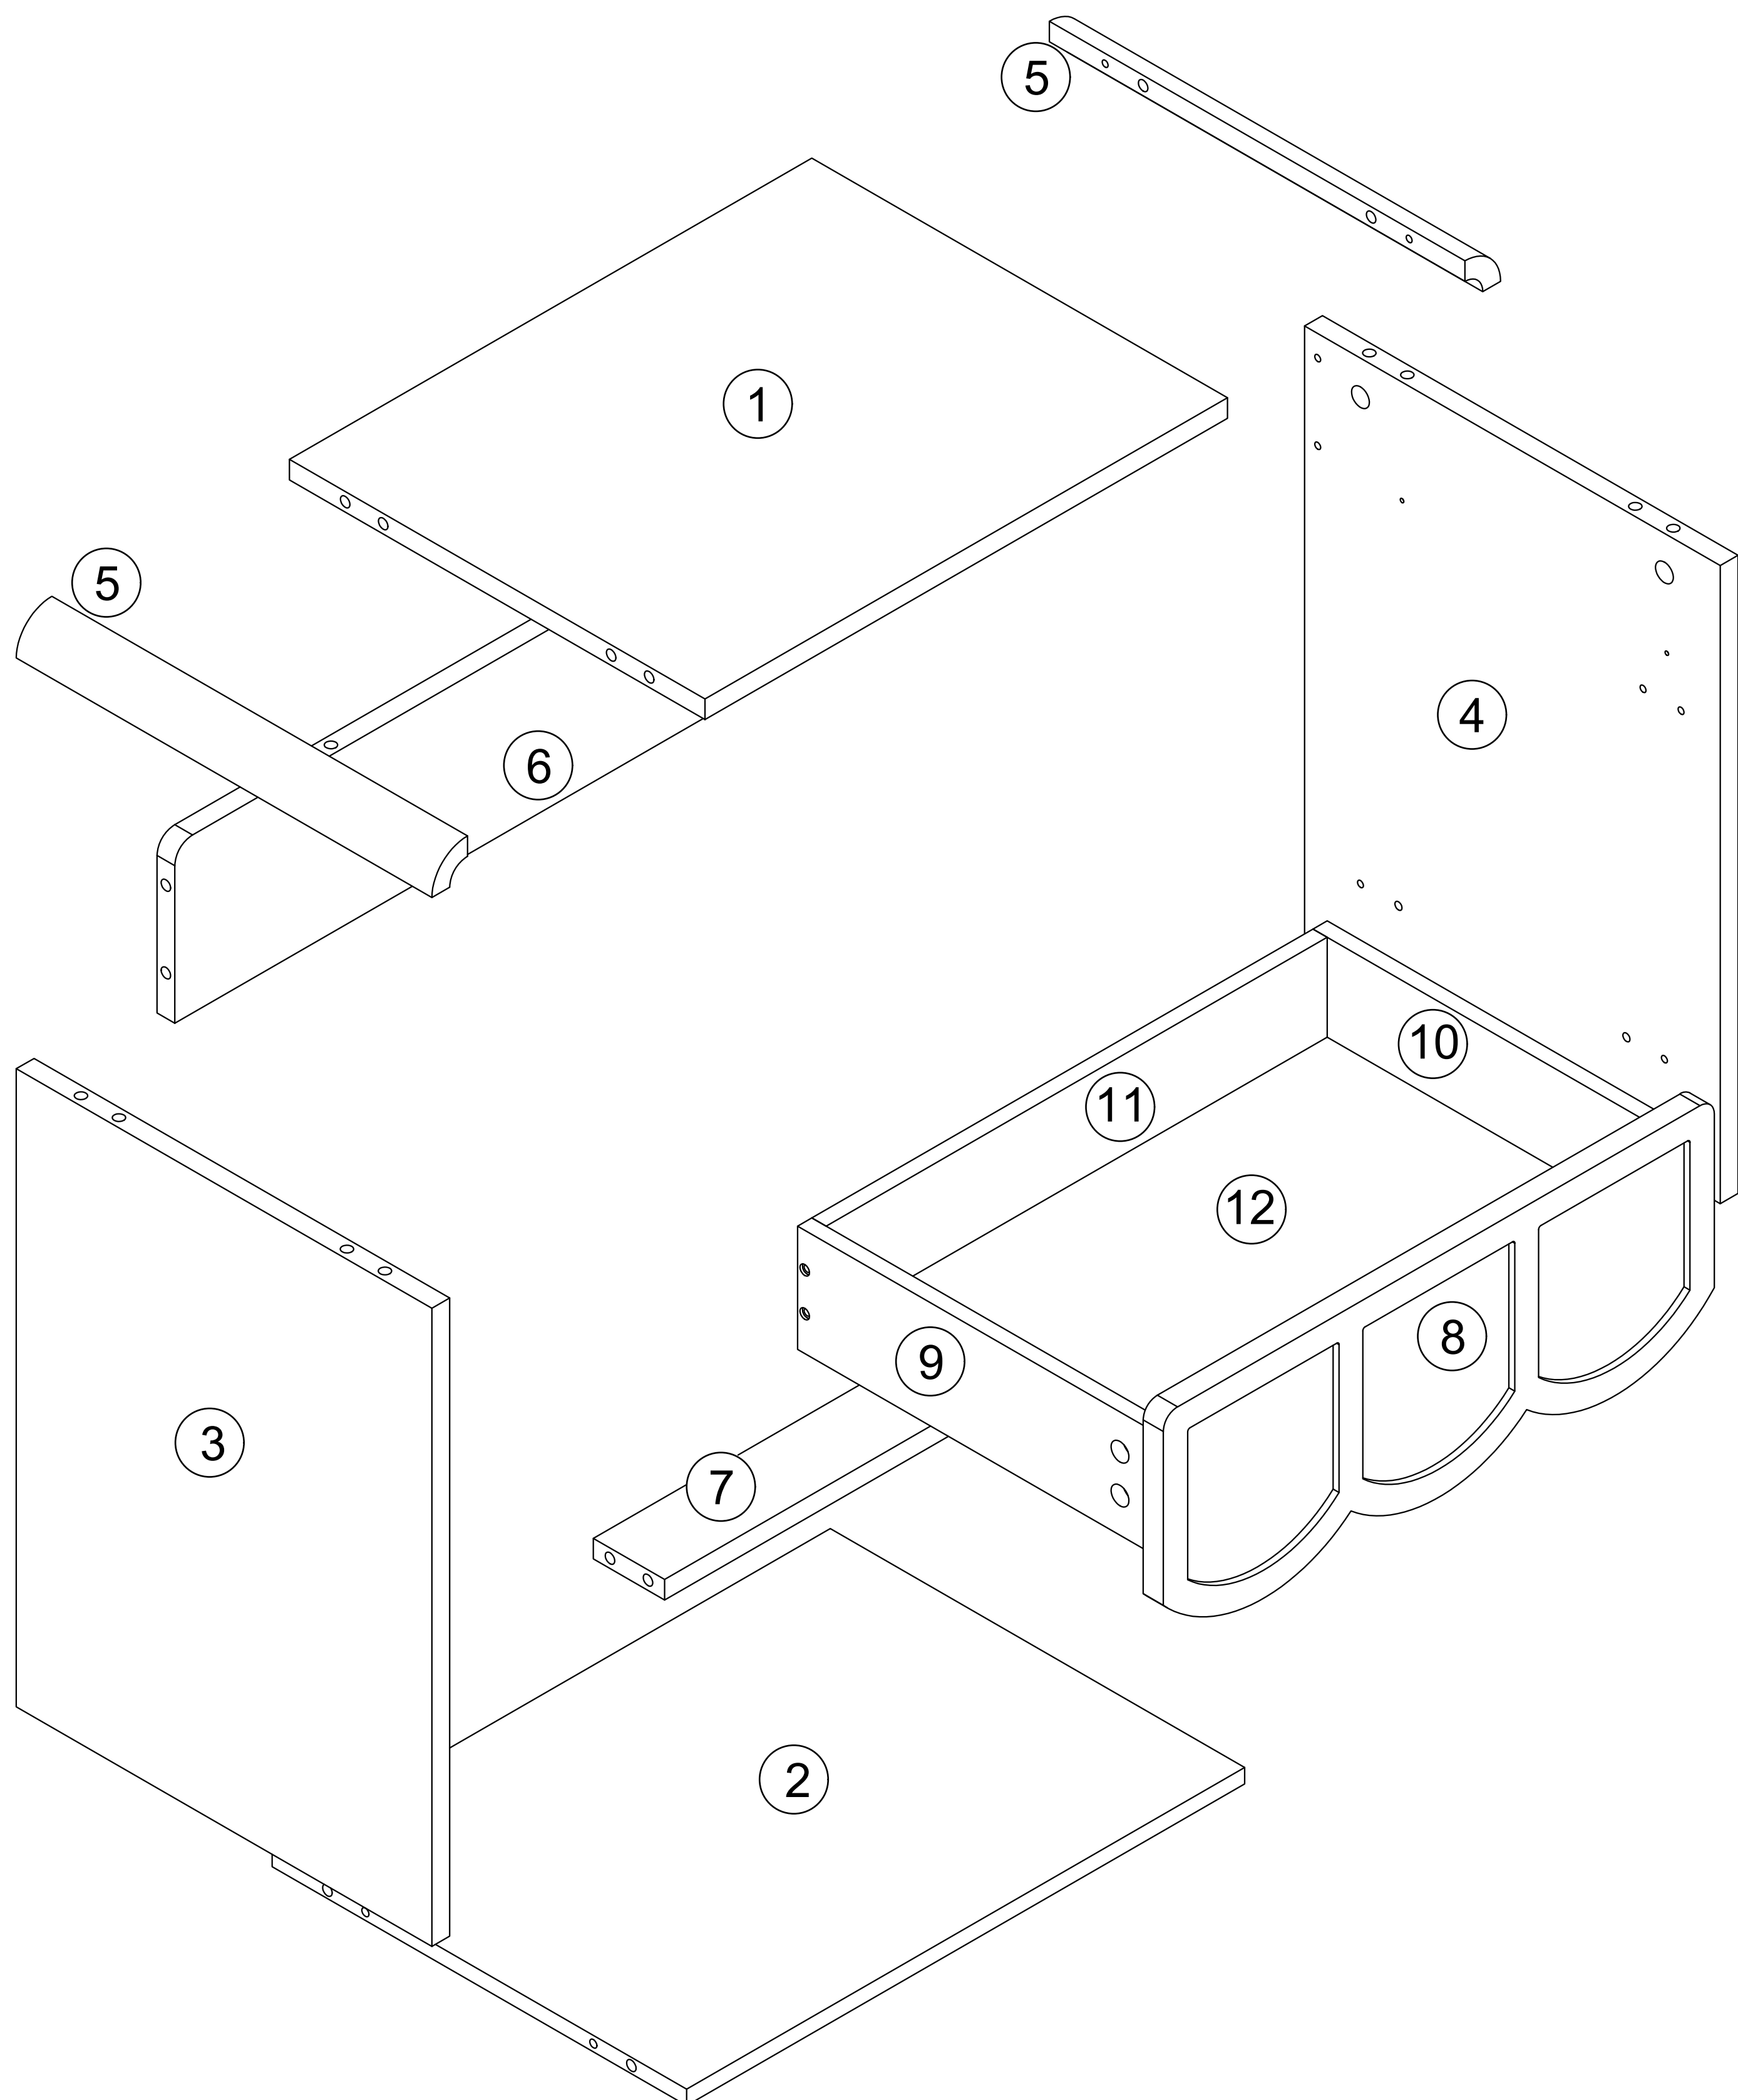




Step 1

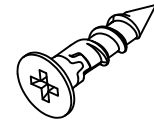CLx 1	CRx 1	D x 4  Ø3×14mm
-------	-------	---

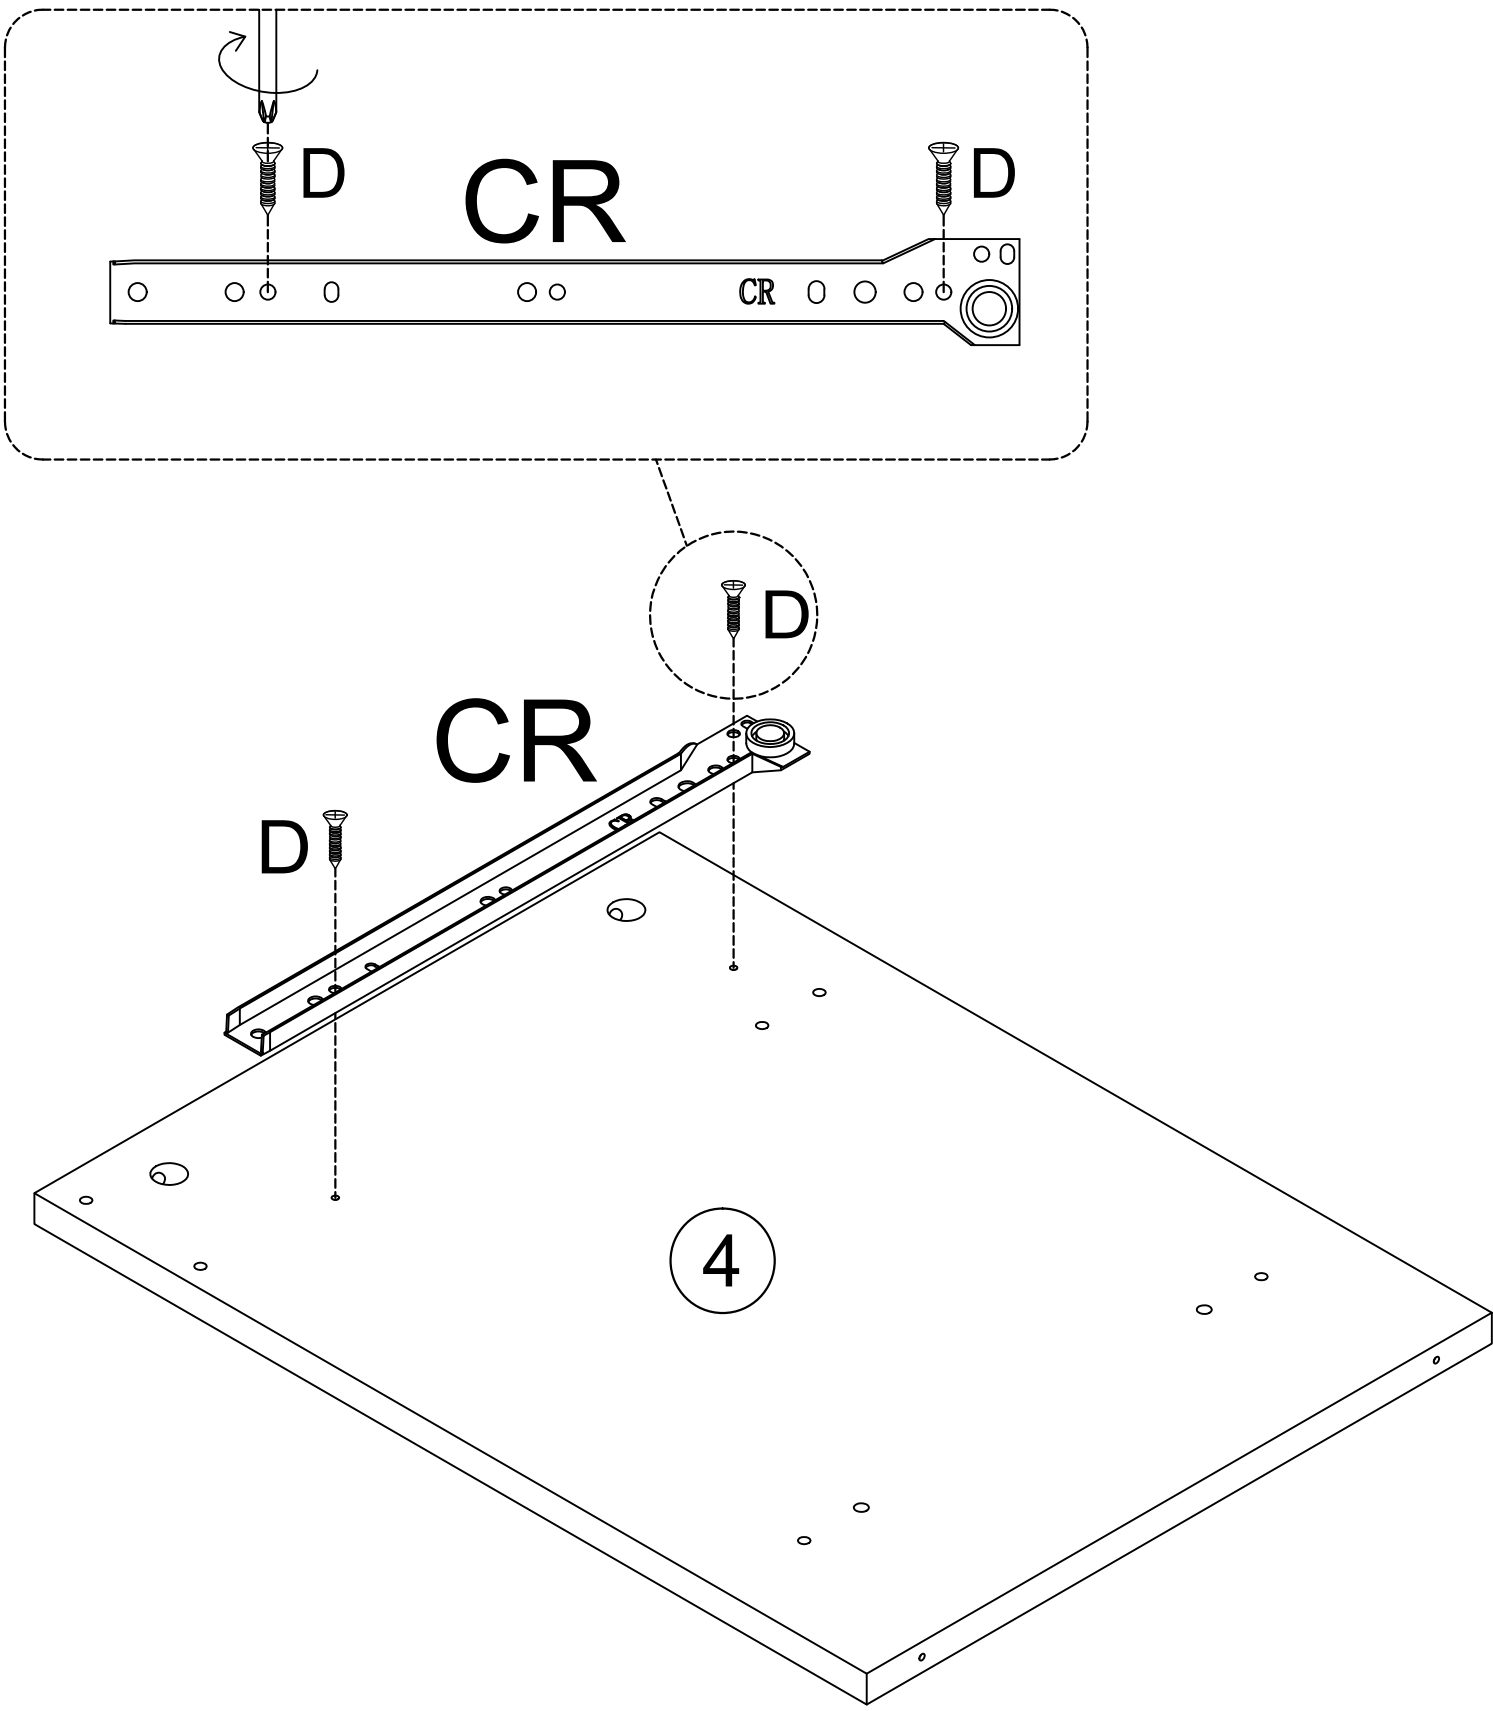
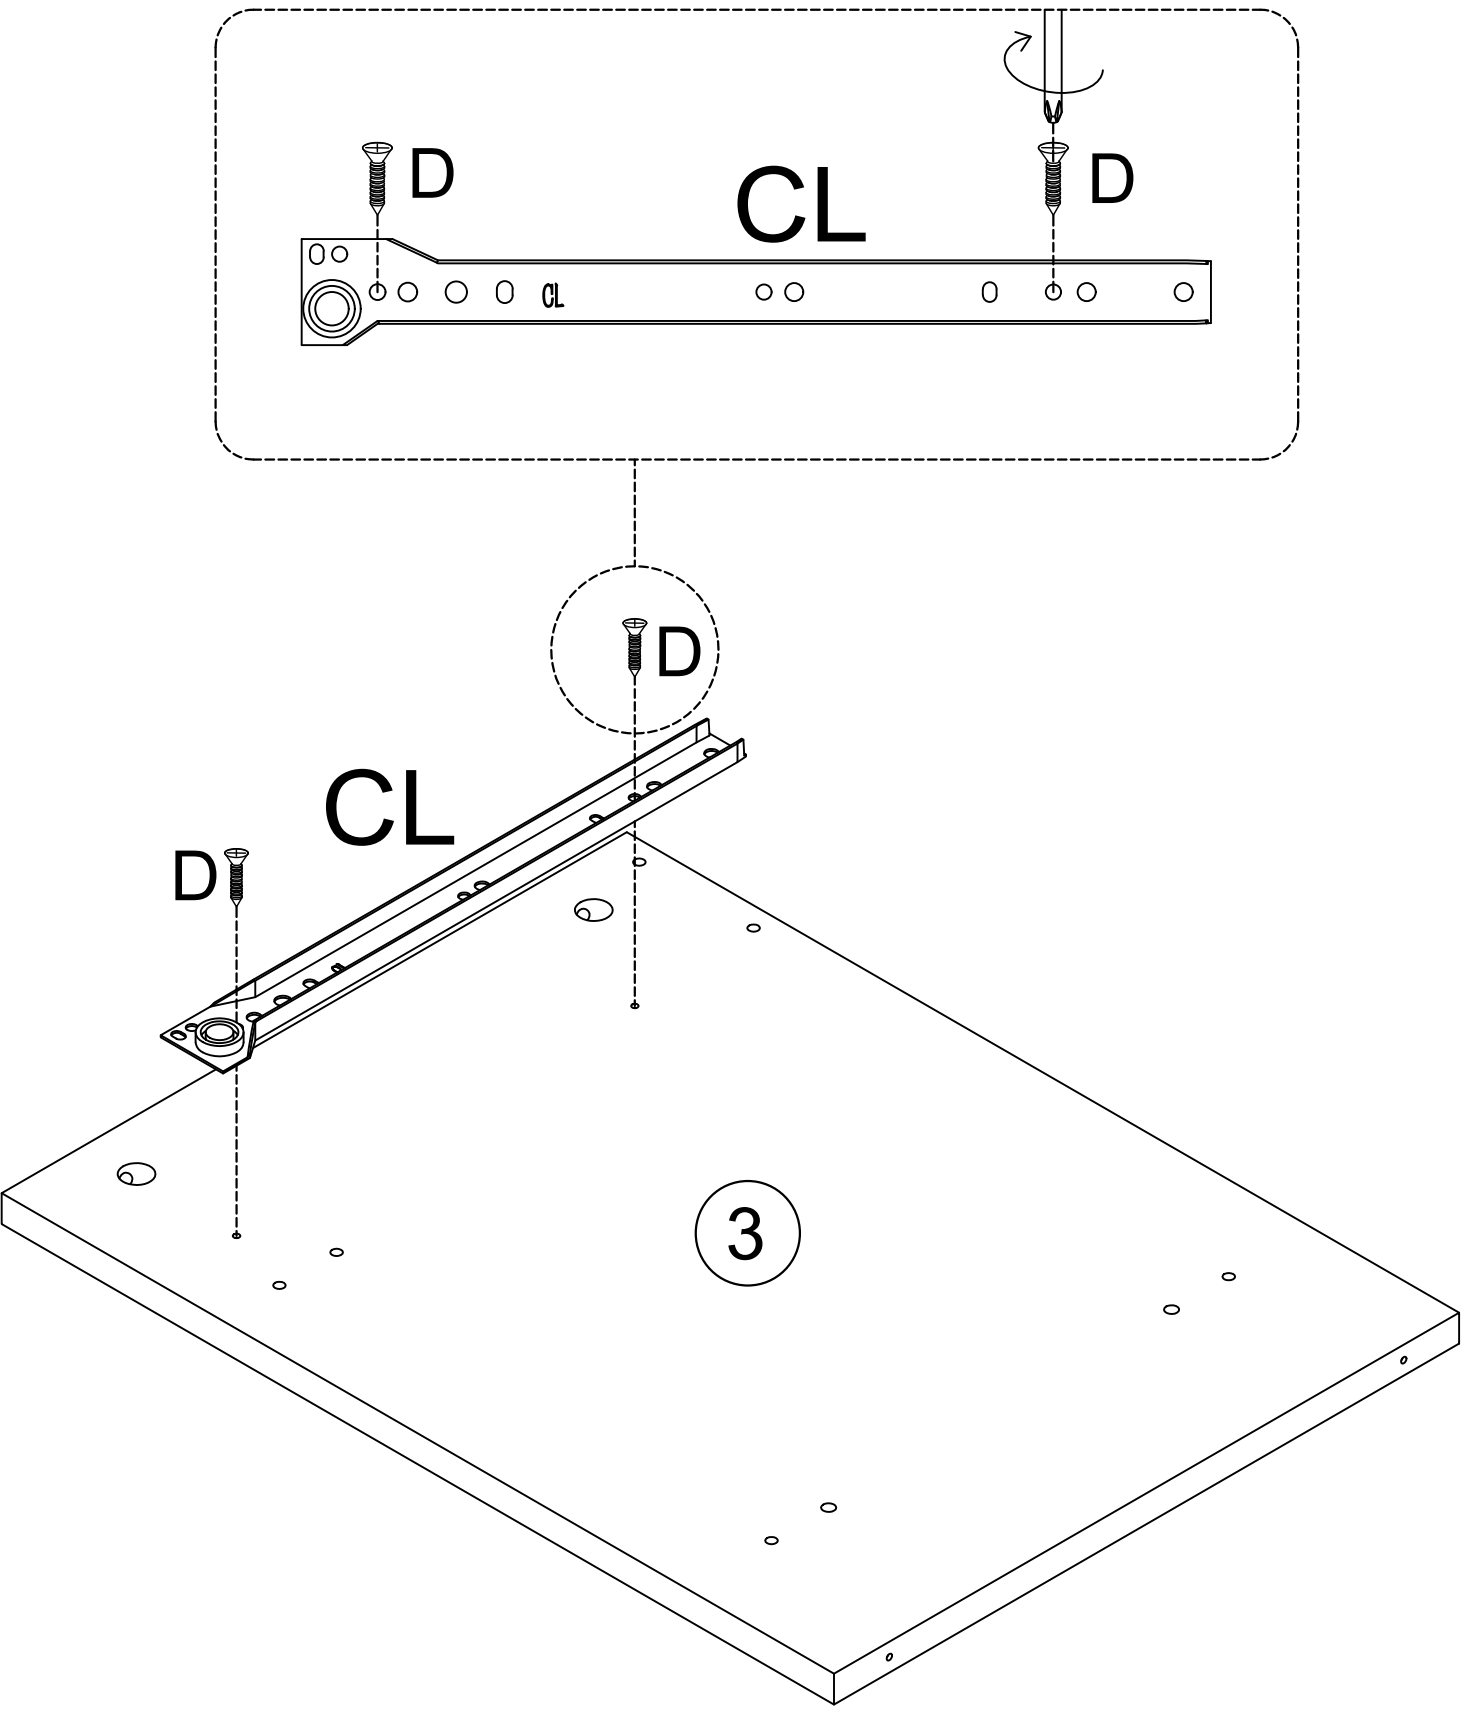



Step 2

A x 12  Ø6×35 mm

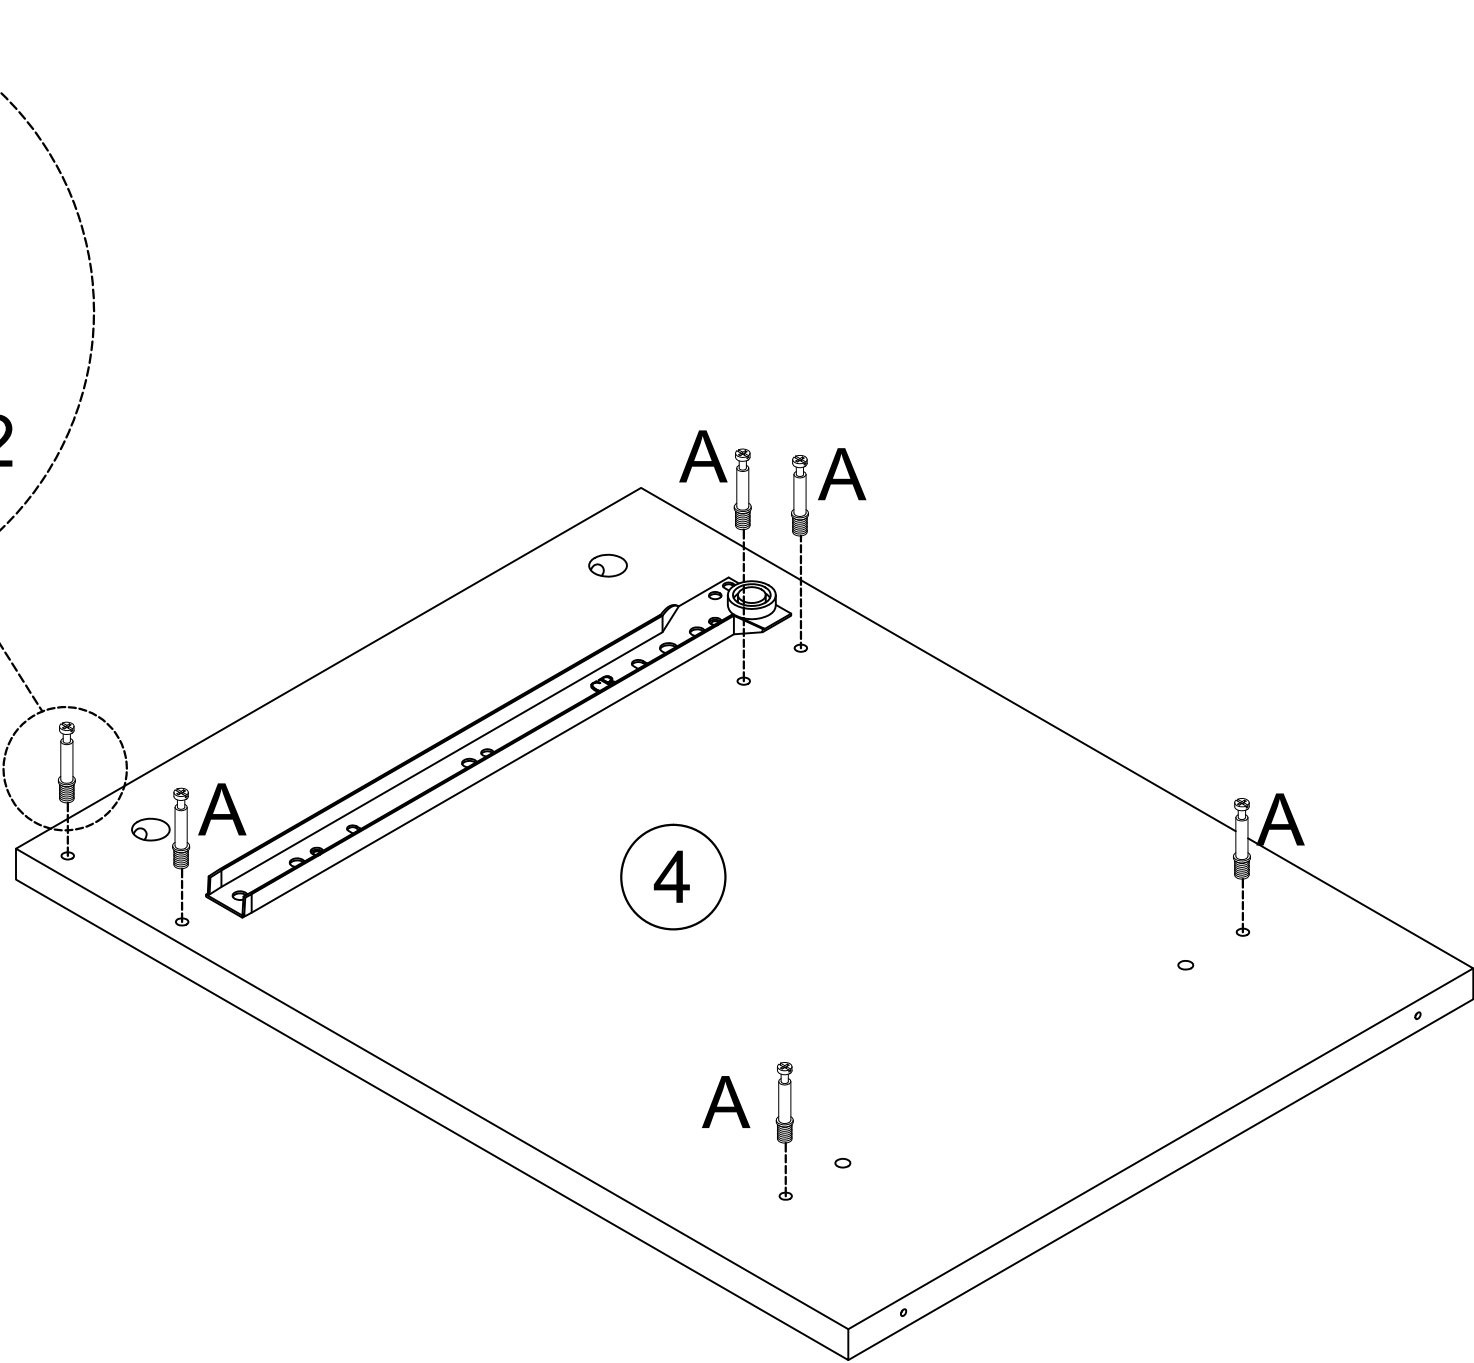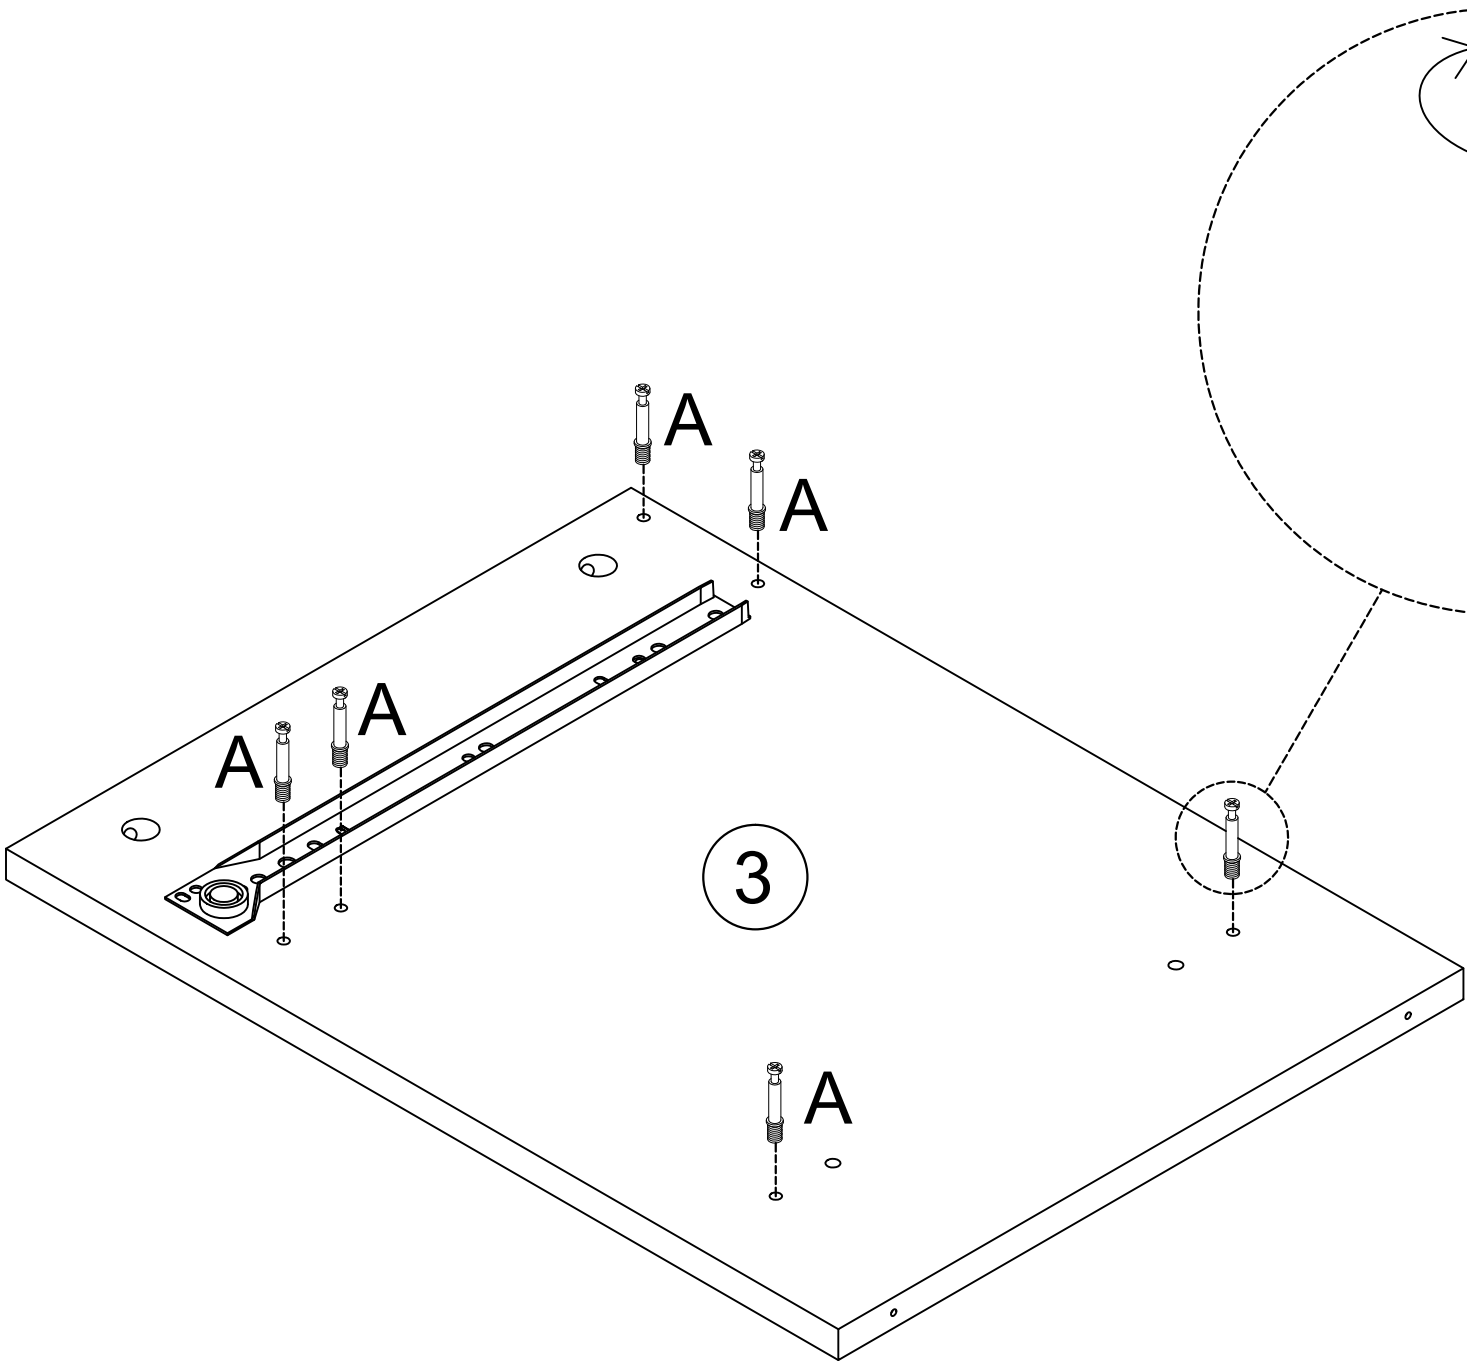

Step 3

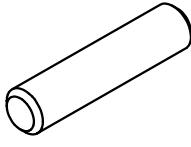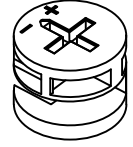
C x 2	B x 4
	
Ø8×30 mm	Ø15×10 mm

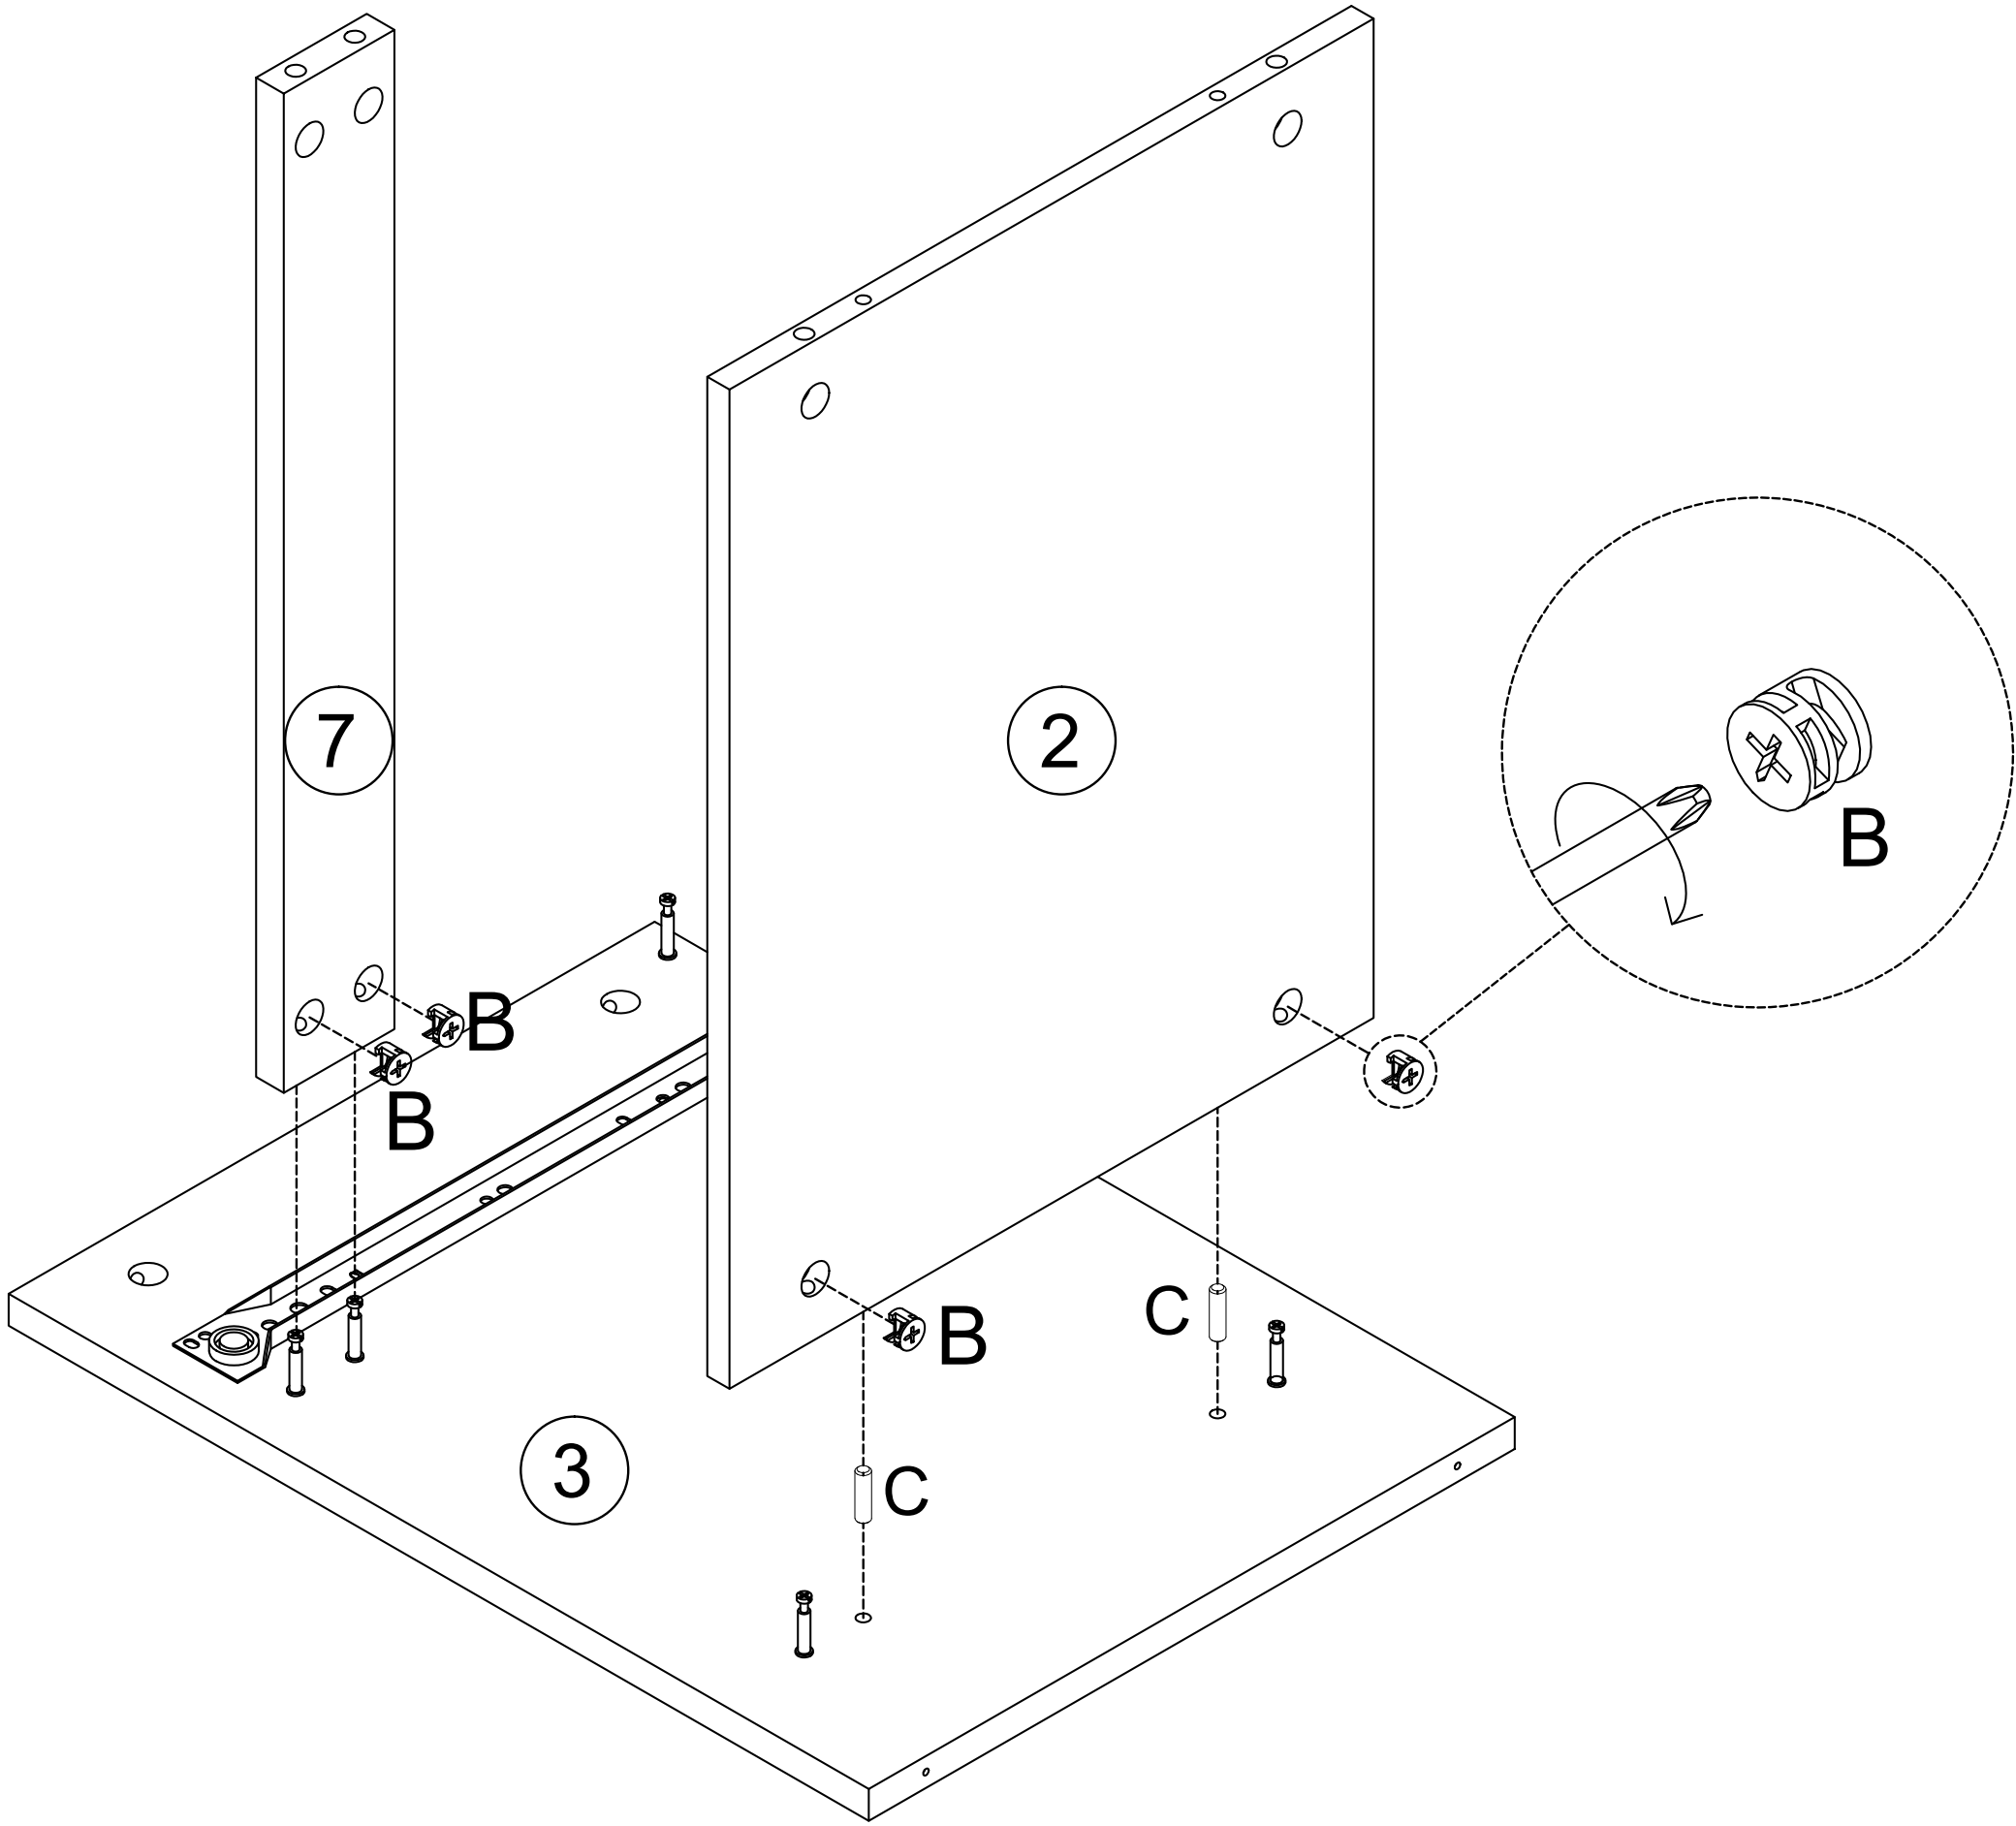




Step 4


B x 2

Ø15×10 mm

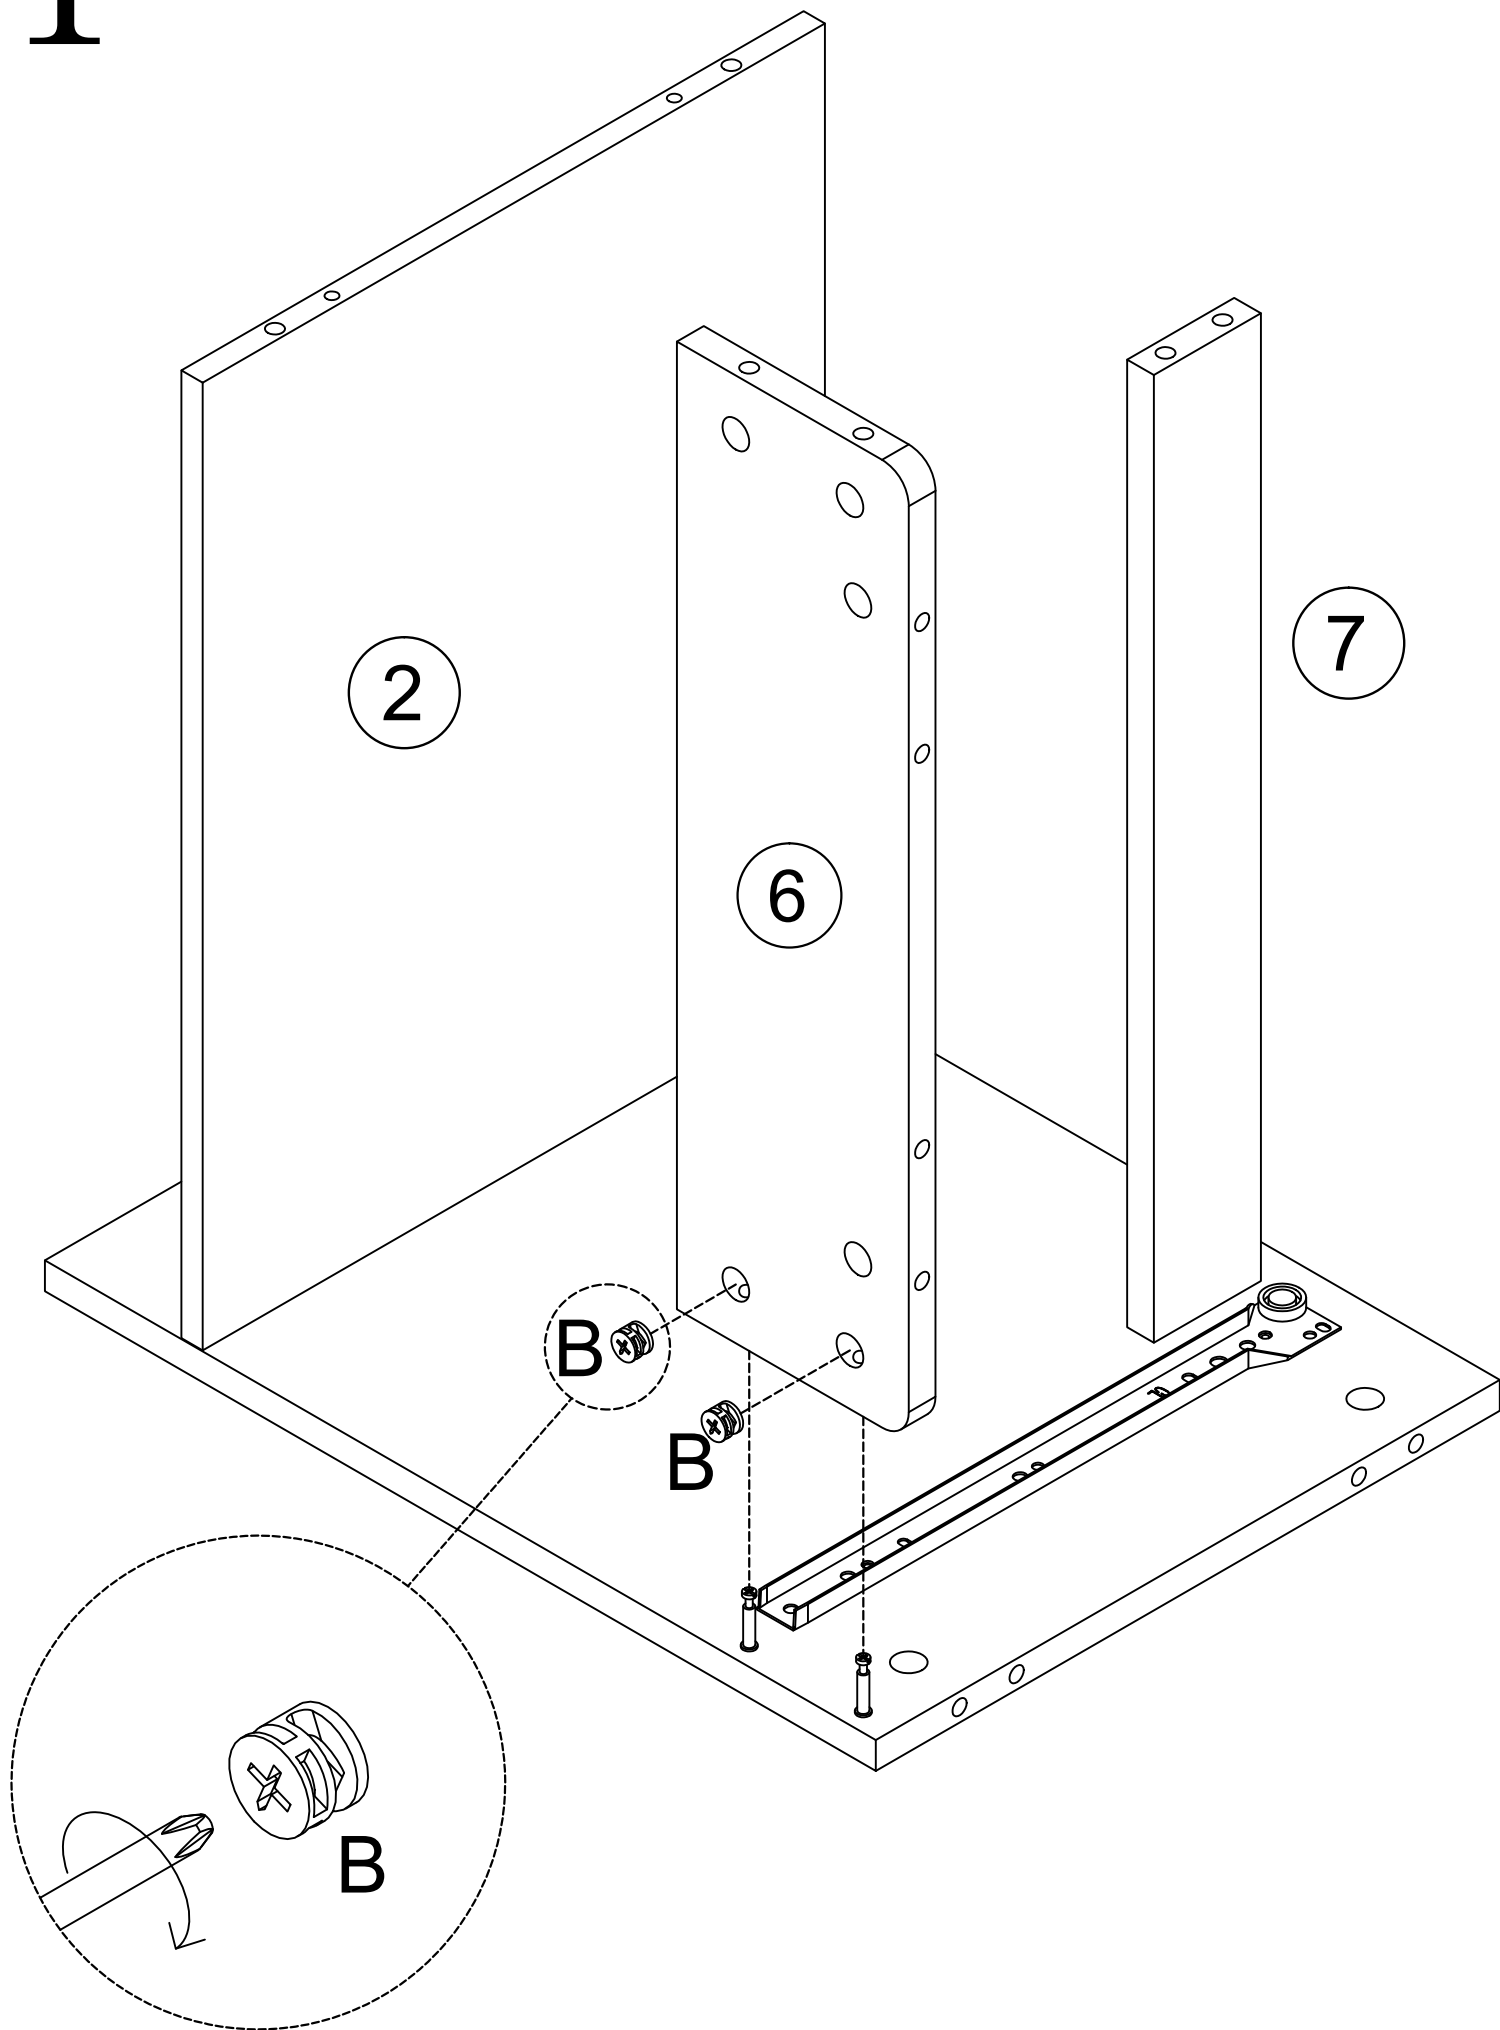



Step 5

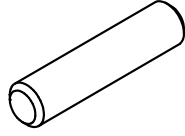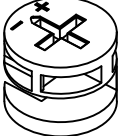C x 2  Ø8×30 mm	F x 4 	B x 6  Ø15×10 mm
---	---	--

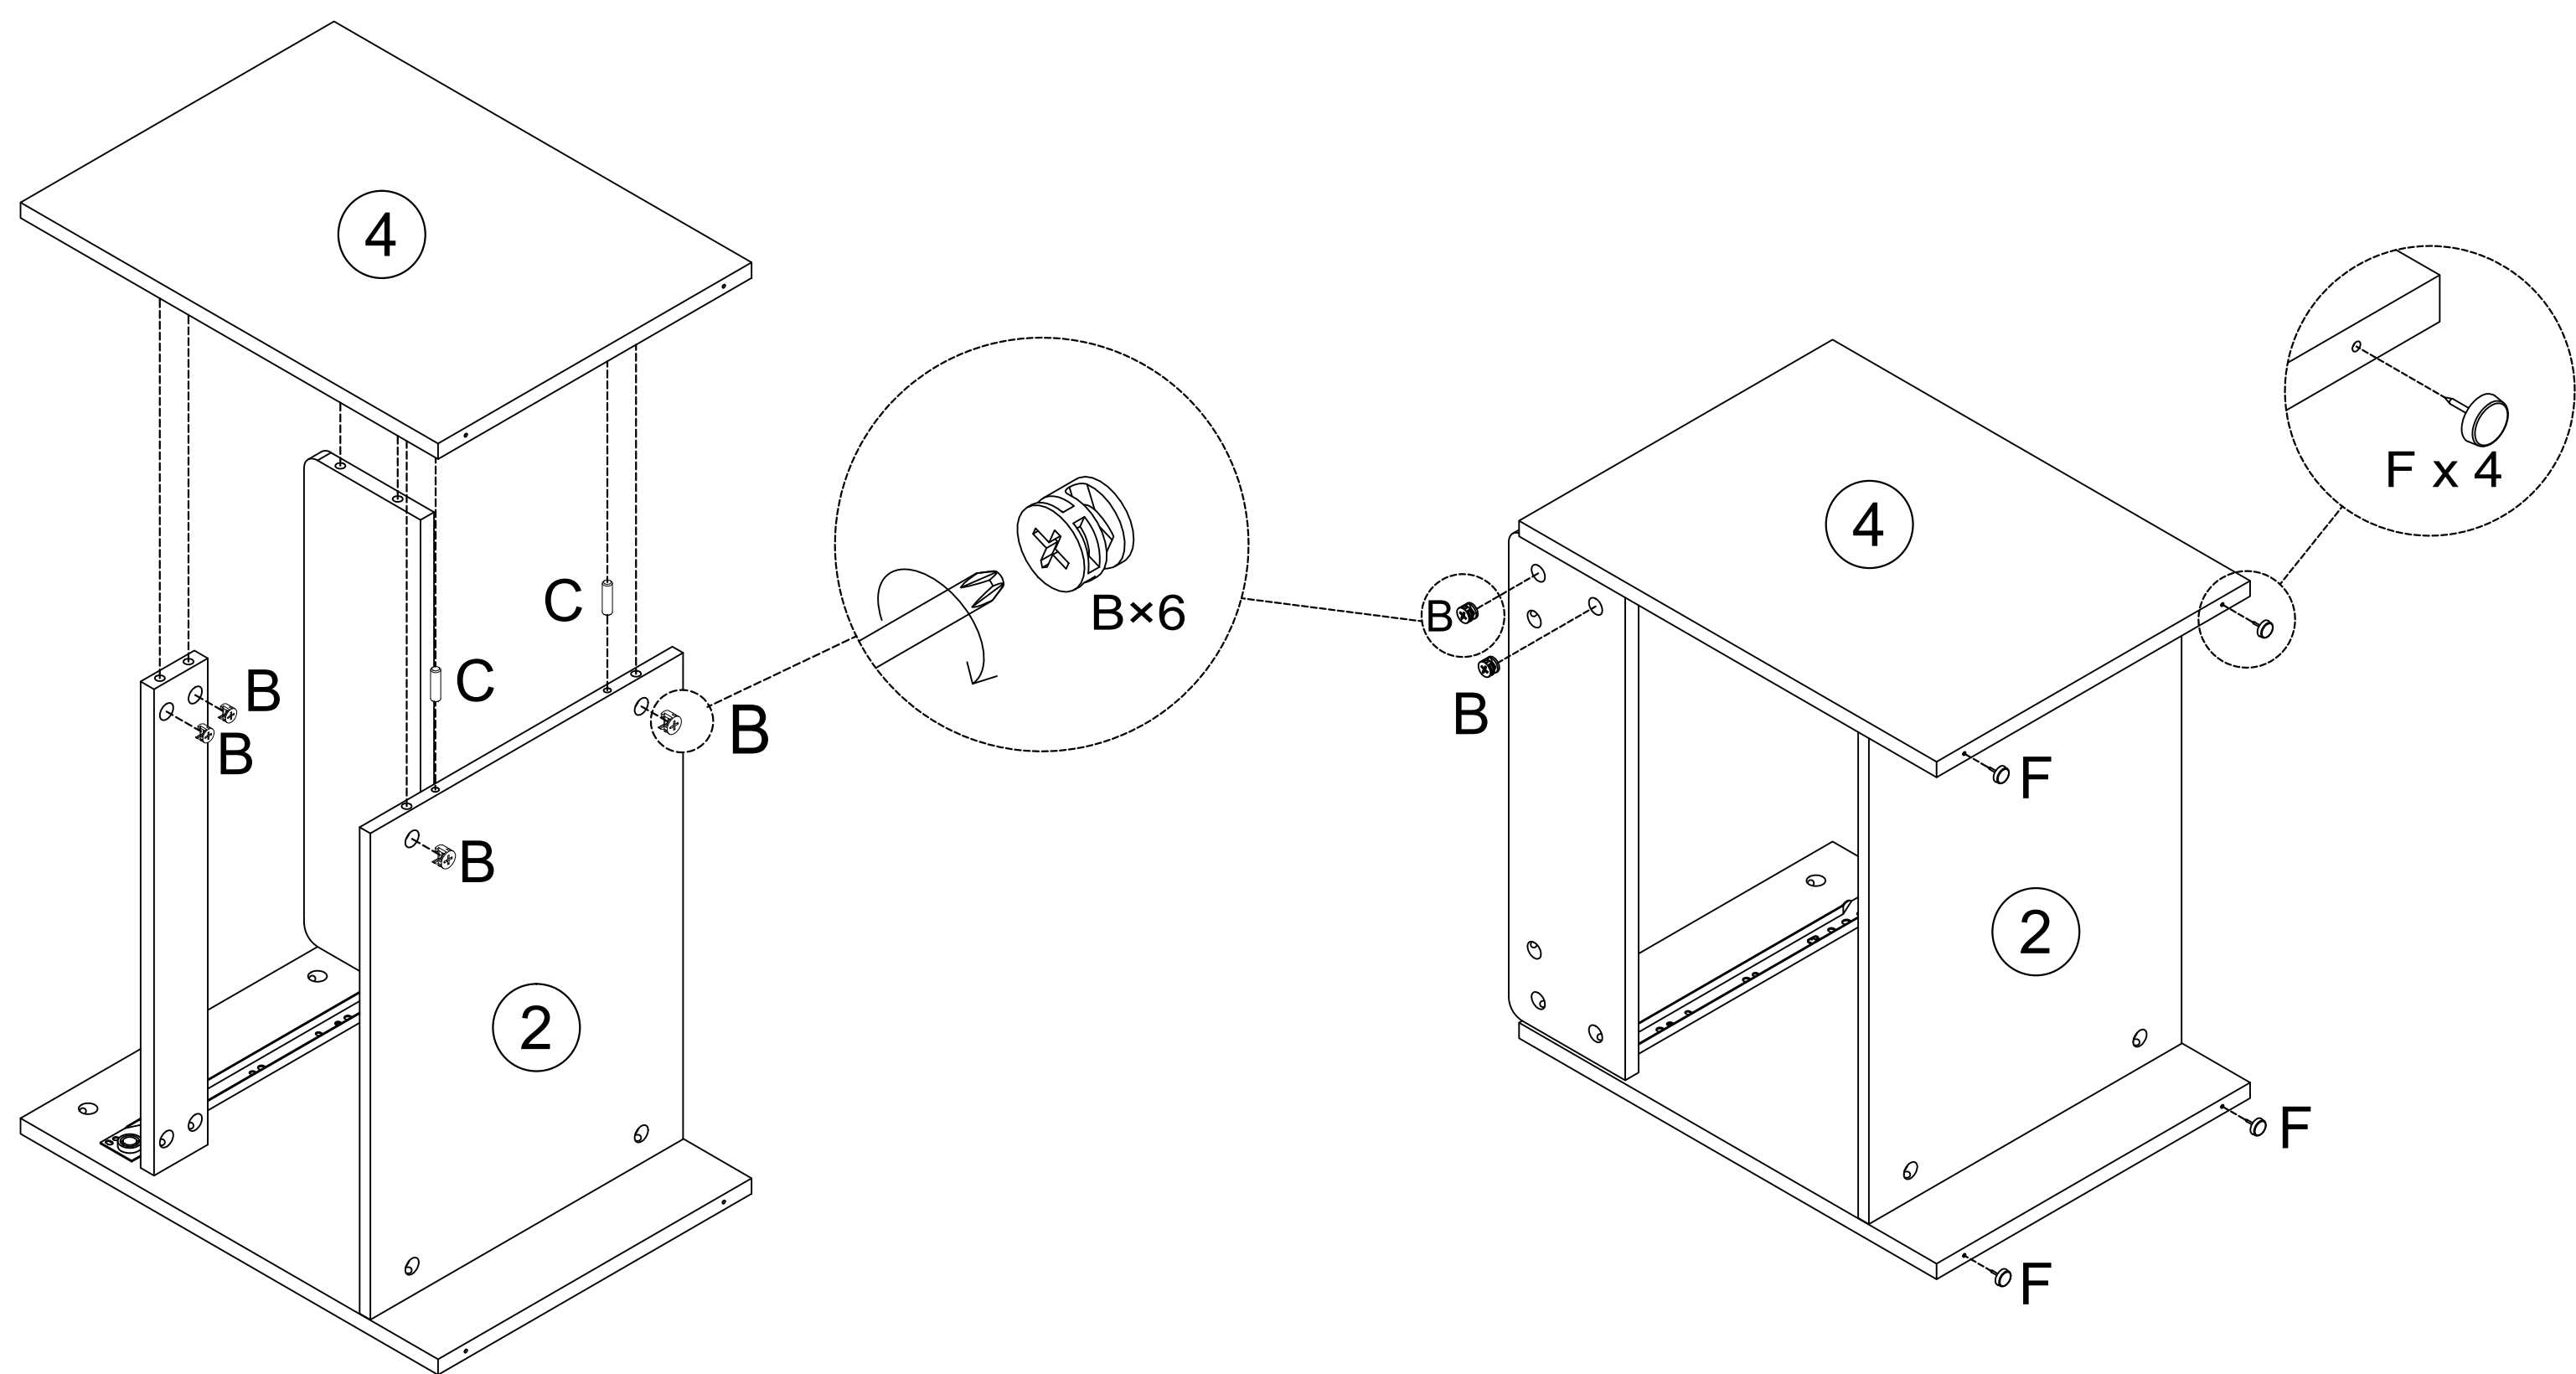



Step 6

A x 10  Ø6×35 mm
--


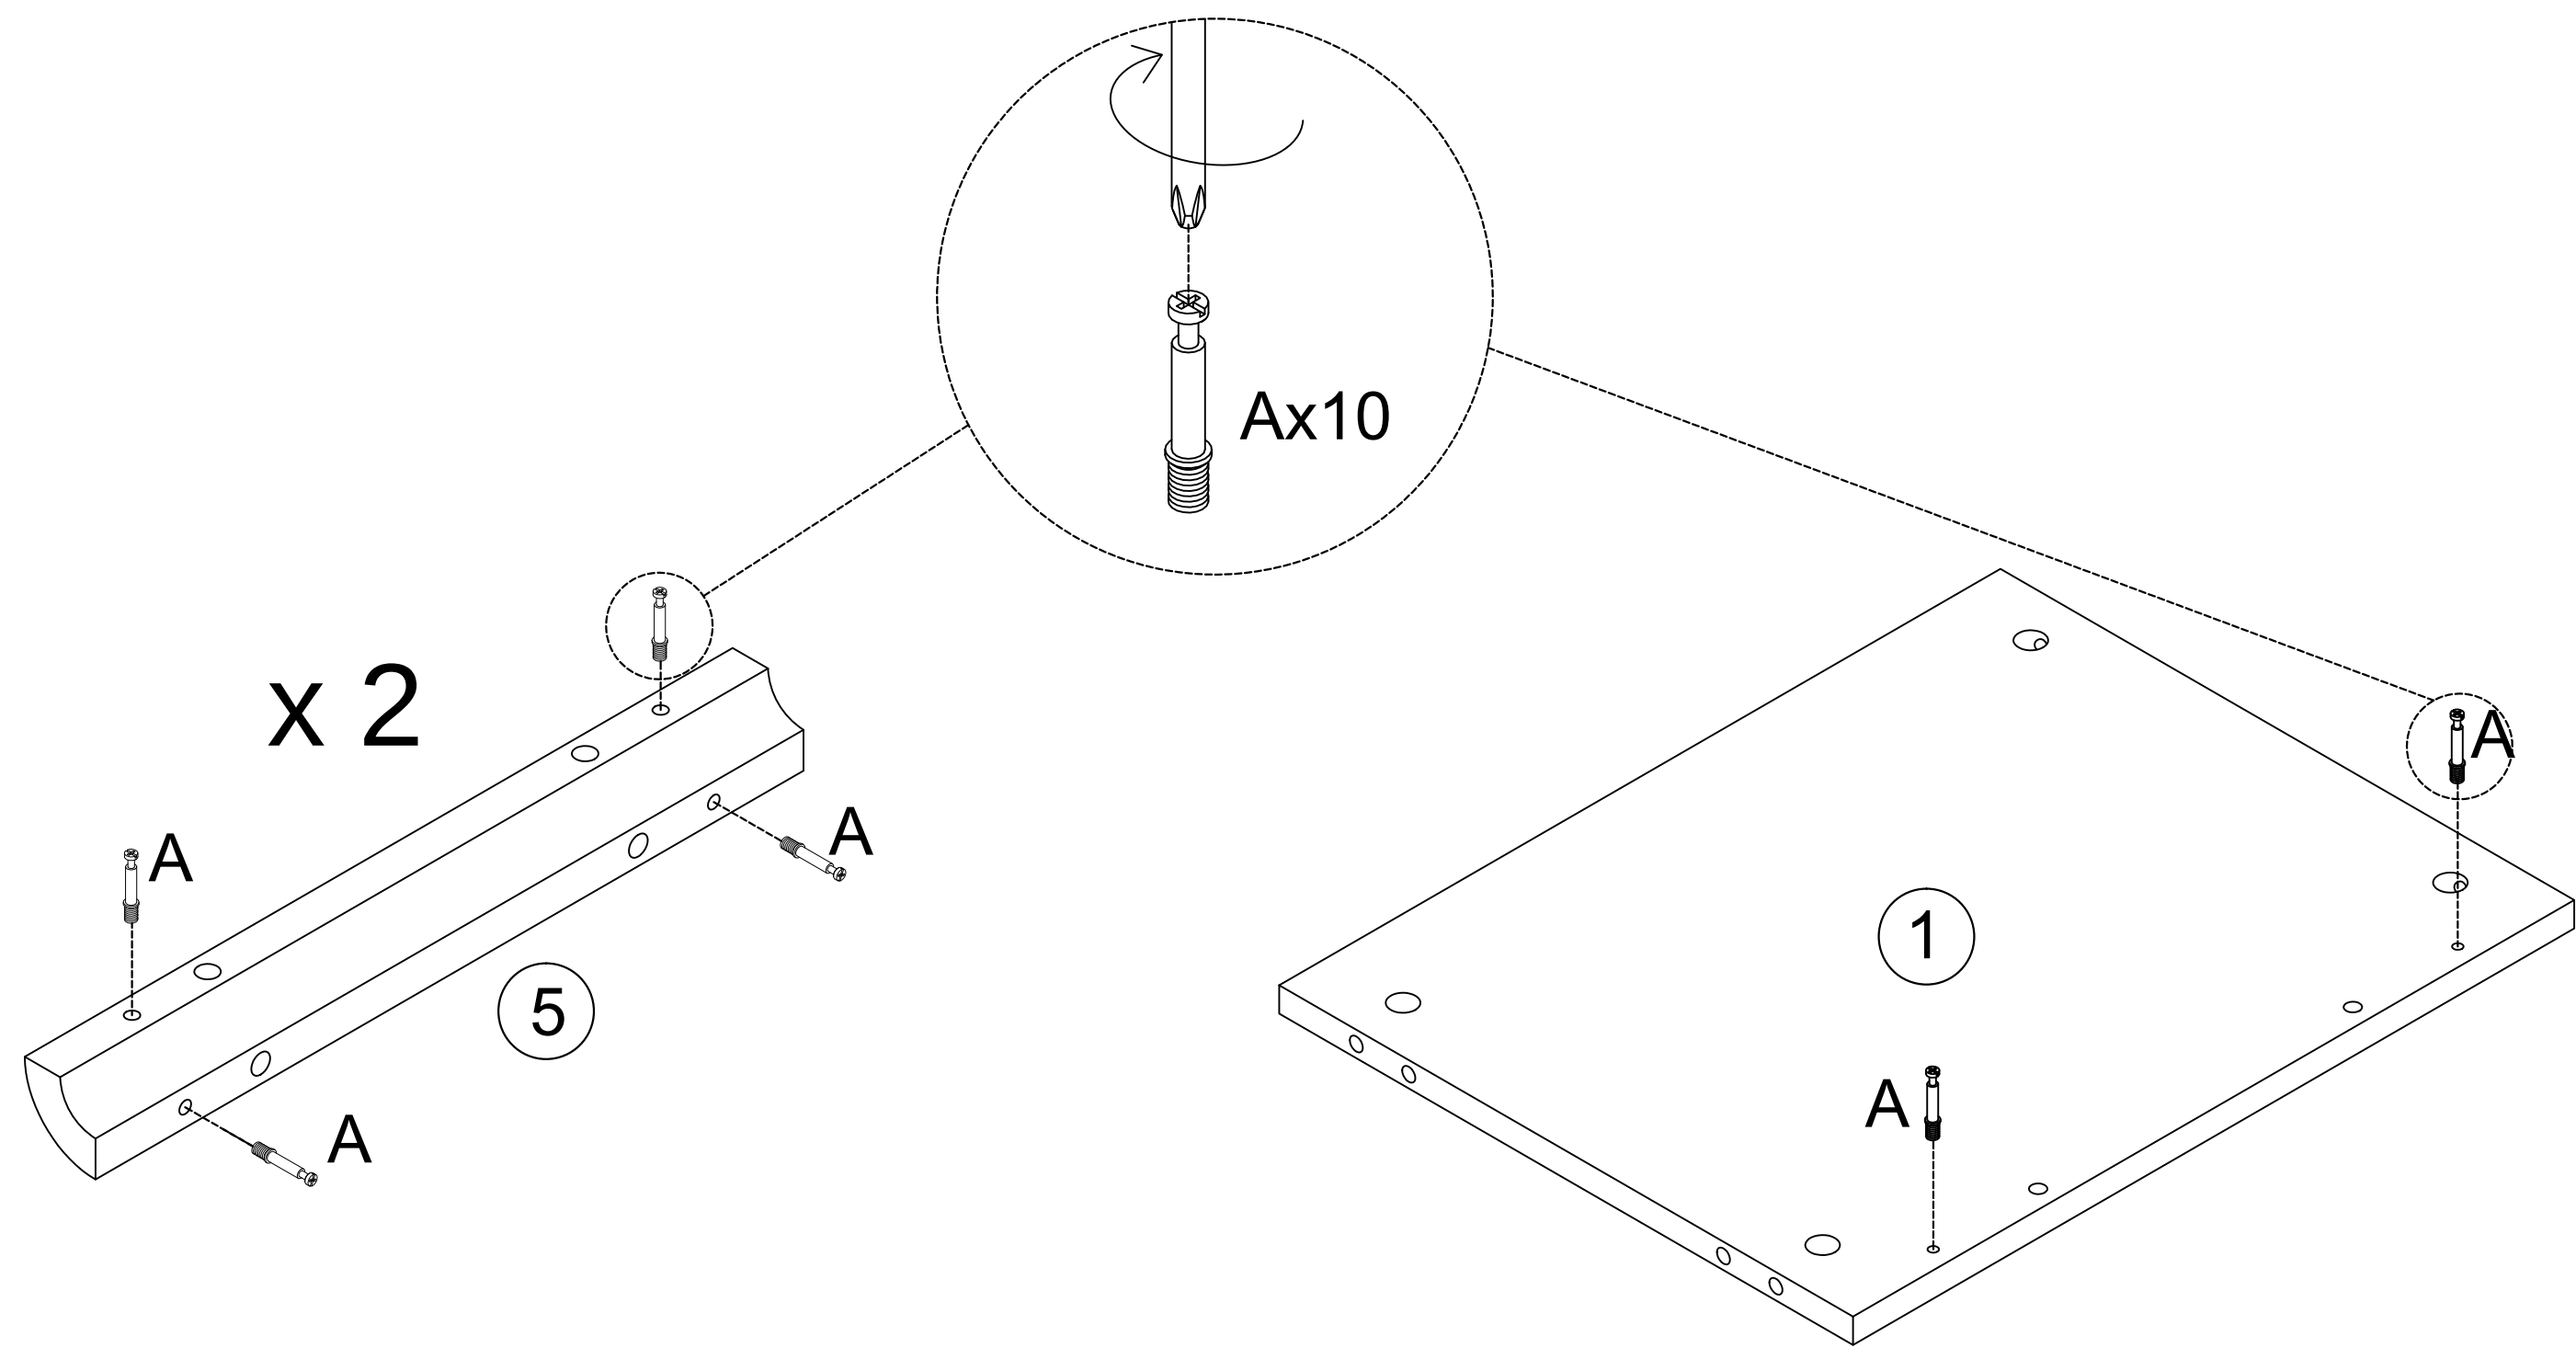



Step 7

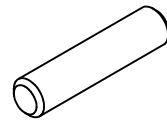C x 4  Ø8×30 mm	B x 4  Ø15×10 mm
---	--

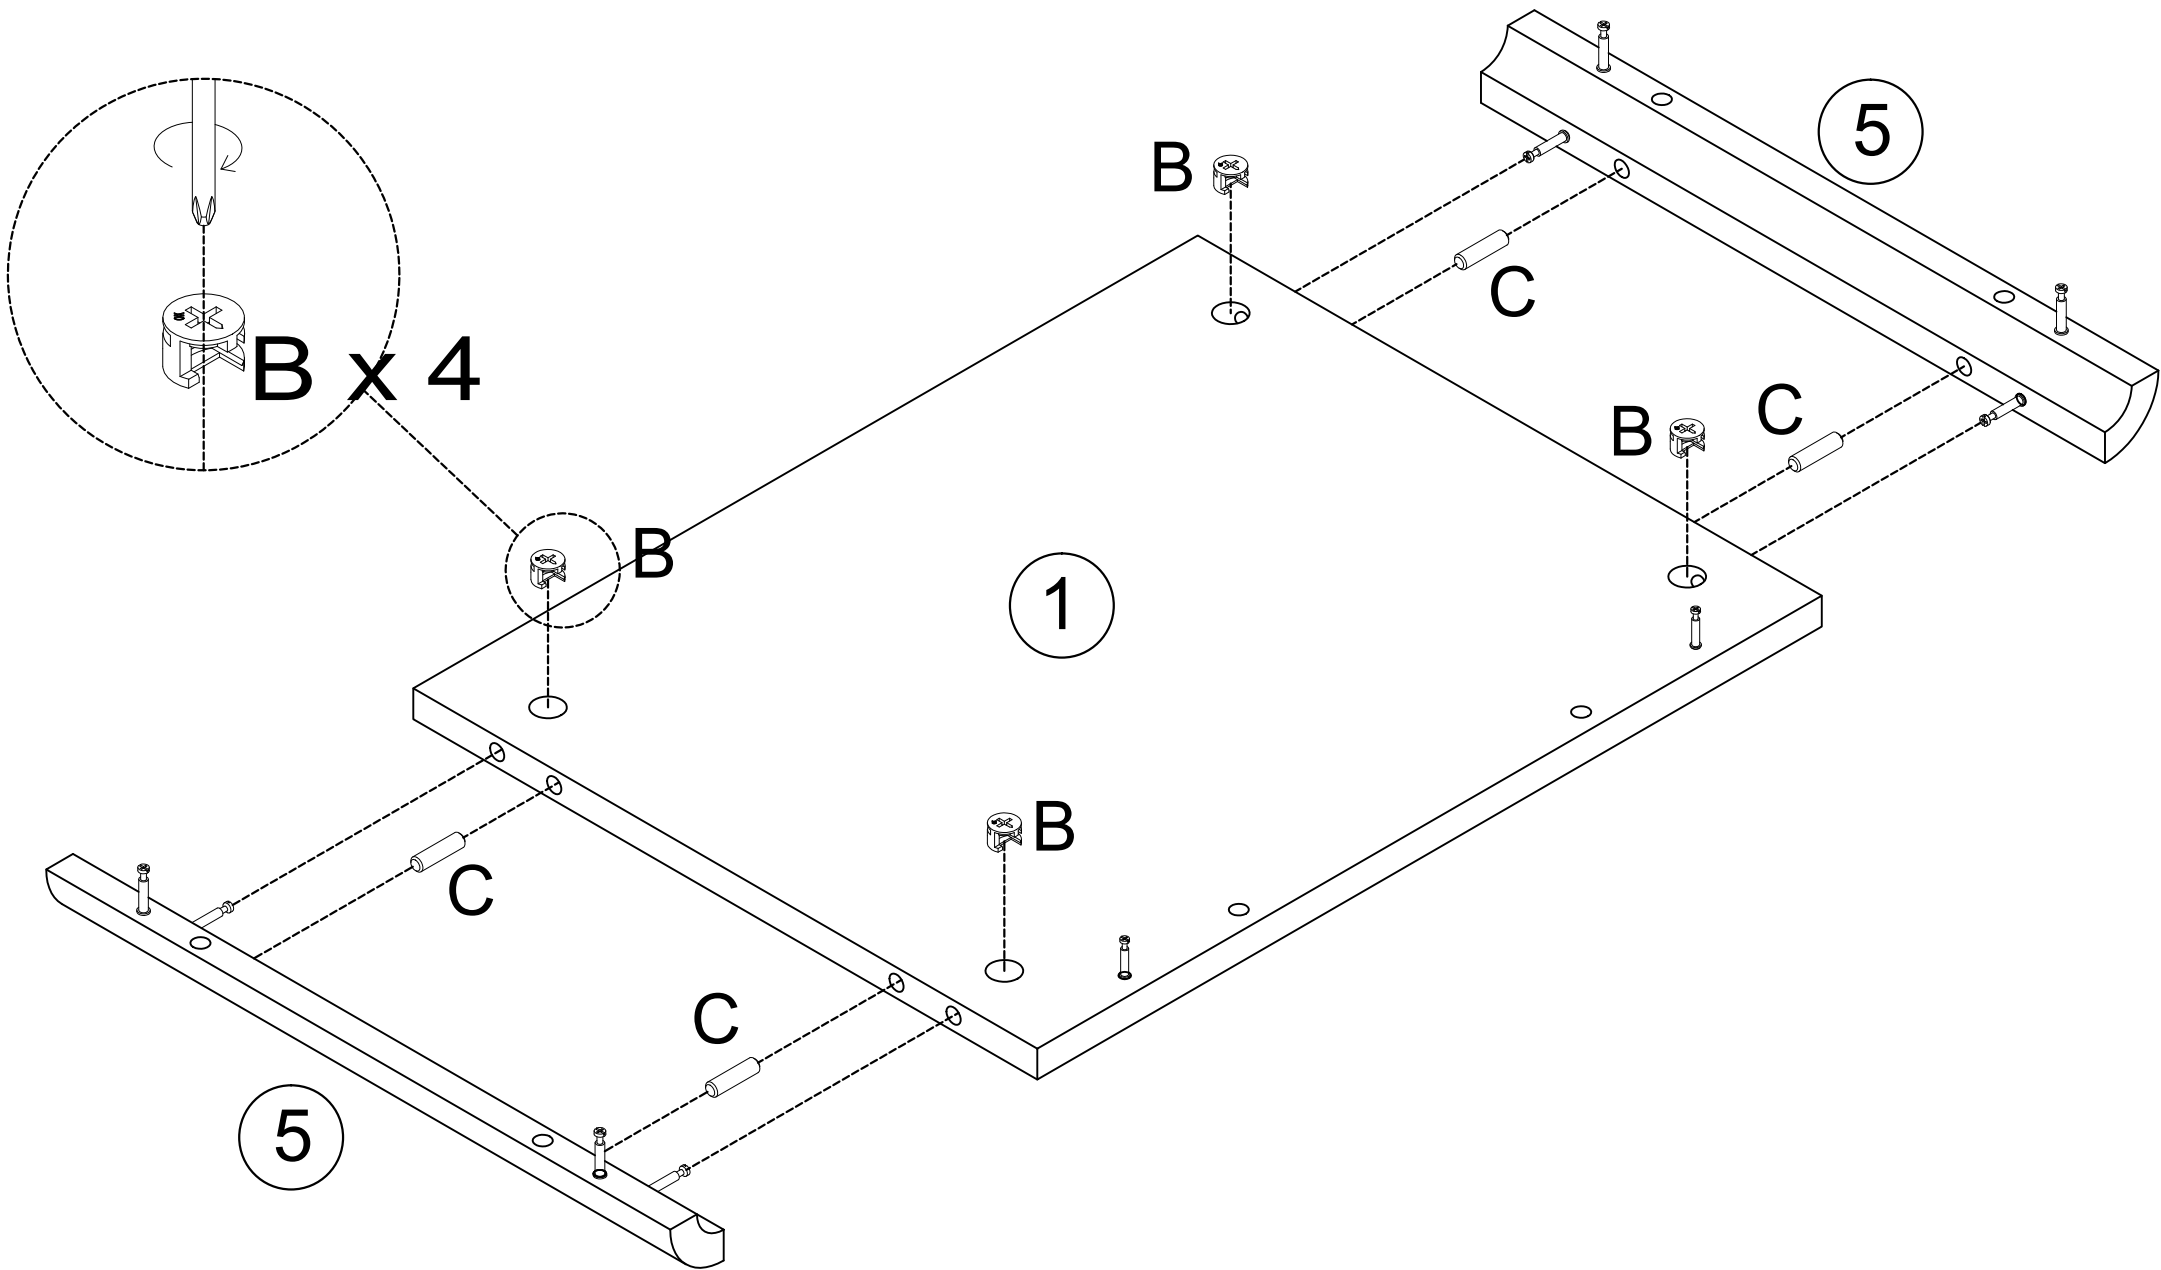




Step 8

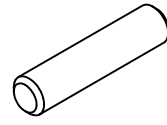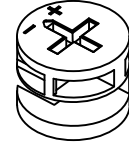C x 6  Ø8×30 mm	B x 6  Ø15×10 mm
---	--

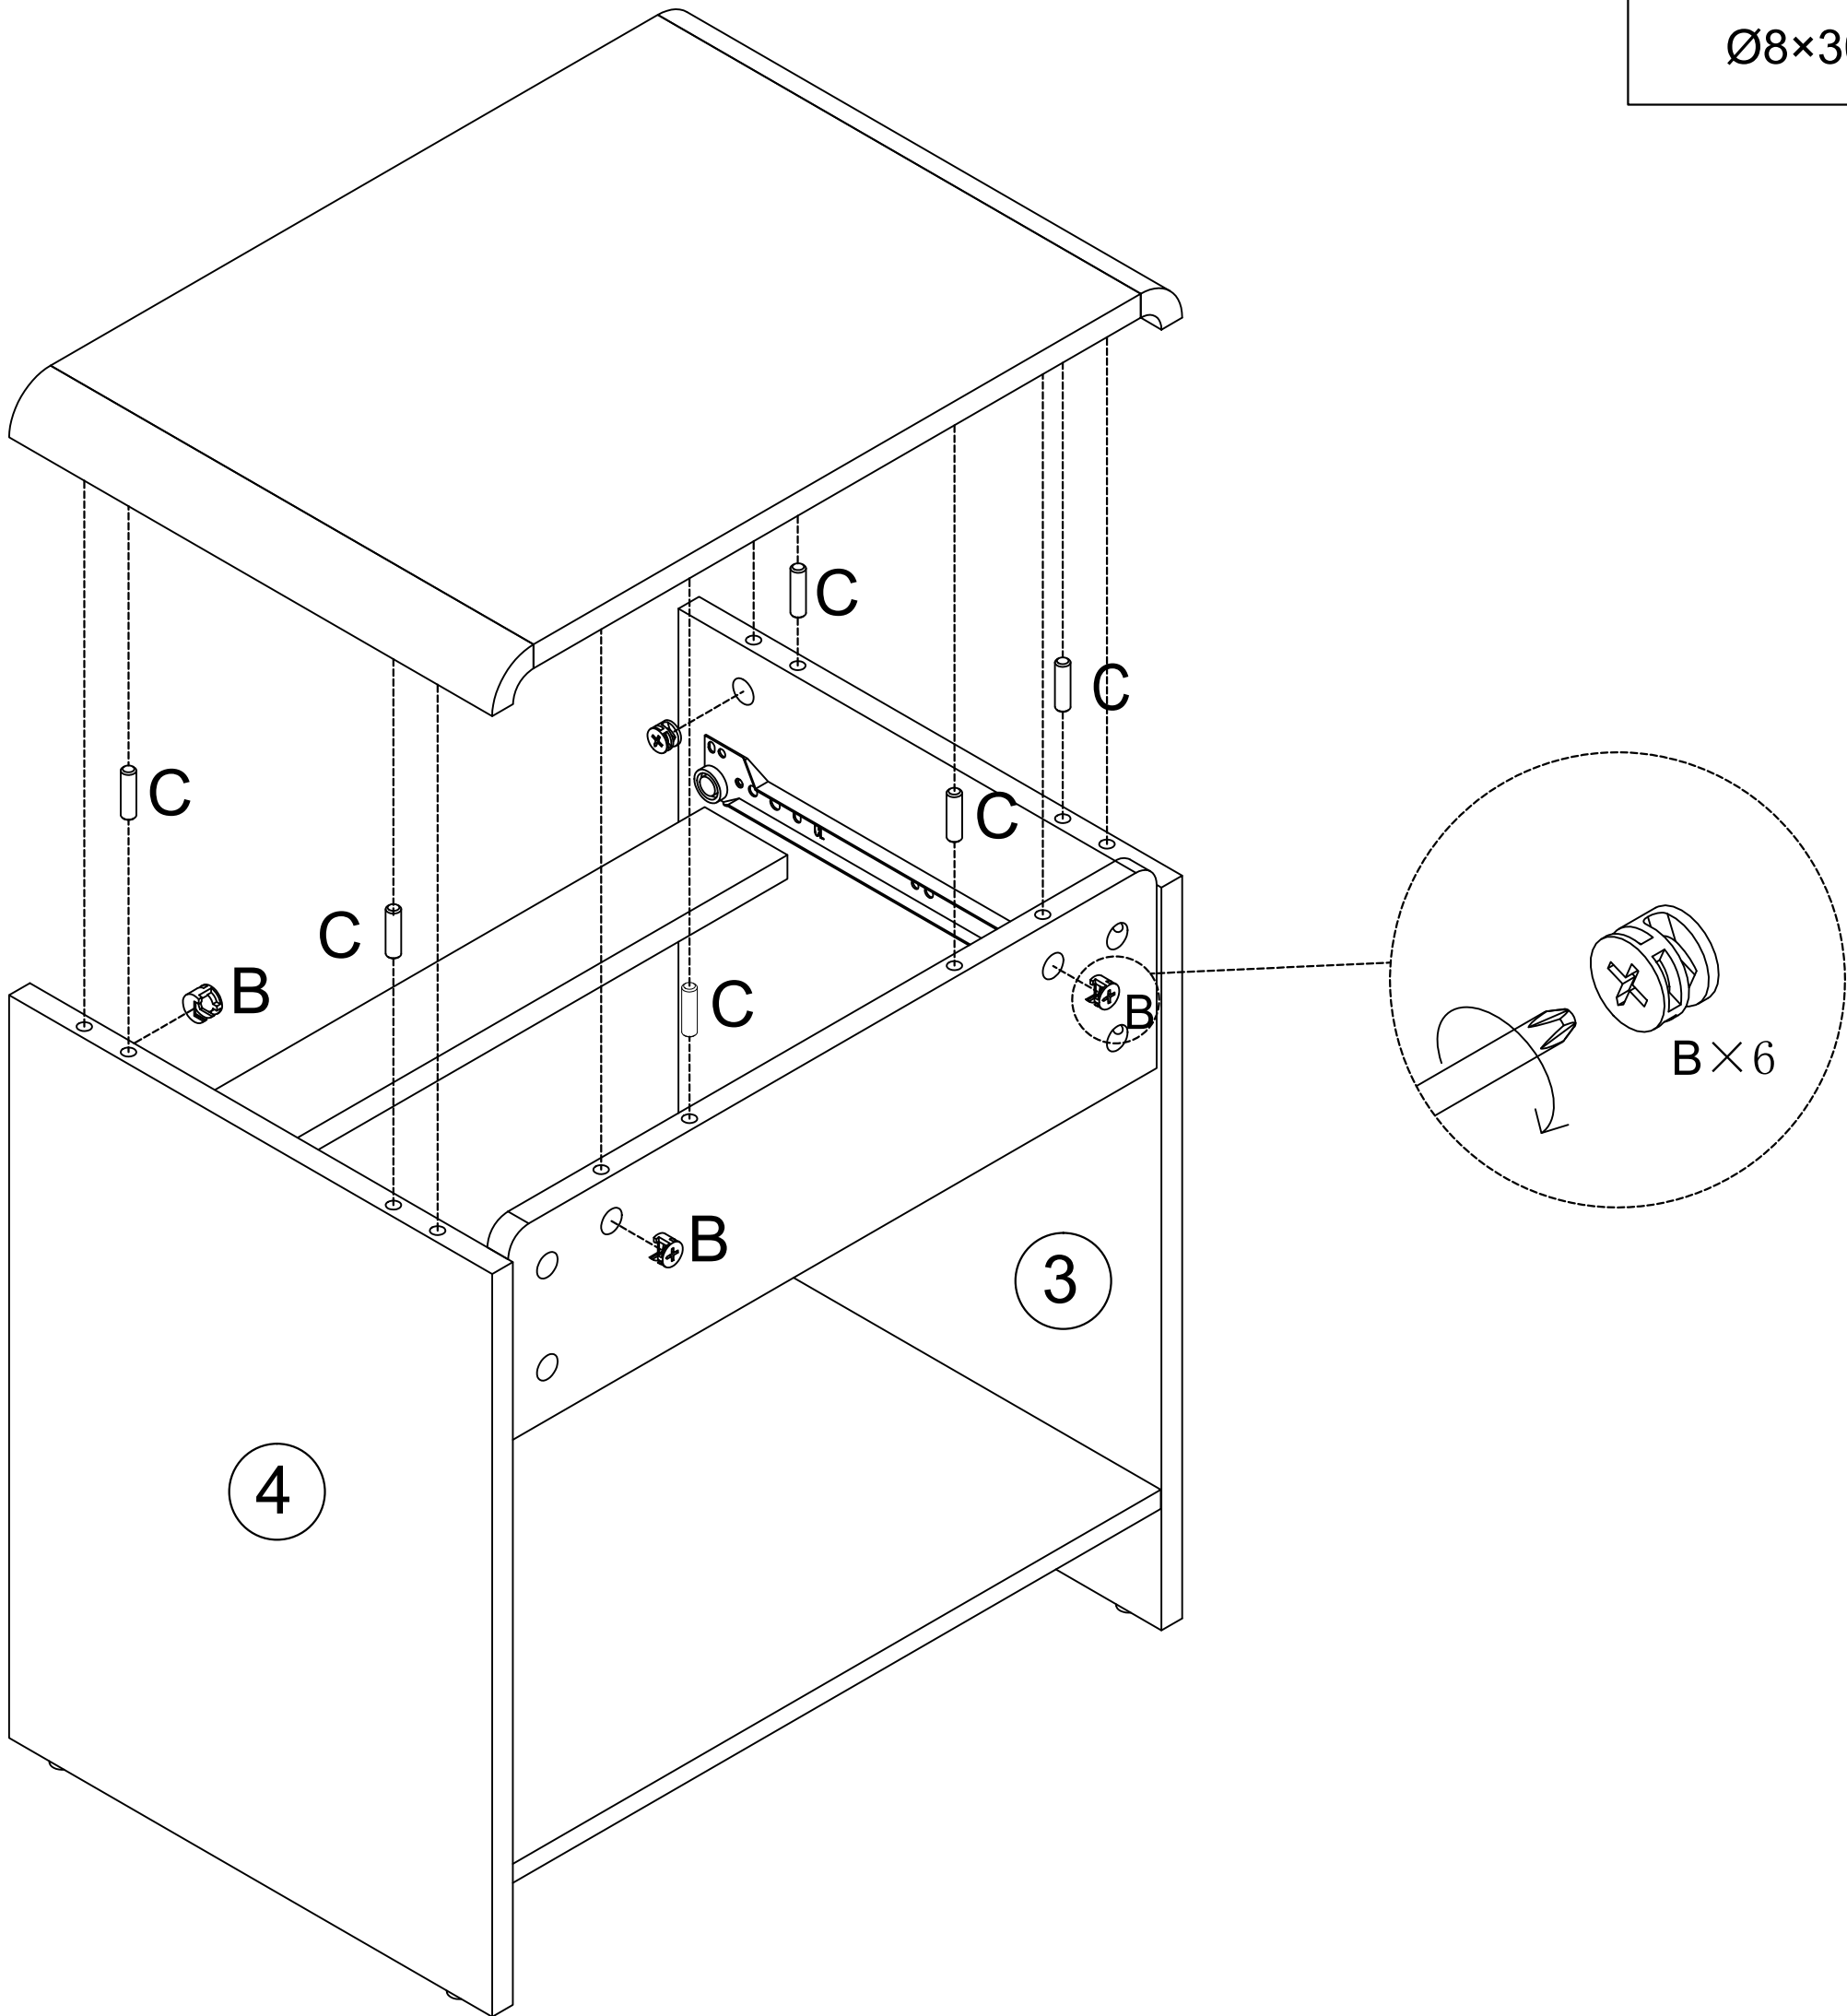


Step 9

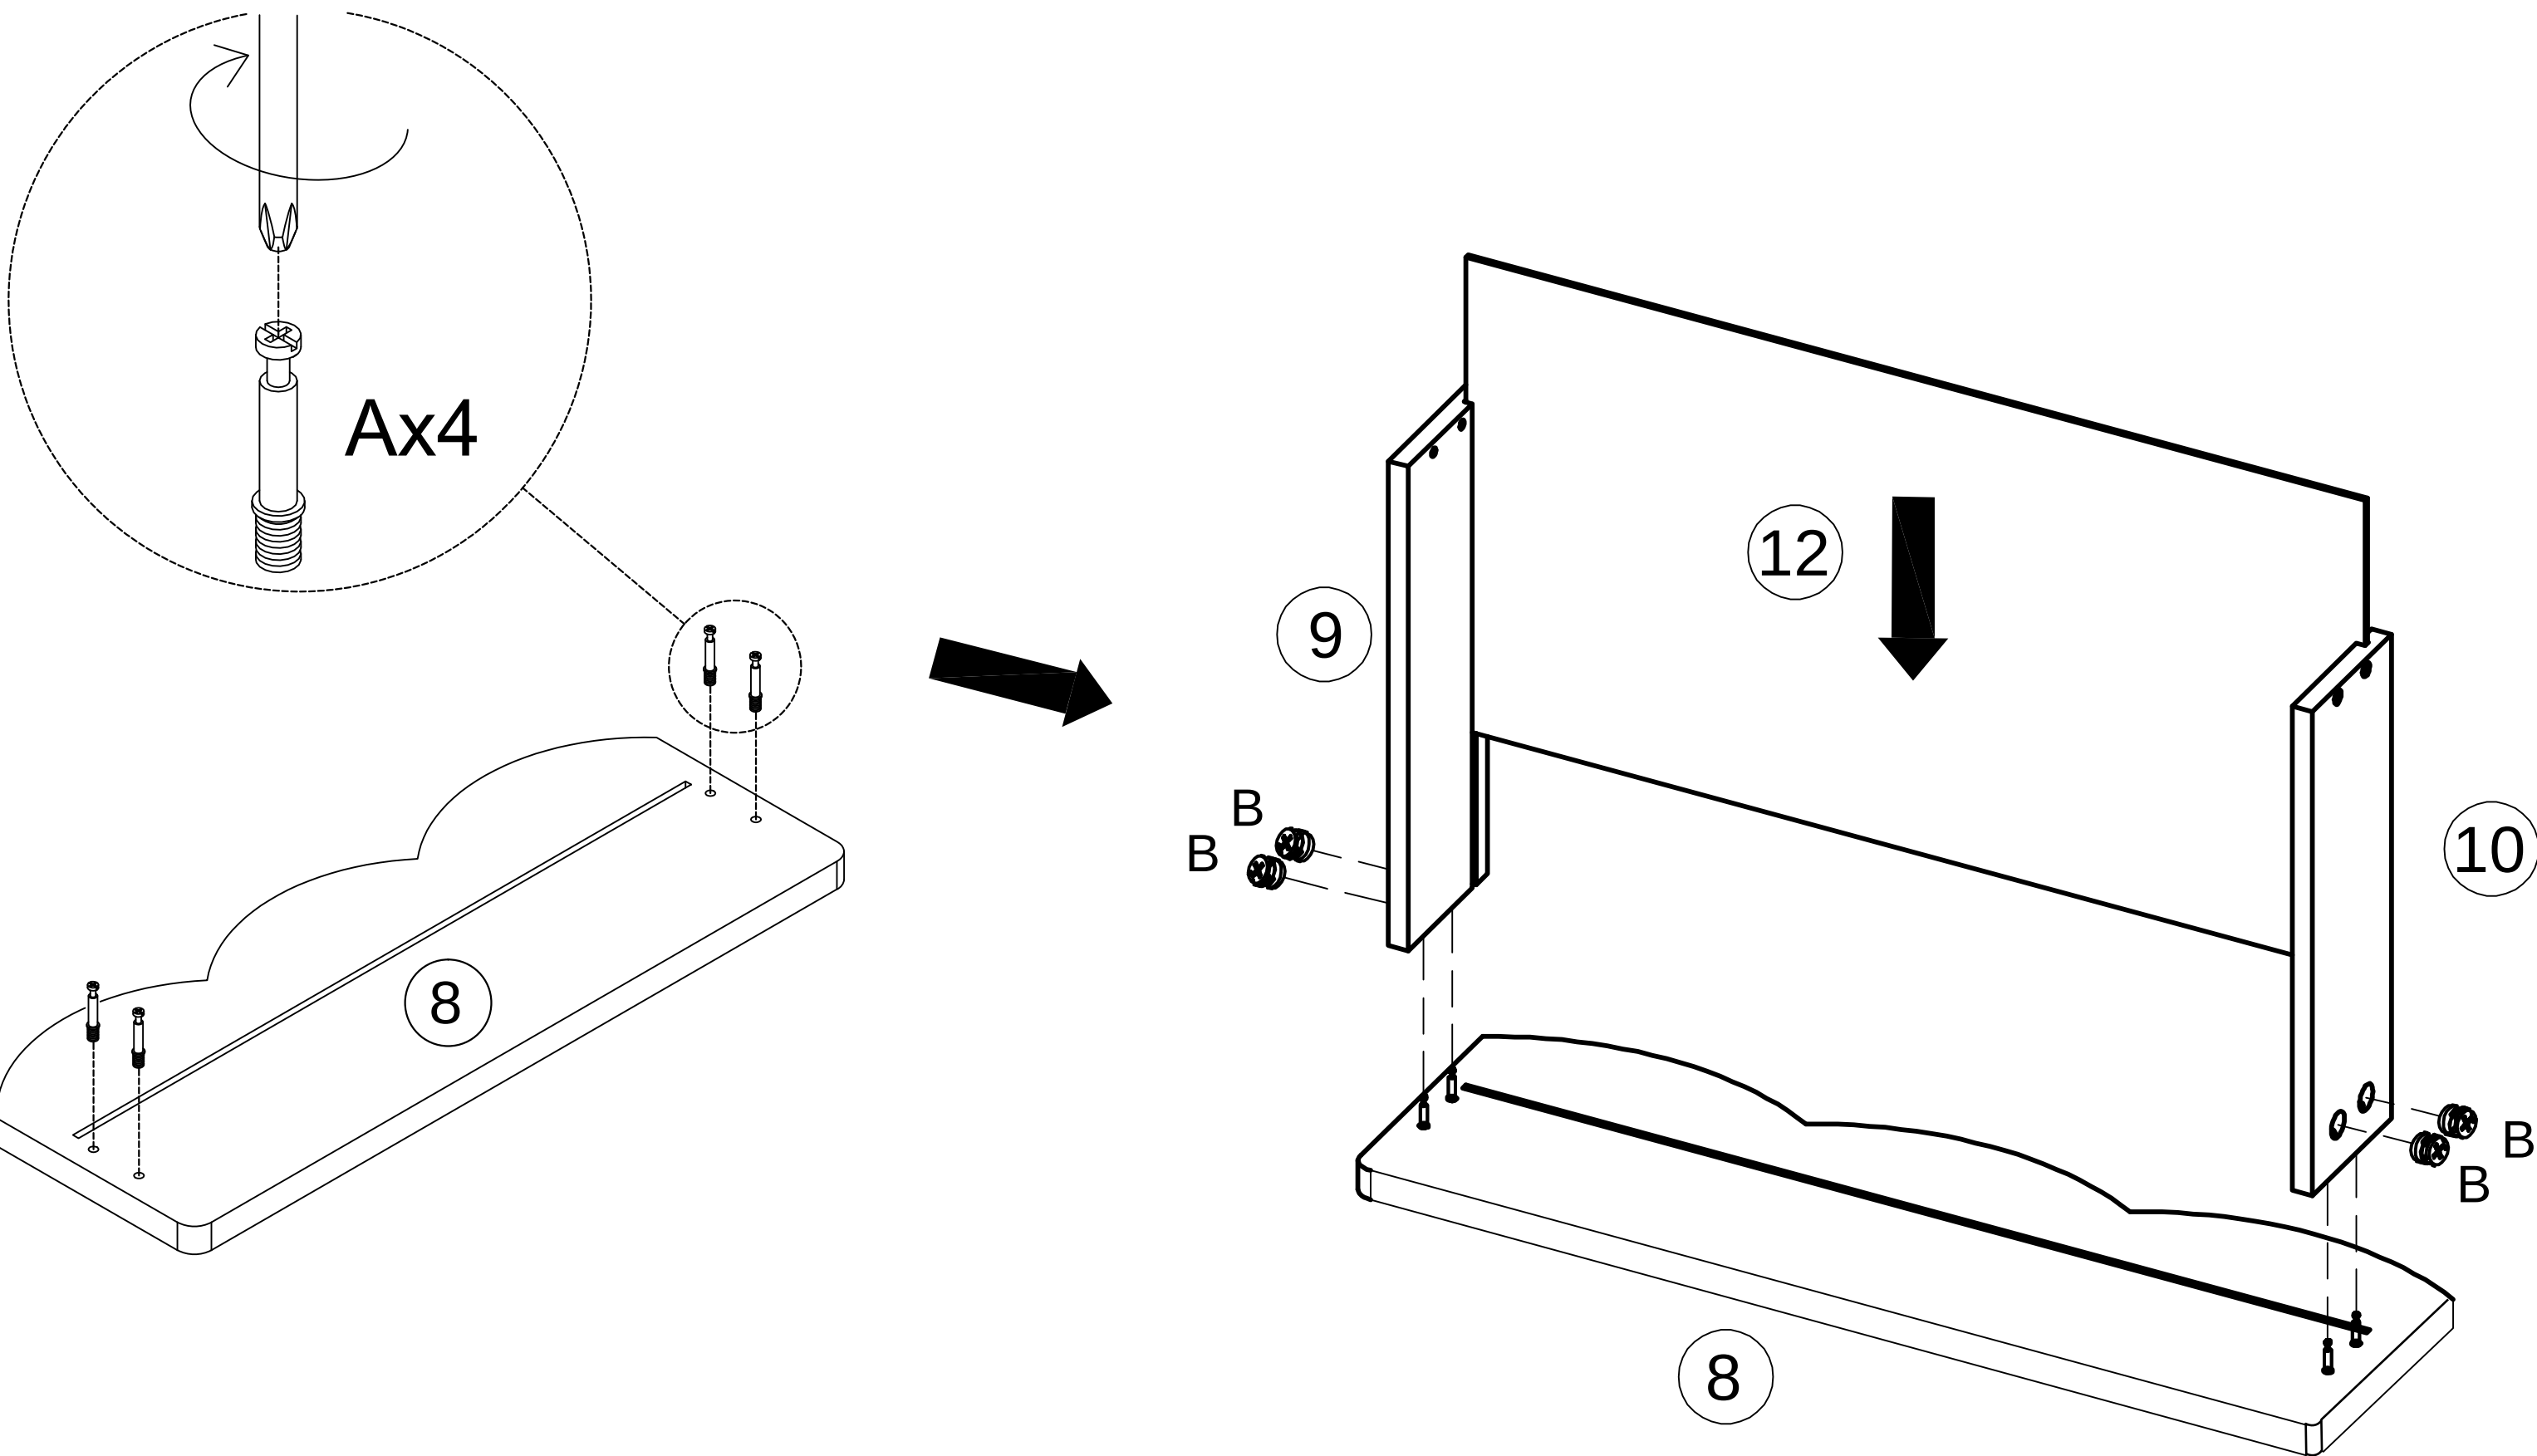


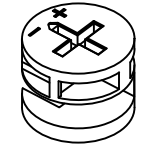

B x 4	A x 4
	
Ø15×10 mm	Ø6×35 mm

Step 10

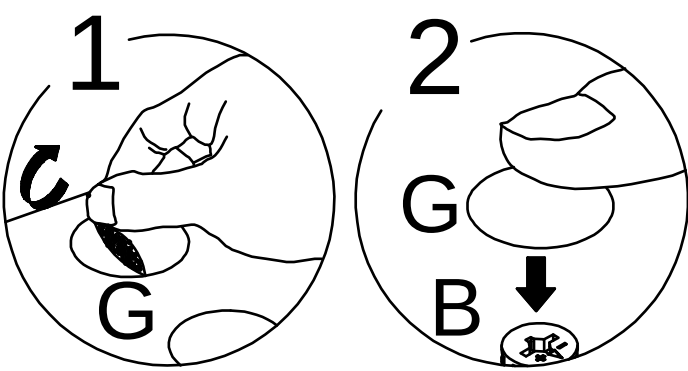


For beauty and safety.
Please attach four G-hole stickers
at the end of this step.

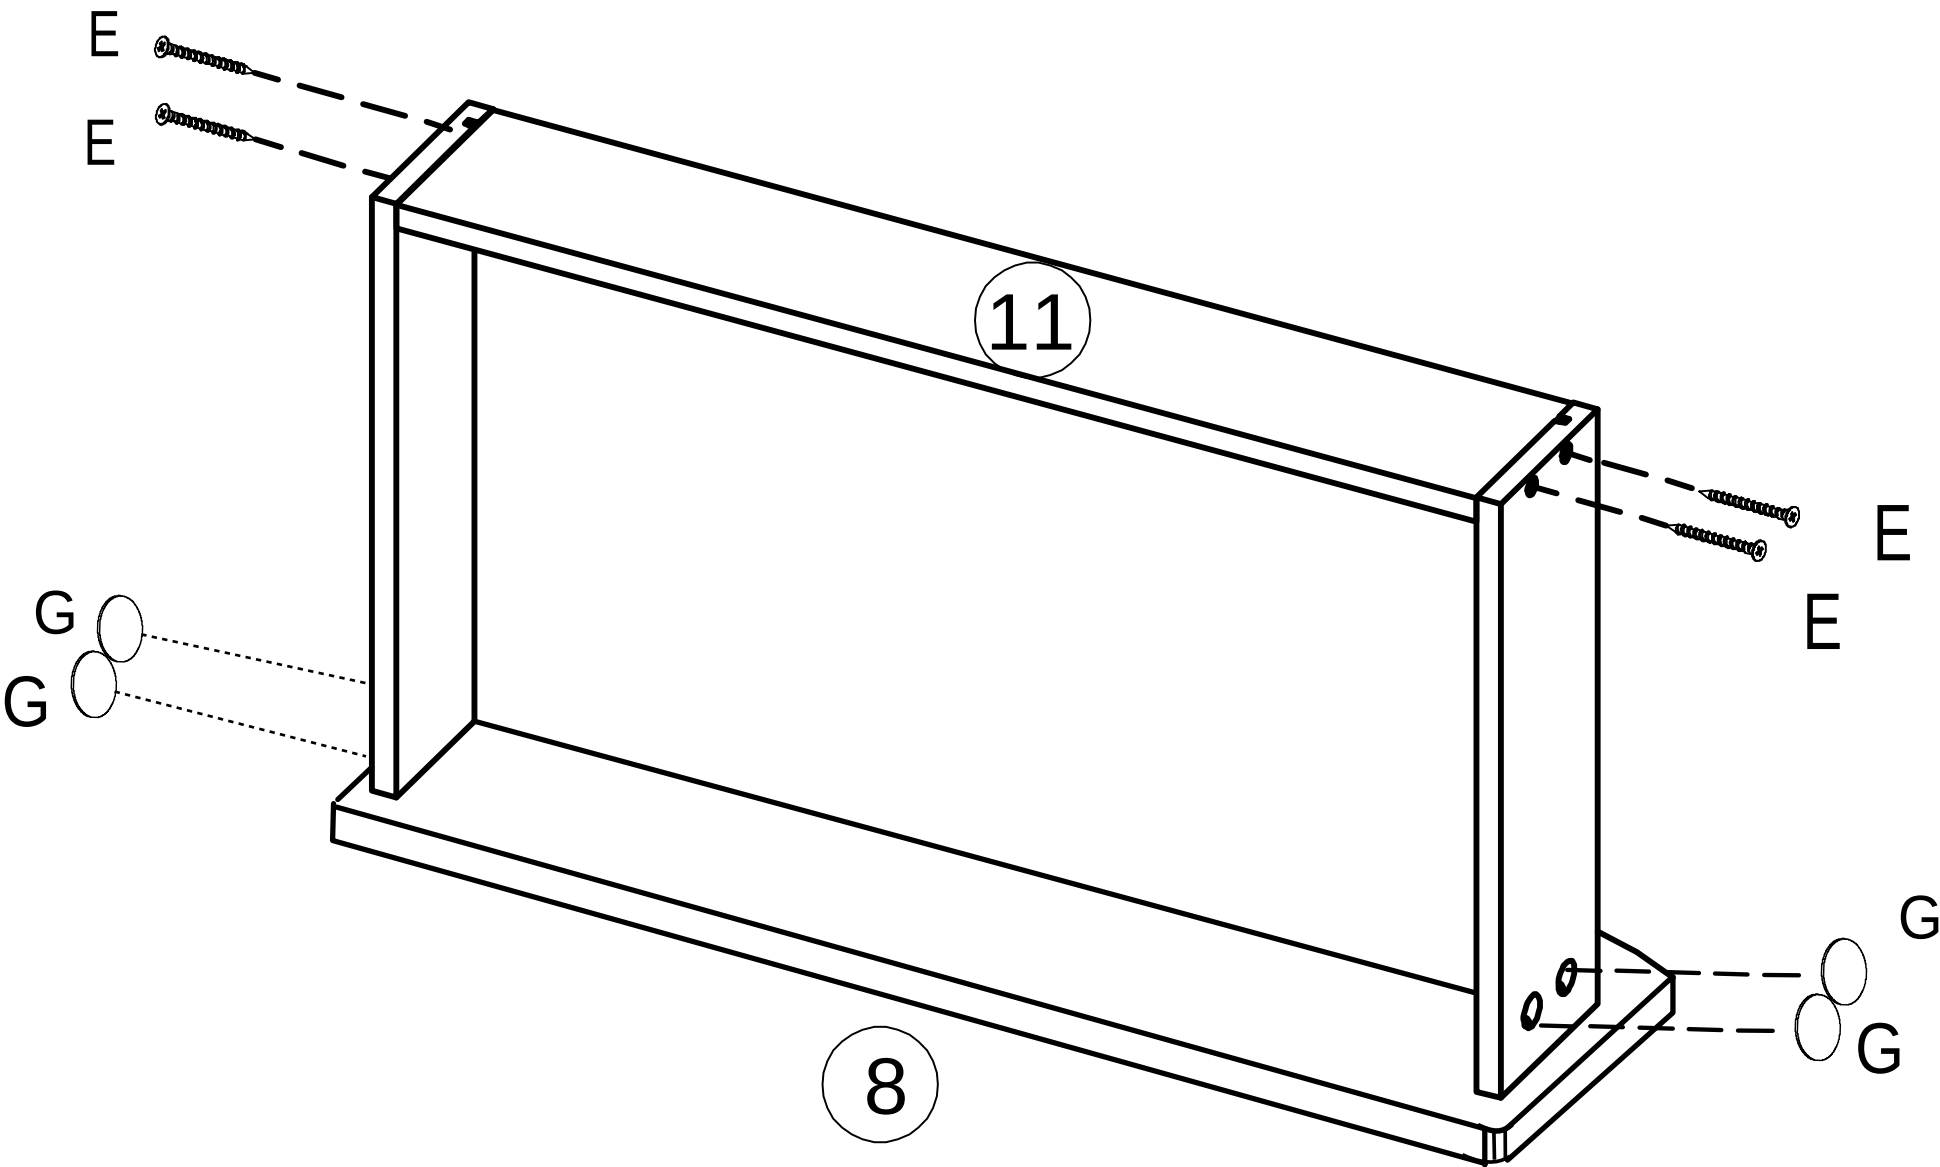

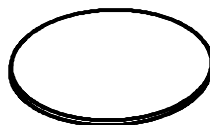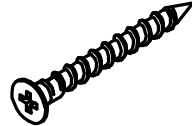
G	x 4	E	x 4
			
		Ø4×35 mm	

Step 11

DRx1	DLx 1	D x 4 Ø3×14 mm
------	-------	-------------------

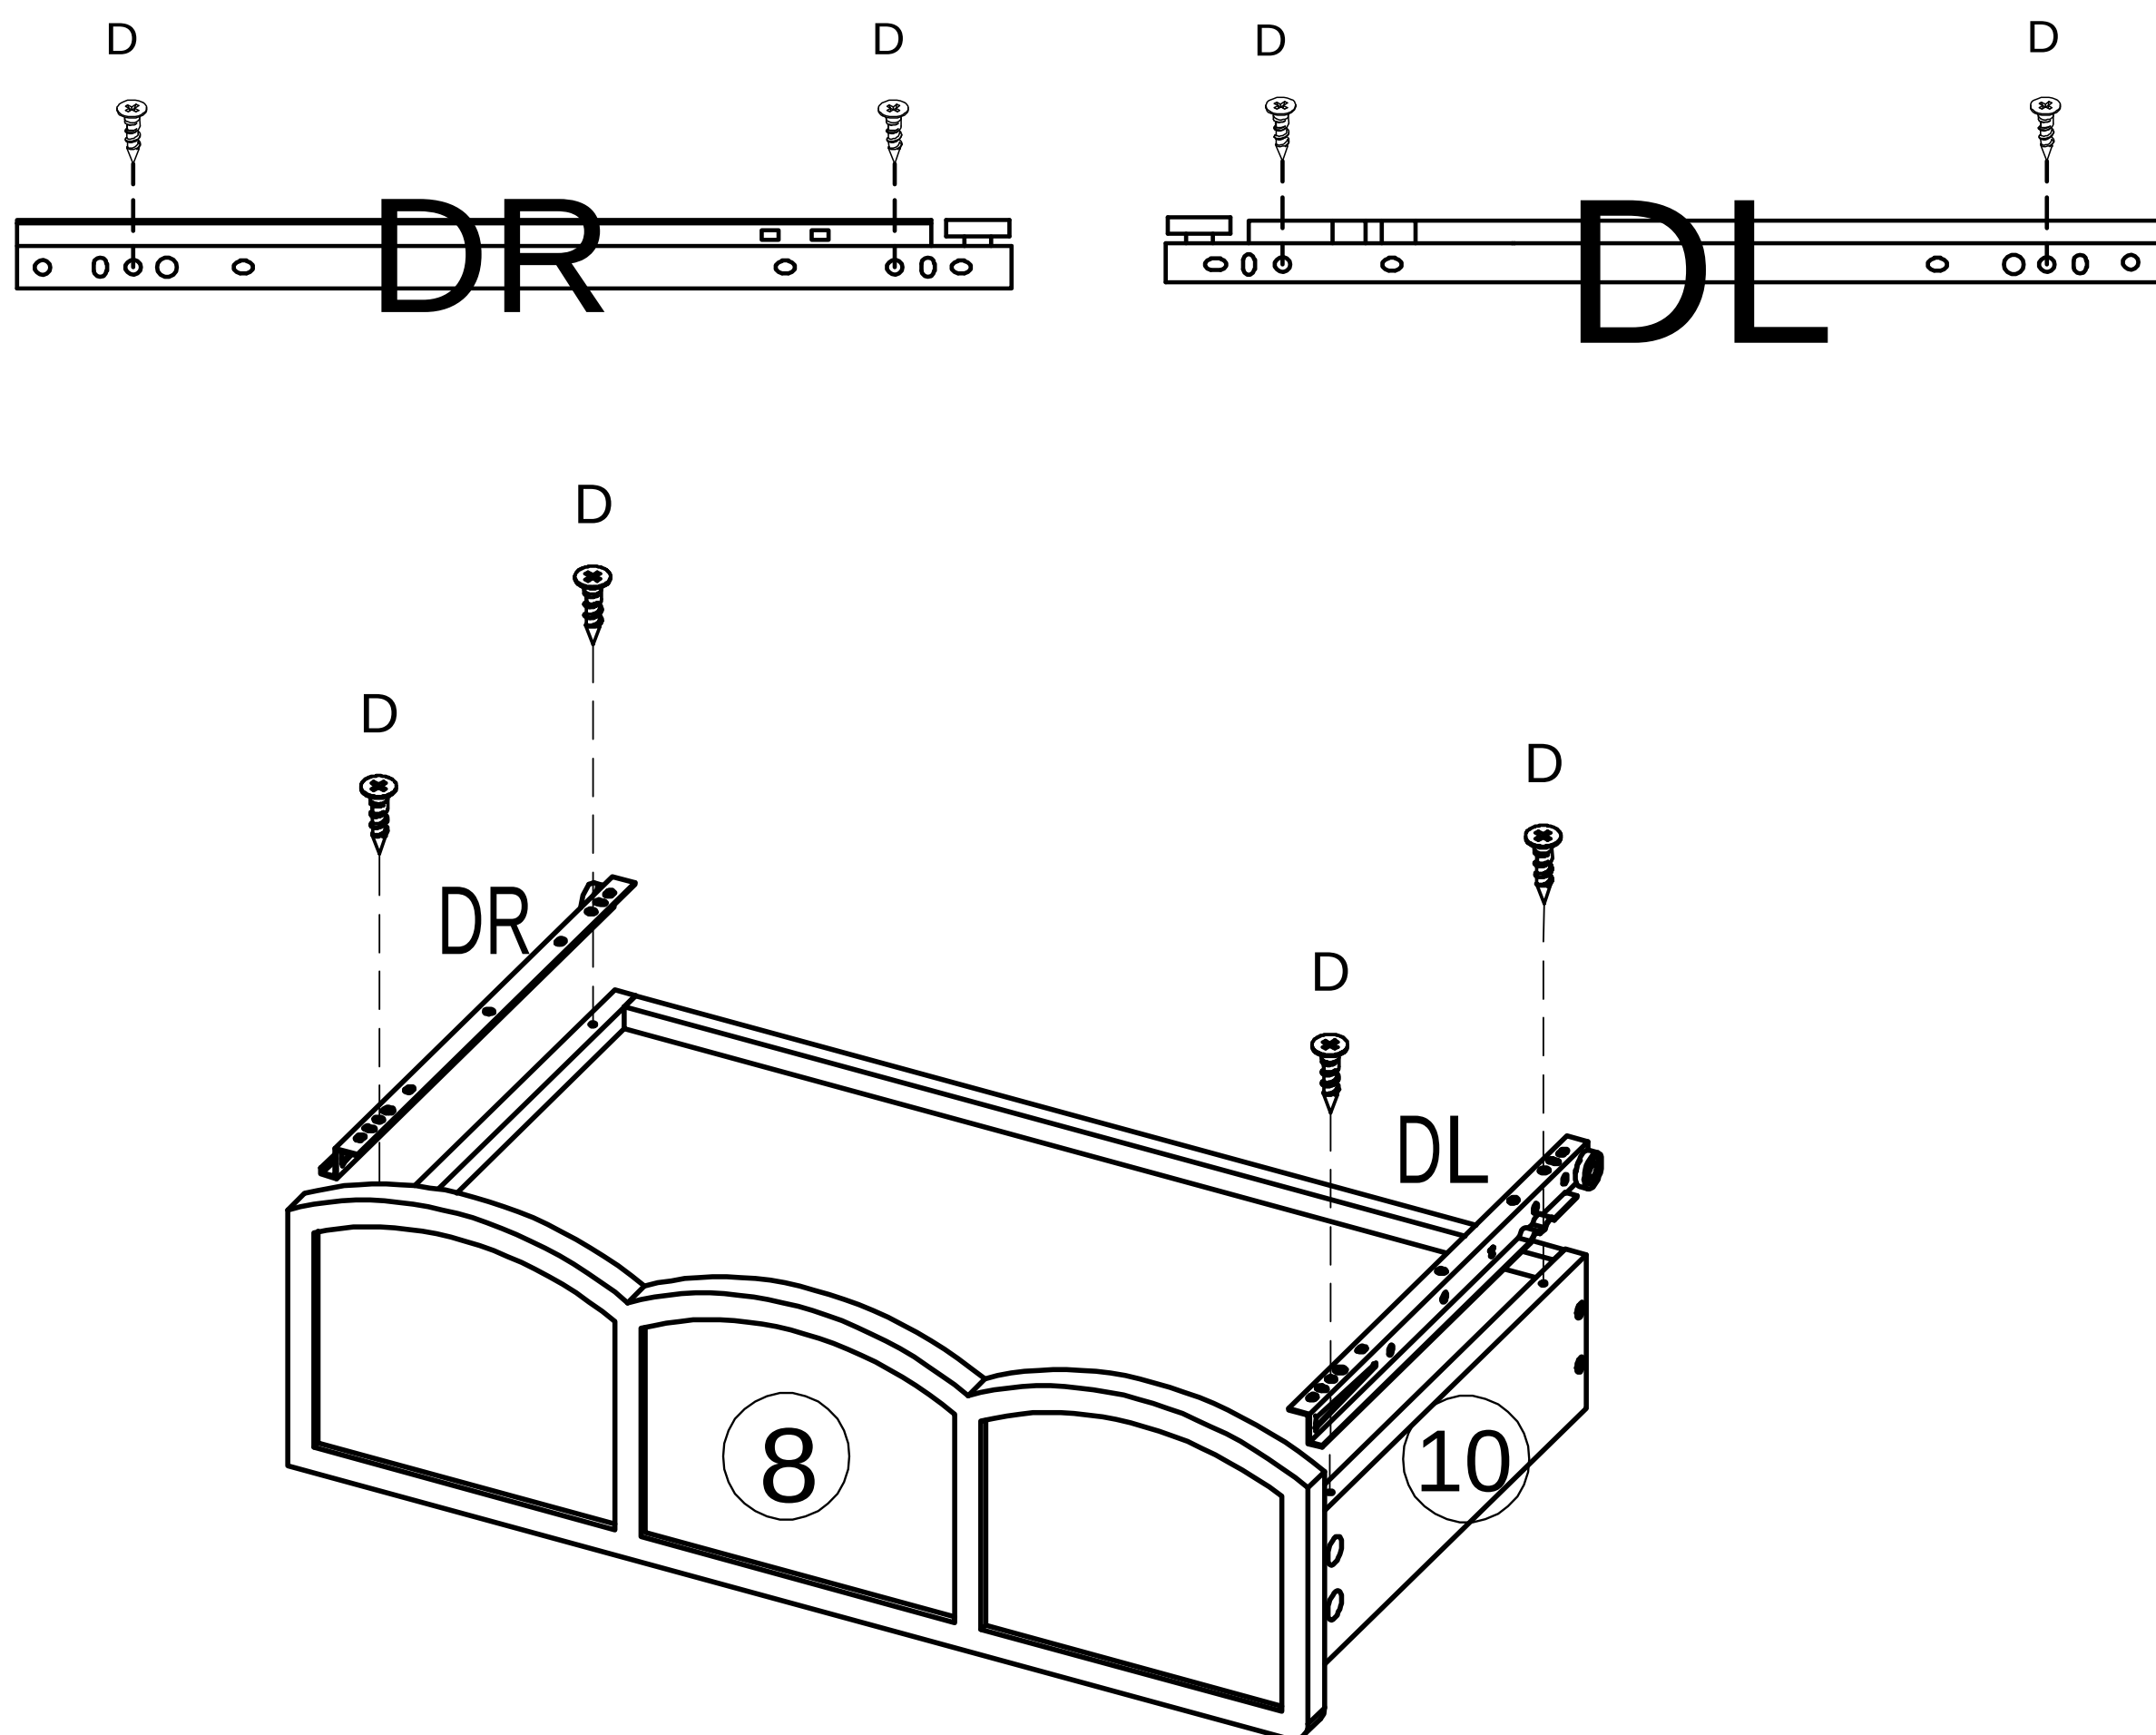


Step 12

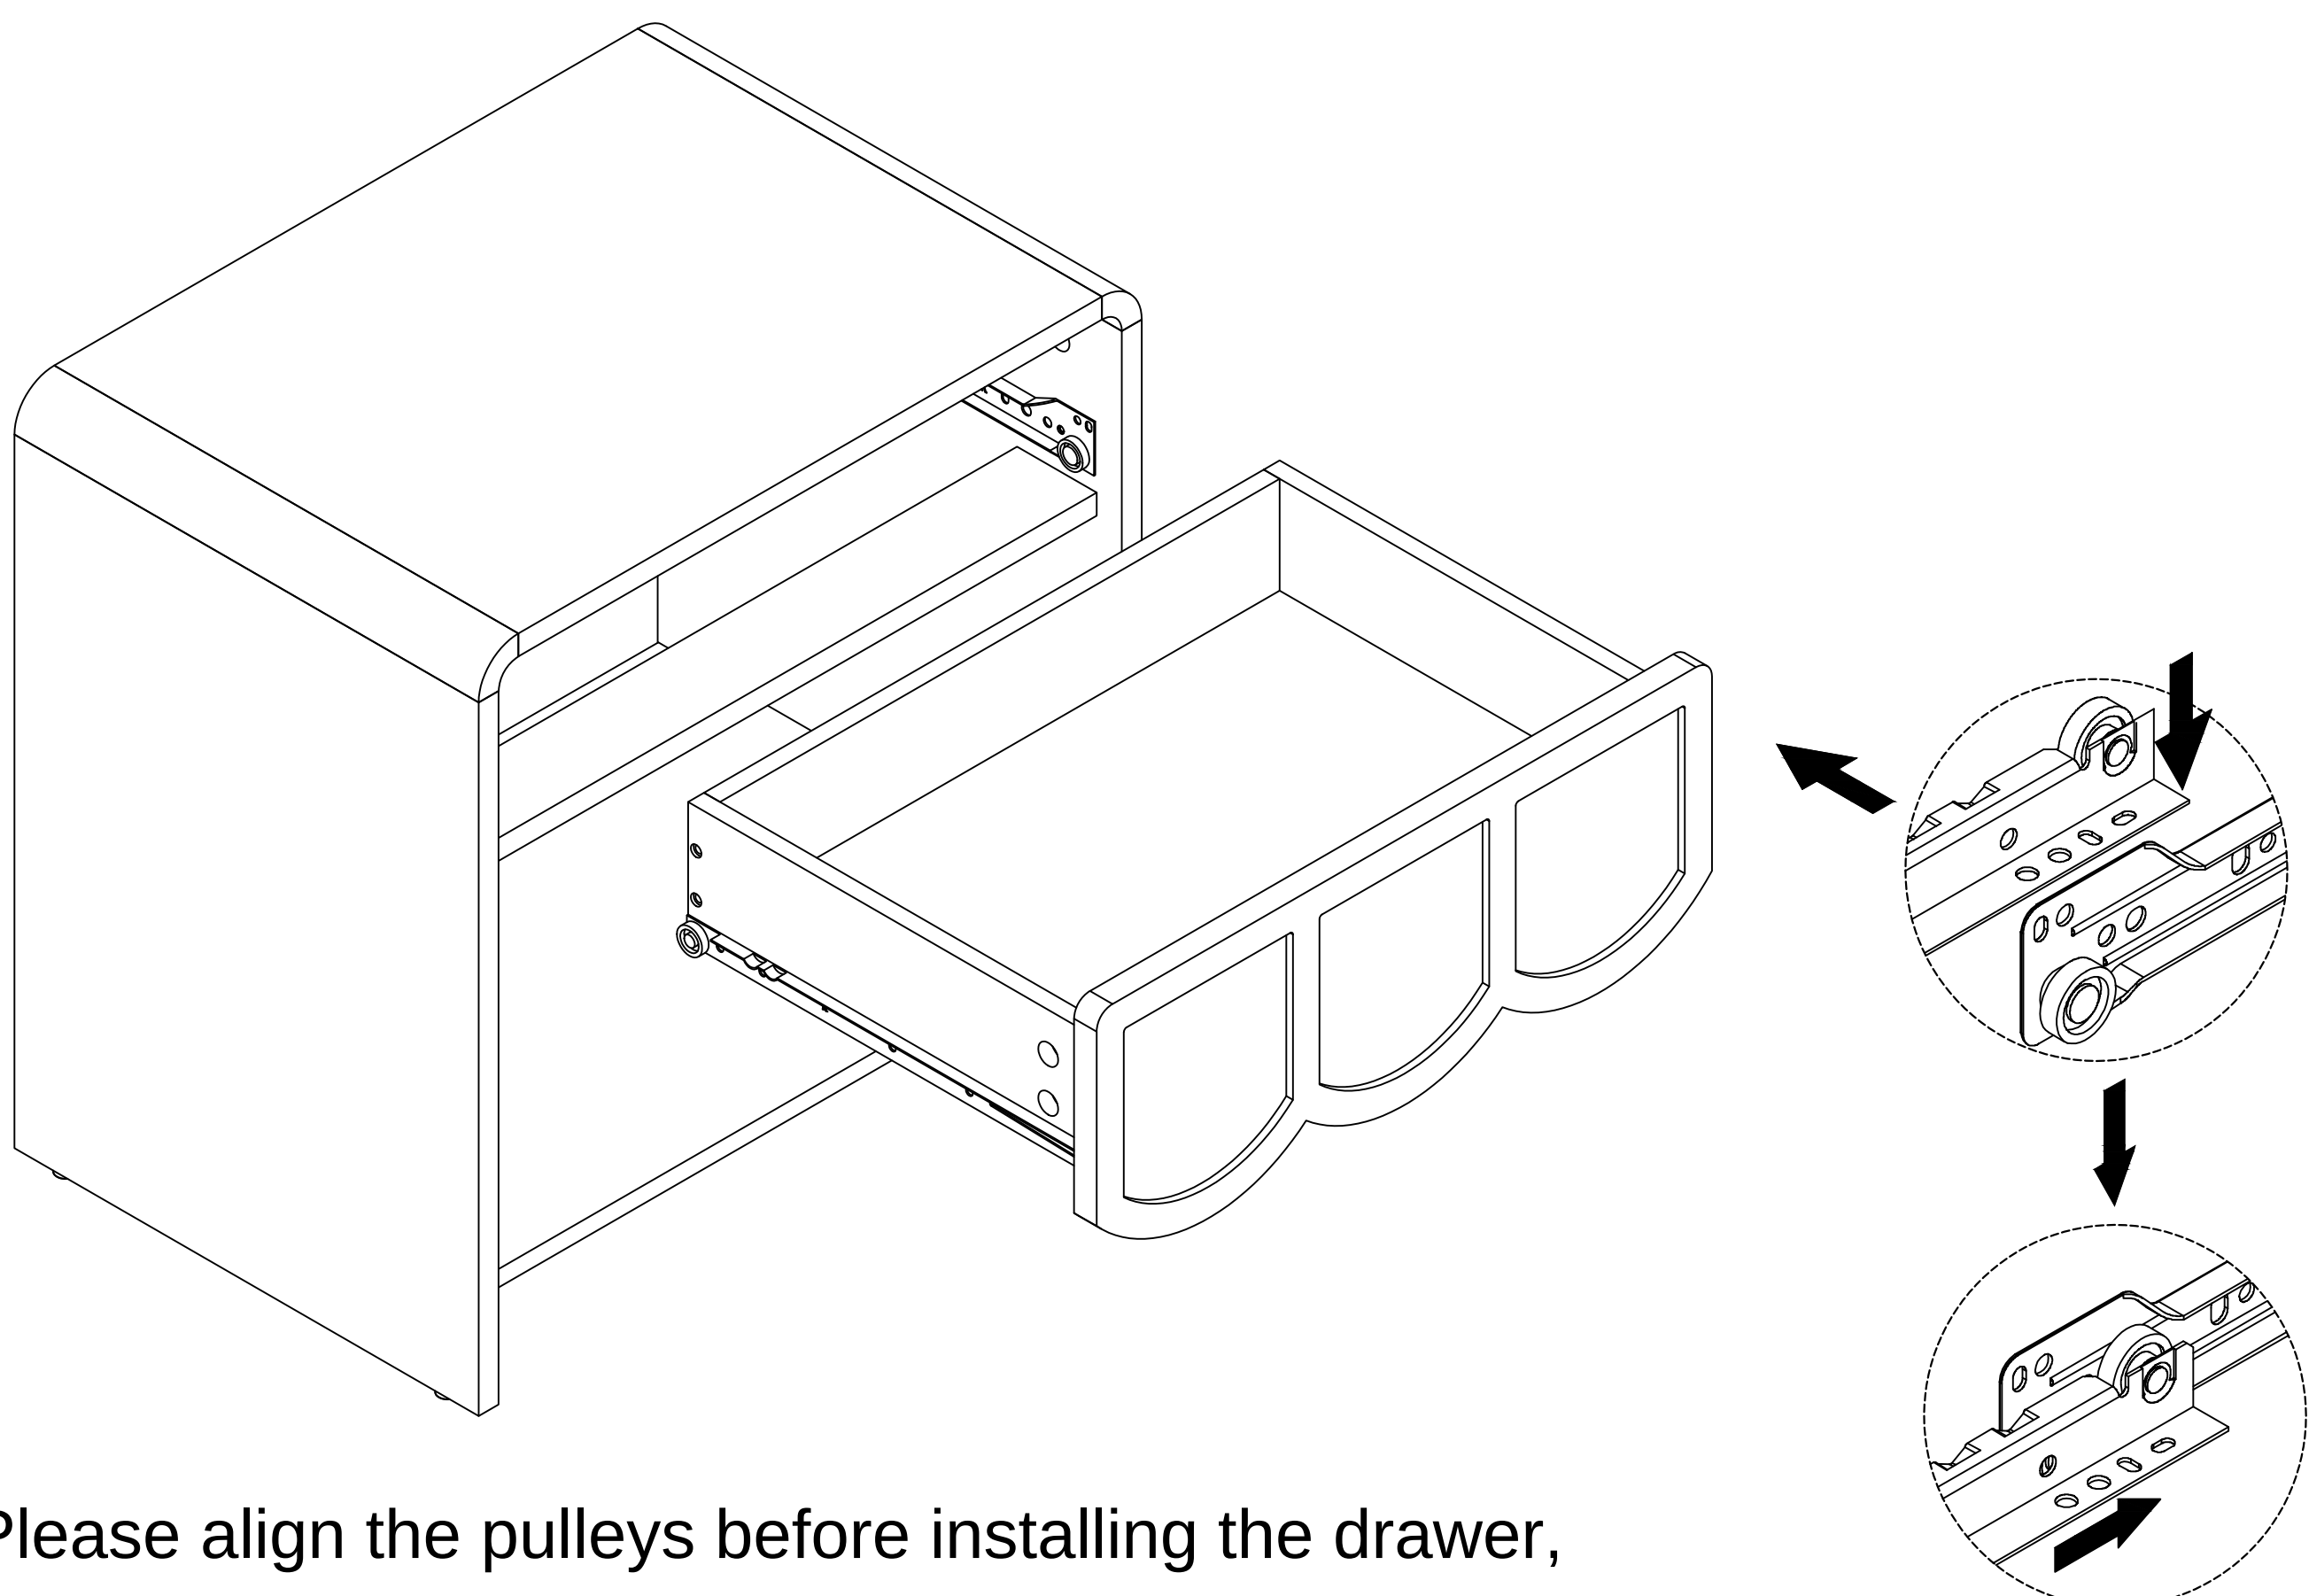

Please align the pulleys before installing the drawer, otherwise it will cause the drawer to slide uneasily.

Step 13

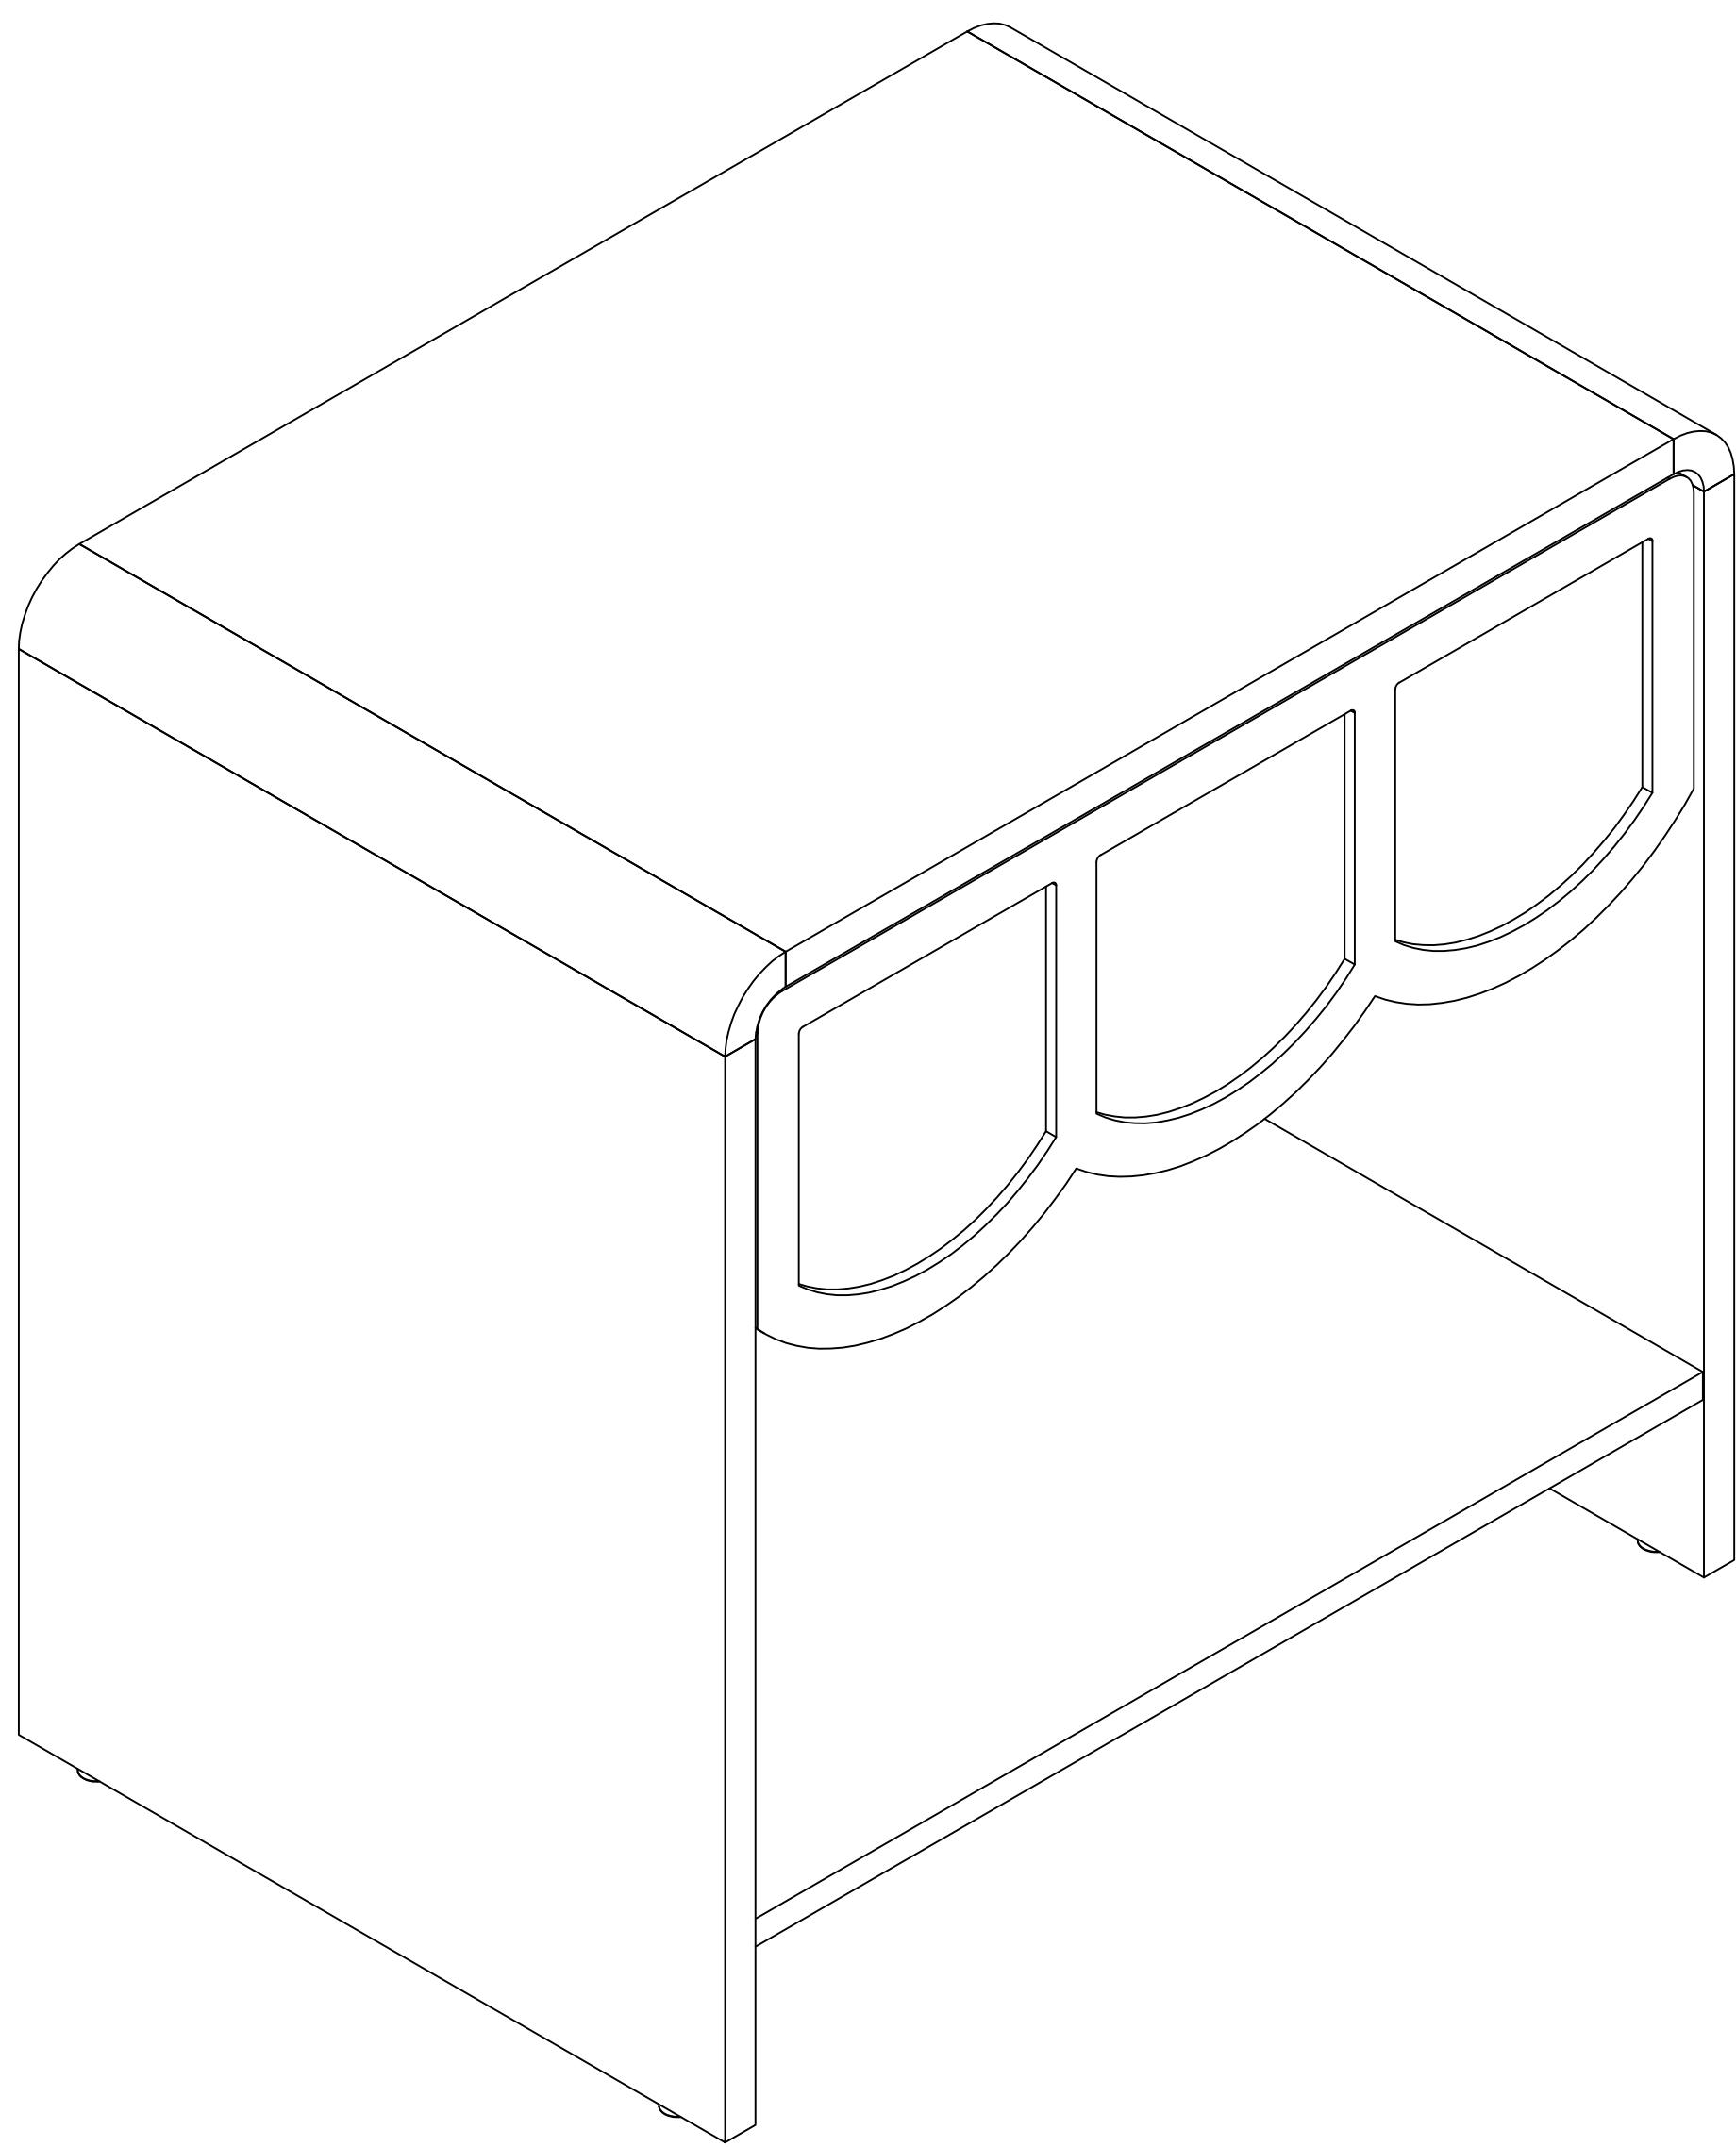

Step 14