


ASSEMBLY INSTRUCTIONS


FULL HOUSE LOFT BED

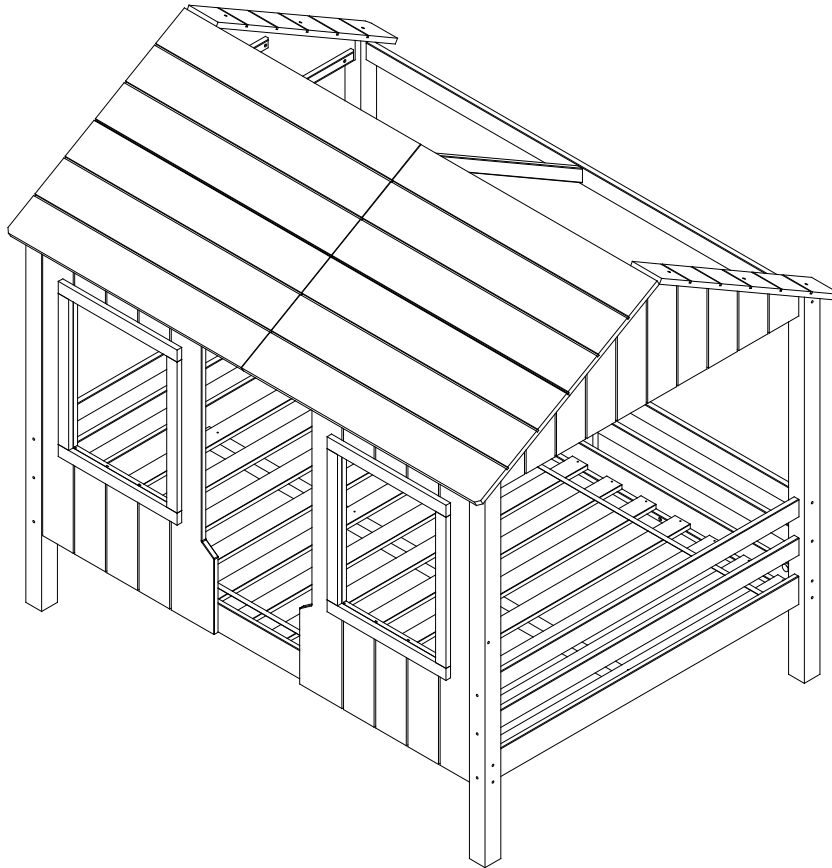


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.


"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

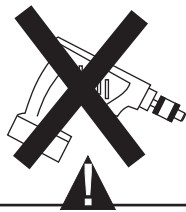


* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.

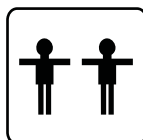


+

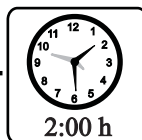

Tools Required



(Not included)



(Not included)

IMPORTANT:


PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Part List - FULL HOUSE LOFT BED



**RUSTIC
OUTSIDE**




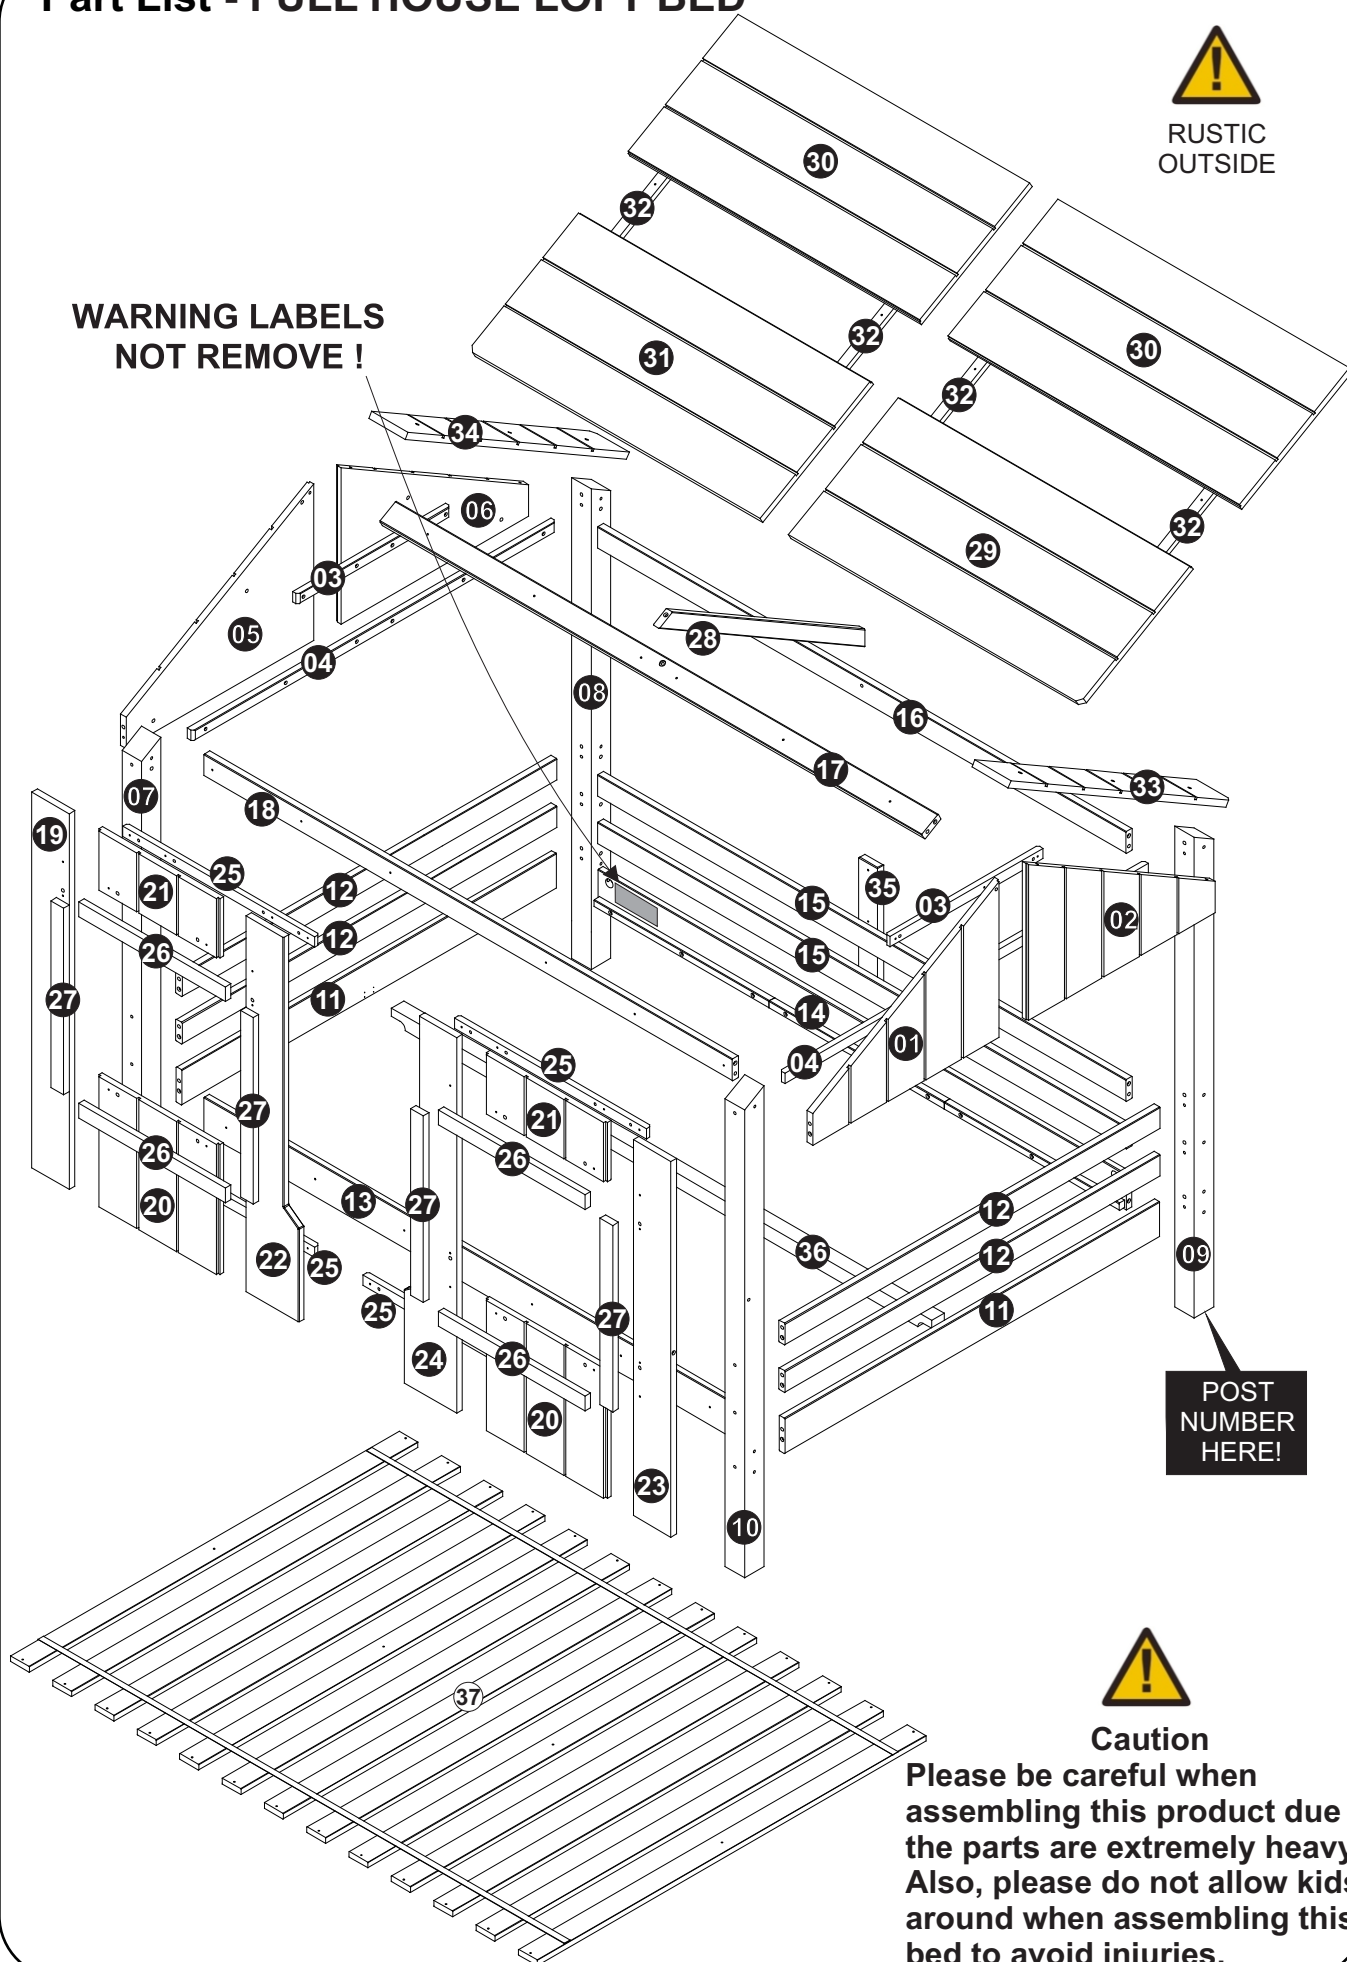









**WARNING LABELS
NOT REMOVE !**





Caution


Please be careful when assembling this product due the parts are extremely heavy. Also, please do not allow kids around when assembling this bed to avoid injuries.

Identifying the Hardware-Identify the hardware using the illustrations below.

A	 Ø 10x40	30
B	 Ø 8x25	52
C	 Ø 3,5X16	20
D	 Ø 4X30	52
E	 Ø 1/4X110 Cab 17	04
F	 Ø 7X100 Cab 17	30
G		04
H		02
I	 Ø 7X50 Cab 17	04
J	 Ø 4X35	30
K		02
L	 Ø 4X35	59
M		04

01

A		30
B		04

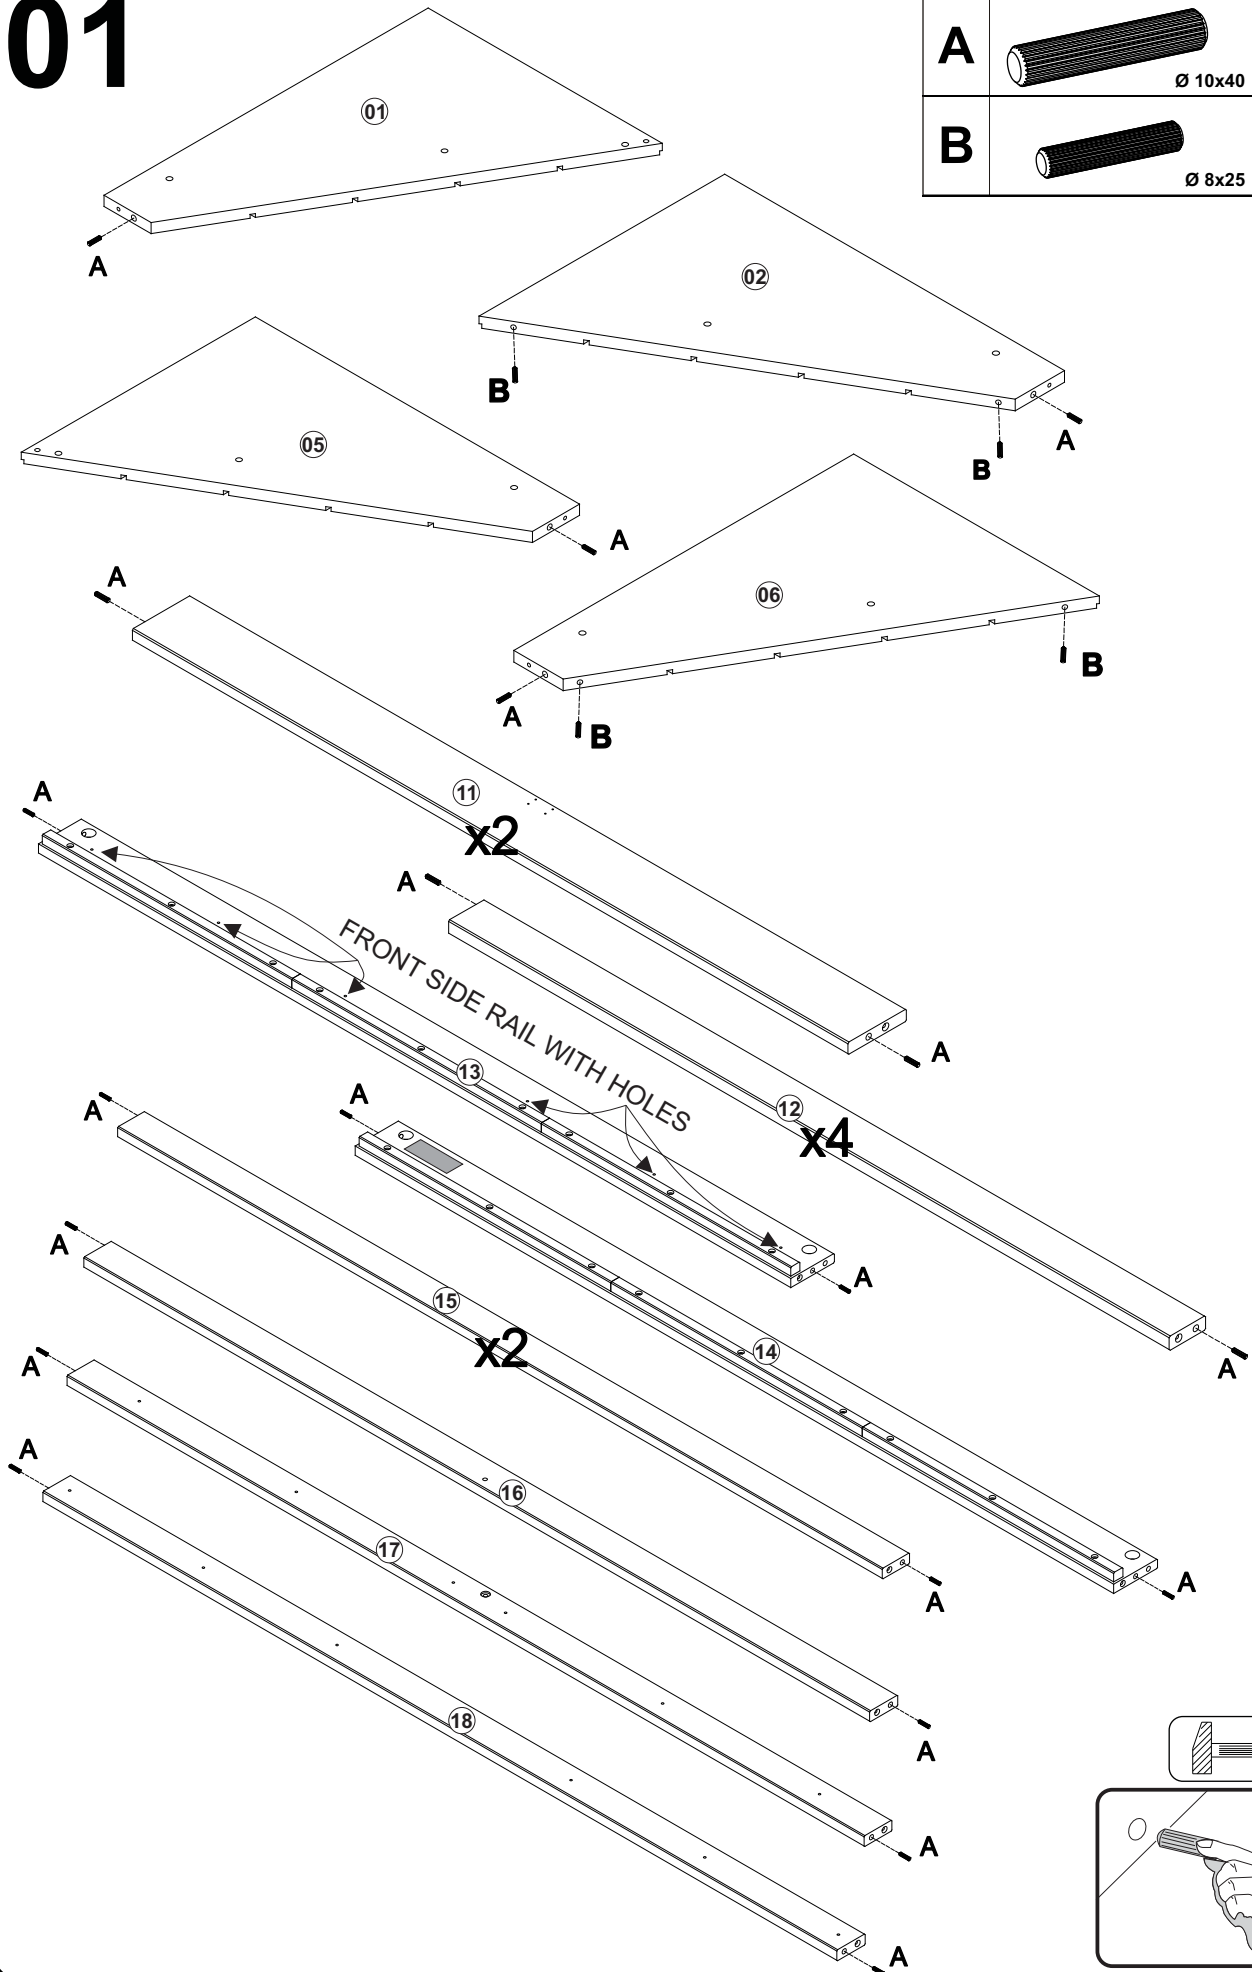




02

B






Ø 8x25

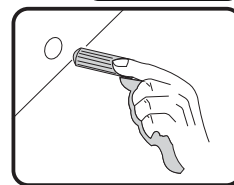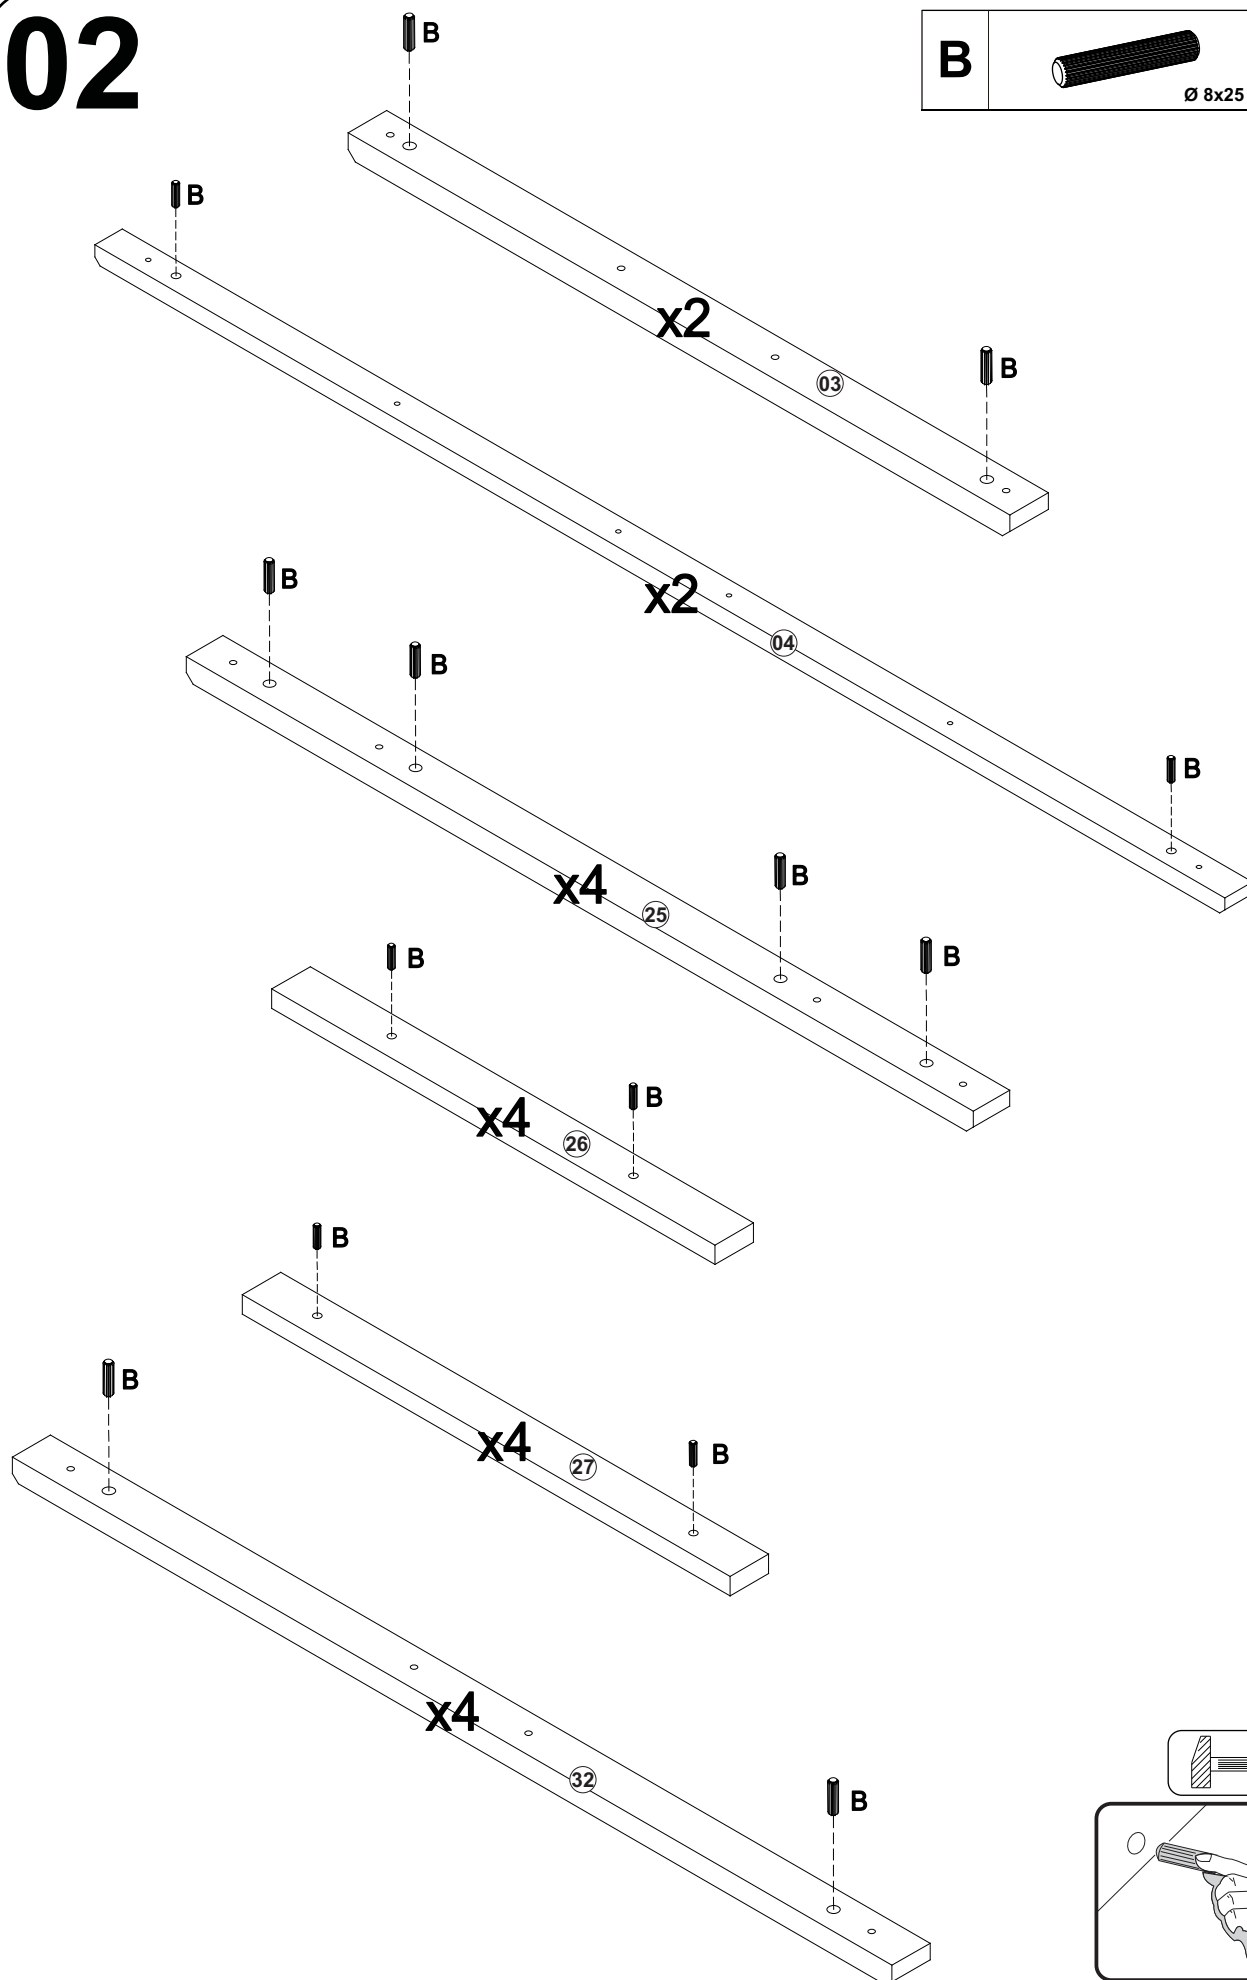

48

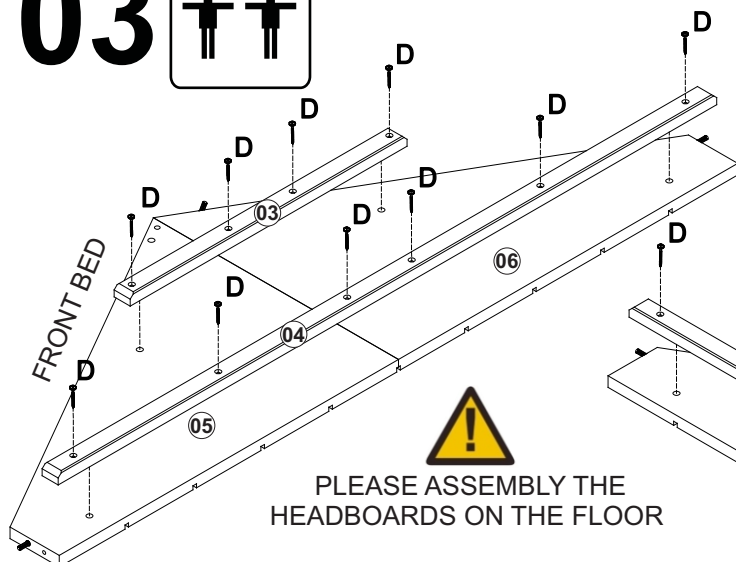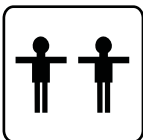


03



D		20
Ø 4X30		

D	L
	
Ø4X30 Ø4X35	





SCREW

PLEASE ASSEMBLY THE HEADBOARDS ON THE FLOOR



RUSTIC OUTSIDE

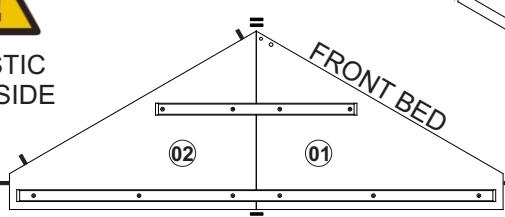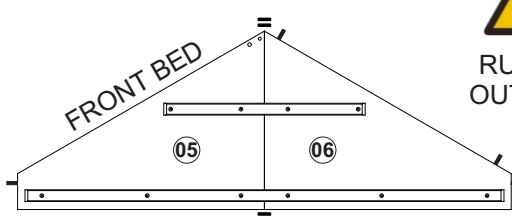

04







LEFT HEADBOARD





RUSTIC OUTSIDE




PLEASE ASSEMBLY THE HEADBOARDS ON THE FLOOR

C		04
Ø 3,5X16		
F		08
Ø 7X100 Cab 17		
H		01
K		01

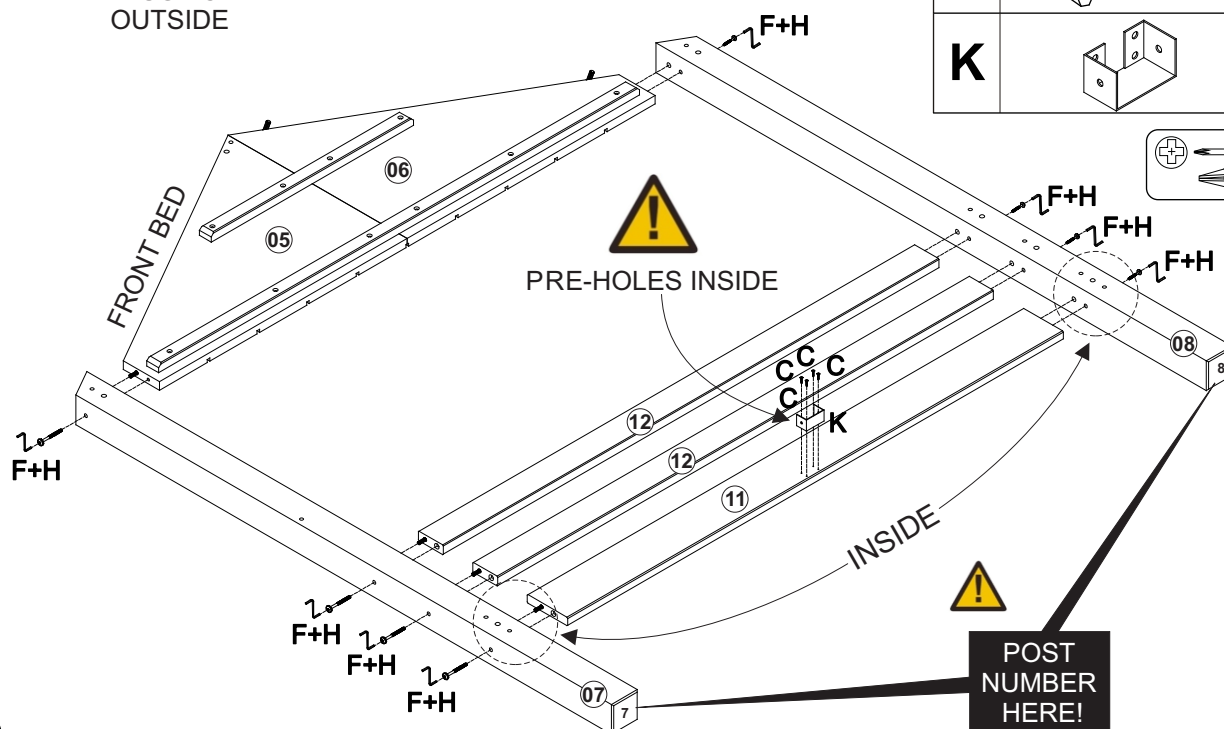

05

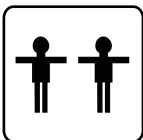

RIGHT HEADBOARD



PLEASE ASSEMBLY THE HEADBOARDS ON THE FLOOR




RUSTIC OUTSIDE




PRE-HOLES INSIDE



POST NUMBER HERE!

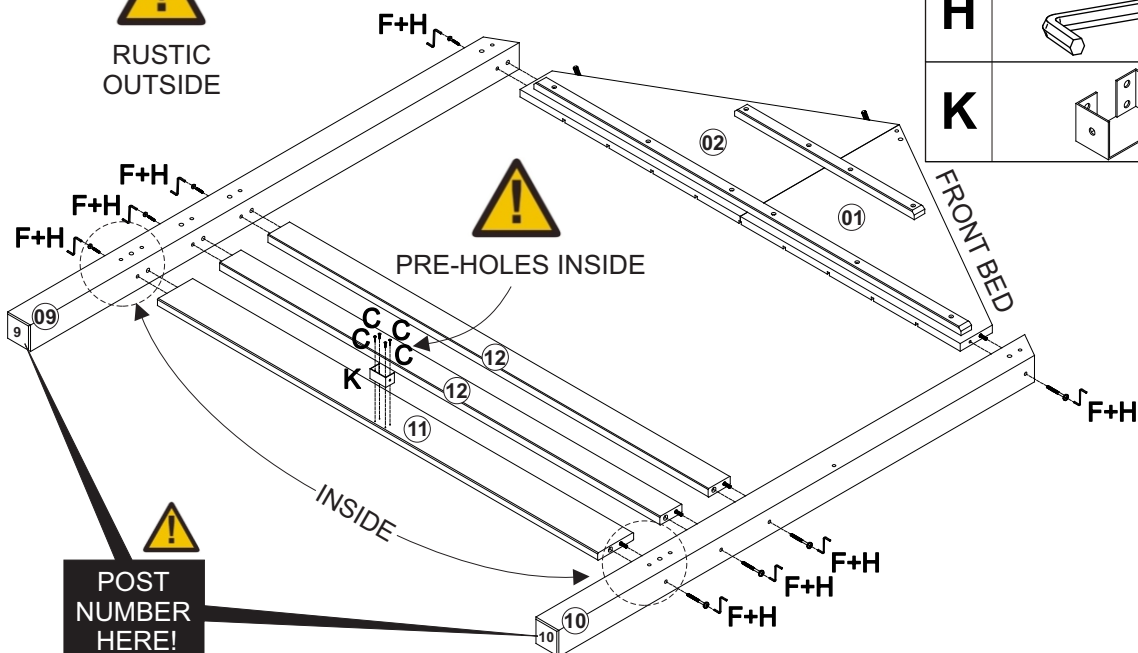


C		04
F		08
H		01
K		01




06



ATTENTION: COUNTERSINK ON TOP

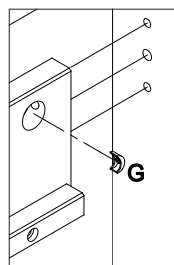

E		04
F		12
G		04
H		01
I		02

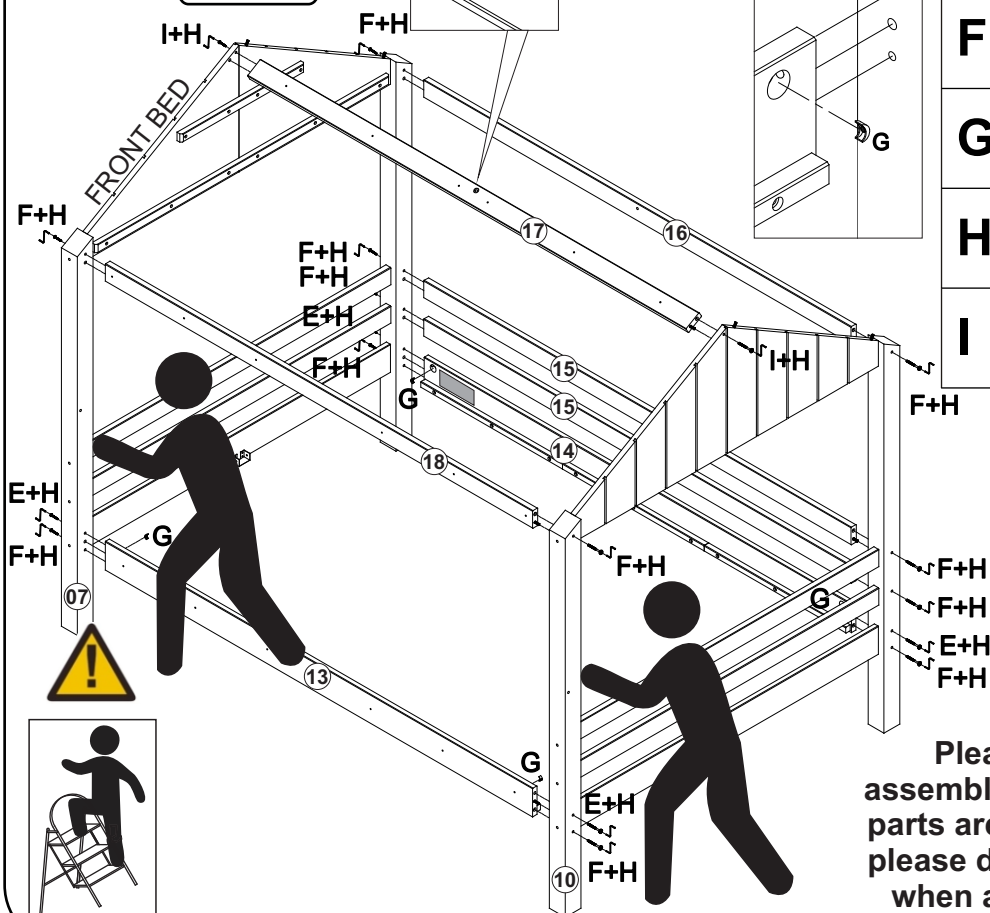




Caution




Please be careful when assembling this product due the parts are extremely heavy. Also, please do not allow kids around when assembling this bed to avoid injuries.

07

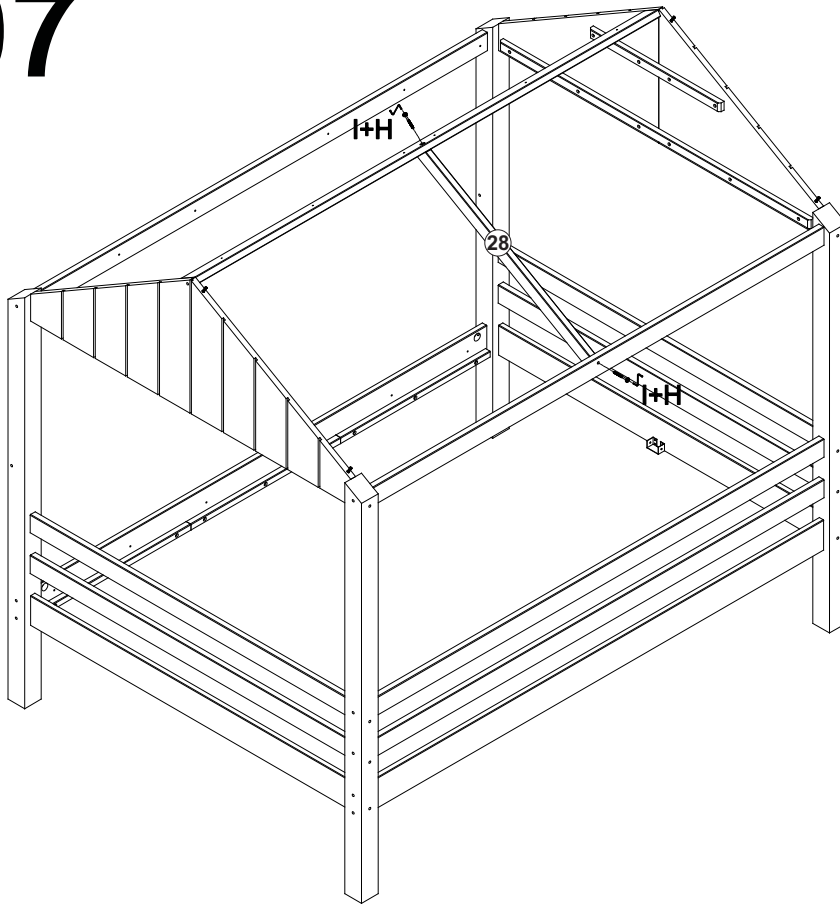


H		01
I	 Ø 7X50 Cab 17	02



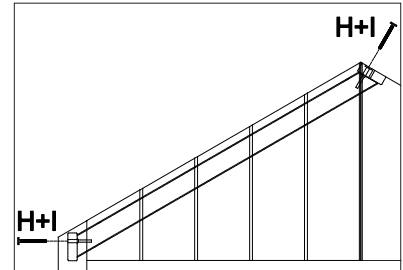


08





PLEASE ASSEMBLY THE
WALLS ON THE FLOOR



D	 Ø 4X30	16
----------	---	-----------

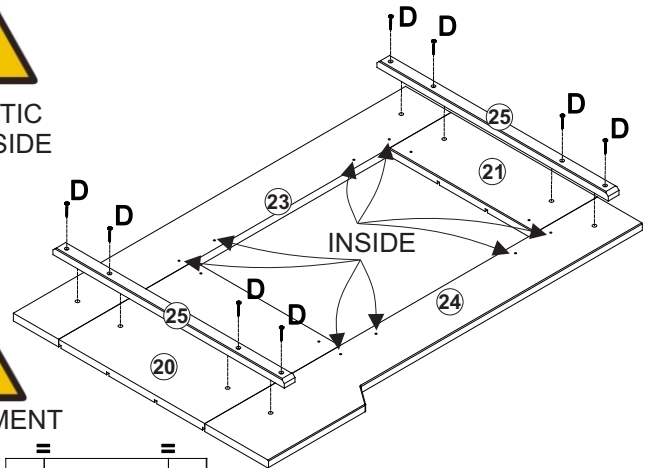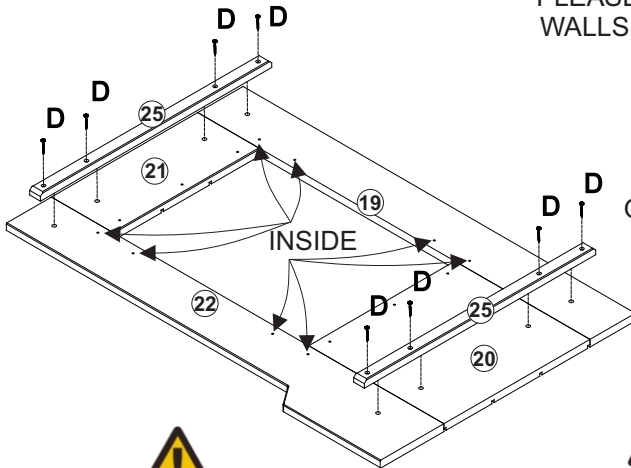




SCREW

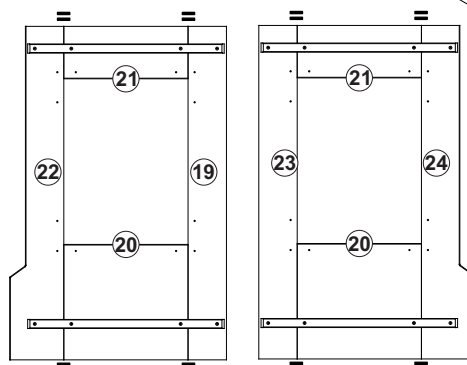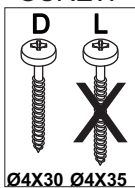




09





SCREW

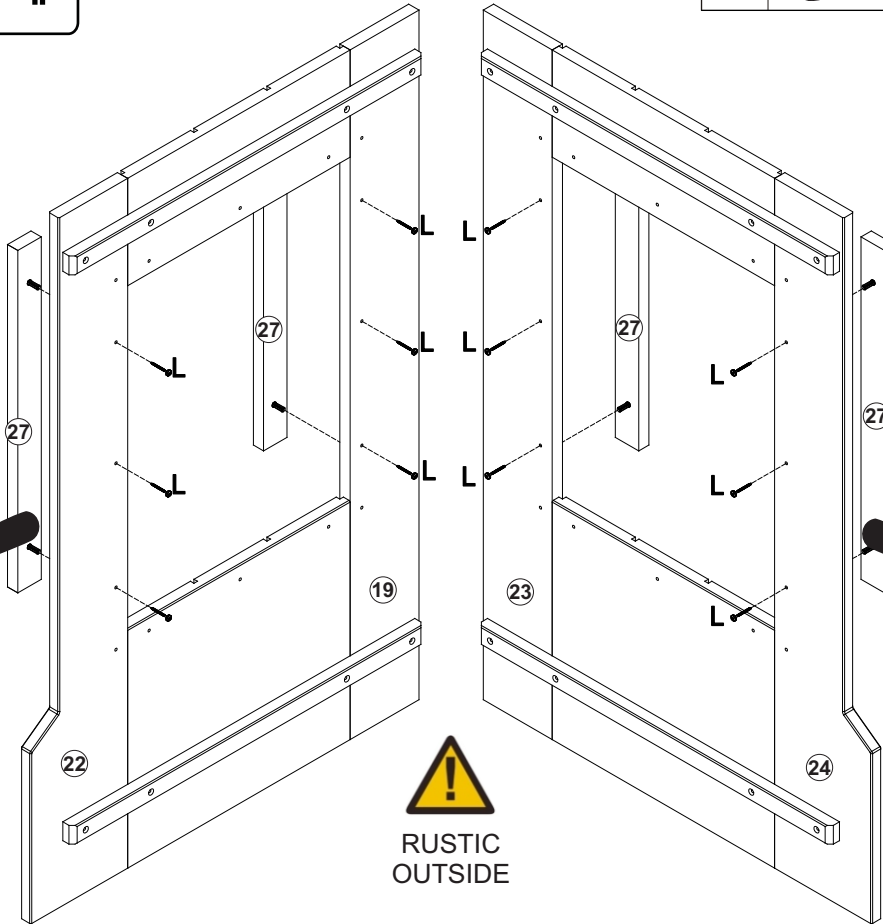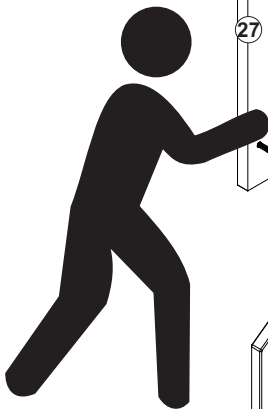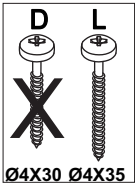

10

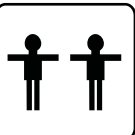

SCREW

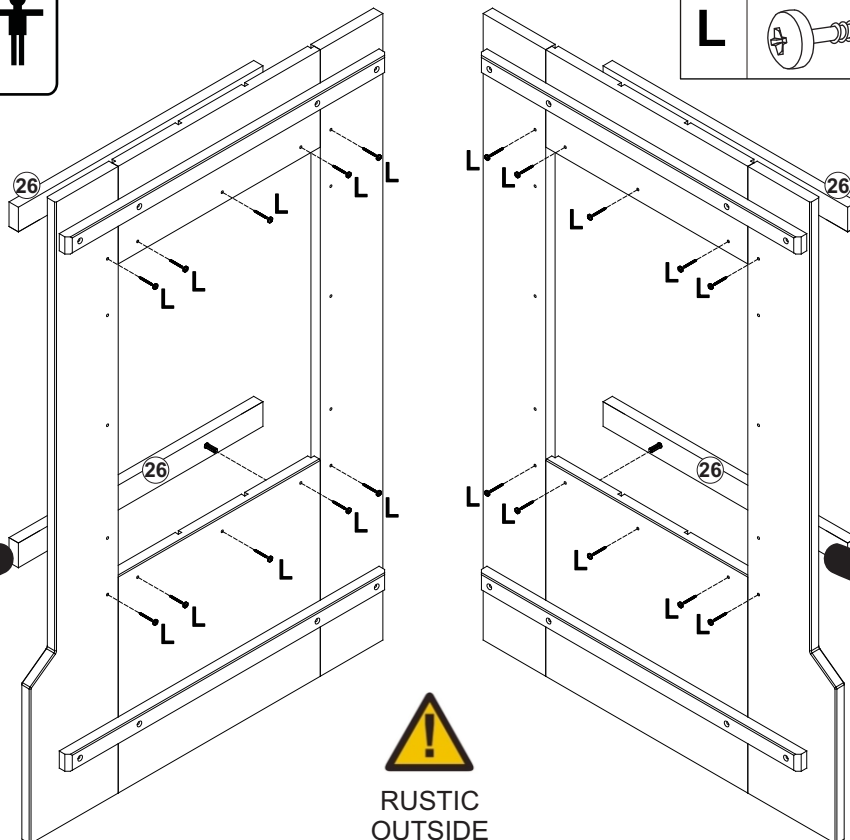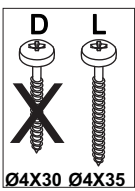


11




RUSTIC
OUTSIDE



SCREW

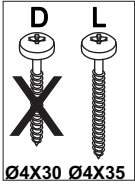


F		02
H		01
L		15




Caution

Please be careful when assembling this product due the parts are extremely heavy. Also, please do not allow kids around when assembling this bed to avoid injuries.

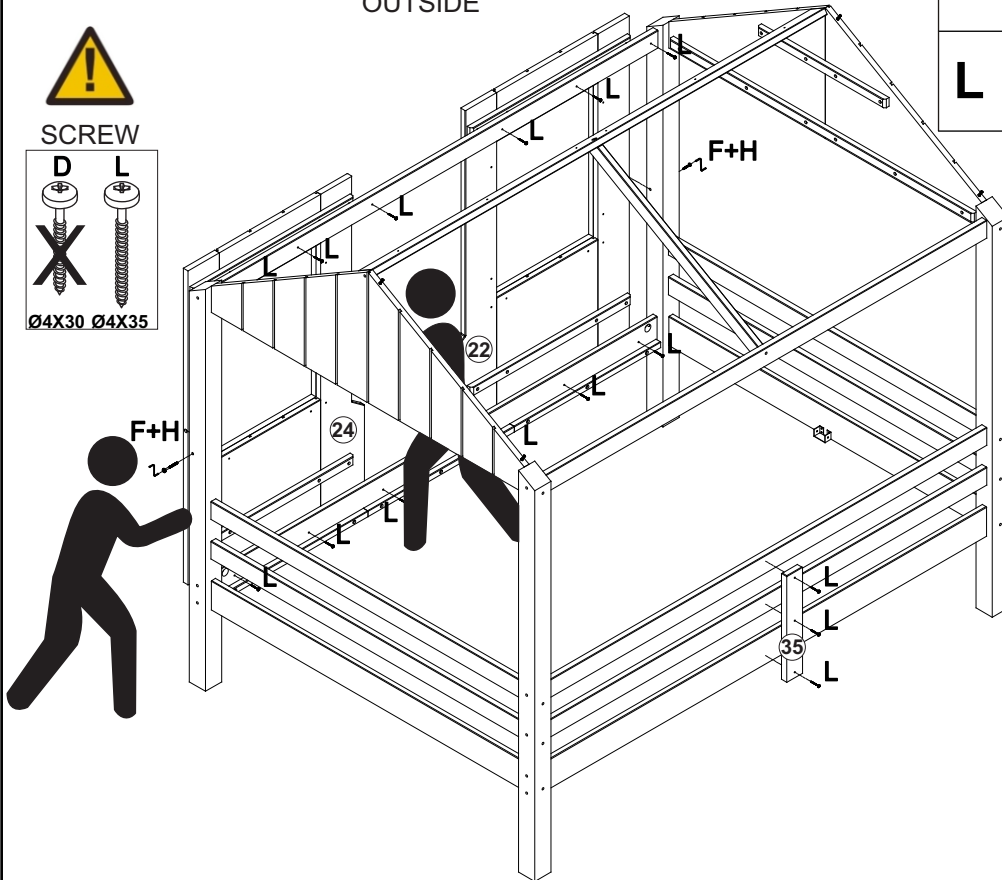

12





ROOF




PLEASE ASSEMBLY THE
ROOF ON THE FLOOR

D		16
---	--	----

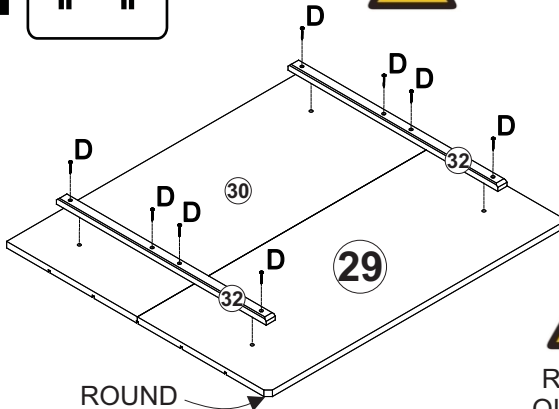


ROUND

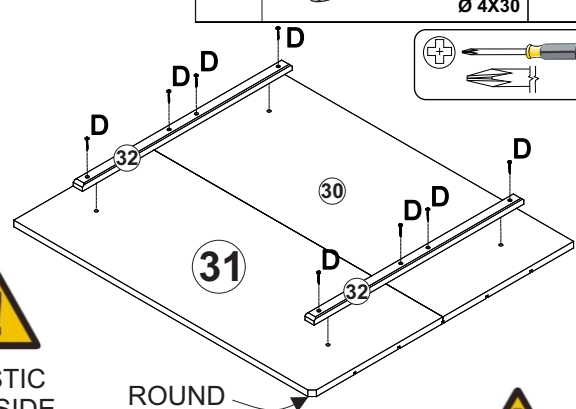

ROUND





SCREW

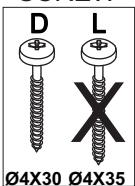




RUSTIC
OUTSIDE




ROUNDED
CORNER
OUTSIDE

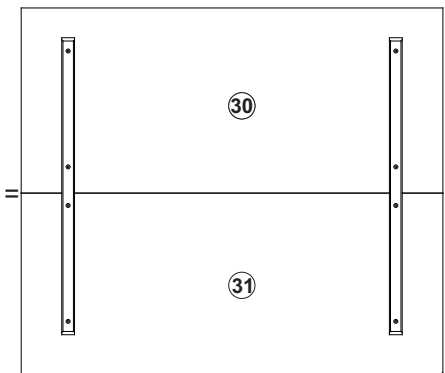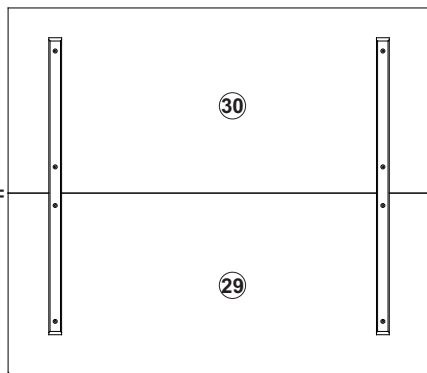




13

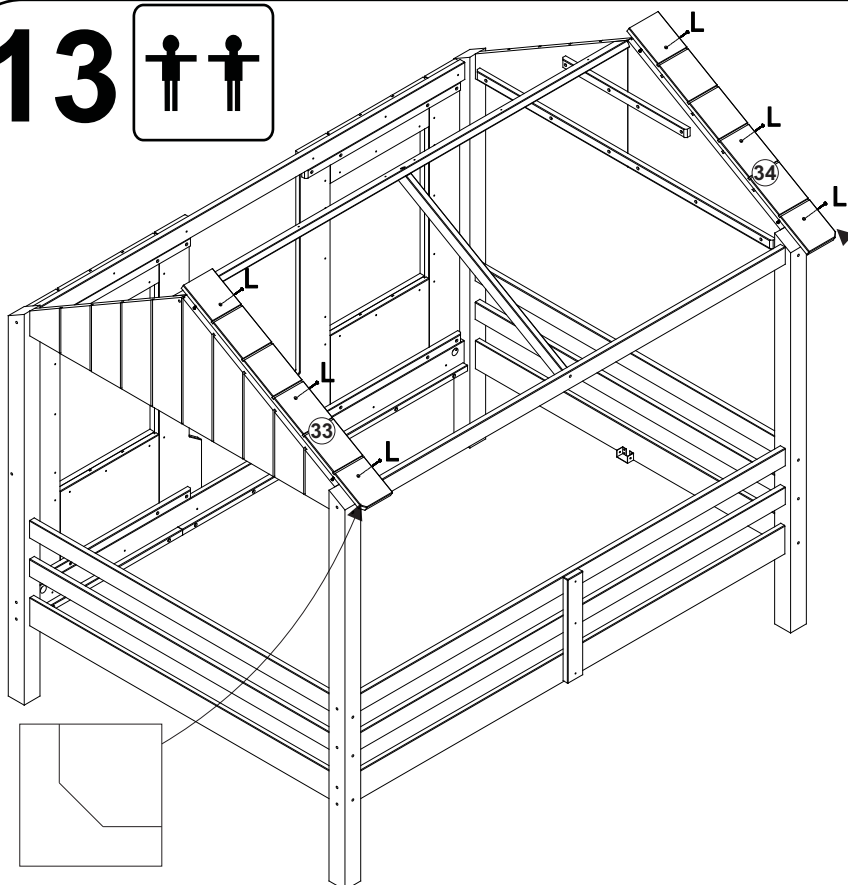



SCREW

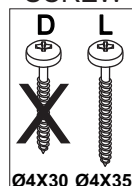




14

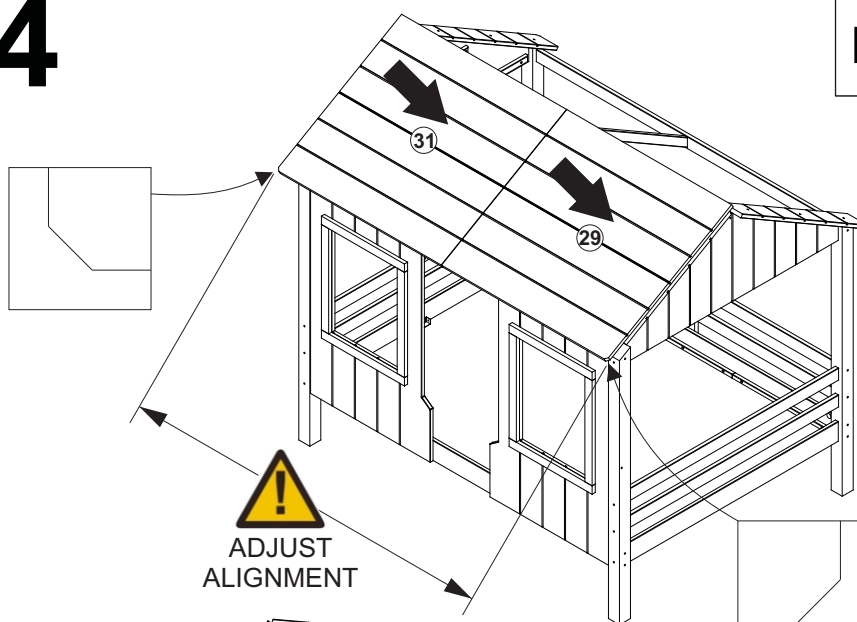

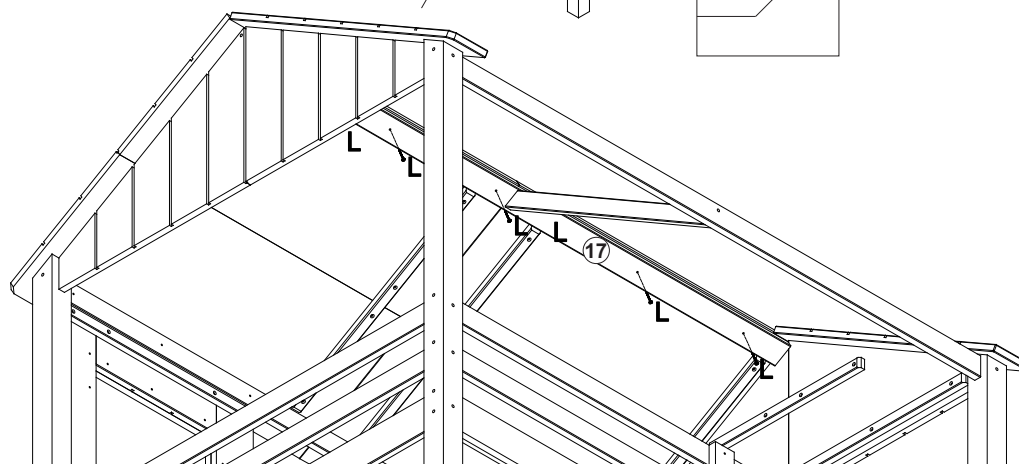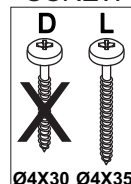



SCREW

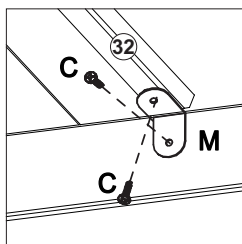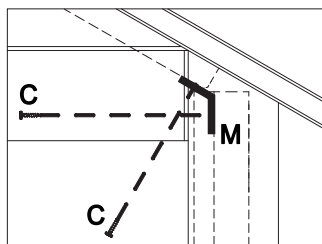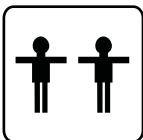


15




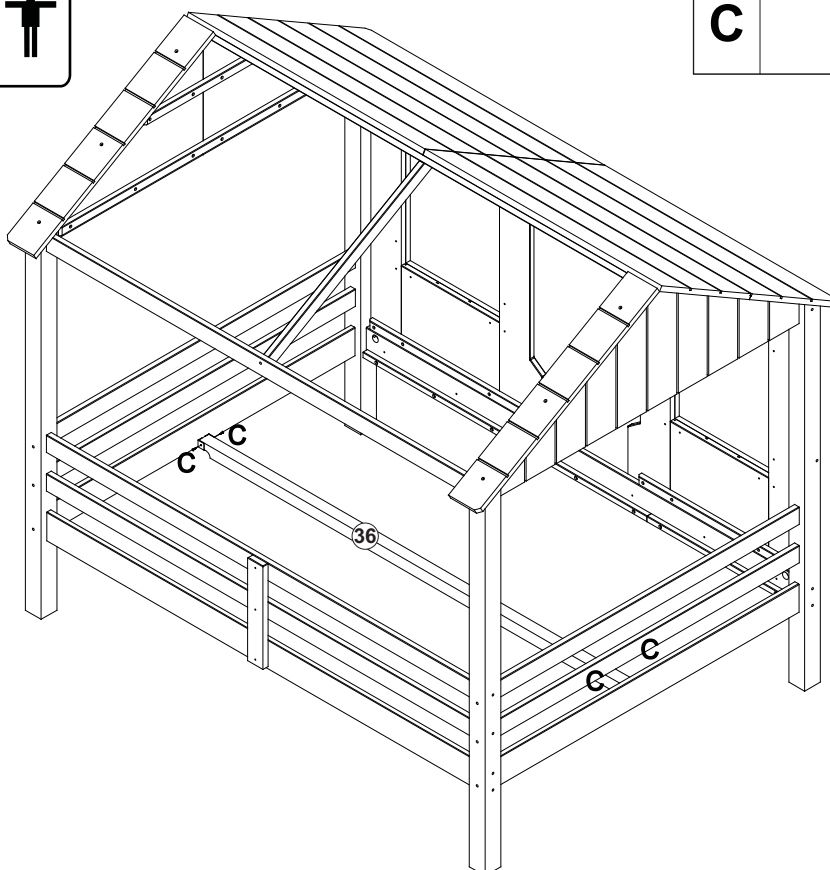

C	 Ø 3,5X16	08
M		04

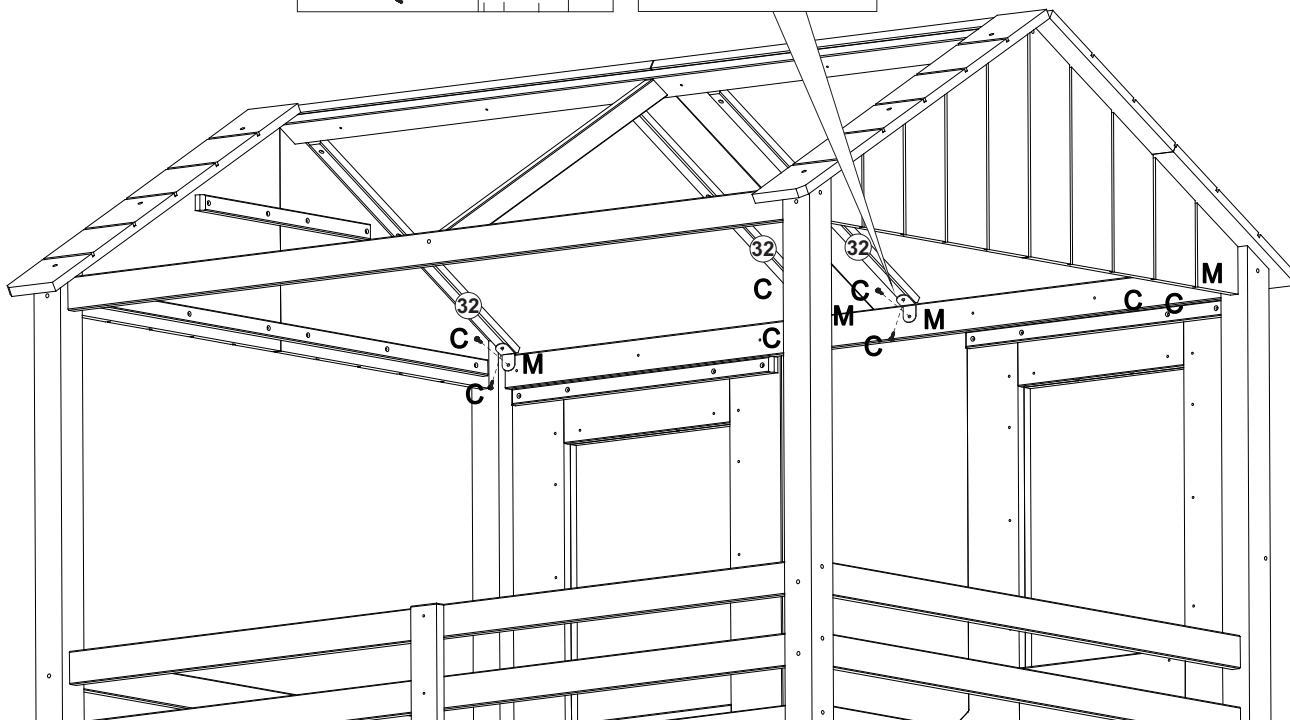

16

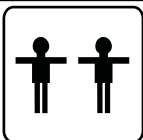

C	 Ø 3,5X16	04
----------	---	-----------



17






J



30

Ø 4X35

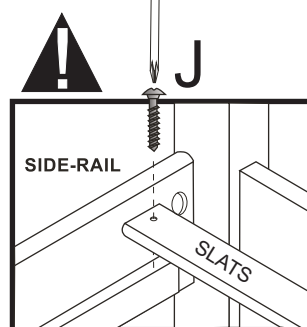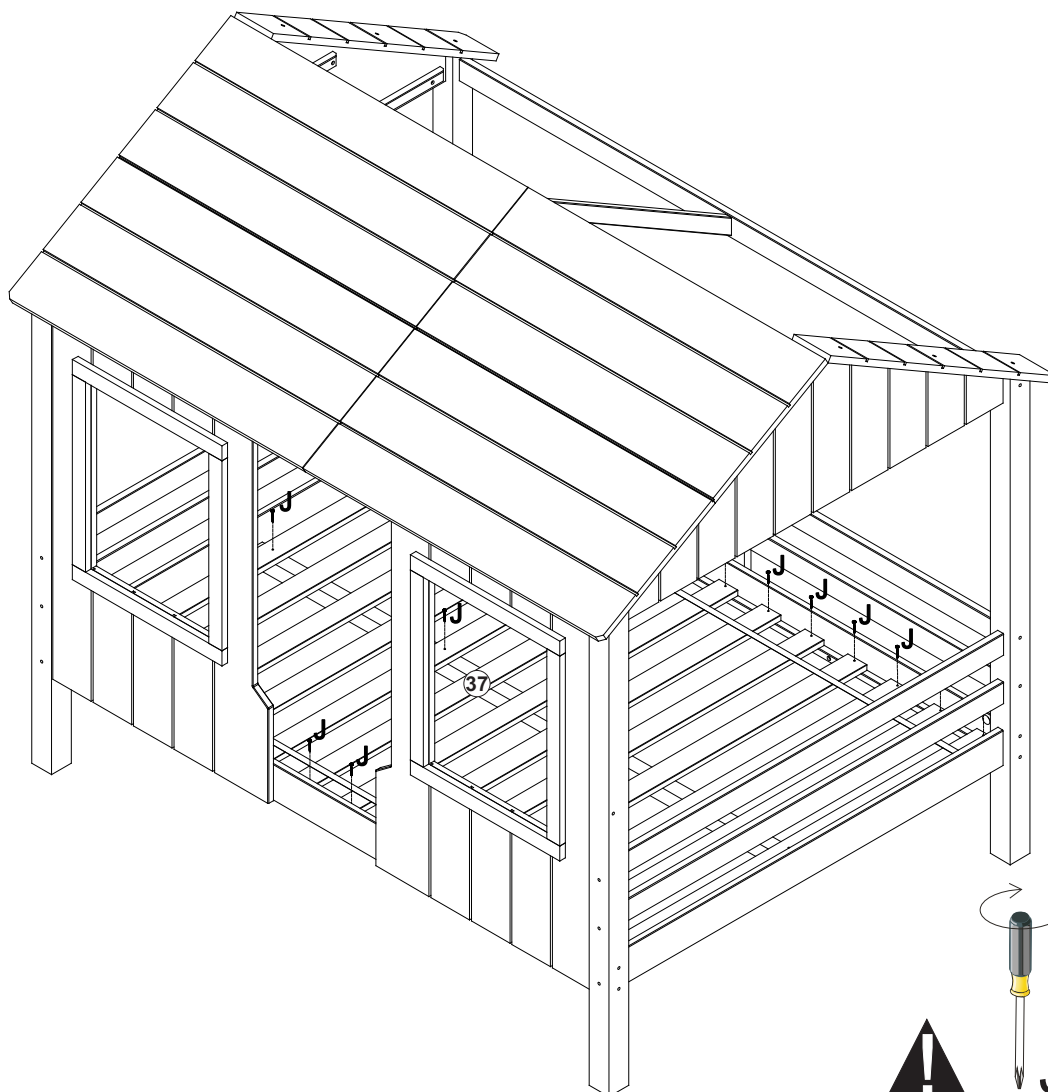

“INSTALL SLAT KIT WITH SPACER
TAPE ON TOP (FACING UP)”

