



ASSEMBLY INSTRUCTIONS

PARTS PER UNIT (2 UNITS INCLUDED):


Side Piece (2)

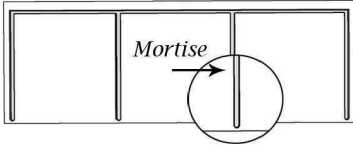


Bottom Piece

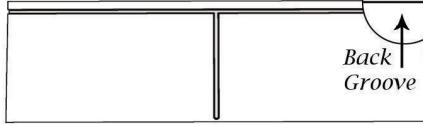


Top Piece

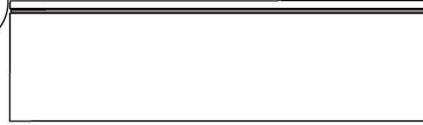


Divider

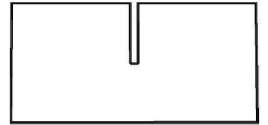

Center Shelf

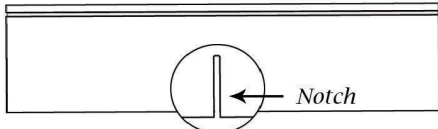


Top Shelf (bottom view)

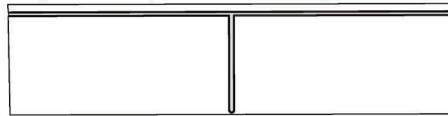

Top Shelf (top view)



(3) Back Pieces

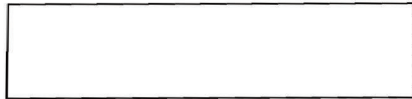

Notice - KEEP BACK GROOVES ALIGNED



1 Allen Wrench



20 Hex Screws




2 Hinge Pins

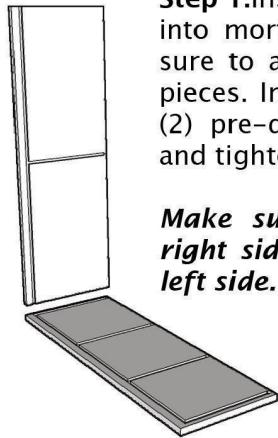


Step 1: Insert edge of **bottom** piece into mortise of **side** piece, making sure to align back grooves of both pieces. Insert hex screws in each of (2) pre-drilled holes in **side** piece and tighten down halfway.

Make sure 1 unit has hinge on right side and 1 unit has hinge on left side. See labels on side pieces.

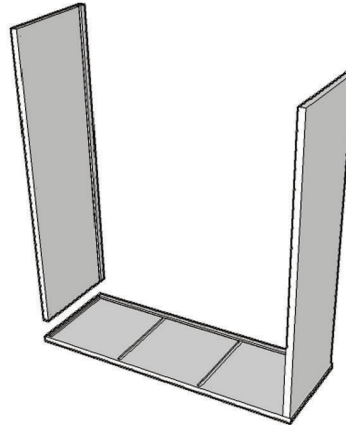


Step 2: Insert edge of **top** piece into mortise of **side** piece, making sure to align back grooves on all pieces. Insert hex screws in each of (2) pre-drilled holes in **side** piece and tighten down halfway.


Step 3: Insert edge of **top shelf** piece into mortise of **side** piece closest to **top** piece. Make sure that mortise in center of **top shelf** is facing **bottom** piece. Keep back grooves aligned on all pieces. Insert hex screws in each of (2) pre-drilled holes in **side** piece and tighten down halfway.

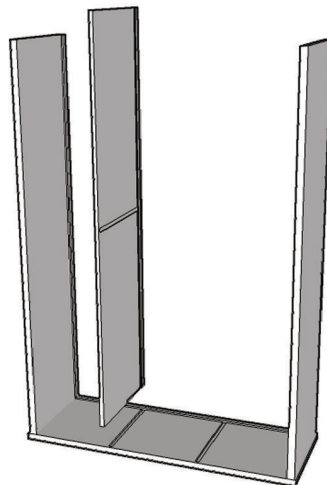


Step 4: Insert **center shelf** into remaining mortise of **side** piece, making sure notch faces back grooves of assembled pieces. Insert hex screws into each of (2) pre-drilled holes in **side** piece and tighten down halfway.

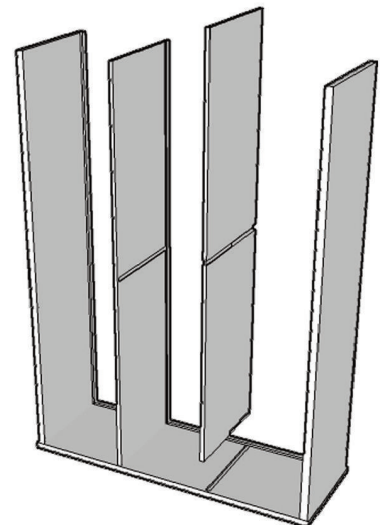

ASSEMBLY INSTRUCTIONS

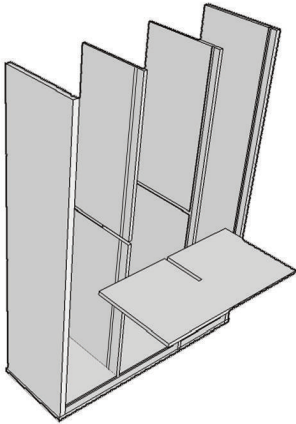


Step 5: Insert edges of **divider** into center mortises of **bottom** piece and **top shelf**. Make sure the notch of **divider** intersects with notch of **center shelf**. Insert hex screws into each of (4) pre-drilled holes on **bottom** and **top shelf** piece and tighten down halfway.


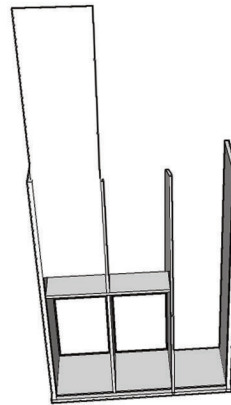


Step 6: Insert sides of **back** piece into back grooves of **bottom** piece and **top shelf**. Slide into place until edge of **large back** piece rests in back groove of **side** piece.


Step 7: Repeat **step 6** with **center back** piece and remaining **back** piece.

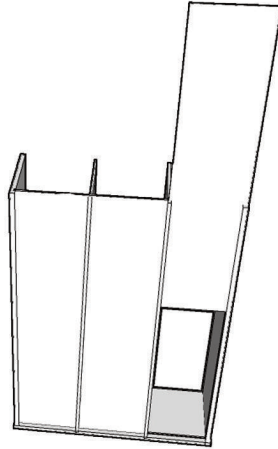

Step 8: Place remaining **side** piece over edges of assembled pieces. Insert edges of **bottom**, **top**, **center shelf**, and **top shelf** pieces into mortises of **side** piece. Make sure edges of back pieces rest firmly in back grooves of **side** piece. Insert hex screws into each of (8) pre-drilled holes on **side** piece and tighten down halfway.

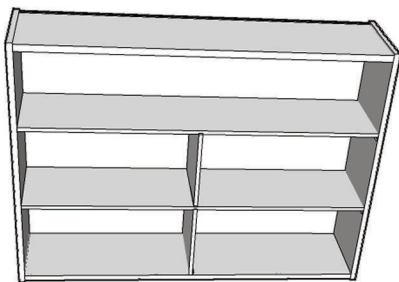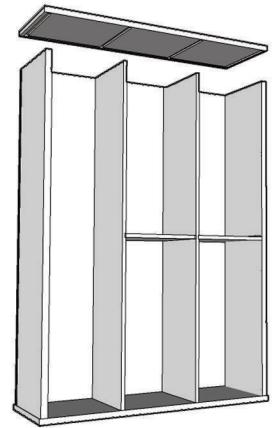


Step 9: Tighten down all screws until snug. **DO NOT OVER TIGHTEN. DO NOT DRILL.** rotate unit until it rests on **bottom** piece and edges of **side** piece. Assembly of first unit is now complete.

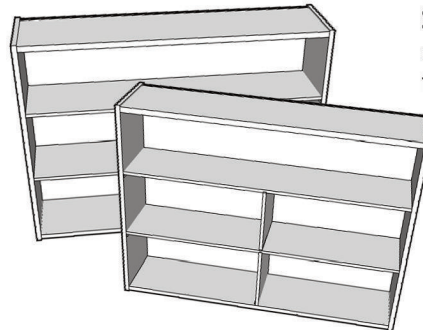

Step 10: Repeat assembly instructions for second unit.

Step 11: Line up two units so that the hinges on each one meet. Place hinge pin into holes of each hinge as shown to hinge units together.

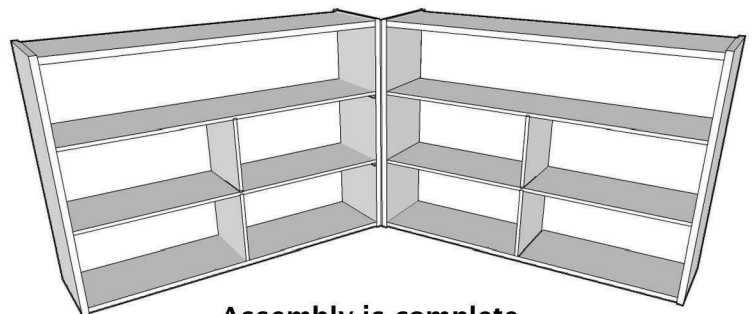

Assembly is complete.