

POST MOUNT FIXTURE INSTALLATION INSTRUCTIONS


Note: Please read carefully and save these instructions, as you may need them at a later date.

CAUTION: It is highly recommended that this installation be performed by a qualified electrician. Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

GENERAL: All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

COMPONENTS


Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations below.

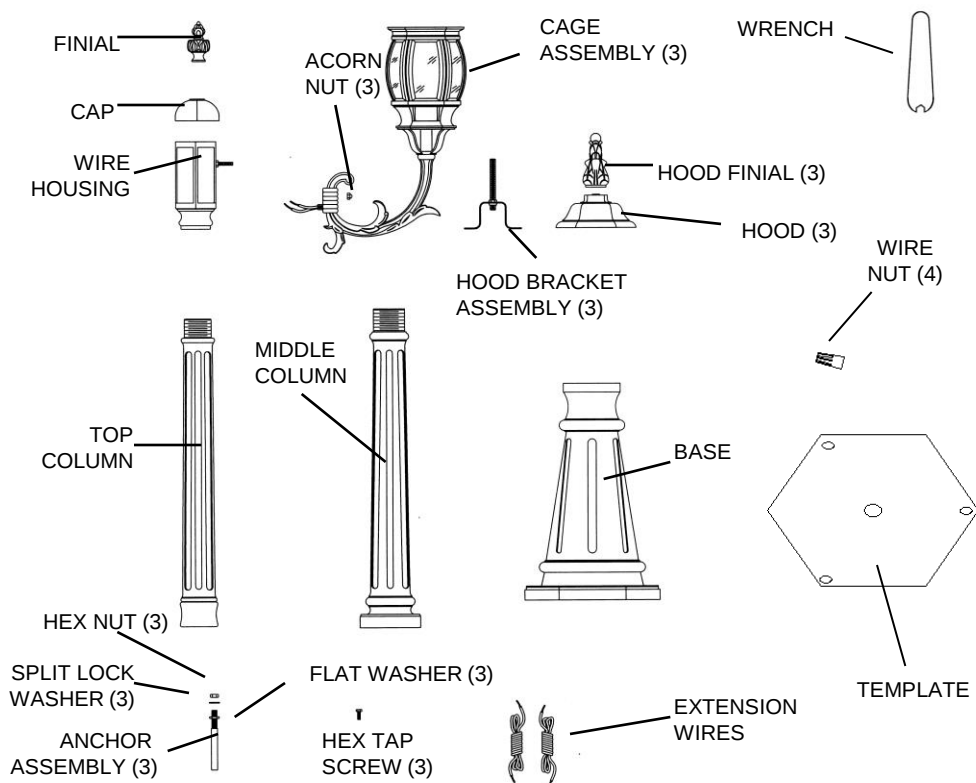


ASSEMBLY AND INSTALLATION

NOTE: To minimize the risk of electrical shock, follow the EXACT order of assembly.


ATTACHING THE CAGE ASSEMBLIES TO THE WIRE HOUSING

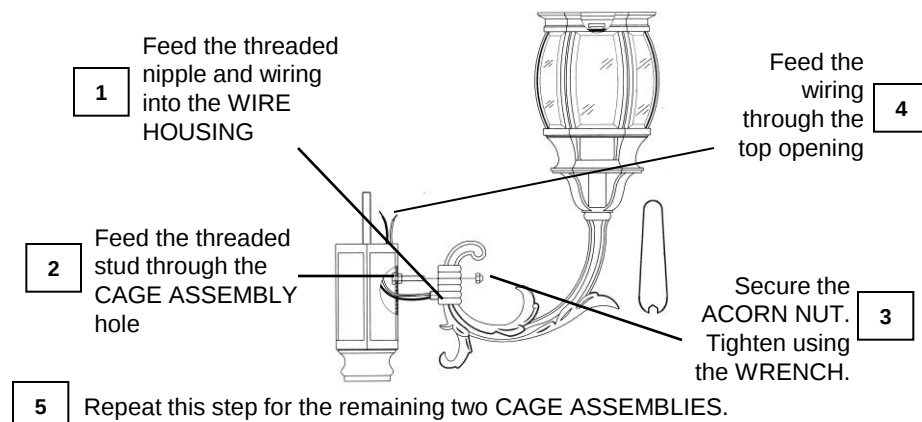

MAKING THE WIRE CONNECTIONS

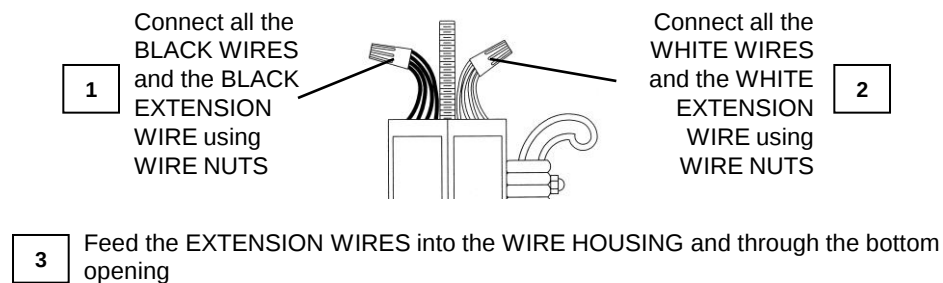


1 SCREWING THE TOP COLUMN INTO THE WIRE HOUSING → 2 SCREWING THE MIDDLE COLUMN INTO THE TOP COLUMN

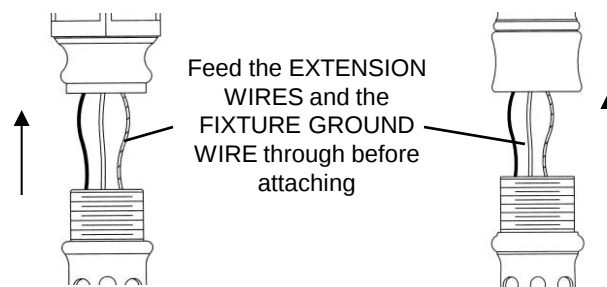


ASSEMBLY AND INSTALLATION (CONT.)

ATTACHING THE MIDDLE COLUMN TO THE BASE

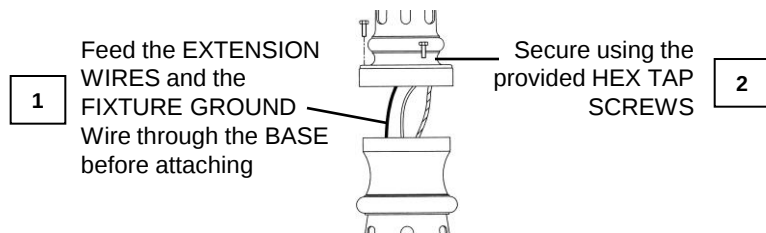

CLOSING THE WIRE HOUSING


WARNING: Before closing make sure the WIRE CONNECTIONS have not been loosened or disconnected.

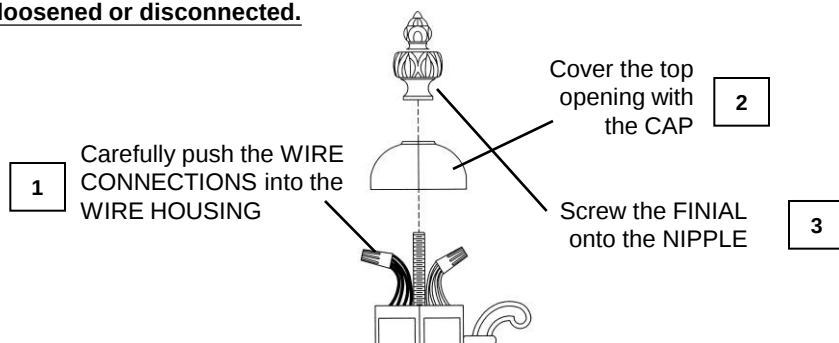

PREPARING THE MOUNTING SURFACE


Note: Install this fixture only on concrete surfaces.

1 Select the desired installation location. Run the supply wiring to the installation location and prepare the concrete surface. The supply wiring must be adequately protected from water using a wire conduit. When preparing the concrete surface, be sure that the conduit extends 1/2" from the surface to prevent any runoff from entering the opening. (**Note: Be sure to follow local and national electric codes.**) Using the provided TEMPLATE, mark the locations for the mounting holes.

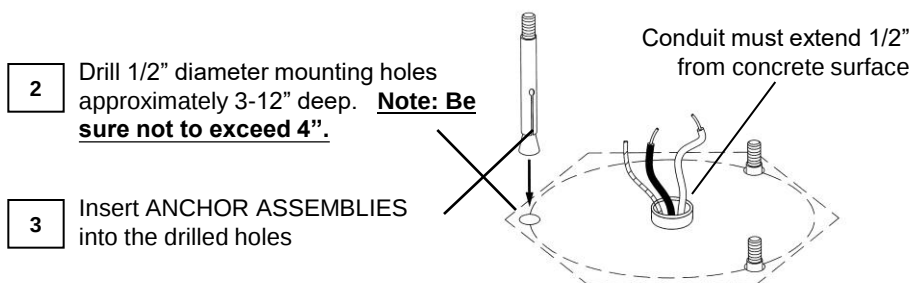


CAUTION: Be sure to turn off the main power at the circuit breaker before running the supply wiring

MOUNTING THE FIXTURE

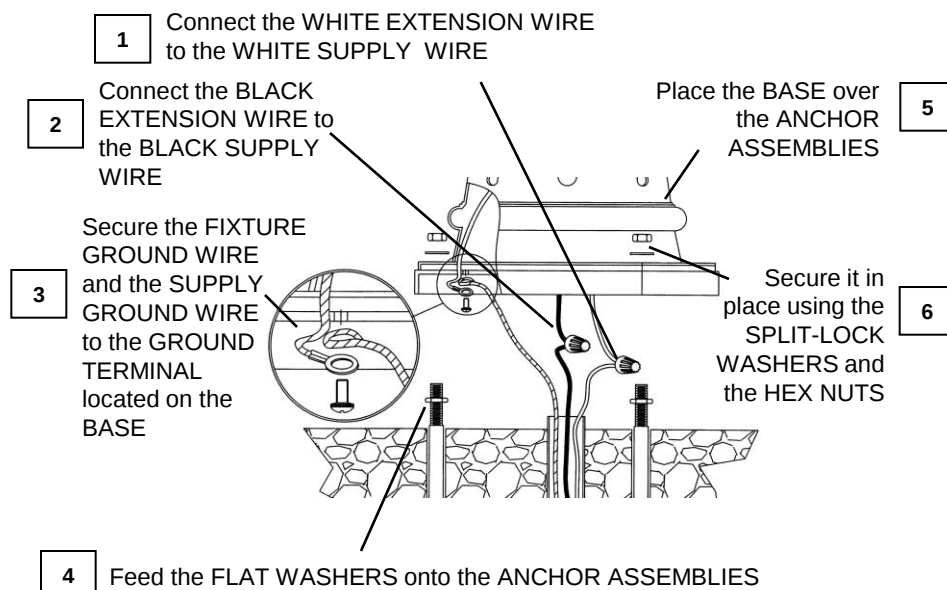

LAMPING THE FIXTURE AND COVERING THE CAGE ASSEMBLIES

1 Install a medium base bulb into each socket. Be sure to comply with the fixture's wattage markings.

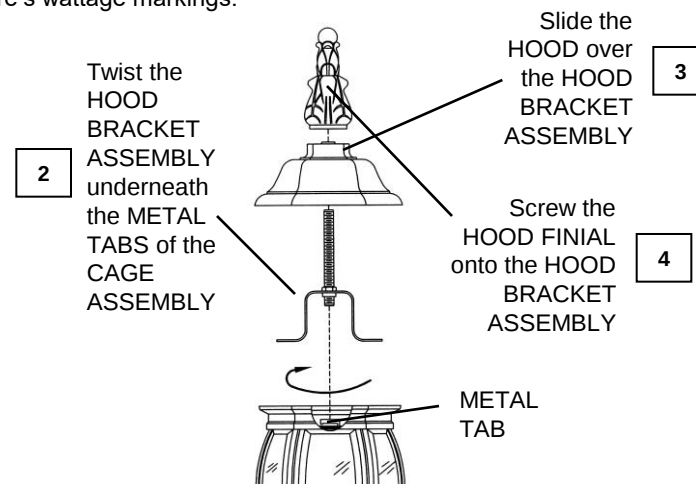

5 Repeat this step for the remaining CAGE ASSEMBLIES.

INSTALLATION IS COMPLETE

ENSAMBLAJE E INSTALACION

INSTRUCCIONES DE MONTAJE E INSTALACION PARA LAMPARAS DE POSTE


NOTA: Por favor lea cuidadosamente y guarde estas instrucciones, puede necesitarlas posteriormente.

PRECAUCION: Es altamente recomendable que esta instalación sea realizada por un electricista calificado. Desactive la electricidad del cortacircuitos antes de comenzar la instalación de la lámpara para evitar una descarga eléctrica.

INFORMACION GENERAL: Todas las conexiones eléctricas deben realizarse conforme al Código Eléctrico Nacional y a los códigos eléctricos locales. La instalación eléctrica debe ser realizada por un electricista calificado.


COMPONENTES

Retire la lámpara y el paquete de instalación de la caja y verifique que cuenta con todas las partes referentes a las ilustraciones siguientes.

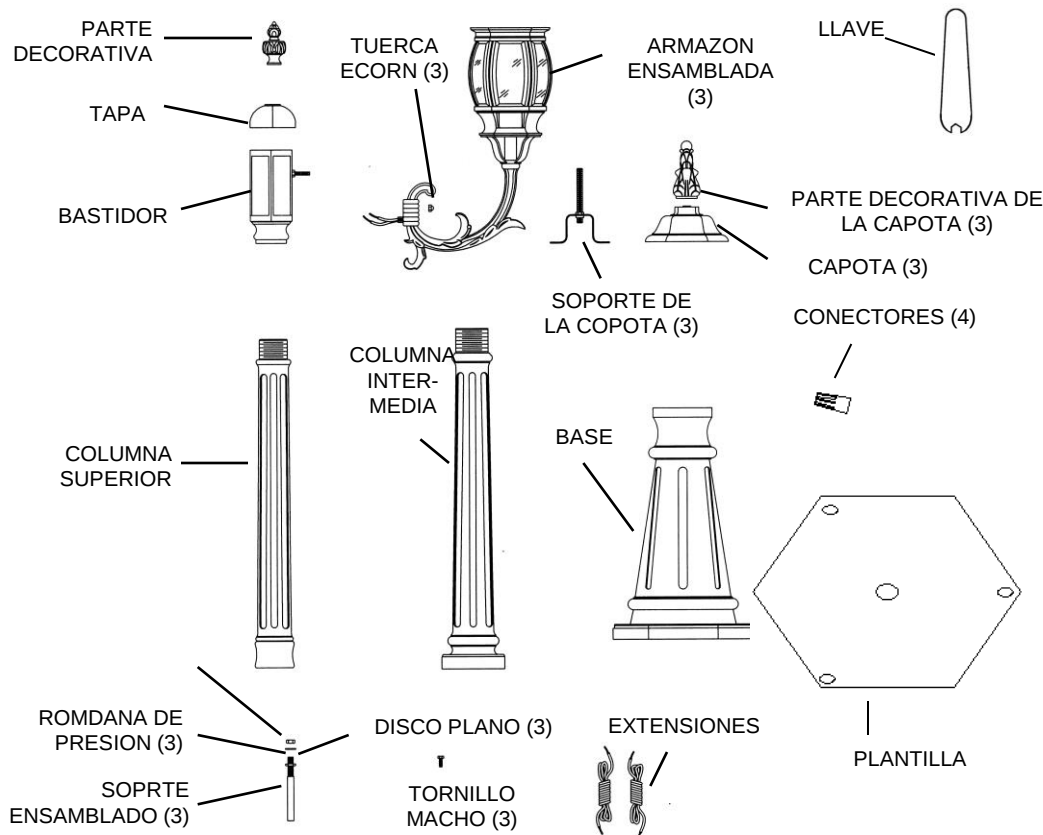


NOTA: Para disminuir los riesgos de una descarga eléctrica, por favor siga exactamente el siguiente orden de ensamblaje.

ACOPLAMIENTO DE LA ARMAZON CON EL BASTIDOR

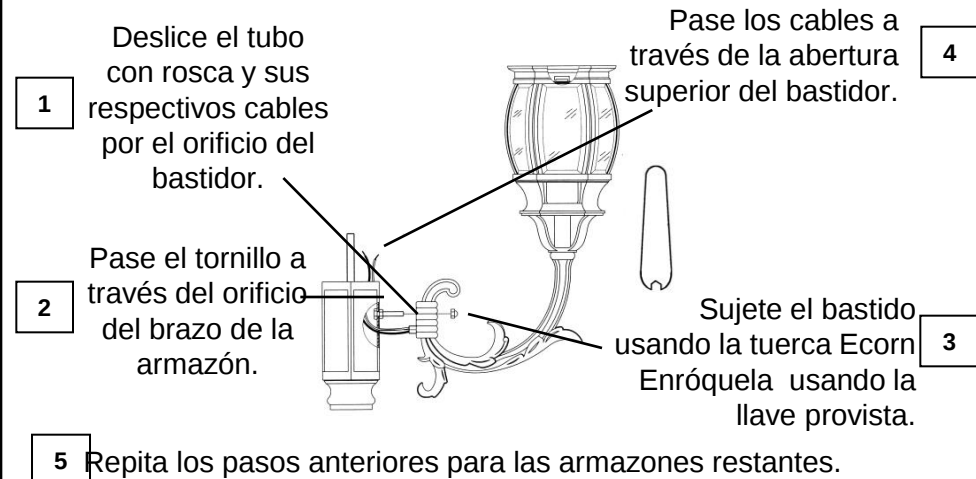


CONEXION DE LOS CABLES

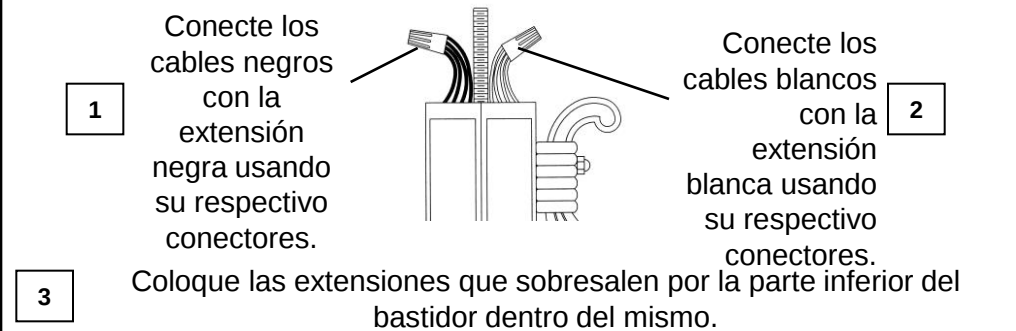


ENROSQUE LA COLUMNA SUPERIOR POR LA PARTE INFERIOR DEL BASTIDOR.

ENROSQUE LA COLUMNA INTERMEDIA POR LA PARTE INFERIOR DE LA COLUMNA SUPERIOR.

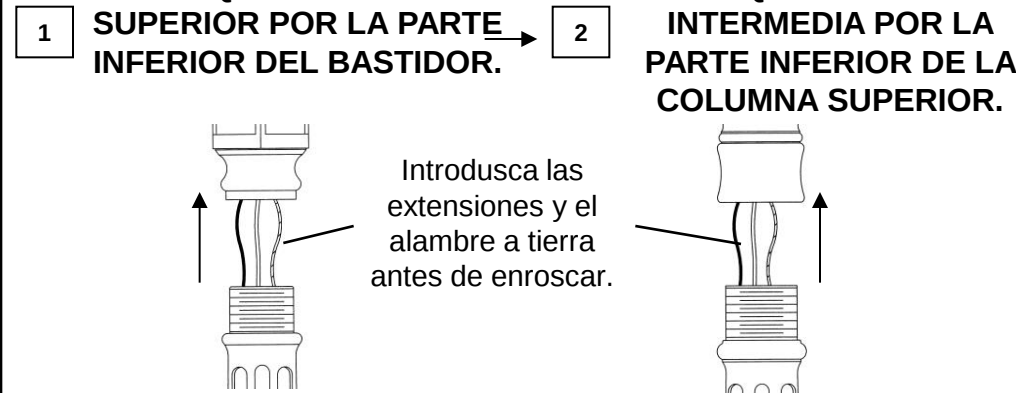


ENSAMBLAJE E INSTALACION (CONT.)

ACOPLAMIENTO DE LA COLUMNA INTERMEDIA CON LA

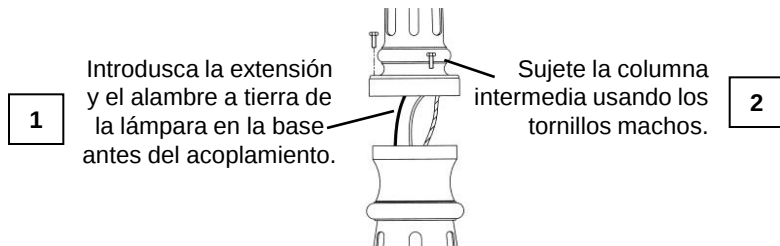


CUBRIMIENTO DEL BASTIDOR

ADVERTENCIA: Antes de cubrirlo asegúrese que los cables estén bien conectados y no flojos.

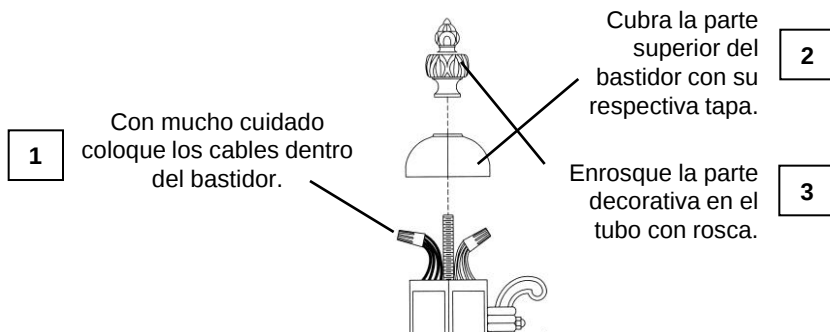


PREPARACION DE LA SUPERFICIE DE MONTAJE

ADVERTENCIA: Instale esta lámpara sobre una superficie de concreto solamente.

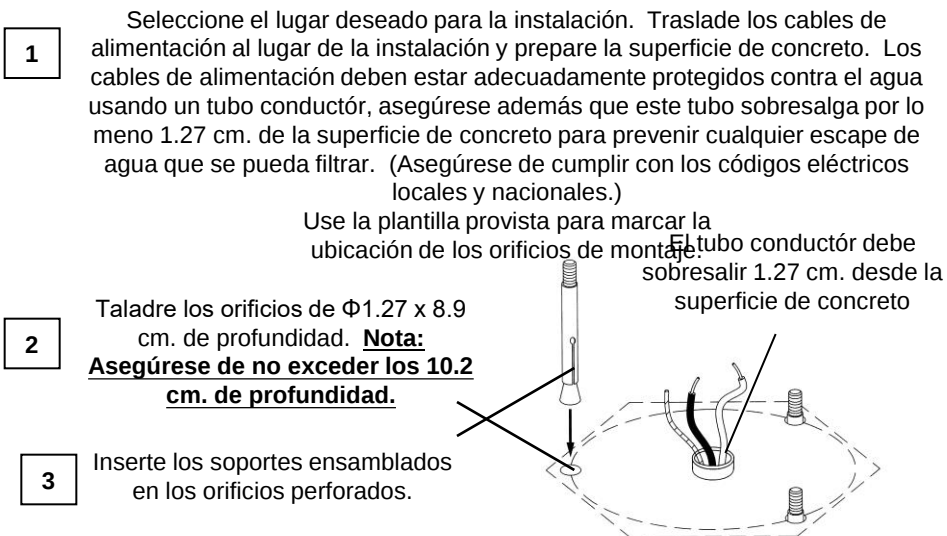


PRECAUCION: Asegúrese de apagar el cortacircuito antes de transportar los cables de alimentación.

MONTAJE DE LA LAMPARA

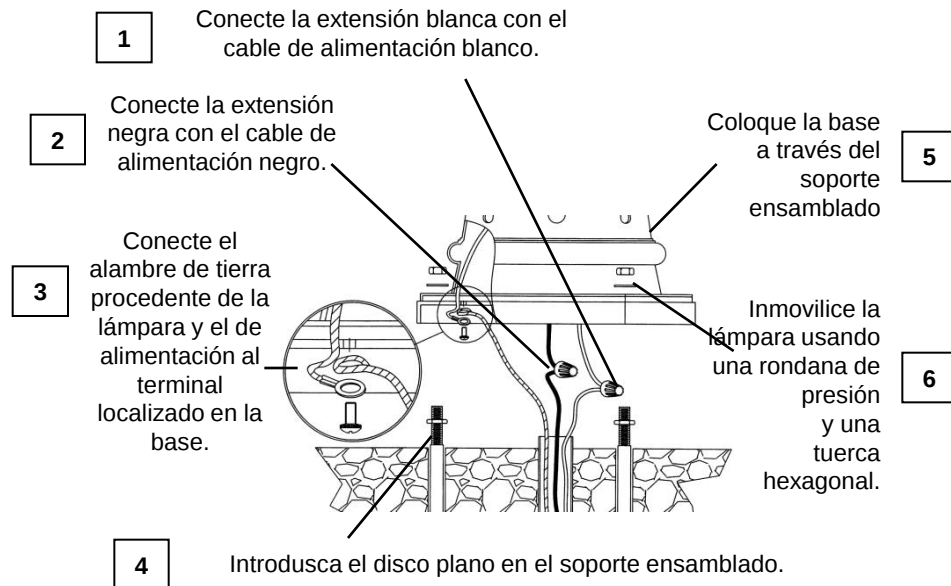

COLOCACION DE LOS FOCOS Y CUBRIMIENTO DE LA ARMAZON

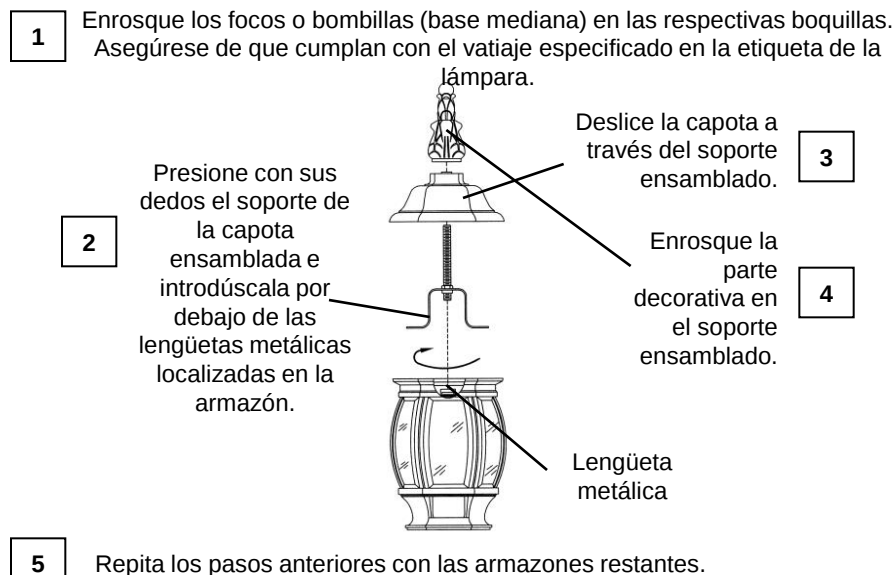

LA INSTALACION HA FINALIZADO.