


Assembly Instruction

Furinno Farmhouse Fireplace TV Stand

MODEL : FH22020

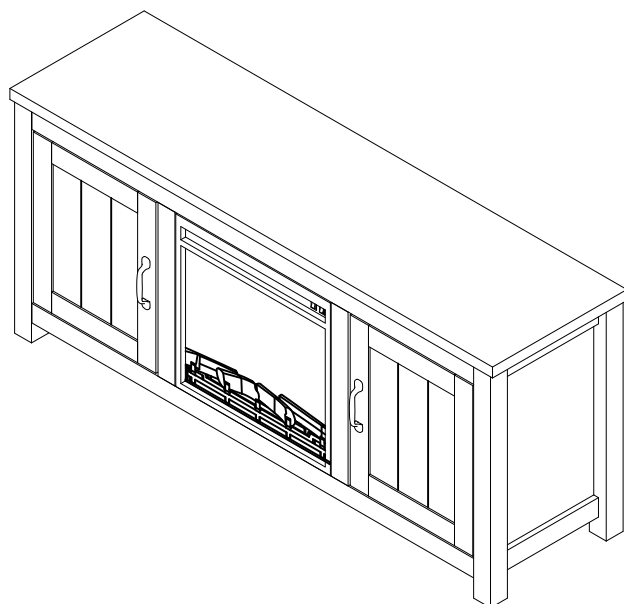

Customer Support


NEED HELP? For replacement requests or product inquiries, please contact our Customer Service Team by emailing us at support@furinno.com. Thank you for selecting Furinno!

www.furinno.com



No	Parts List	Qty
A	Left Side Panel	1pc
B	Right Side Panel	1pc
C	Top Panel	1pc
D	Bottom Panel	1pc
E	Left Middle Panel	1pc
F	Right Middle Panel	1pc
G	Bottom Profile Panel	1pc
H	Left Front Leg	1pc
I	Left Back Leg	1pc
J	Right Front Leg	1pc

K	Right Back Leg	1pc
L	Bottom Support	1pc
M	Left Back Panel	1pc
N	Right Back Panel	1pc
O	Top Profile Panel	1pc
P	Left Stiff Panel	1pc
Q	Right Stiff Panel	1pc
R	Leg Panel	2pcs
S	Leg Panel	2pcs
T	Door	2pcs

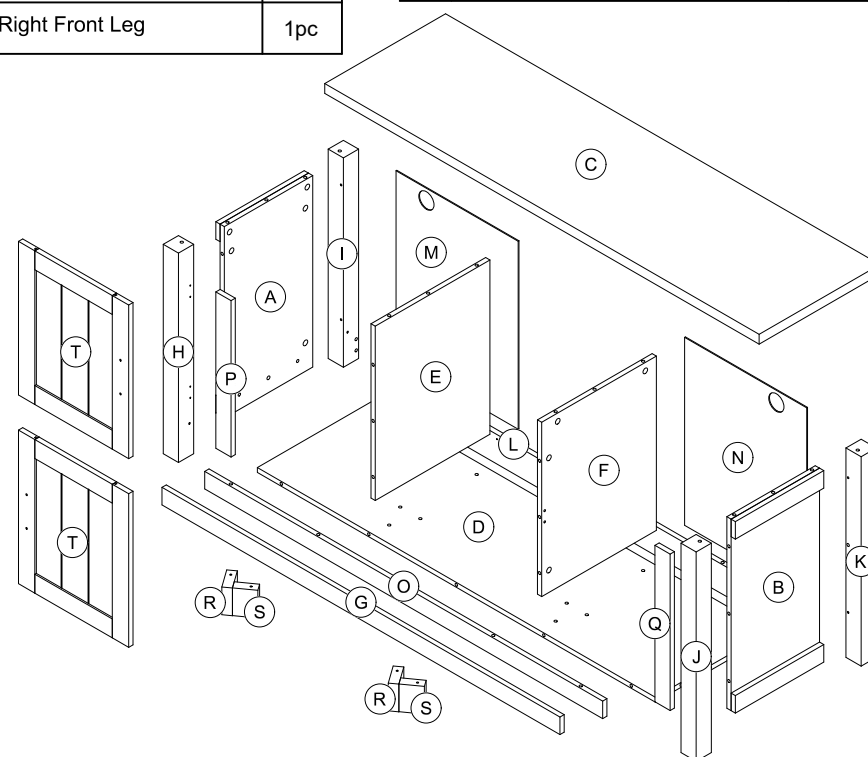


DO NOT FULLY TIGHTEN ANY BOLTS BEFORE ALL PARTS ARE LOOSELY ASSEMBLED. THE PRODUCT/FITTINGS MAY BE DAMAGED IF OVERTIGHTENED. BEWARE OF CROSS THREADING SCREWS AND BOLTS DURING ASSEMBLY. SMALL COMPONENT PARTS COULD CHOKe A CHILD IF SWALLOWED. WE STRONGLY RECOMMEND THAT YOU KEEP CHILDREN AWAY FROM THE WORK AREA.


HARDWARE LIST

1		Wood Dowel $\phi 8 \times 30 \text{mm}$	26 pcs
2		Minifix Bolt	35 pcs
3		Minifix Cam	35 pcs
4		Unitar Screw $\phi 6.3 \times 48 \text{mm}$	8 pcs
5		Unitar Screw $\phi 6.3 \times 40 \text{mm}$	4 pcs
6		Allen Key M4	1 pc
7		Handle	2 pcs
8		Handle Screw $\phi 4 \times 19 \text{mm}$	4 pcs
9		PVC Nail With Pin	4 pcs
10		PVC Stopper	2 pcs
11		Nail	20 pcs
12		Hinges 7/8"	4 pcs
13		Screw $\phi 3.5 \times 14 \text{mm}$	28 pcs
14		Tapping Screw M10 x 1/2mm	6 pcs
15		1.2 x 15 x 32 x 75mm Mounting L Bracket	2 pcs
16		Flat Washer $\phi 6$	2 pcs
17		Tapping Screw M10 x 16mm	2 pcs
18		Screw $\phi 4 \times 38 \text{mm}$	2 pcs
19		PVC L Bracket 2 Holes	2 pcs
AA		Fireplace	1 set


Minifix Setup :

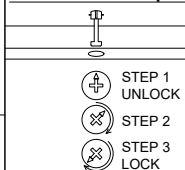

STEP 1

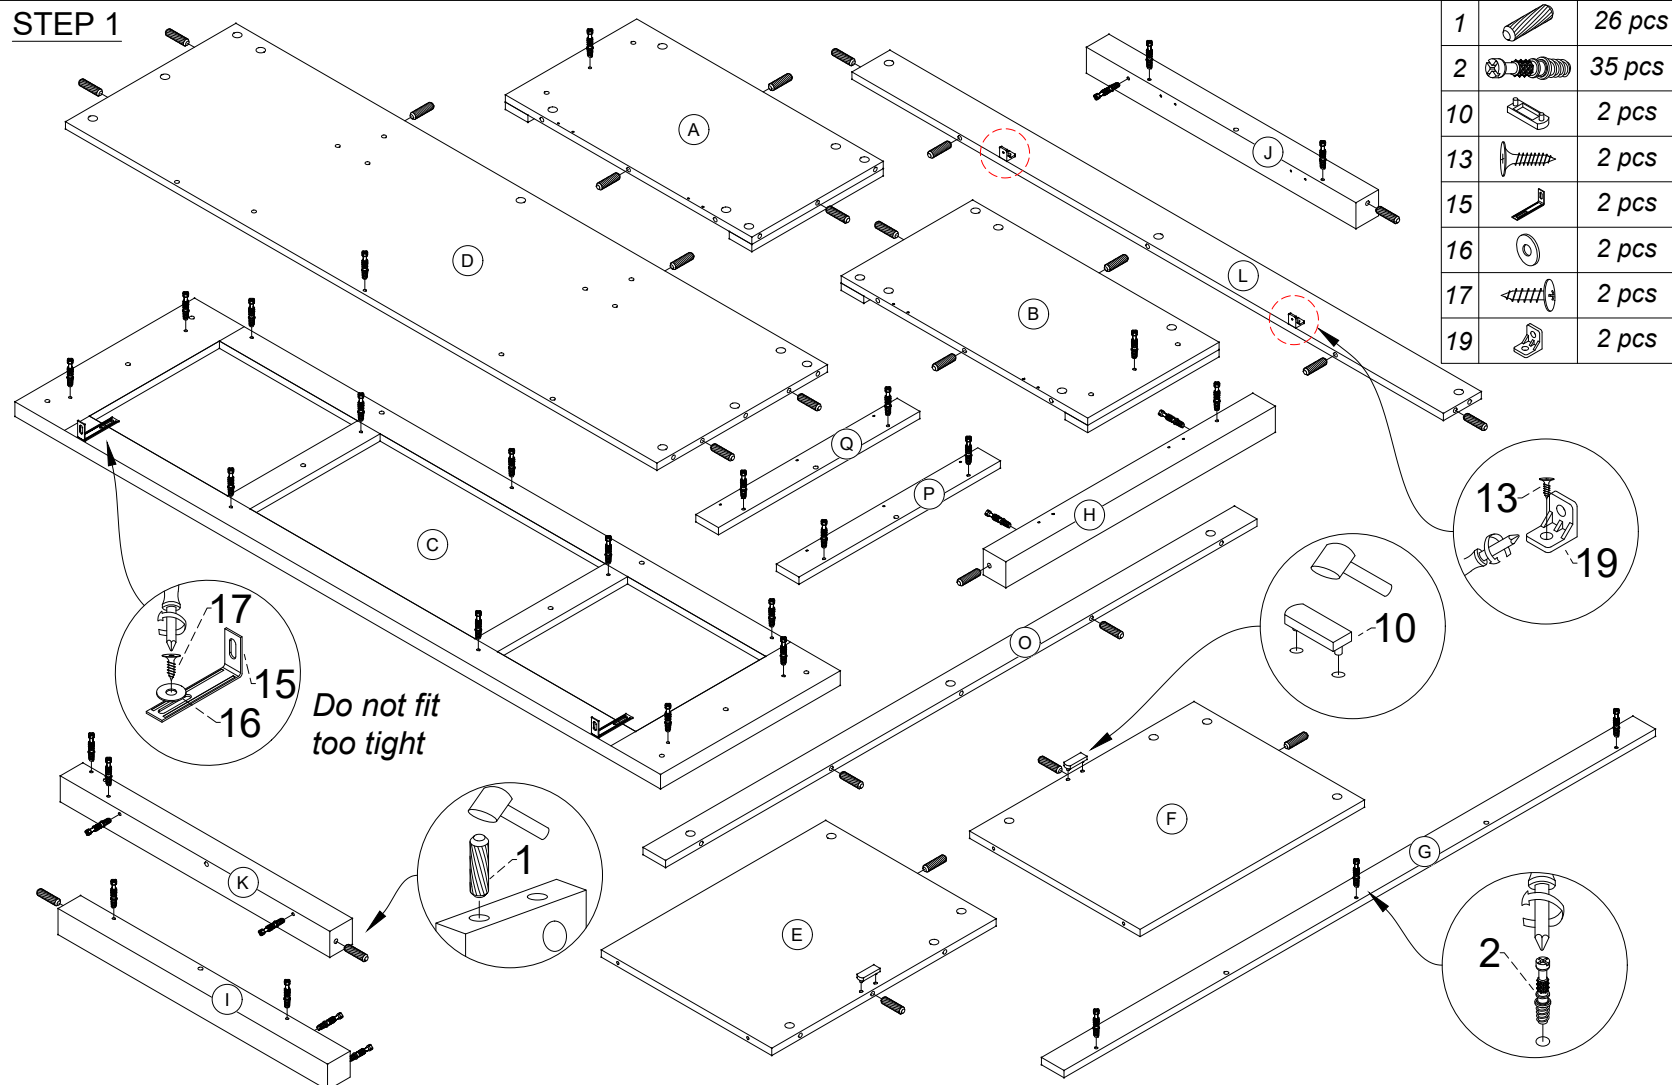


STEP 2

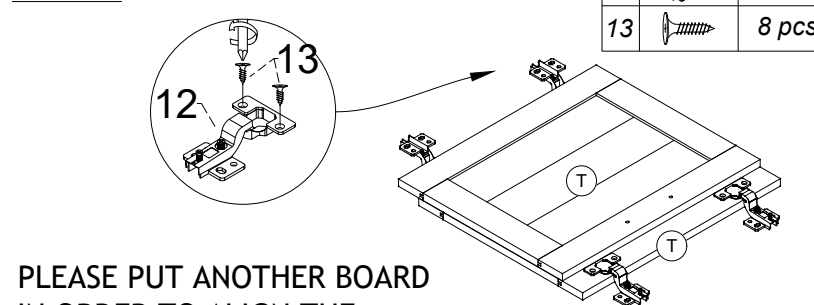

PLEASE PUT ANOTHER BOARD
IN ORDER TO ALIGN THE
HINGES ACCORDINGLY.


STEP 3

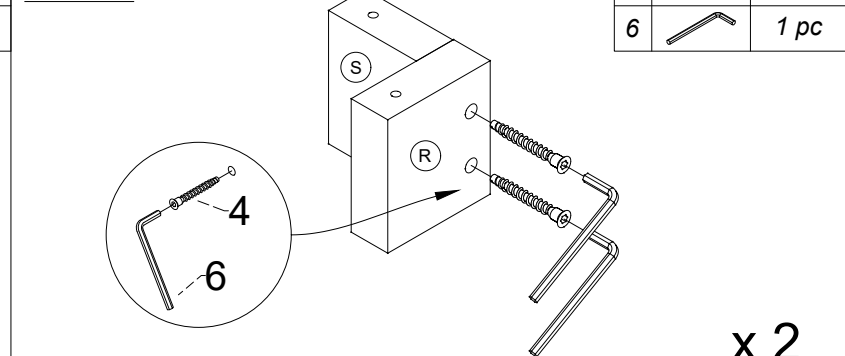

x 2


STEP 4

3  8 pcs

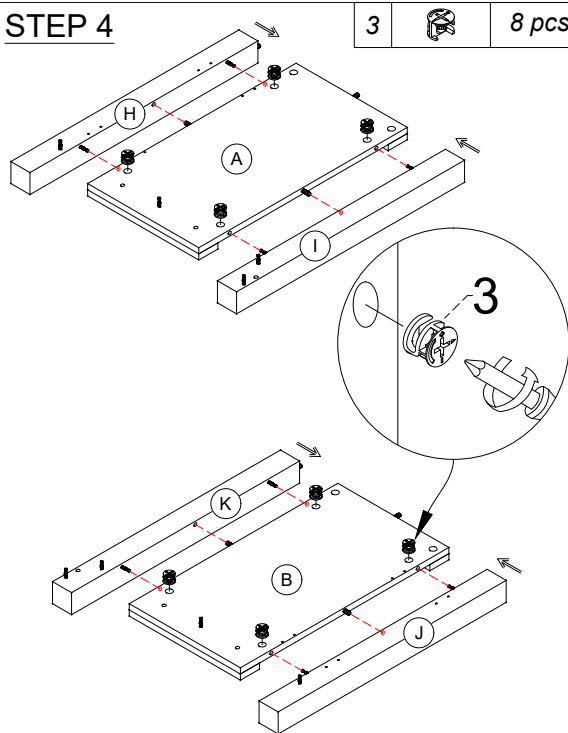


STEP 5

3  3 pcs

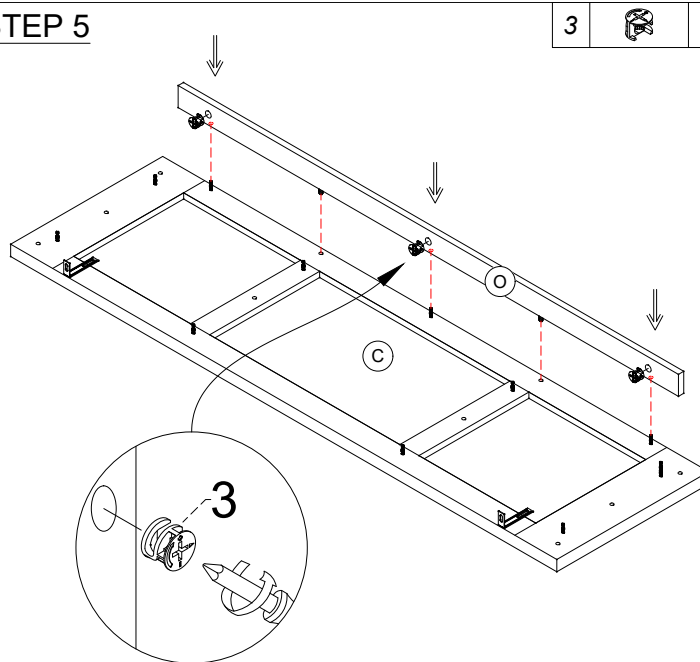


STEP 6

3  4 pcs

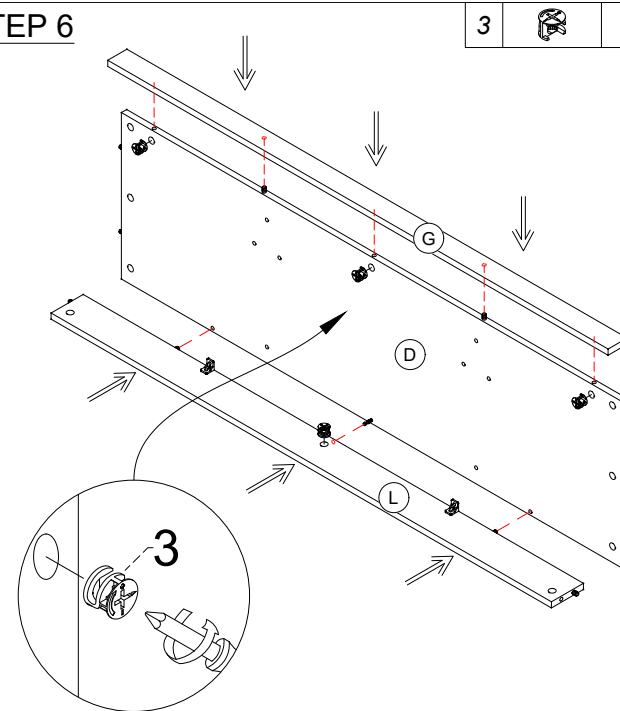


STEP 7

3  8 pcs
13  2 pcs

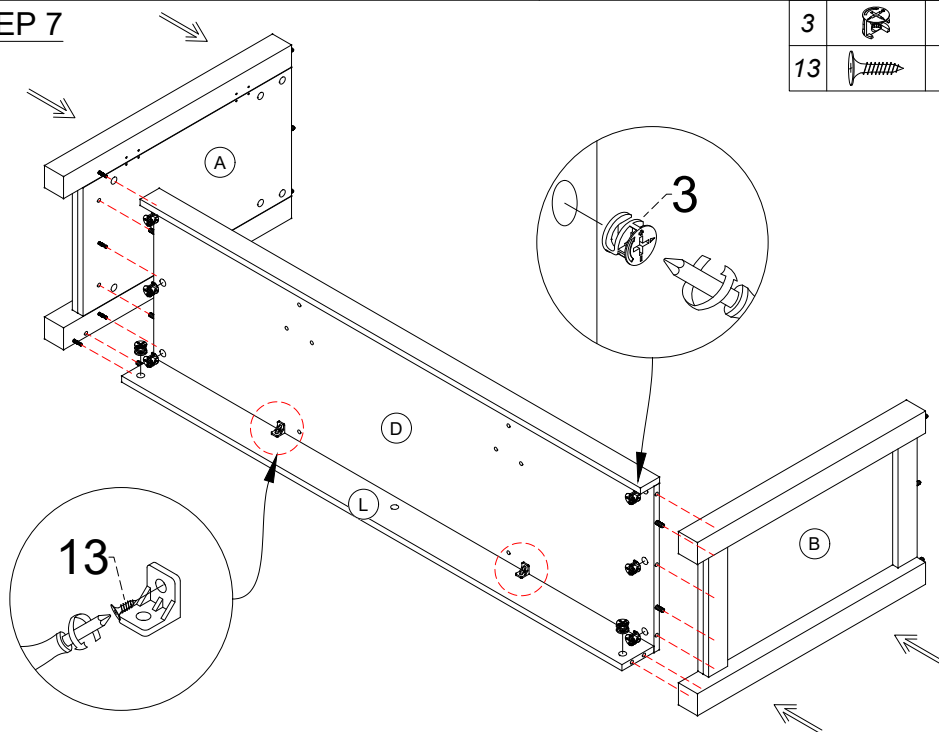


STEP 8

4  4 pcs
6  1 pc

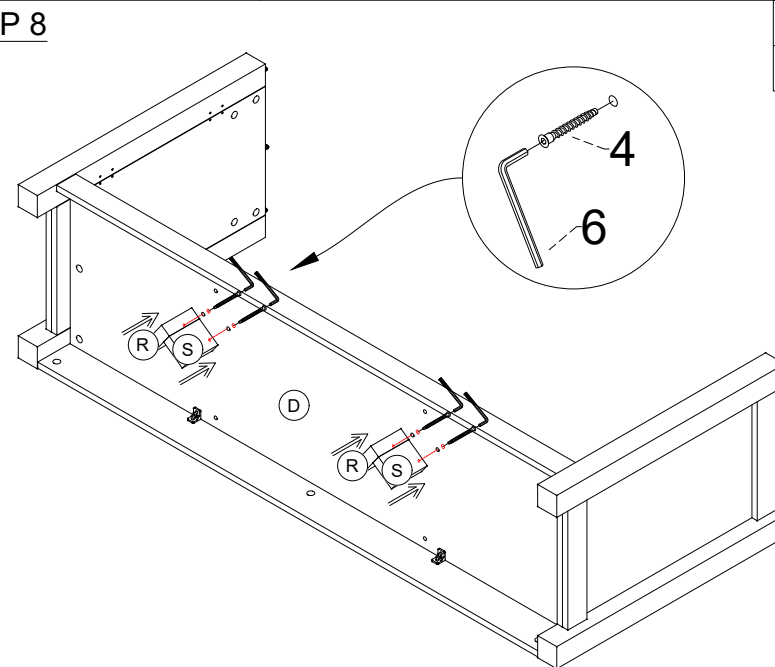


STEP 9

5		4 pcs
6		1 pc

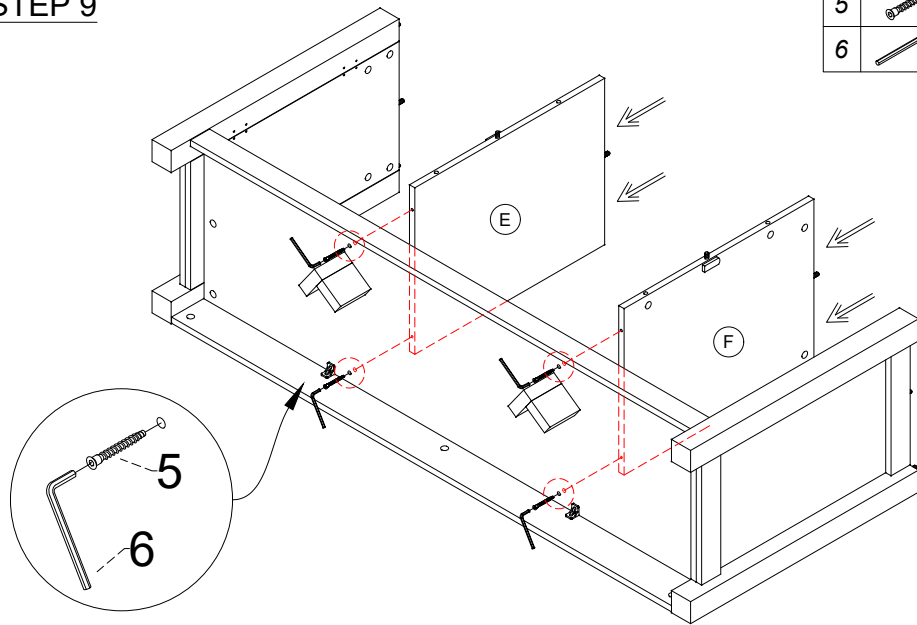


STEP 10

3		4 pcs
9		4 pcs

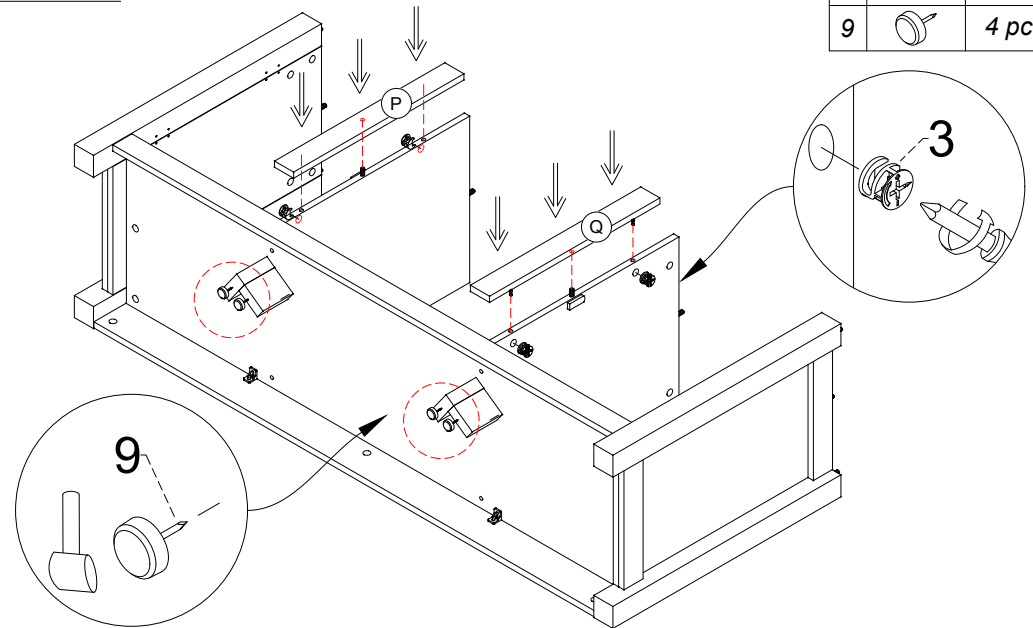

STEP 11



3		8 pcs
---	---	-------

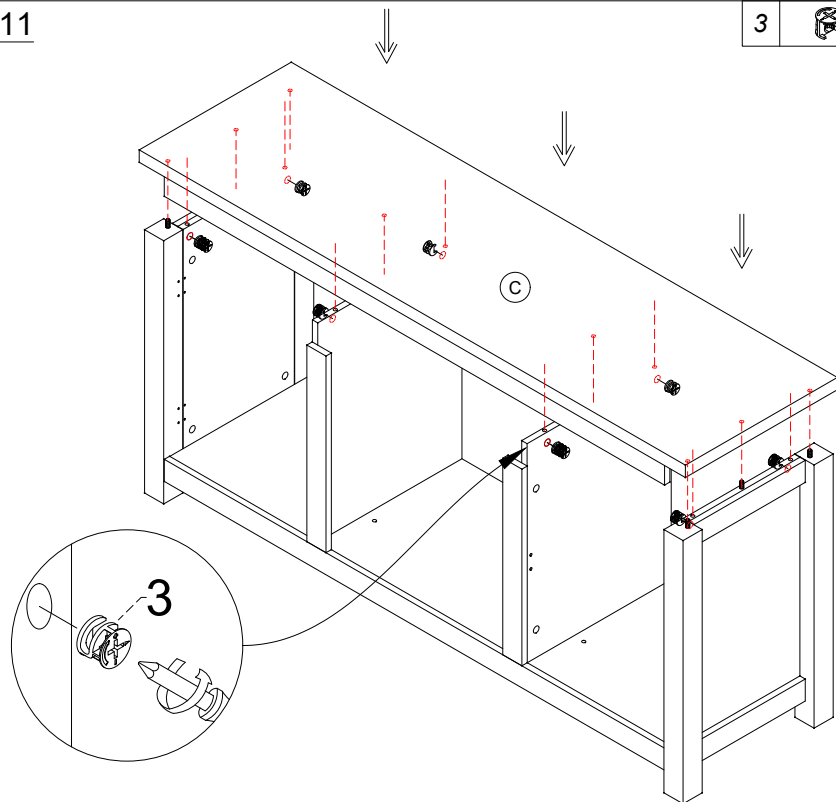

STEP 12


11		20 pcs
----	---	--------

PLEASE ENSURE THAT EACH OF THE FOUR CORNERS OF THE CABINET IS SQUARE.

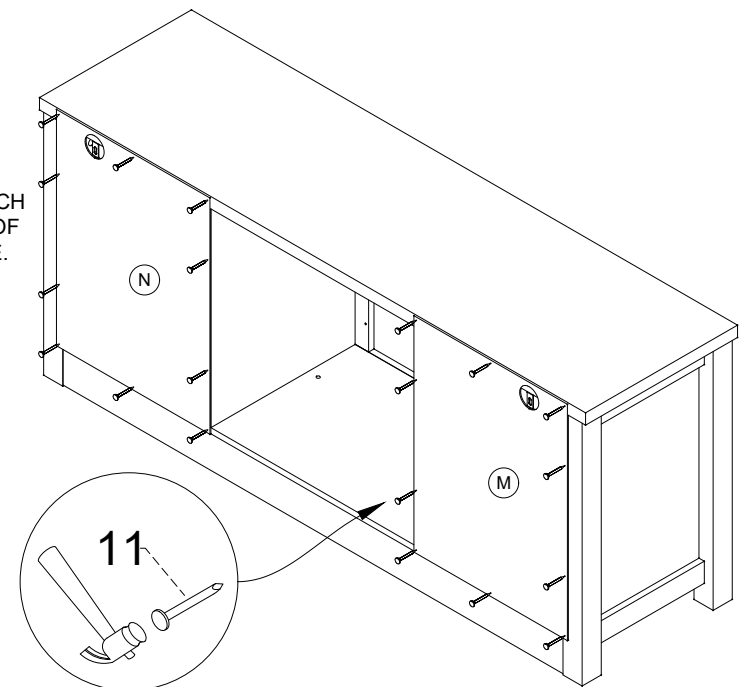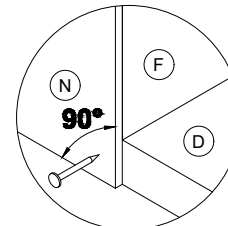


STEP 13


A. Vertical adjustment via slot in the mounting plate

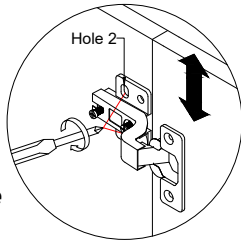


B. Lateral adjustment by screw adjusting

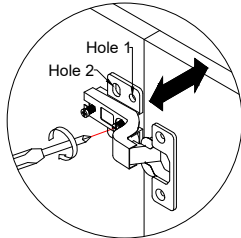


C. Front-to-Back by the slacking the hinge arm mounting screw

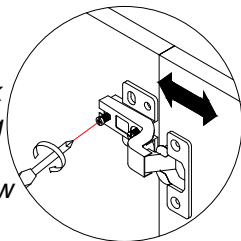

13.1


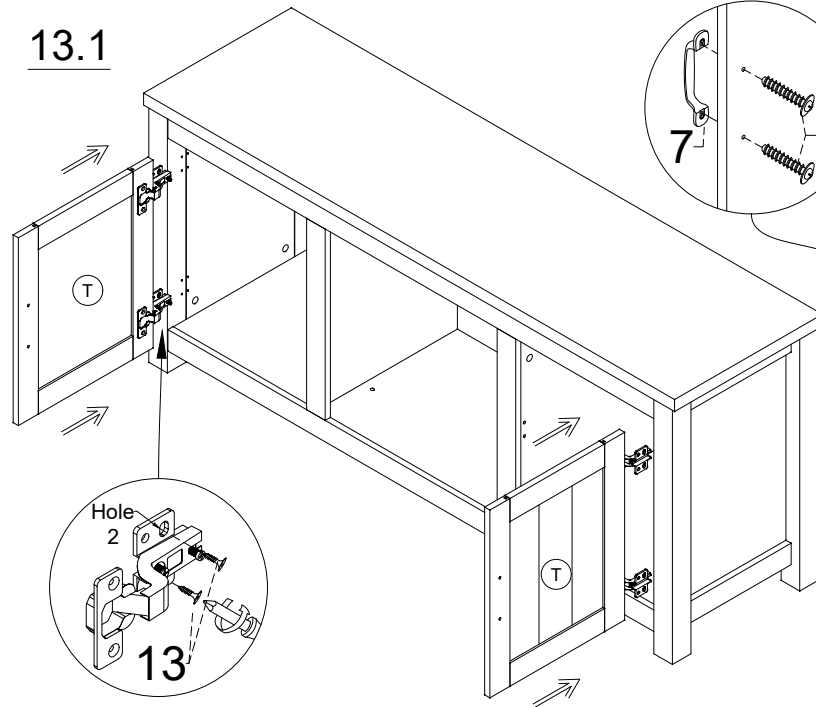


13.2

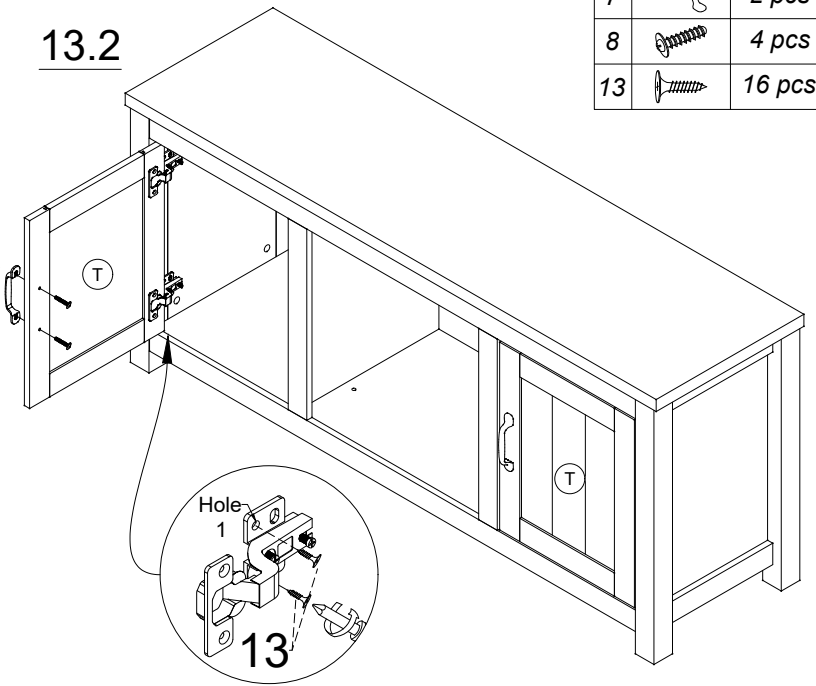

7		2 pcs
8		4 pcs
13		16 pcs

STEP 14

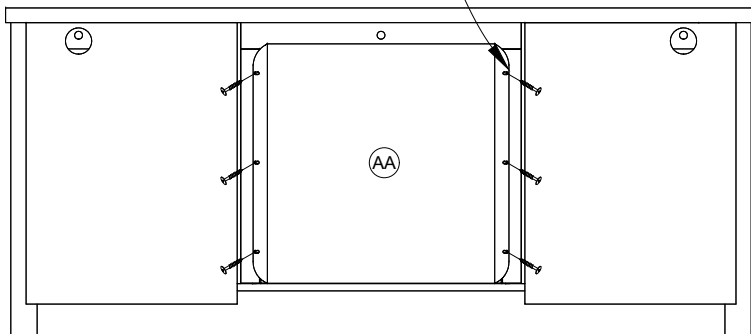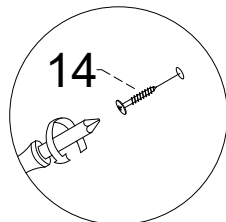

14		6 pcs
AA		1 pc

STEP 15

18		2 pcs
----	--	-------

