

ASHFORD WAINSCOT KIT

SAFETY INSTRUCTIONS

Make sure to use the correct tools recommended.
Wear safety goggles.
Follow adhesive, power tools, and paint manufacturers' instructions and users manuals.
Use common sense and follow good construction practices.

TOOL & MATERIAL CHECKLIST

- ☐ Construction adhesive
- ☐ Elastomeric adhesive caulk
- ☐ Caulking gun
- ☐ Finishing nails
- ☐ Miter saw
- ☐ Putty knife
- ☐ Chalk line box & pencil


STEP BY STEP INSTRUCTIONS

1. Apply a continuous 1/2" bead of construction adhesive along the back of moulding lengths.
2. Press moulding against wall at the desired location.
3. Use finishing nails to secure moulding into place.
4. Apply caulk in remaining gaps and smooth with finger or putty knife. Use caulk or light-weight spackle to fill in holes left from finishing nails.
5. Touch-up moulding as needed using high quality latex paint.

SPECIAL INSTRUCTIONS AND NOTES

- You can use standard woodworking tools to cut PVC products.
- Hot-dipped galvanized or stainless steel nails/screws are best for PVC trim.
- PVC expands and contracts with temperature. If you are installing above 80 degrees F, cut pieces to fit tightly. 60-80 degrees, leave a 1/16-in gap for 18 ft of length. Below 60 degrees, leave a 1/8-in gap. After installation cover gap with acrylic caulk.
- Fill fastener holes in PVC with acrylic caulk.
- Glue joints and miters together with PVC cement.
- Use 100% acrylic paint before installing, finish with final coat to cover chalked holes.

EXAMPLE INSTALLATION DIAGRAMS

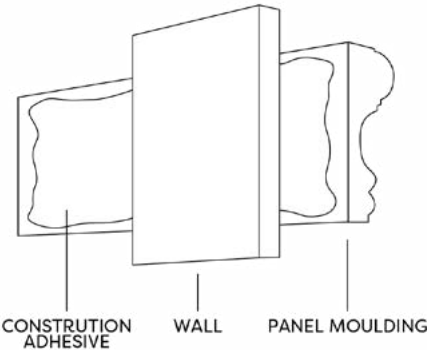

DECORATIVE WALL PANELS

SAFETY INSTRUCTIONS

Make sure to use the correct tools recommended.
Wear safety goggles.
Follow adhesive, power tools, and paint manufacturers' instructions and users manuals.
Use common sense and follow good construction practices.

TOOL & MATERIAL CHECKLIST

- ☐ Construction adhesive
- ☐ Power drill or hammer
- ☐ Finishing nails or screws
- ☐ Extra fine sandpaper
- ☐ 100% acrylic paint
- ☐ Level or chalk line

STEP BY STEP INSTRUCTIONS

1. Establish a level line for the top of the panels. Measure up from the floor and make a mark. Use a level as a straight edge or chalk line and lightly draw a line around the room. As you install the panels, make sure its top is even with the level line. Mark vertical lines for desired spacing of panels as well.
2. Locate the wall studs and mark them lightly just above the level line. The marks are useful when you nail the panels in place.
3. Apply construction adhesive to the back of the panel and set it in place. The top of the panel should be flush with the level line on the wall.
4. Hold the panel in place and secure it with nails. If the panel covers an outlet, cut a hole for the outlet before installing.
5. Apply caulk in any gaps between panel and wall and smooth with finger or putty knife. Use caulk or lightweight spackle to fill in holes left from finishing nails.
6. Touch-up as needed using high quality latex paint.

SPECIAL INSTRUCTIONS AND NOTES

- It is highly recommended that you paint or finish your panel before you install it.
- Recommended use of 100% acrylic latex paint
- Clean the installation surface and back of panel of any debris with a clean cloth.
- Always allow the panels to acclimate in the room where they'll be installed for 48 hours prior to installation.

EXAMPLE INSTALLATION DIAGRAMS

