
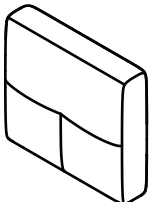
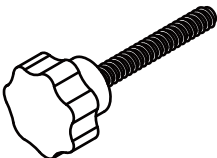
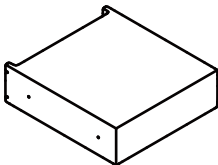

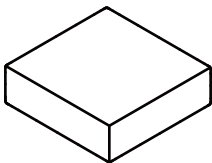
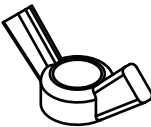
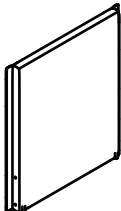
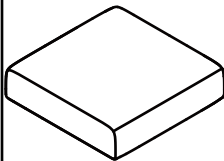
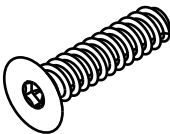
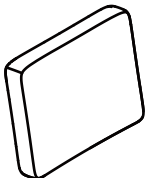
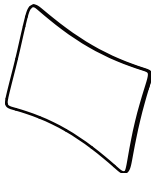

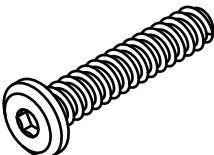
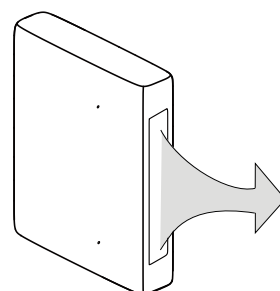
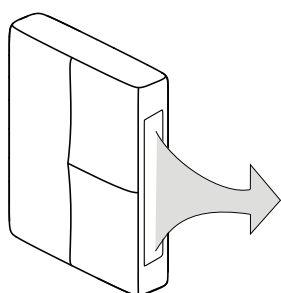


Part NO.	Part Image	Part Name	QTY	Part NO.	Part Image	Part Name	QTY
A		Armrest	2	J		Screw M8*60	6
B		Seat Frame	4	K		Gasket M8*20	16
C		Ottoman Frame	2	L		Nut M8	6
D		Back Frame	4	M		Allen Key M6	1
E		Seat Cushion	6	N		Screw M6*38	16
F		Back Cushion	4	O		Plastic Gasket	24
G		Arm Pillow	2	SOME PARTS ARE INSIDE THE ARMRESTS, PLEASE OPEN THE VELCRO ON THE BOTTOM OF ARMRESTS TO TAKE THEM OUT WHEN YOU ASSEMBLE THE SOFA.			
H		Leg	24				
I		Screw M8*50	4				

Sofa Overall Assembly Drawing

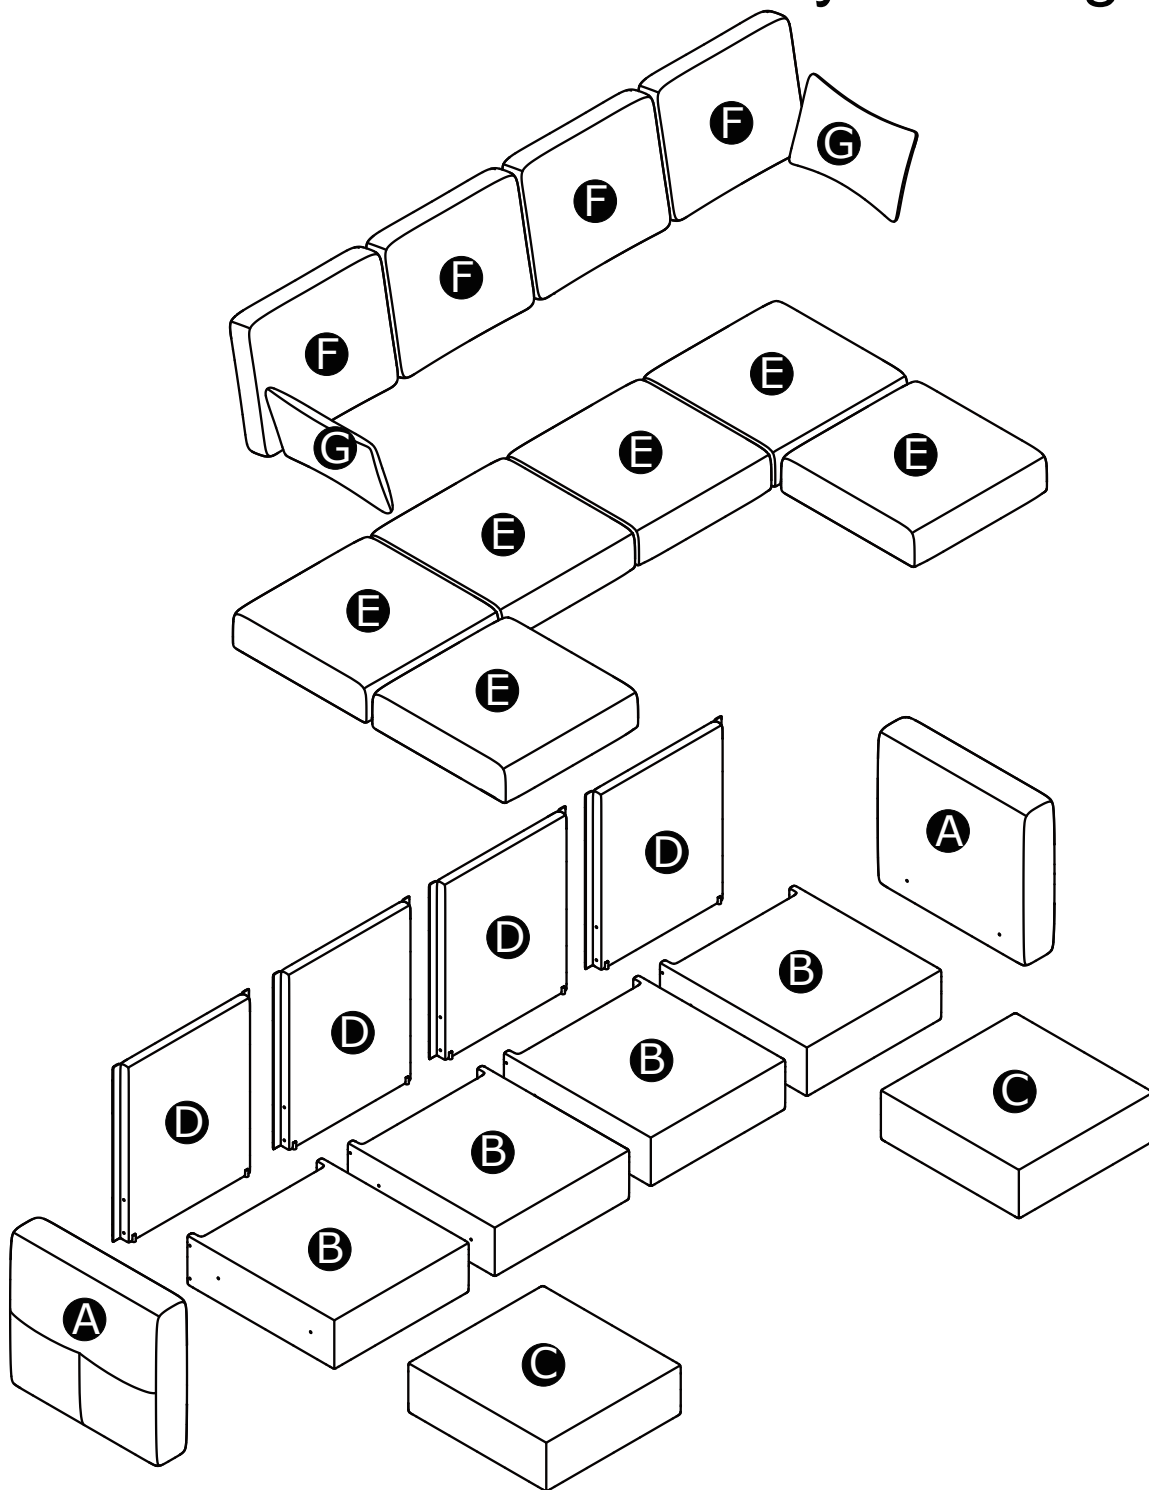


STEP 1

D x4

B x4

N x16

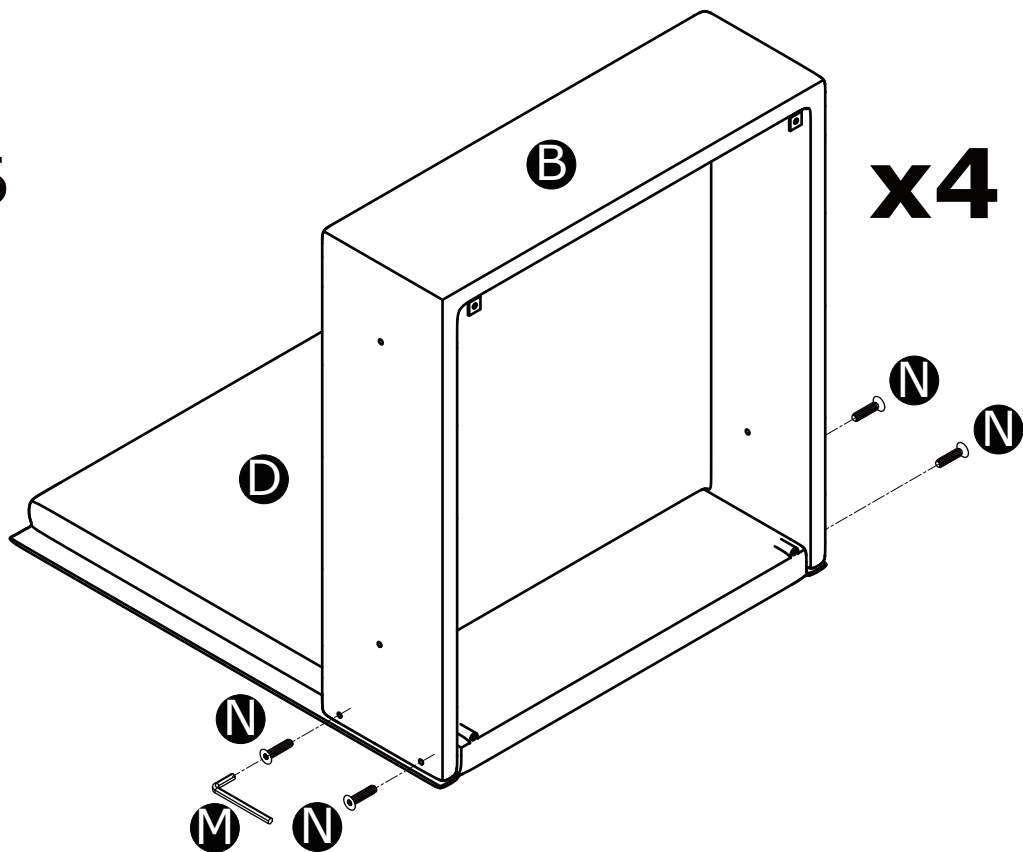


STEP 2

A x2

I x4

K x4

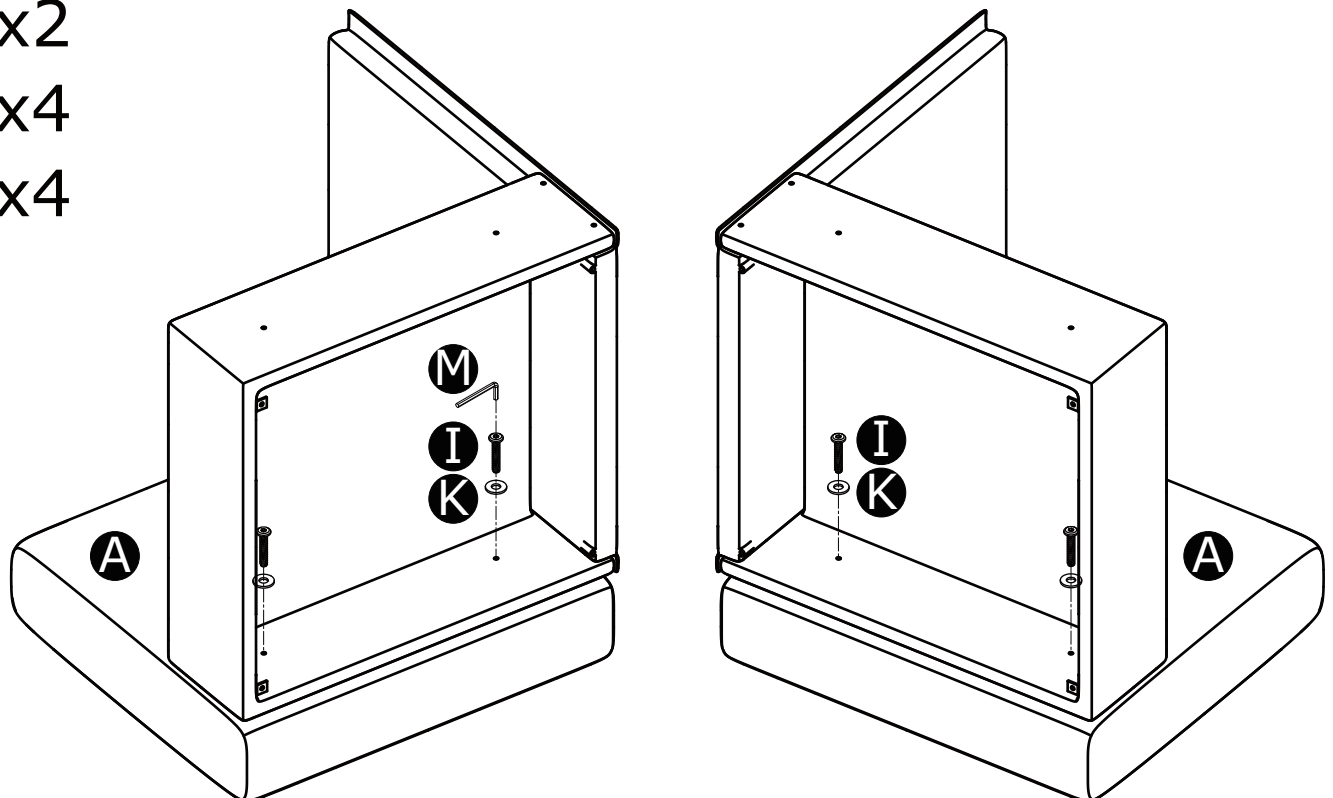


STEP 3

J x6

K x12


L x6

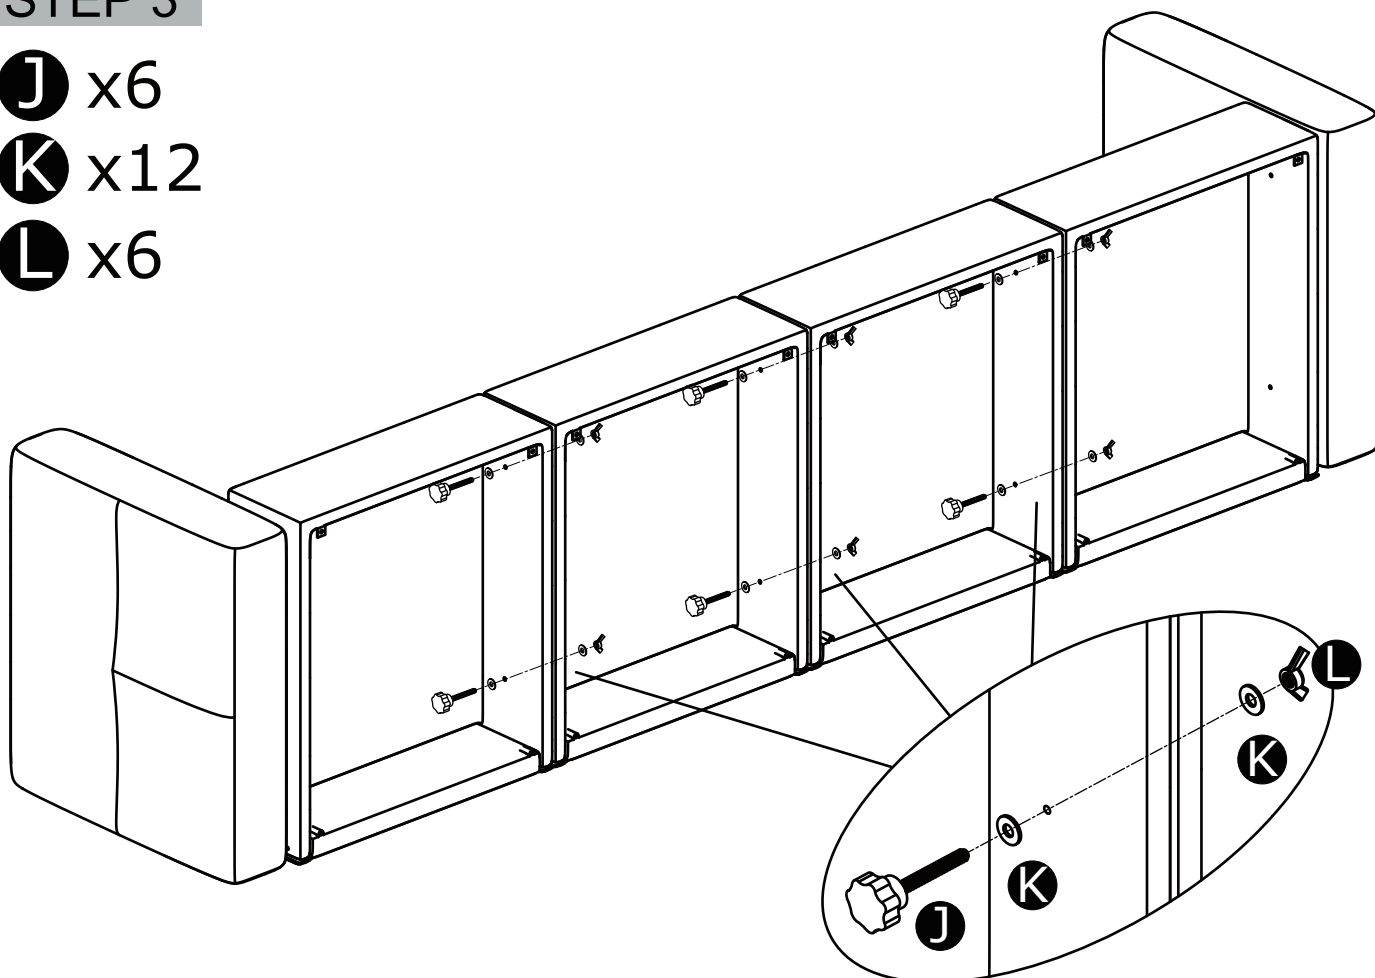


STEP 4

H x24


O x24

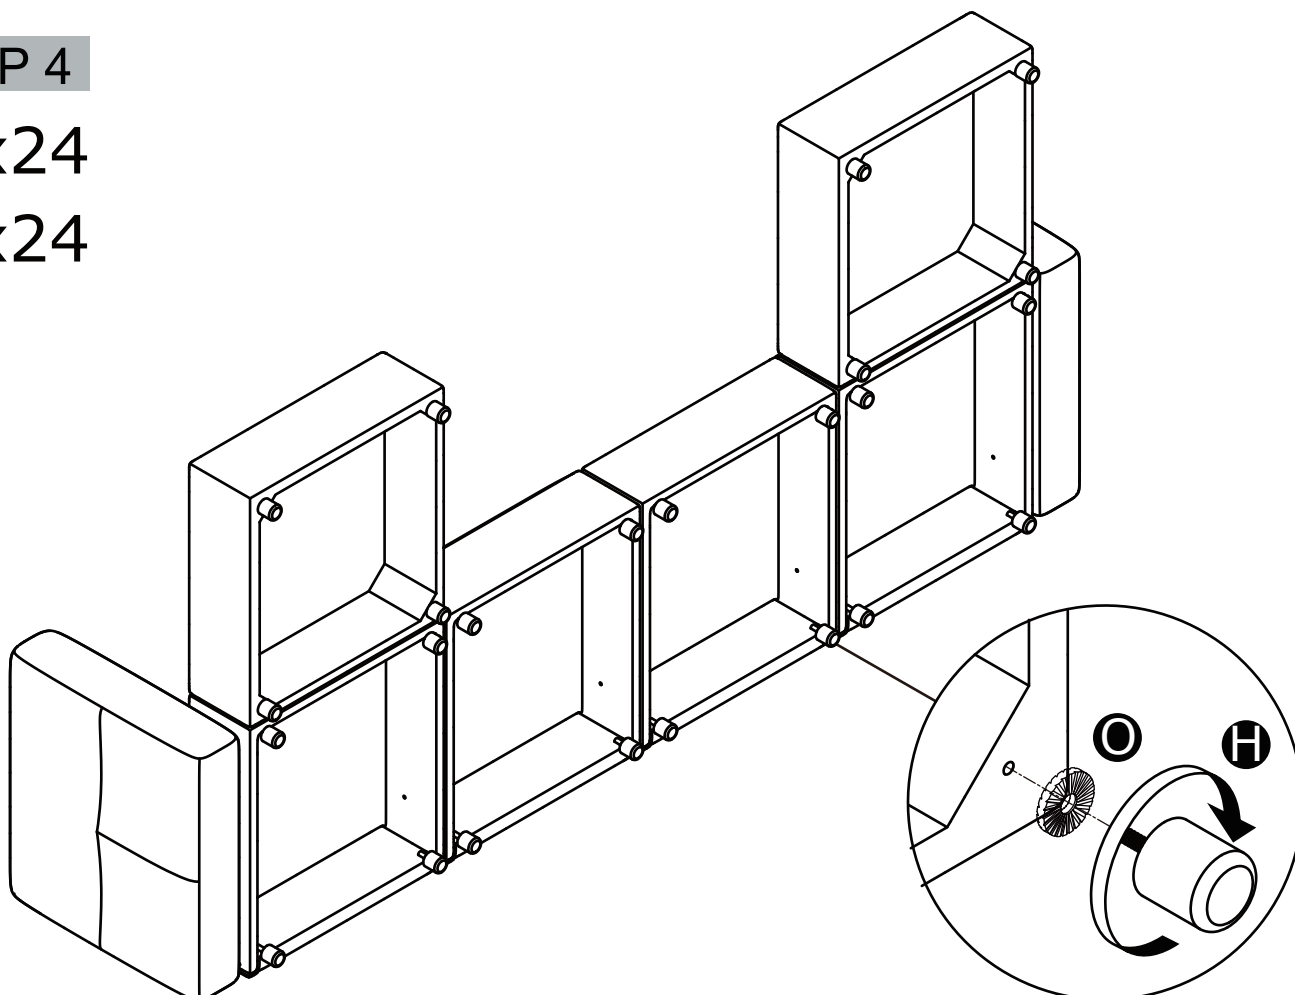


STEP 5

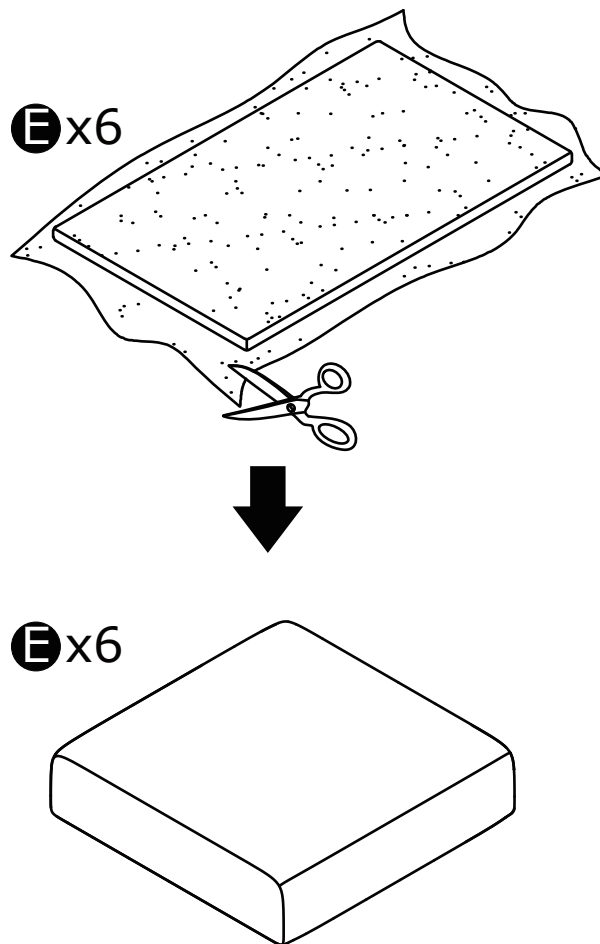


STEP 6

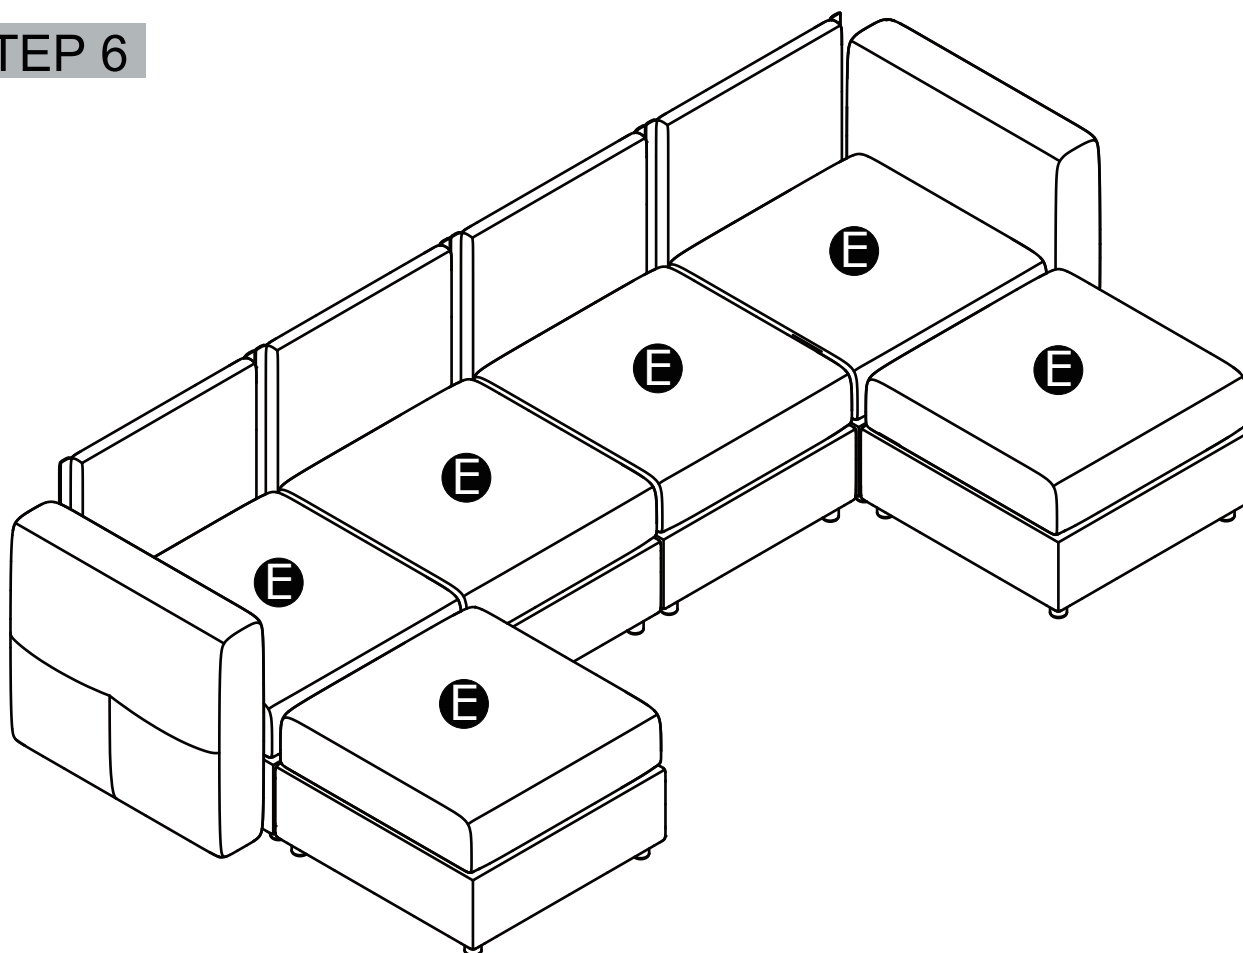

STEP 7

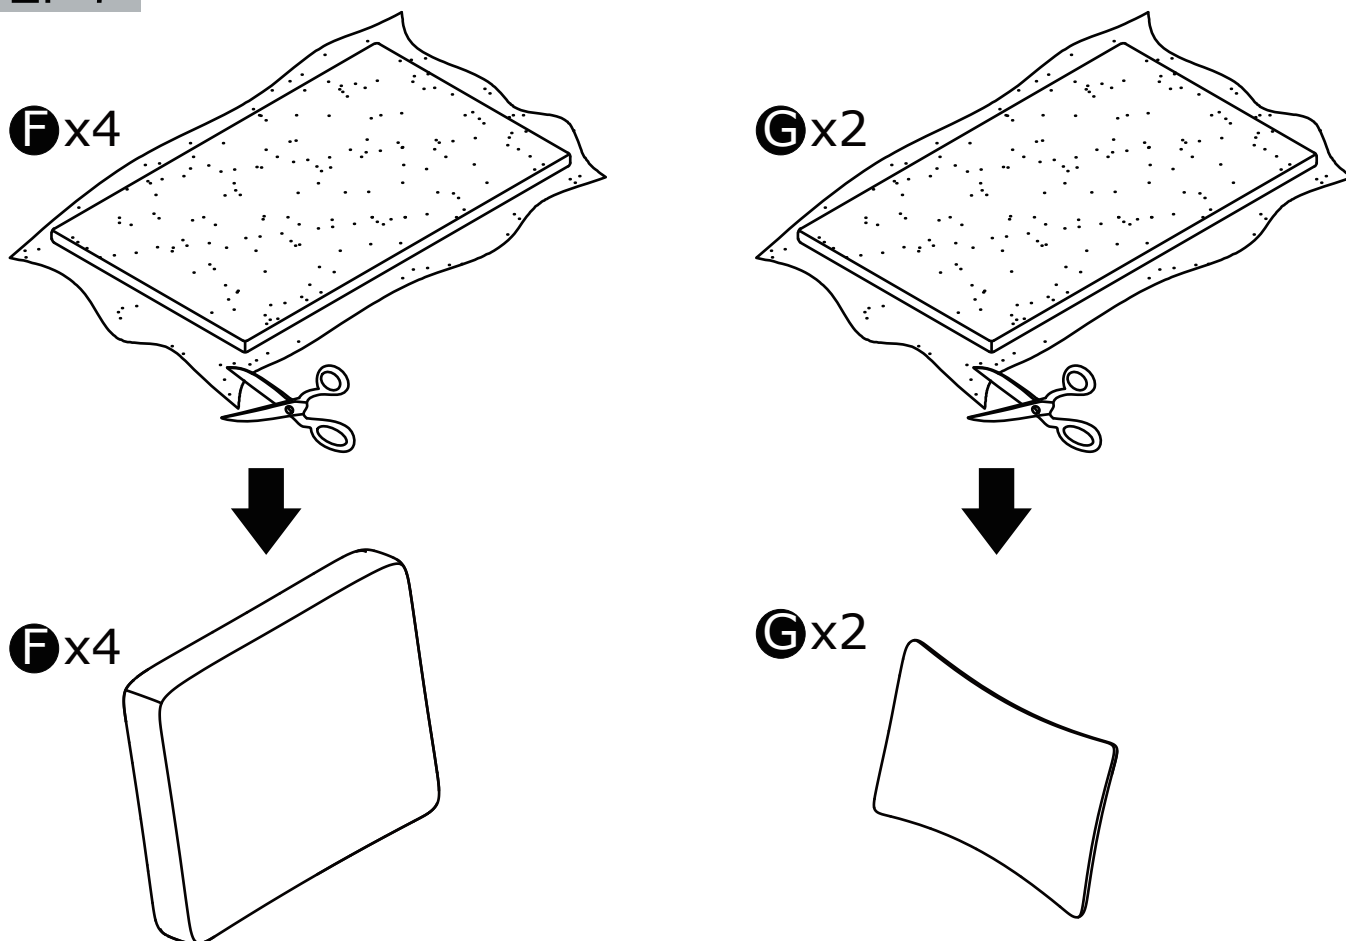

STEP 8

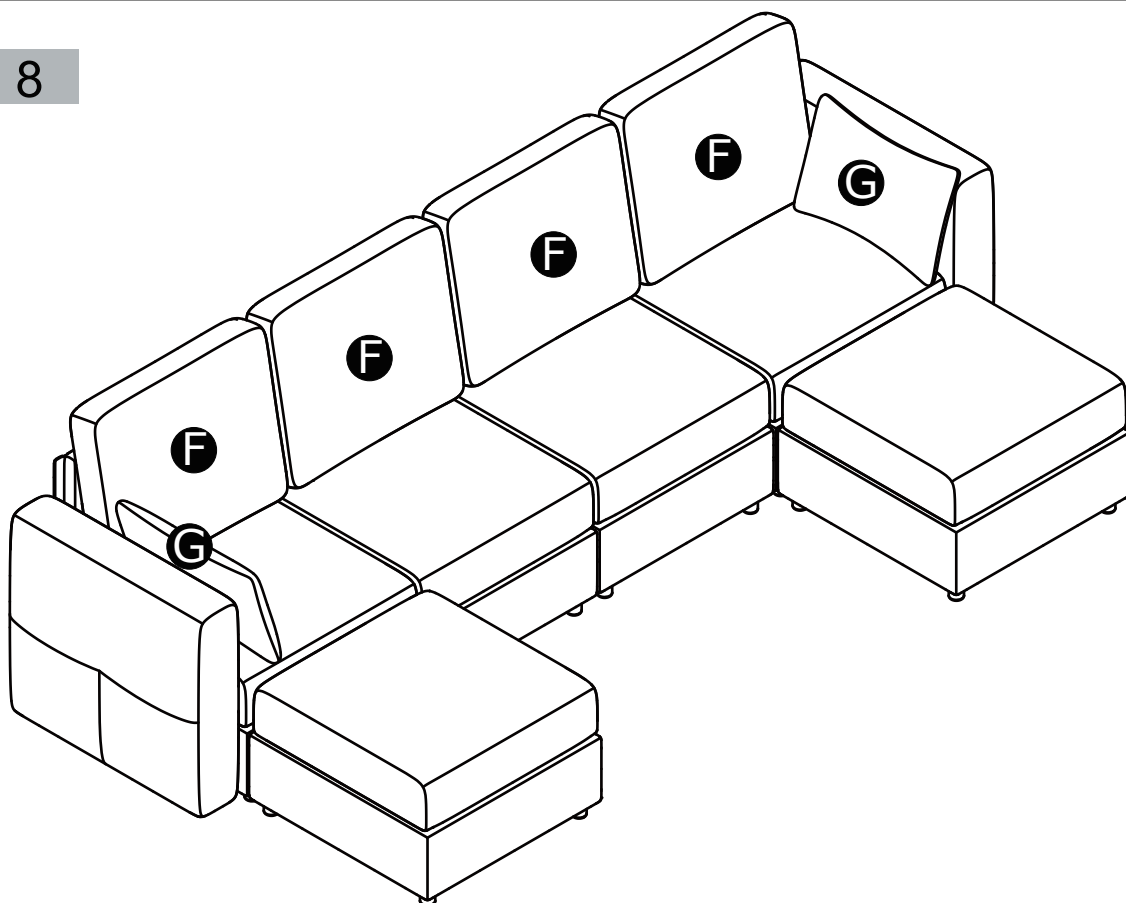

The product has compression parts,
Please pat them by hand and wait 72 hours, the cushions will be recover.