


Assembly Instruction

CAUTION: Read instruction carefully and turn electricity off at main circuit breaker panel before beginning installation.

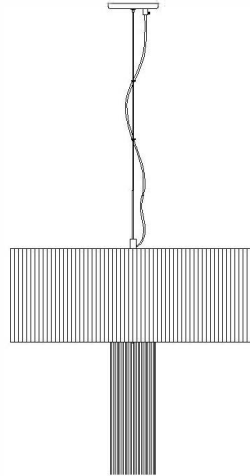

Care and Cleaning

To clean the outside of the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the surface of the fixture.

To clean the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the interior surface of the fixture.

Do not use any cleaners with chemical, solvents or harsh abrasives. Use only a dry soft cloth to dust or wipe carefully.

Estimated Assembly Time: 30 minutes


Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Mounting bar		1X	E	Beige tassle		1X
A1	Mounting screw		2X				
B	Bulb		3X	F	Metal finial		1X
C	Acrylic diffuser		1X	G	Metal tube		1X
				H	Plastic screw		1X
D	Canopy screw		2X	I	Wire nut		3X
				J	Canopy		1X

Installation

Step 1

- Unpack all parts from cartons carefully
- Press cable lifter and and twist plastic screw(H) to adust electrical wire to suitable length before screw the metal tube(G)
- Place the bulb(B) to the socket
- Curve the acrylic diffuser(C) a little before fitting the shade
- Place the beige tessle(E) to the nipple of the lampbody then tighten with metal finial(F)

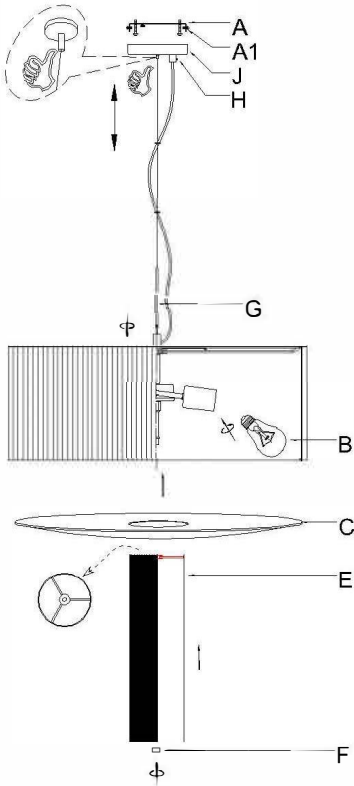


Step 2 Wire Connetion

Connect,Hot,Black or Red outlet Supply Wire to:	Connect,Neutral,White Outlet Supply Wire to:
Black	White
* Parallel Cord(round & smooth)	* Parallel Cord(square& ridged)
Clear,Brown,Gold or Black without Tracer(colored stripes)	Clear,Brown,Gold or Black without Tracer(colored stripes)
Insulated Wire(not green) with copper metal conductor	Insulated Wire(not green) with Silver metal conductor




*Note: When parallel wire(SPT I & SPT II) is used.The neutral wire is square shaped and ridged and the hot wire will be round in shape and smooth.(See illustration on left.)

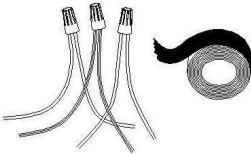

Step 3

- Installing the mounting bar(A) with mounting screw(A1), secure canopy with canopy screw(D) by screwdriver.

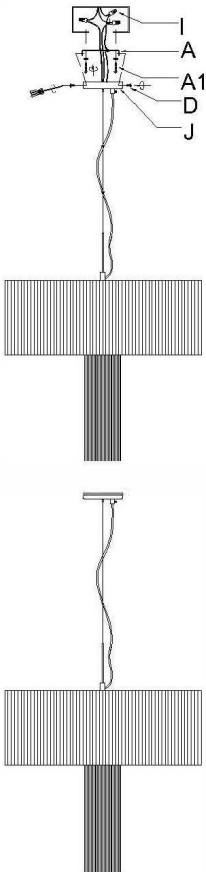

Step 4

- Consult a qualified electrician to ensure correct branch circuit conductor

ENJOY YOUR LAMP