

Package Content

Wood slab x 1


Metal leg x 4

Screw x 16

Tools Needed


Screwdriver

INSTRUCTION

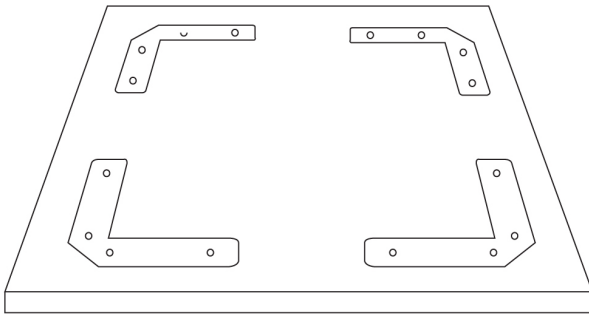


Turn your table top upside-down on a scratch free surface.

1.

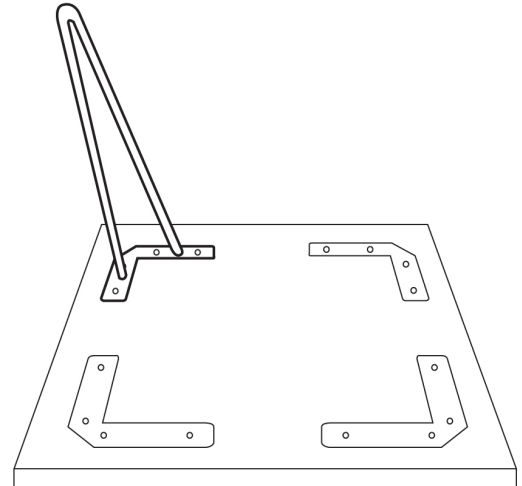


Line up one leg at a time to the holes or marked lines.

2.

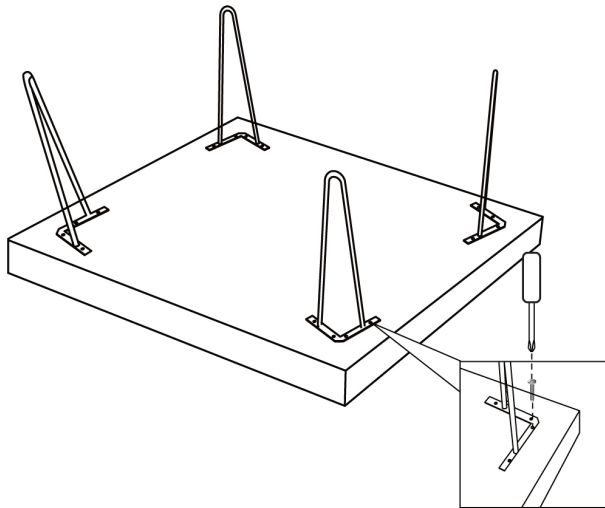

Attach the legs with the screws provided. Please note that the screws provided are the proper length for 1.5" to 2" thick.

3.

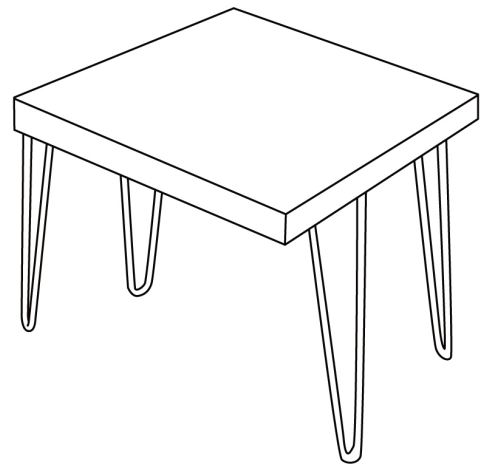

Flip your completed table over and enjoy!

4.

Please install according to the instruction. We are not responsible for injury or damage resulting from improper installation or use.

* The emission of the chemicals listed in Prop 65 in this product has been tested to meet the standard of CARB ATCM.