


# RPC7EDRDS-N

## Assembly Instructions




# General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly
- II. Follow each step carefully to ensure the proper assembly of this product
- III. Two people are recommended for ease in the assembly of this product
- IV. A Phillips head screwdriver is required for the assembly of this product

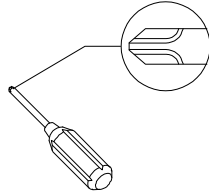


- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

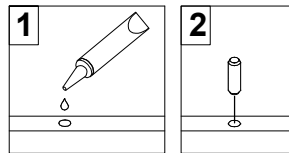


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of dowel before attaching parts together . Wipe away excess glue immediately.

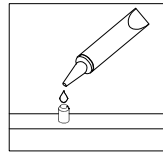




- VI. HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS
  - 1.Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.
  - 2.Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock points towards Cam Bolt
  - 3.Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.
  - 4.Use the sticker to conceal the Cam.

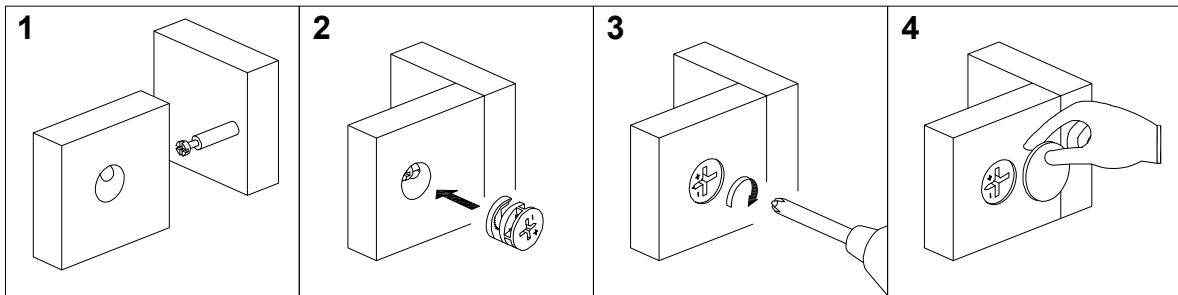


- VII. Power tools should not be used to assemble this product .

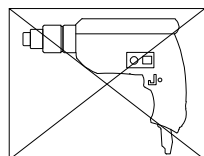


# Parts List

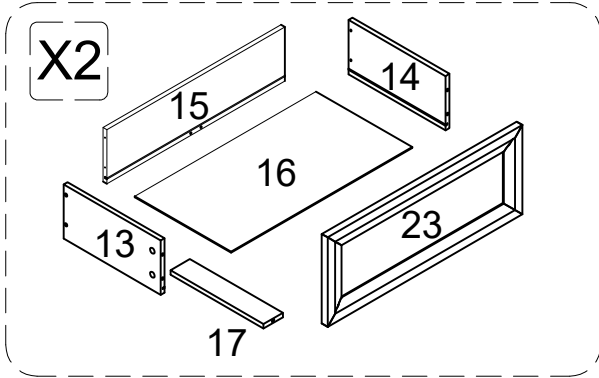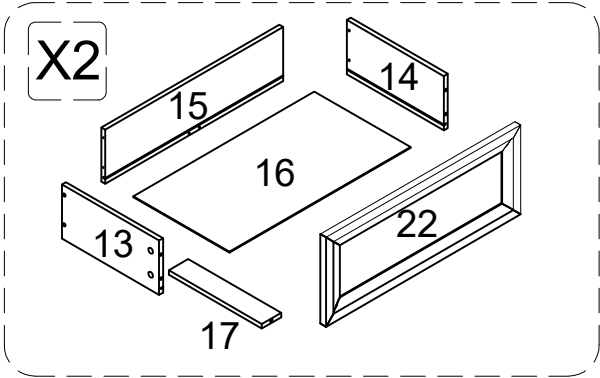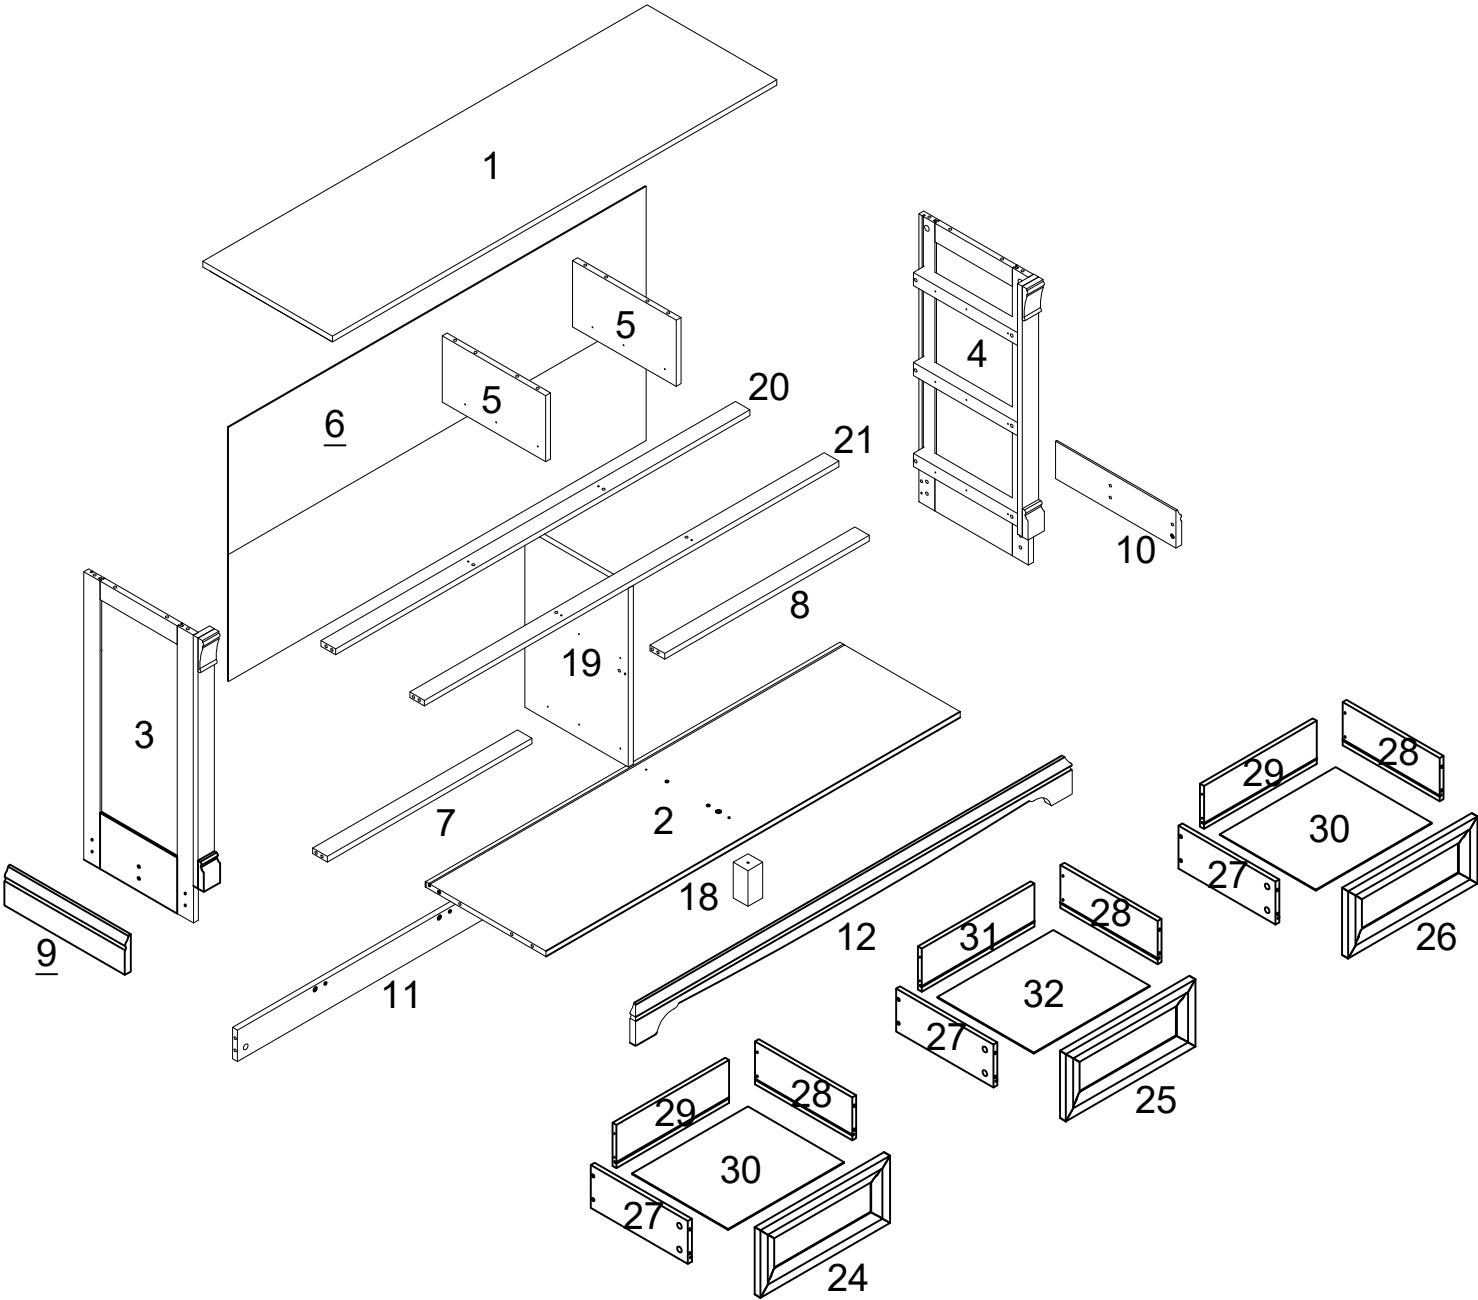








# Hardware List


|     |                                                                                     |             |                     |        |
|-----|-------------------------------------------------------------------------------------|-------------|---------------------|--------|
| A   |    | Ø8*30mm     | Medium Wooden Dowel | 28 pcs |
| B   |    | Ø6*35mm     | Cam Bolt            | 56 pcs |
| C   |    | Ø15*11.5mm  | Large Cam Lock      | 24 pcs |
| D&E |    | Ø30mm       | Cam cover           | 56 pcs |
| F   |    |             | Glue Tube           | 1 pc   |
| G   |    | Ø15*9.5mm   | Small Cam Lock      | 32 pcs |
| H   |  | Ø8*20mm     | Short Wooden Dowel  | 4 pcs  |
| I   |  | Ø8*50mm     | Long Wooden Dowel   | 1 pc   |
| J   |  | 58*20*20mm  | Plastic connector   | 10 pcs |
| K   |  | Ø1/4"*12mm  | Bolt                | 20 pcs |
| L   |  | Ø5/32"*12mm | Handle Bolt         | 11 pcs |
| M   |  |             | Handle              | 11 pcs |
| N   |  | Ø3.5*12mm   | Screw               | 84 pcs |

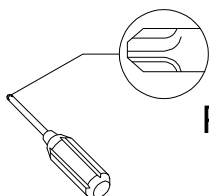

Philips head screwdriver required for assembly  
(not included)

# Hardware List


|    |                                                                                     |         |                            |        |
|----|-------------------------------------------------------------------------------------|---------|----------------------------|--------|
| O  |    | 12"     | Left Glide Track           | 7 pcs  |
| P  |    | 12"     | Right Glide Track          | 7 pcs  |
| OO |    | 12"     | Left Drawer Runner         | 7 pcs  |
| PP |    | 12"     | Right Drawer Runner        | 7 pcs  |
| Q  |    | Ø4*38mm | Screw                      | 40 pcs |
| R  |    | Ø4*25mm | Screw                      | 8 pcs  |
| S  |   |         | Plastic wedge              | 14 pcs |
| T  |  | Ø3*17mm | Screw                      | 14 pcs |
| U  |  | Ø3*12mm | Screw                      | 2 pcs  |
| V  |  | Ø6*50mm | Screw                      | 3 pcs  |
| W  |  | M4      | Allen Wrench               | 1 pc   |
| X  |  |         | Tipping Restraint Hardware | 2 sets |

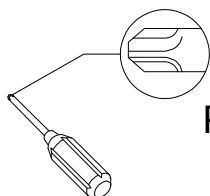

Philips head screwdriver required for assembly  
(not included)


## Step 1

The Shortest Wooden Dowel

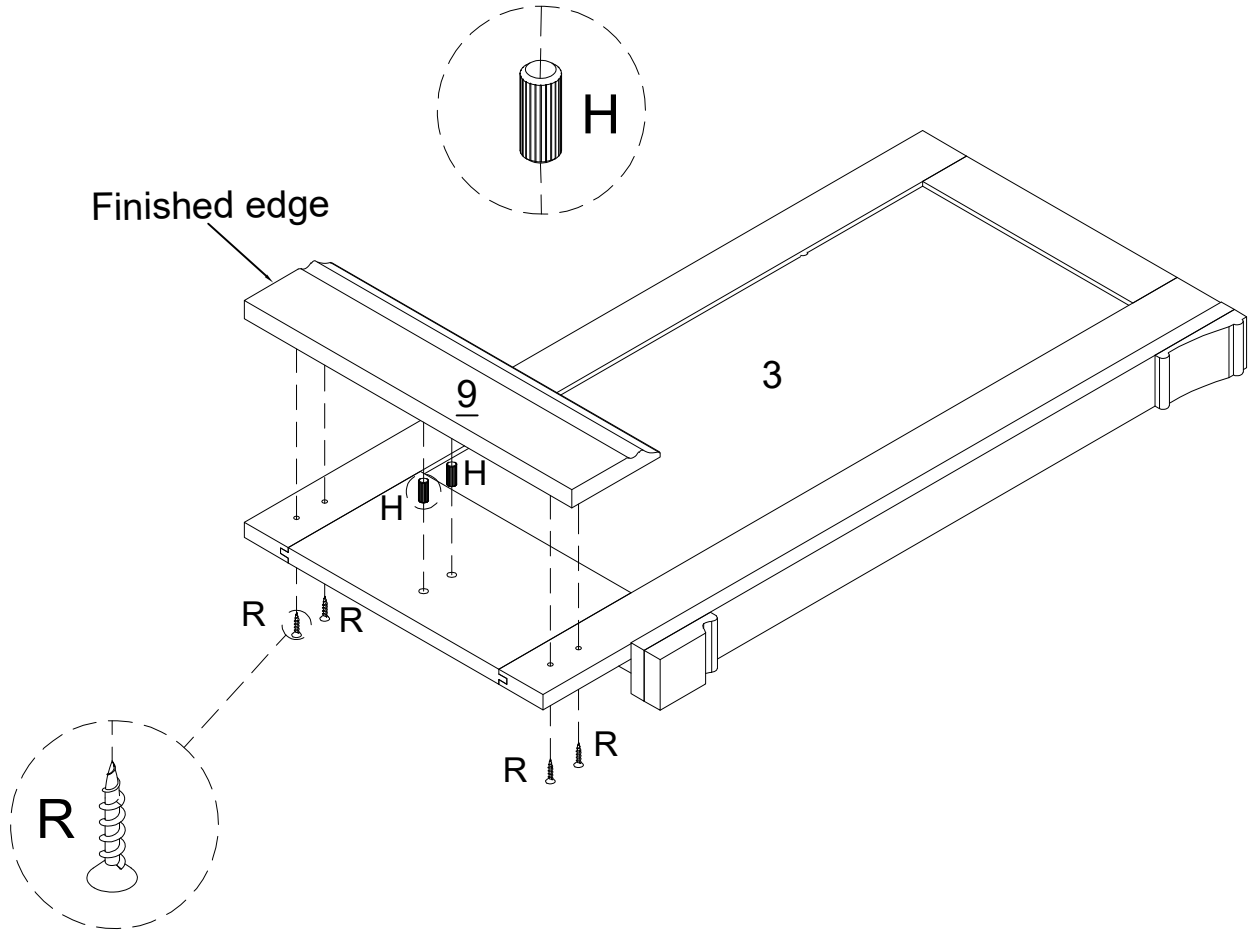


## Step 2


The Shortest Wooden Dowel

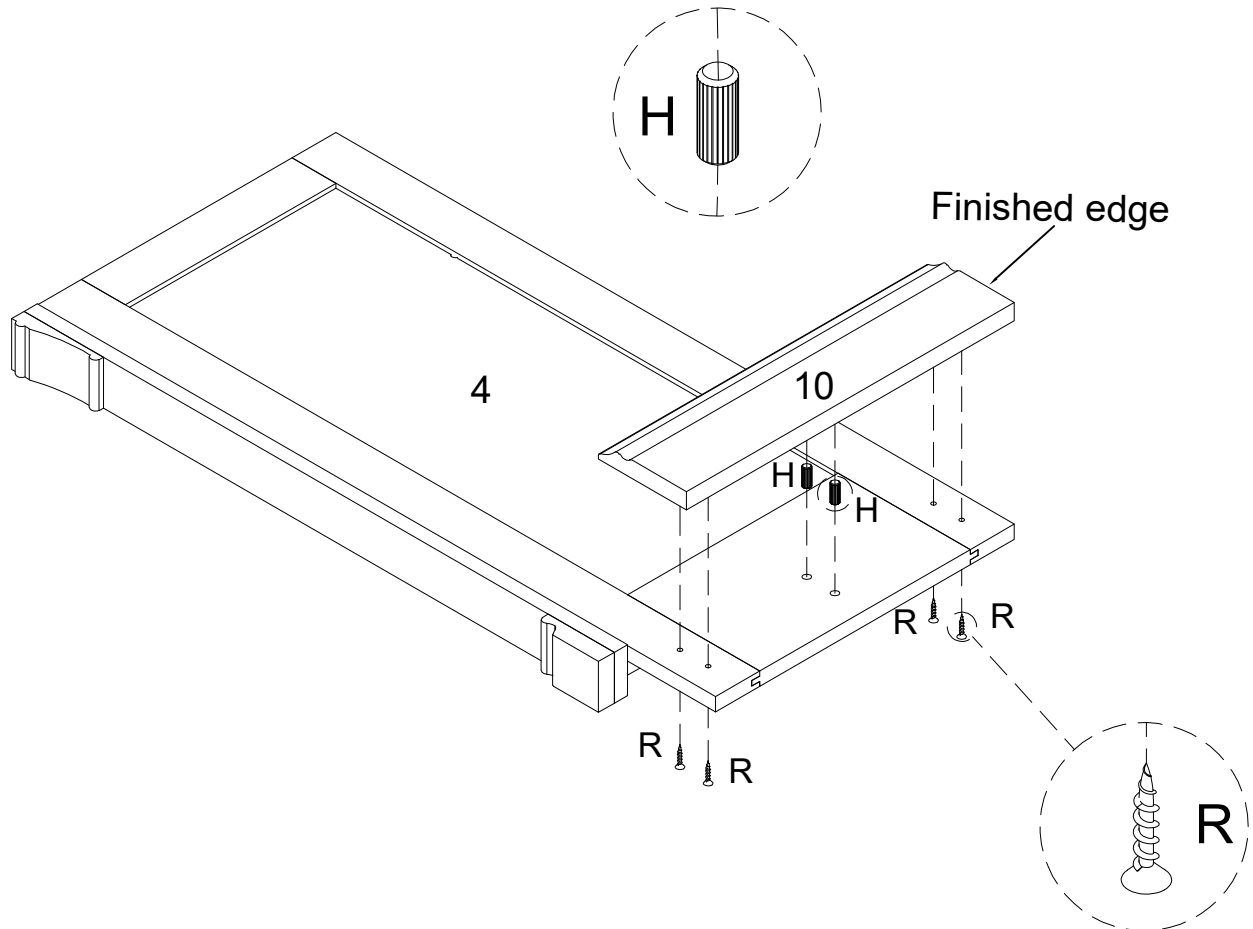


## Step 3

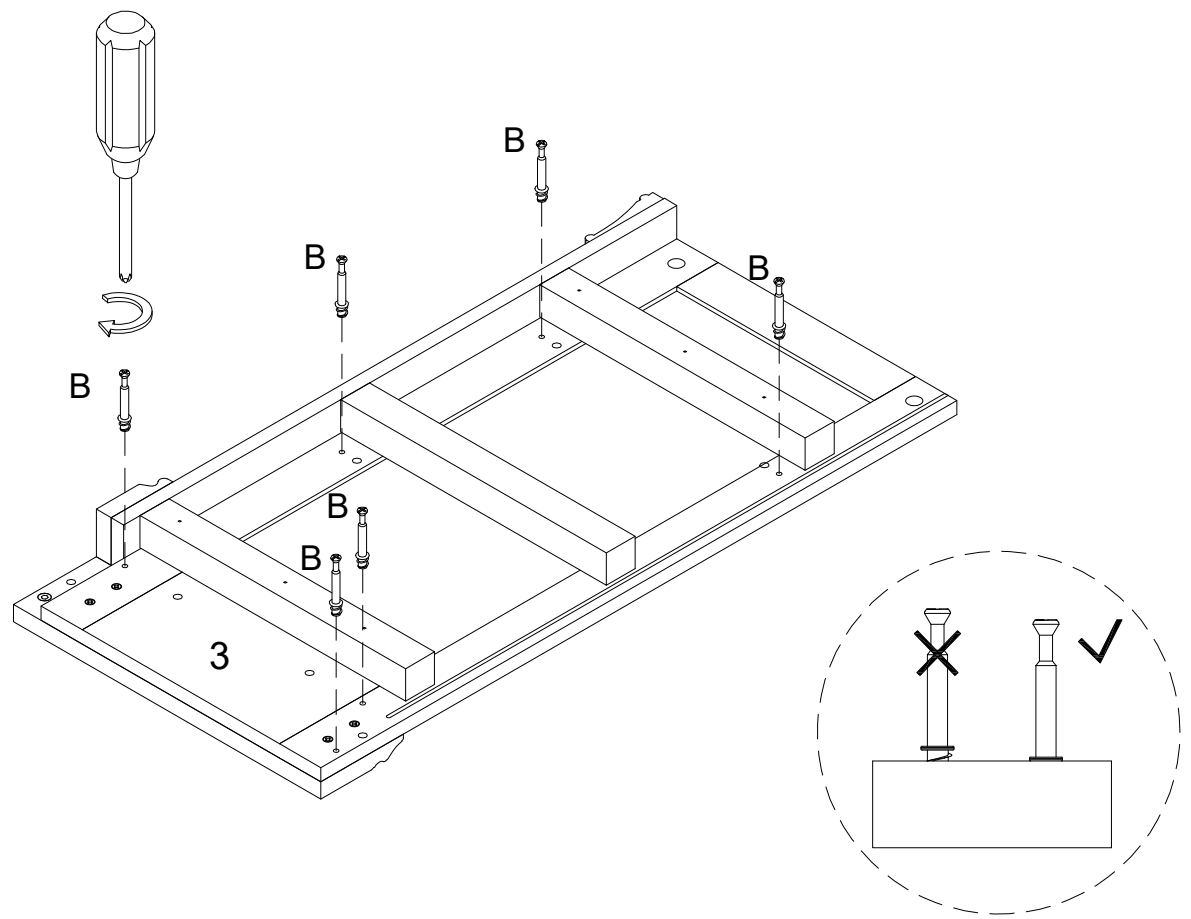


## Step 4

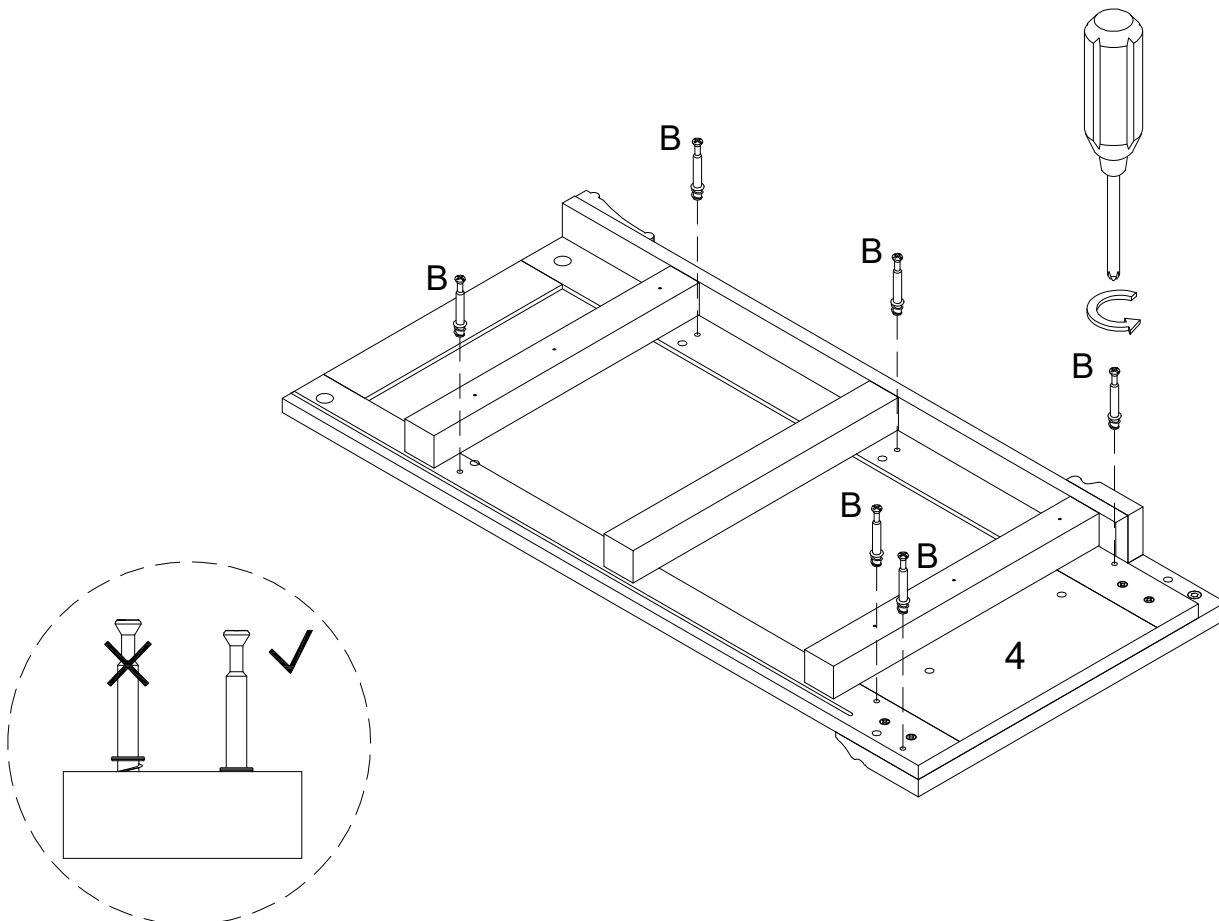


## Step 5

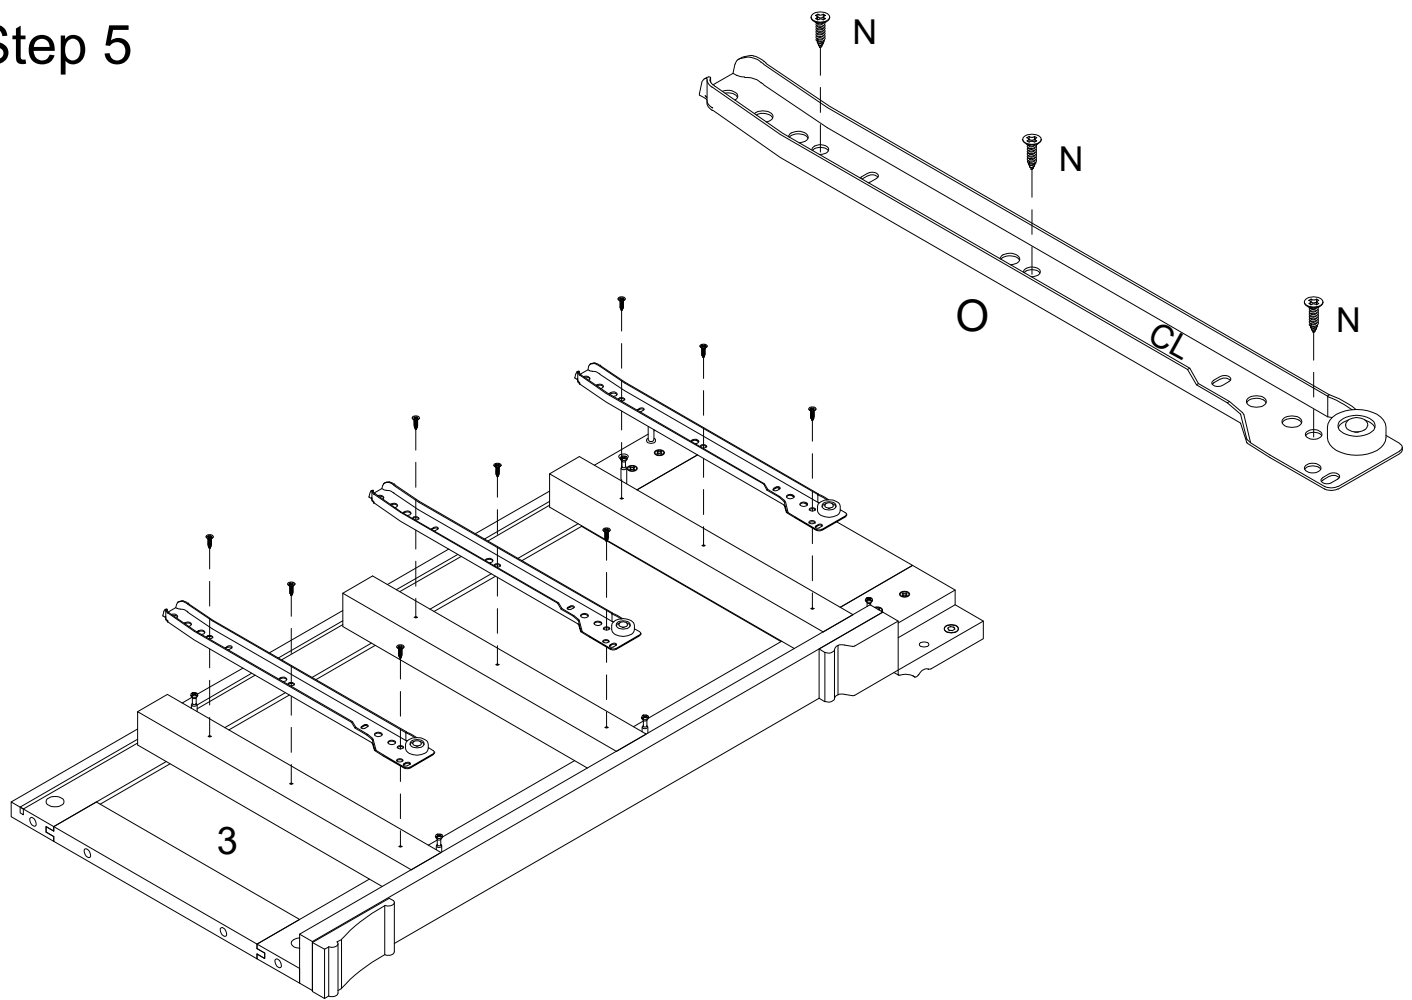


## Step 6

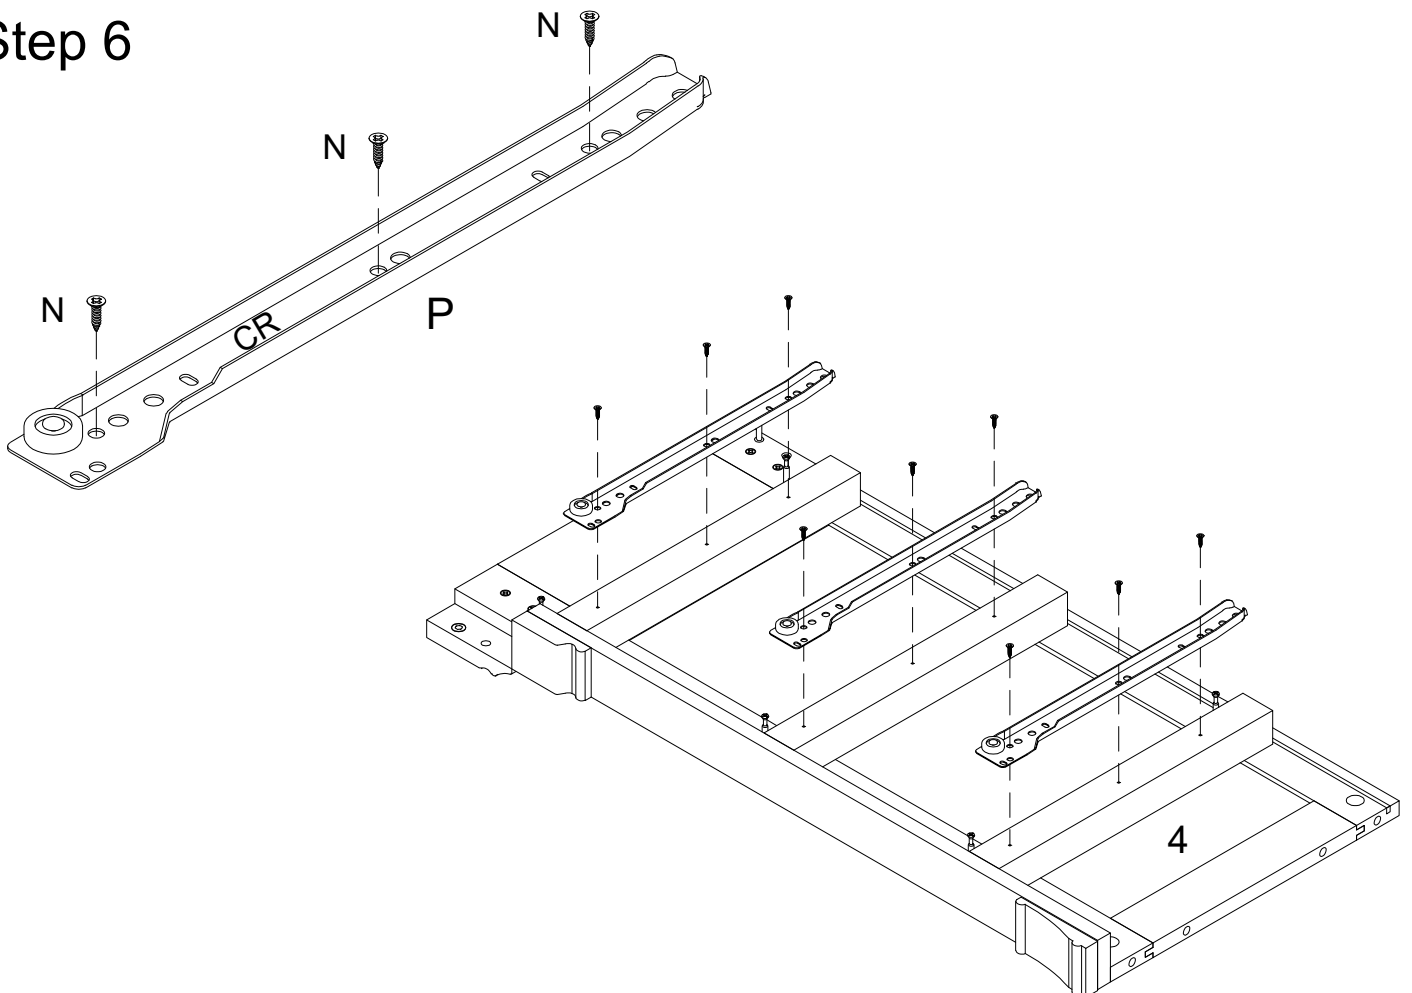


## Step 7

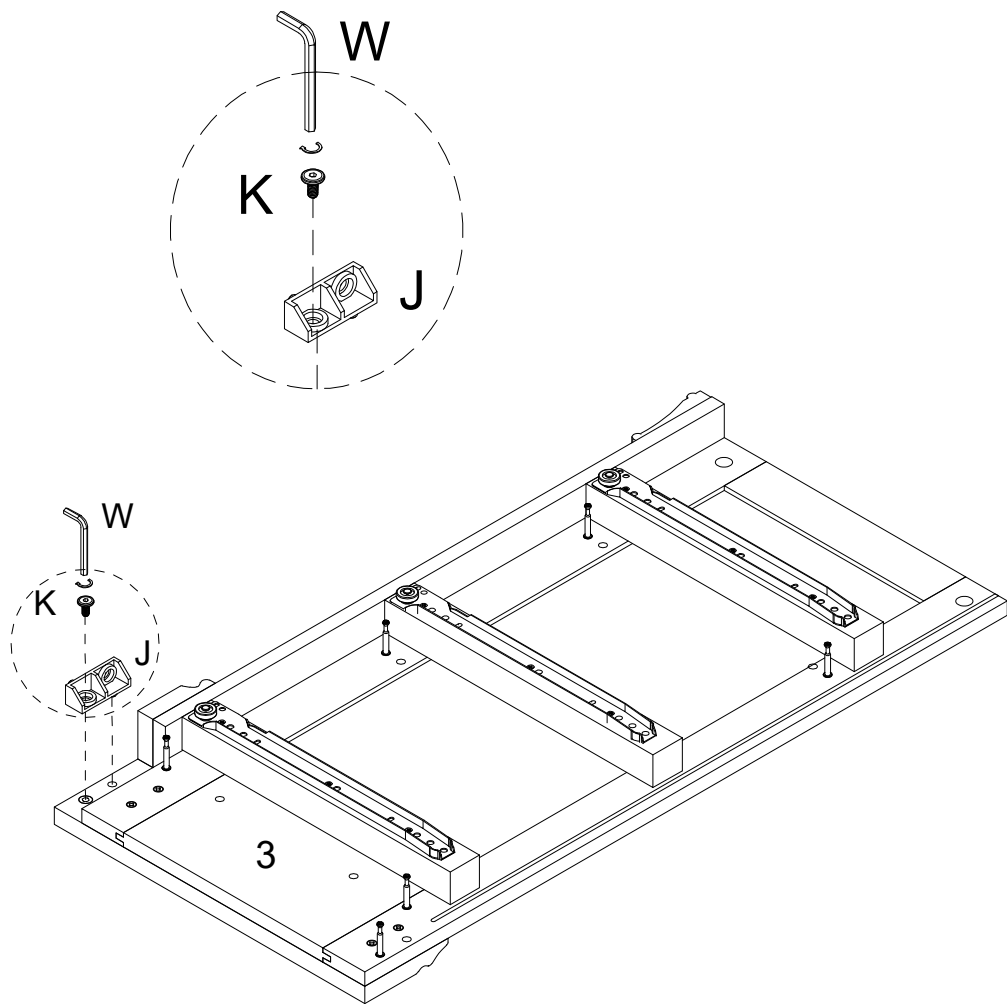


## Step 8

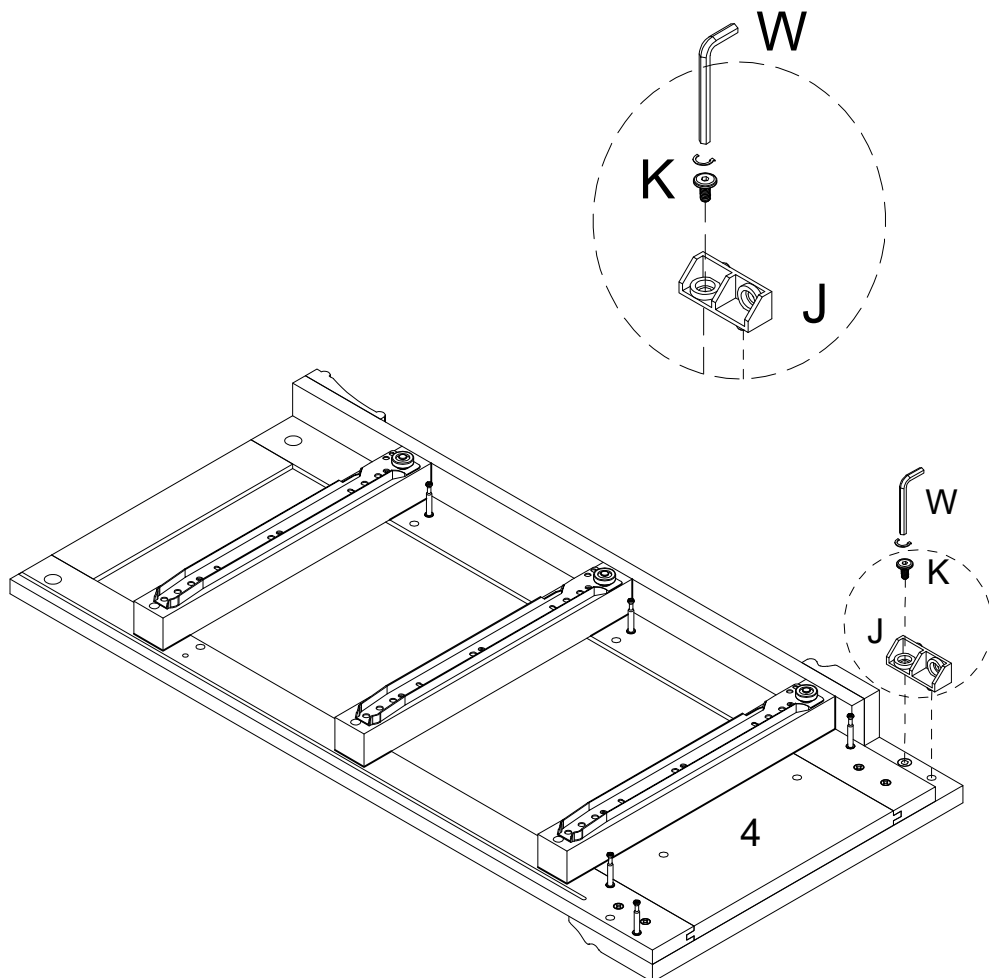


## Step 9

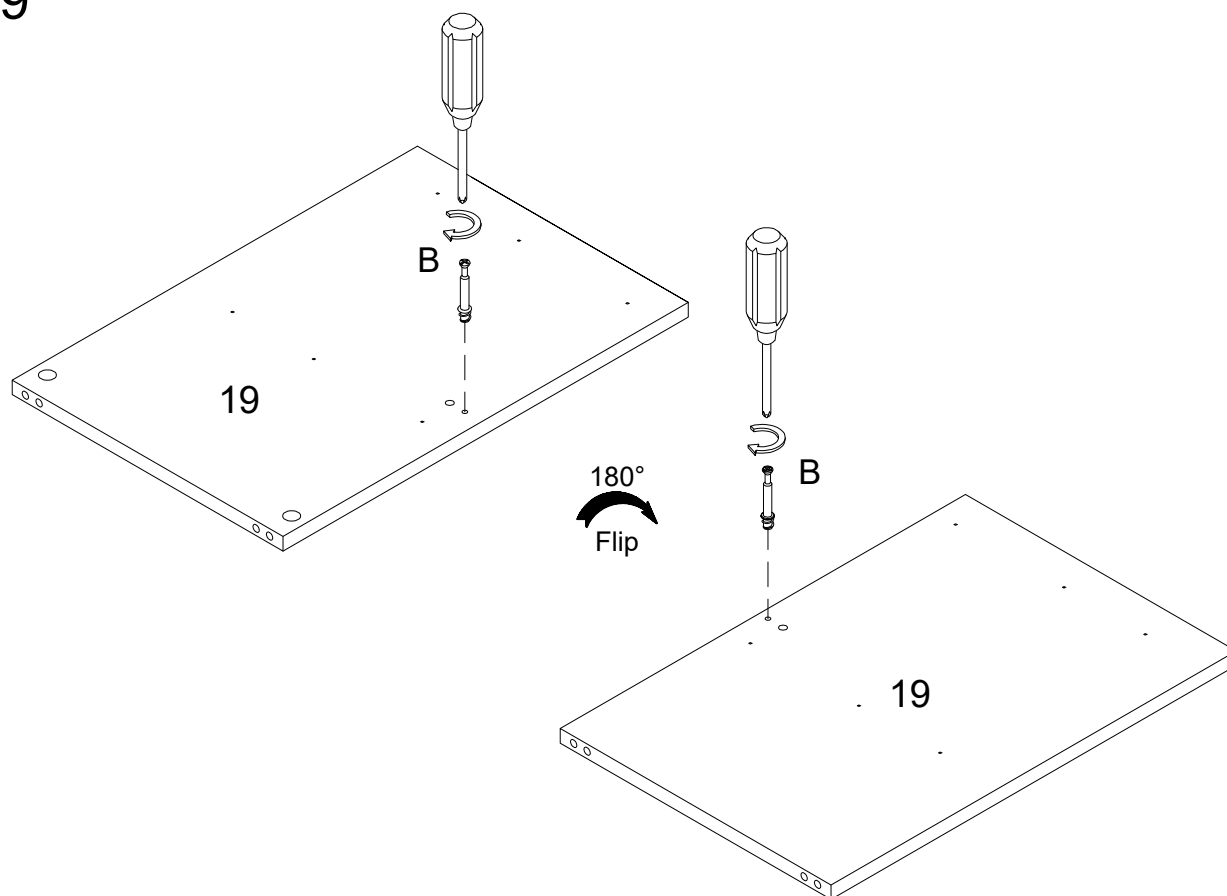


## Step 10

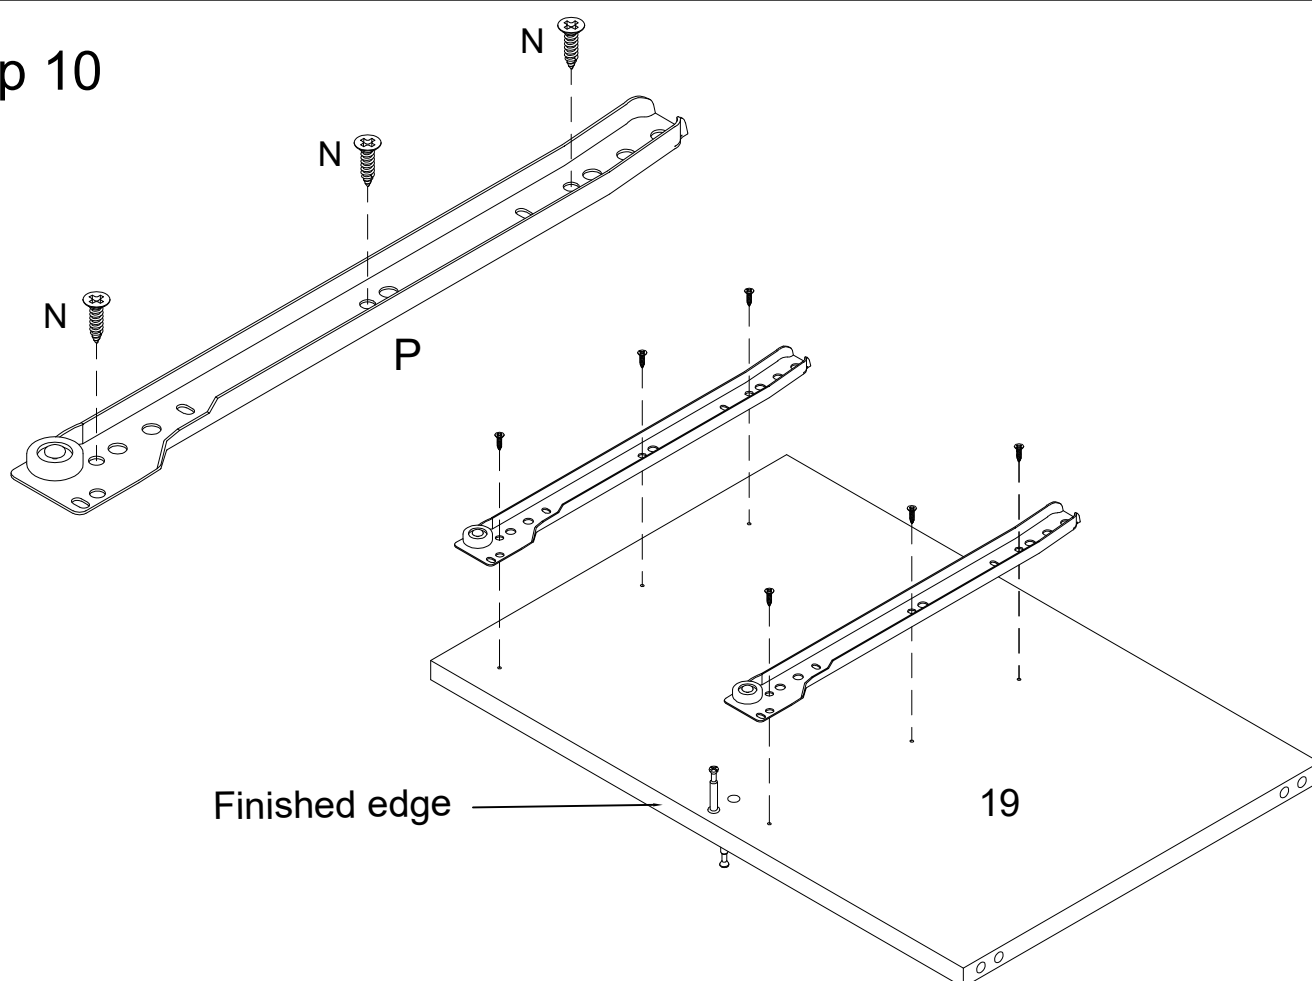


## Step 11

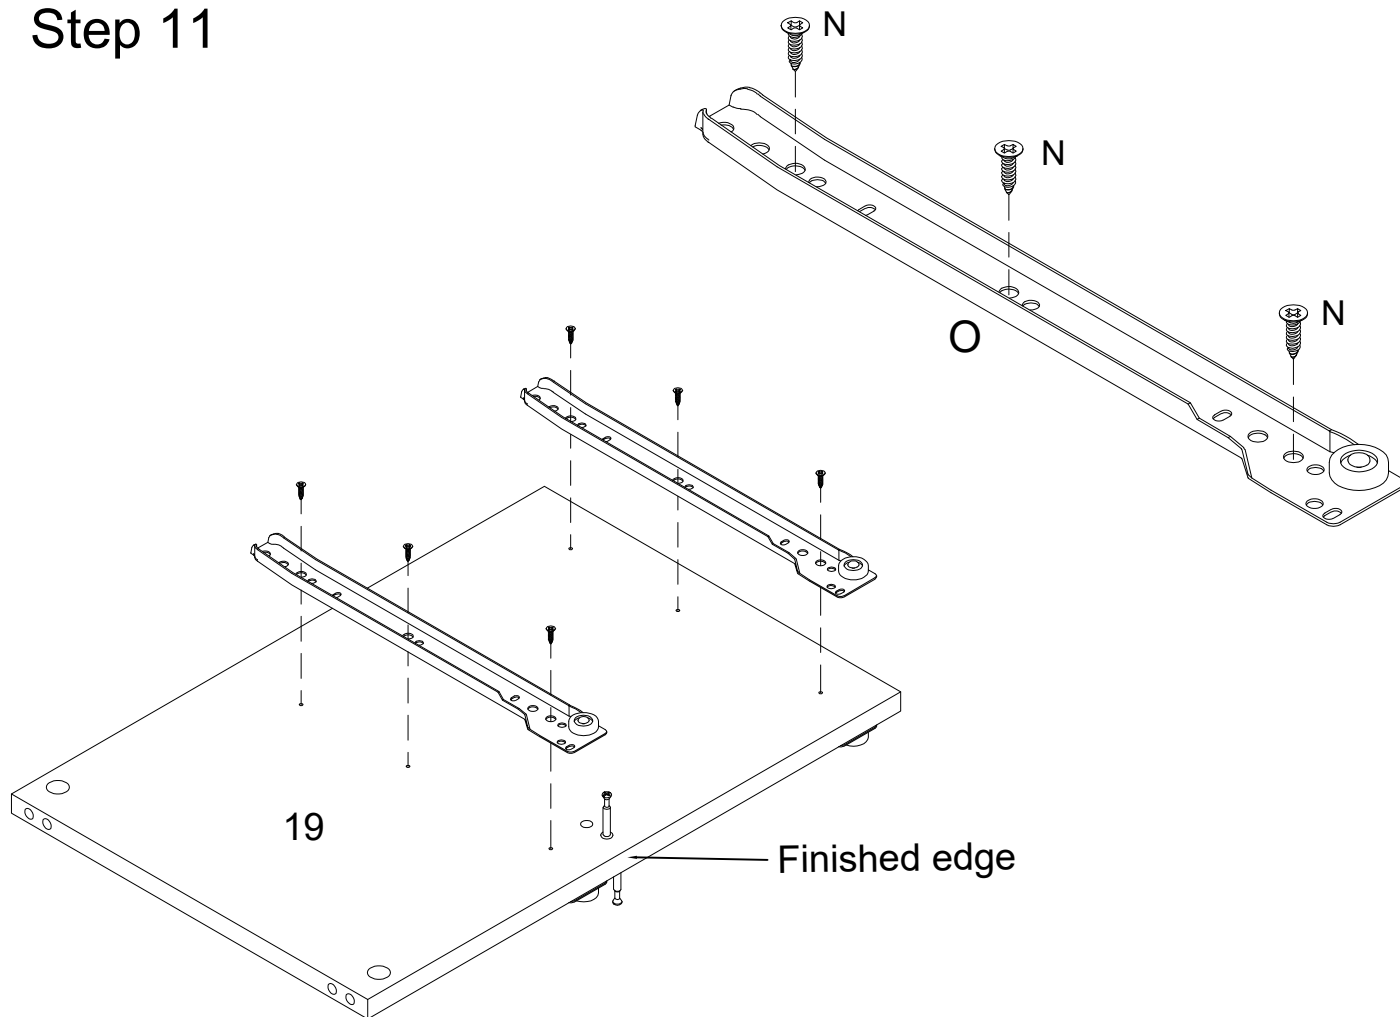


## Step 12

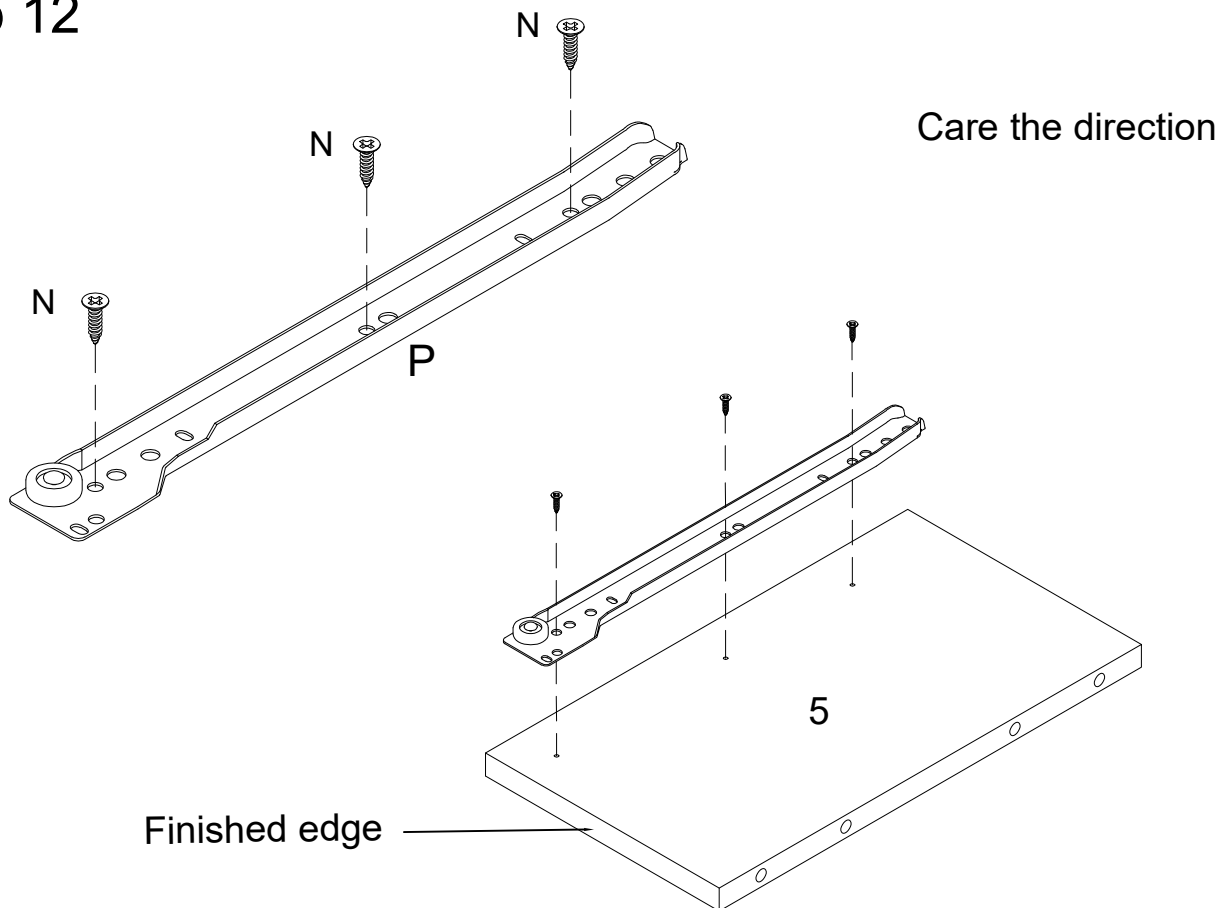

## Step 13

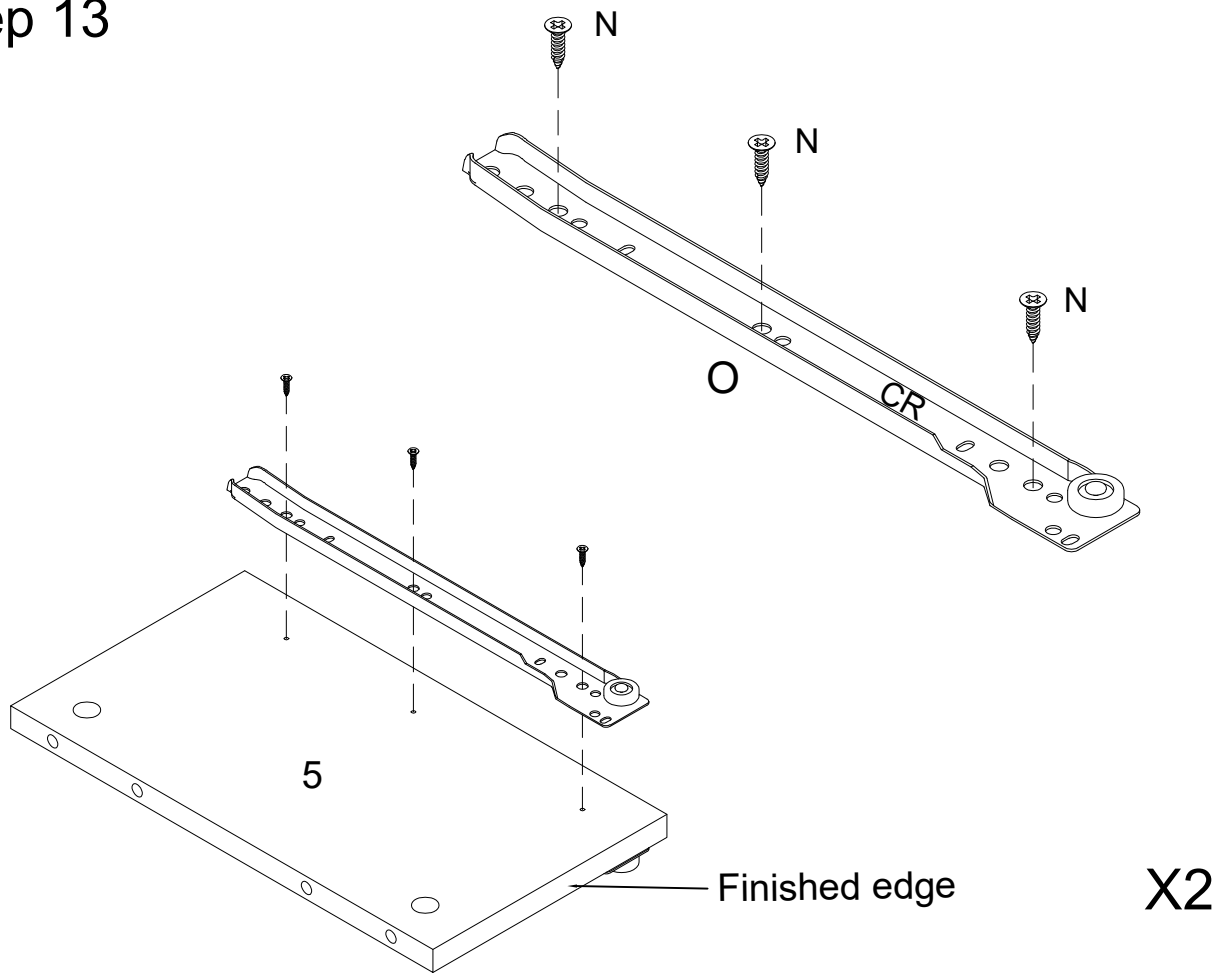


## Step 14


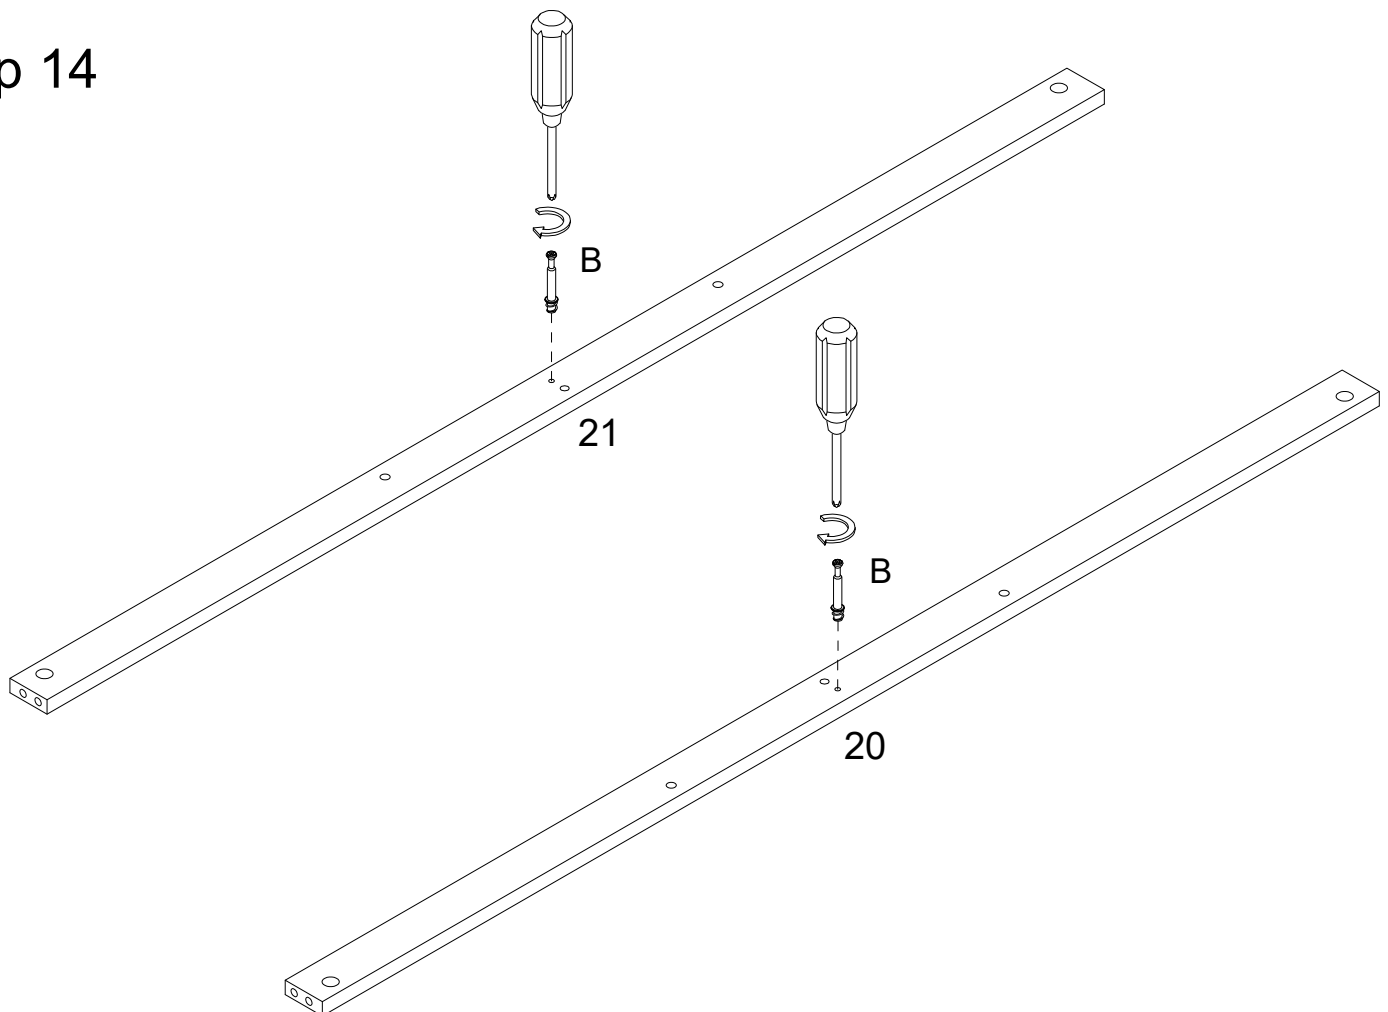


## Step 15


Medium Wooden Dowel

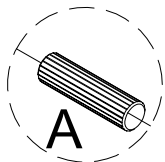

Finished edge

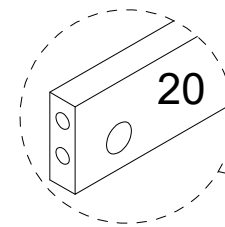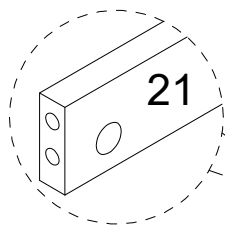


Care the direction

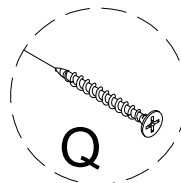


**CAUTION:** Heavy! You may need assistance with this step


## Step 16

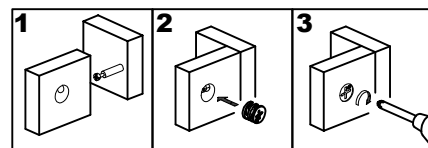

Medium Wooden Dowel

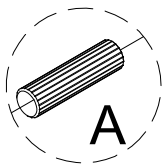


Finished edge

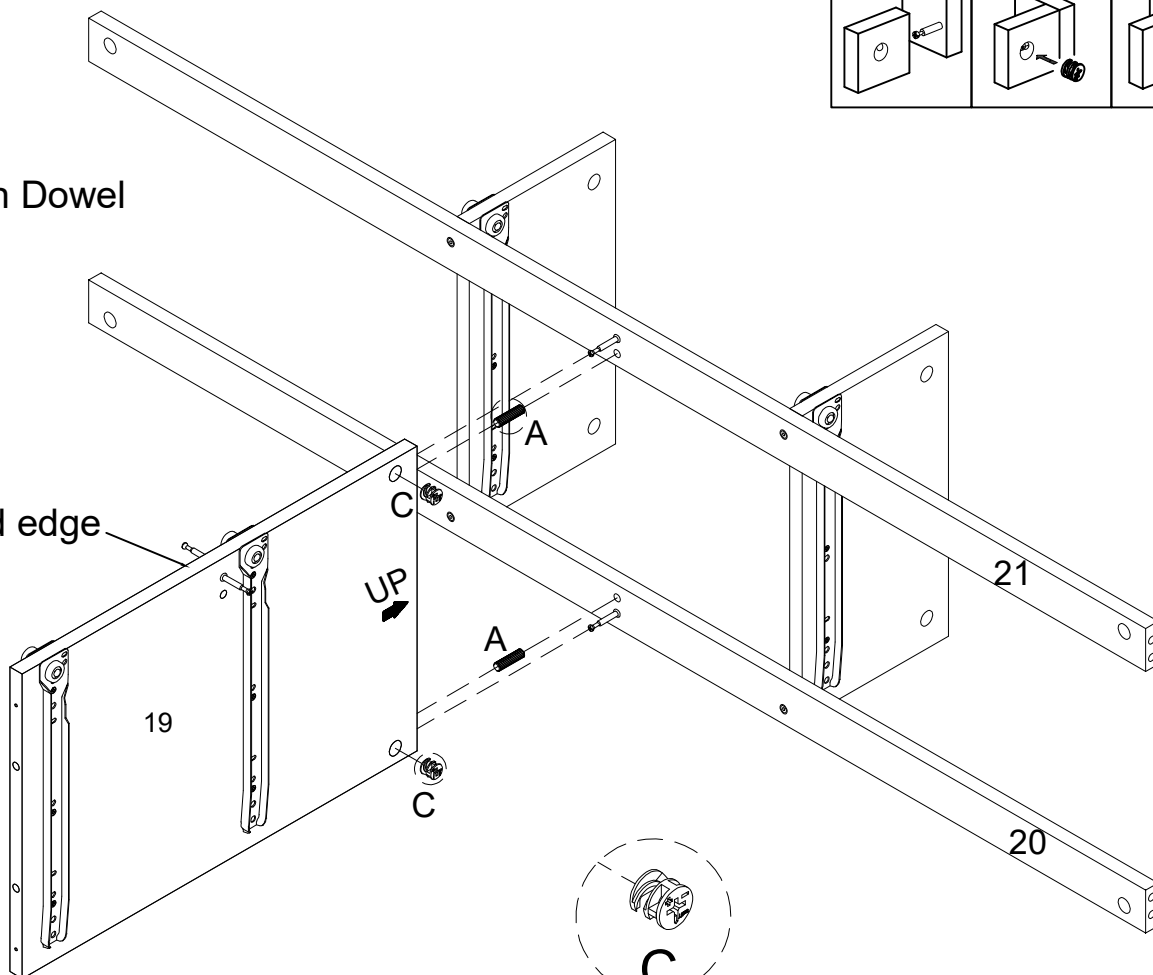


Large Cam Lock


## Step 17

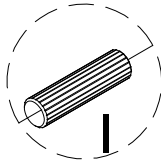


The Longest Wooden Dowel

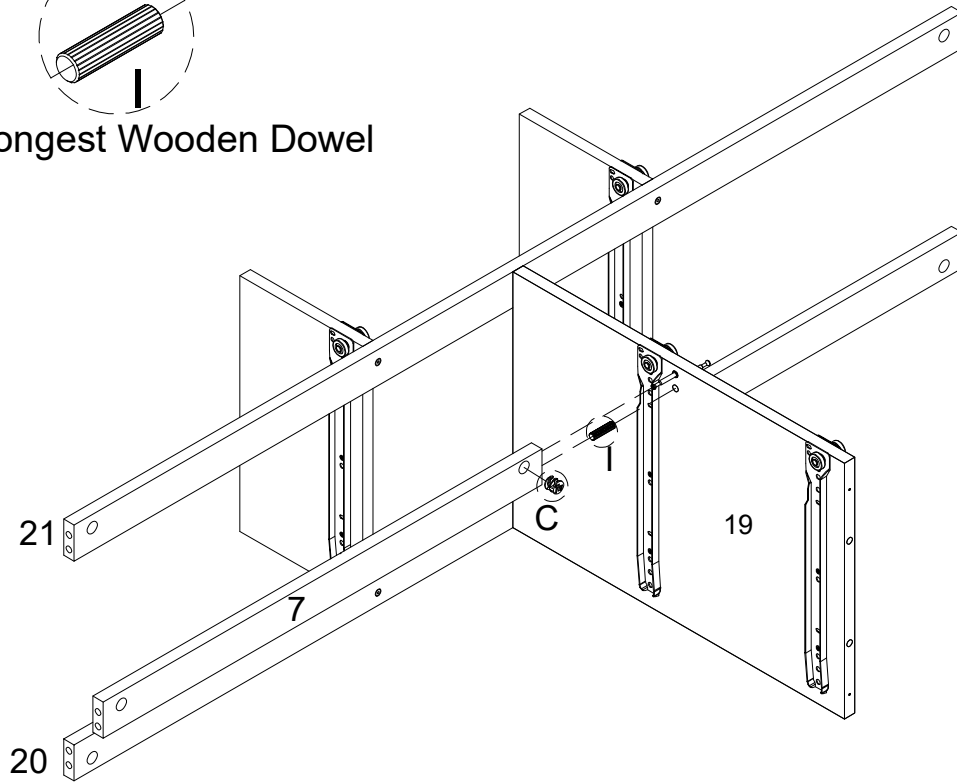


Care the direction

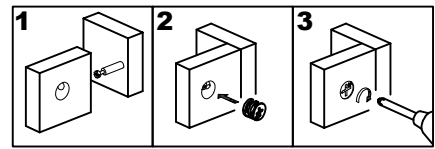



Large Cam Lock

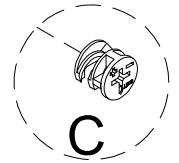


## Step 18

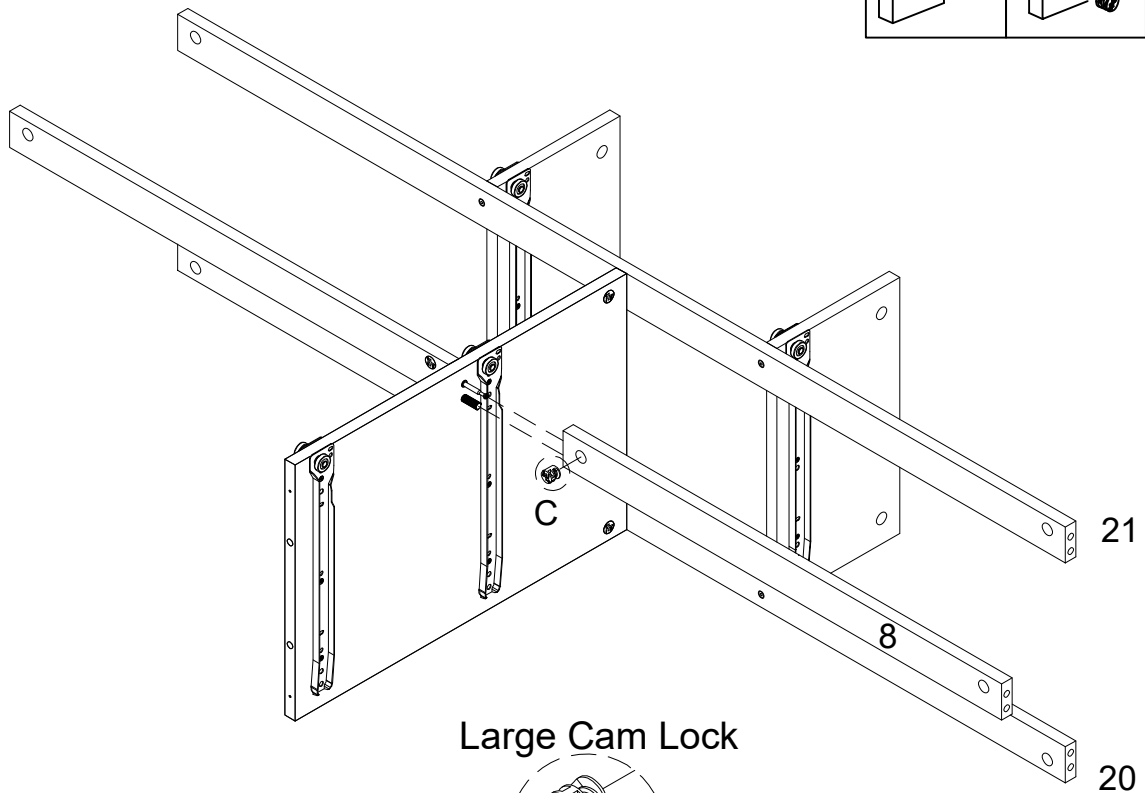


Large Cam Lock

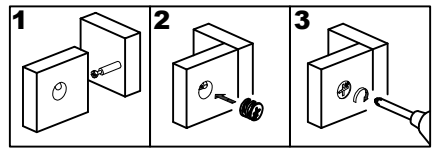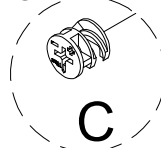


## Step 19

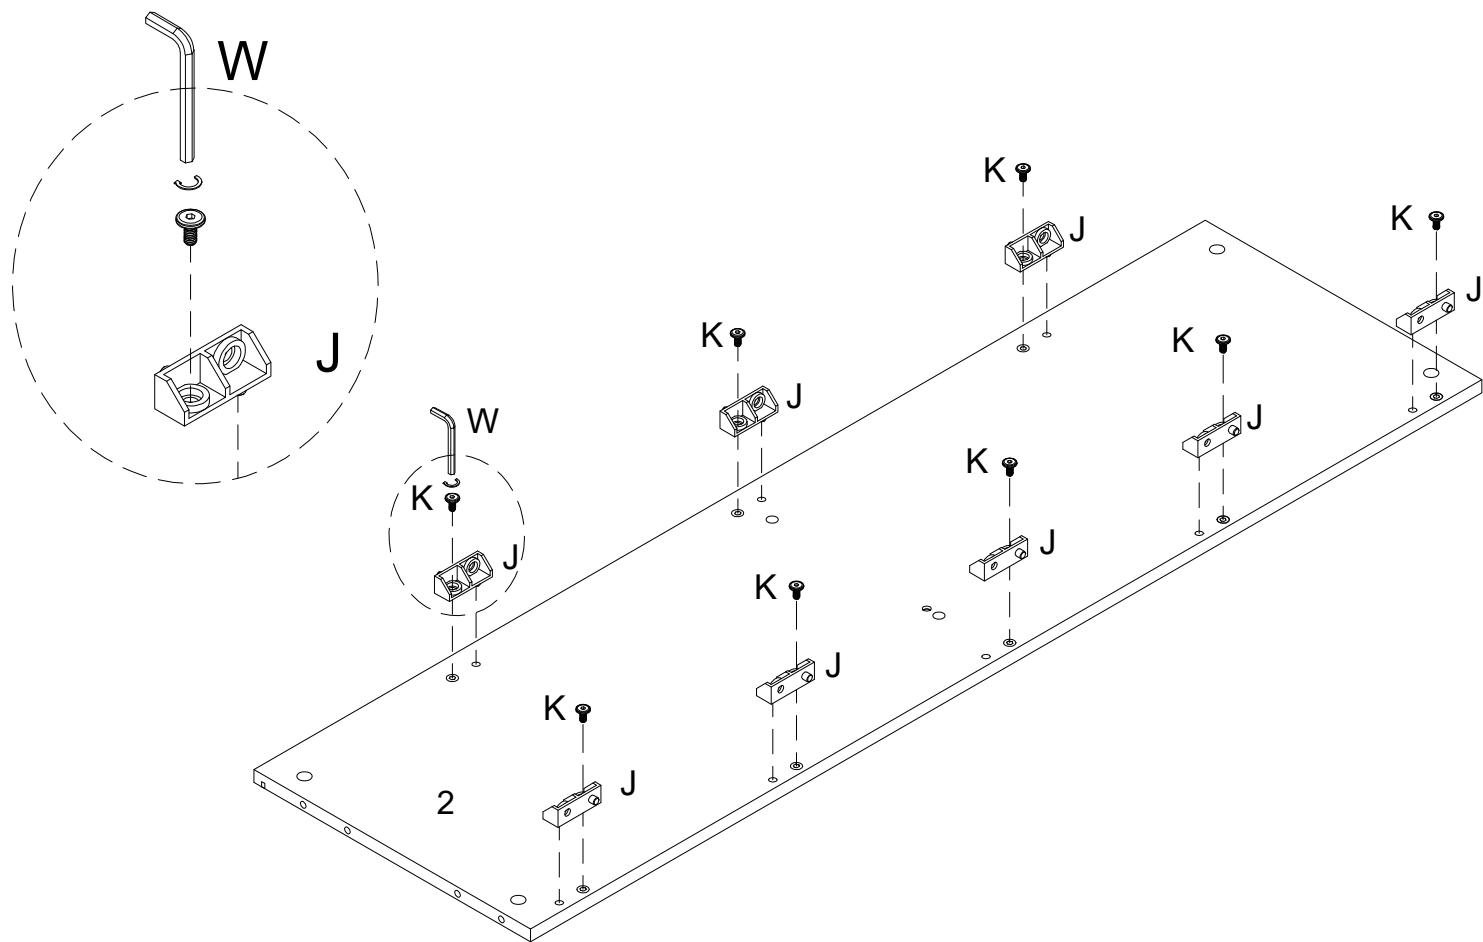


## Step 20

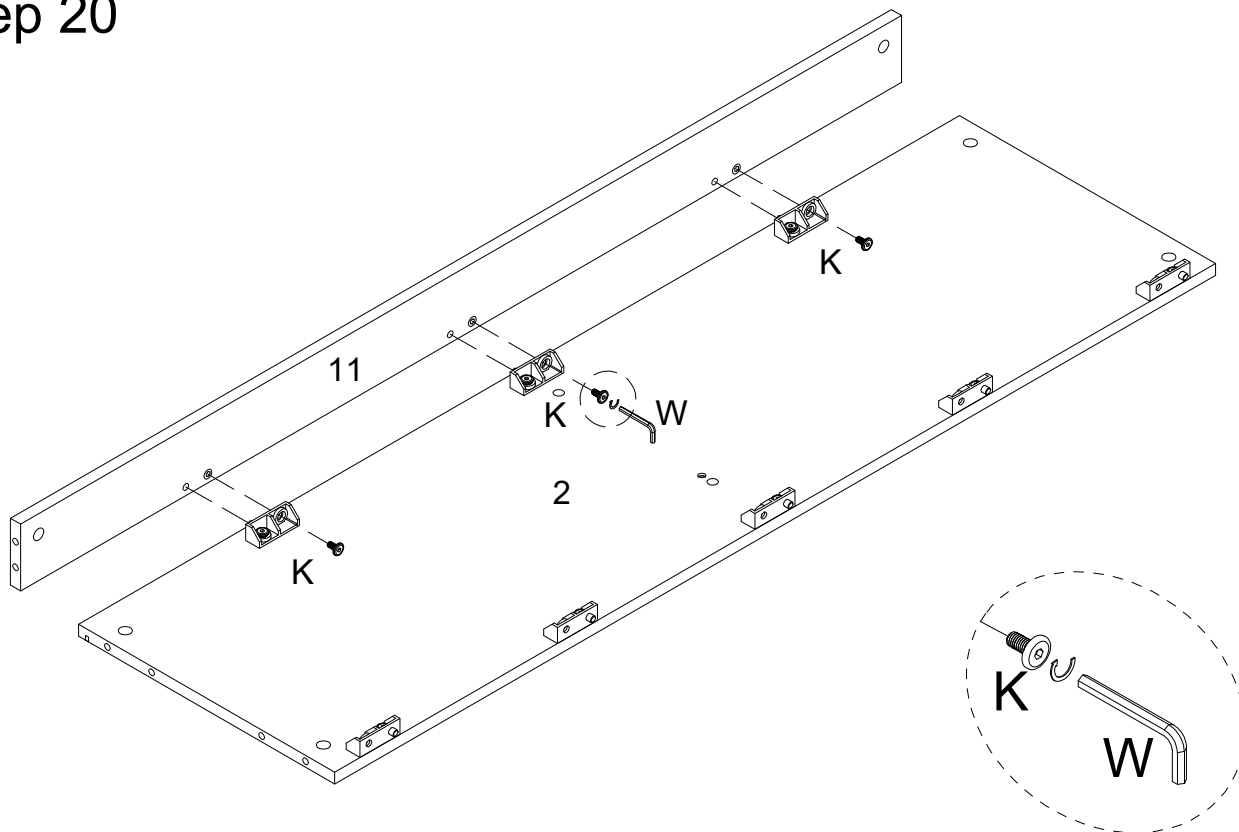


## Step 21

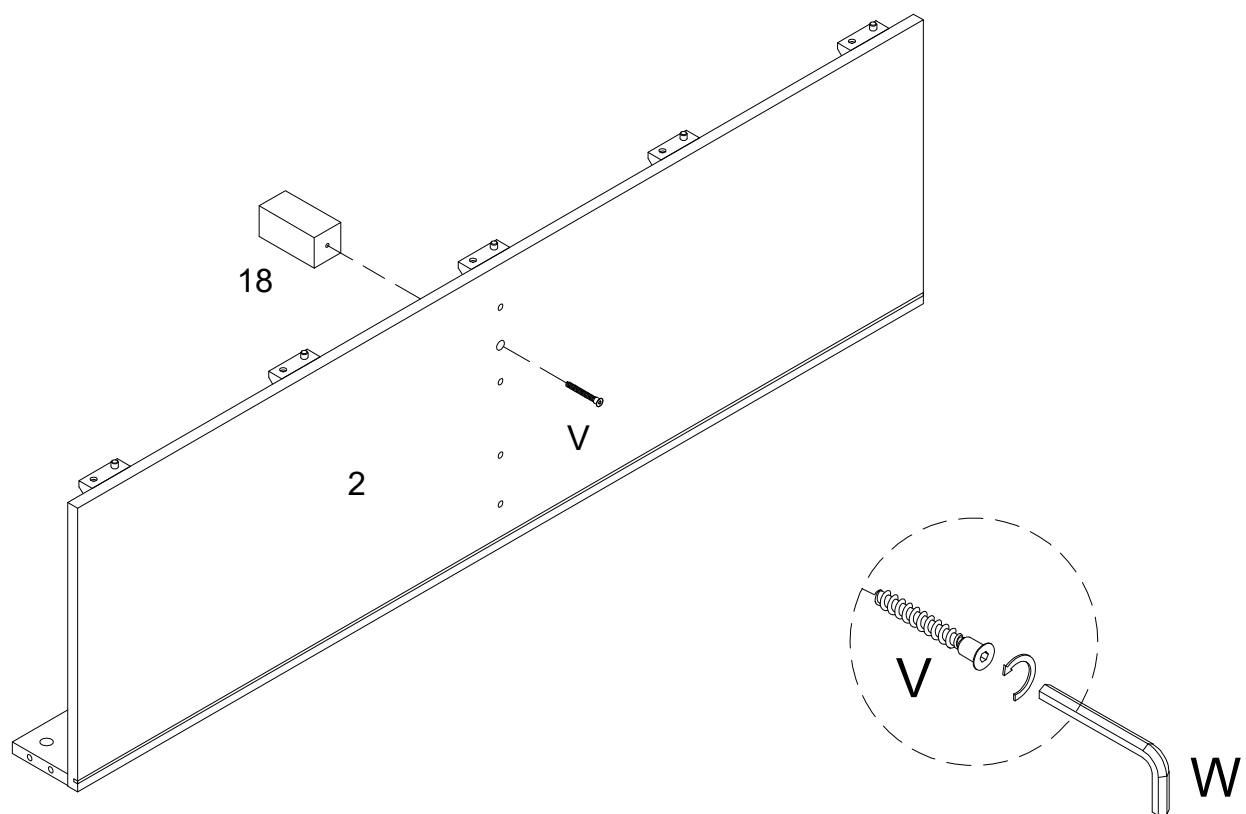



## Step 22

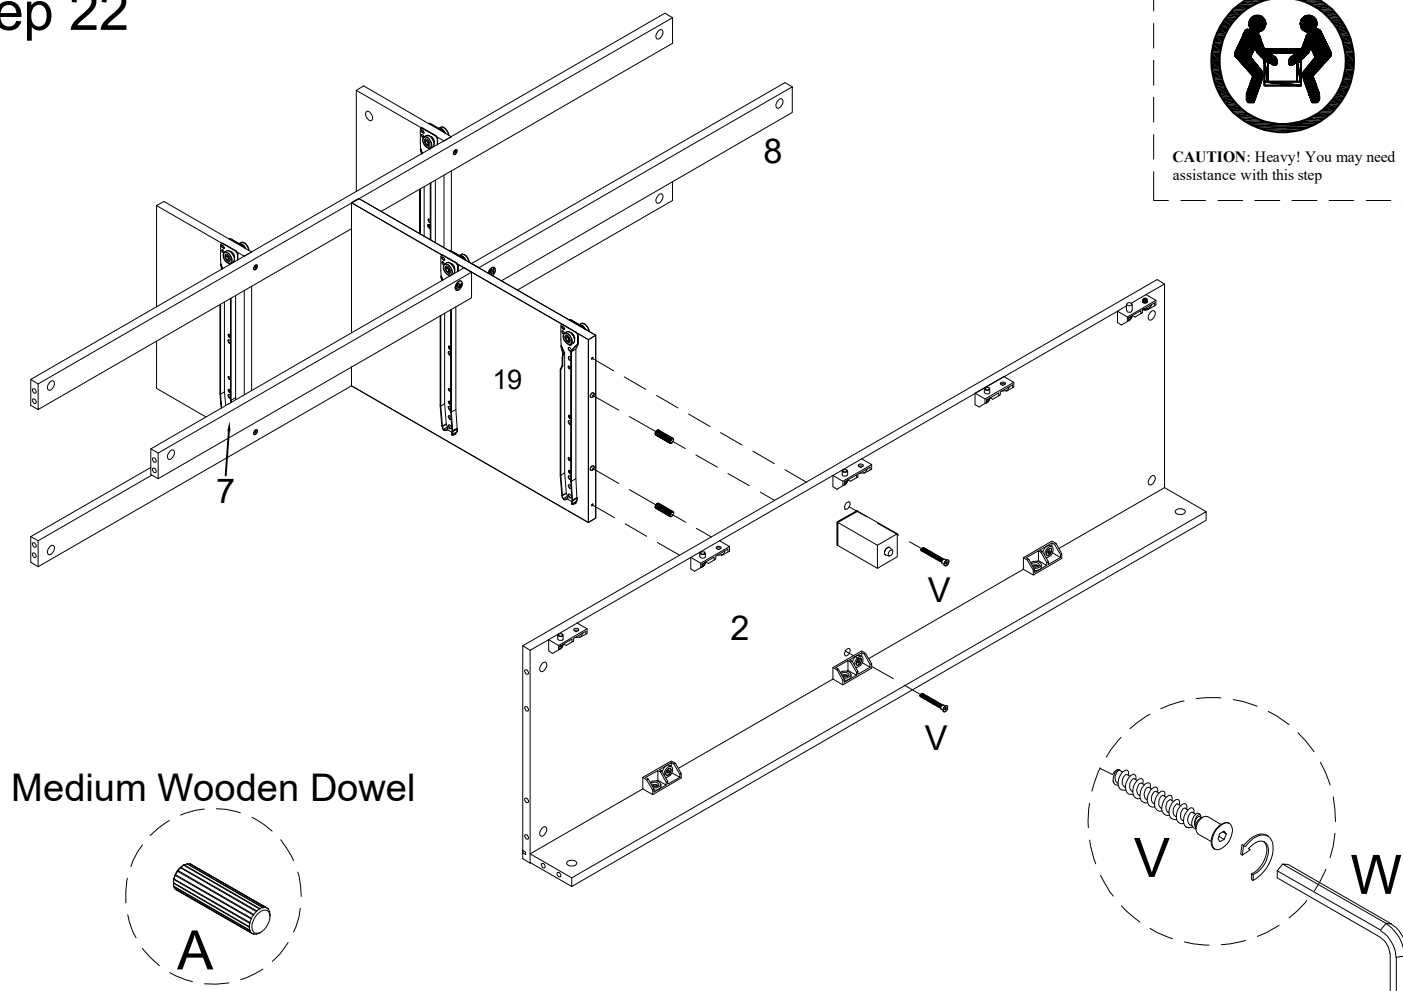

## Step 23

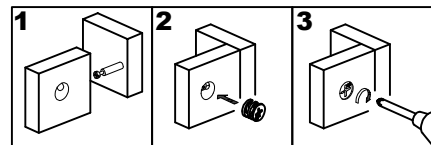


Medium Wooden Dowel

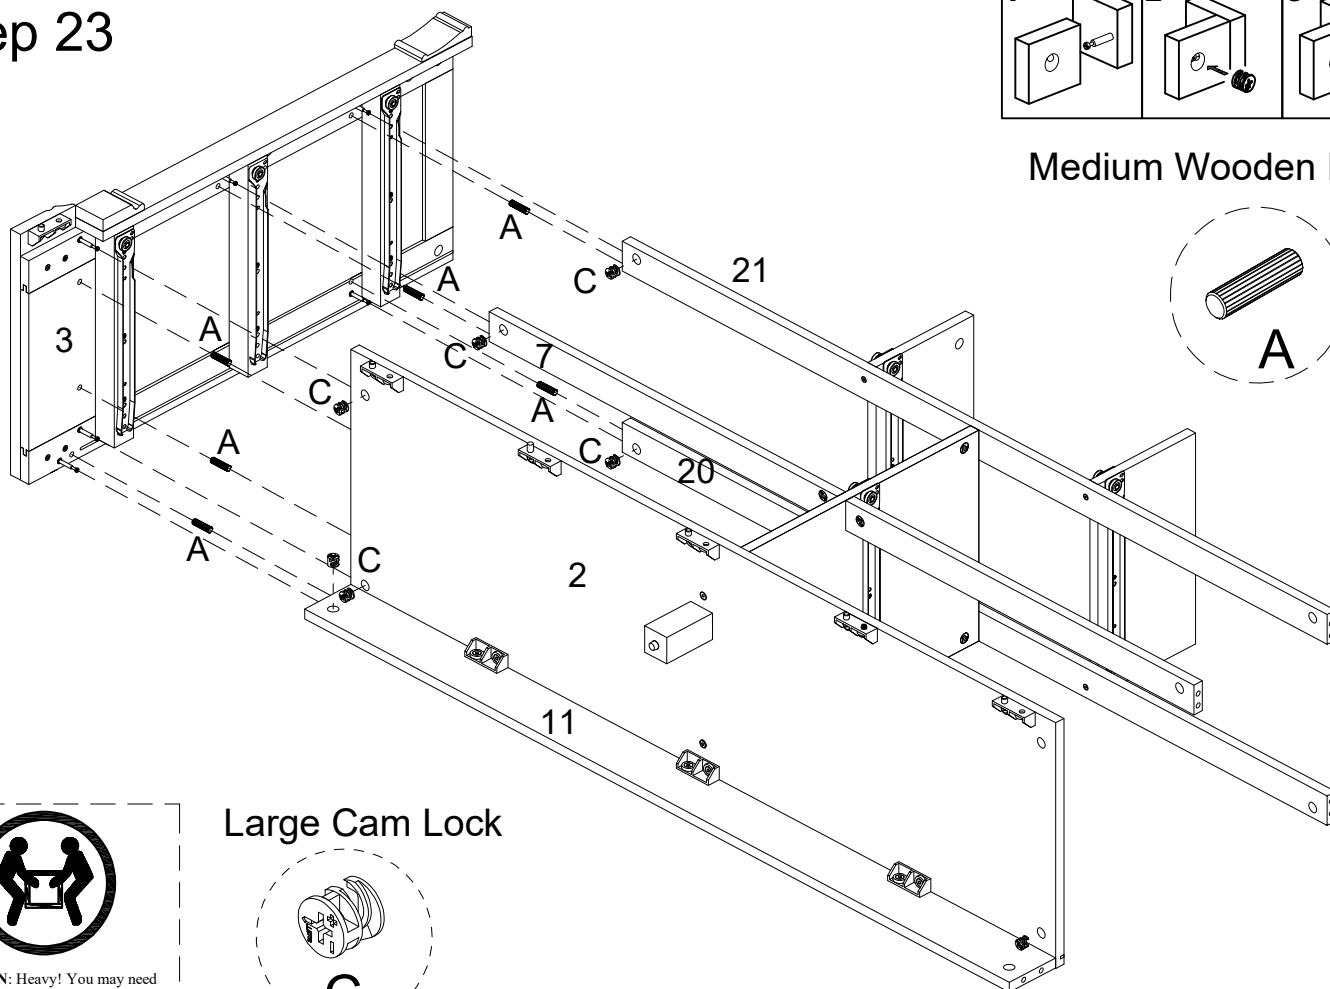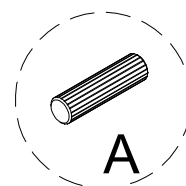


CAUTION: Heavy! You may need assistance with this step



Large Cam Lock

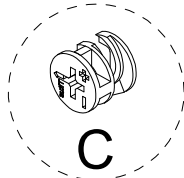


## Step 24

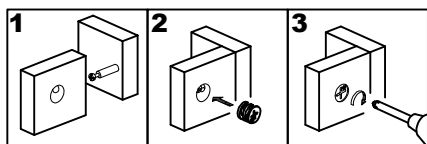

Medium Wooden Dowel

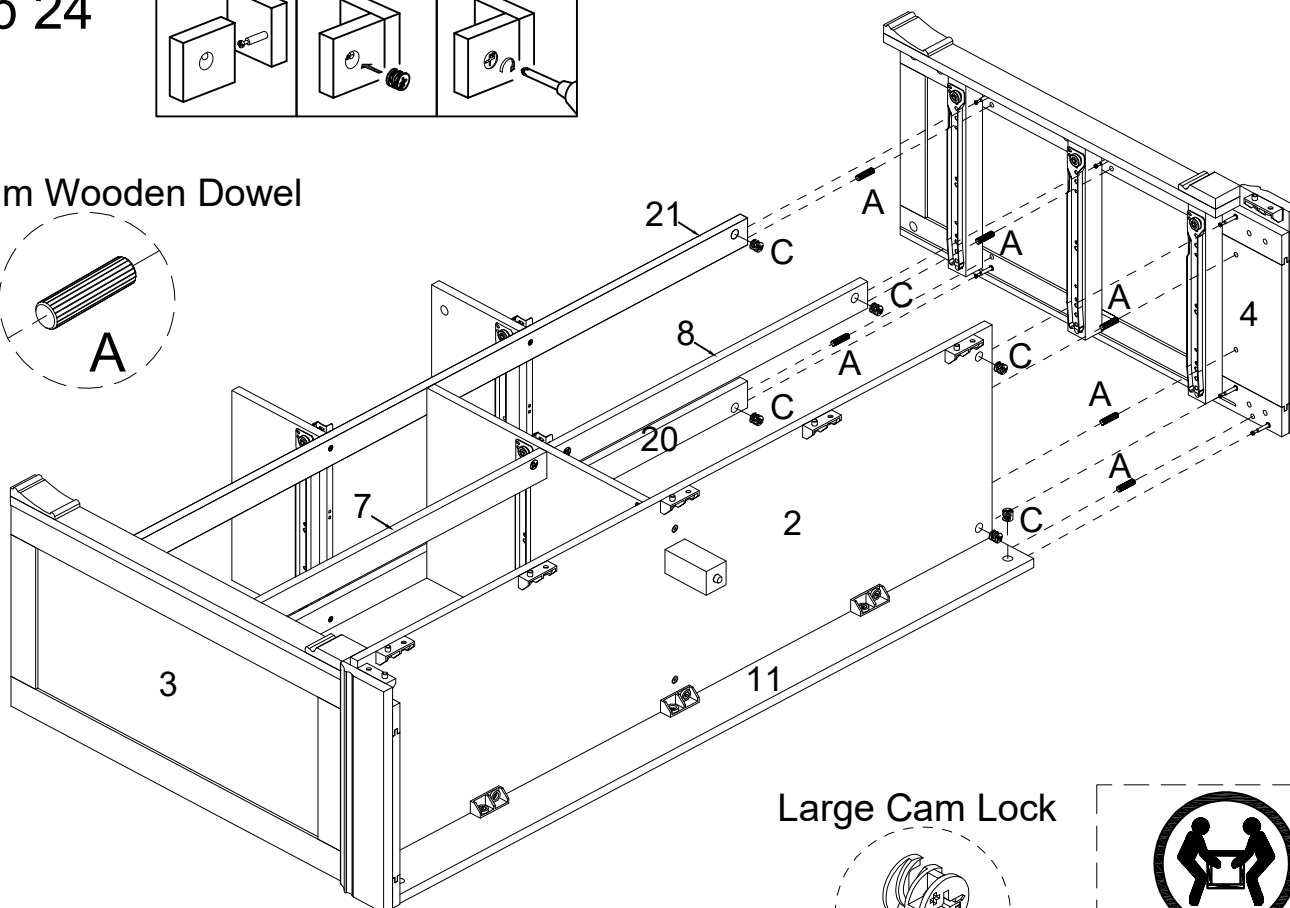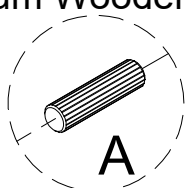


Large Cam Lock

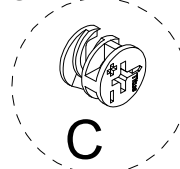


CAUTION: Heavy! You may need assistance with this step


## Step 25

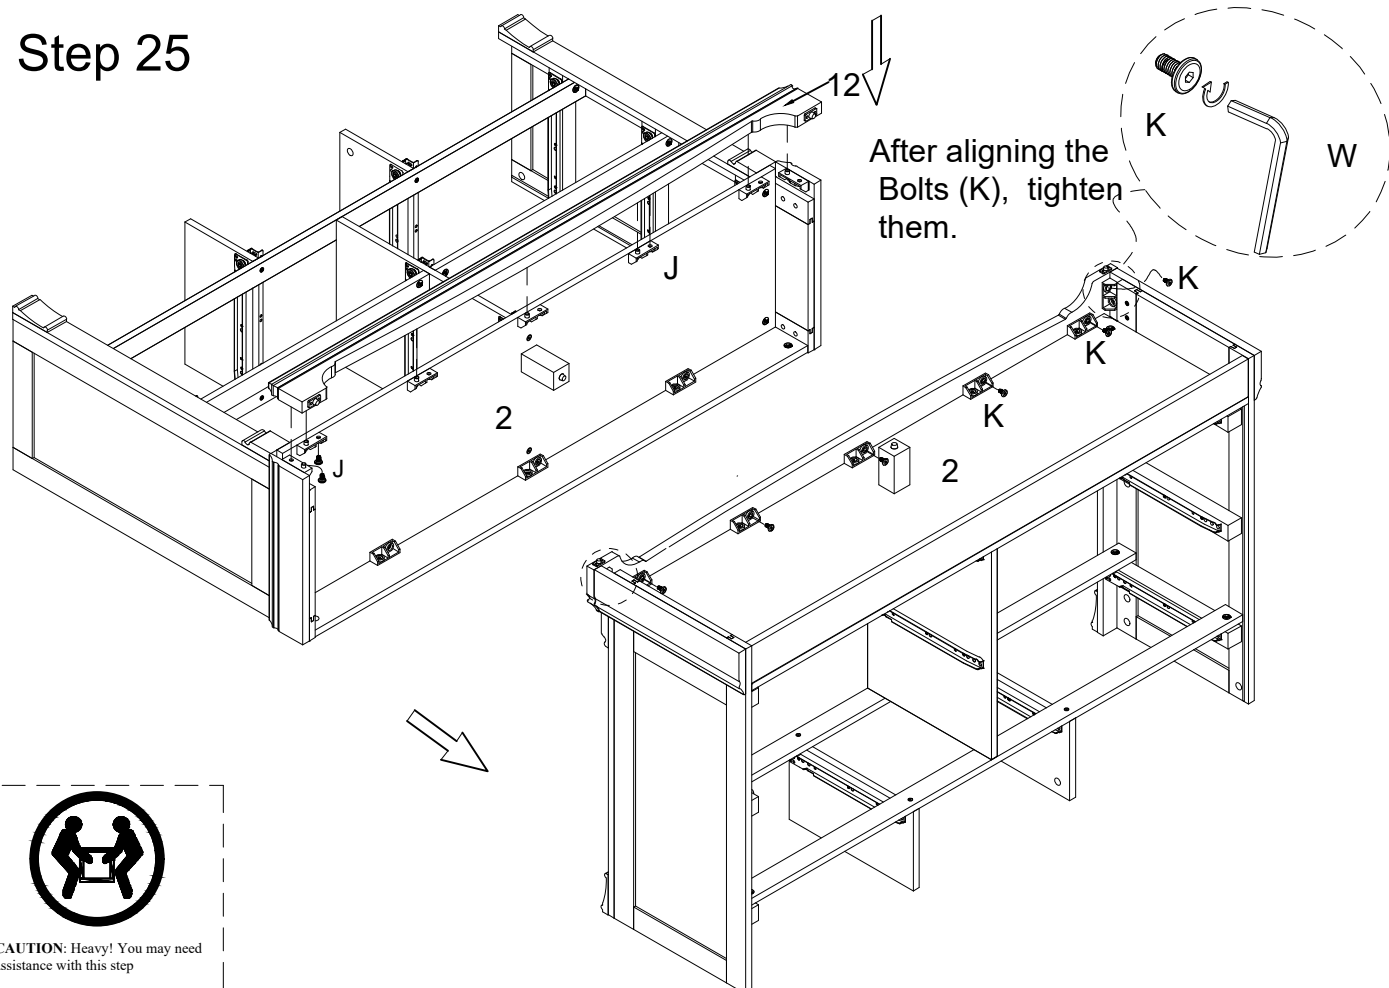

## Step 26

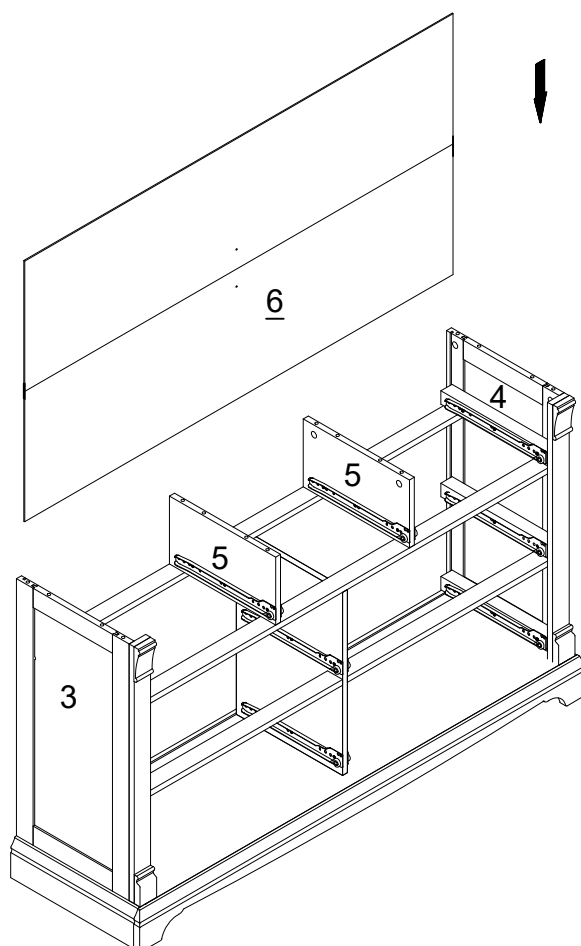


## Step 27


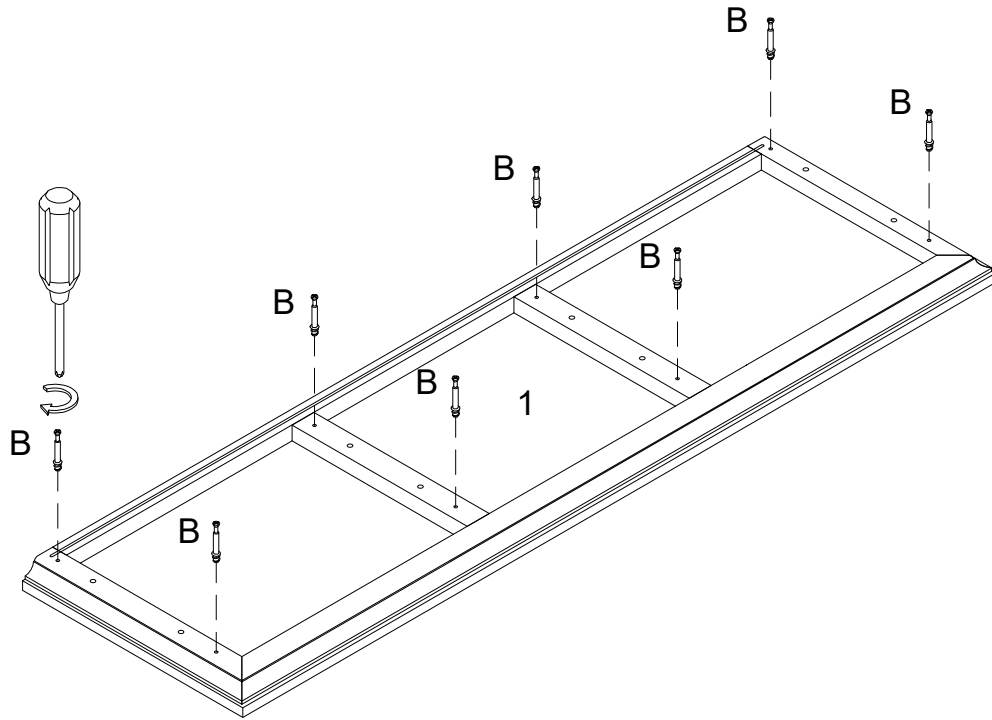


## Step 28


Medium Wooden Dowel

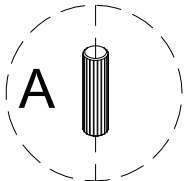


Large Cam Lock

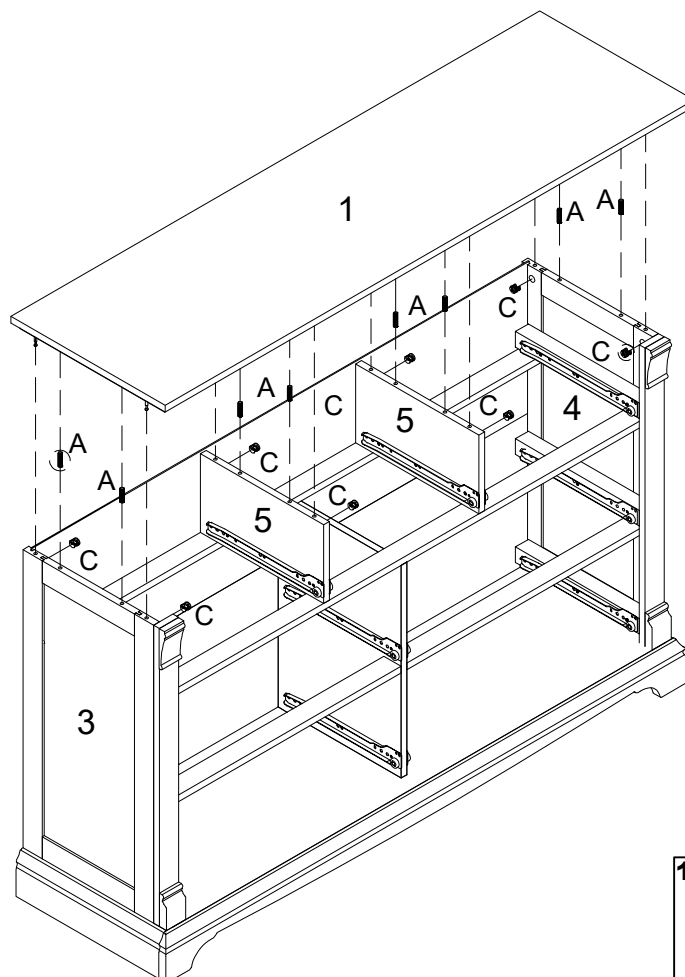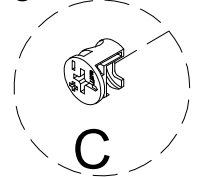


**CAUTION:** Heavy! You may need assistance with this step

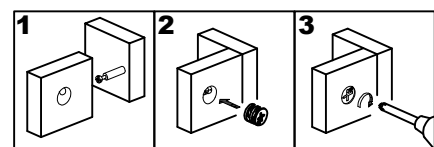


## Step 29

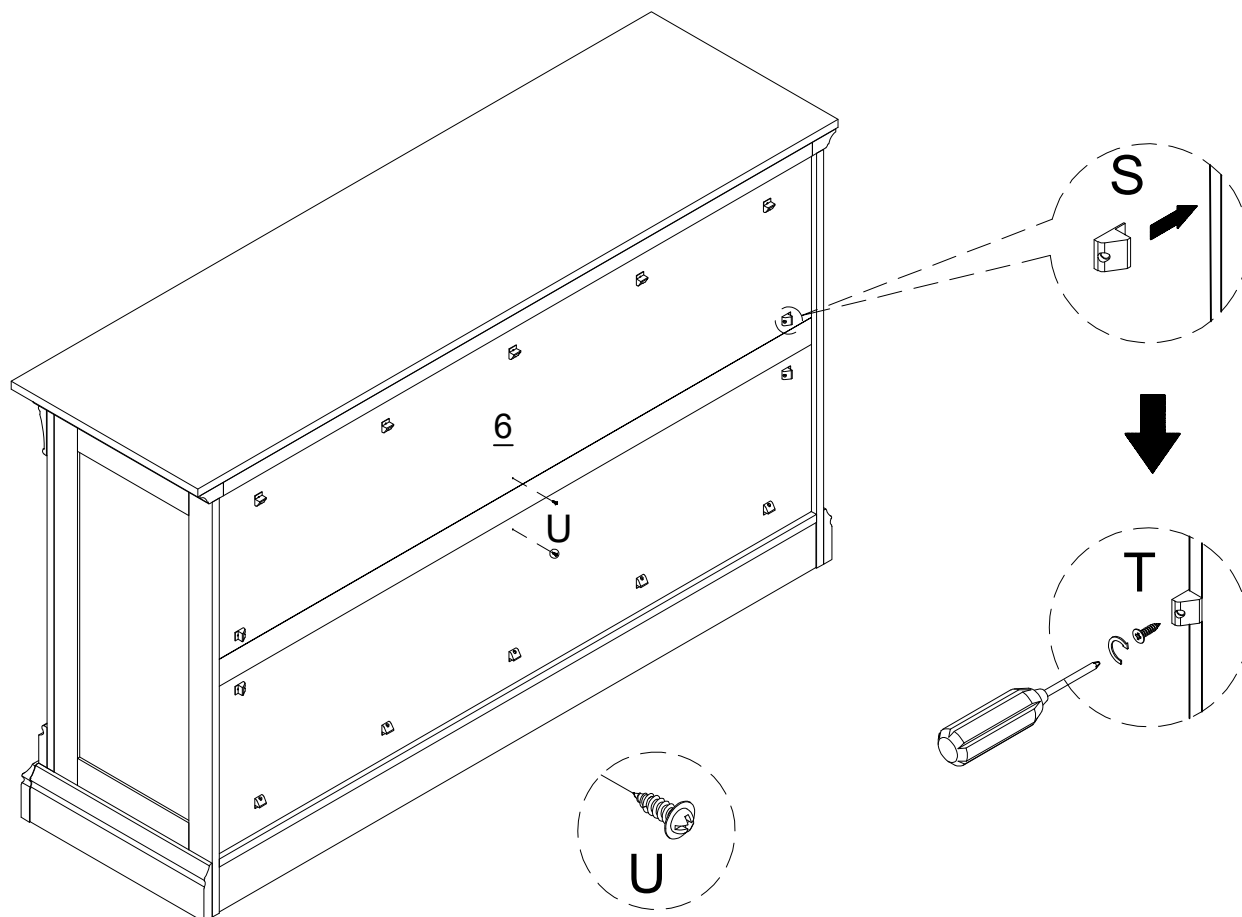


## Step 30

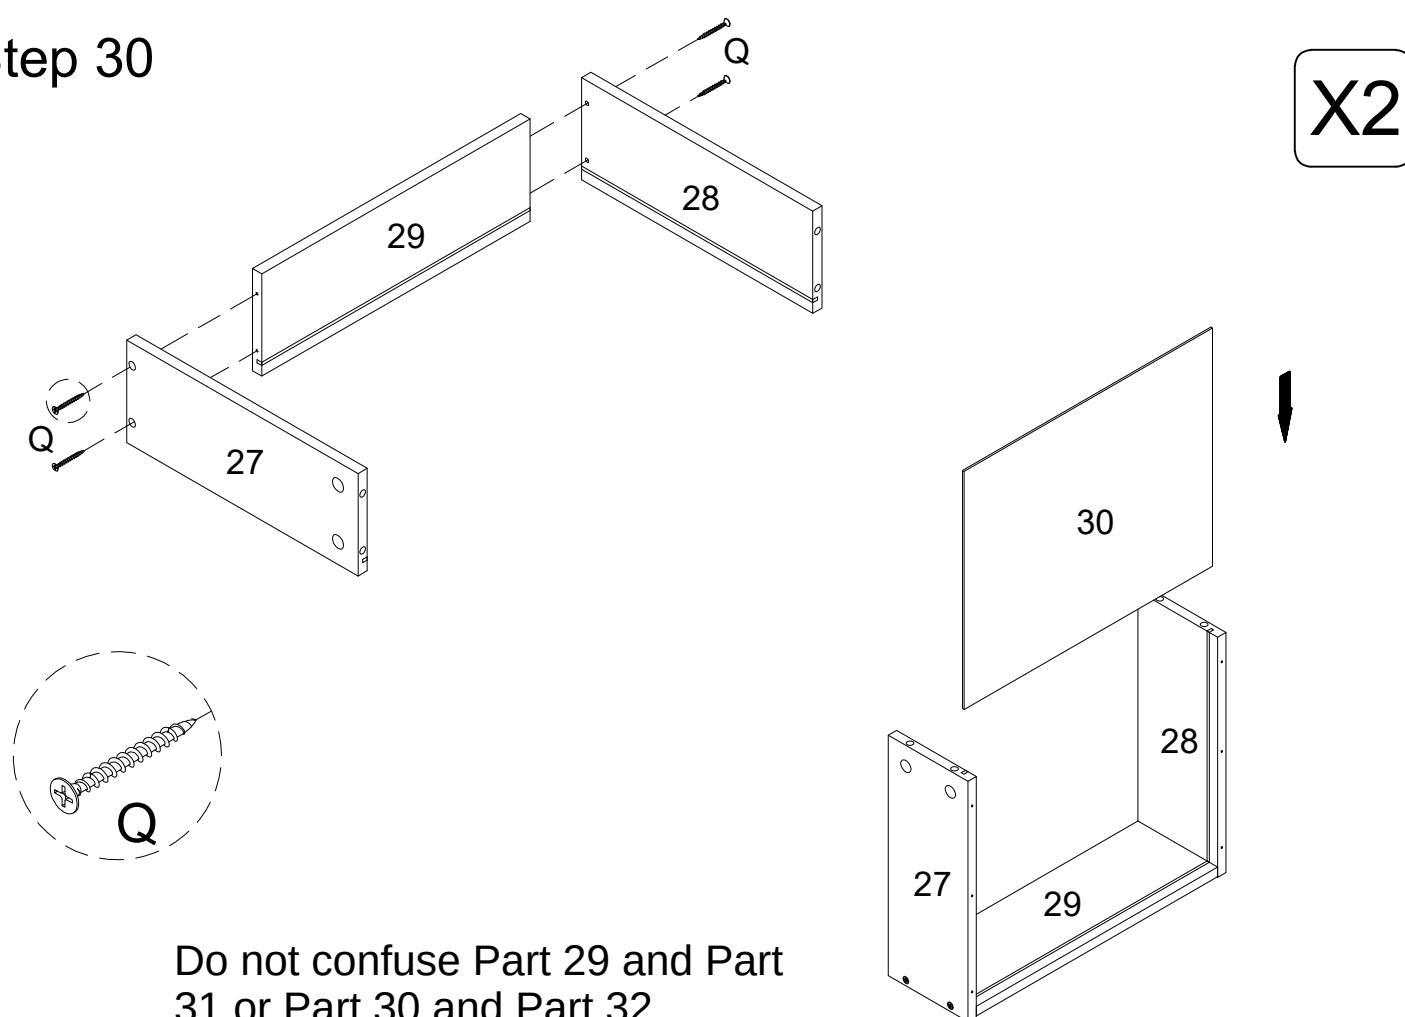


## Step 31

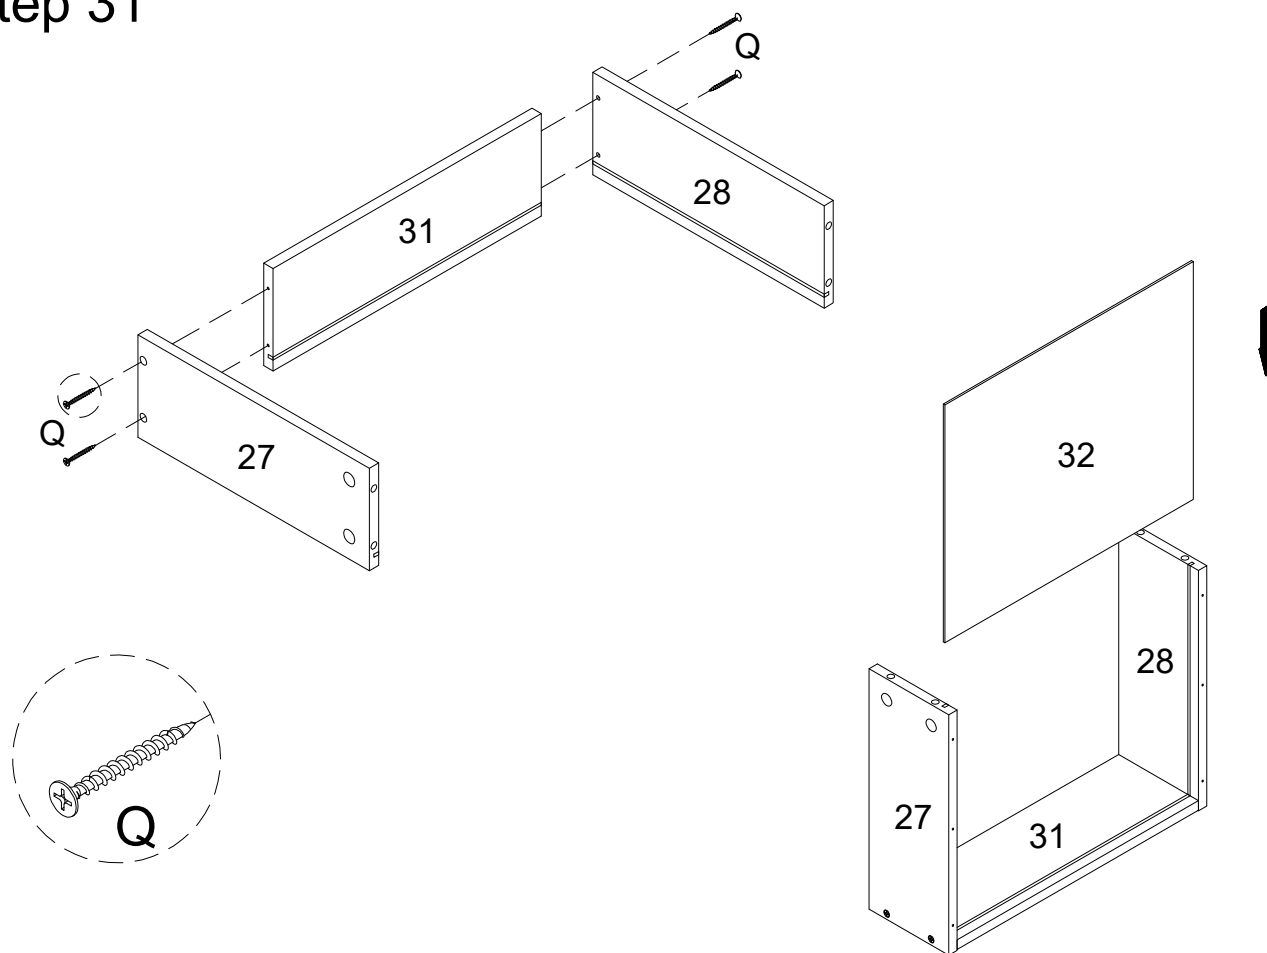


## Step 32

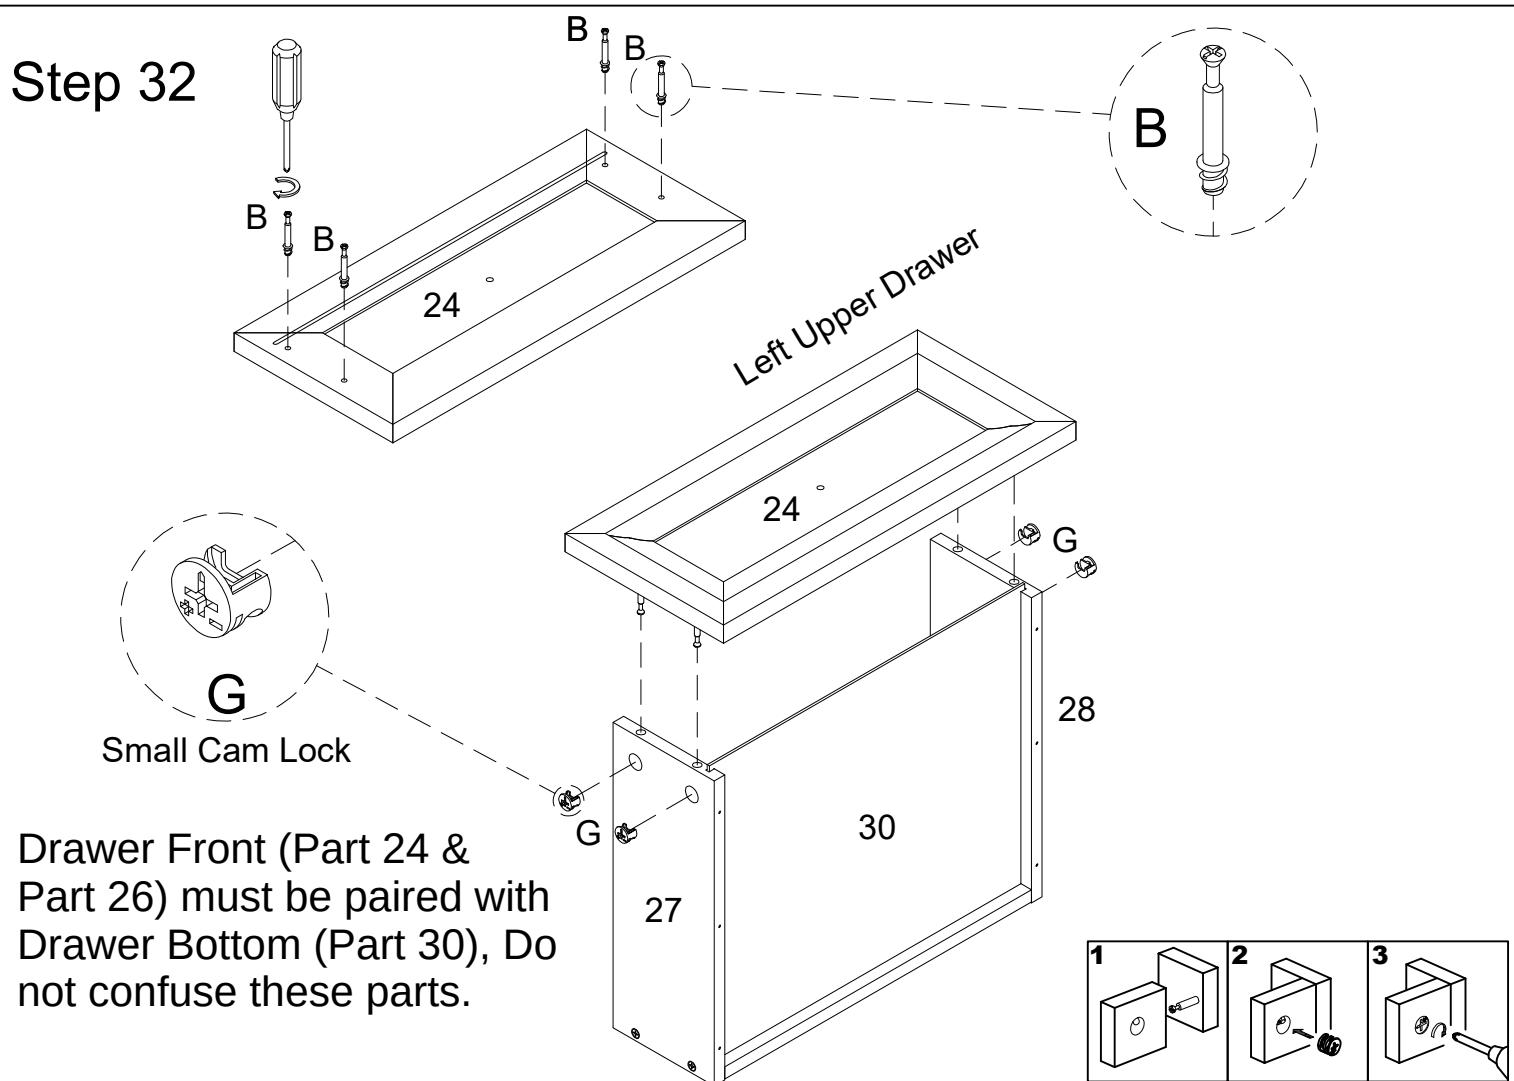

## Step 33

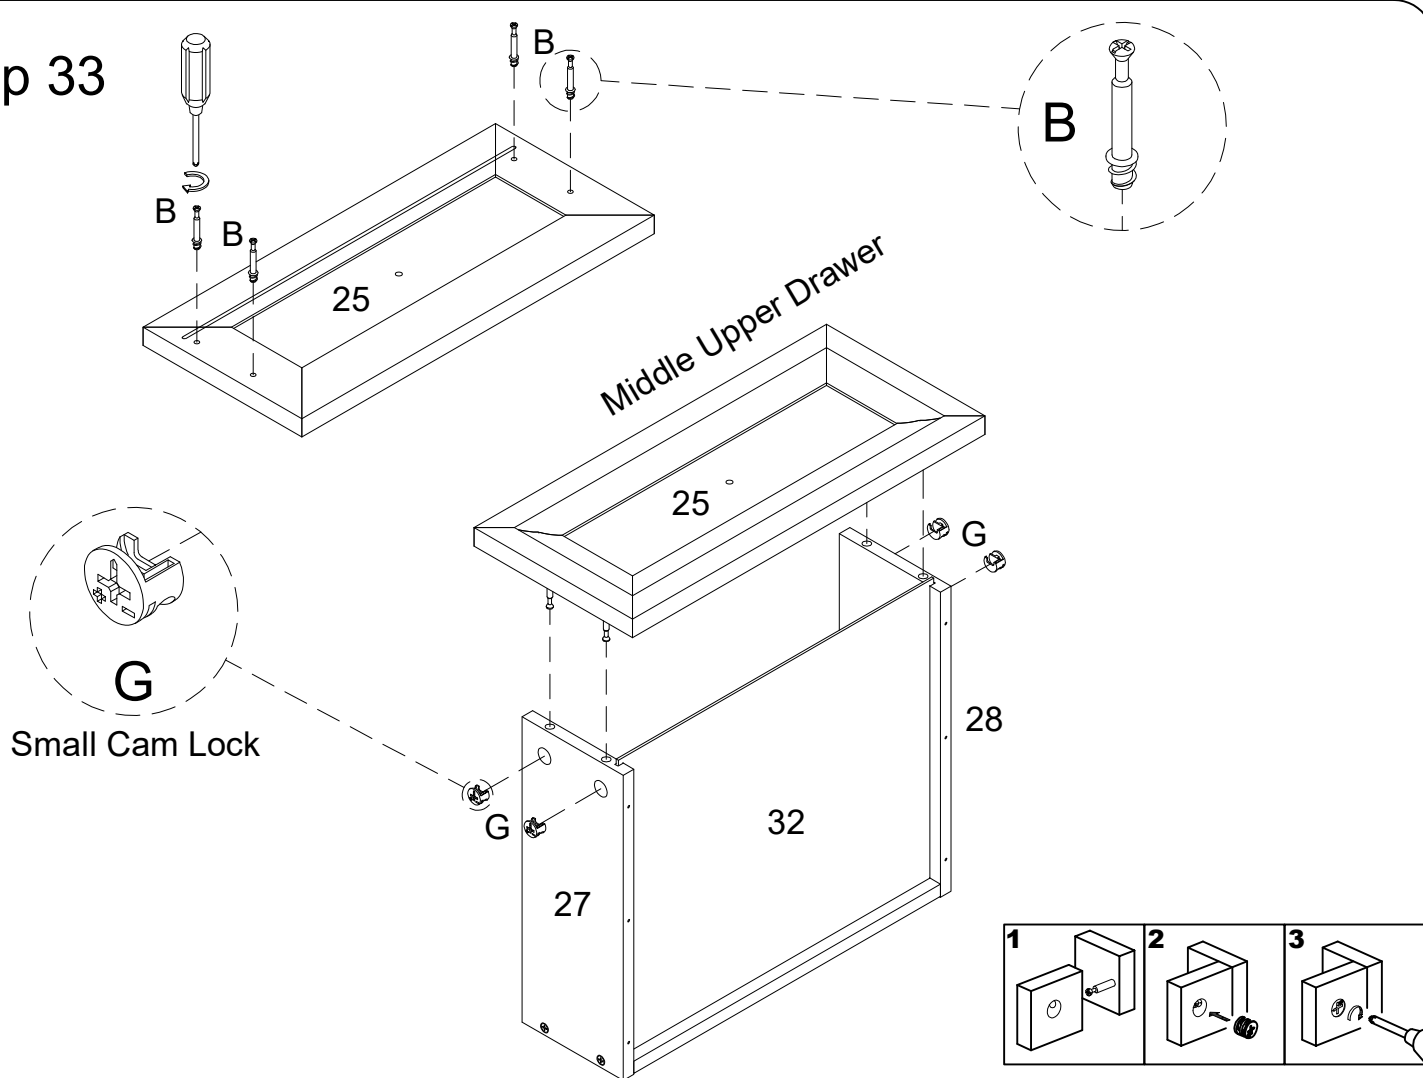


## Step 34

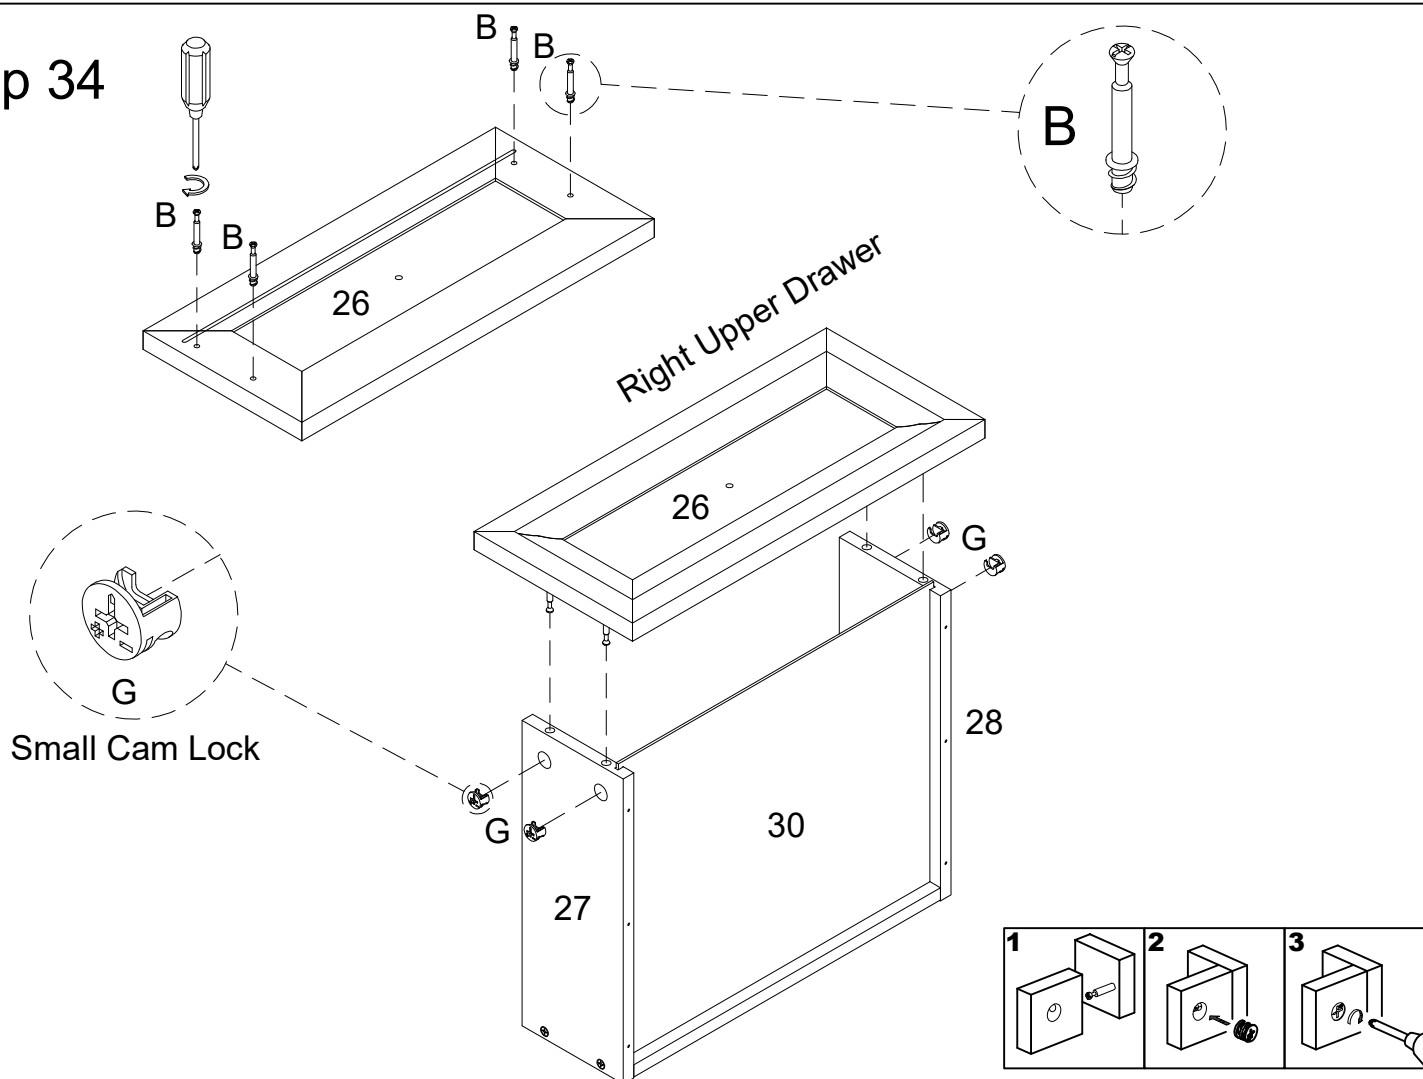


## Step 35

X2

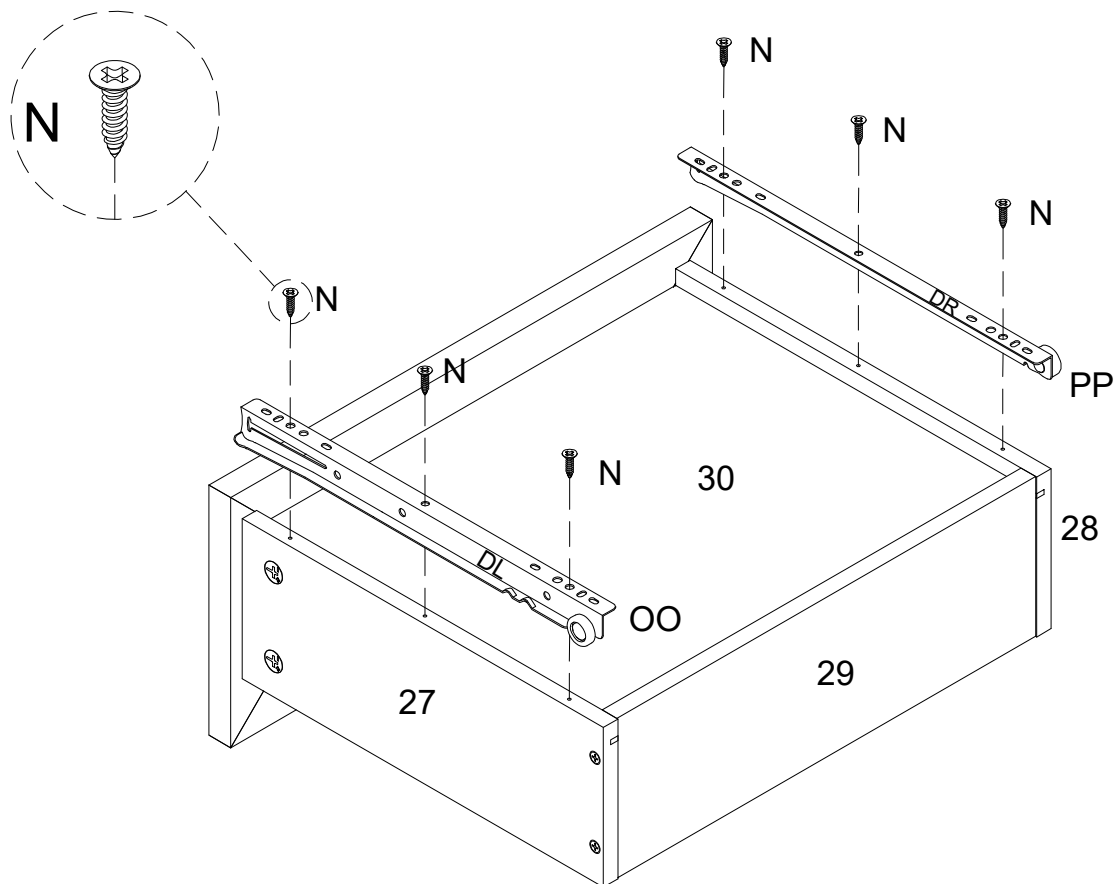


## Step 36

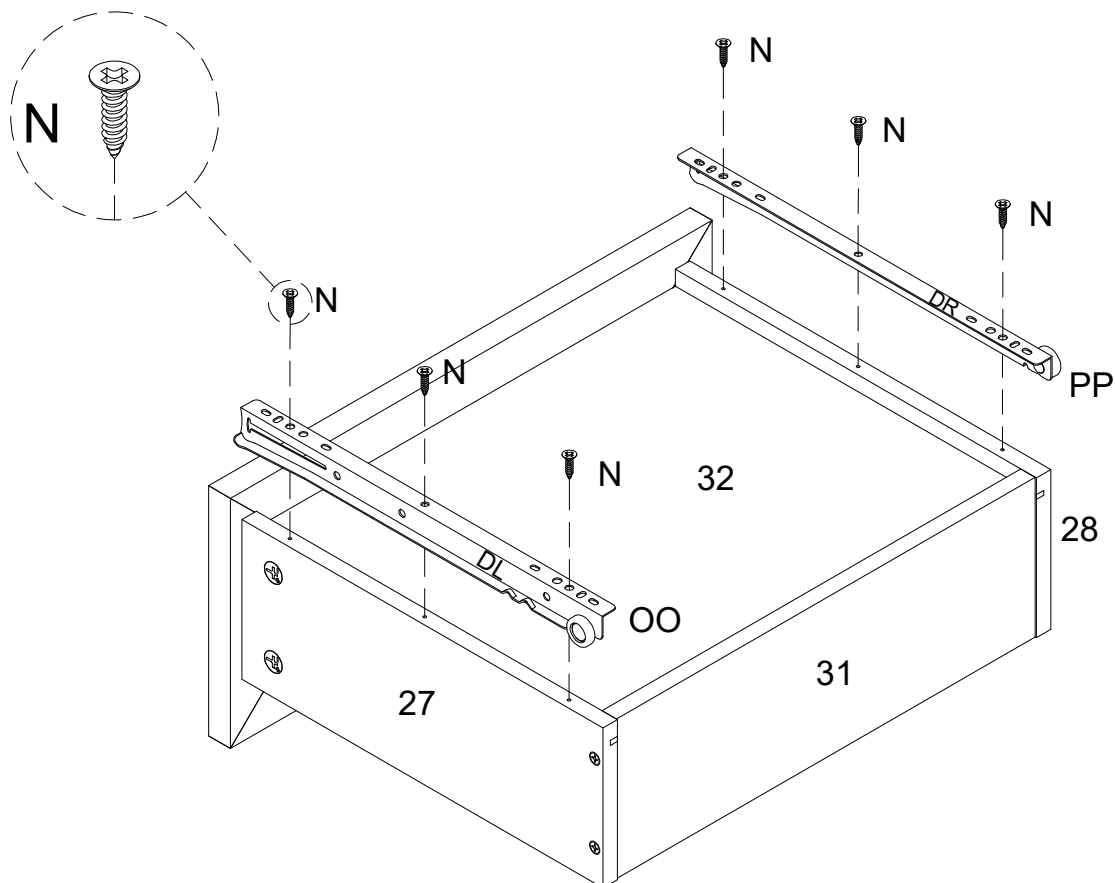


## Step 37

X2

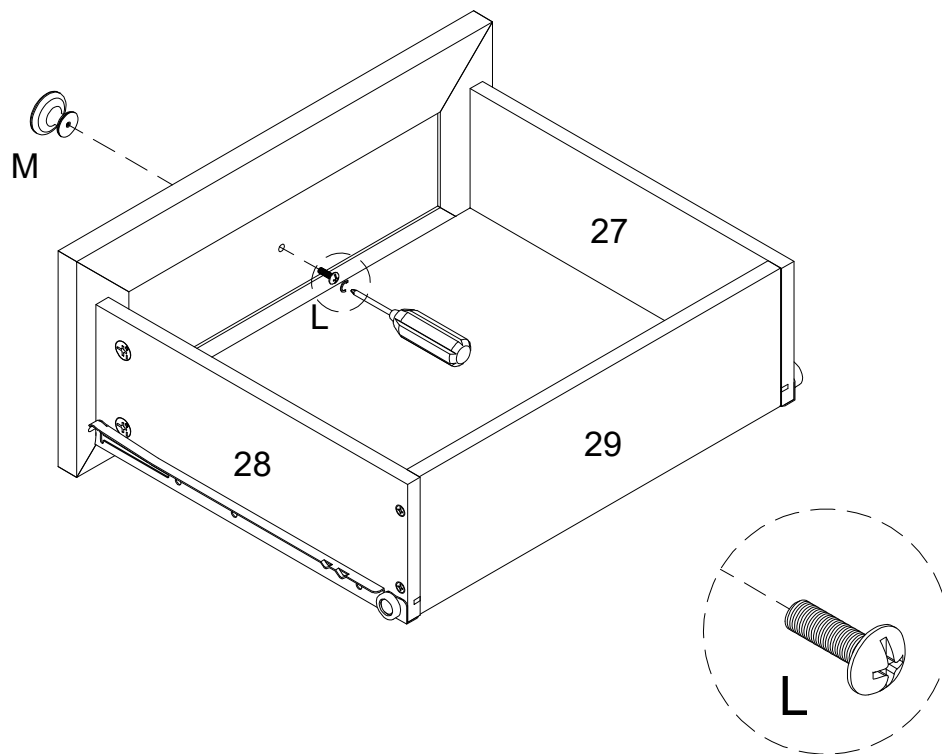


## Step 38

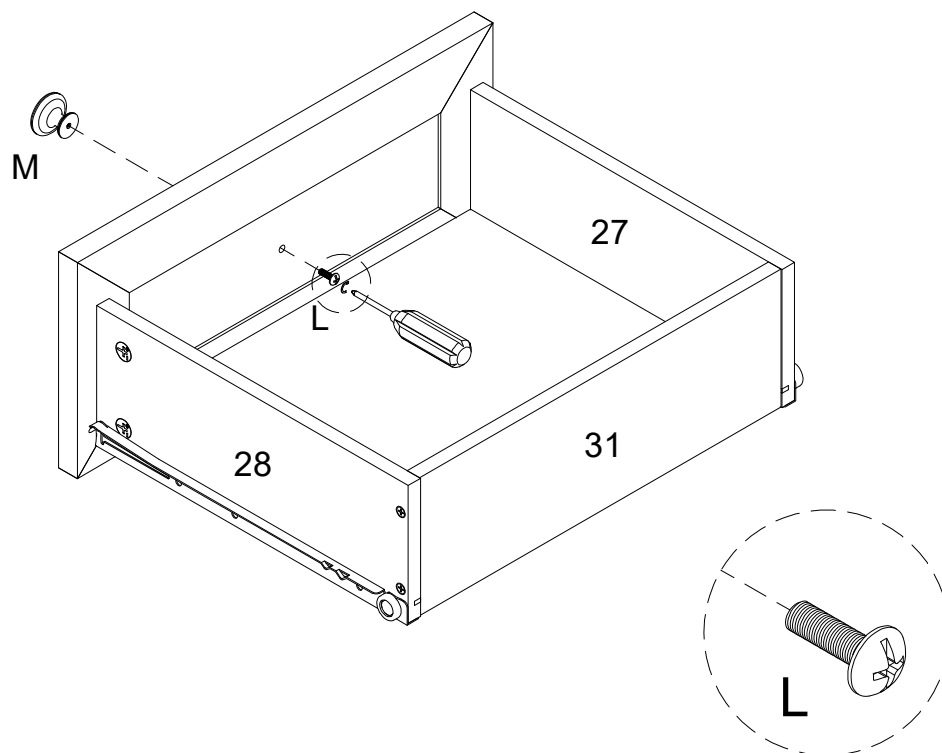


## Step 39

X4

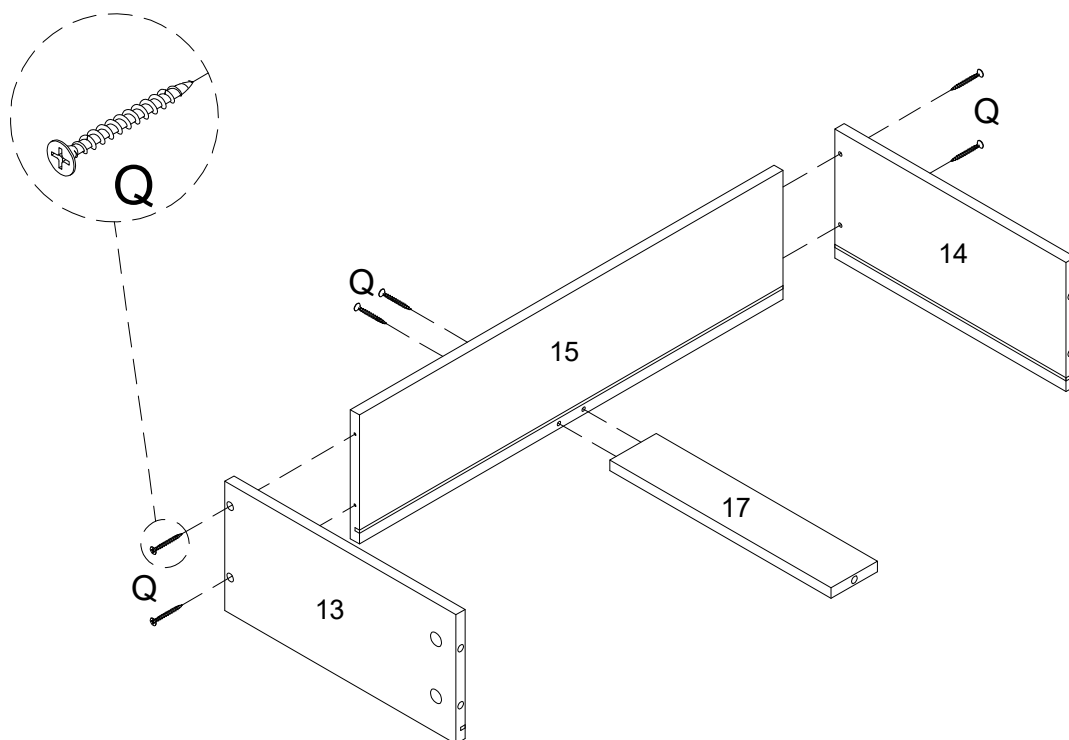


## Step 40

X4

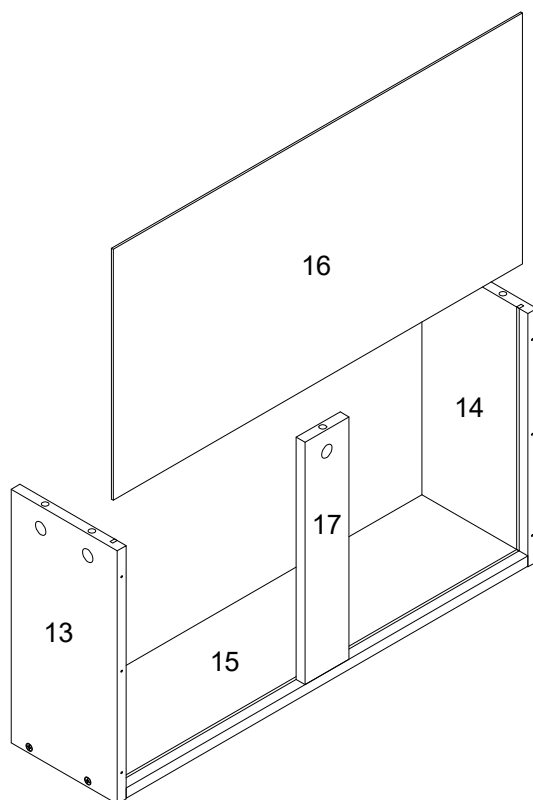


## Step 41

X2

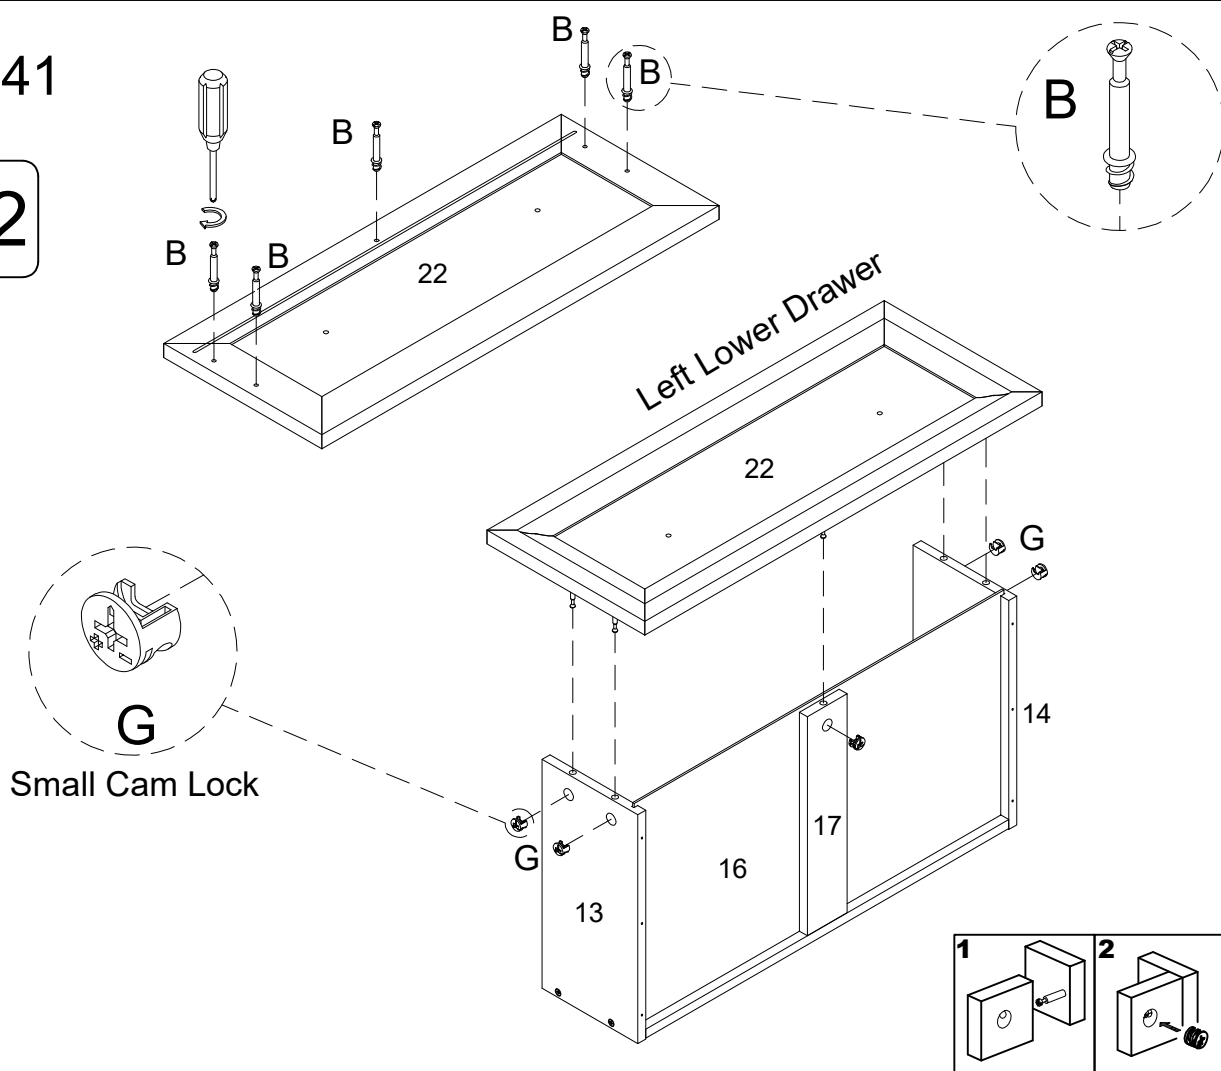


## Step 42

X2

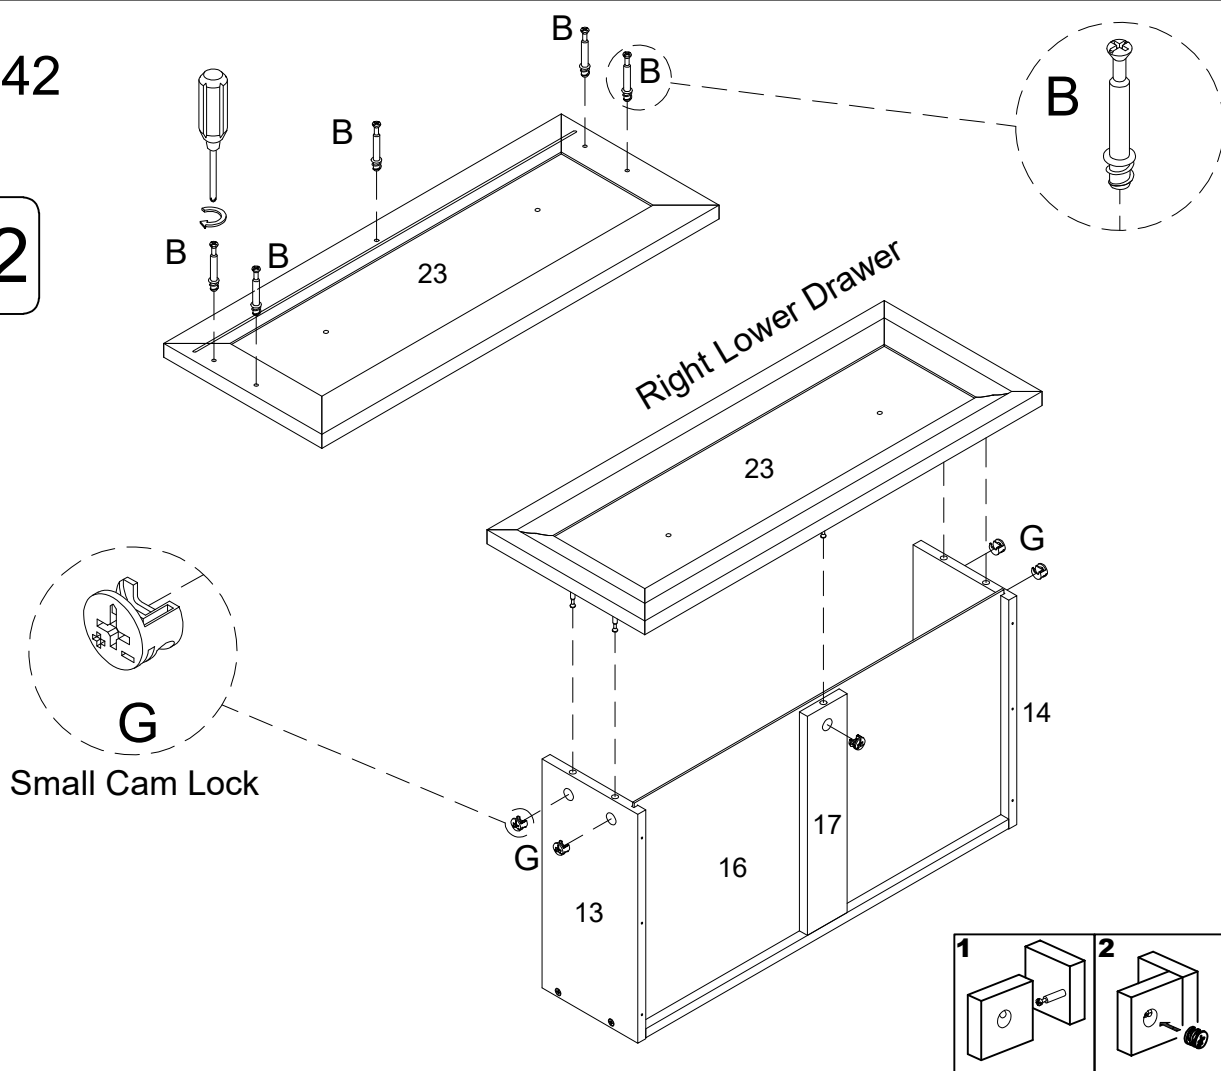



## Step 43

X4





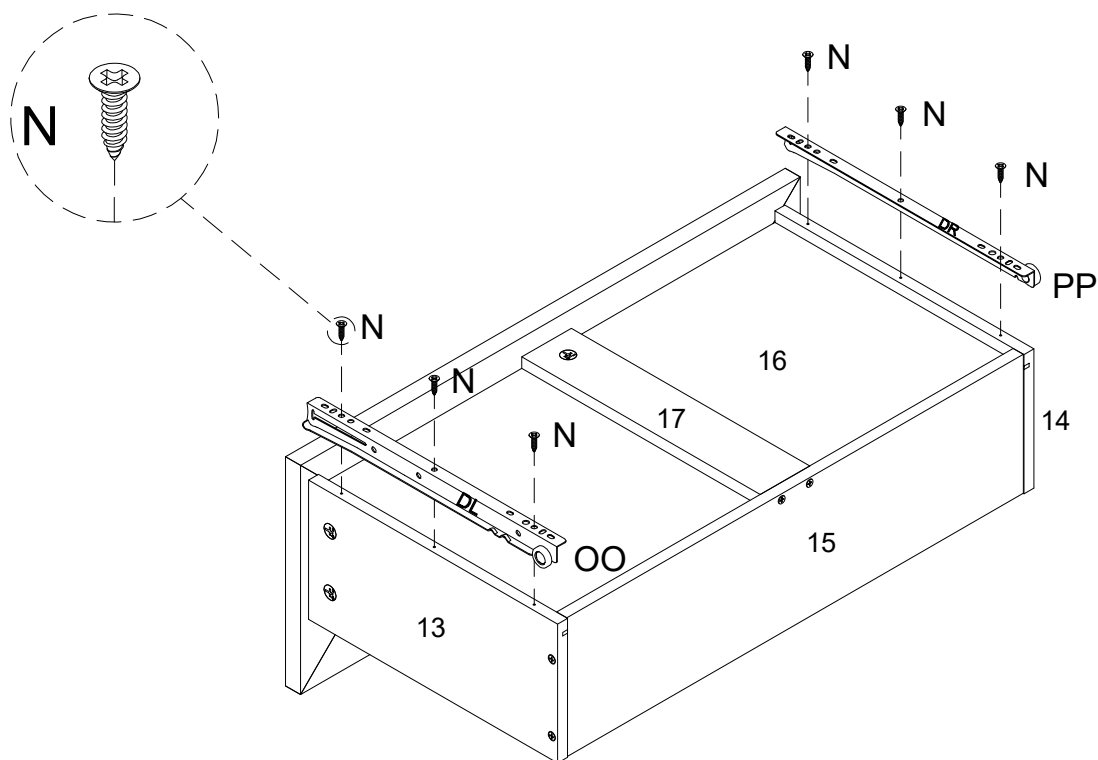


## Step 44

X4

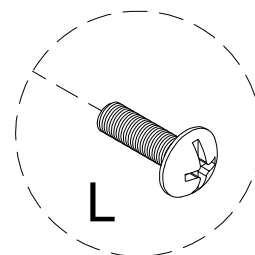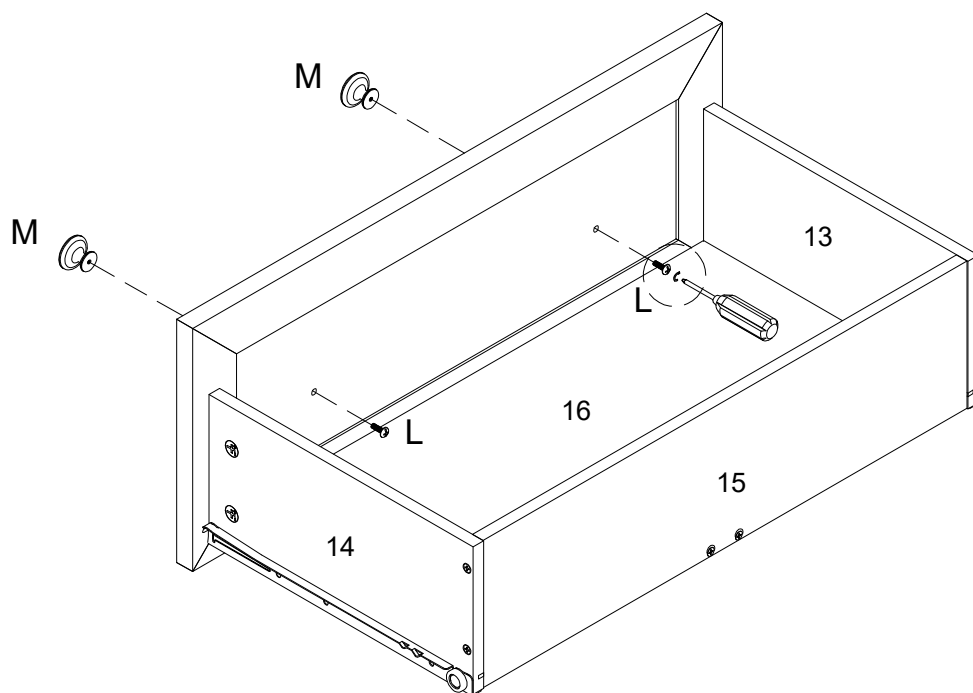


## Step 45

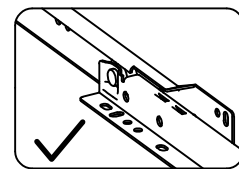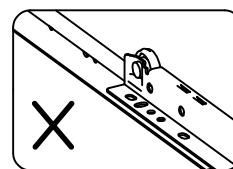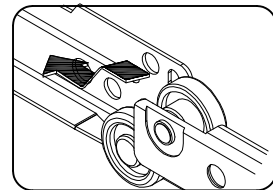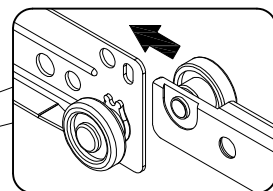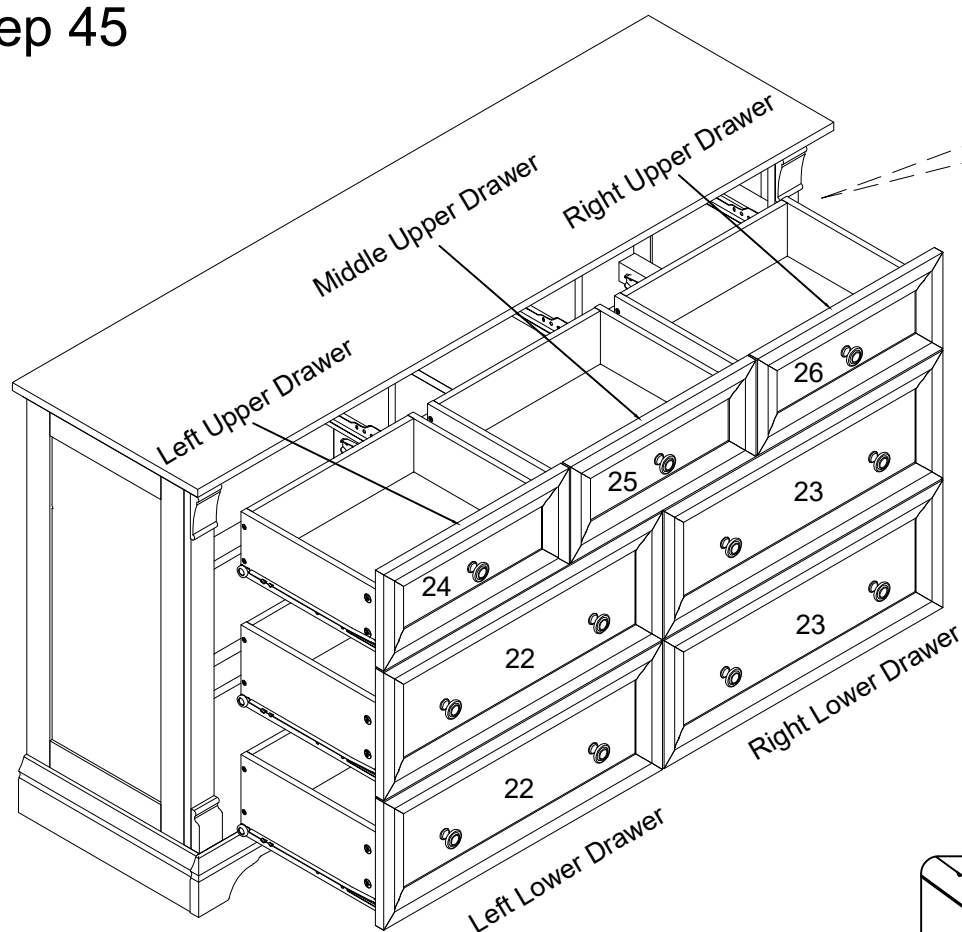


## Step 46


Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

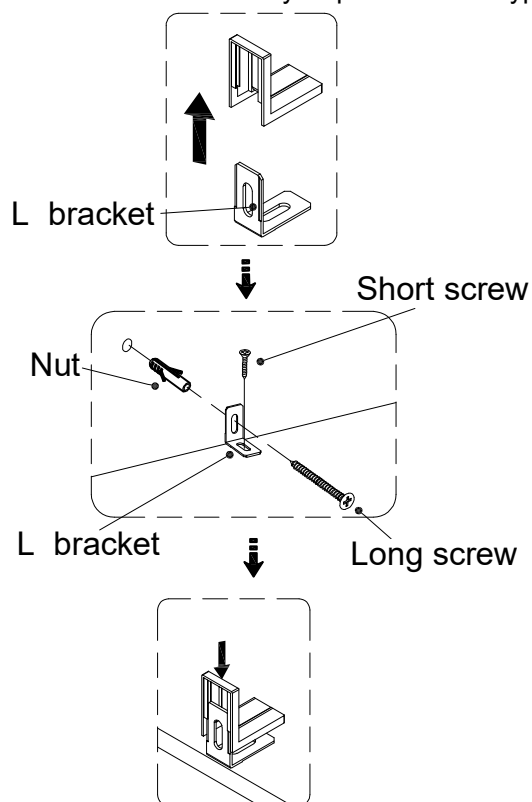

Wooden stud

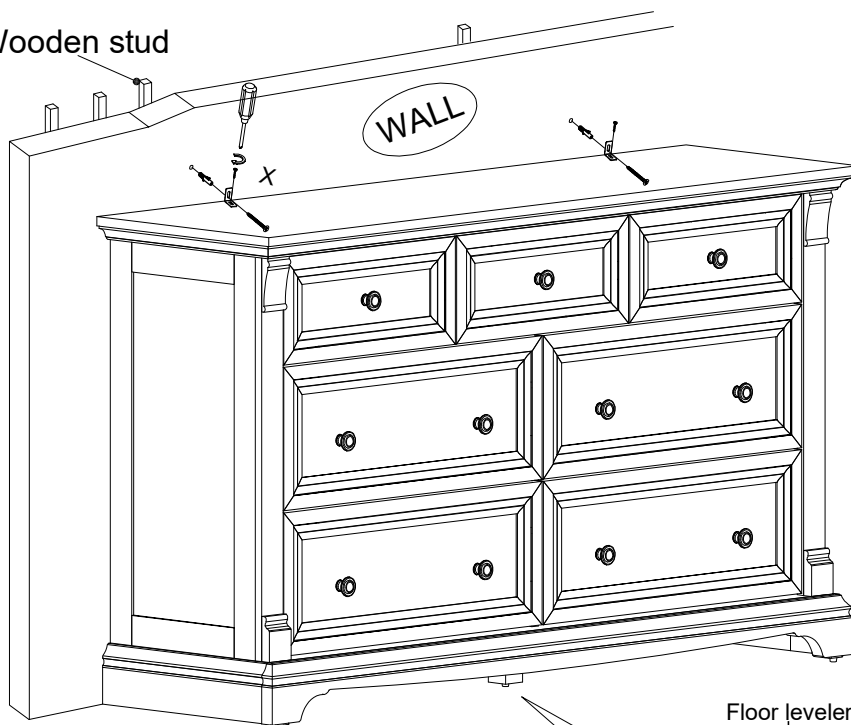

Floor leveler

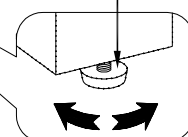

If necessary adjust the floor leveler at the bottom of the Support Leg to improve the gap around the Drawer.

## Step 47



Final Assembly