


BG012


Side Cabinet

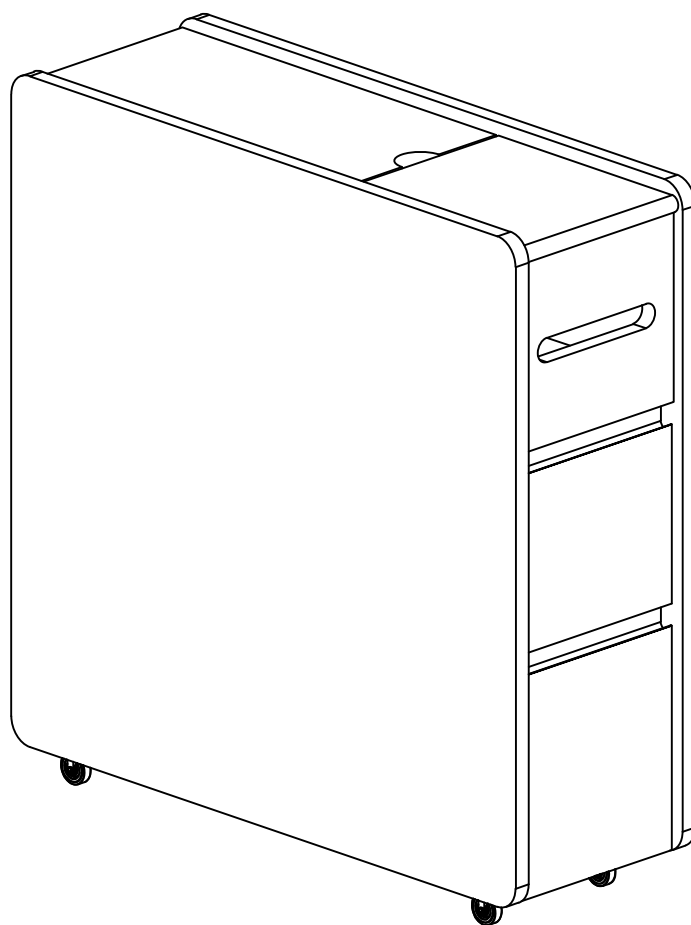

















Assembly Diagram

Part No BG012

Description Side Cabinet

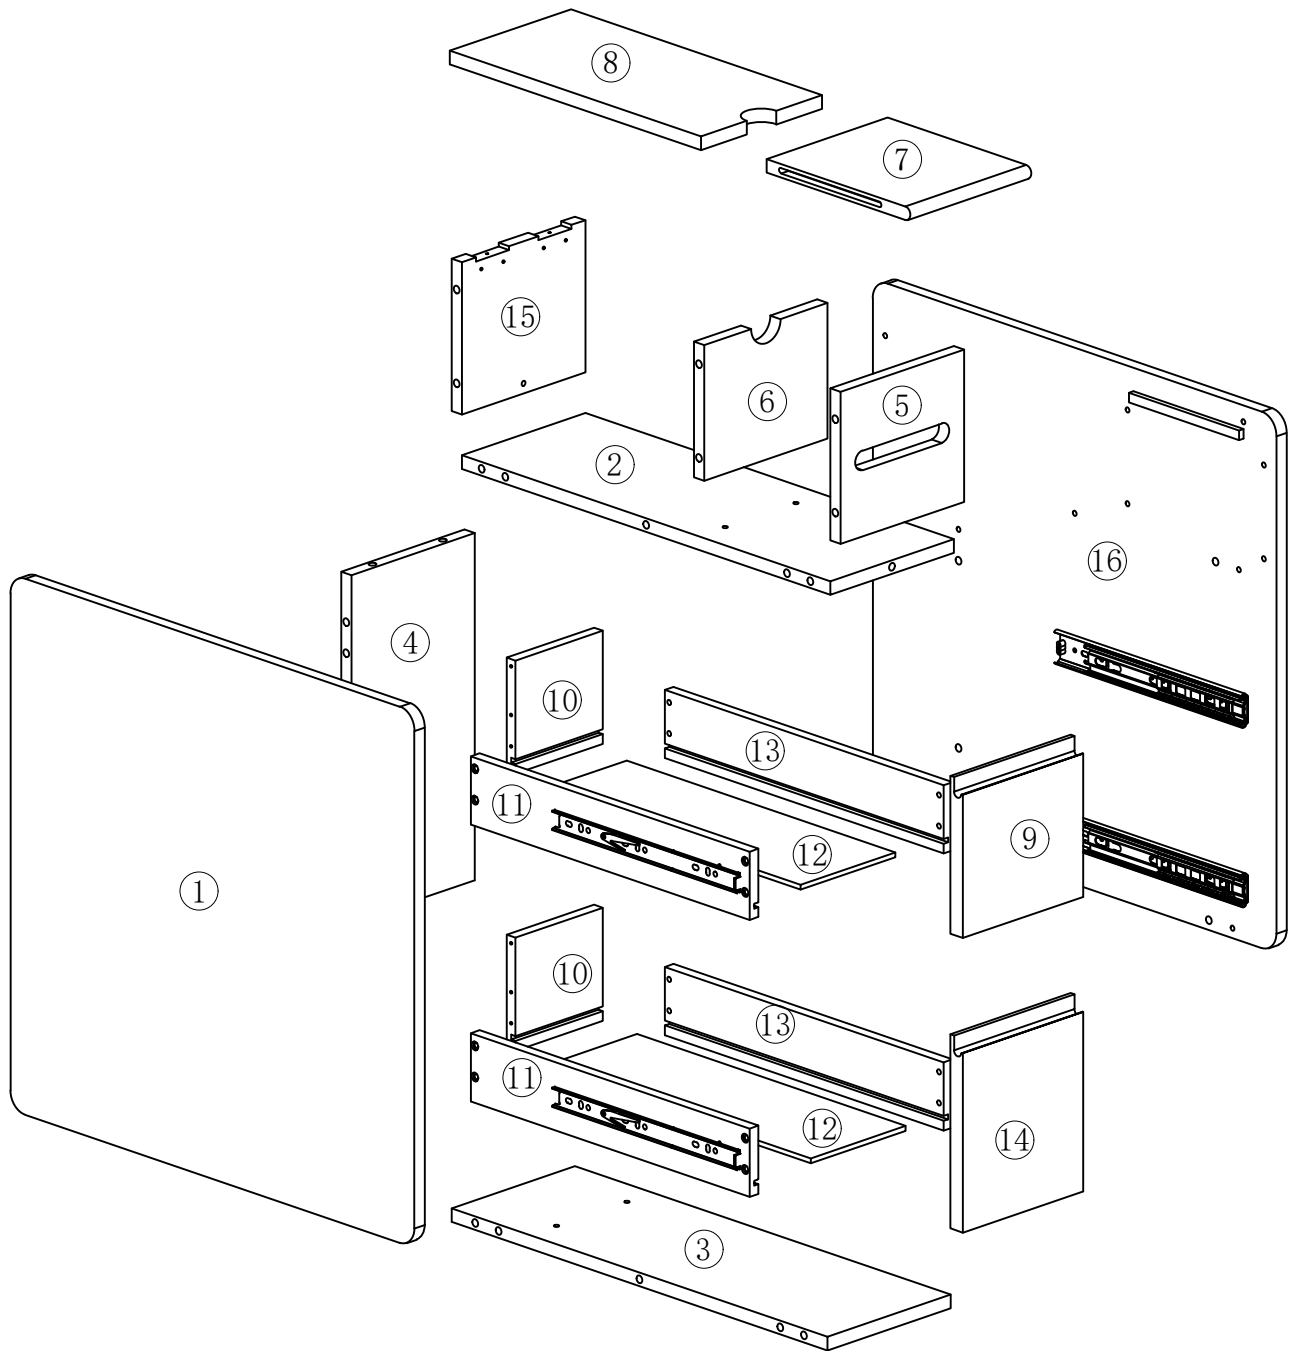


Parts List

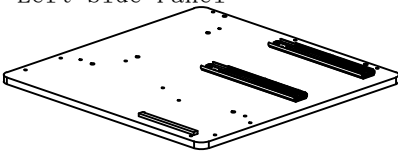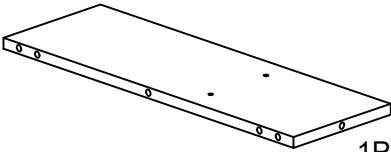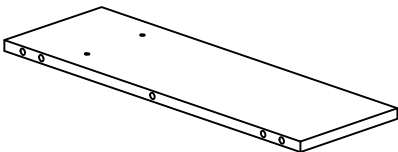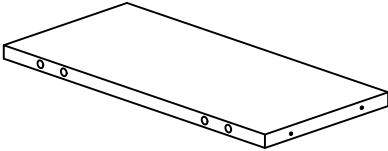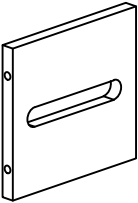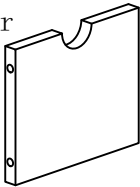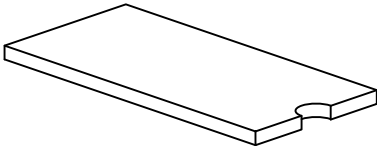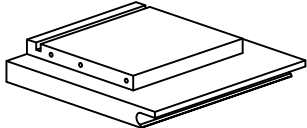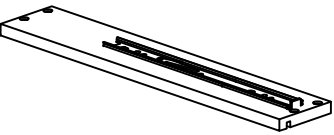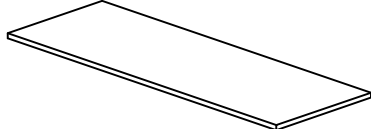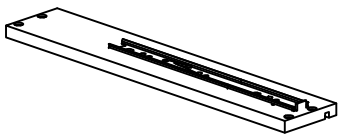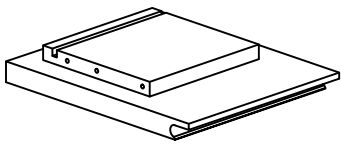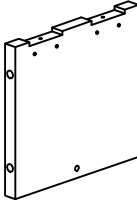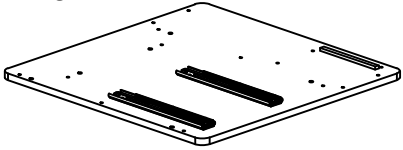① Left Side Panel  1PC	② Shelf  1PC	③ Bottom Panel  1PC
④ Lower Back Panel  1PC	⑤ Front Panel  1PC	⑥ Mid Drawer Panel  1PC
⑦ Front Panel  1PC	⑧ Back Panel  1PC	⑨ Upper Drawer Front  1PC
⑩ Drawer Back Panel  2PCS	⑪ Drawer Left Side Panel  2PCS	⑫ Drawer Bottom Panel  2PCS
⑬ Drawer Right Side Panel  2PCS	⑭ Lower Drawer Front  1PC	⑮ Upper Back Panel  1PC
⑯ Right Side Panel  1PC		



IMPORTANT

Using the correct screws will help prevent damage to the components.

Incorrect: Using the wrong screw may cause the panel to crack.

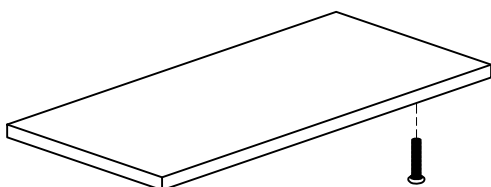


Example

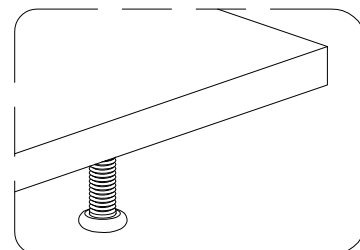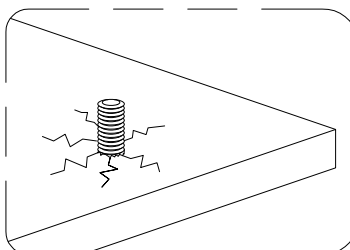


Correct: The screw is the correct size.


How to use the cam lock system

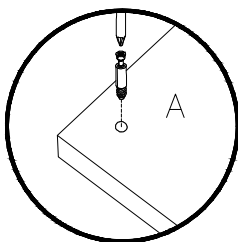


1. Screw cam bolt into panel

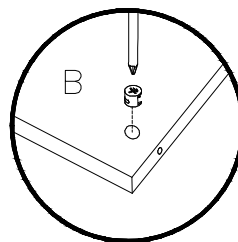


2. Push cam into panel - arrow feature on cam top points to panel edge

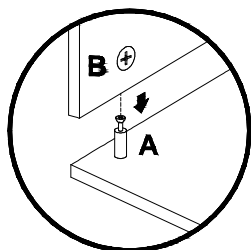

3. Align cam bolt(s) with cam(s) and insert all the way into cross-bored hole(s)

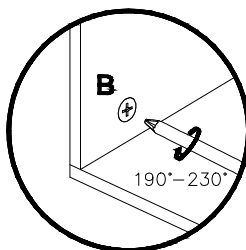


4. Rotate cam(s) clockwise 190°-230° to lock panels together

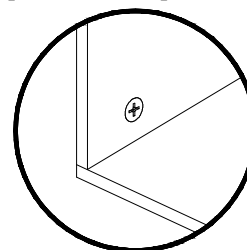

5. Panels should be tight against each other and connection should be rigid








Insert the wood dowel (A) at least half way by tapping lightly with a rubber mallet, IF NECESSARY

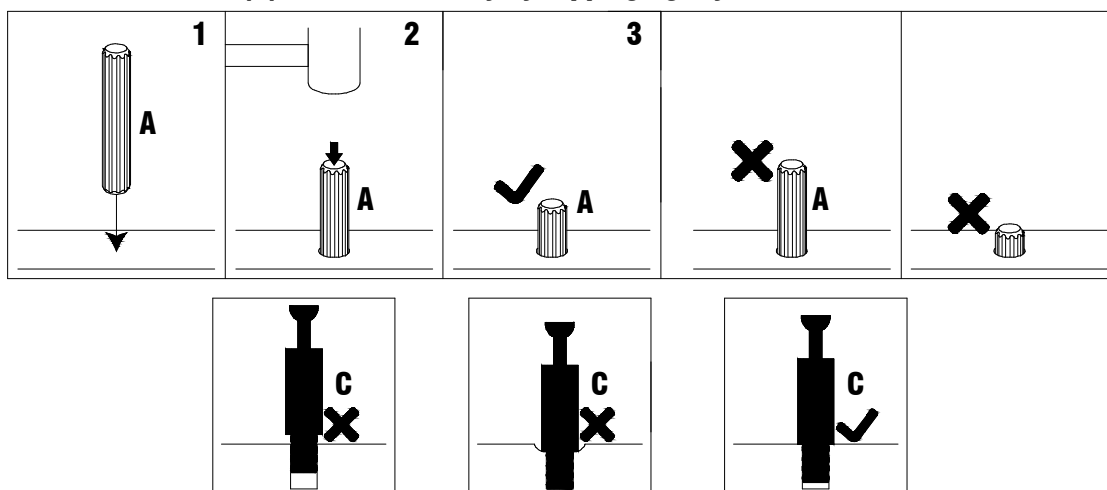


⚠ WARNING

- Unit must be placed on a level surface or leveled with included hardware (when applicable).
- Do not sit or stand on or allow children to climb, sit or stand on the assembled product.
- For safety reasons, it is imperative that this unit be mounted to the wall.
- Do not use without installing the tip restraint.
- Unit can tip over causing severe injury or death.
- Do not exceed the recommended weight limits.
- Evenly distribute the weight on each level and always keep the heavier loads on the bottom.
- Before cutting, drilling or hammering into any wall or floor surface, verify the location of electrical, plumbing and gas lines. Cutting may cause serious injury.

Hardware List

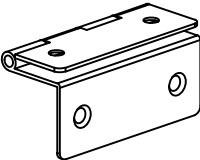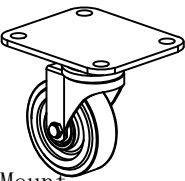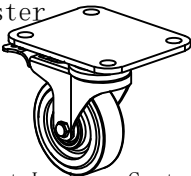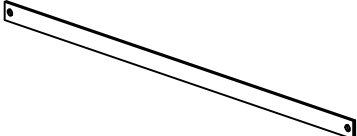
A Cam Screw  L=35mm 32+3PCS	B Cam Lock  Ø15MM 32+3PCS	C Cover Cap  Ø20MM 32+3PCS
D Wood Dowel  Ø8*30MM 12+1PCS	E Hinge  2PCS	F Flat Head Self-Tapping Screw  #8*25MM 20+2PCS
G Flat Head Wood Screw  #3.5*12MM 34+3PCS	H Multi-Function Ratchet Screwdriver  1PC	I Caster  1.25" Plate-Mount 2PCS
J Locking Caster  1.25" Plate-Mount Locking Caster 2PCS	K Pivot Pin  Φ5*20MM 2+1PCS	L Aluminum Strip  4PCS

Multi-Function Ratchet Screwdriver Instructions


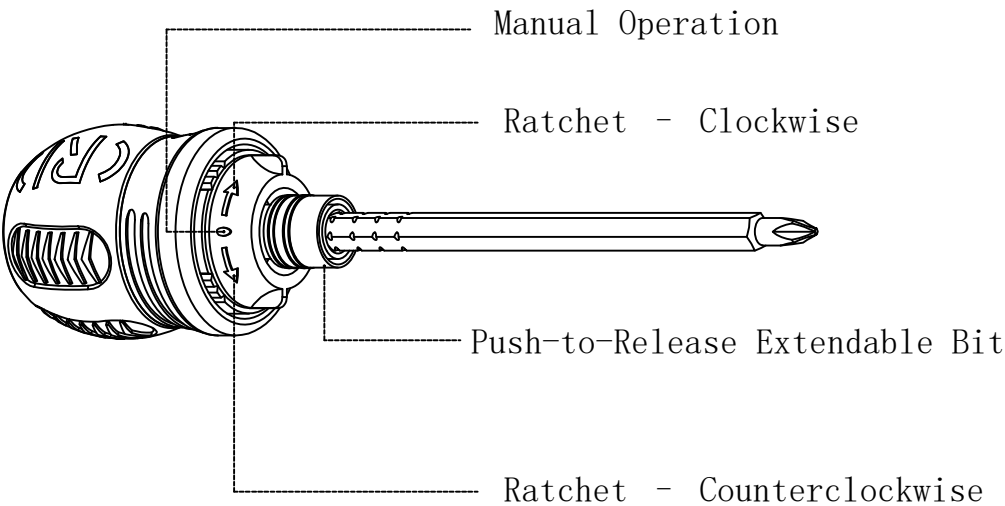


Description: Side Cabinet

Step 1

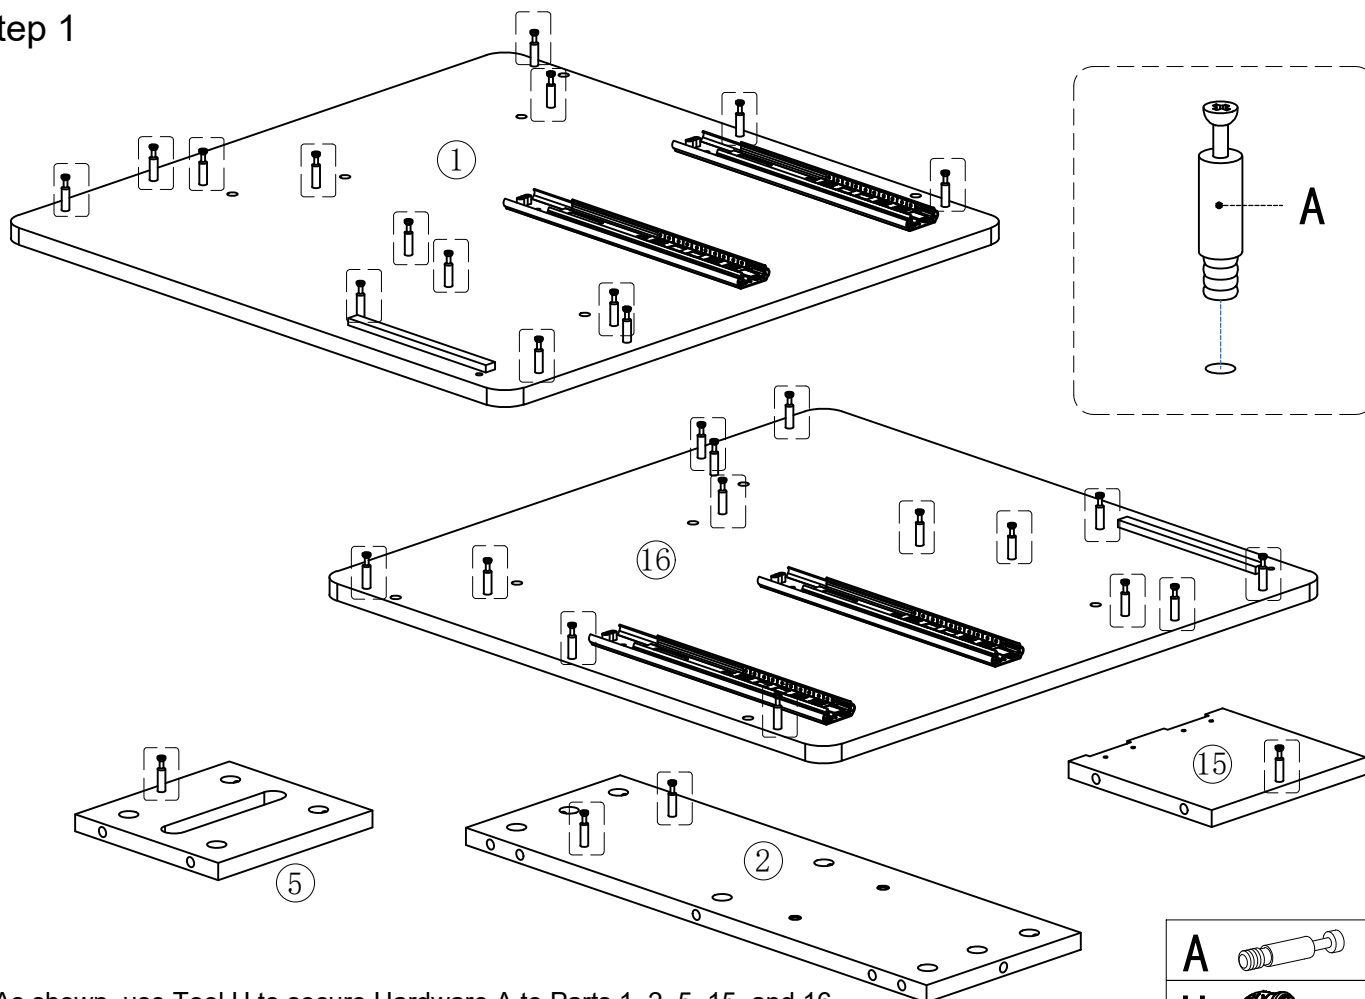



Step 2

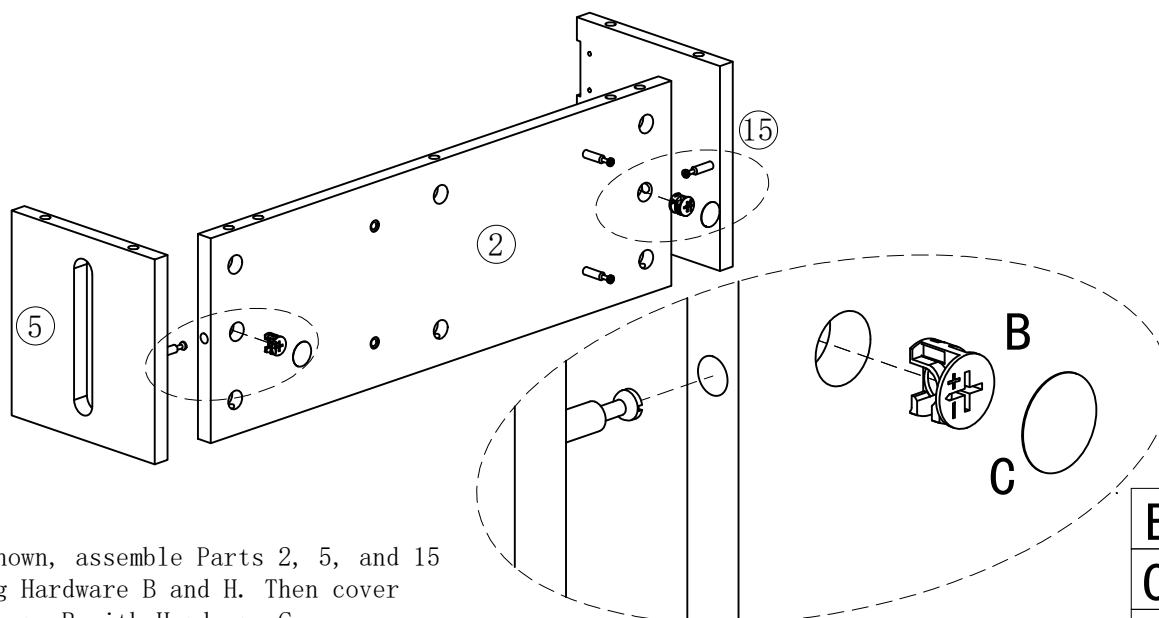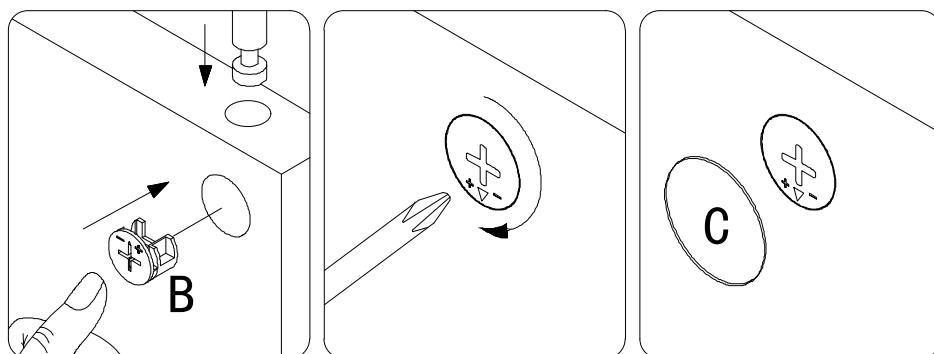

As shown, assemble Parts 2, 5, and 15 using Hardware B and H. Then cover Hardware B with Hardware C.

Description: Side Cabinet


Step 3

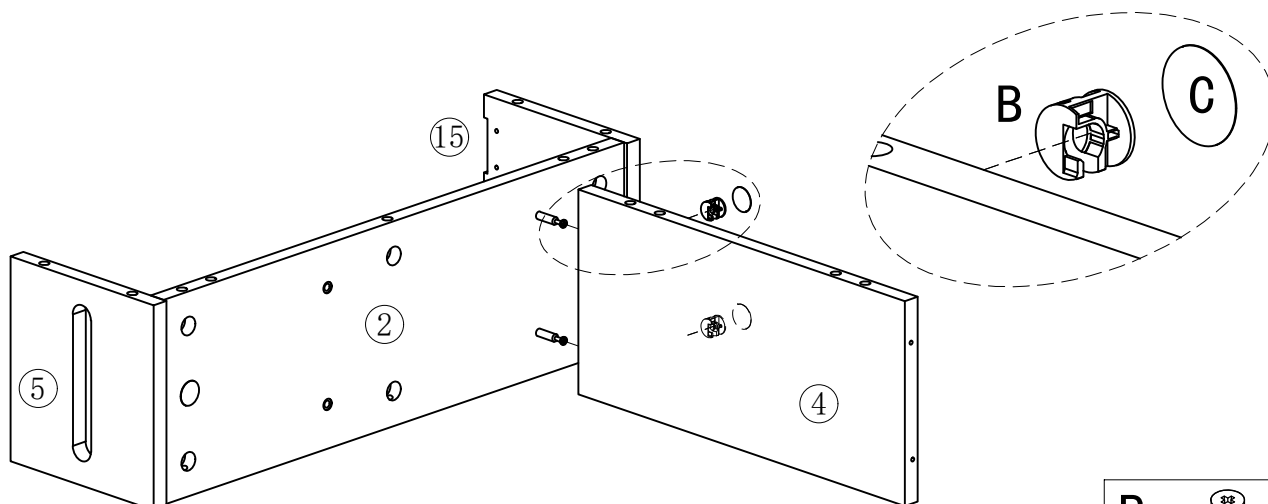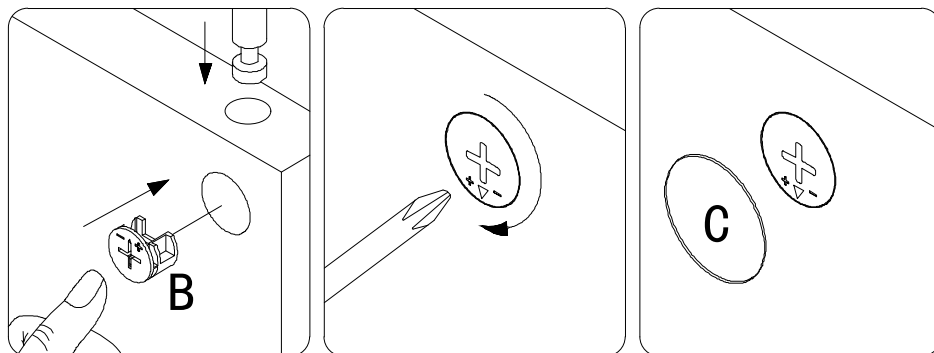

B		X2
C		X2
H		X1

►As shown, assemble Part 4 with the assembly completed in Step 2 using Hardware B and H. Then cover Hardware B with Hardware C.

Step 4

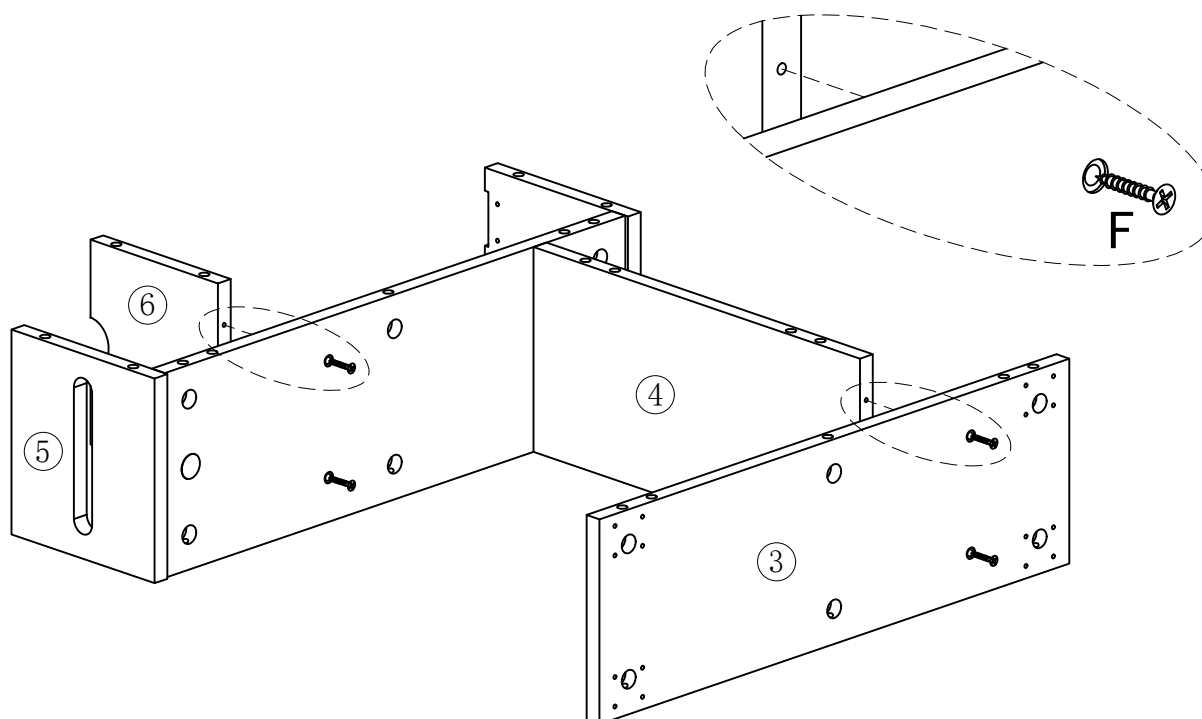


F		X4
H		X1

►As shown, assemble Parts 3 and 6 with the assembly completed in Step 3 using Hardware F and H.

Description: Side Cabinet



Step 5

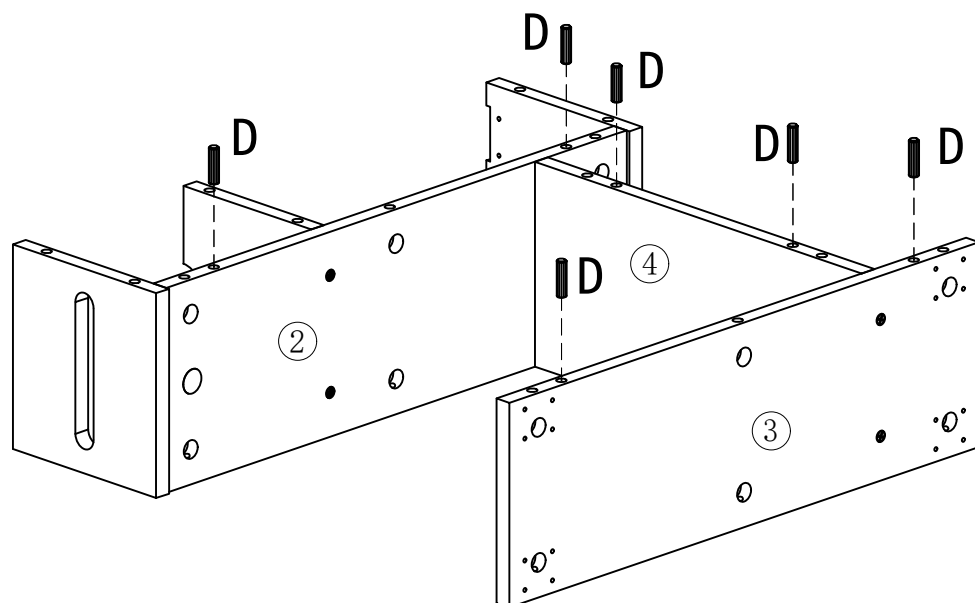

►As shown, install Hardware D on the assembly completed in Step 4 at the positions indicated in the illustration.

D  X6

Step 6

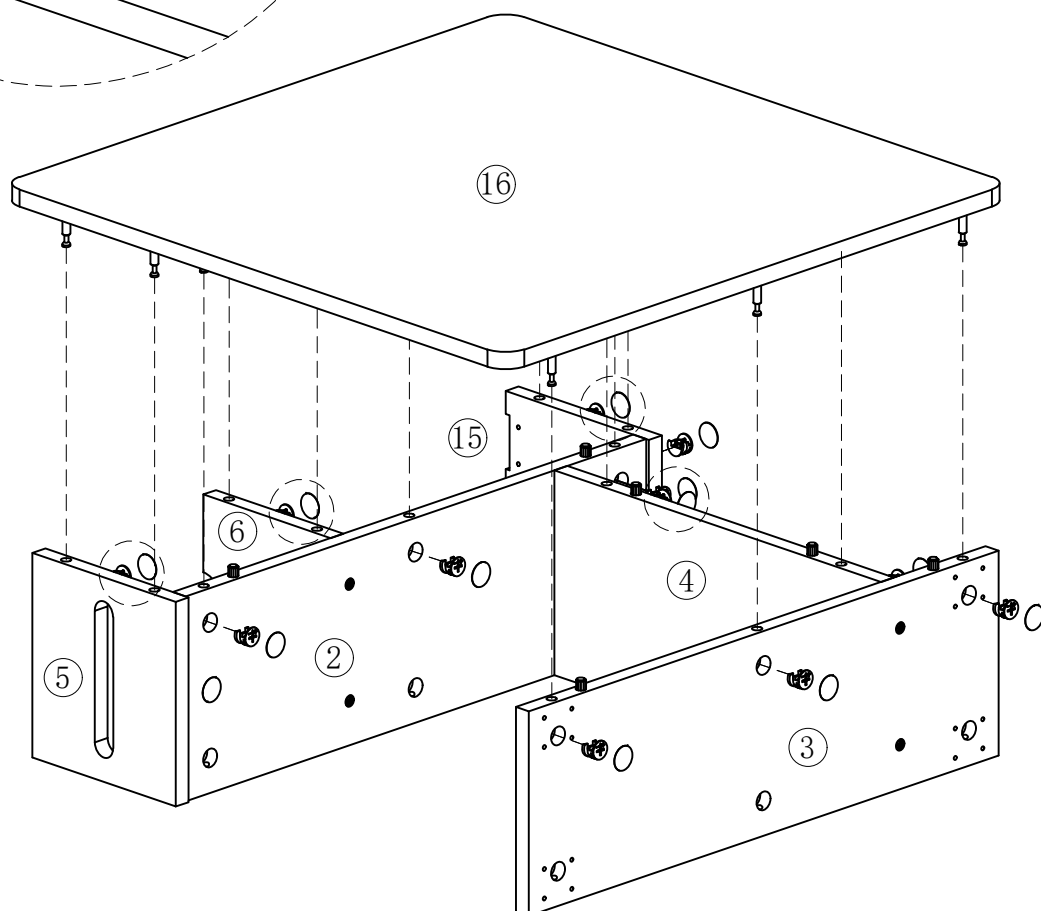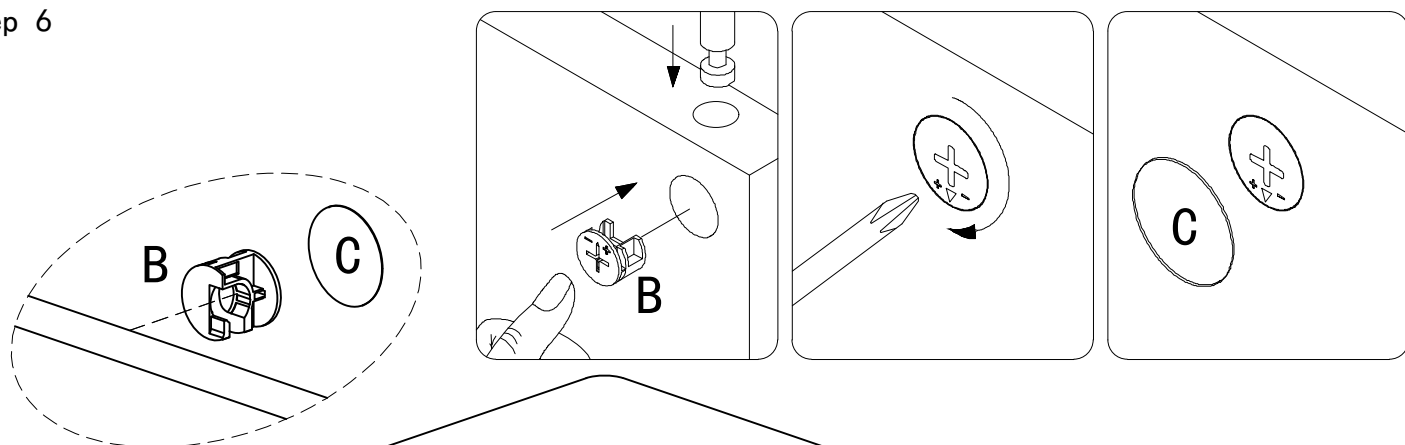


►As shown, assemble Part 16 with the assembly completed in Step 5 using Hardware B and H. Then cover Hardware B with Hardware C.

B  X14
C  X14
H  X1

Description: Side Cabinet


Step 7

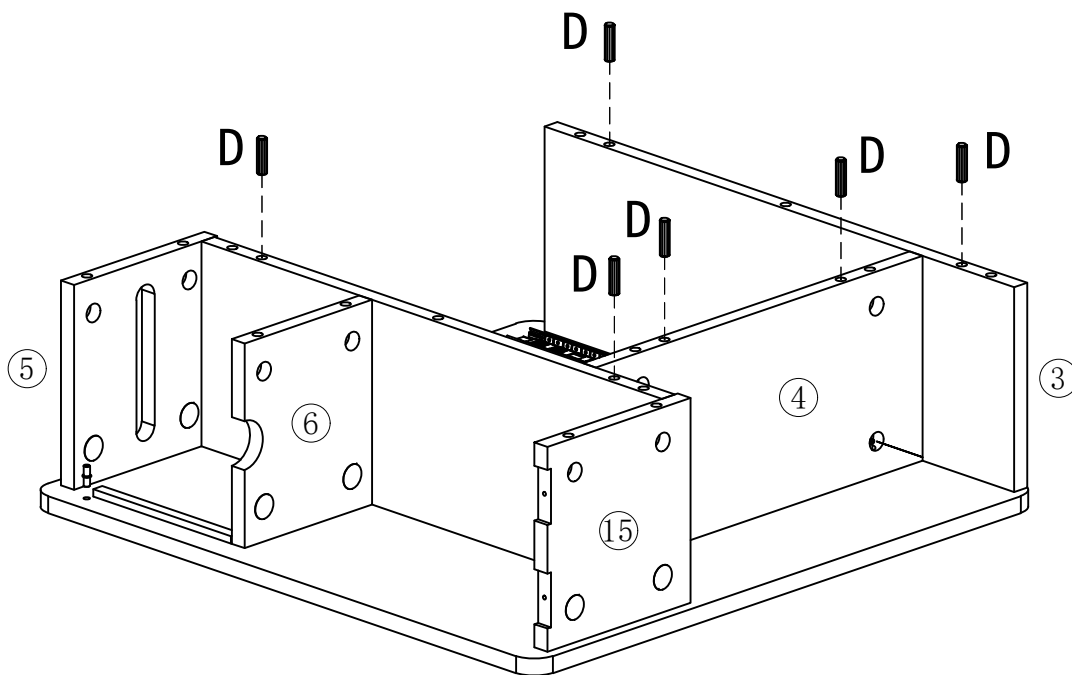

►As shown, first flip the assembly completed in Step 6, then install Hardware D at the positions indicated in the illustration.

D  X6

Step 8

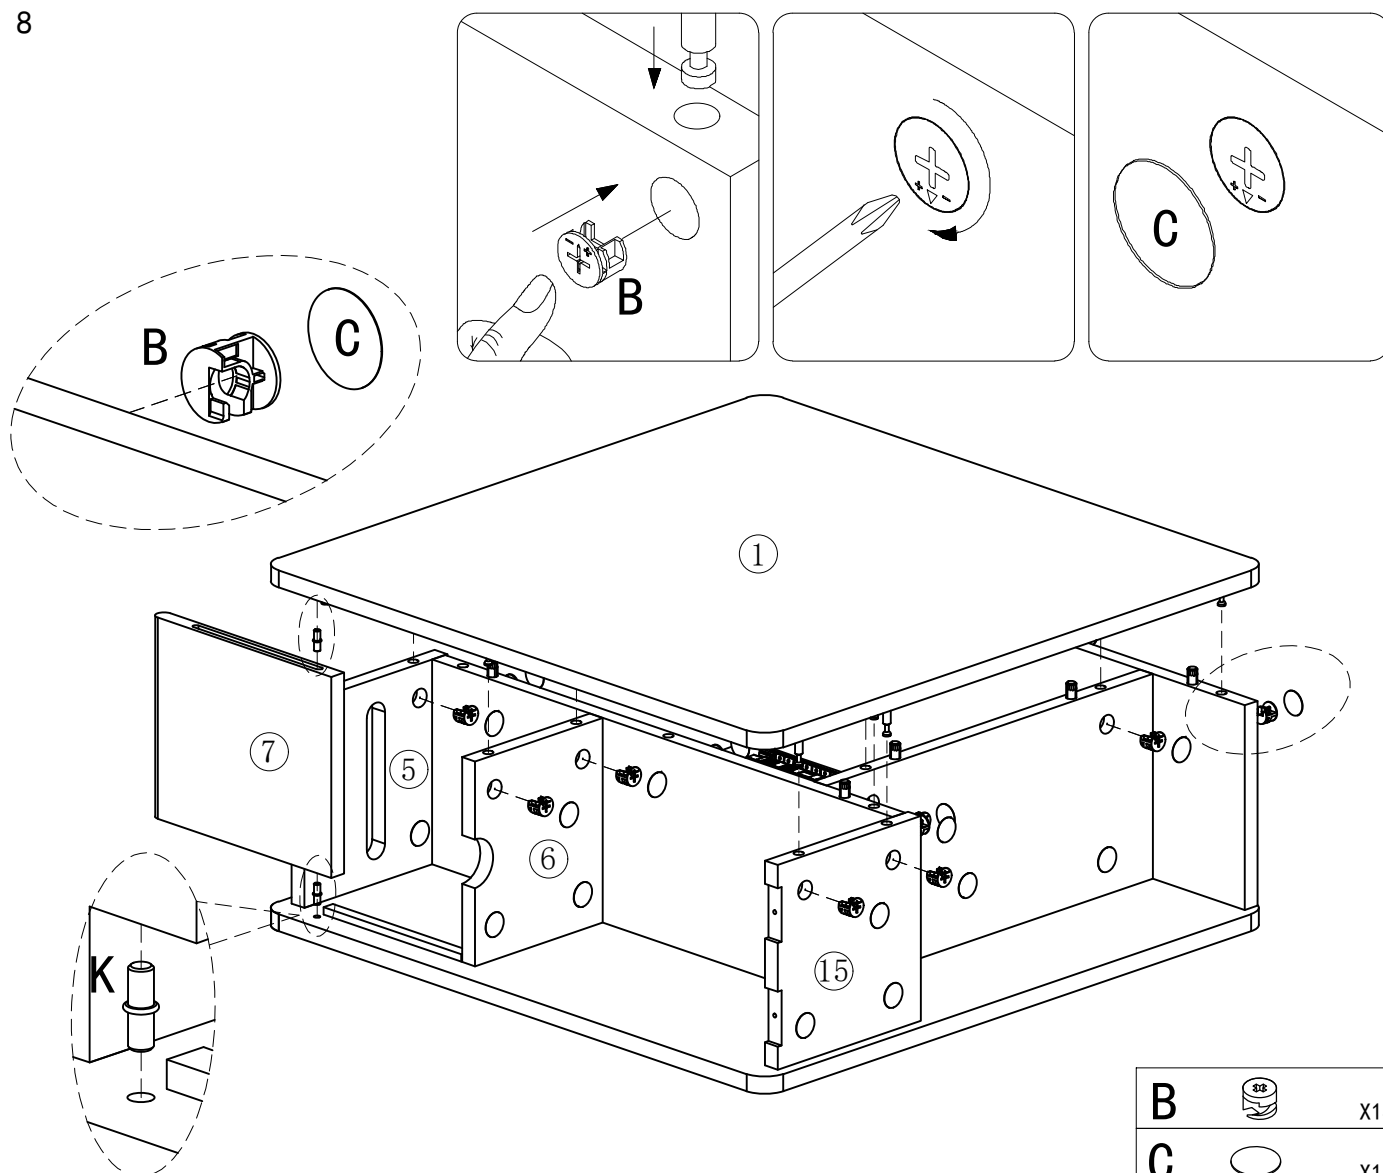


►As shown, assemble Parts 1 and 7 with the assembly completed in Step 7 using Hardware B, H, and K. Then cover Hardware B with Hardware C.

B		X14
C		X14
H		X1
K		X2

Description: Side Cabinet

Step 9

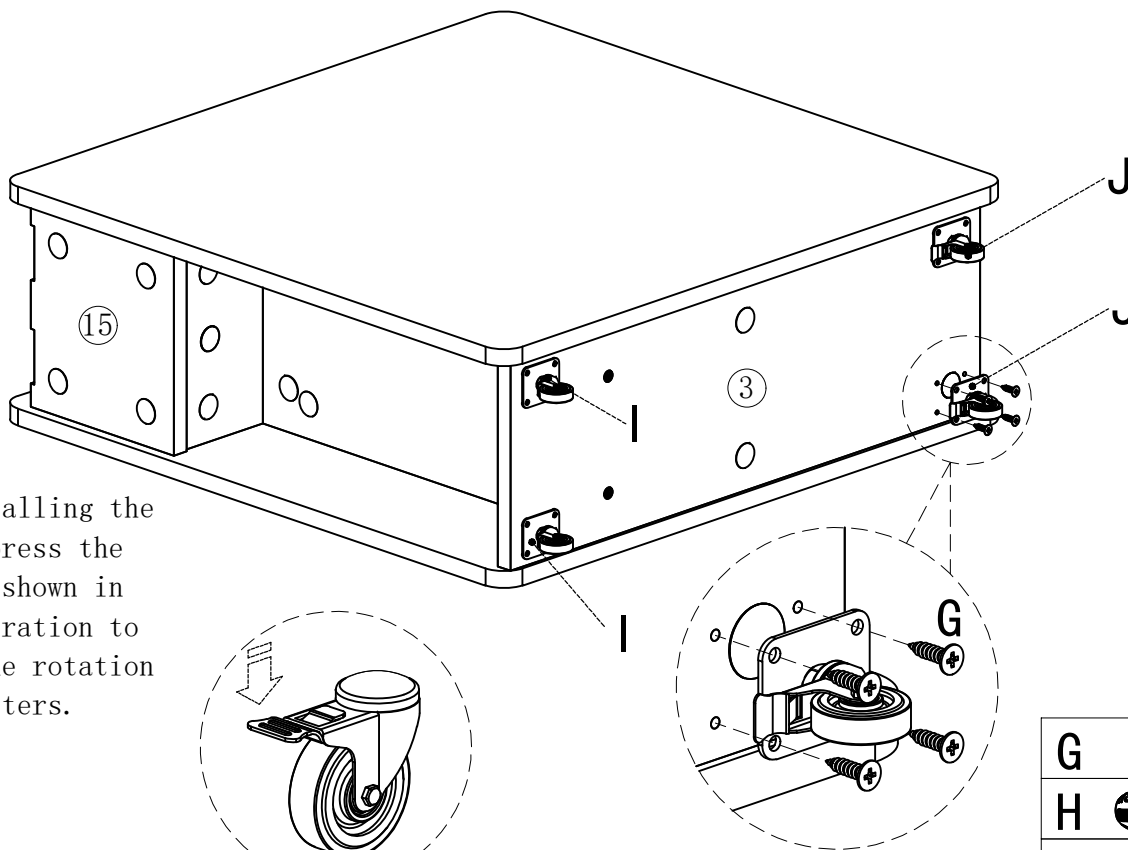


After installing the casters, press the switch as shown in the illustration to control the rotation of the casters.

►As shown, install Hardware I and J on Part 3 using Hardware G and H at the positions indicated in the illustration. After assembly, stand the cabinet upright.

G		X16
H		X1
I		X2
J		X2

Step 10

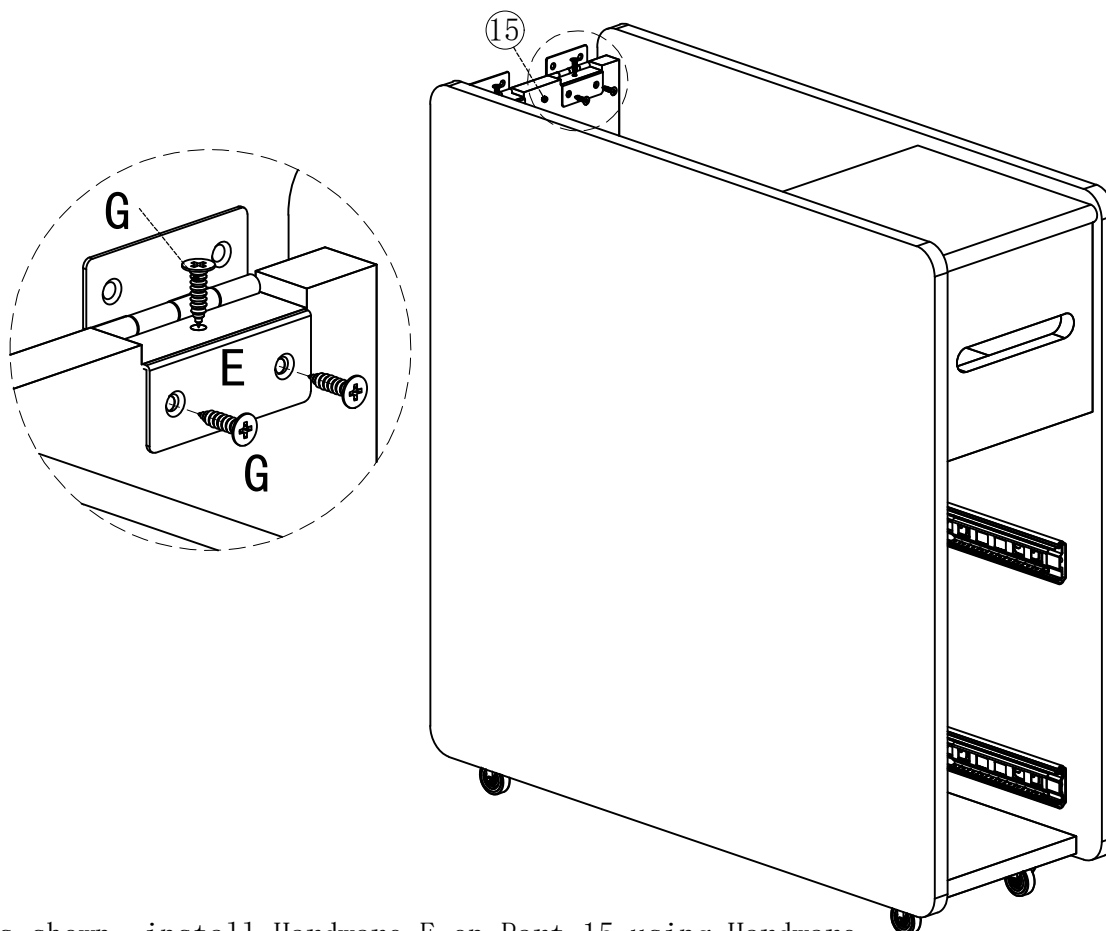


►As shown, install Hardware E on Part 15 using Hardware
►H and G at the positions indicated in the illustration.

H		X1
E		X2
G		X6

Description: Side Cabinet


Step 11

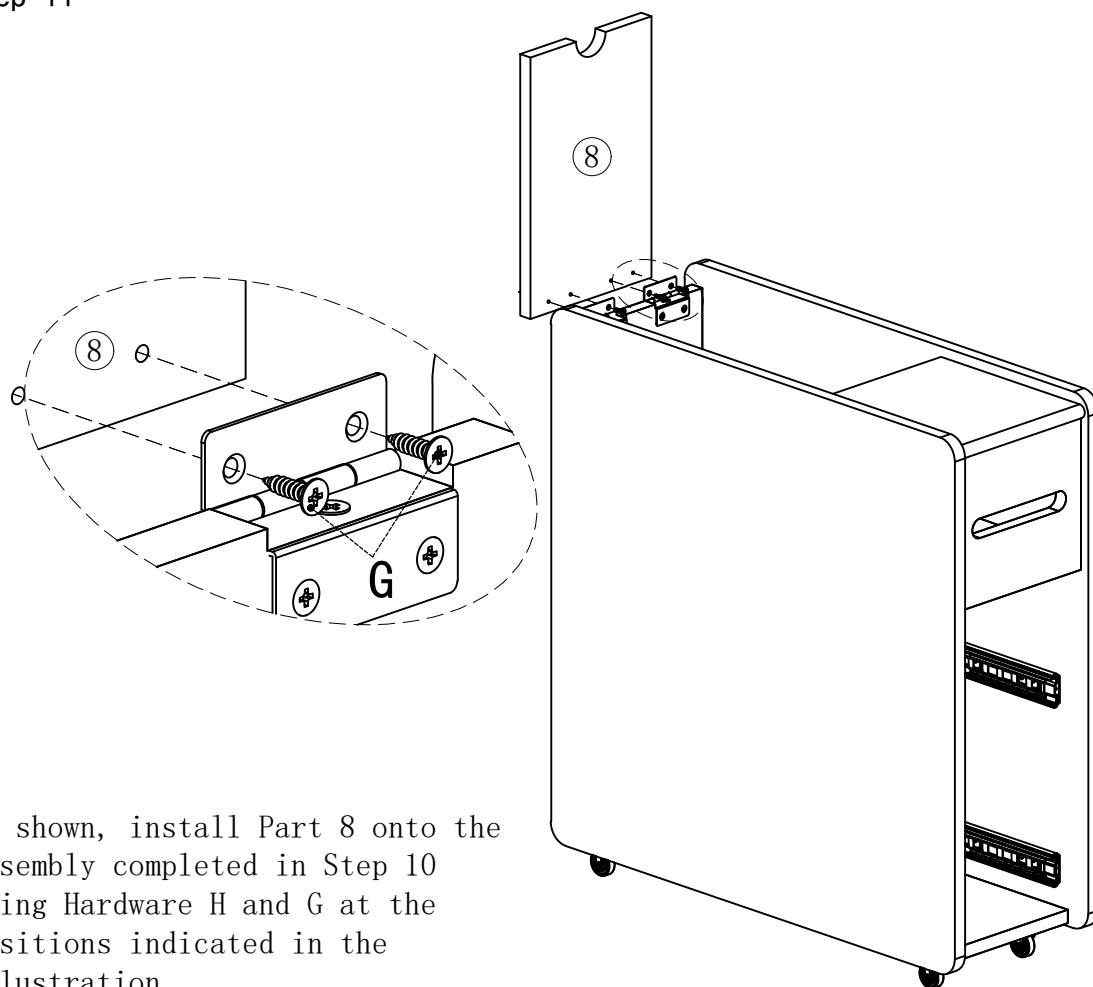

►As shown, install Part 8 onto the assembly completed in Step 10 using Hardware H and G at the positions indicated in the illustration.

H		x1
G		x4

Step 12

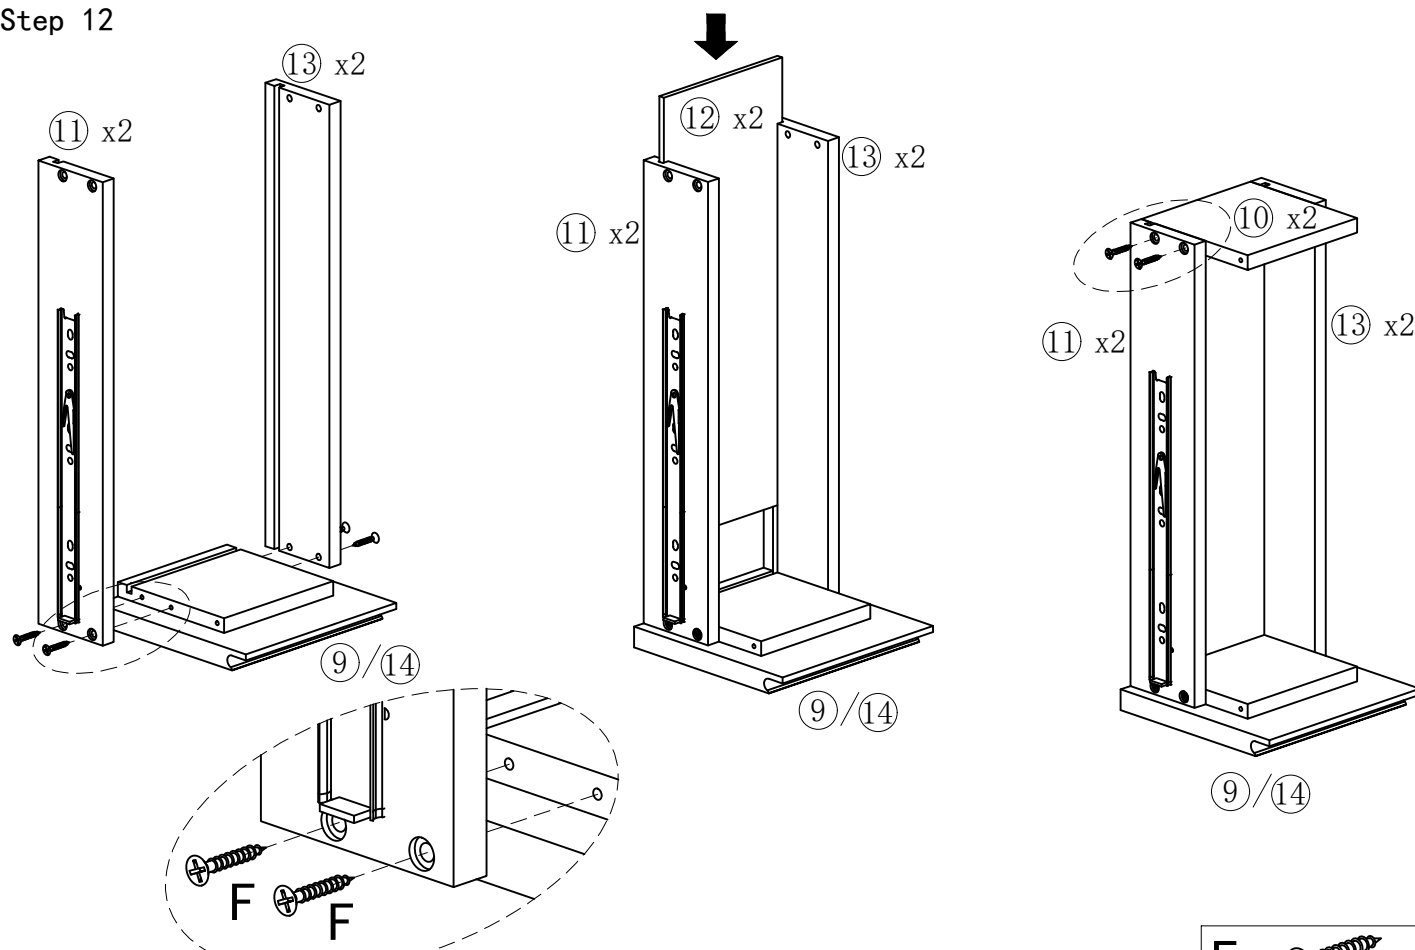


►As shown, assemble Parts 9, 11, 12, 13, and 14 using Hardware F and H as indicated in the illustration.

F		x16
H		x1

Description: Side Cabinet


Step 13

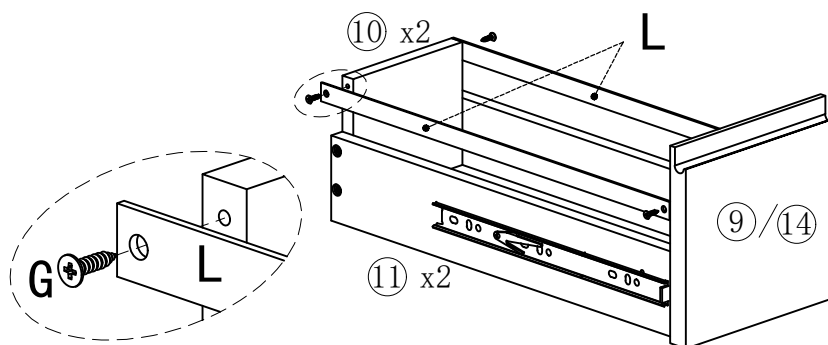

L		X4
G		X8
H		X1

►As shown, install Hardware L onto the assembly completed in Step 12 using Hardware H and G at the positions indicated in the illustration.

Step 14

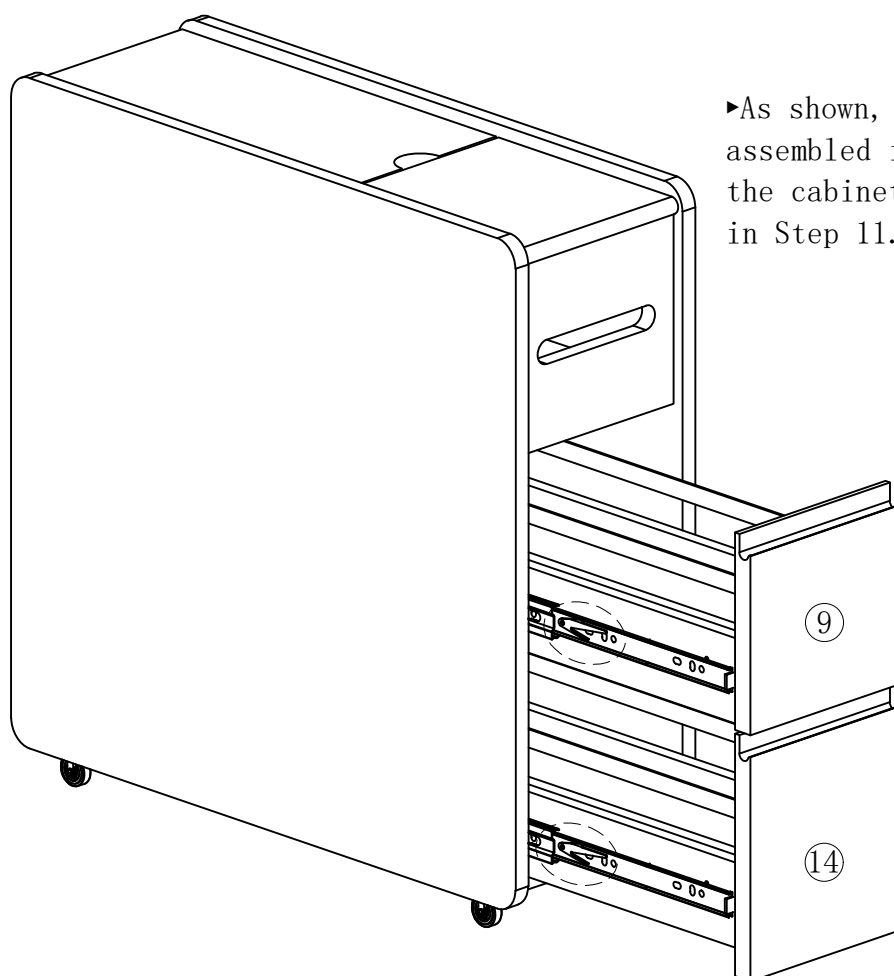

►As shown, insert the drawer assembled in Step 13 into the cabinet body assembled in Step 11.

