

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.

*Estimated Assembly Time: 5 minutes.


*Tools Required for Assembly : Allen Key(Included),Screwdriver(Not Included)

CARE AND MAINTENANCE


Always use felt pads under all articles to prevent discoloration or softening of the lacquer.

Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	DESK TOP		1X
B	WOOD LEG		2X
C	METAL BAR		1X
D	ACRYLIC KNOB		2X
HW1	FLAT WASHER:Ø17x1mm		8X
HW2	HEX SOCKET SCREW :M6X35		2X
HW3	HEX SOCKET SCREW :M8X50		8X
HW4	ALLEN KEY:M6		1X
HW5	ALLEN KEY:M8		1X
HW6	PHILLIPS SCREW:M4x0.7x22mm		4X

Product dimensions: 48"W x 22"D x 30"H

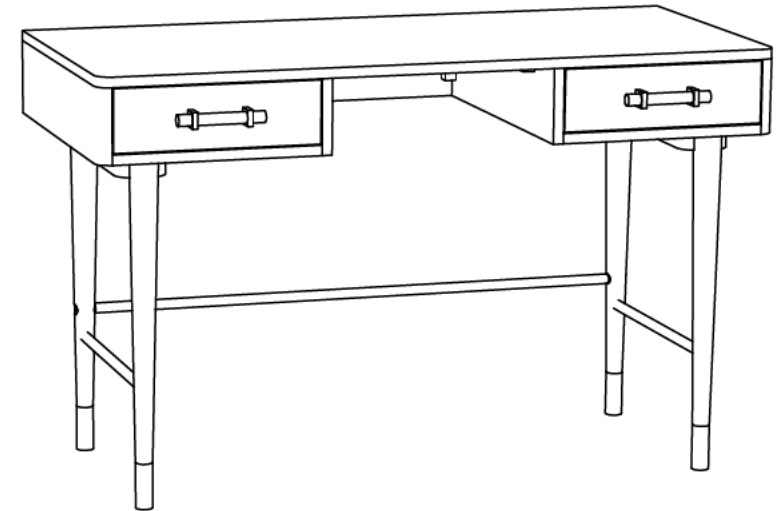

WARNING



Weight Capacity: 300 LBS

Warning: Do not stand on desk.

Warning: Do not over torque bolts.


PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 5 minutes.
- *Tools Required for Assembly : Allen Key(Included),Screwdriver(Not Included)
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

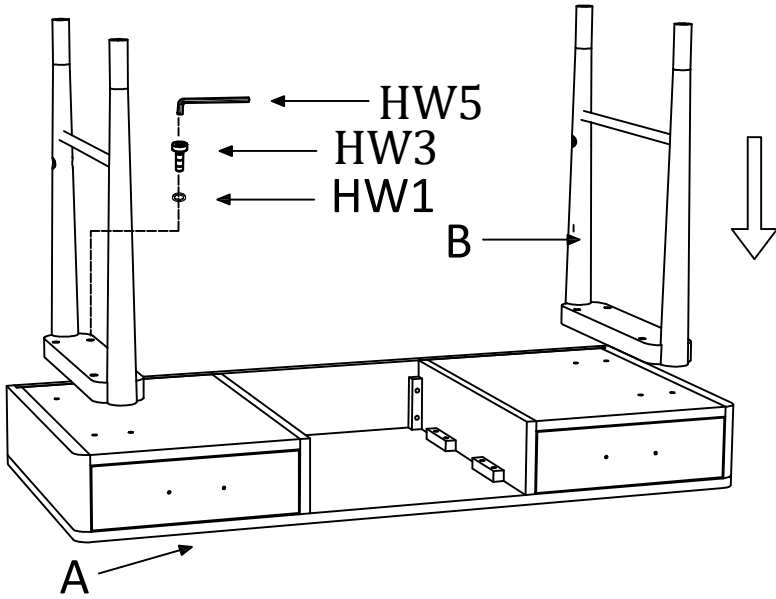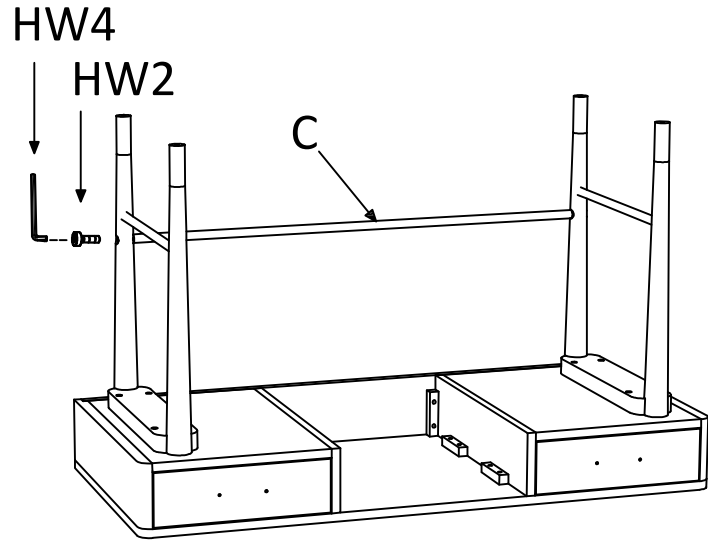
 The diagram shows a desk top (A) upside down. A leg (B) is being aligned with the desk top. Hardware labels include HW5 (Allen key), HW3 (bolt), HW1 (washer), and B (leg). A downward arrow indicates the leg is being placed onto the desk top.	 The diagram shows the desk top with two legs attached. A metal bar (C) is being inserted into the back legs. Hardware labels include HW4 (Allen key), HW2 (bolt), and C (metal bar). Arrows indicate the bar is being inserted and the bolt is being used to secure it.
Step 1: Put the desk top(A) upside down onto a soft pad. Place the leg(B) and align the holes, attach leg(B) to the desk top(A) by screwing the bolt(HW3) and washer (HW1) using allen key(HW5) .	Step 2: Insert the metal bar(C) into the back legs(B), attach them by screwing bolt(HW2) using allen key(HW4).

PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 5 minutes.
- *Tools Required for Assembly : Allen Key(Included),Screwdriver(Not Included)
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

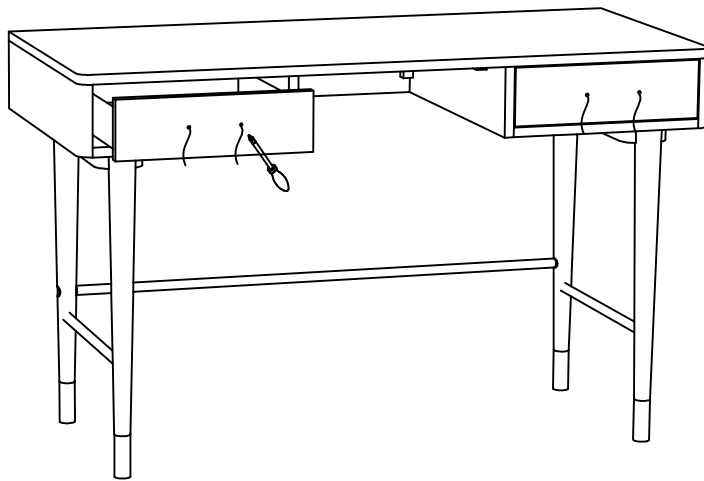

Step 3 : Place the desk(A) upright,Pull the drawer out by strings,use Screw Driver to loosen the screws(HW6) on it from outside of drawer.

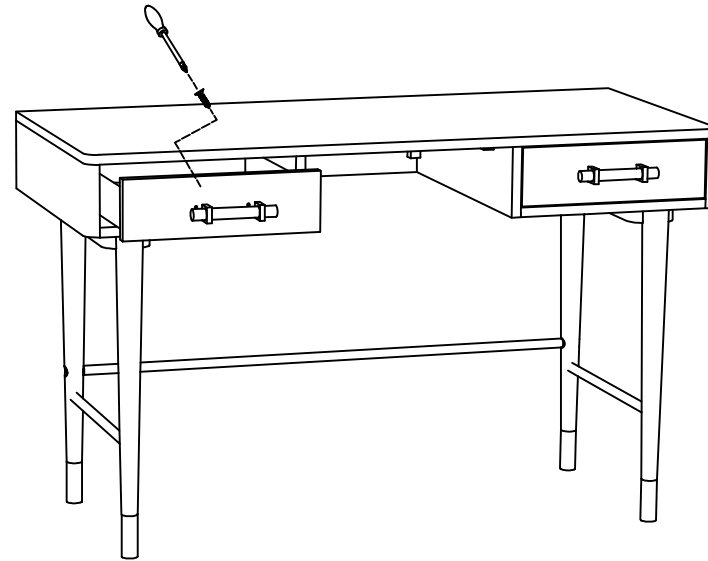

Step 4 :Align the knob(D) to the predilled holes on front panel of drawer, insert screws(HW6) from inside of drawer and tighten by Screw Driver in the same way.