


Version:1.0
AJ-DJ505441
AJ-DJ505442

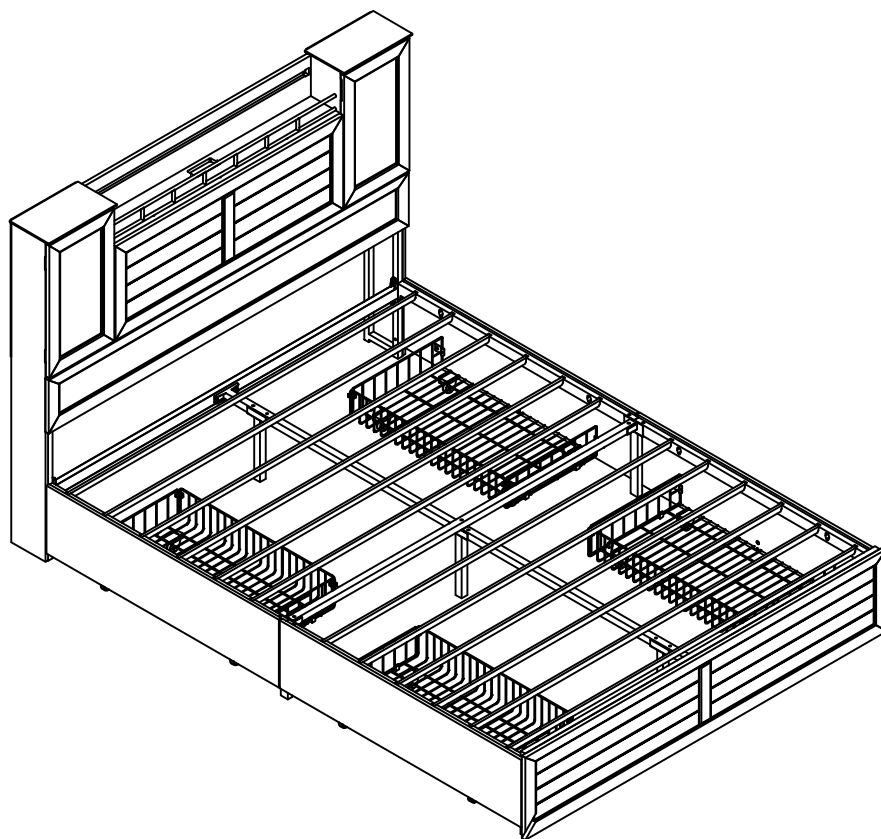


Note:


























Should be assembled on flat ground to keep balance.

It needs at least two people to install.









Before starting the assembly, you must read the whole manual and follow the instructions.

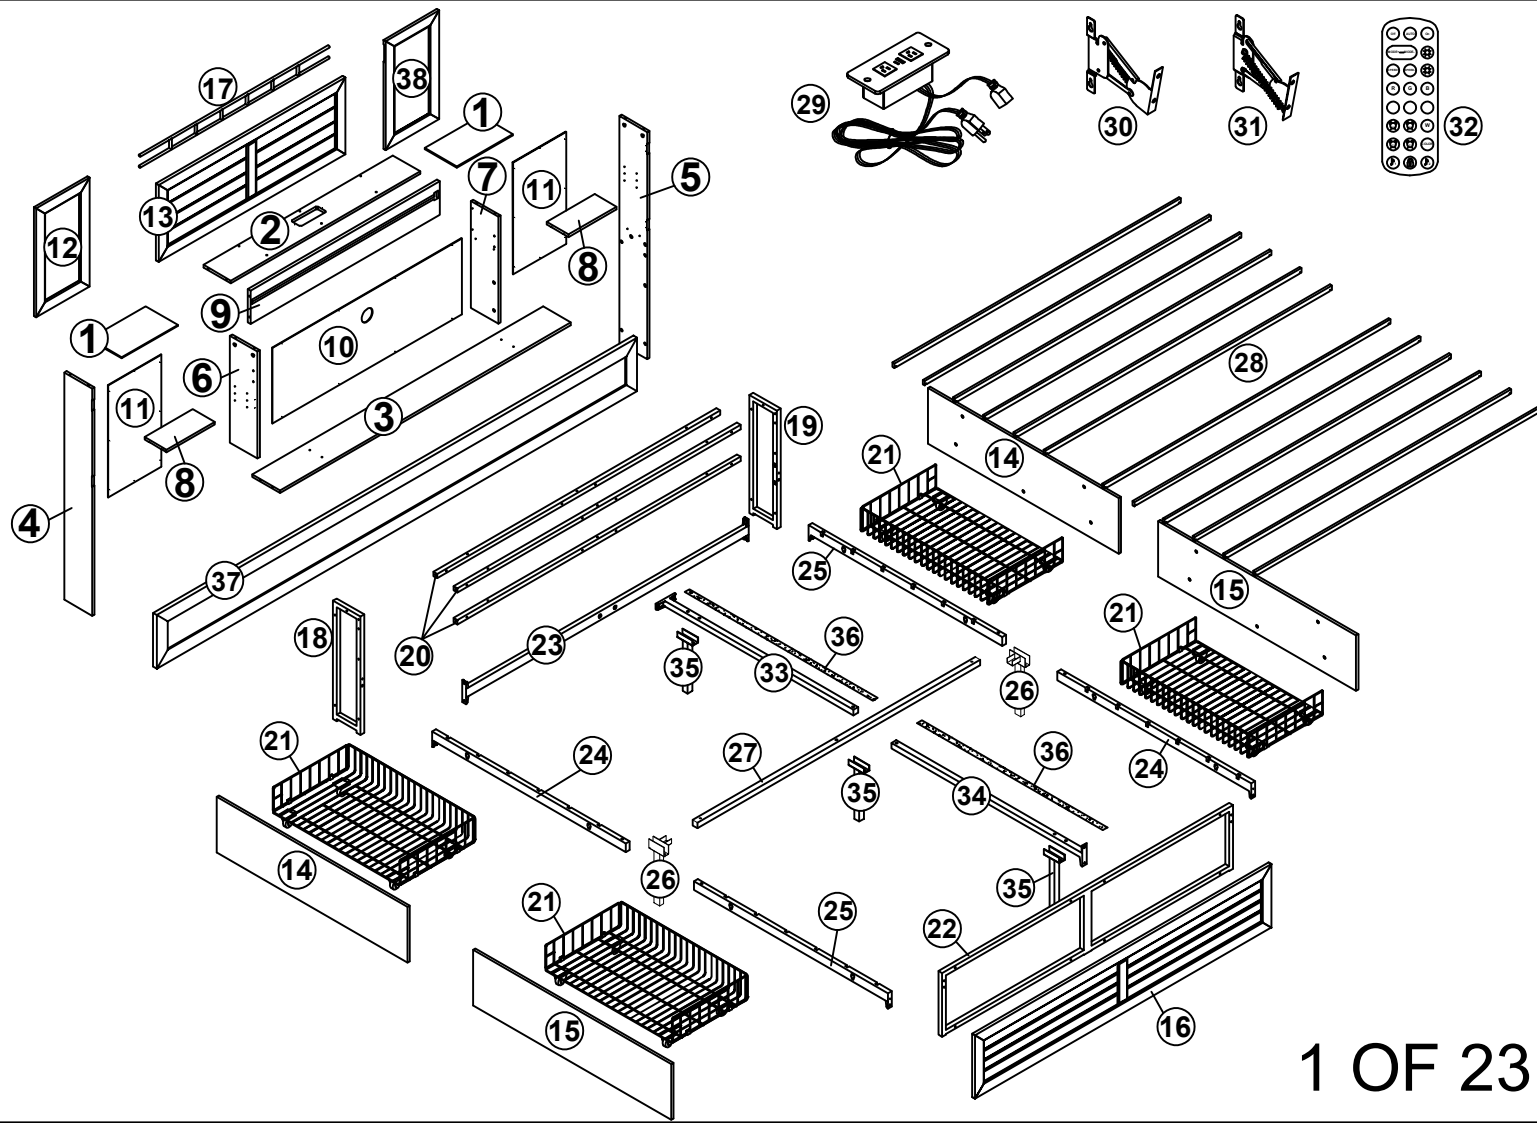







Part list for A box

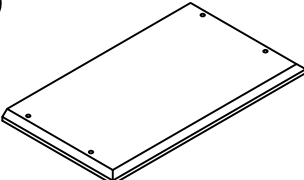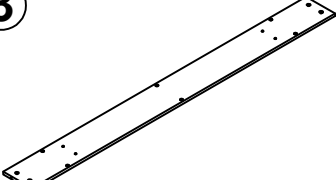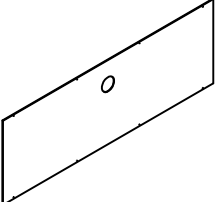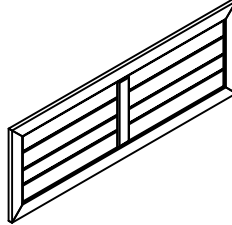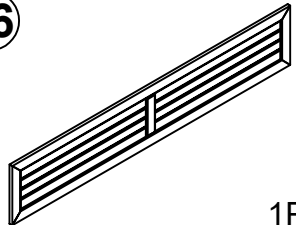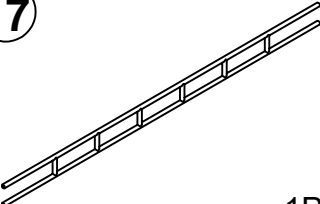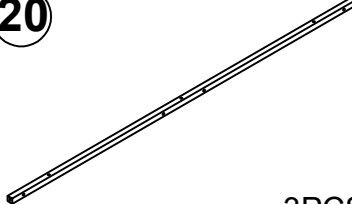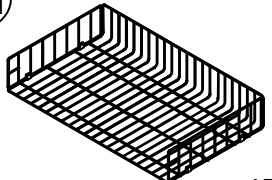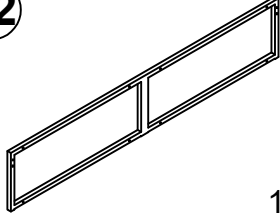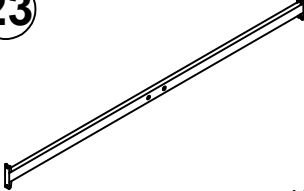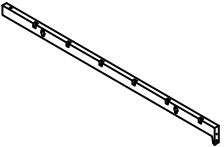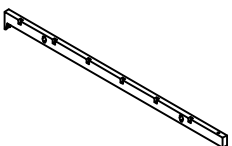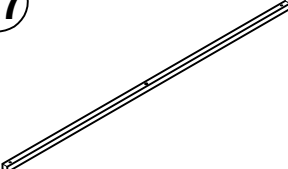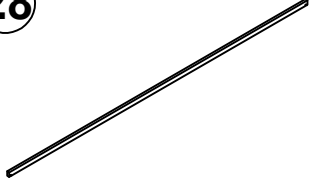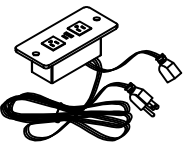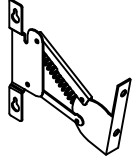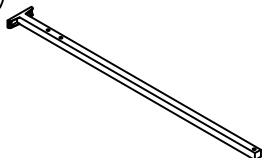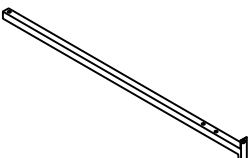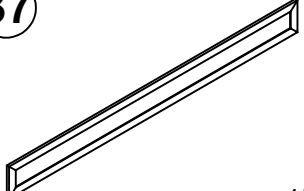1  2PCS	3  1PC	4  1PC	5  1PC
10  1PC	11  2PCS	13  1PC	16  1PC
17  1PC	18  1PC	19  1PC	20  3PCS
21  4PCS	22  1PC	23  1PC	24  2PCS
25  2PCS	26  2PCS	27  1PC	28  12PCS
29  1PC	30  1PC	31  1PC	32  1PC
33  1PC	34  1PC	35  3PCS	36  990mm 2PCS
37  1PC			

Part list for B box

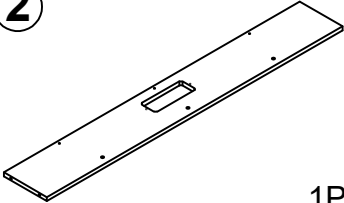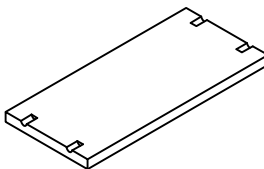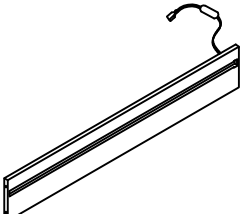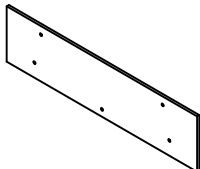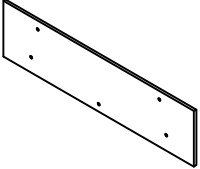
2  1PC	6  1PC	7  1PC	8  2PCS
9  1PC	12  1PC	14  2PCS	15  2PCS
38  1PC			

Hardware list for A box

A  2PCS	B M3x14  4PCS	C M5x40  7PCS	D  20+2PCS	E  20+2PCS
F M6x40  10+1PCS	G M6x28  31+3PCS	H M6x18  7PCS	I  8PCS	J M3.5x12  44+4PCS
K  2PCS	L  4PCS	M M6x10  20+2PCS	N  16PCS	O  8PCS
P  12PCS	Q M8x16  8PCS	R M8x55  5PCS	S M6x20  4PCS	T M8x35  8PCS
U  8PCS	V  24+3PCS	W  M4 1PC	X  M5 1PC	Y  M4 1PC

Step 1


F		M6x40	6PCS
W		M4	1PC

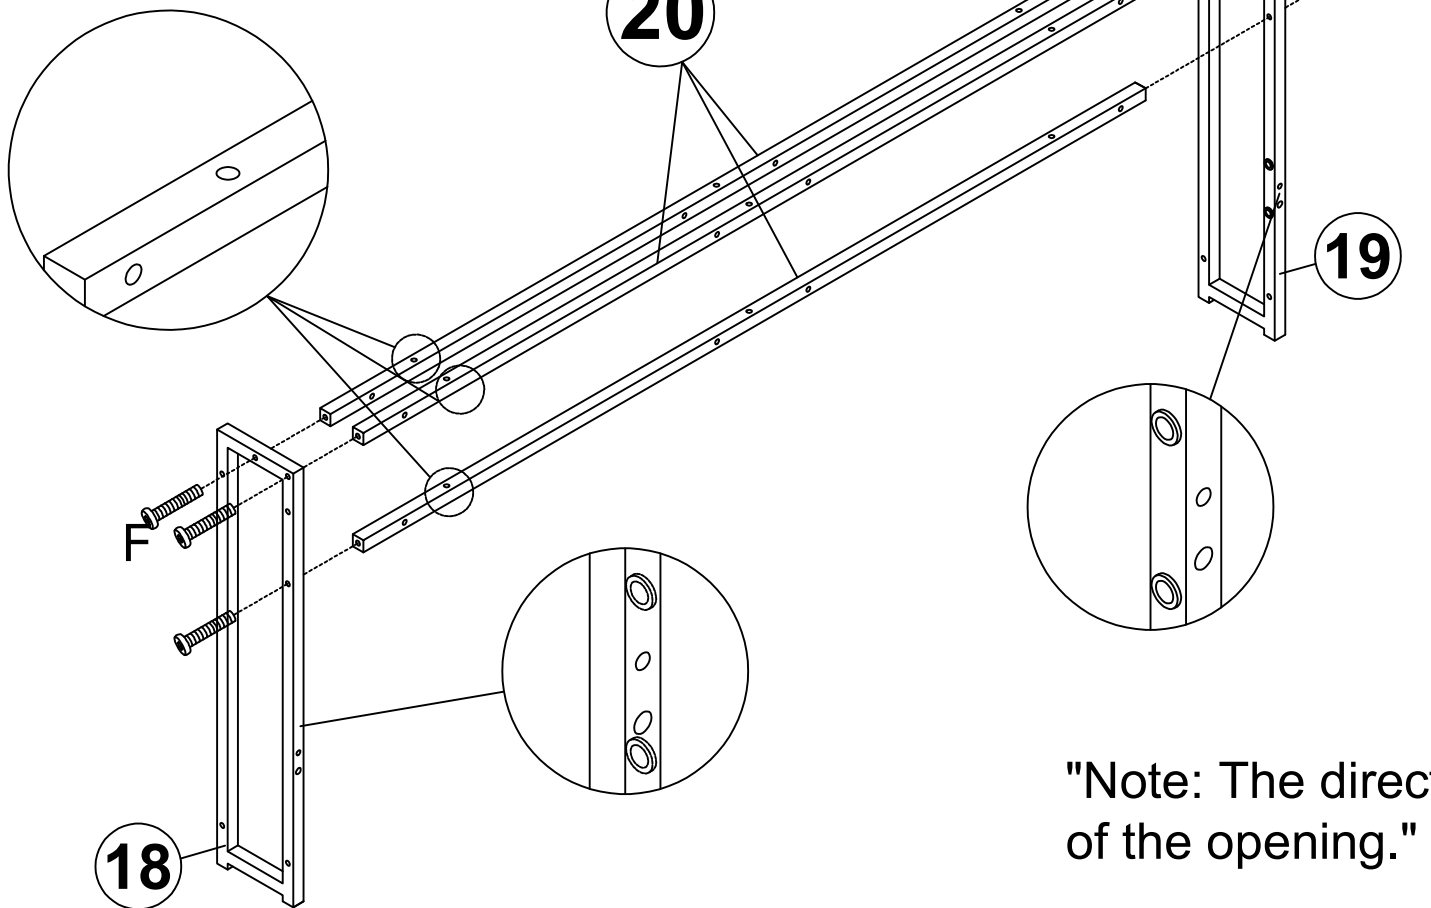


"Note: The direction of the opening."

Step 2


Q		M8x16	4PCS
X		M5	1PC

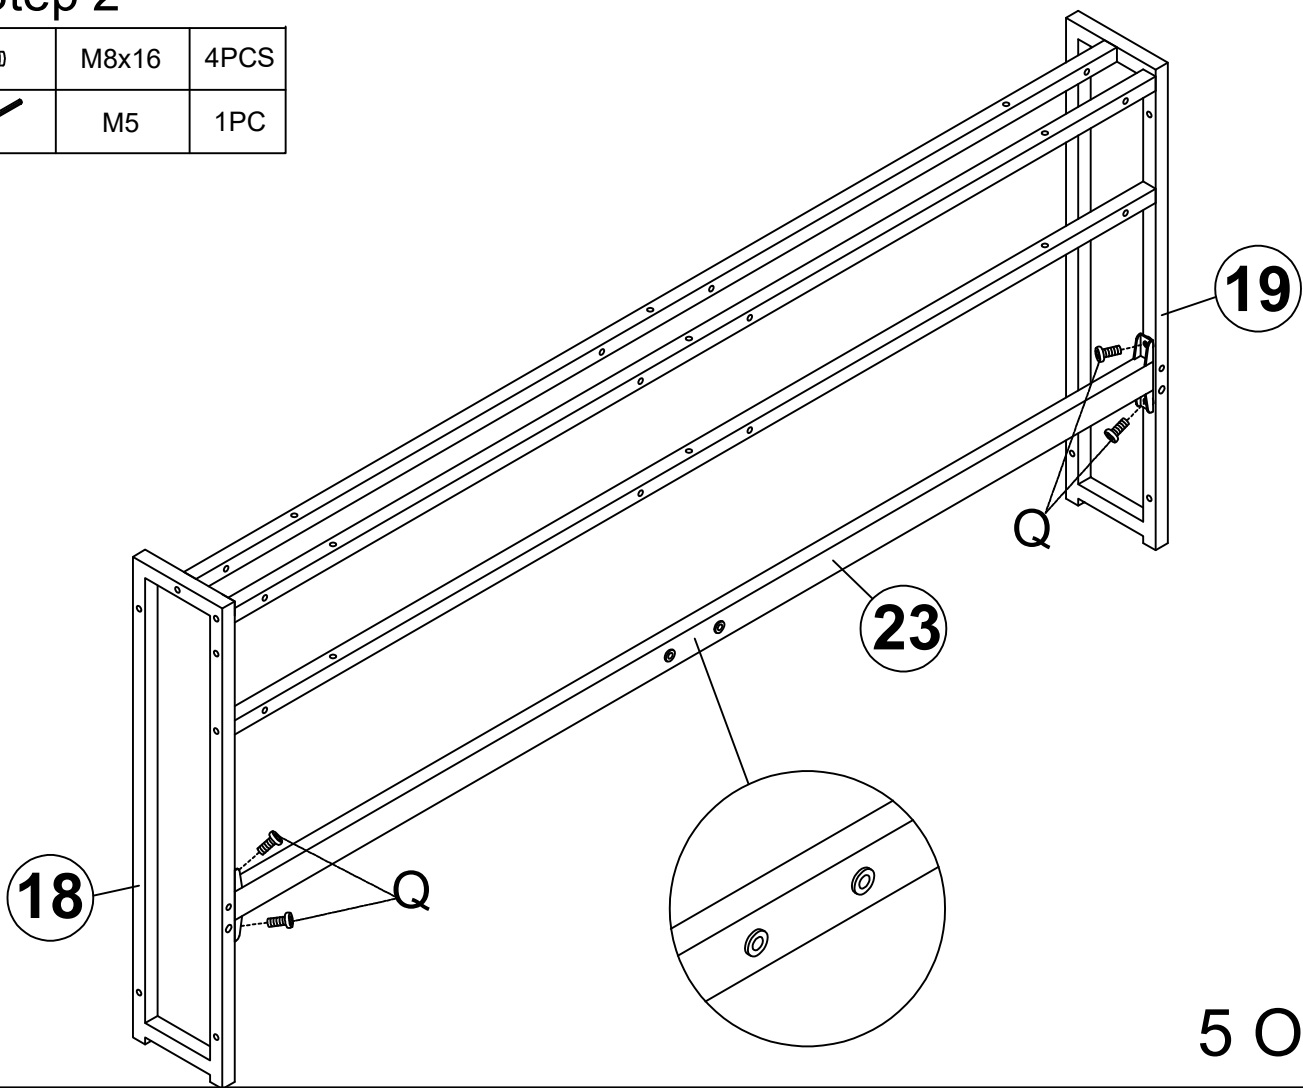



Step 3

R		M8x55	4PCS
X		M5	1PC


X2

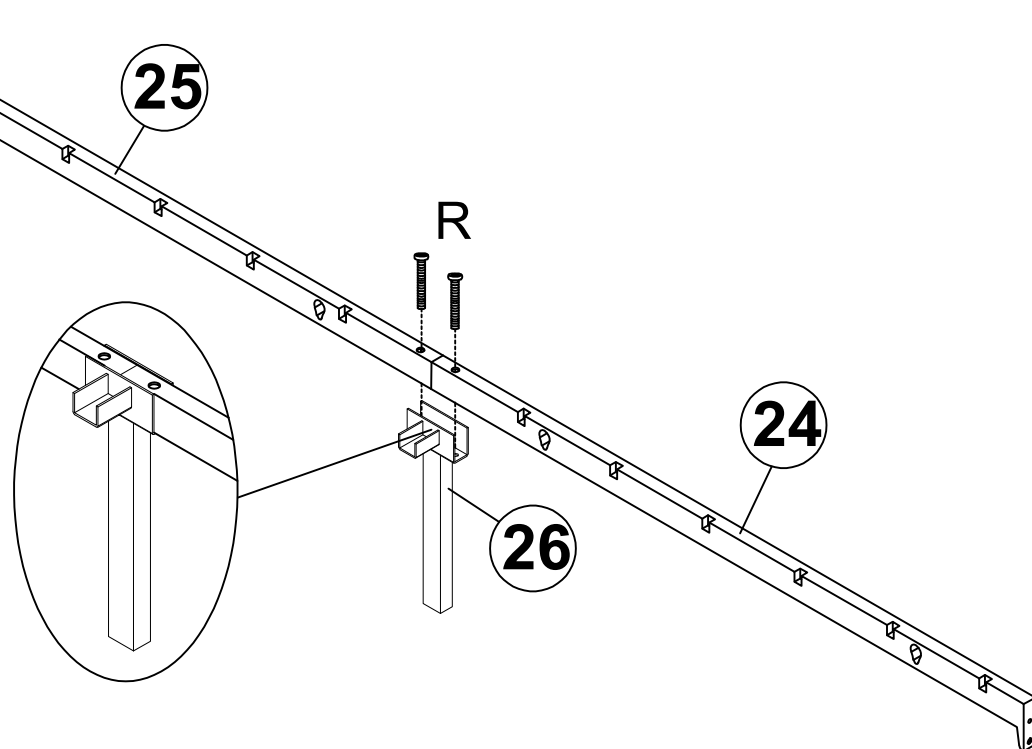

Step 4


F		M6x40	2PCS
H		M6x18	2PCS
S		M6x20	2PCS
W		M4	1PC
Y		M4	1PC

"Note: Make sure to follow the correct installation direction for parts."

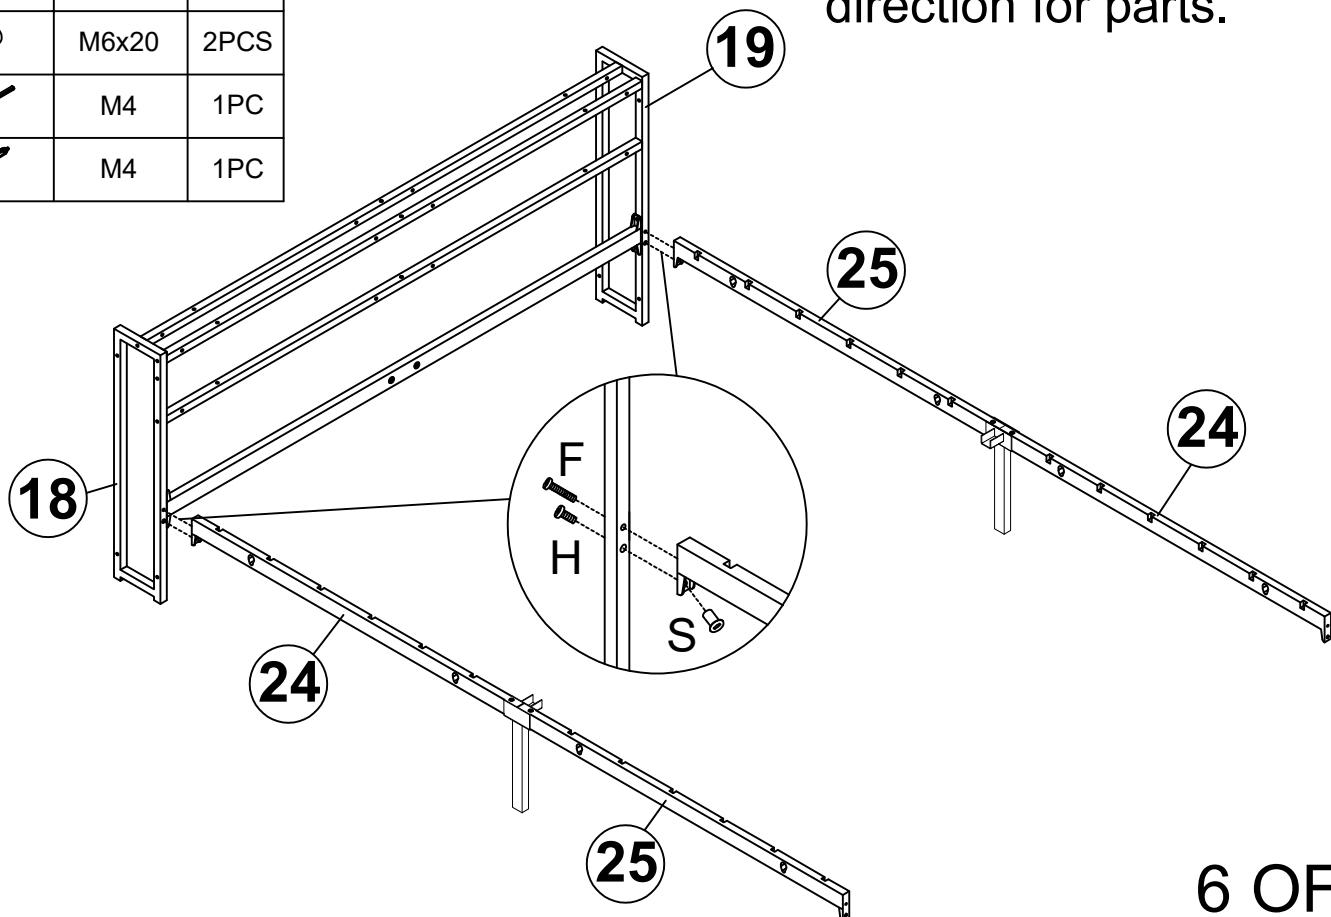


Step 5

F		M6x40	2PCS
H		M6x18	2PCS
S		M6x20	2PCS
W		M4	1PC
Y		M4	1PC

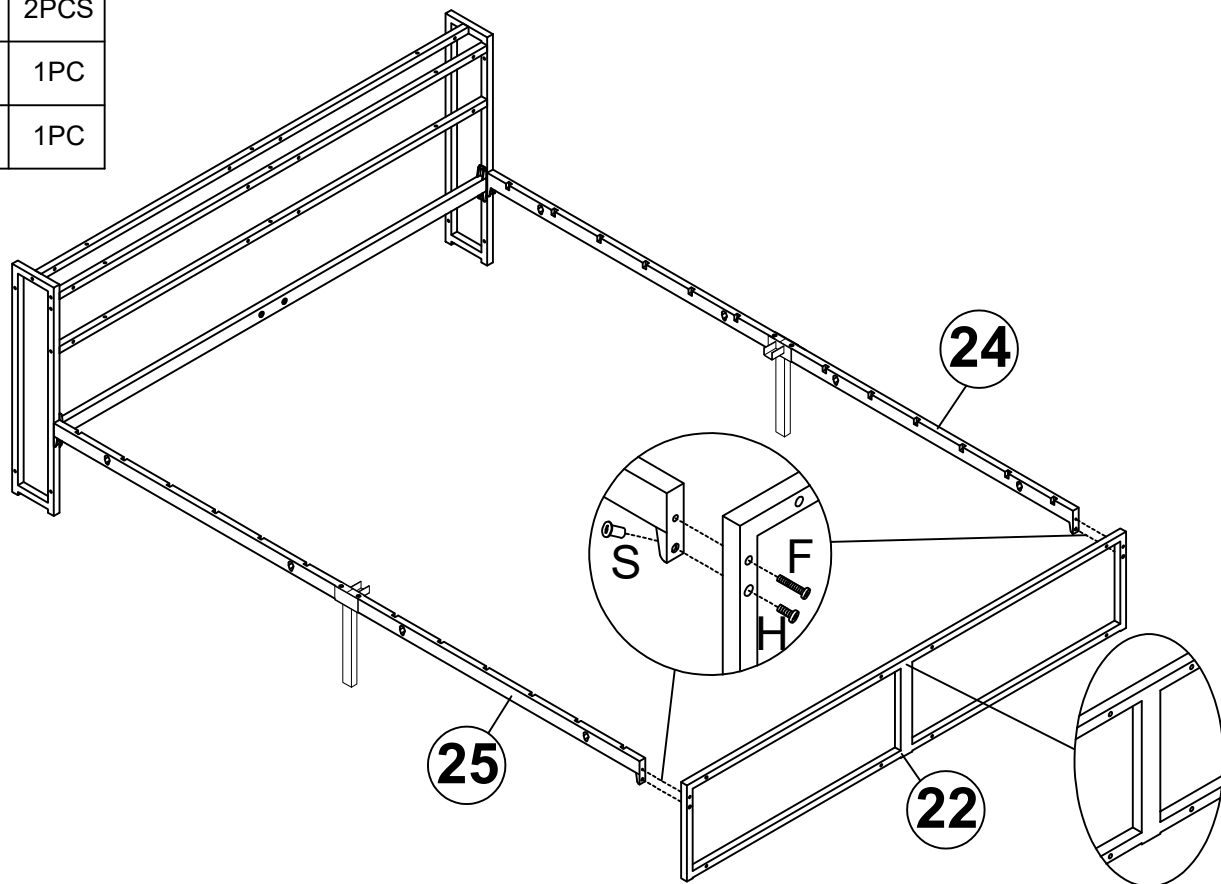


Step 6

Q		M8x16	2PCS
T		M8x35	3PCS
X		M5	1PC

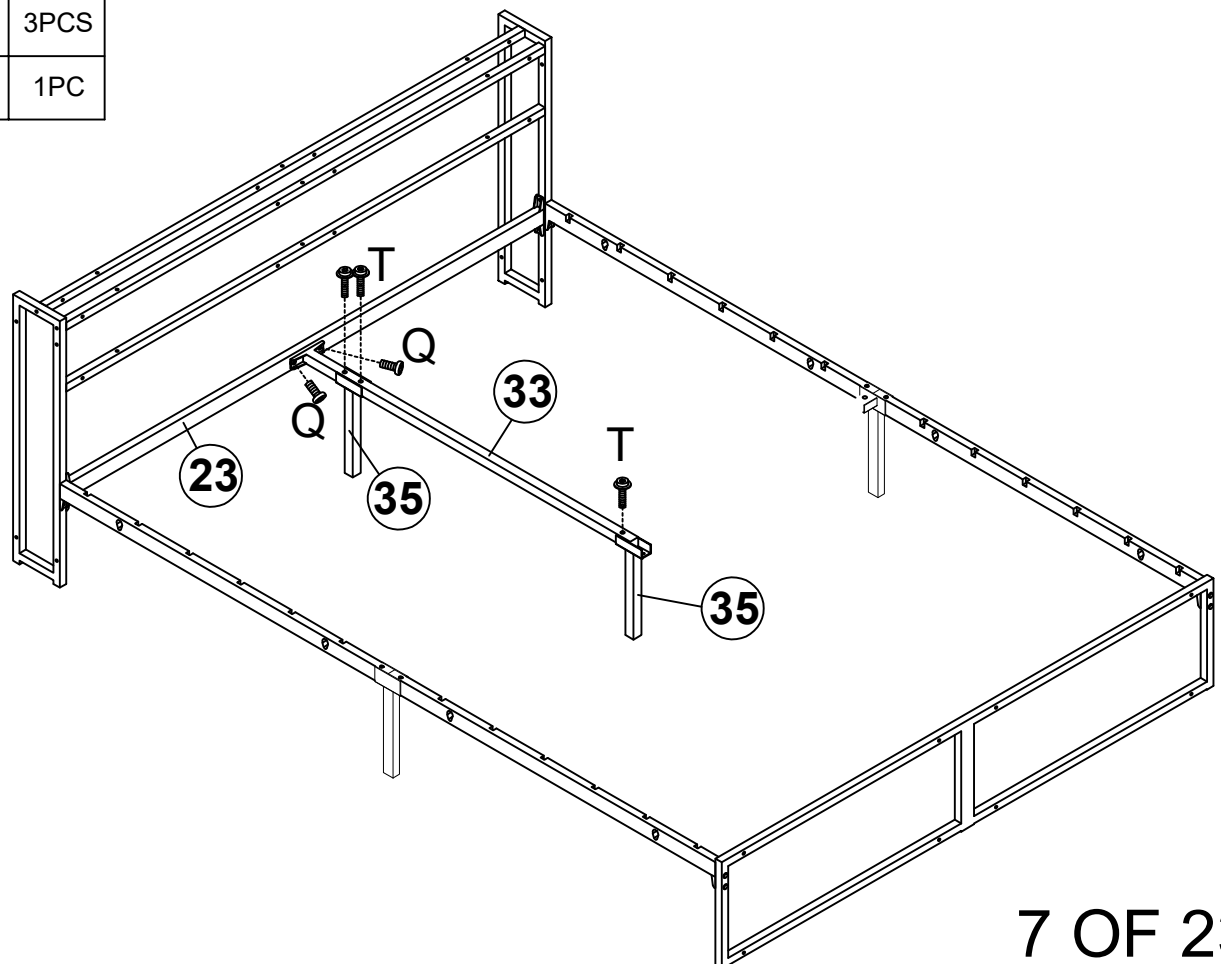



Step 7

Q		M8x16	2PCS
T		M8x35	3PCS
X		M5	1PC

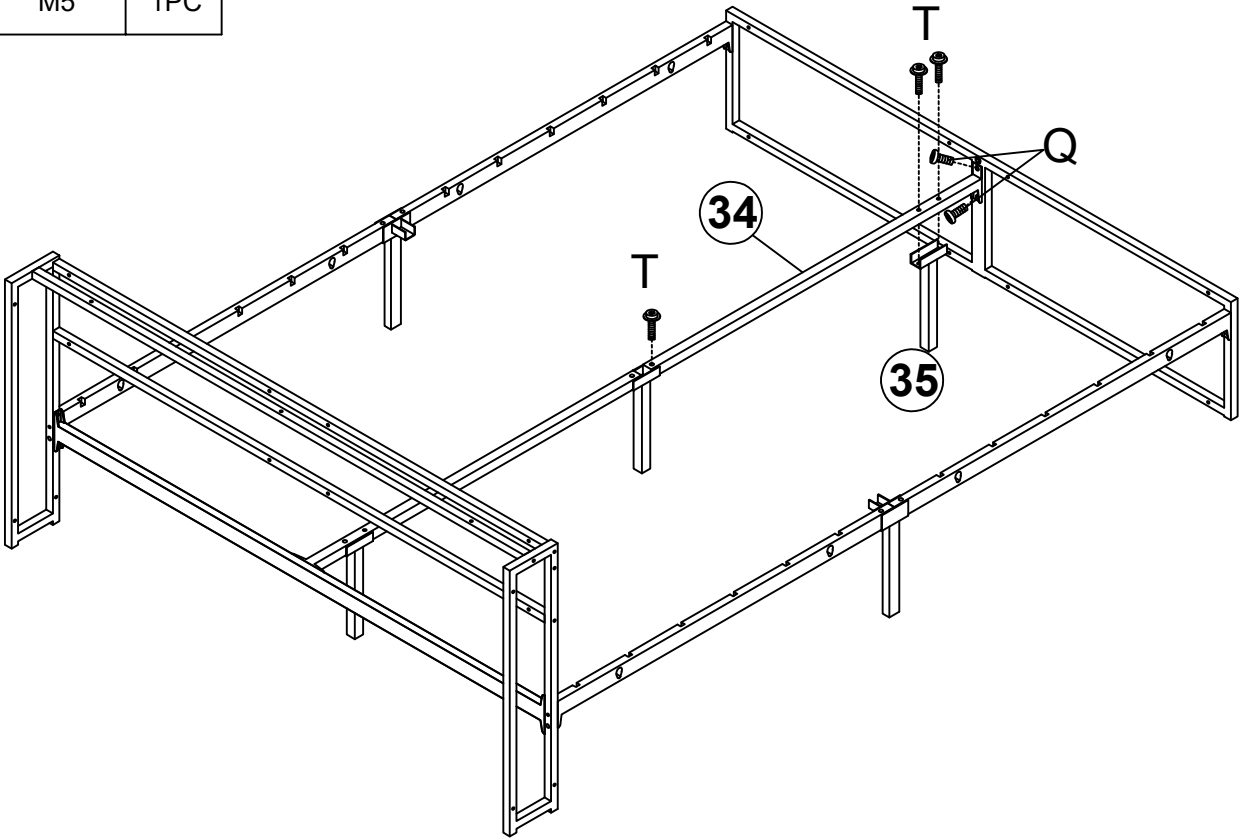


Step 8

R		M8x55	1PC
T		M8x35	2PCS
X		M5	1PC

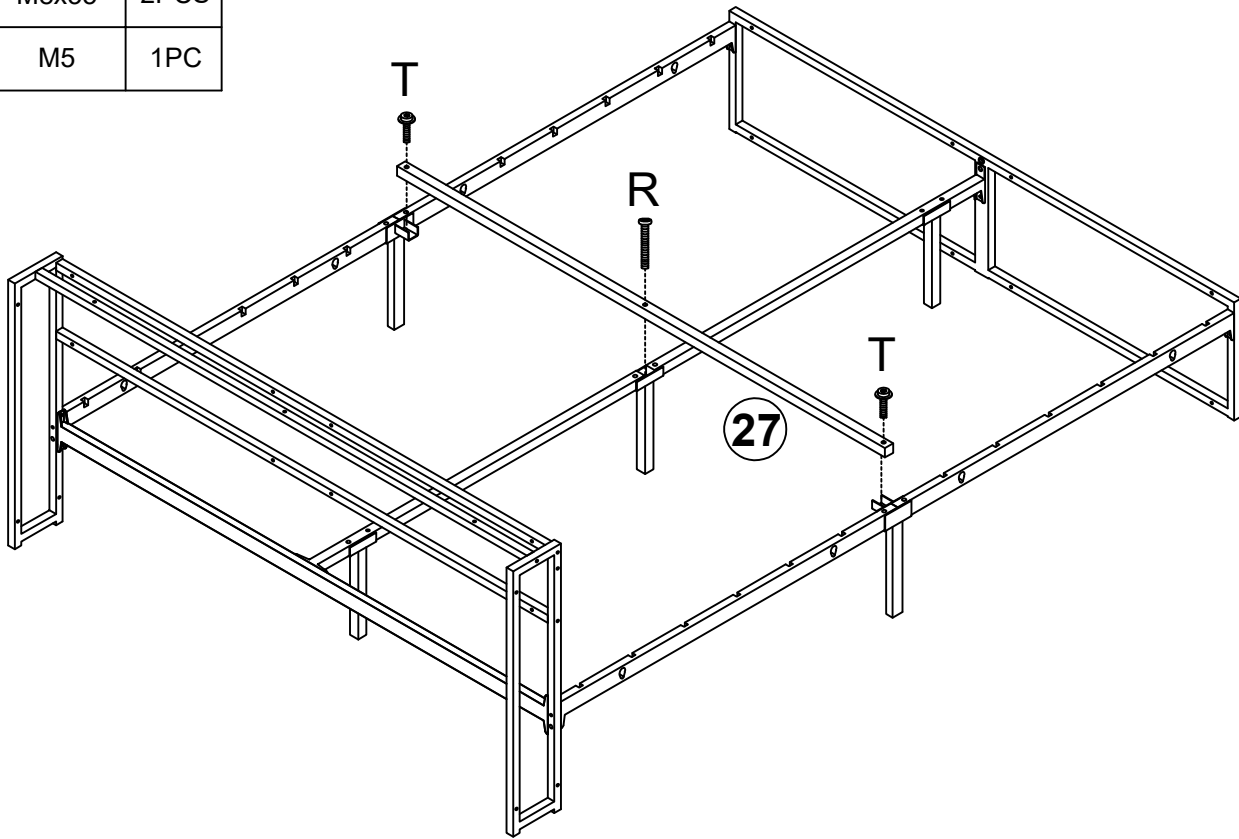


Step 9

G		M6x28	8PCS
W		M4	1PC

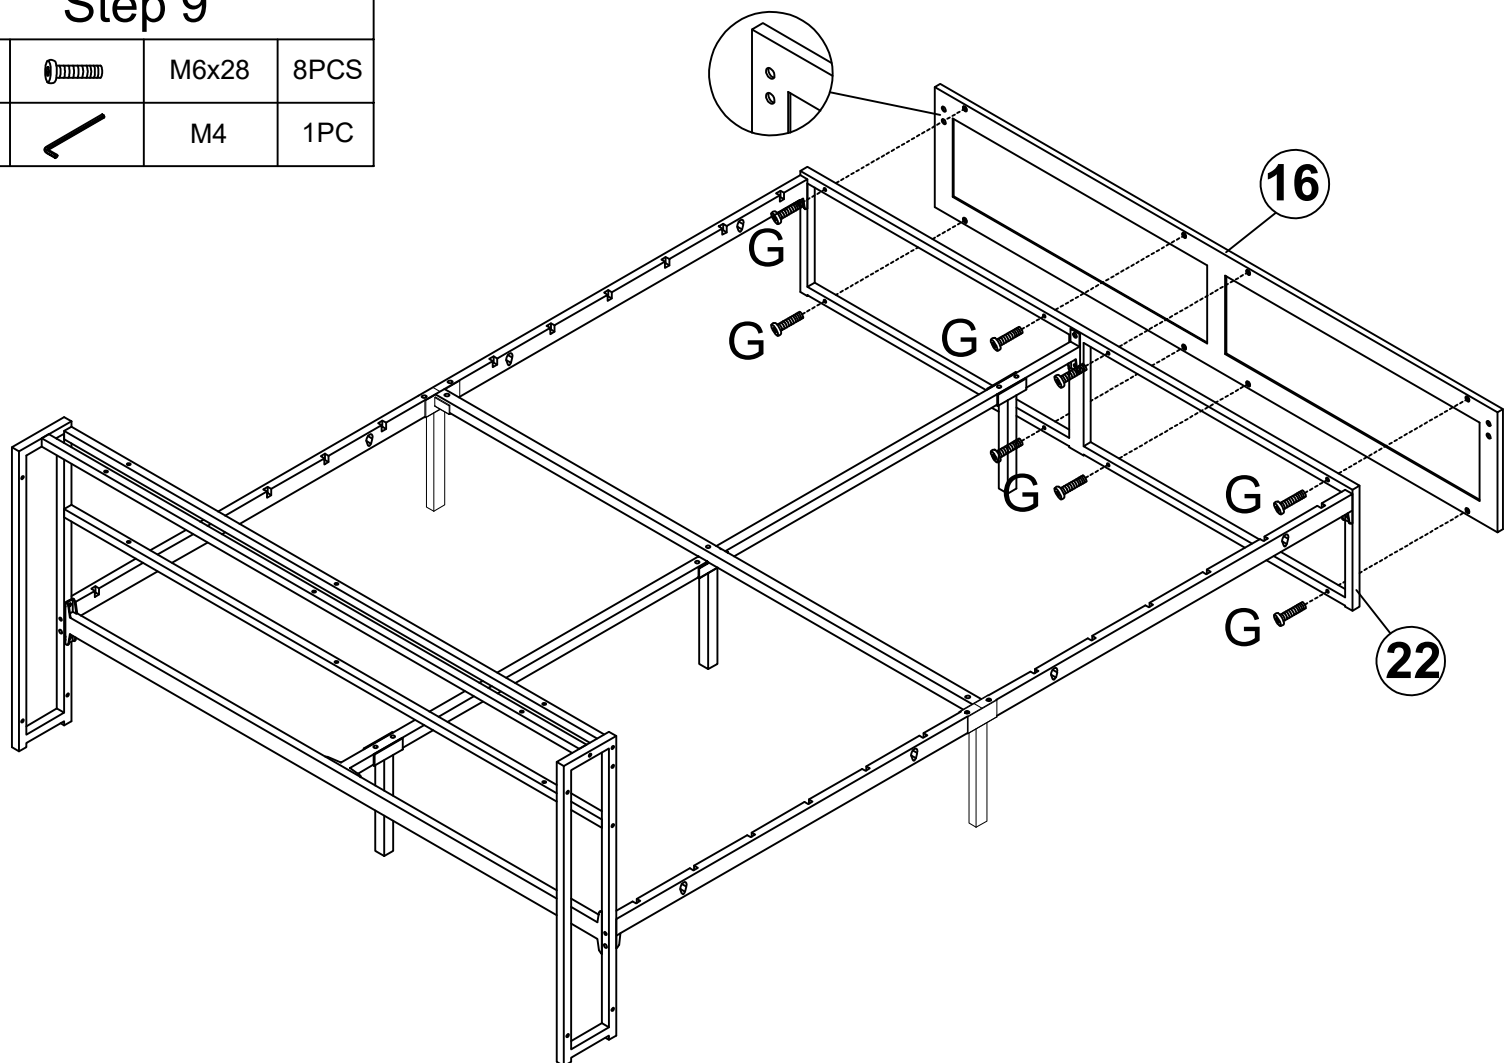


Step 10

C		M5x40	3PCS
Y		M4	1PC

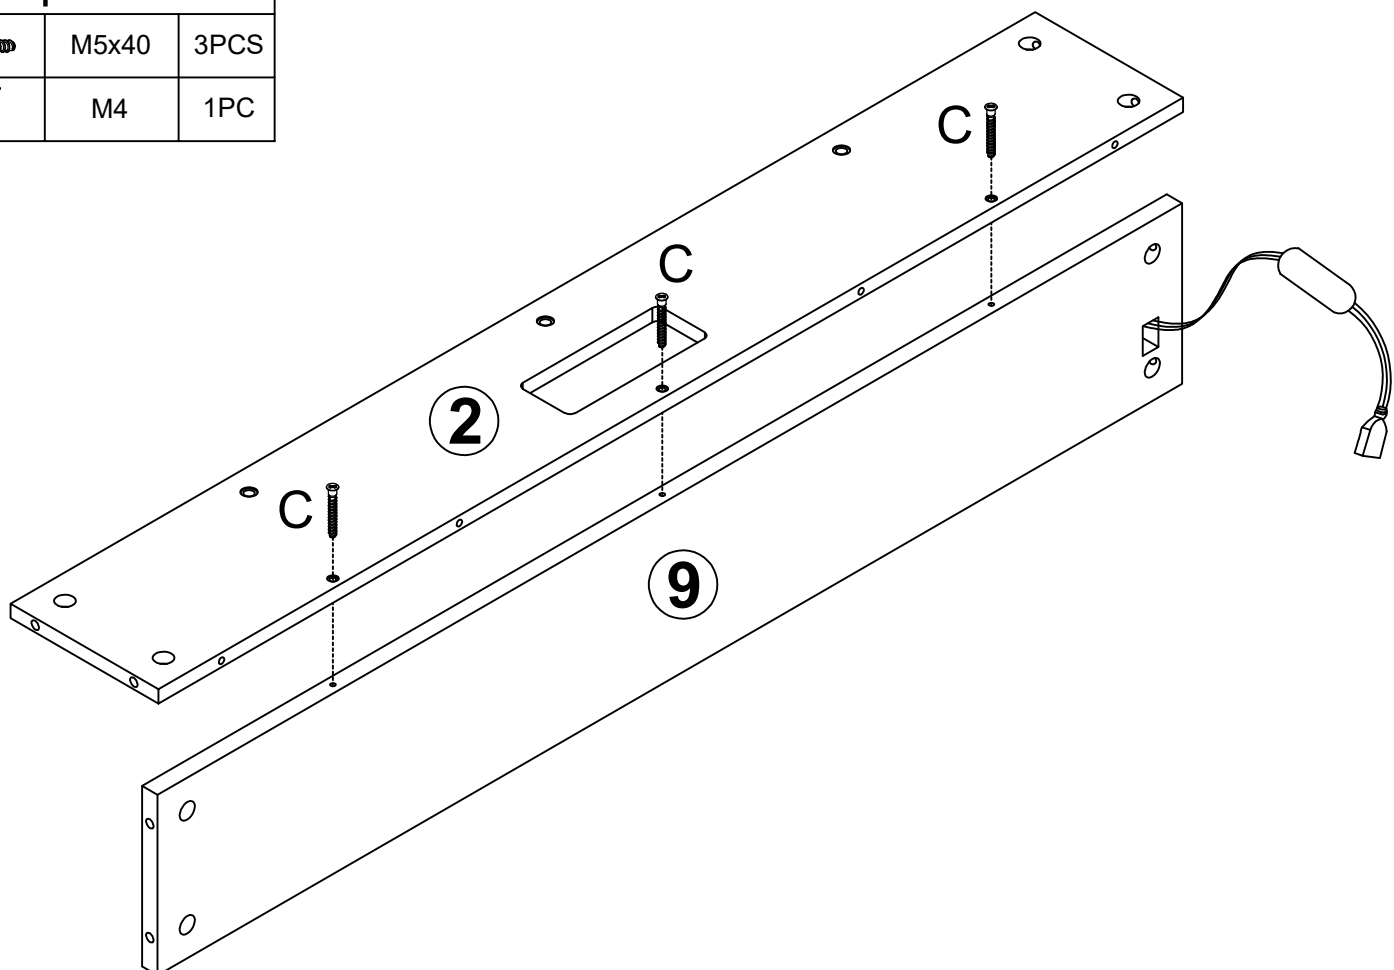


Step 11

H		M6x18	3PCS
W		M4	1PC

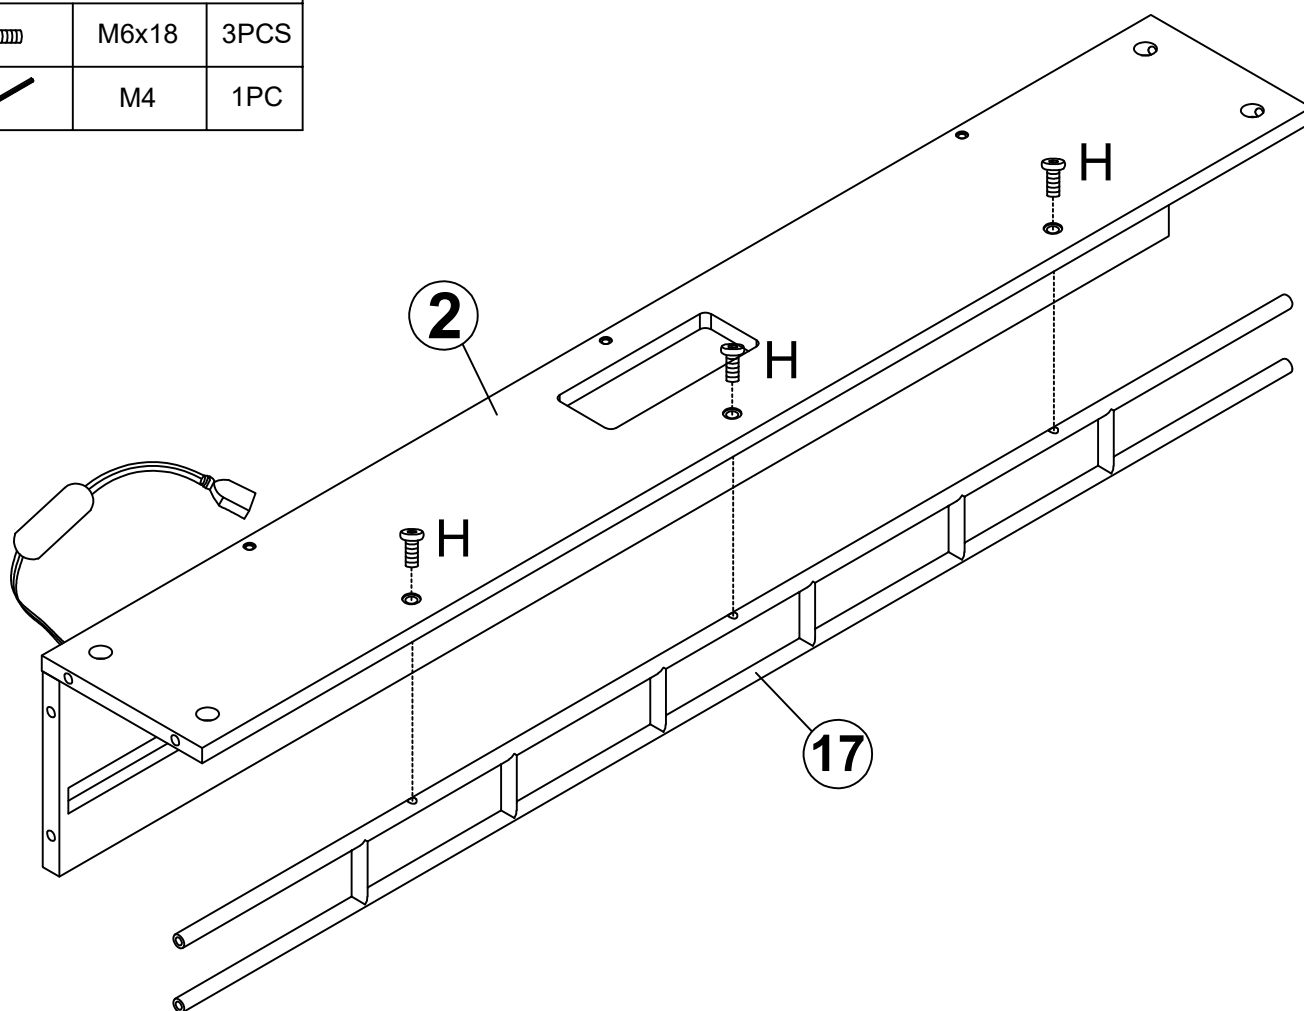


Step 12

A			2PCS
B		M3x14	4PCS
I			4PCS
Y		M4	1PC

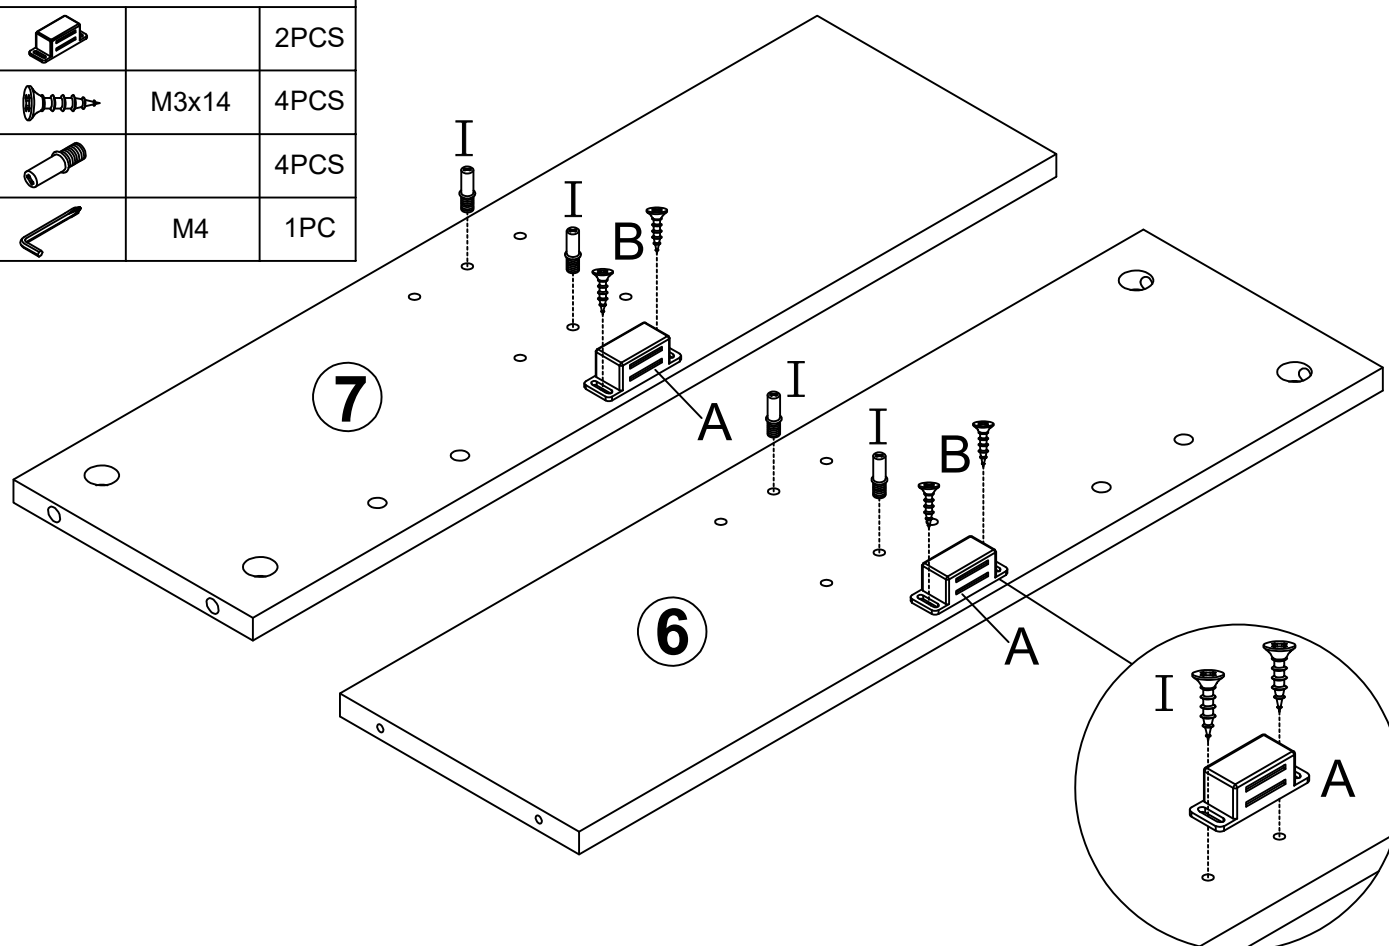


Step 13

D			8PCS
Y		M4	1PC

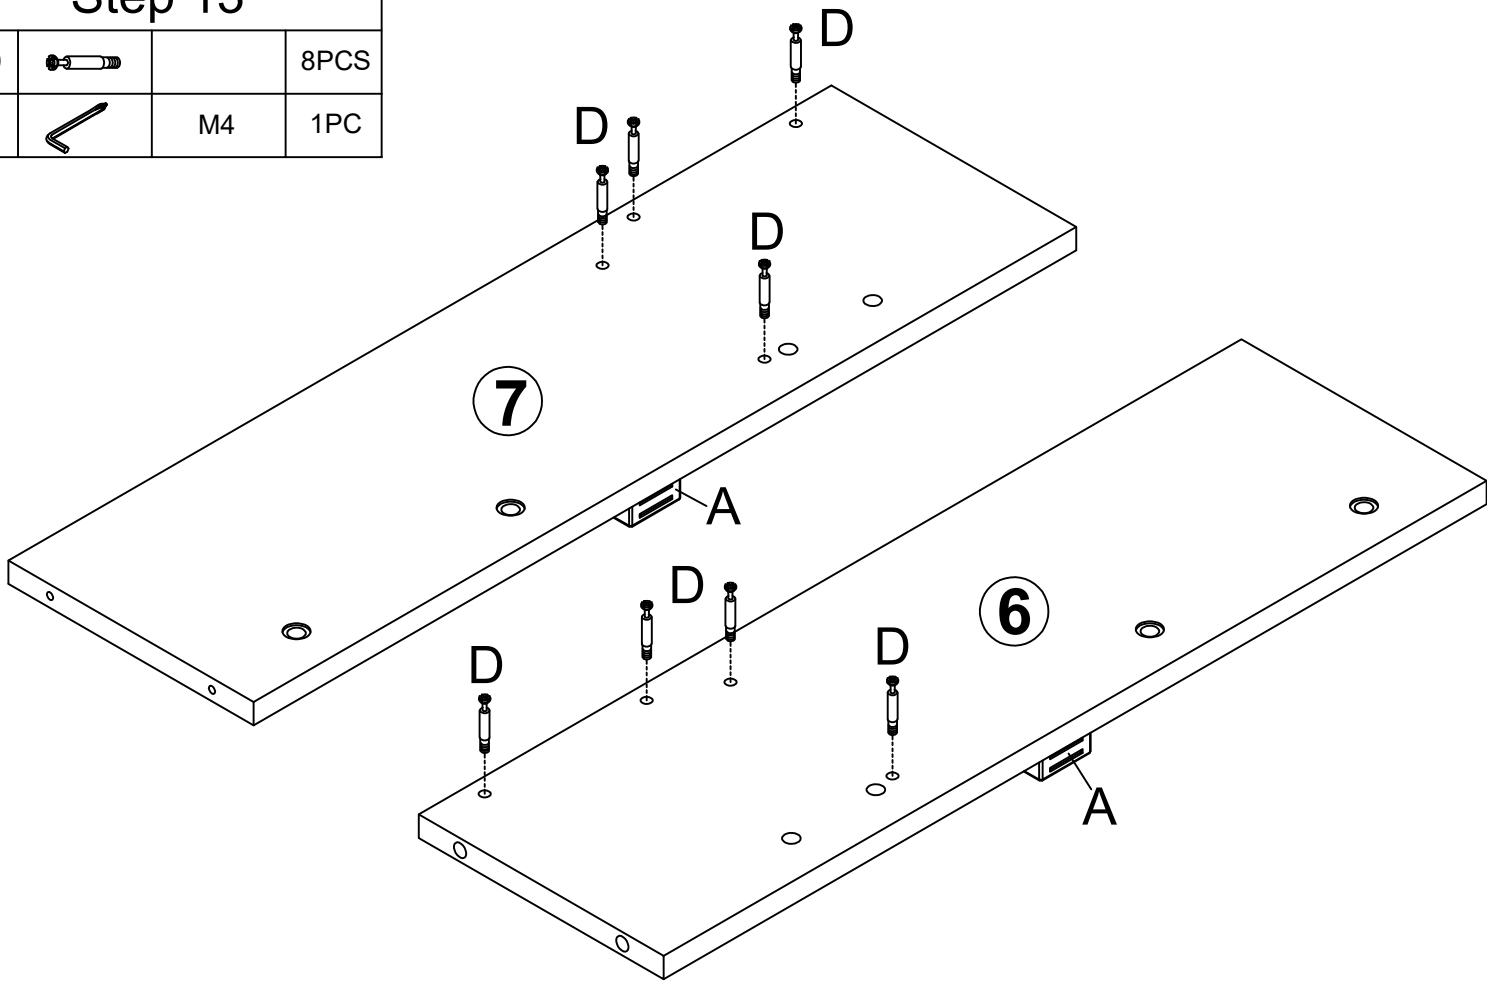


Step 14

E			8PCS
G		M6x28	4PCS
Y		M4	1PC

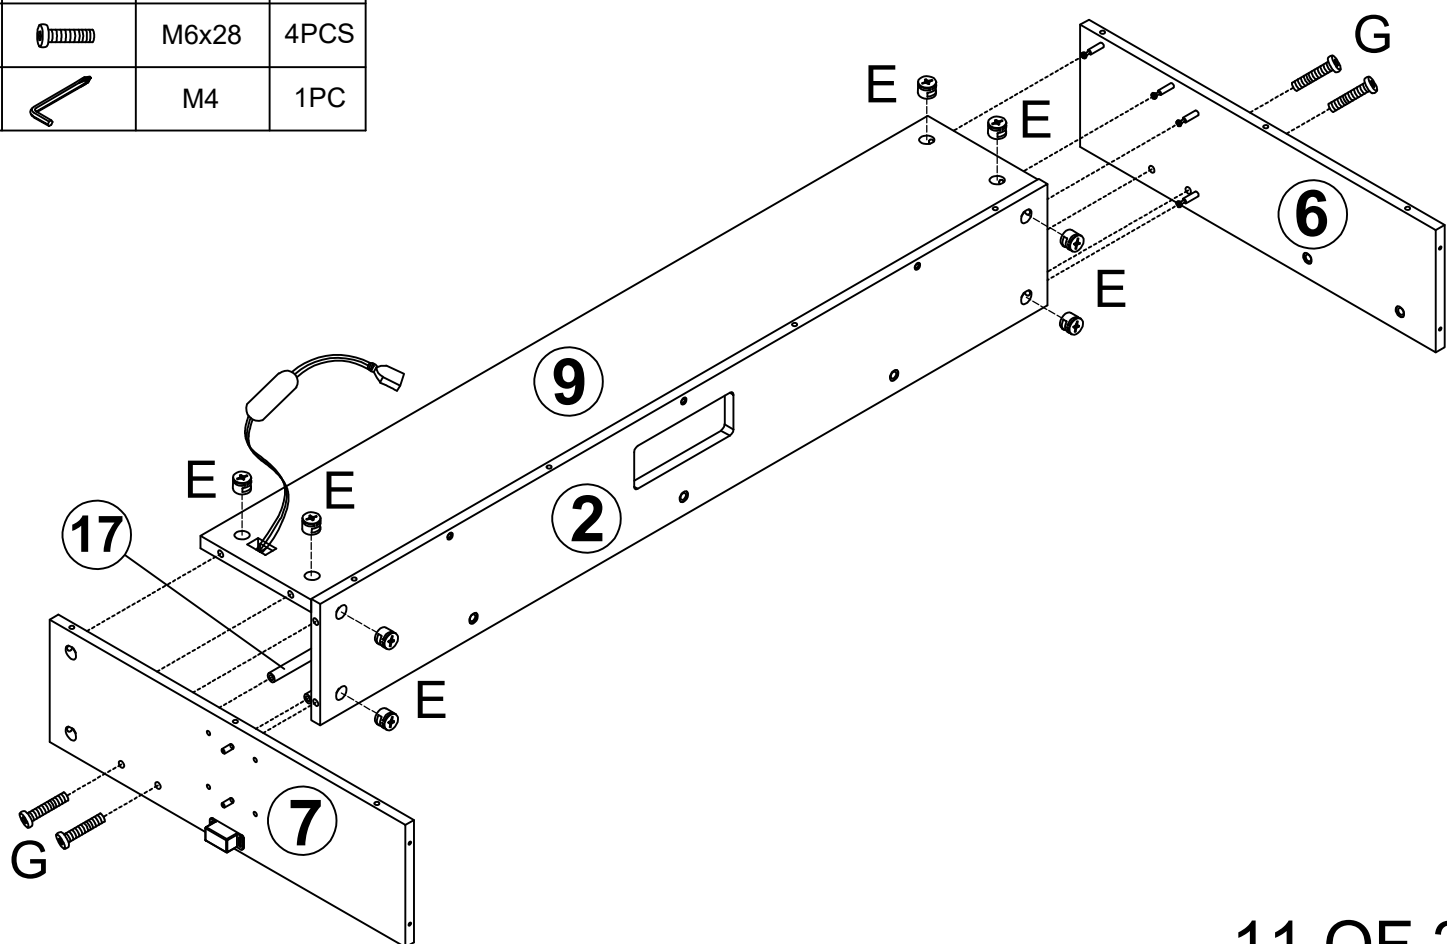


Step 15

C		M5x40	4PCS
Y		M4	1PC

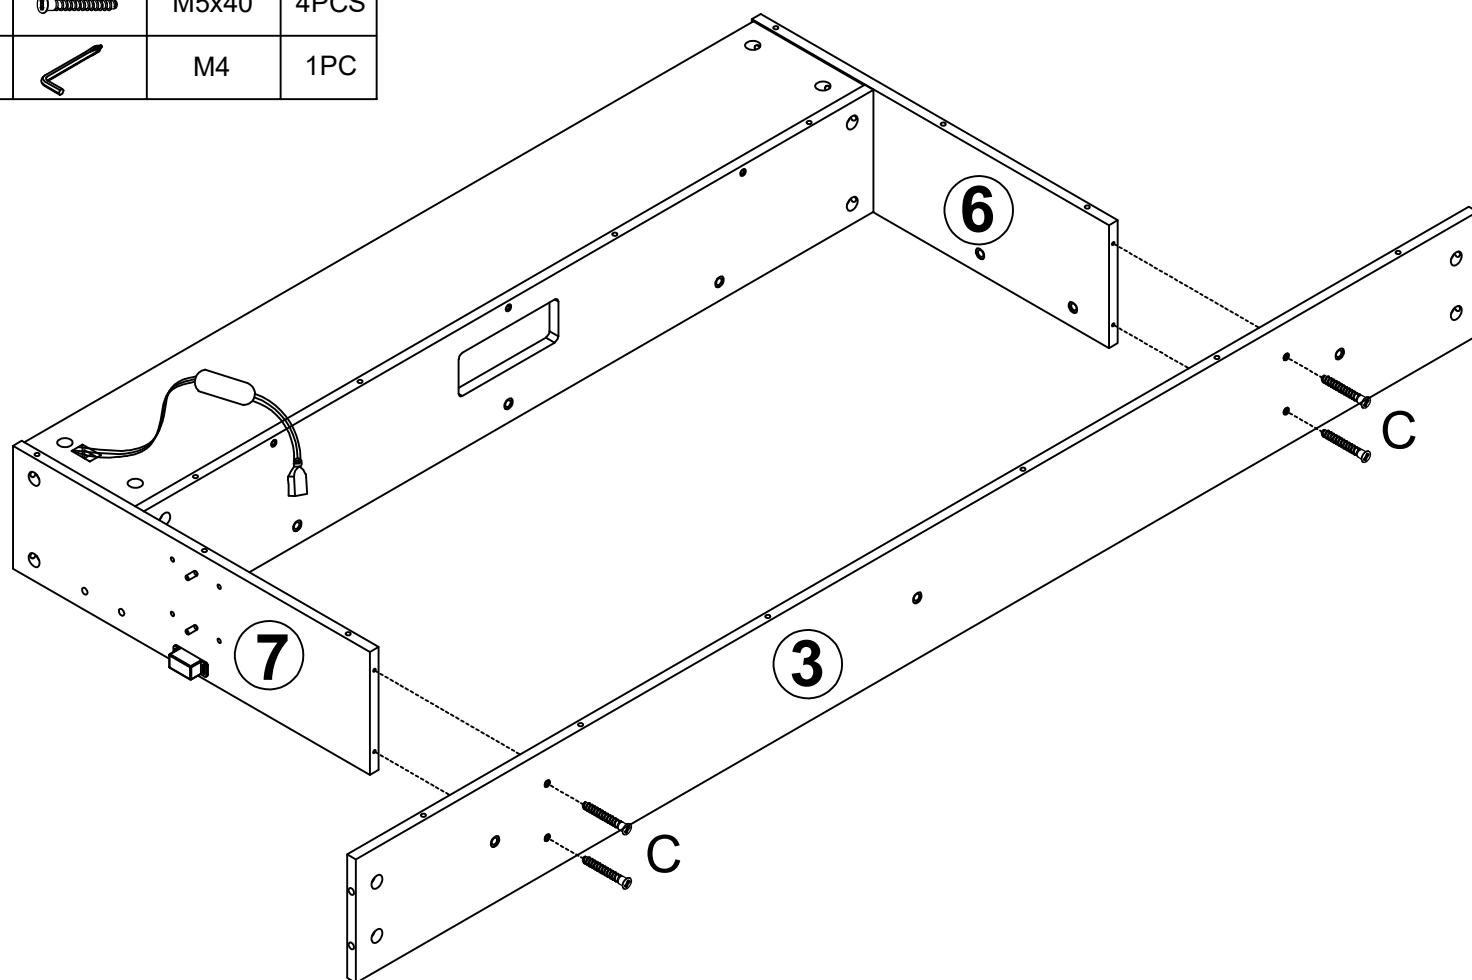


Step 16

G		M6x28	3PCS
W		M4	1PC

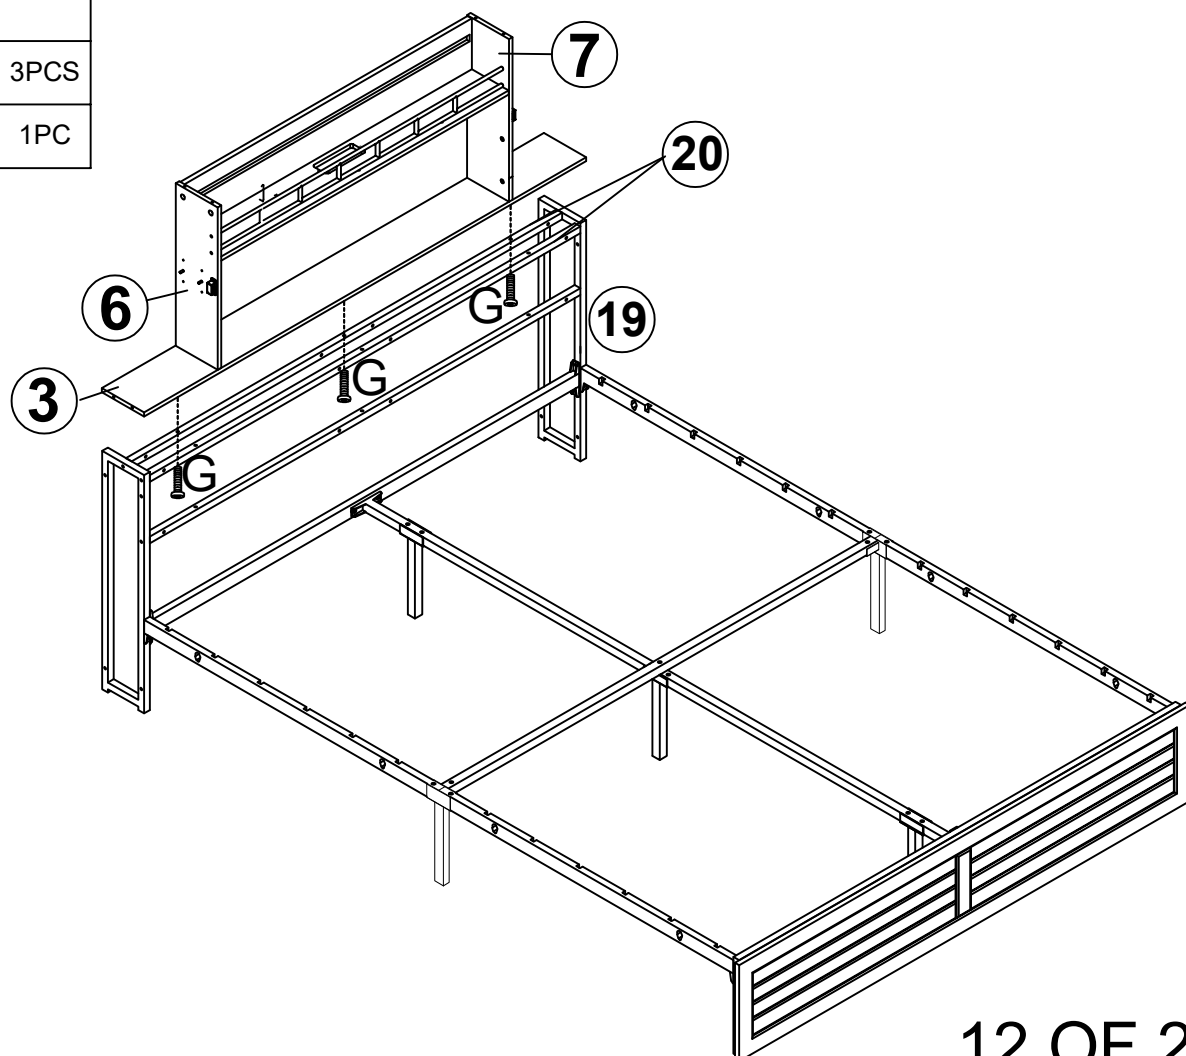


Step 17

D			4PCS
I			4PCS
Y		M4	1PC

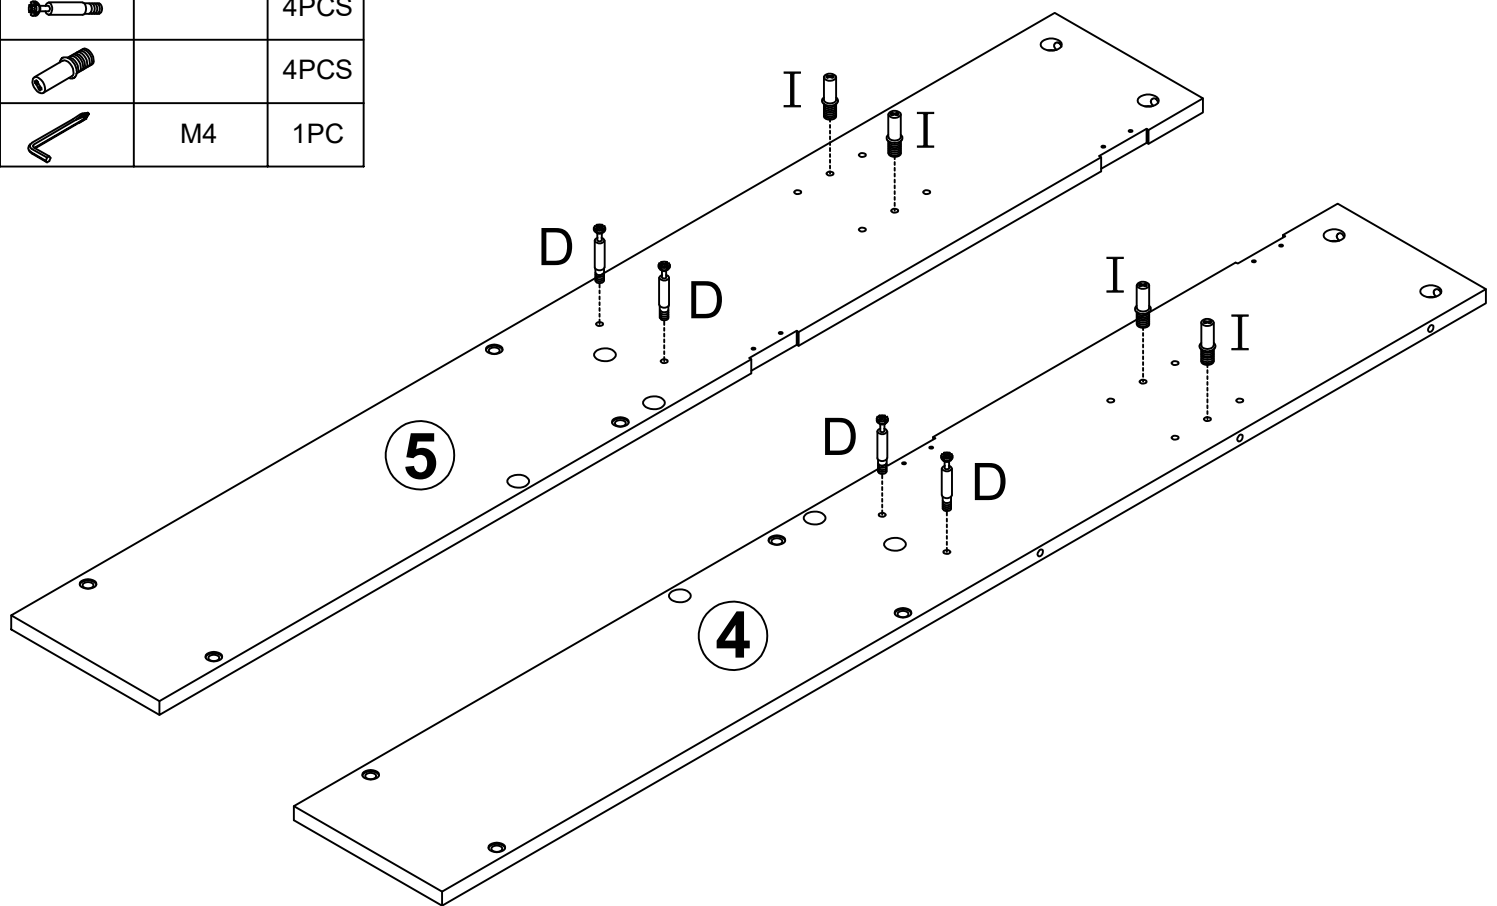

Step 18


E			4PCS
G		M6x28	8PCS
Y		M4	1PC

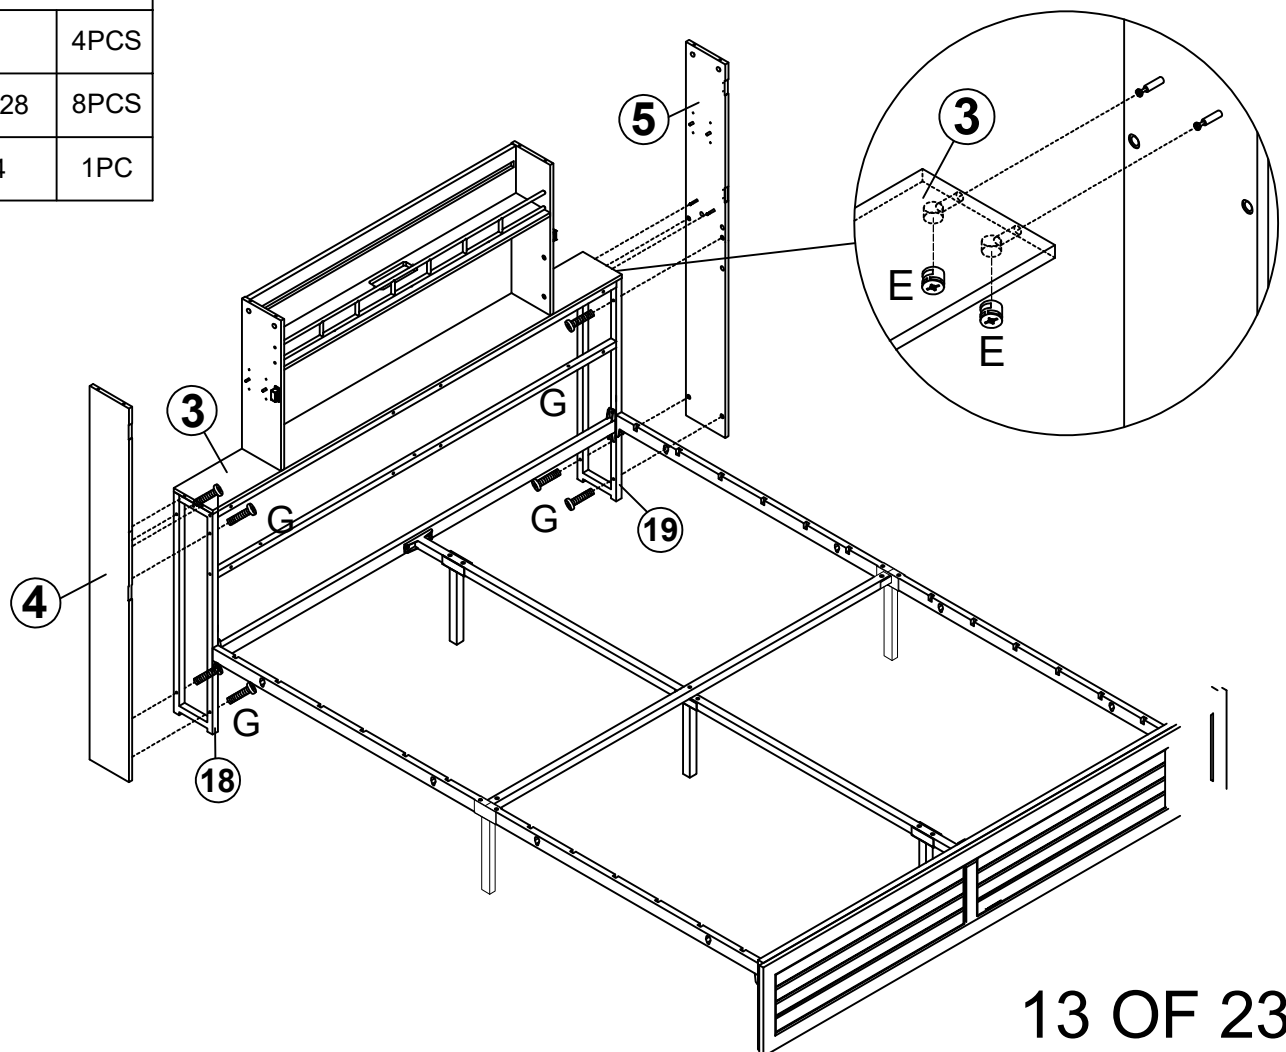

Step 19


D			8PCS
Y		M4	1PC

X2

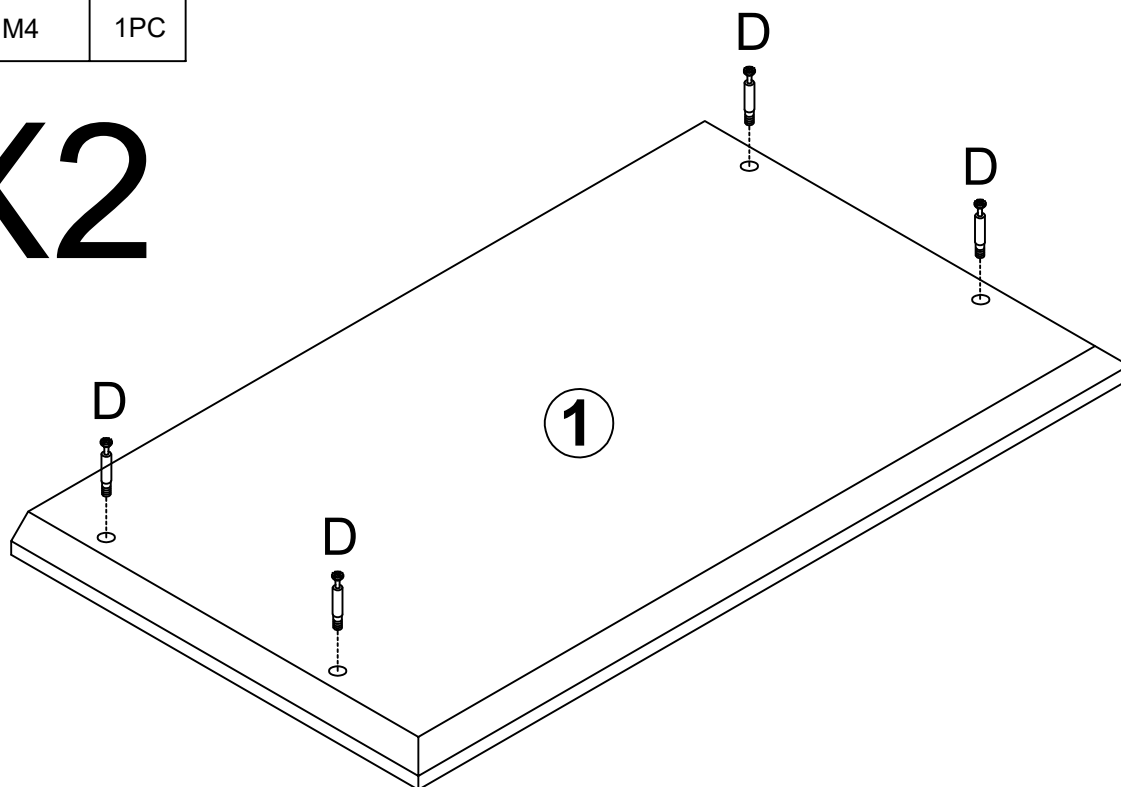


Step 20

E			8PCS
Y		M4	1PC

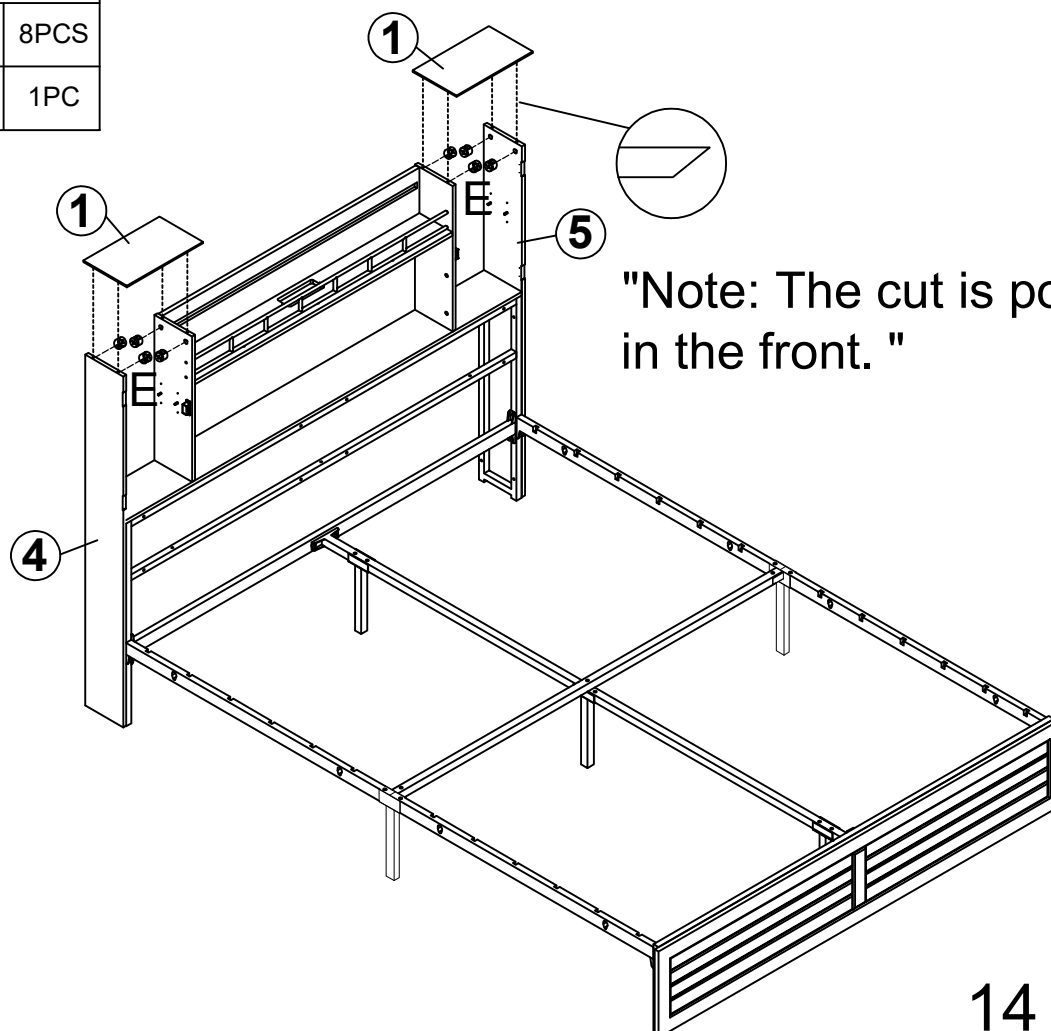


Step 21

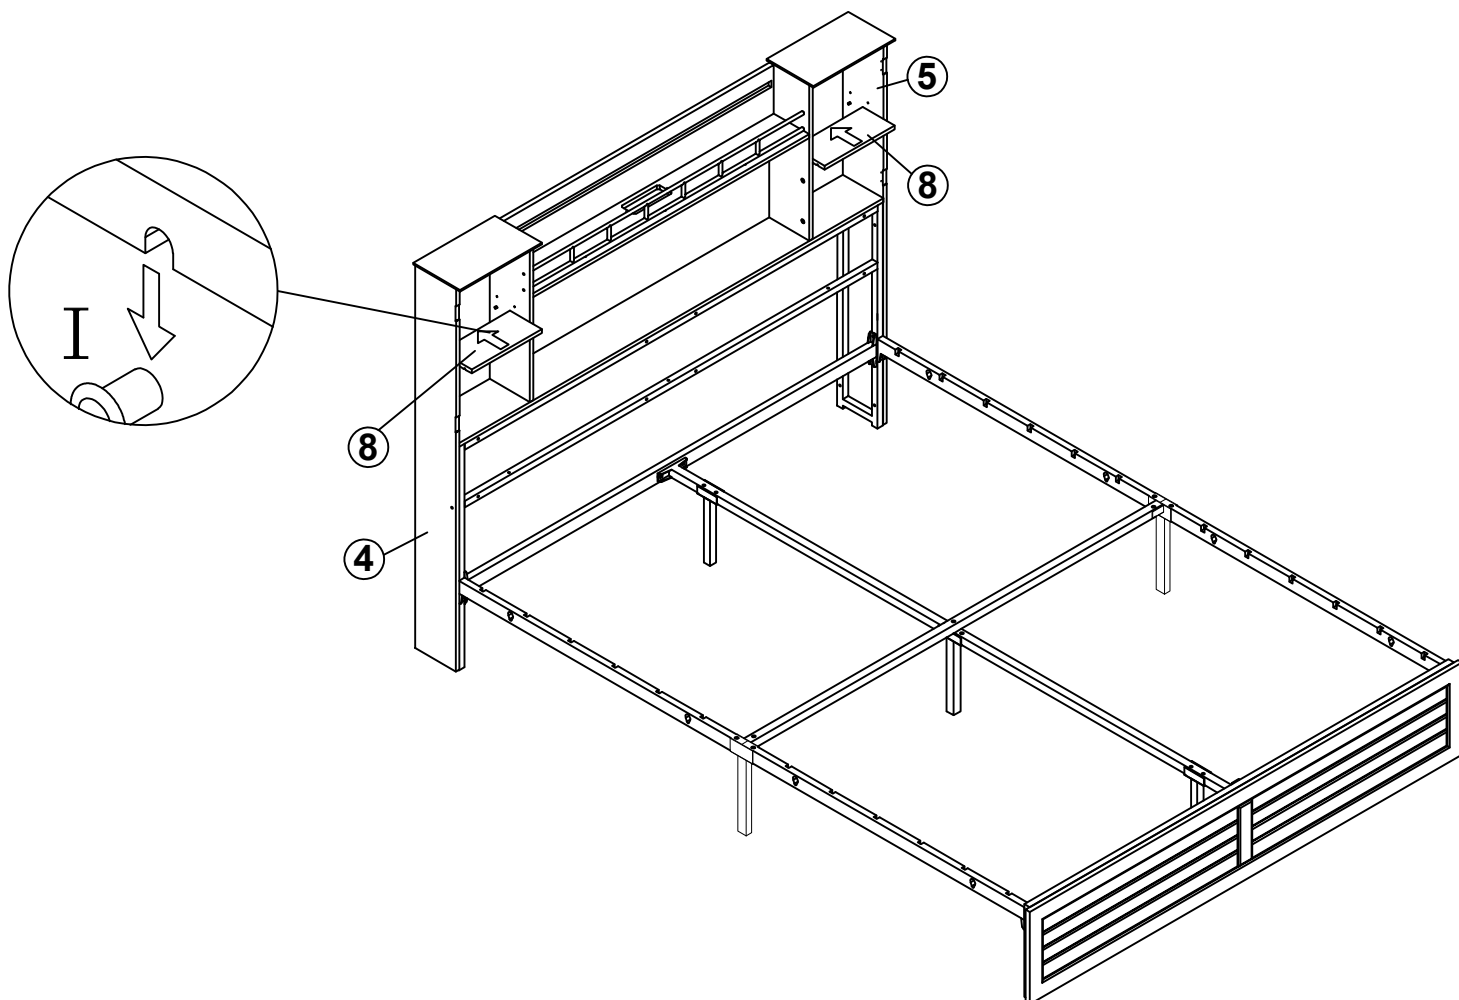

Step 22

M		M6x10	4PCS
W		M4	1PC



"Don't fully tighten the screws until the installation is complete."

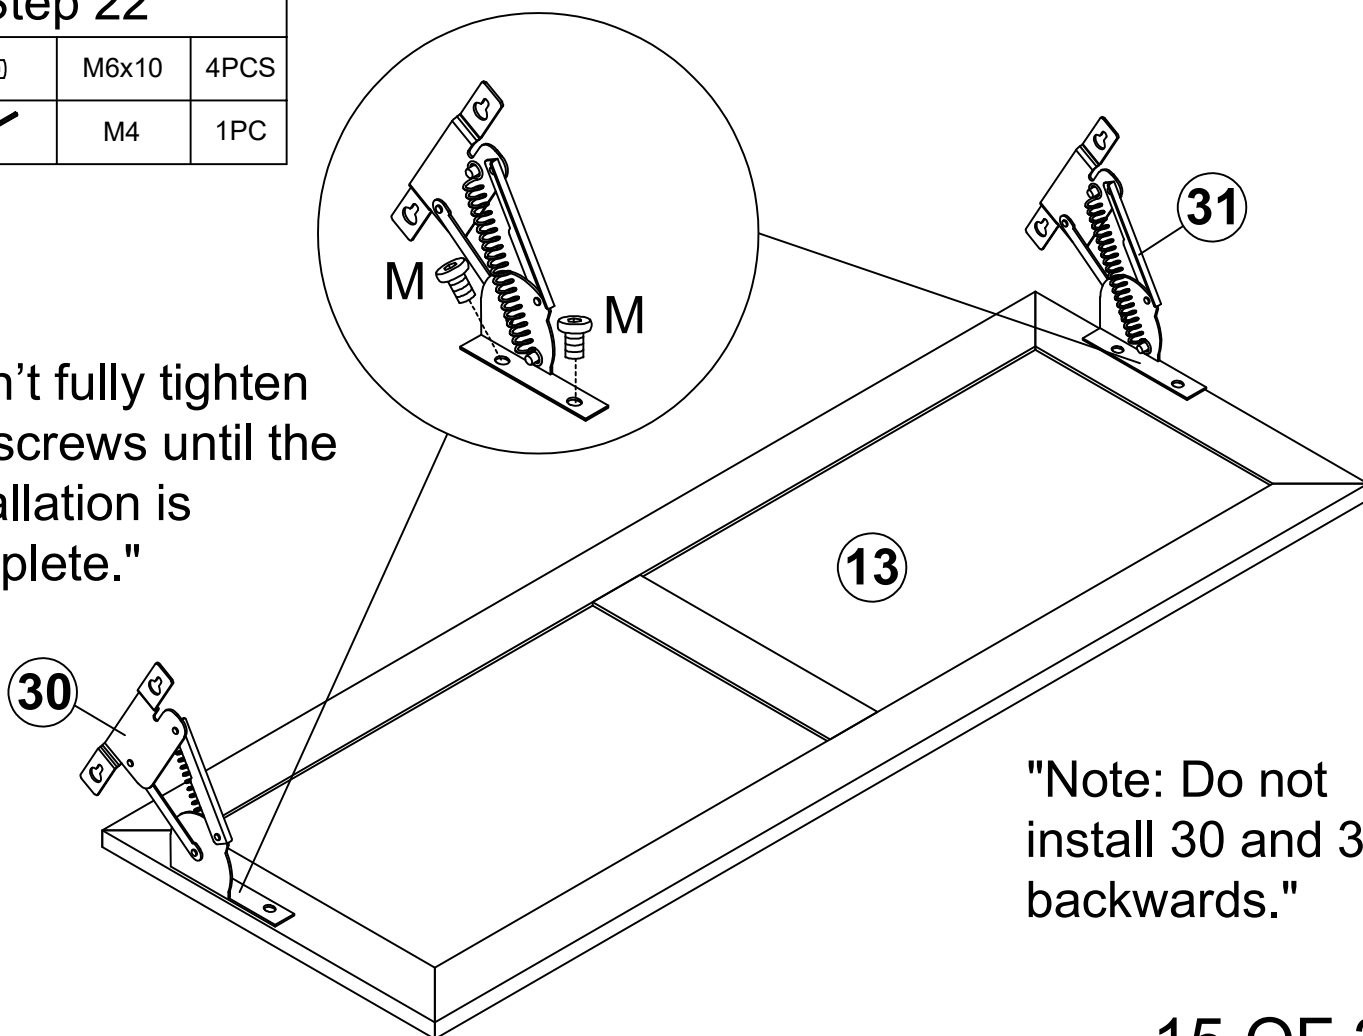

"Note: Do not install 30 and 31 backwards."


Step 23

M		M6x10	4PCS
W		M4	1PC

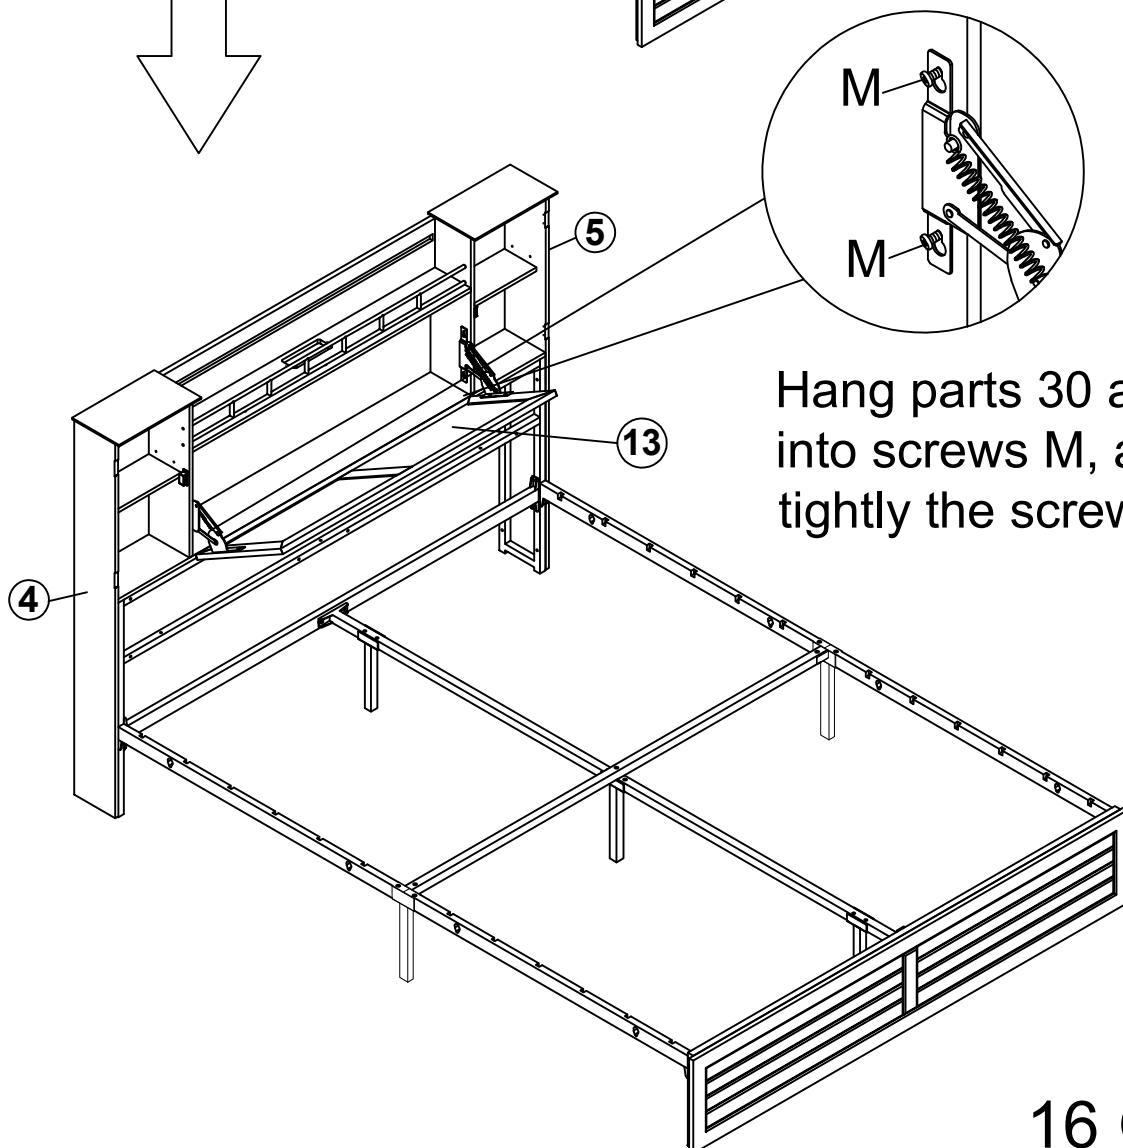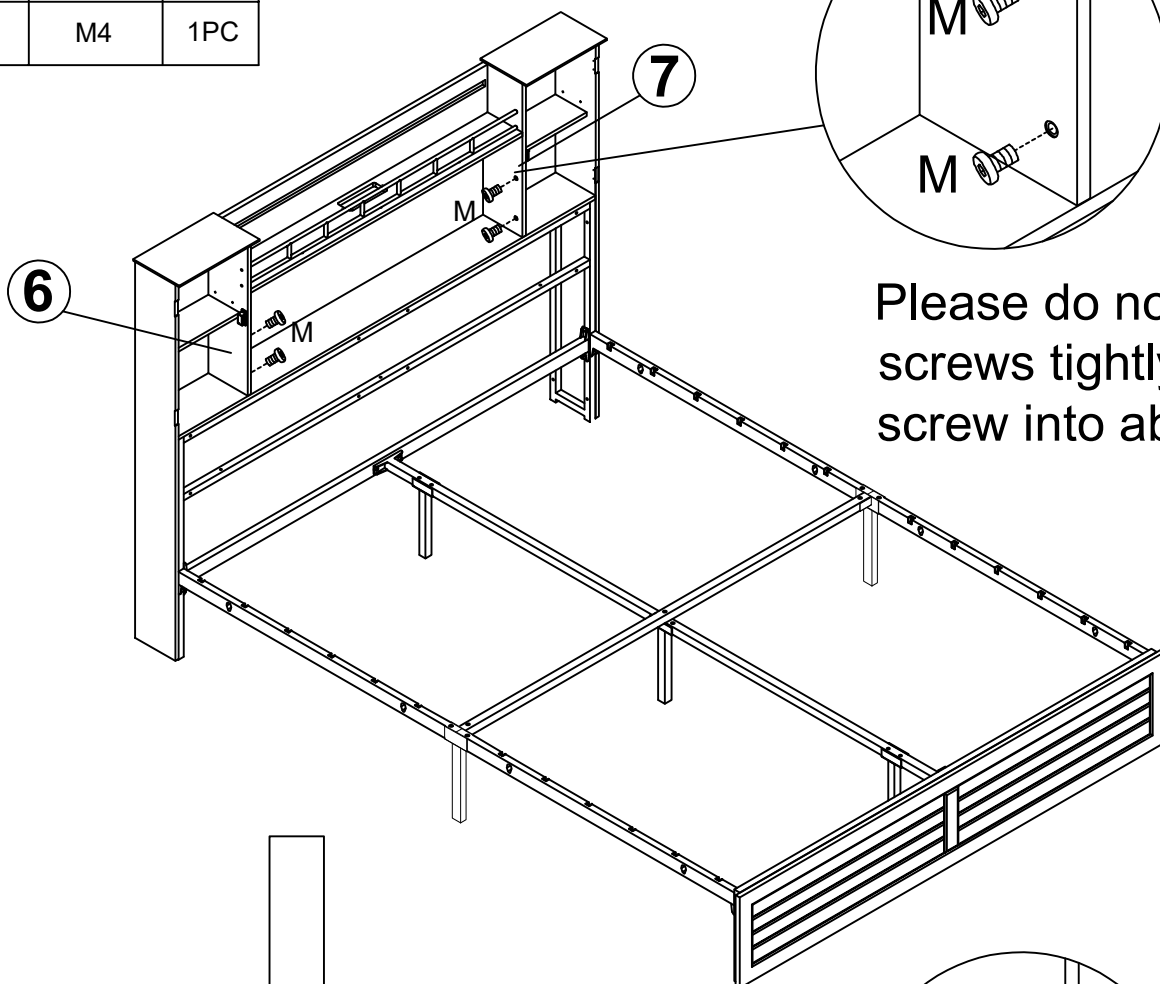


Step 24

J		M3.5x12	10PCS
K			2PCS
L			4PCS
Y		M4	1PC

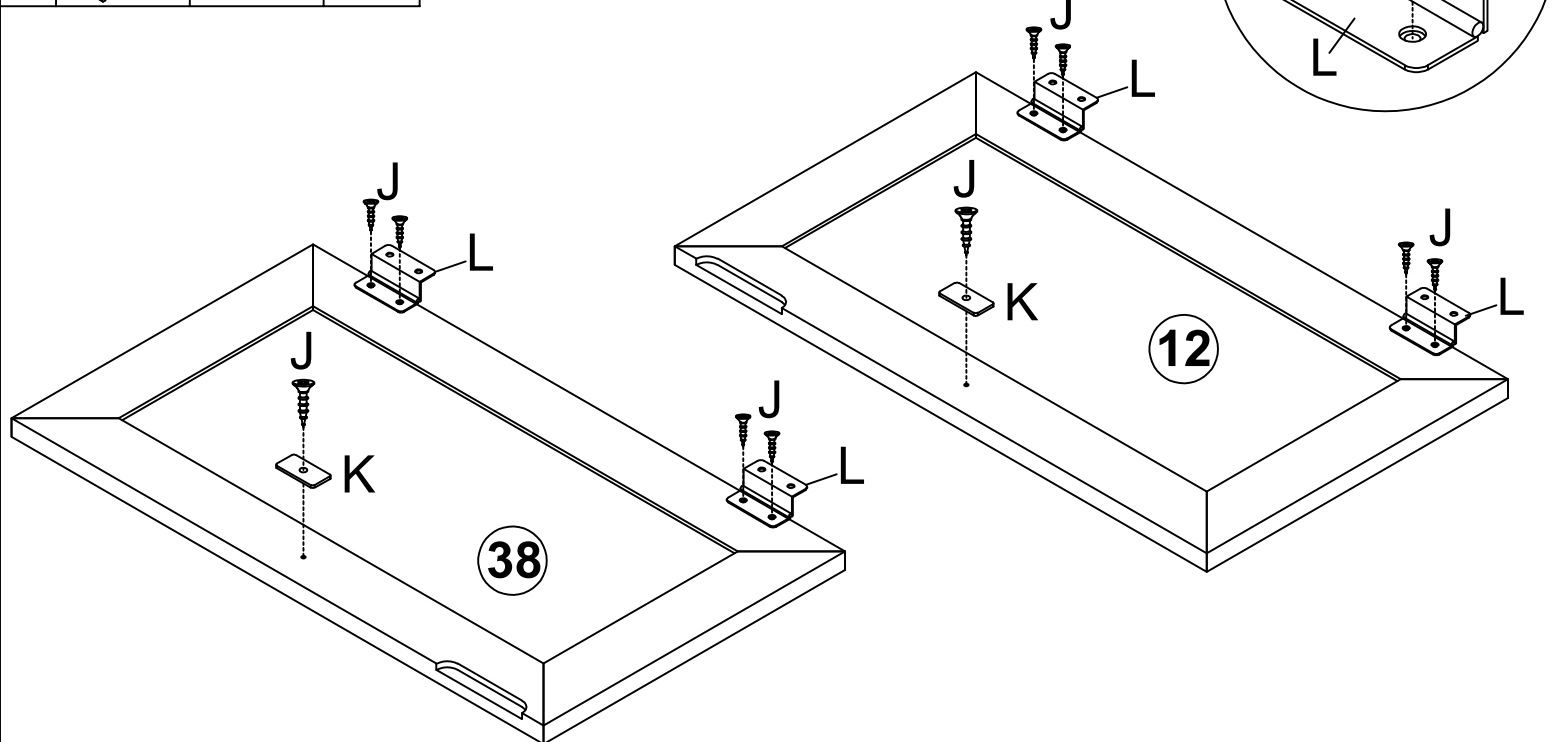

Step 25


J		M3.5x12	8PCS
Y		M4	1PC

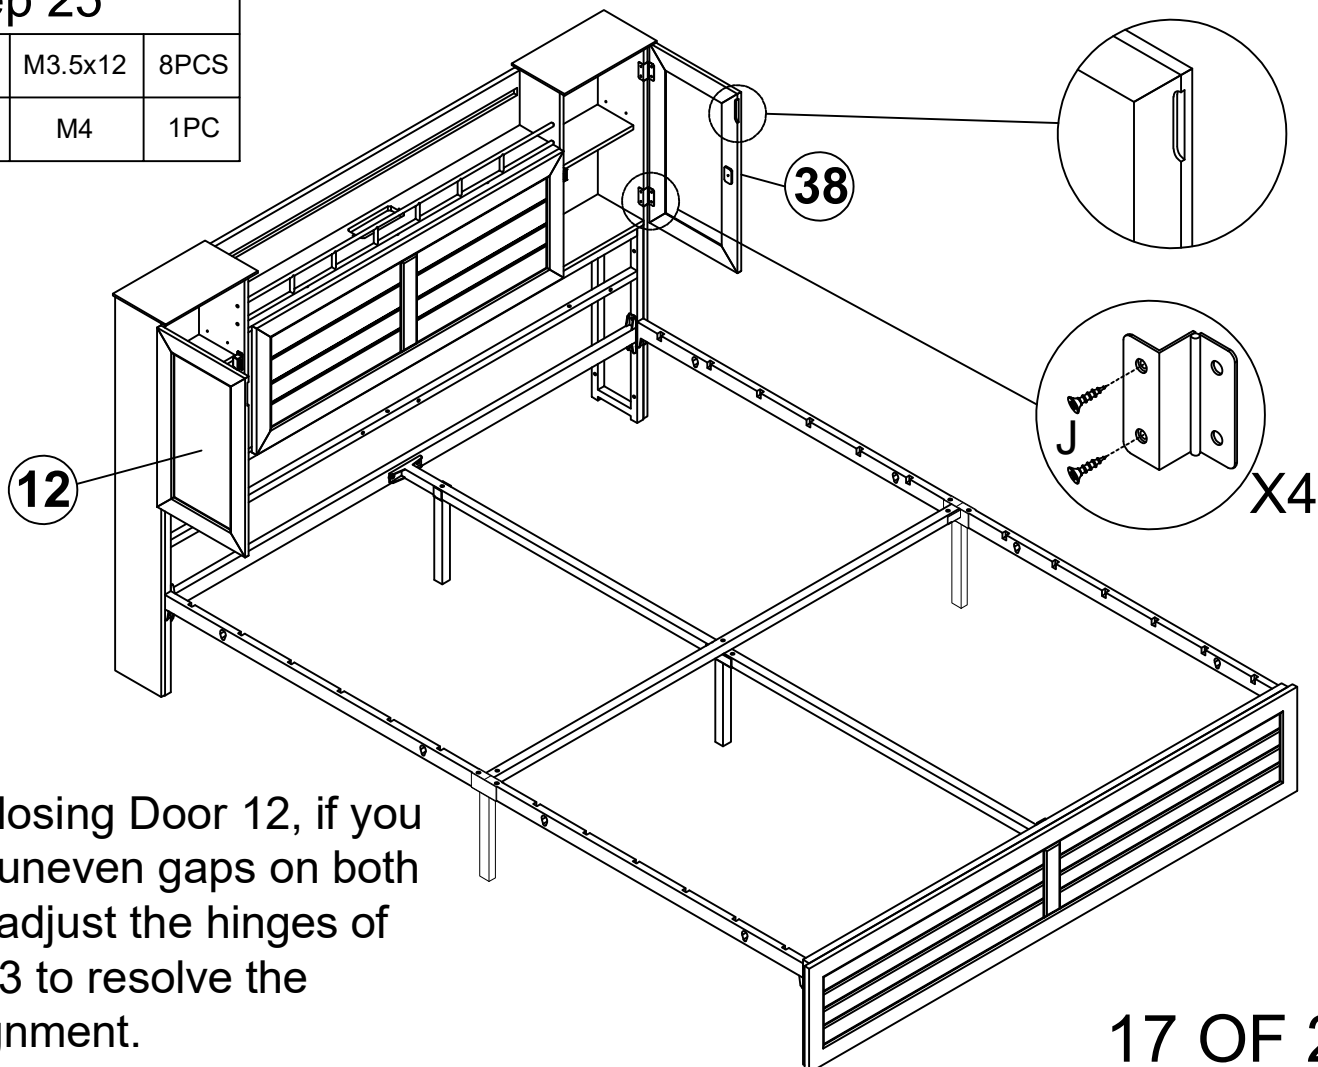

After closing Door 12, if you notice uneven gaps on both sides, adjust the hinges of Door 13 to resolve the misalignment.


Step 26

J		M3.5x12	24PCS
Y		M4	1PC

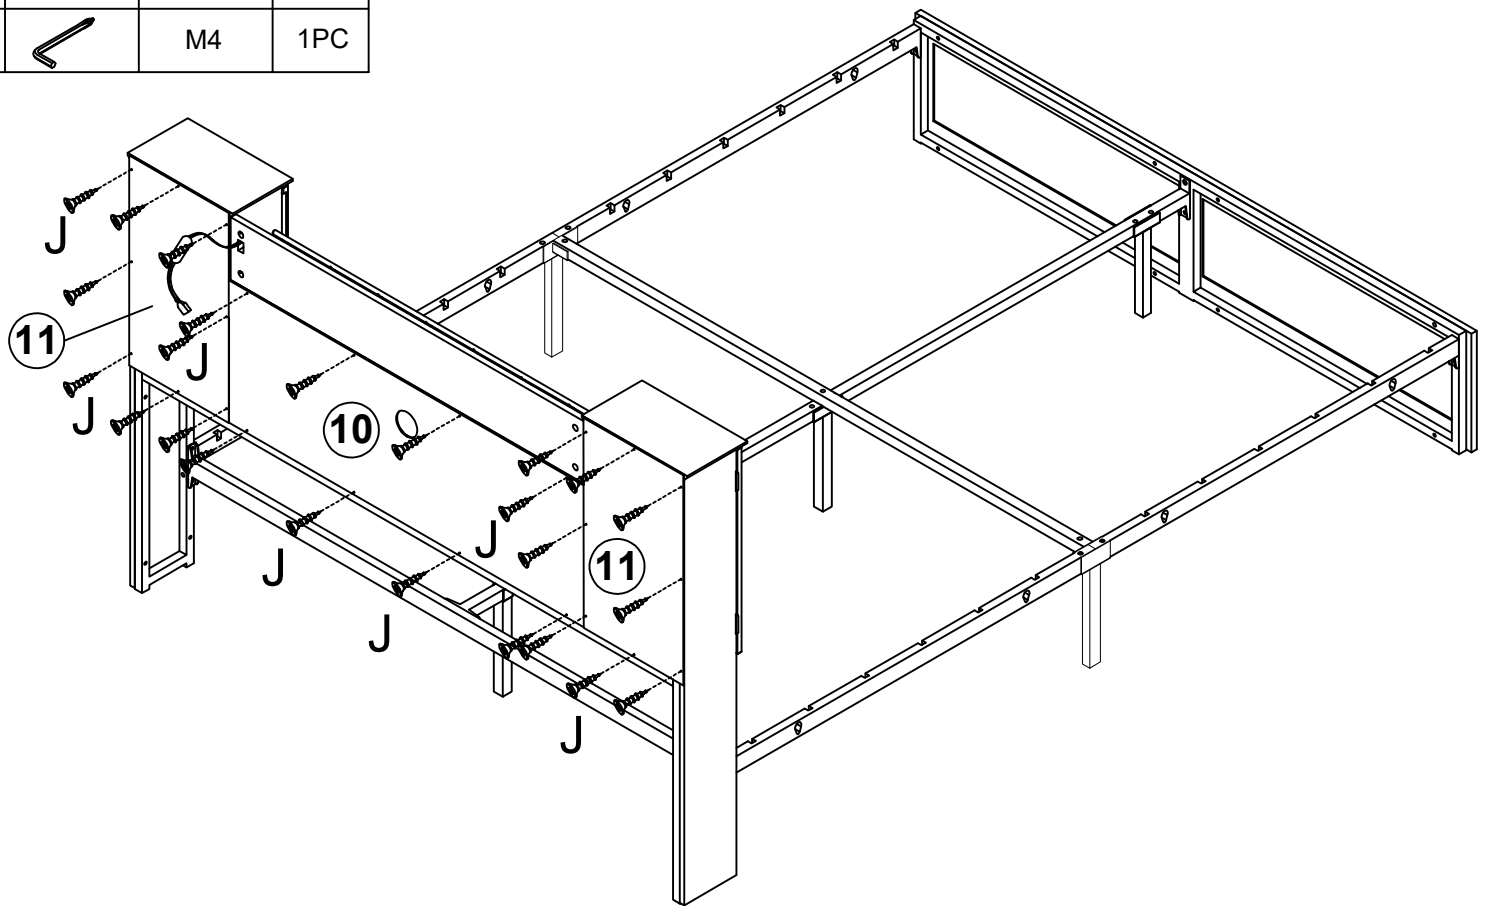


Step 27

J		M3.5x12	2PCS
Y		M4	1PC

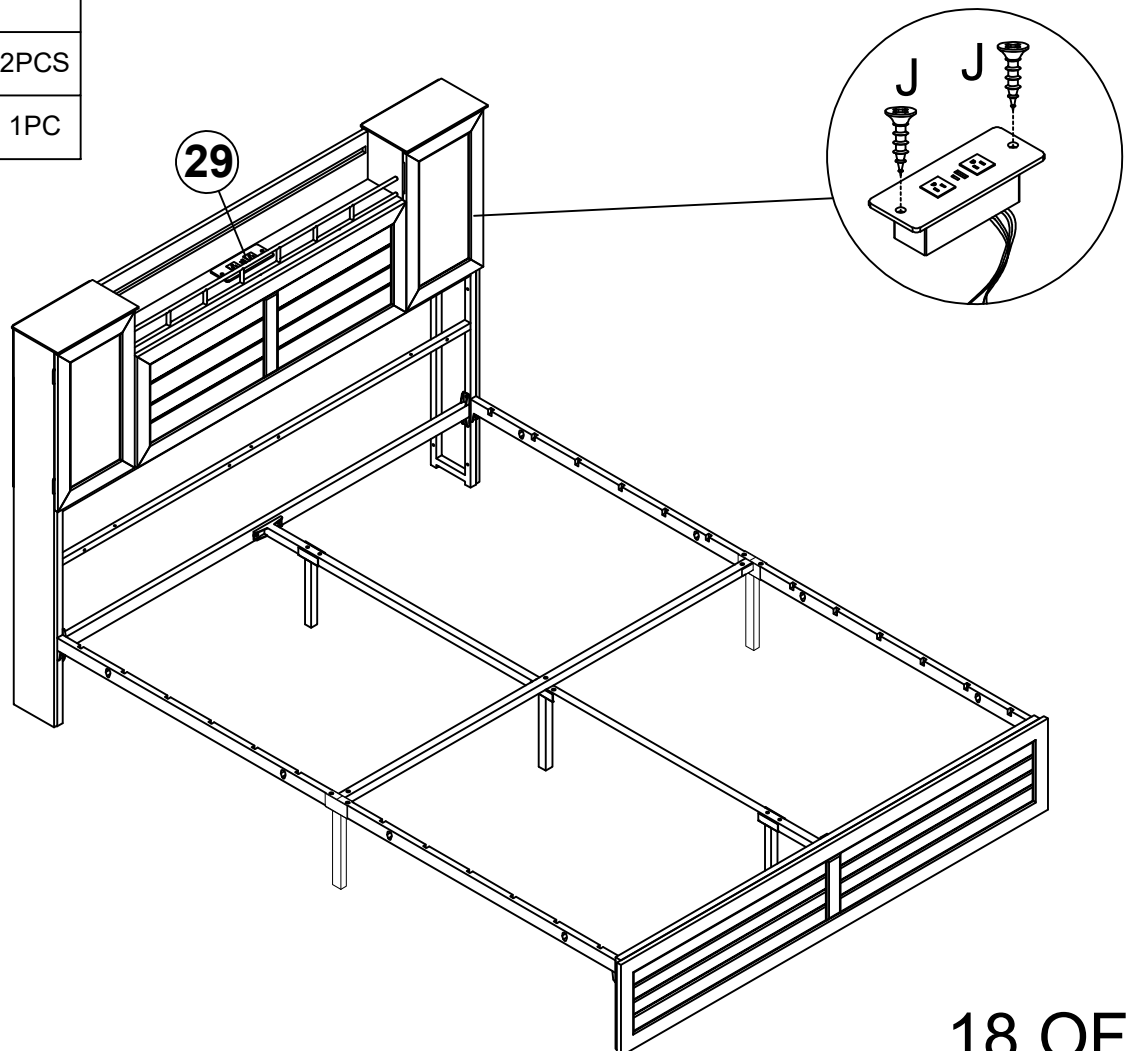


Step 28

G		M6x28	8PCS
W		M4	1PC

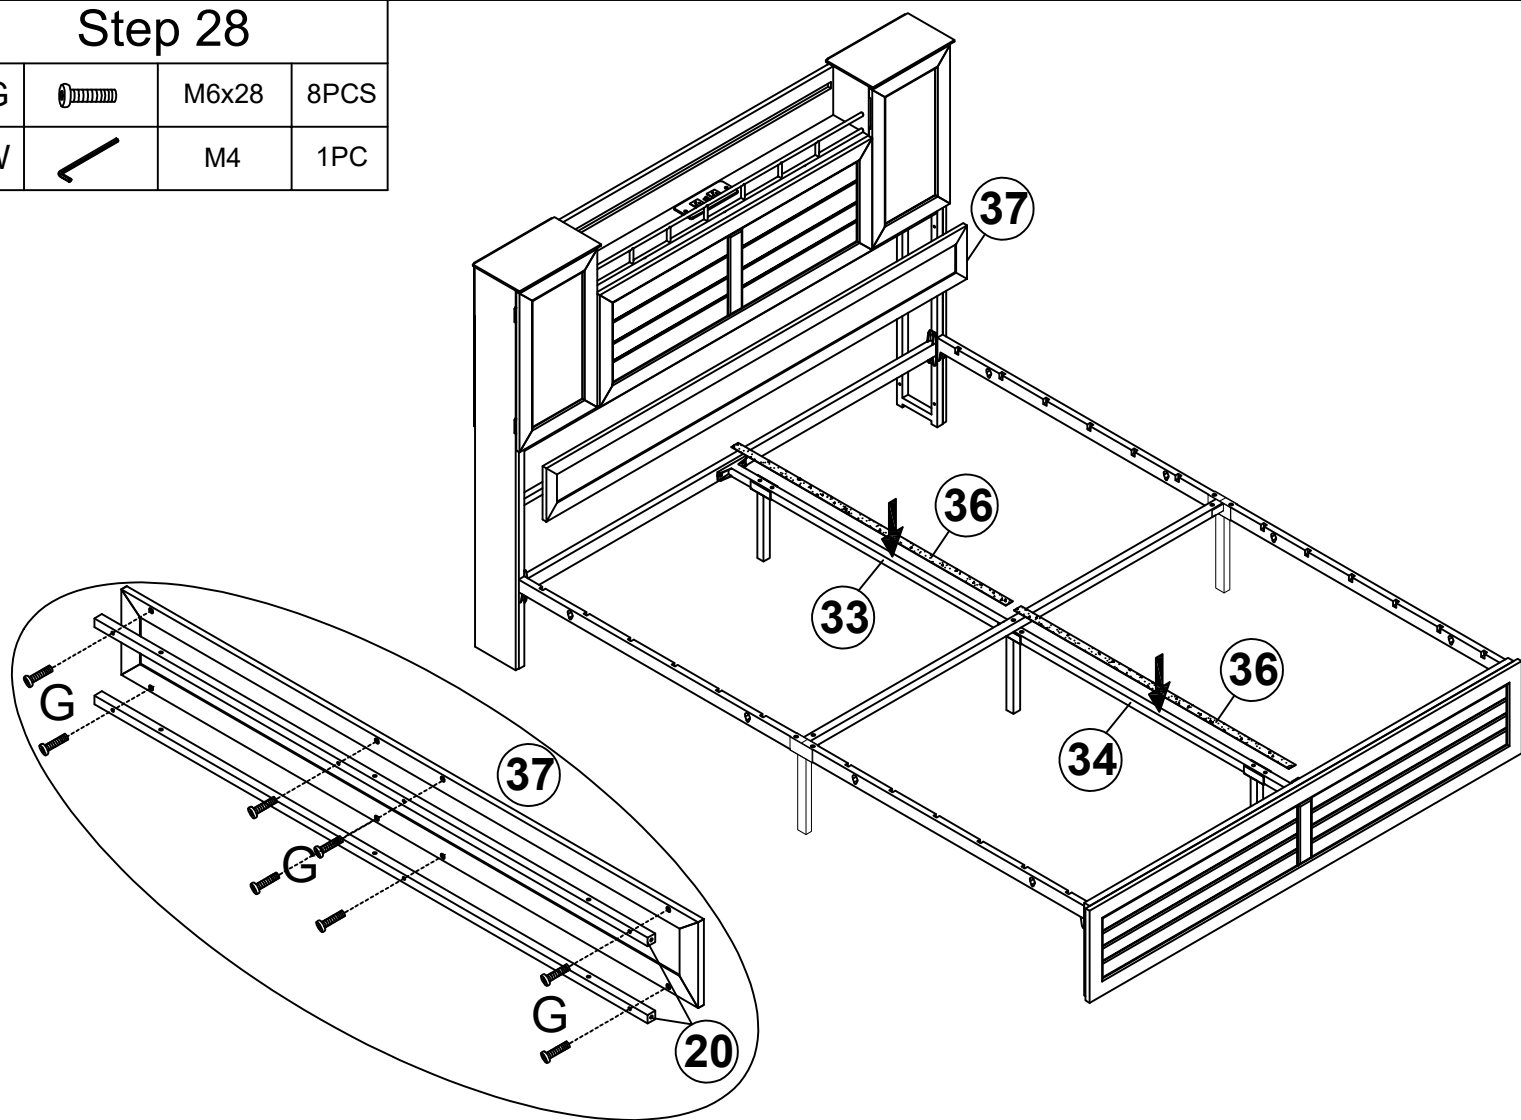


Step 29

V			24PCS
---	--	--	-------

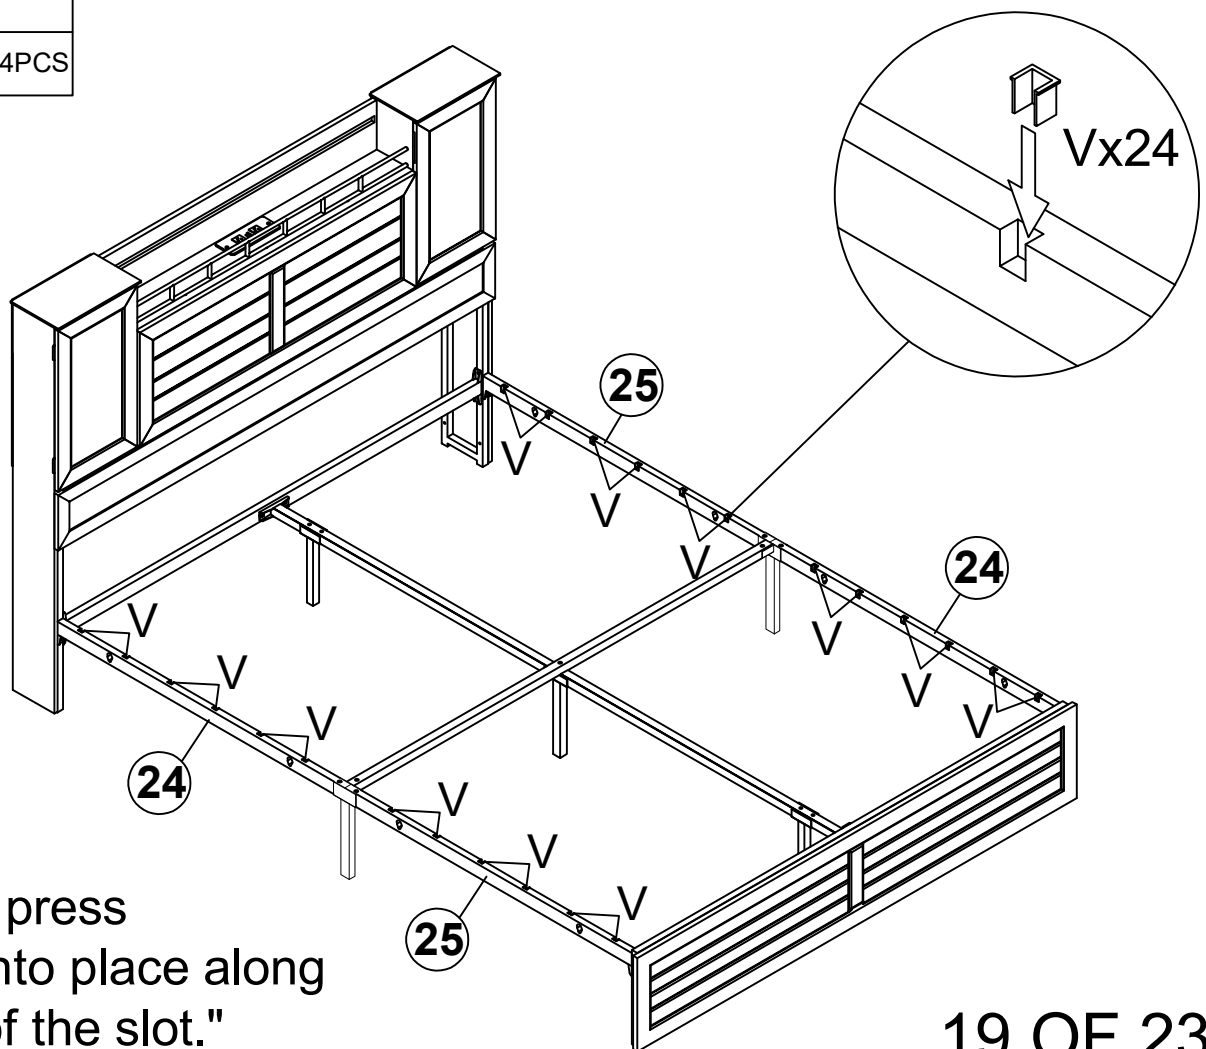

"Note: Please press accessory V into place along the direction of the slot."

Step 30

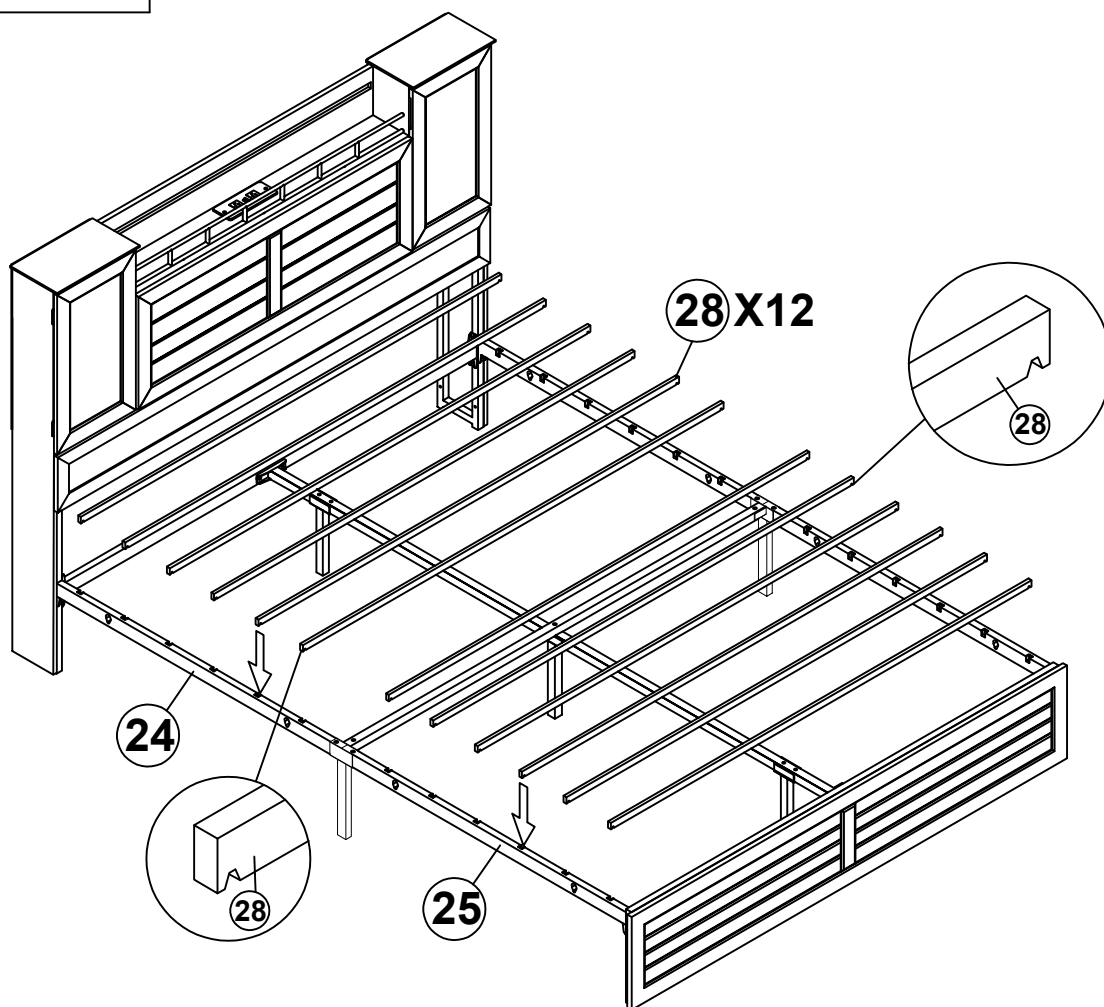


Step 31


O



8PCS

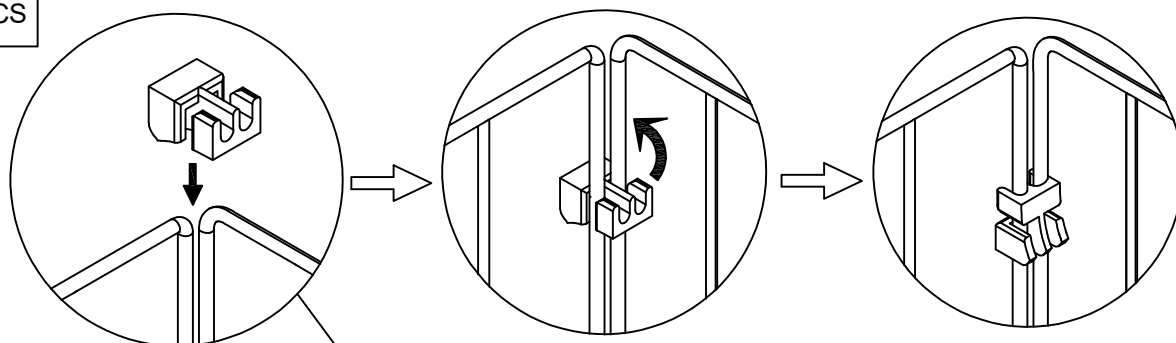


X4

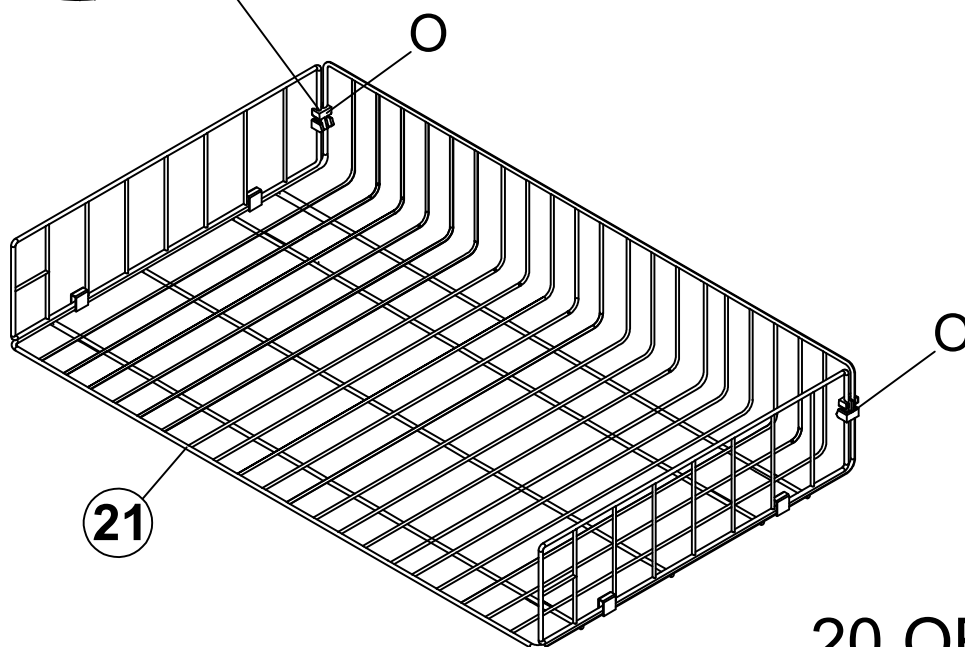




X4




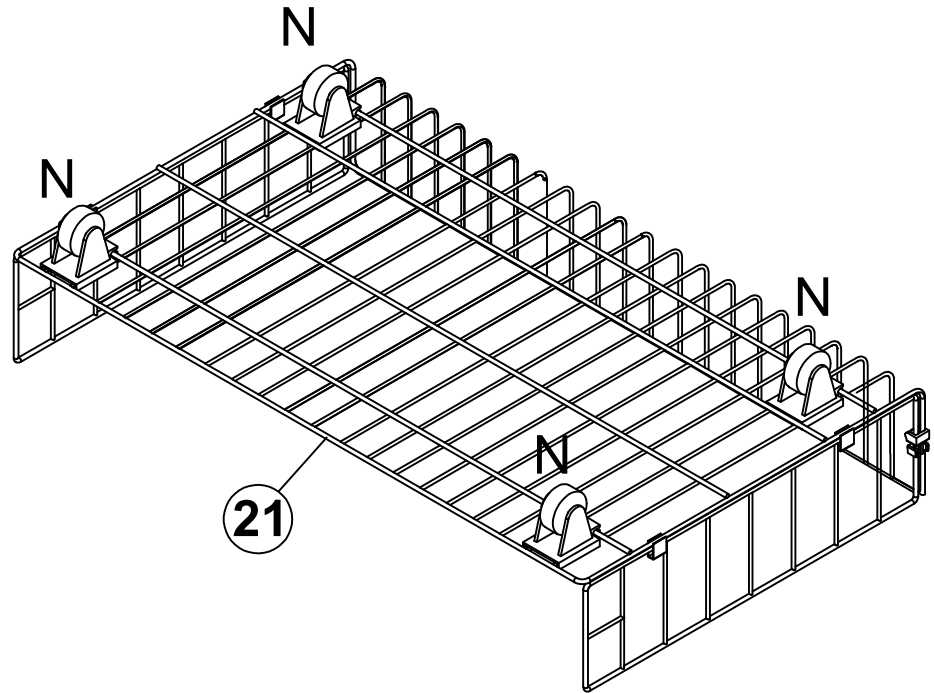


Attention: ② make sure plastic slot stuck into one side of the tube firstly, and ③ then to stuck into anther side.


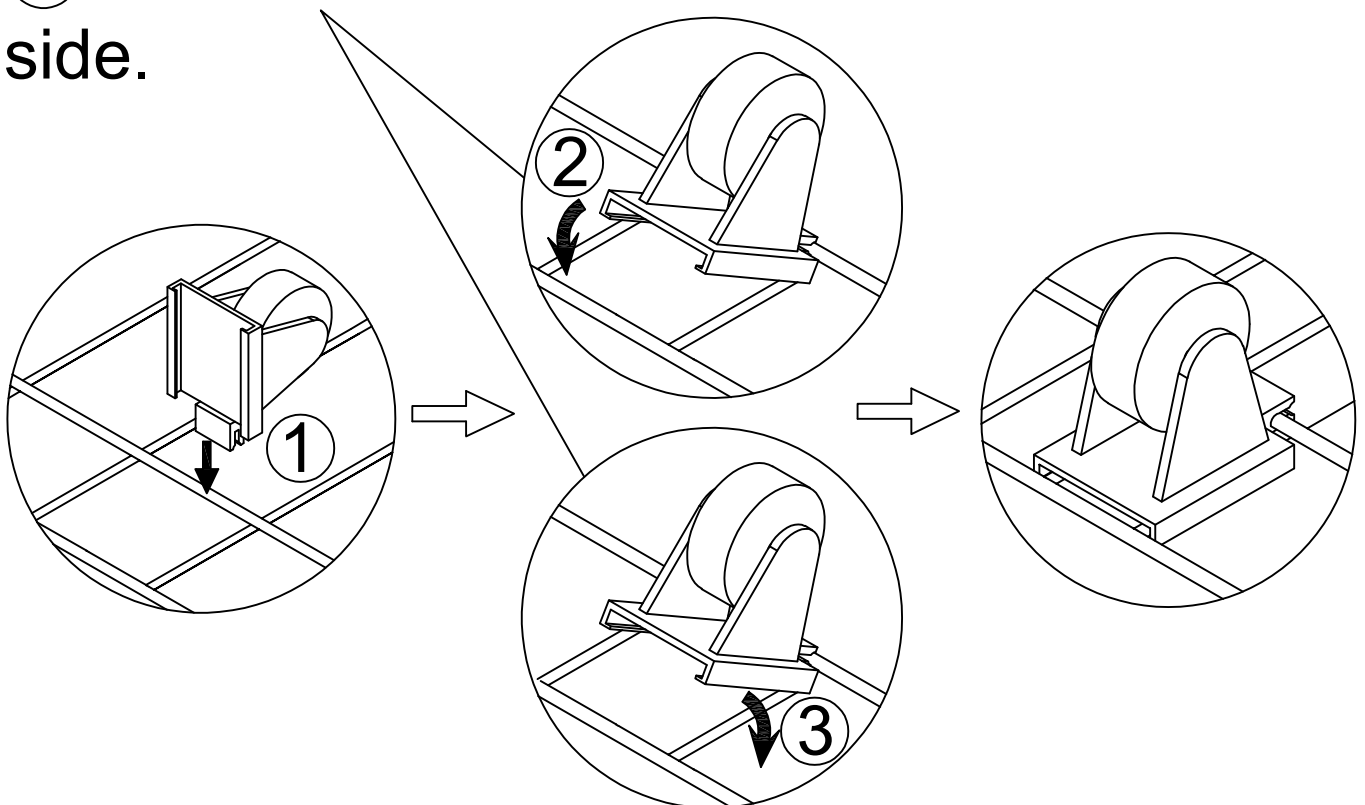


Step 33


M		M6x10	12PCS
P			12PCS
U			8PCS
W		M4	1PC

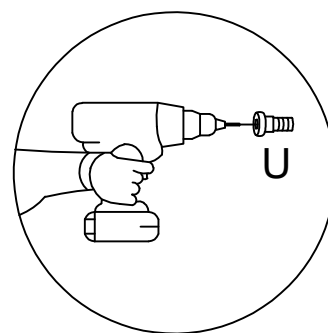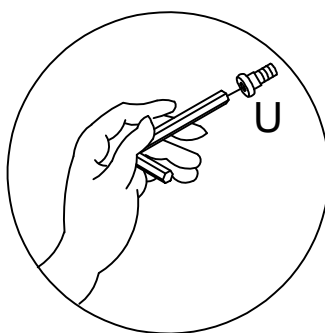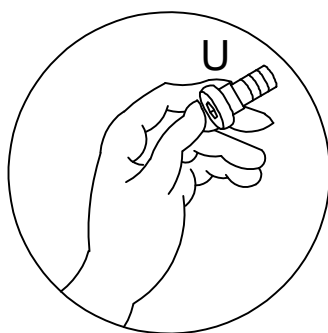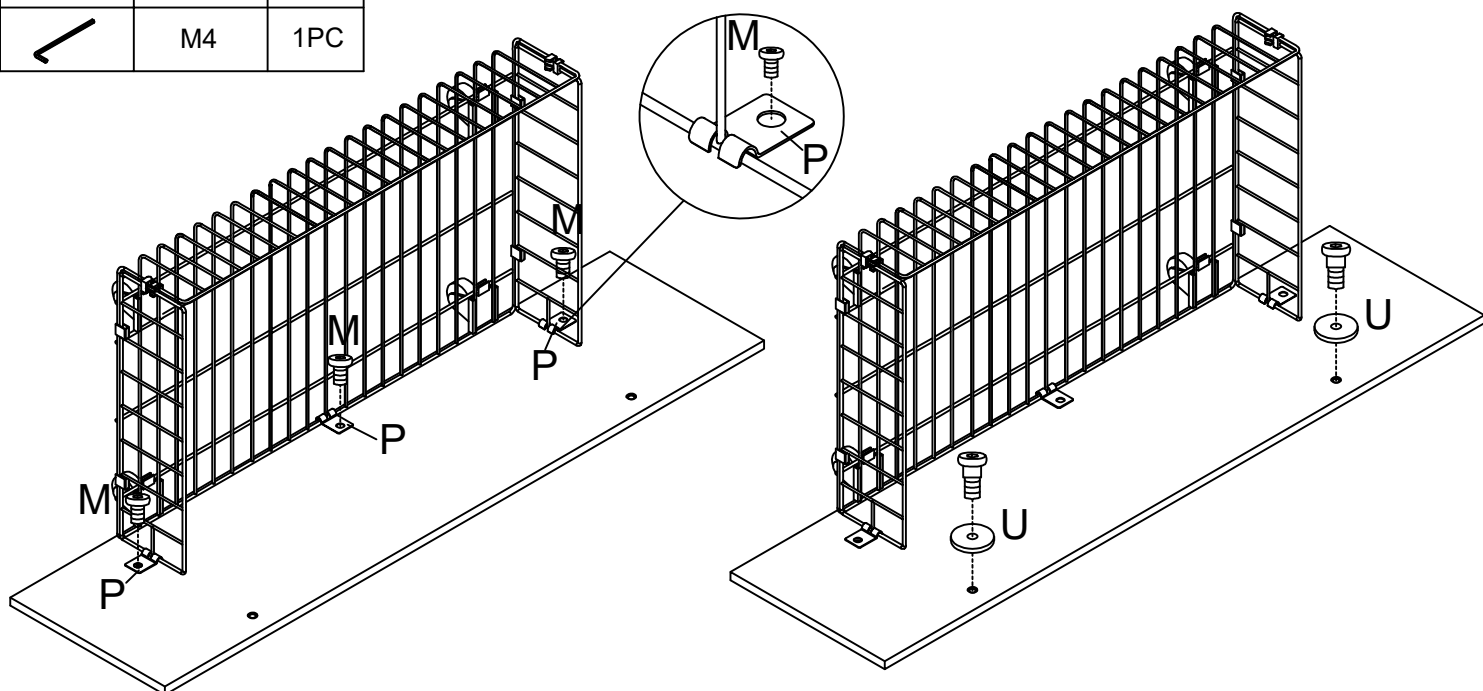

Note: Please don't fully tighten U screws to the board.

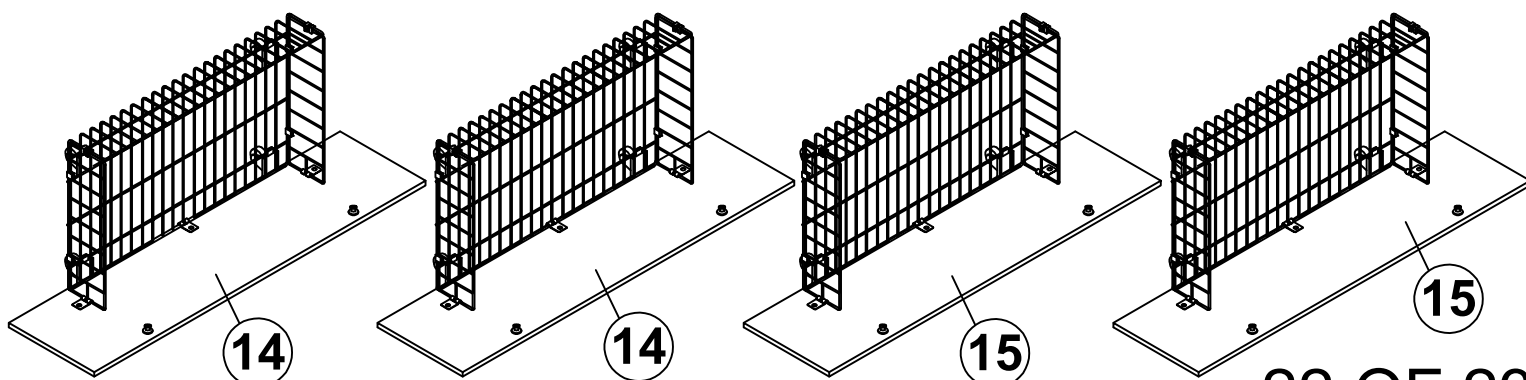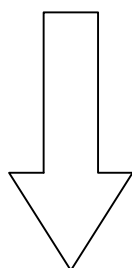

Step 34

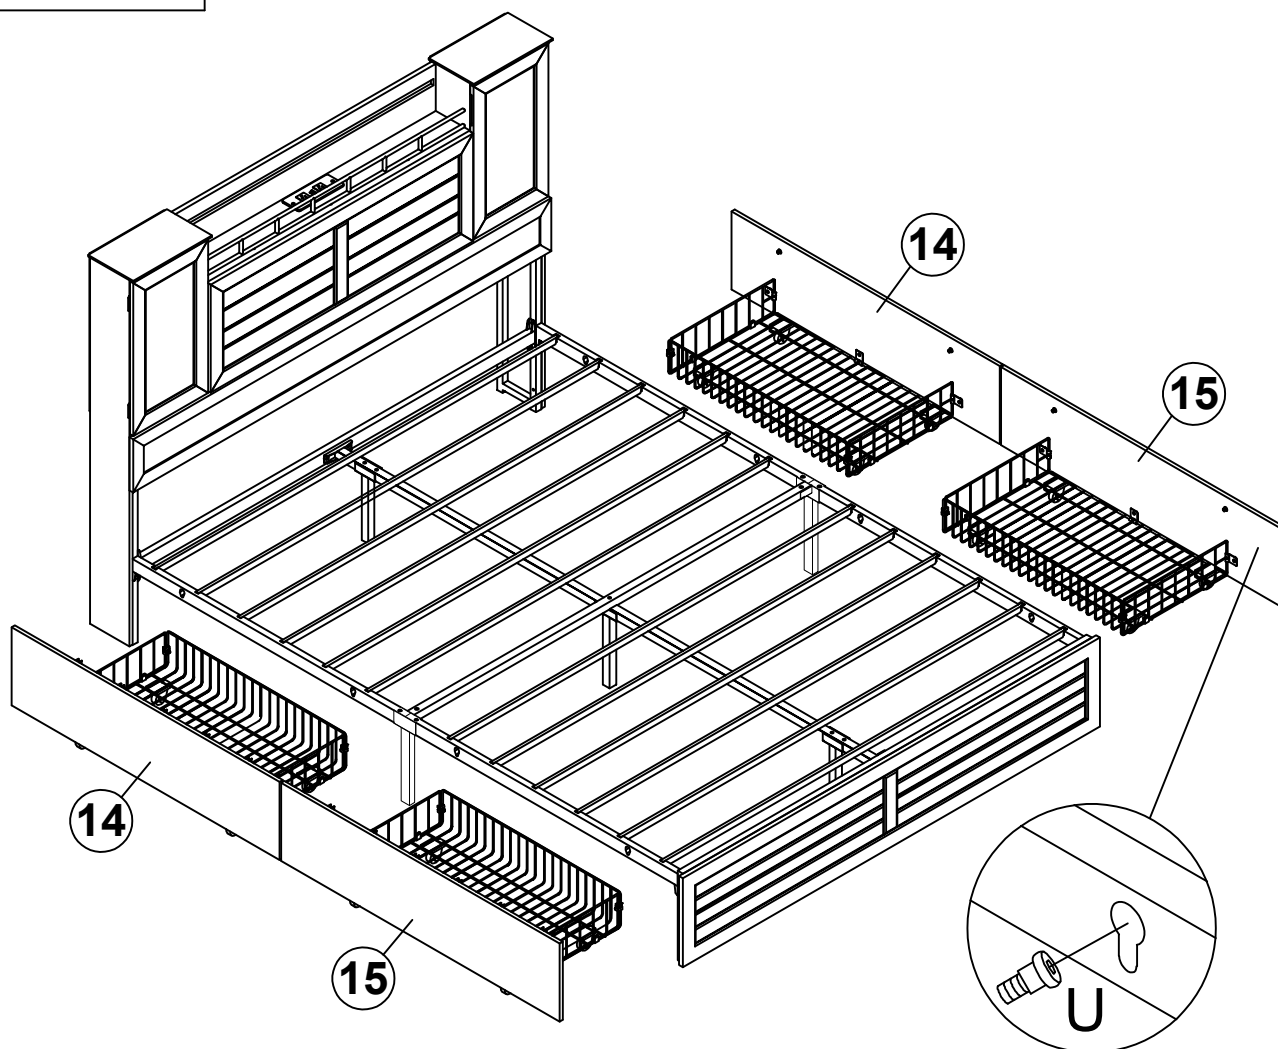

Step 35

