


INSTALLATION MANUAL

CHANDELIER

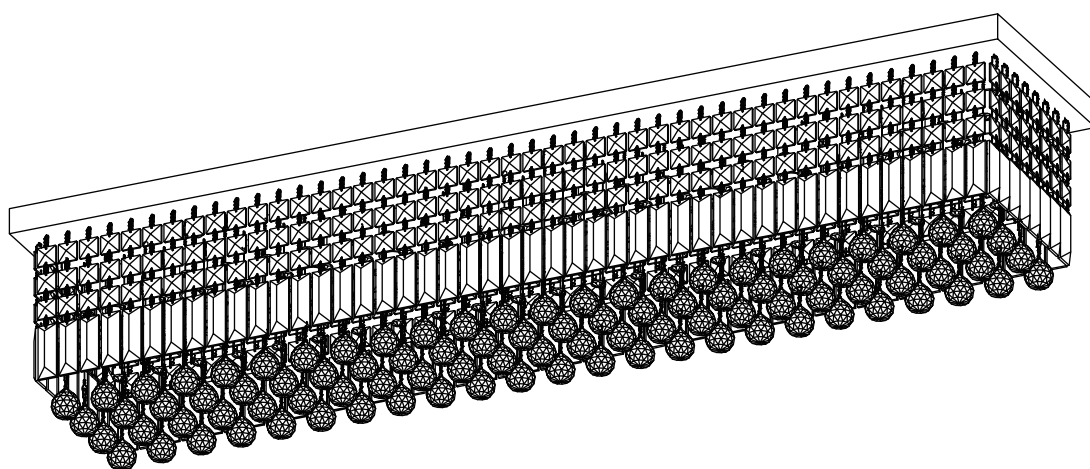

TOOLS REQUIRED




Ladder



Pliers




Wire
Strippers







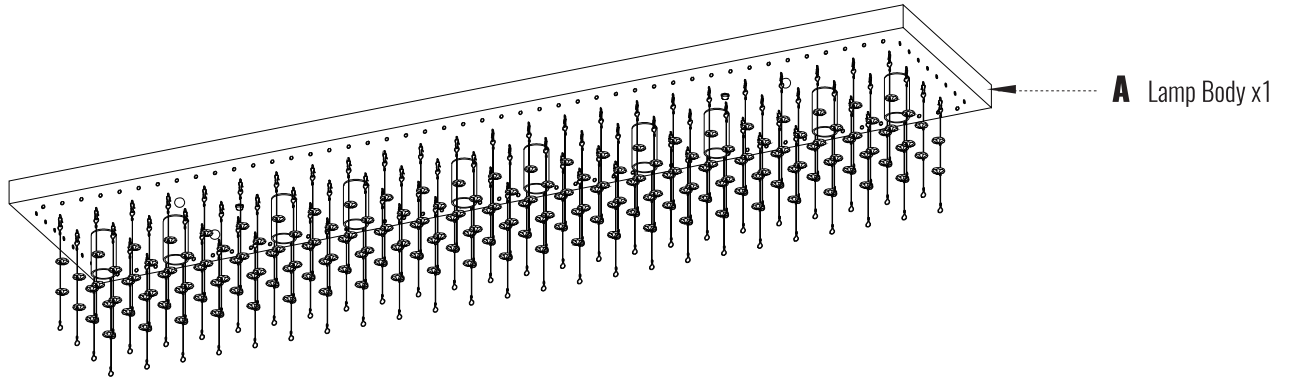







Screwdrivers

PACKING LIST



INSTALLATION KIT

<p>AA 1×</p>  <p>Mounting Bracket</p>	<p>BB 2×</p>  <p>Outlet Box Screw</p>	<p>CC 1×</p>  <p>Ground Screw</p>	<p>DD 3×</p>  <p>Wire Nut</p>
<p>EE 4×</p>  <p>Knurled Nut</p>	<p>FF 2×</p>  <p>Flat Washer</p>	<p>GG 2×</p>  <p>Wood Screw</p>	<p>HH 2×</p>  <p>Plastic Anchor</p>
<p>II 117×</p>  <p>Crystal Strand A</p>	<p>JJ 100×</p>  <p>Crystal Strand B</p>	<p>KK 102×</p>  <p>Crystal Ball</p>	<p>LL 1×</p>  <p>Gloves</p>

NOTE:

1. AA/CC/EE have already been pre-installed with Canopy, and JJ has been pre-installed with Lamp Body (A).
2. II/JJ/KK have 11/4/6 spare parts for backup.

MOUNTING AND WIRE

1. Install the Mounting Bracket

Step 1: Loosen the Knurled Nut (EE) from the Lamp Body (A), and take out the Mounting Bracket (AA).

Step 2: Plan the holes for the Mounting Bracket (AA) first, then place the Plastic Anchor (HH) inside the punched holes.

Step 3: Take off the screws from the outlet box, and secure the Mounting Bracket (AA) onto the box with the screws taken off or Outlet Box Screw (BB).

Step 4: Pass the Wood Screws (GG) through Flat Washer (FF) and the Mounting Bracket (AA) and then screw them into the Plastic Anchor (HH).

2. Connect the Wires

Step 1: Wrap the ground wire from the outlet box around the Ground Screw on the Mounting Bracket, and then connect the ground wire from the fixture to the ground wire from the outlet box.

Step 2: Connect the wires from the fixture to the house supply wires, neutral wire (white) to neutral wire, and hot wire (black) to hot wire.


Step 3: Spread apart the wires so that the hot wires are on one side of the outlet box and the neutral wires are on the other.

3. Fix the Canopy


Fix the Canopy onto the Mounting Bracket (AA) with Knurled Nut (EE).

INSTALL BULBS AND CRYSTAL

4. INSTALL CRYSTAL

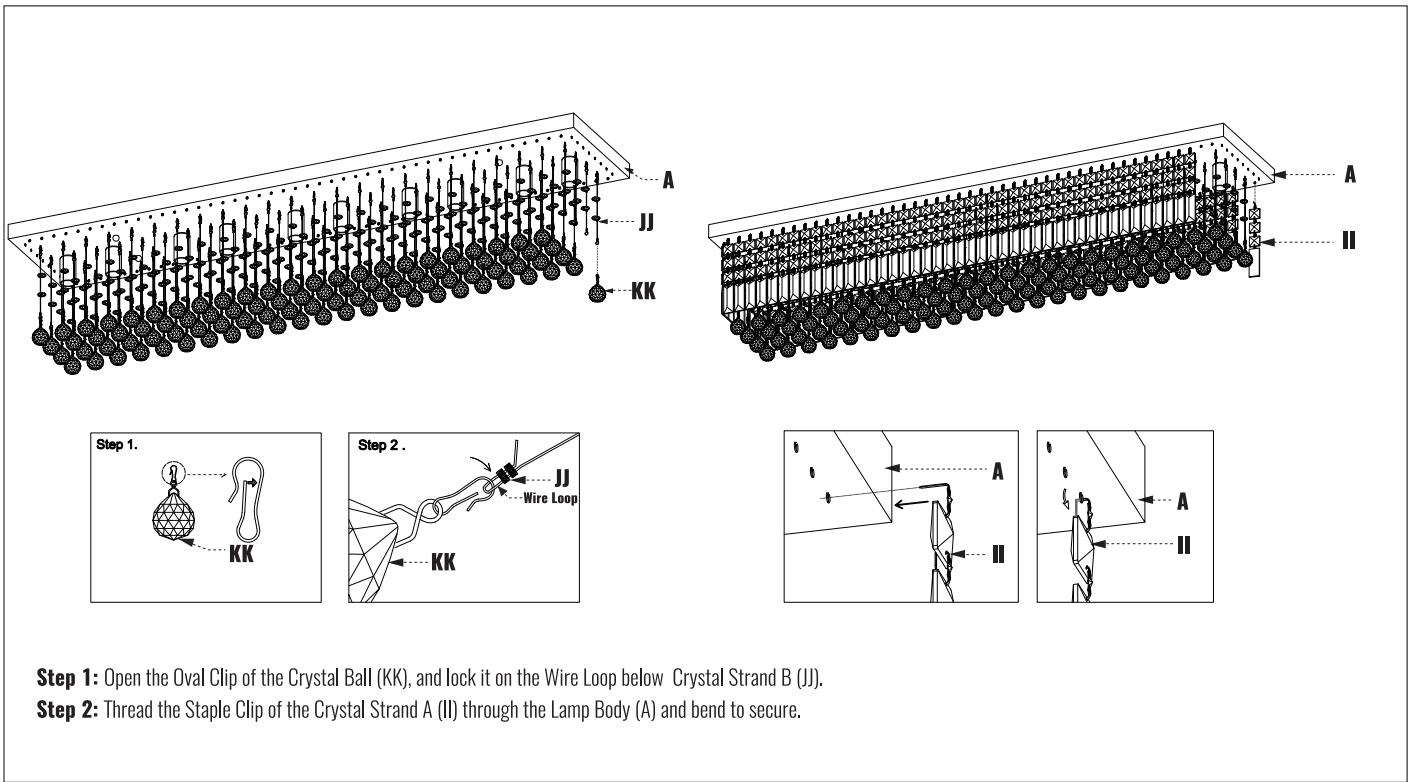

5. INSTALL BULBS

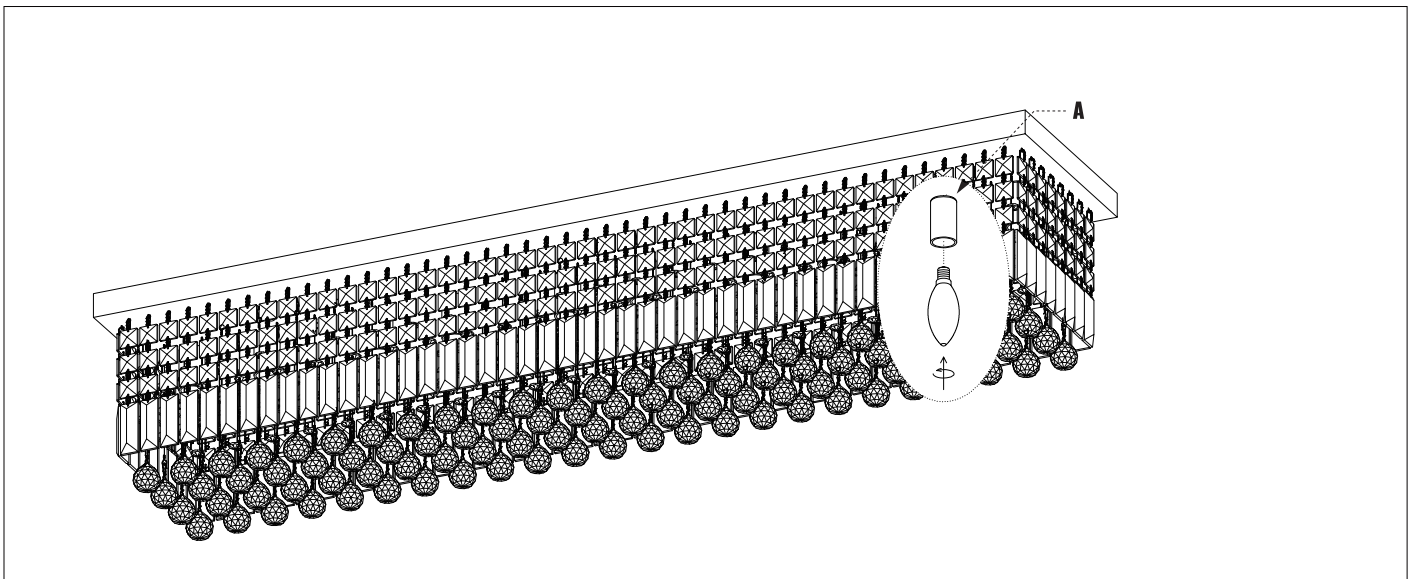

Install the E12 bulbs (not included).

NOTE:

This lamp uses E12 bulb base and can only be used in conjunction with LED bulbs up to 40W.
Fully dimmable when used with dimmable bulbs and compatible dimming switches (not included).