
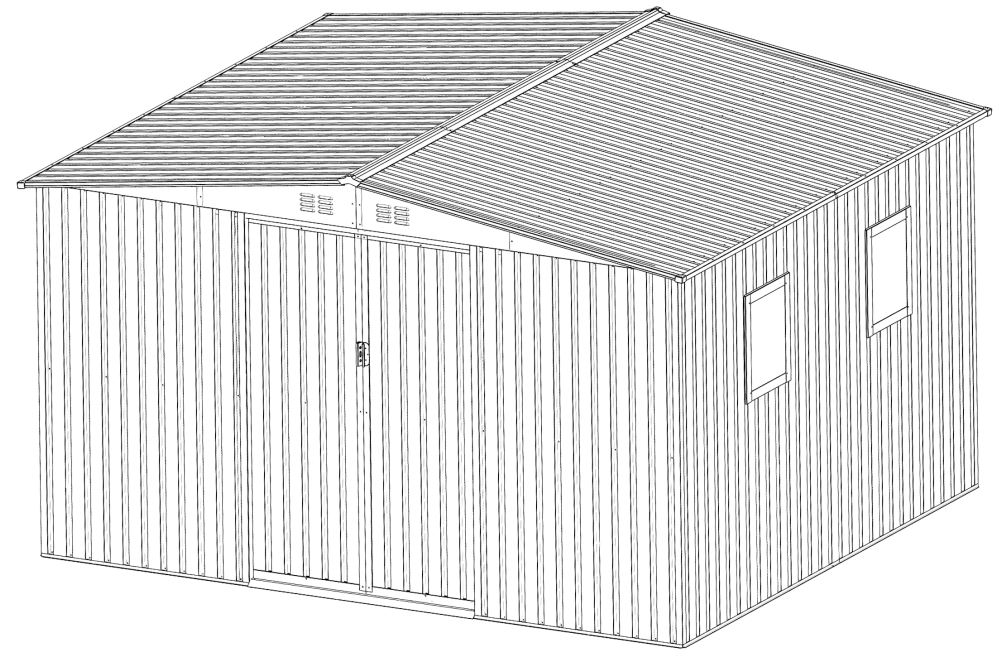


Metal Garden Shed

OWNER'S MANUAL

Size 12 Ft X 10 Ft

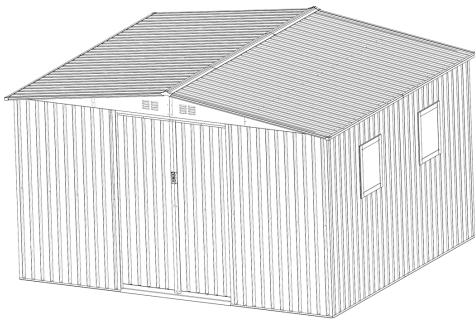

Tall walk in Shed

Quick & Easy Assembly

Ridge Reinforced walls







Wide Double Doors

Available in Various Sizes

Take care of sharp edges;

Please wear gloves;

It will take 2 people 7-8 hours to install.

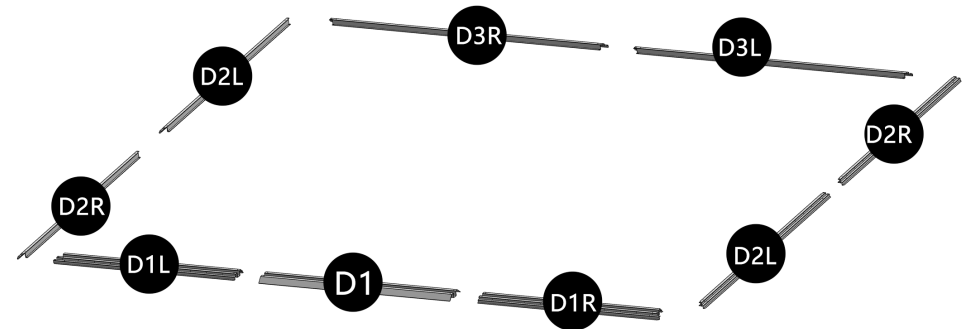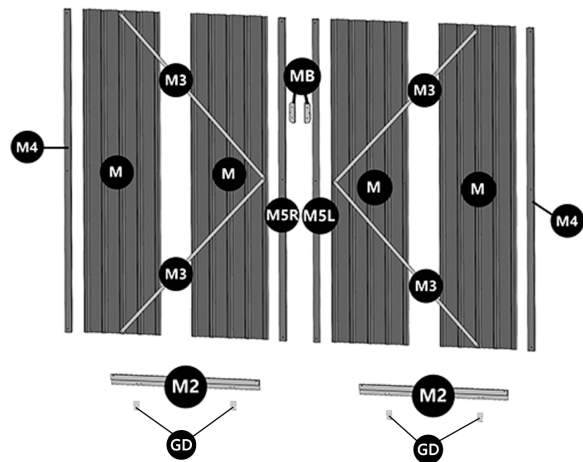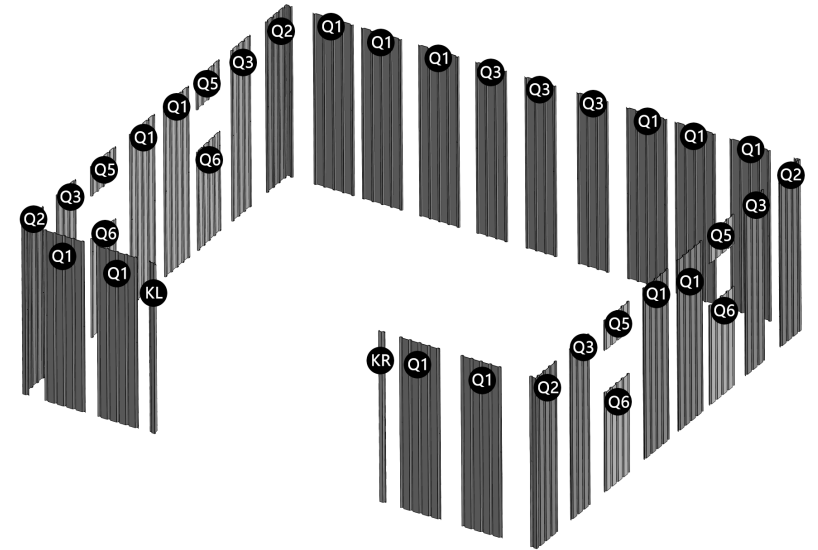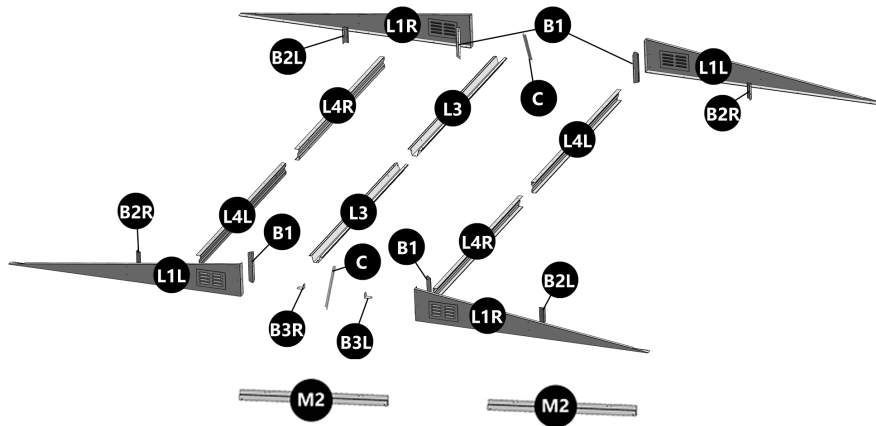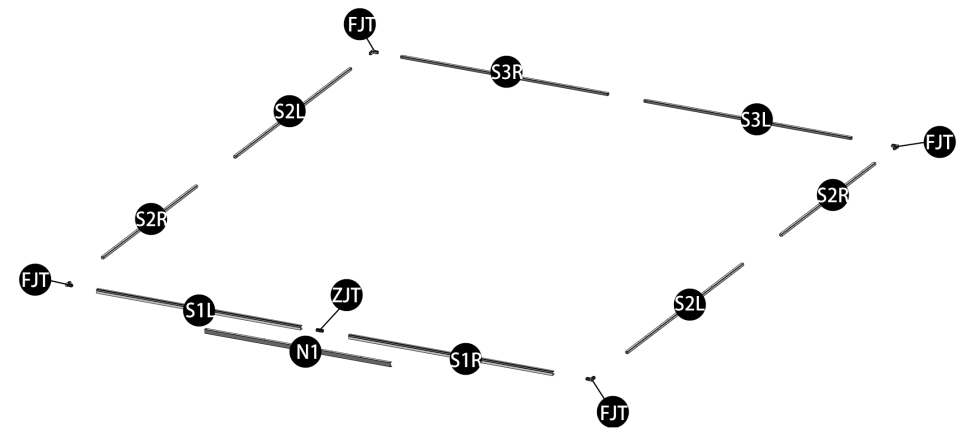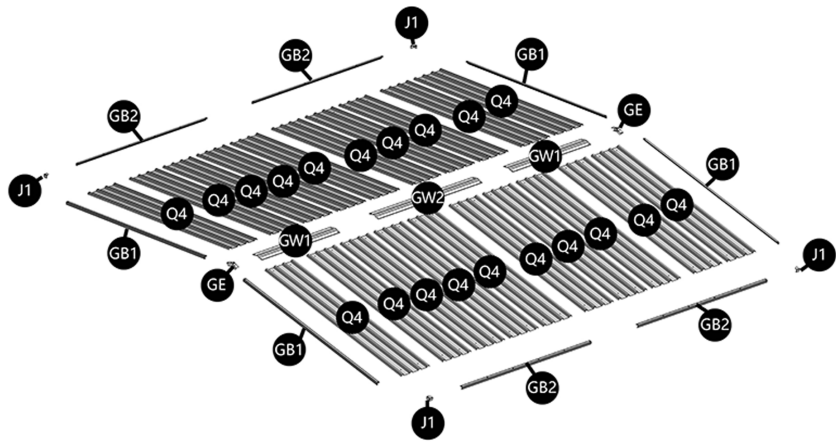

PARTS LIST

NO.	PART	QTY
D1		1
D1R		1
D1L		1
D2R		2
D2L		2
D3L		1
D3R		1
S1L		1
S1R		1
S2R		2
S2L		2
S3L		1
S3R		1
KL		1
KR		1
L1L		2
L1R		2

NO.	PART	QTY
B1		4
B2L		2
B2R		2
C		2
L3		2
L4L		2
L4R		2
GB1		4
GB2		4
GW1		2
GW2		1
M2		4
M3		4
M4		2
M5L		1
M5R		1
Q1		14

NO.	PART	QTY
Q2		4
Q3		7
Q4		20
M		4
J1		4
MB		2
GE		2
FJT		4
ZJT		1
G2		4
GD		4
W1		4
W2		8
W3		8
W4		8
Q5		4
Q6		4
F9		16

PARTS LIST

NO.	PART	QTY
B3L		1
B3R		1
F14		500
LSM		

NO.	PART	QTY
F1		481
F3		32
F11		34
F1-1		4

NO.	PART	QTY
F4		16
F8		9
N1		1
F16		9

LSM:Install LSM at screw exposure, prevent collisions.

F14:This accessory is used with external screws and is located on the outside for sealing and waterproofing.

Warning & Attention:

-Take care of sharp edges; Please wear gloves;

-You are advised to read the whole procedure before installing it;

-Try to assemble this product on the flat ground, otherwise it is difficult to carry out;

-It would be much easier to assemble the product with three or more people;

-All panels are clearly marked and care should be taken to use the correct one. It is important that these instructions are followed step by step;

Each screw has a surplus quantity, which can be used in reserve

-After assembly, please check whether all screws are tightened, to prevent parts from falling apart.

Tools:



Gloves



Ladder



Electric drill




Phillips screwdriver



Safety Helmet Hat



Goggles

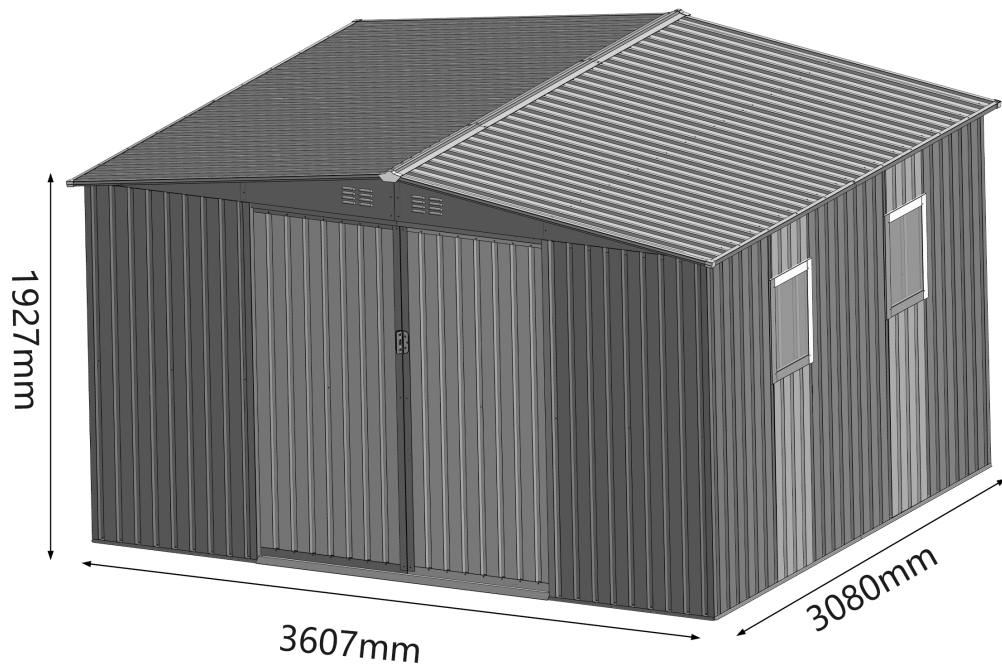

The installation space should be flat, and at least 3700x3100 mm. The foundation is fixed on the ground in this space.




Note: Take care of sharp edges.

All panels are clearly marked and care should be taken to use the bcorrect one. It is important that these instructions are followed step by step.


NO.	PART	Qty.
D1		1
D1L		1
D1R		1

NO.	PART	Qty.
D2R		2
D2L		2
D3R		1

NO.	PART	Qty.
D3L		1
F1		24
F1-1		4

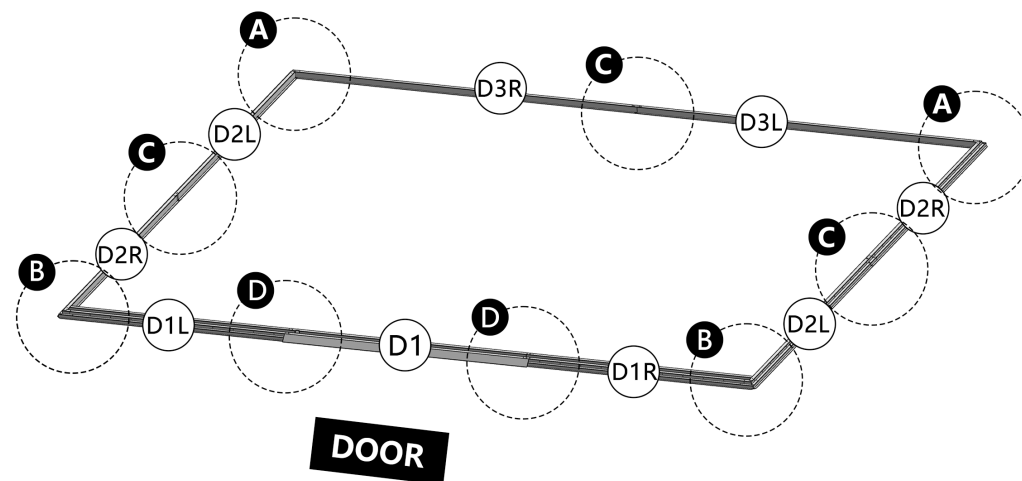


Assemble the components according to the positions shown in the diagram, align the holes, and use F1 to secure the holes at steps A, B, and C. Use F1-1 to secure the holes at the connection of step D.

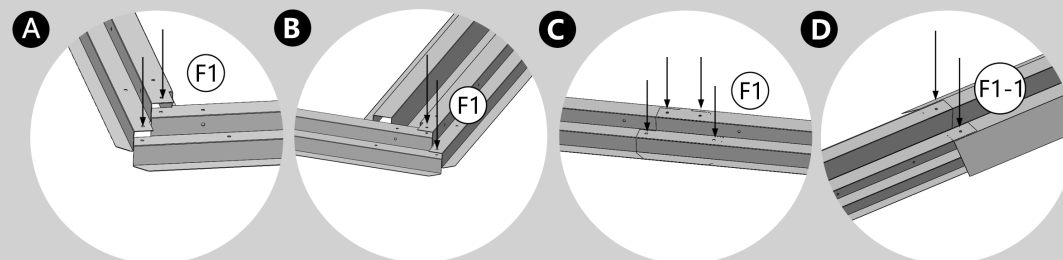




Note: Please wear gloves


NO.	PART	Qty.	NO.	PART	Qty.
F8		9	F16		9

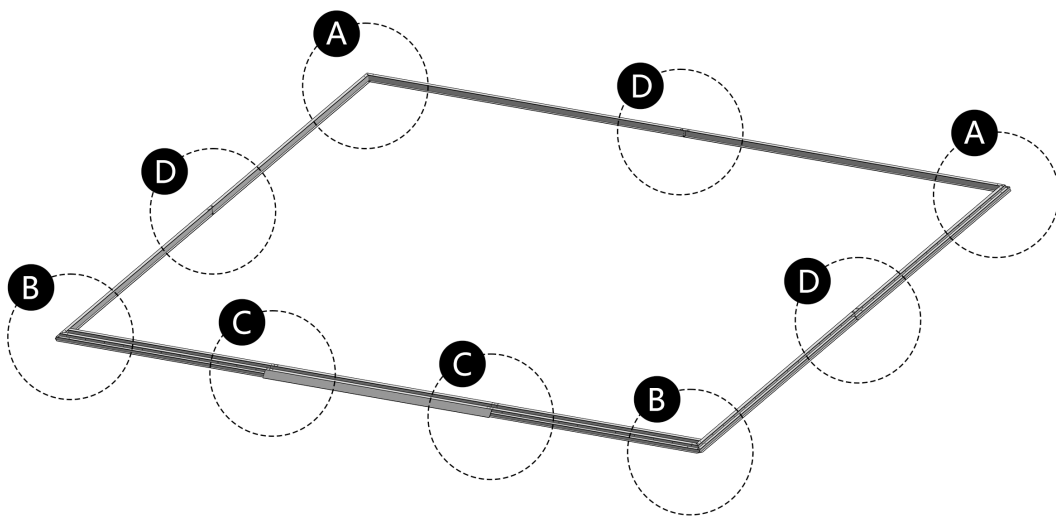

After installing the bottom frame, if the ground is soil, use F8 to secure the holes at the positions shown in the figure. If the ground is stone, you must use F16 expansion bolts.

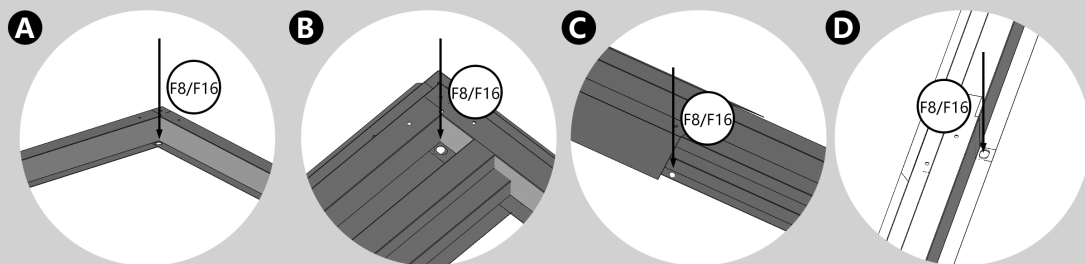


NO.	PART	Qty.
Q2		4
F1		12

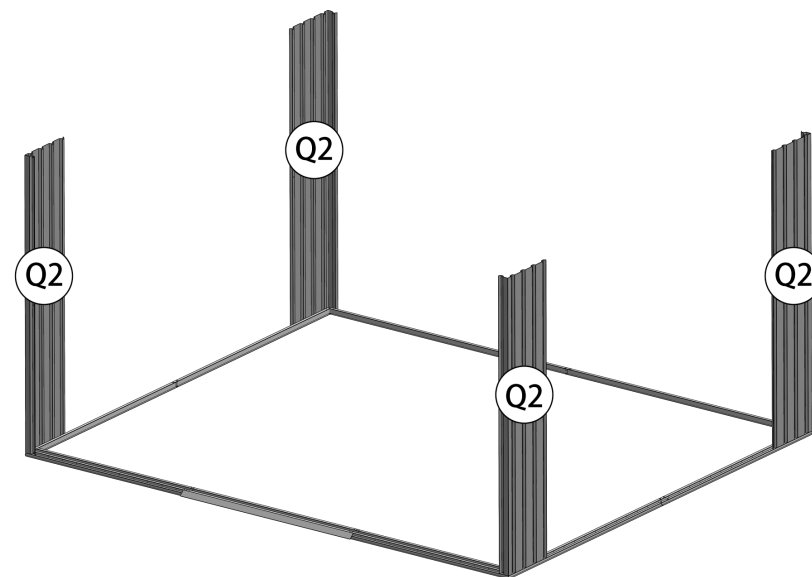


Notice:

In this step, only the three holes in the middle of Q2 need to be installed and reserved on both sides. The reserved holes are shared with the following steps.

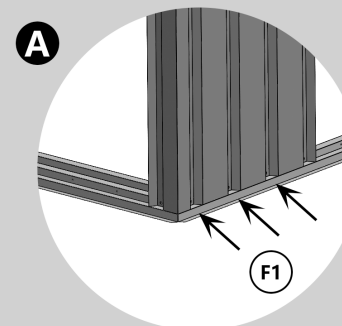


NO.	PART	Qty.	NO.	PART	Qty.
S1R		1	G2		4
S1L		1	F1		1
S3L		1	ZJT		1
S3R		1			

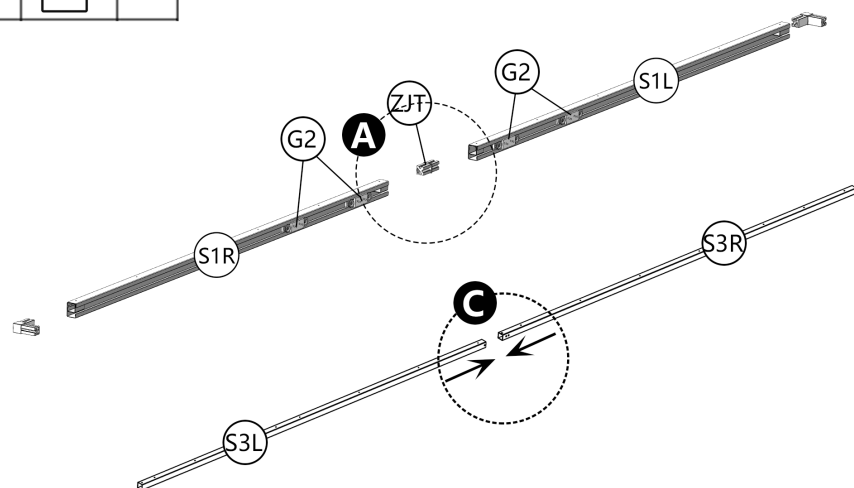


Note:

G2 has been placed at positions S1R and S1L before shipment. Connect S1L and S1R through ZJT. After connecting S3L and S3R, secure them with F1.

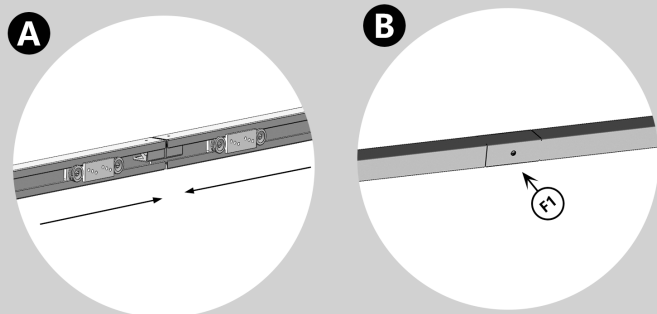

NO.	PART	Qty.	NO.	PART	Qty.	NO.	PART	Qty.
S2L		2	N1		1	F1		8
S2R		2	FJT		4			

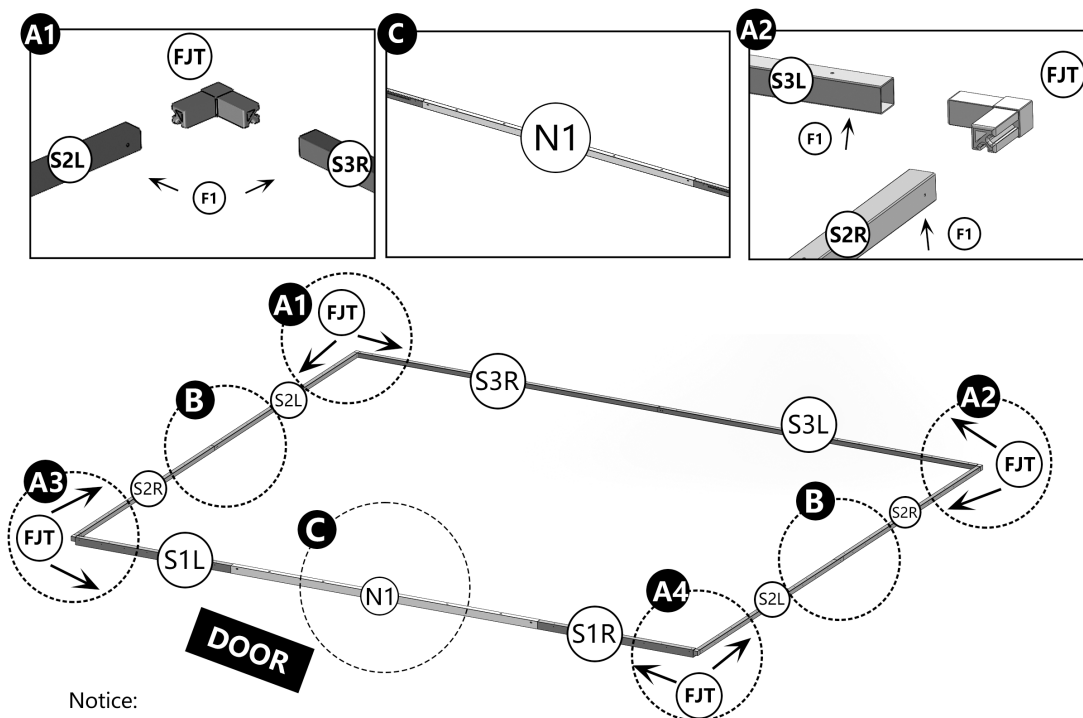


Notice:


A: FJT is installed at the junction of two arrows, please install the direction indicated by the arrow (→←), fix it with F1 after installation.

B: Connect two places as shown and fix them with F1.

C: Place part N1 in the position shown in the diagram.

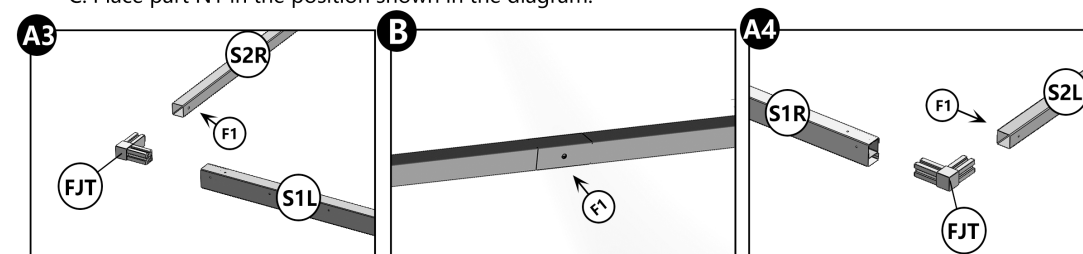

NO.	PART	Qty.
F1		12

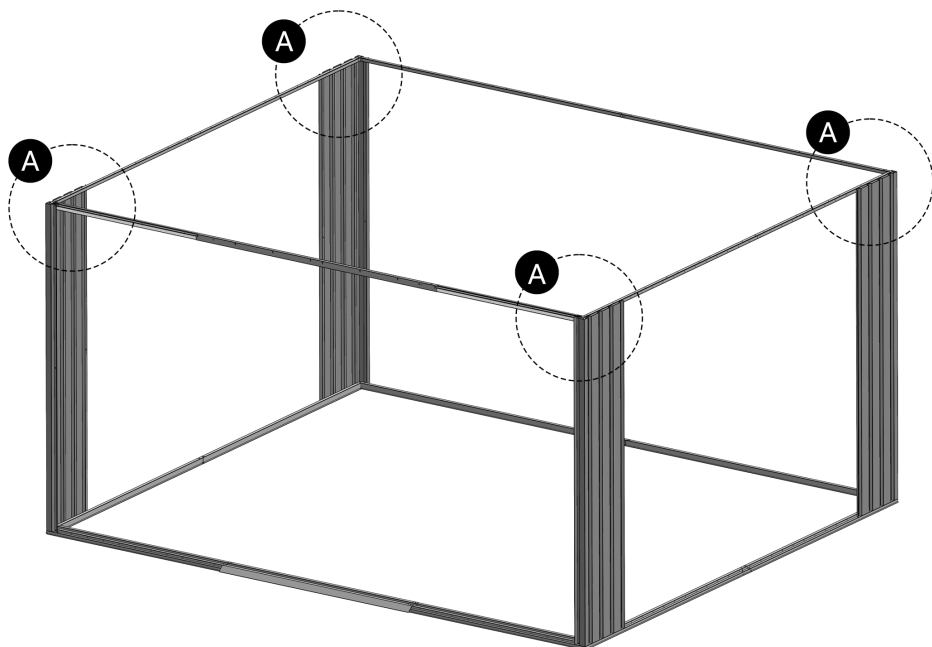

Notice:


In this step, only the middle three holes need to be installed, and both sides need to be reserved.

The reserved hole is shared with other steps.

The walls are tiled on the outside and framed on the inside

NO.	PART	Qty.
Q1		14
Q3		7
F11		30
F1		204





NO.	PART	Qty.
Q5		4
Q6		4

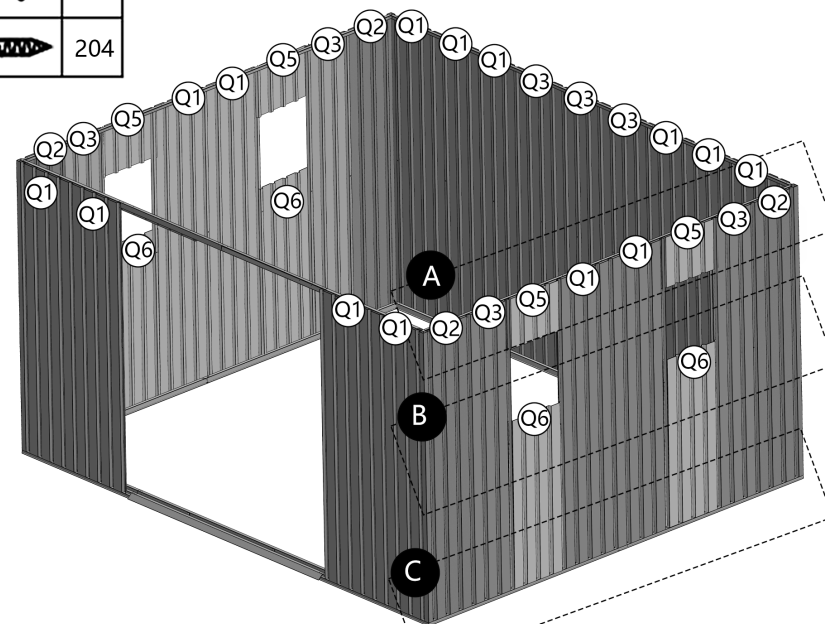


Notice:

As shown in the picture, assemble the wall tiles in turn, Q1\Q3, The top, middle and bottom of the wall tiles need to be screwed,

The upper and lower ends are fixed with F1, and the middle is fixed with F11.

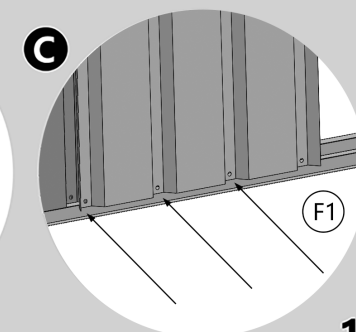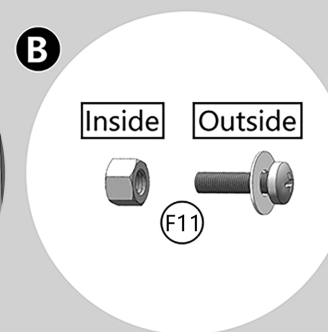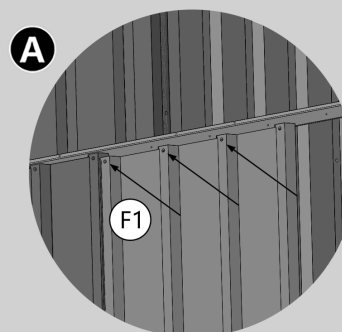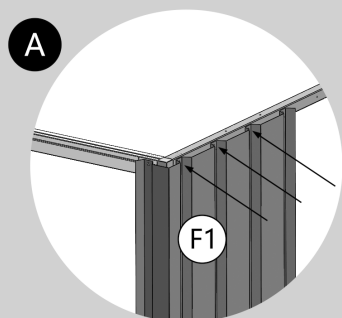

NO.	PART	Qty.
KL		1
KR		1
F1		4
F11		2

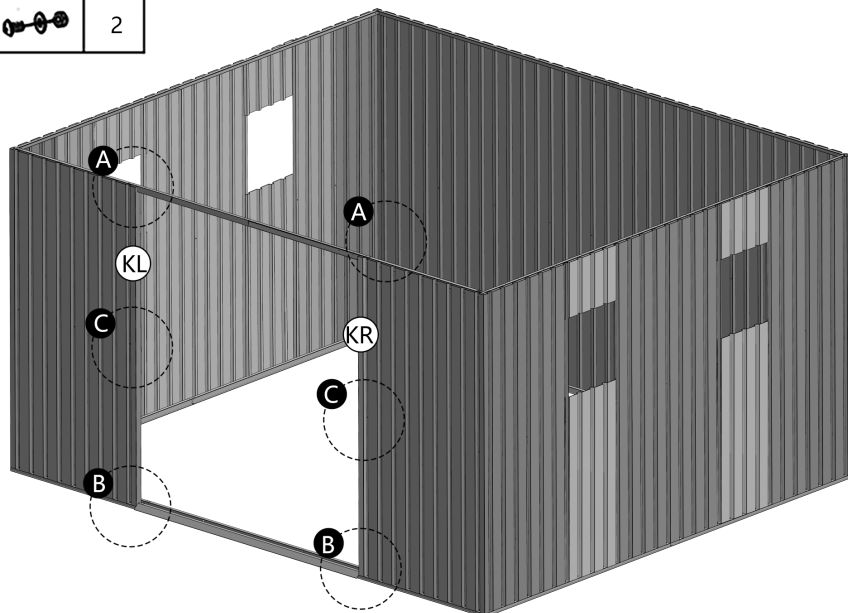


Notice:

As shown in the picture, the steps of door frame and wall tile installation are the same.


The upper, middle and lower parts of KR and KL need screws.

The upper and lower ends are fixed with F1, and the middle is fixed with F11.

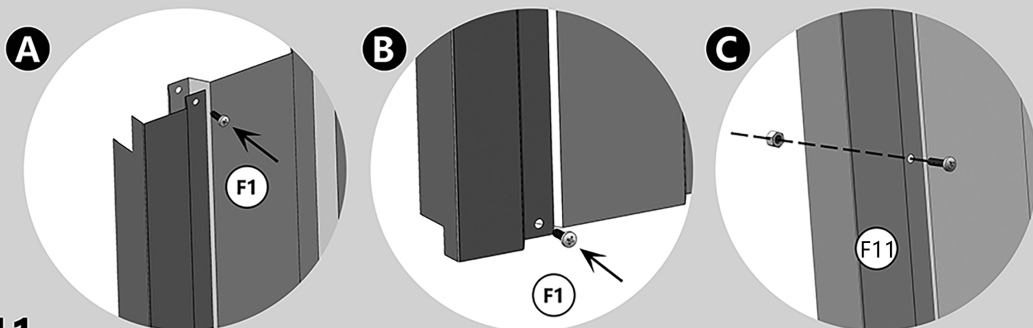

11

NO.	PART	Qty.	NO.	PART	Qty.
B1		4	F3		4
B2L		2	F1		20
B2R		2			
L1L		2			
L1R		2			

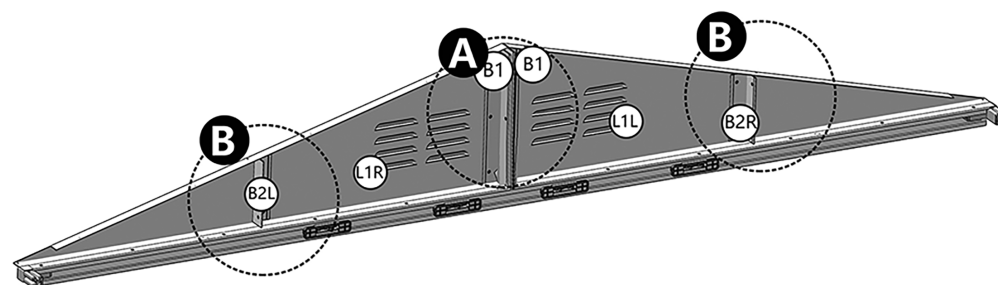


Notice:

B1 has holes on both sides, and the large holes are 2 B1s, L1R, and L1L joined together.

The small holes are 2 B1s connected to L1R and L1L respectively.


B2R and B2L have holes on both sides, and the large holes are B2R and B2L connected to L4L and L4R.

The small holes are B2R and B2L, which are connected to L1R and L1L respectively.

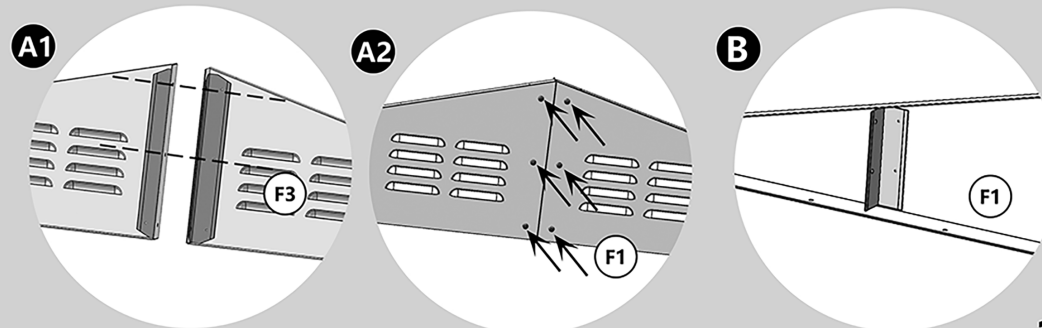


12

NO.	PART	Qty.
F1		32

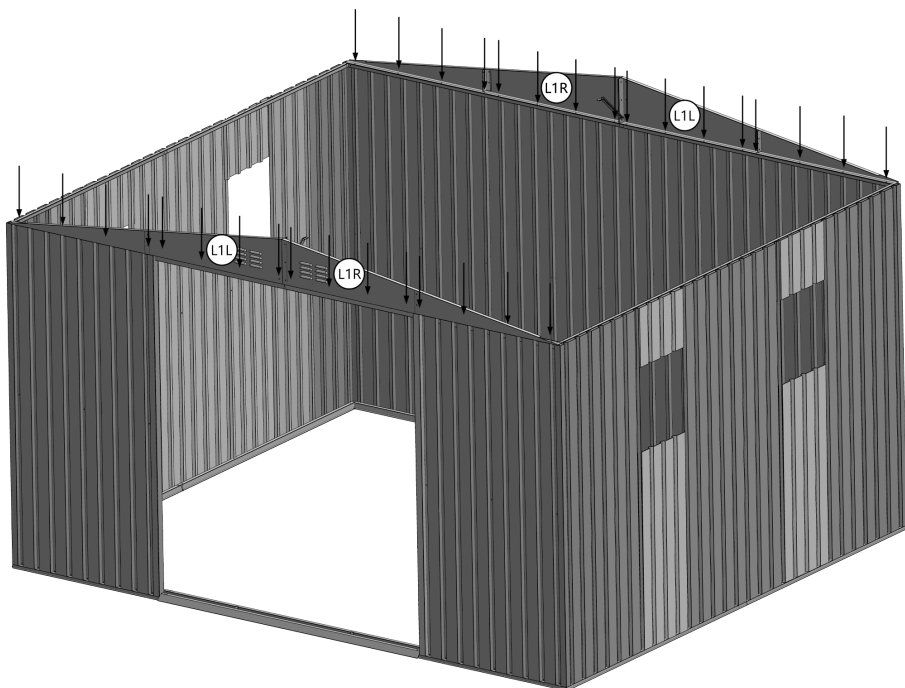


Notice:

The assembled roof support parts are successively installed on the wall tiles with F1

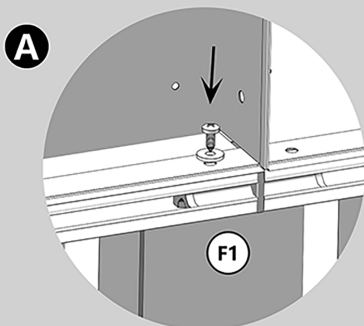


NO.	PART	Qty.
C		2
F3		2
B3R		1
B3L		1

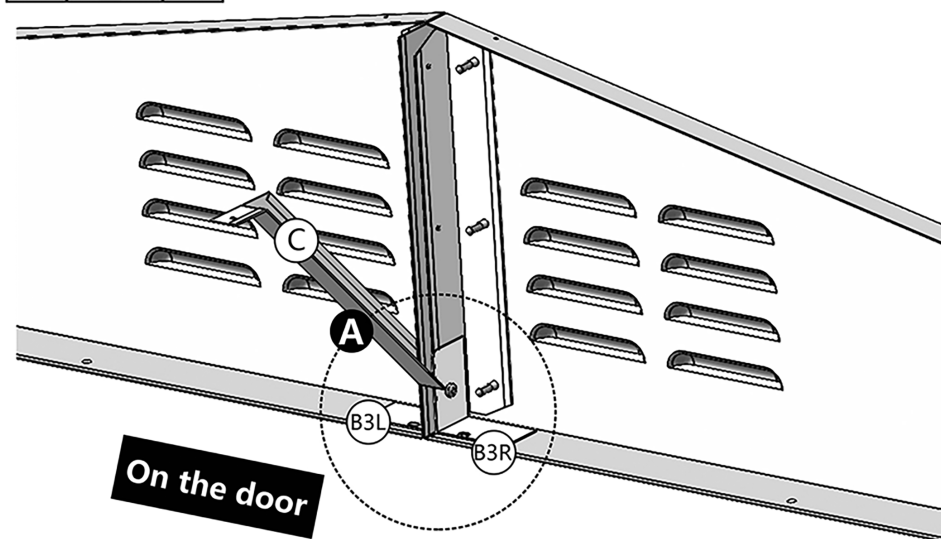


Notice:

Connect C with 2 B1, L1L, L1R, B3L and B3R and fix them with F3;

After completing step A, bend the other end of C about 45° and connect it to the bottom of L3

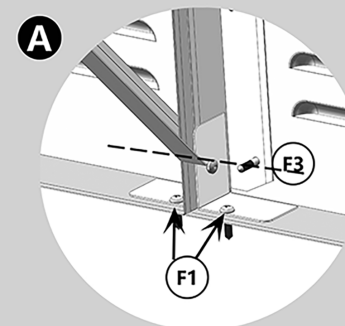

NO.	PART	Qty.	NO.	PART	Qty.
L3		2	F3		22
L4L		2	F1		2
L4R		2			

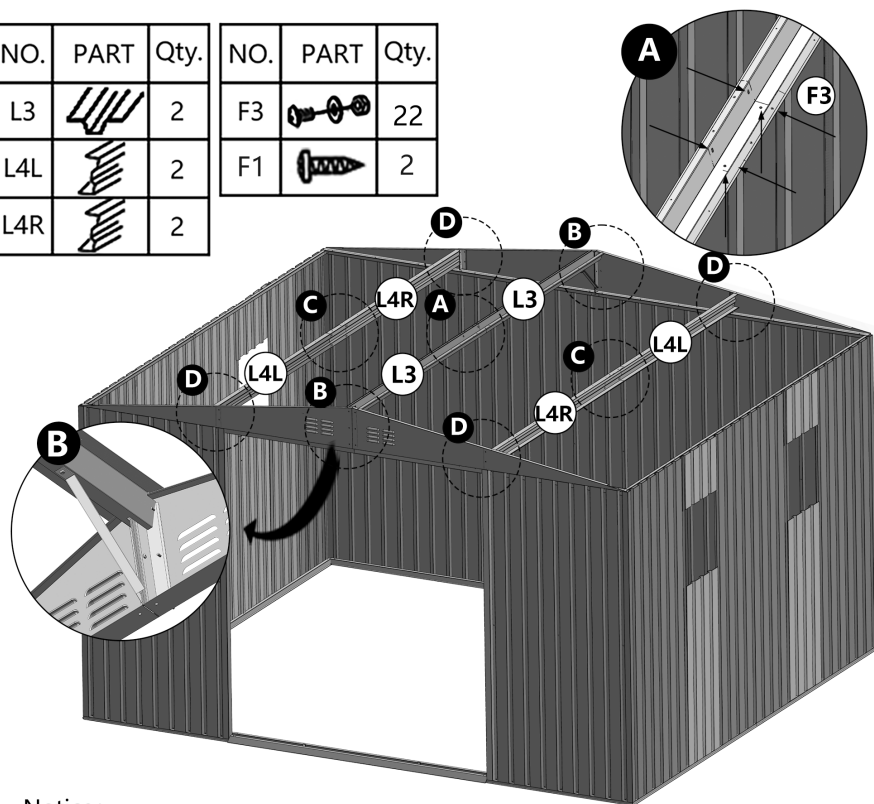

Notice:


A: Align the holes on the L3 components and join them together, then secure them from the outside using F3.

B: Position the assembled L3 assembly in the indicated location and secure it using F1.

C: Join the L4L and L4R components together, align the holes, and secure them using F3.



D: Position the assembled L4L and L4R assembly in the indicated location and secure it using F3.

NO.	PART	Qty.
Q4		20
F1		120

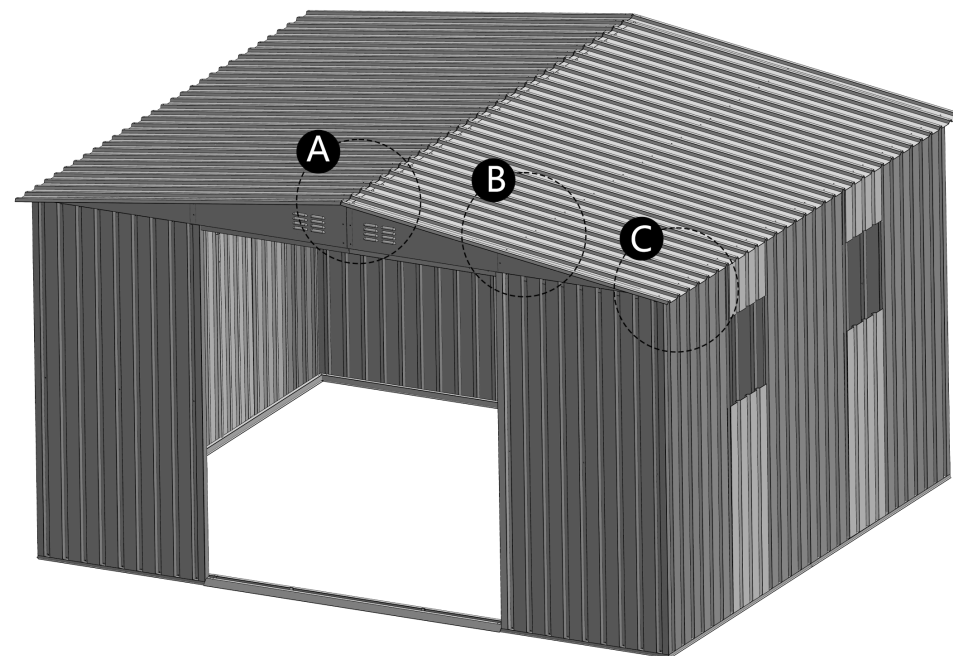


Notice:

Install Q4 in sequence, overlap between every 2 pieces, and each Q4 needs 3 rows of F1 fixed.

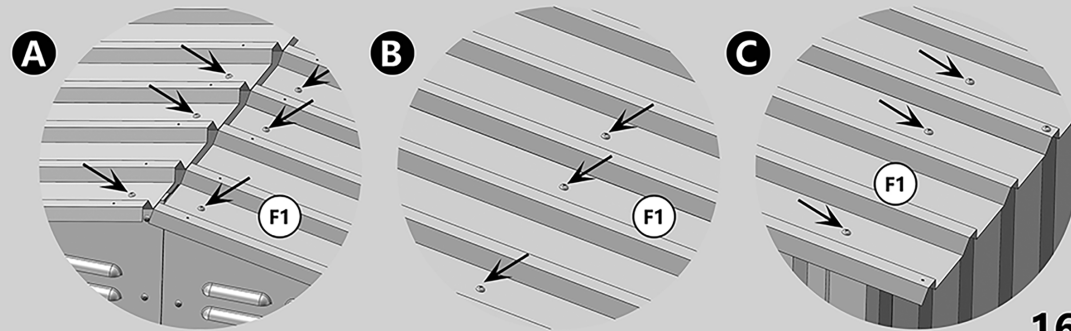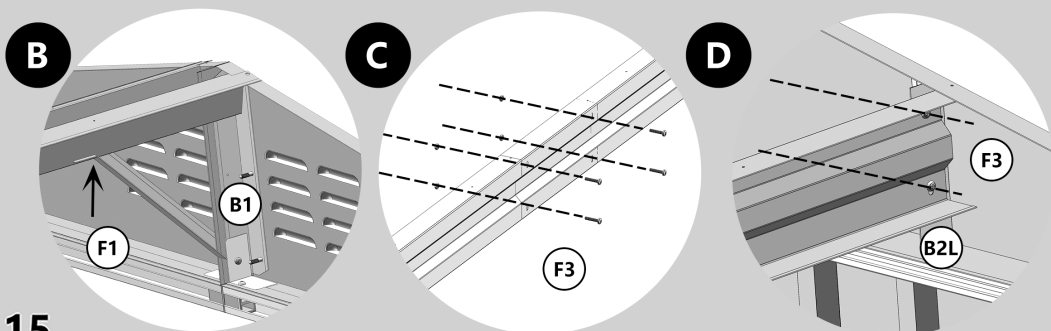



NO.	PART	Qty.	NO.	PART	Qty.
GB1		4	F1		22
GB2		4	J1		4

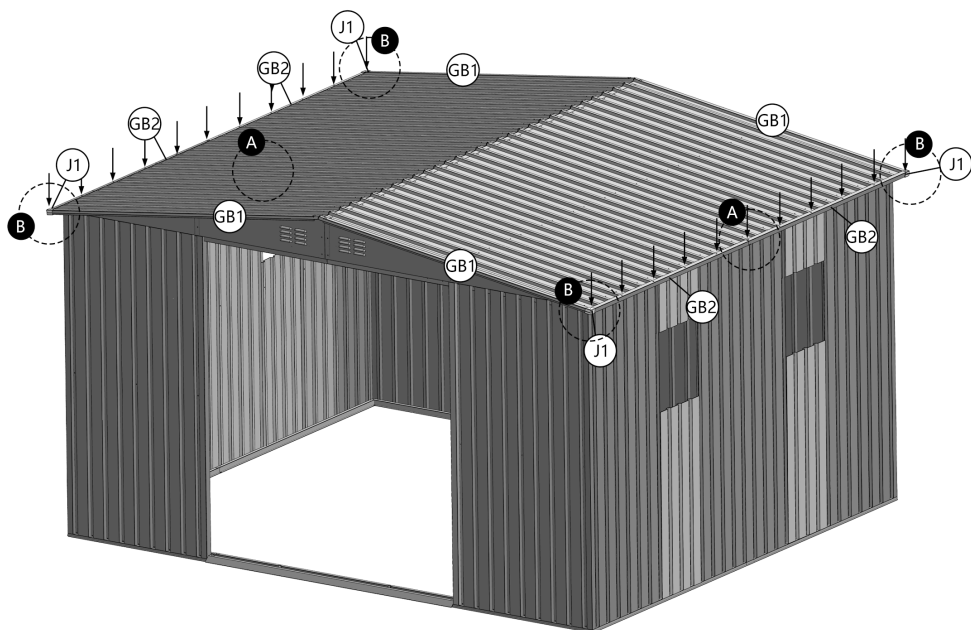

Notice:


Step A: Fix 2 GB2 parts with F1, fix other holes with F1.

Step B: Fix GB1, GB2, J1 parts with F1.

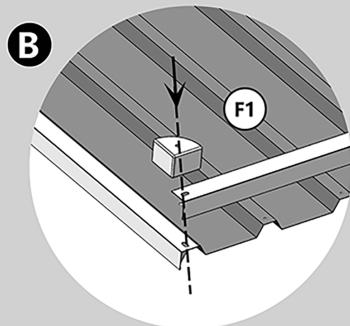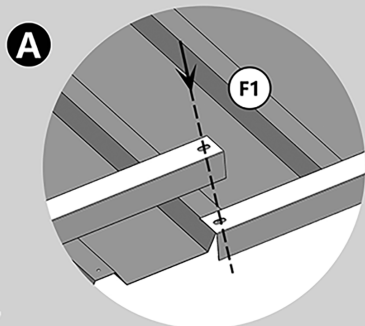

NO.	PART	Qty.	NO.	PART	Qty.
GW1		2	GE		2
GW2		1	F1		9

Special note: The installation of F1 must add plastic gaskets, which can play the role of roof waterproof.


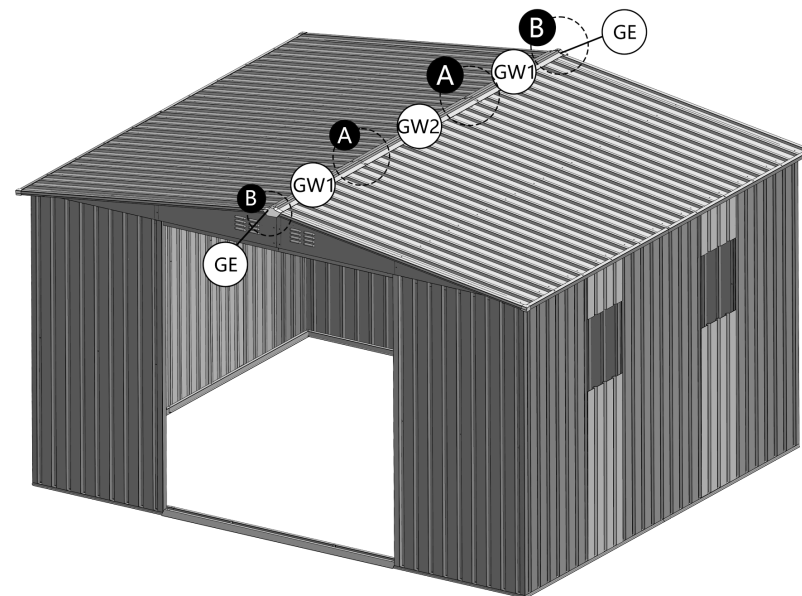


Notice:



Step A: GW1, and GW2 are fixed at the top with F1.

Step B: GE is fixed at both ends with F1.

① Description: The holes on the most sides are shared by GW1, Q4 and GB1.

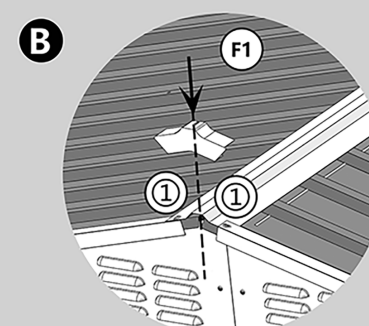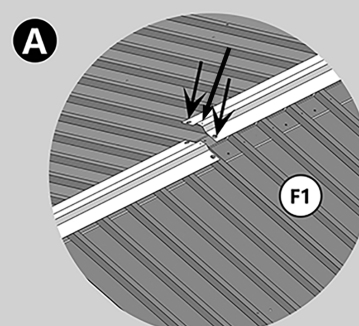


NO.	PART	Qty.	NO.	PART	Qty.	NO.	PART	Qty.	NO.	PART	Qty.
M2		4	M5L		1	M		4	F3		4
M3		4	M5R		1	GD		4	F4		12
M4		2	MB		2	F1		6	F11		2

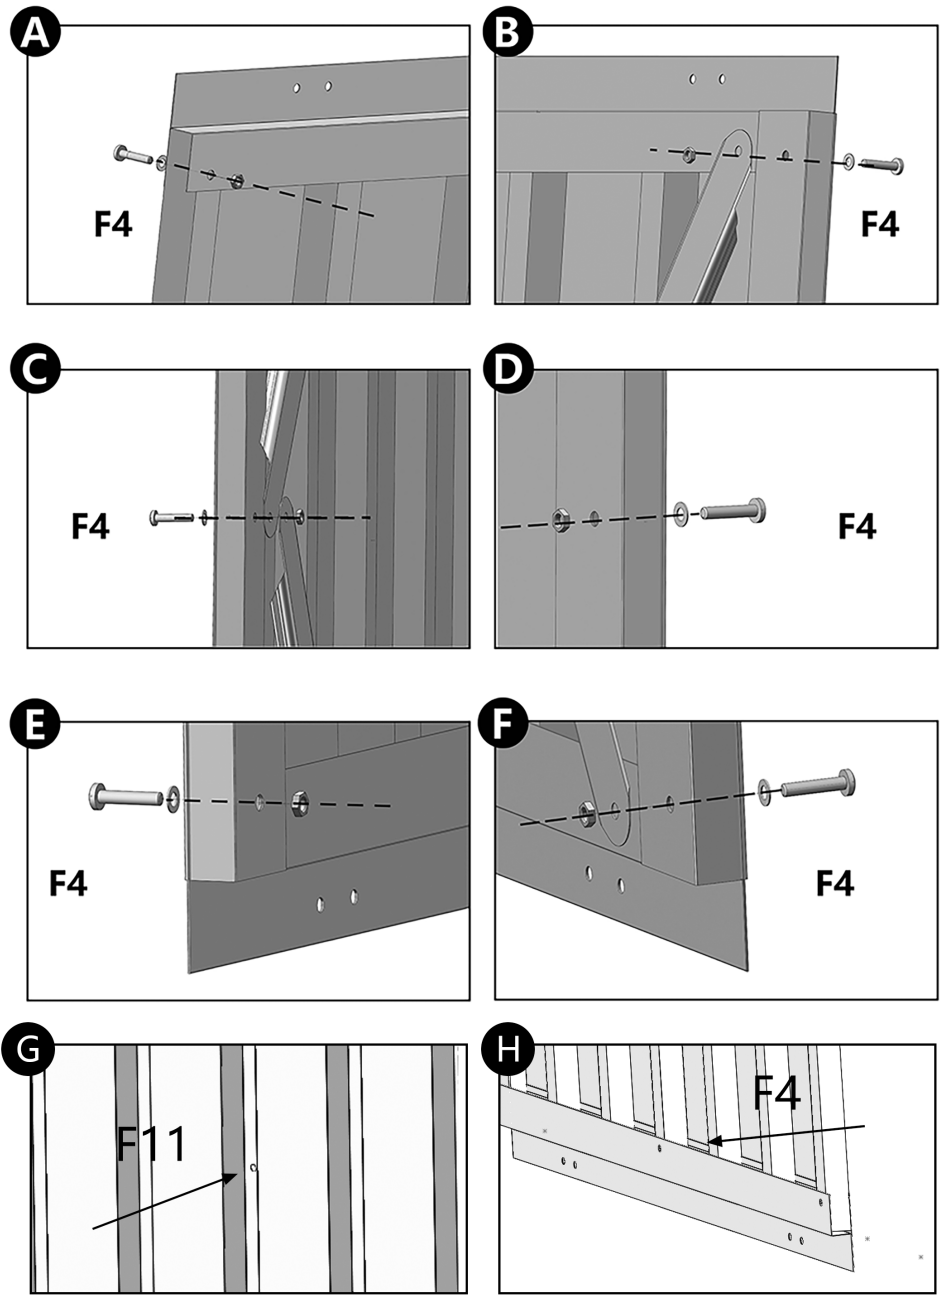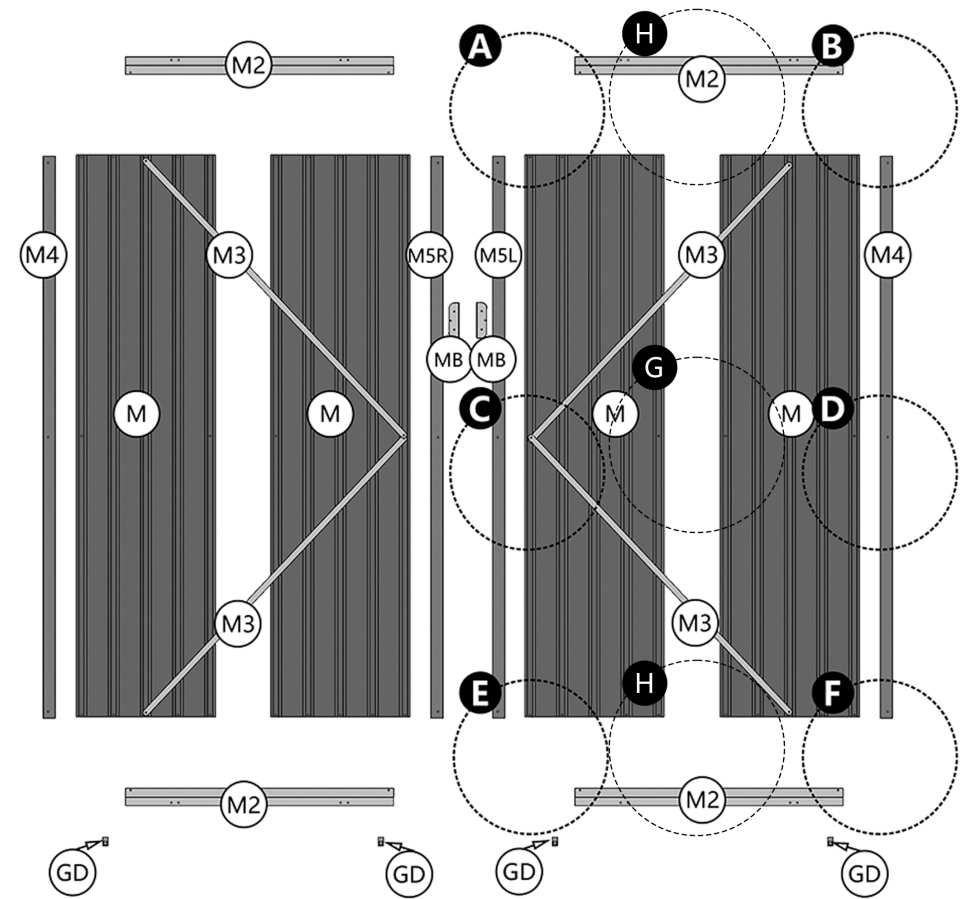


All screws in the diagram secure the door from the front.


NO.	PART	Qty.
F1		3
F3		2
F4		6
F11		1

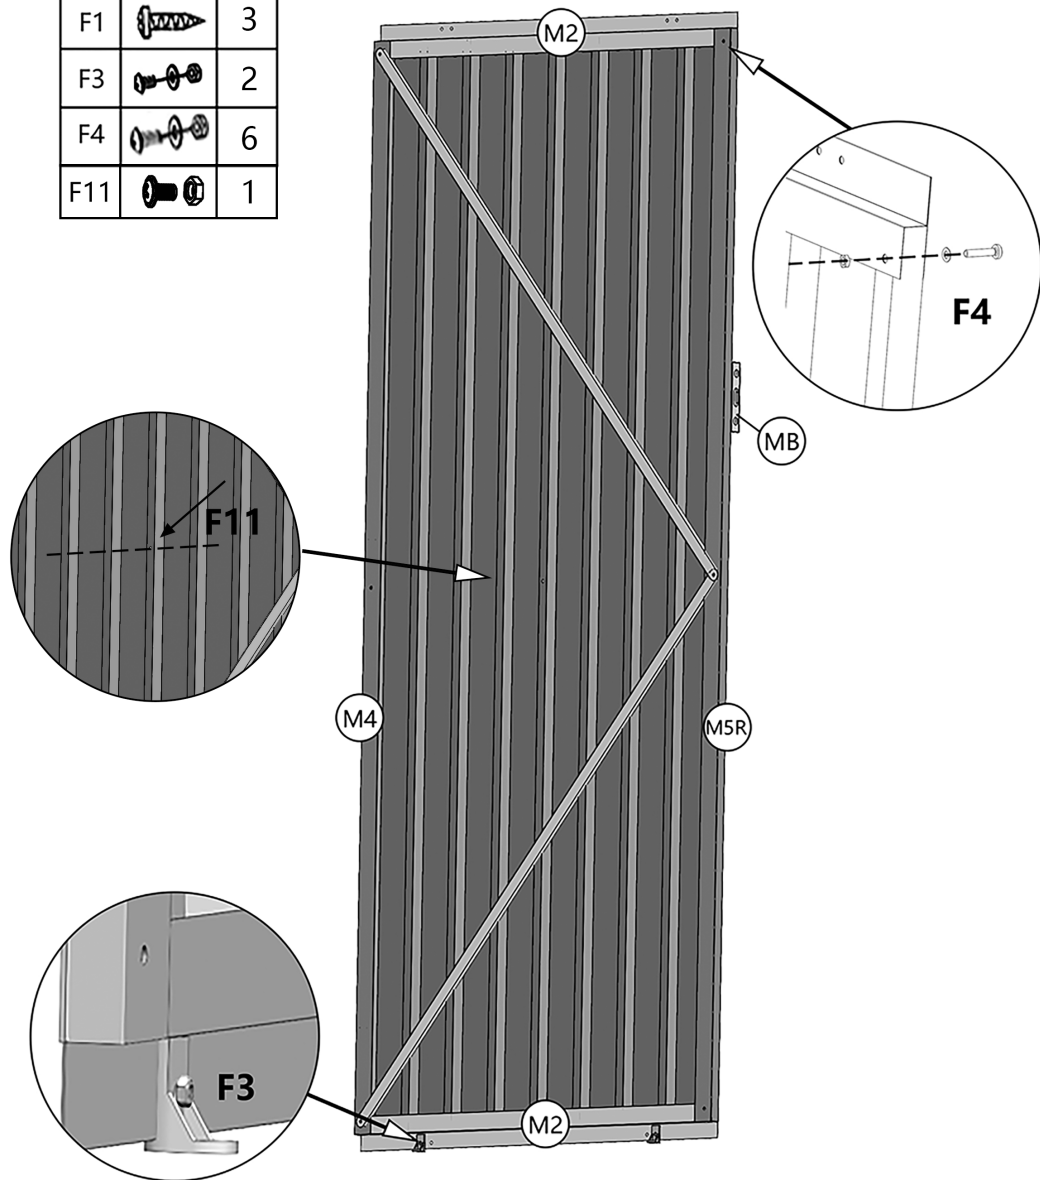

NO.	PART	Qty.
F1		3
F3		2
F4		6
F11		1

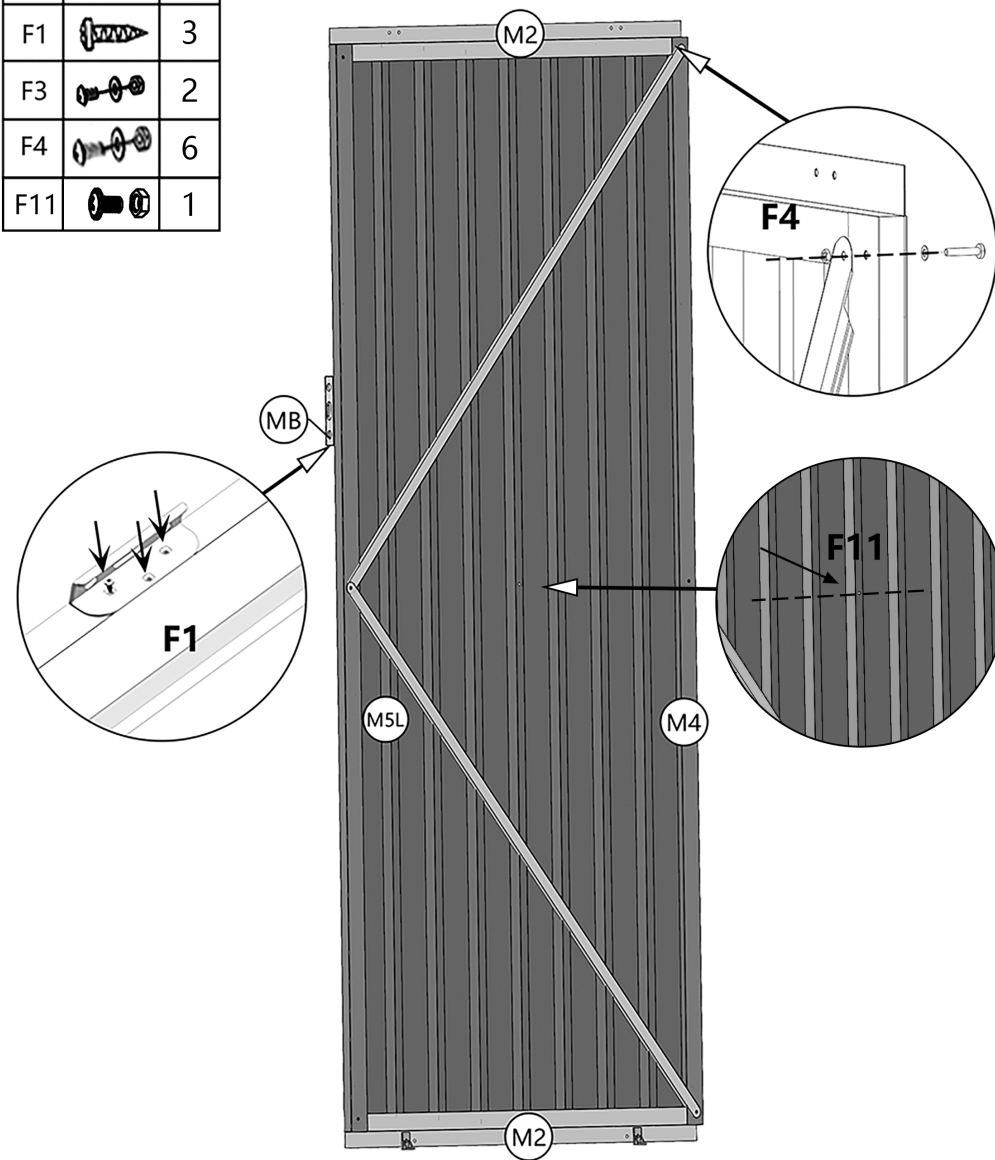


NO.	PART	Qty.
F1		8

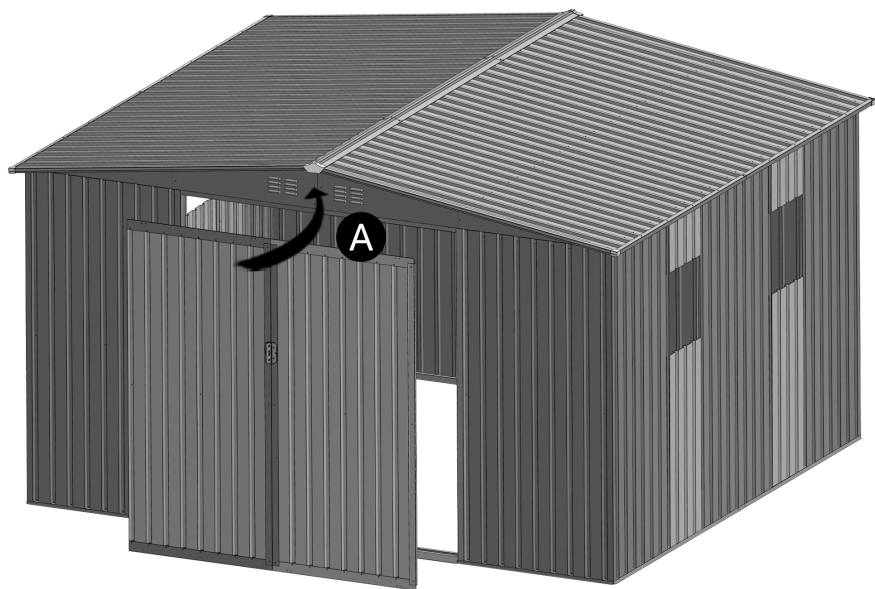

Notice:

Use F1 to secure the installed door to the pulley


The adjustment of the door can be achieved by the three holes of the pulley being at different heights

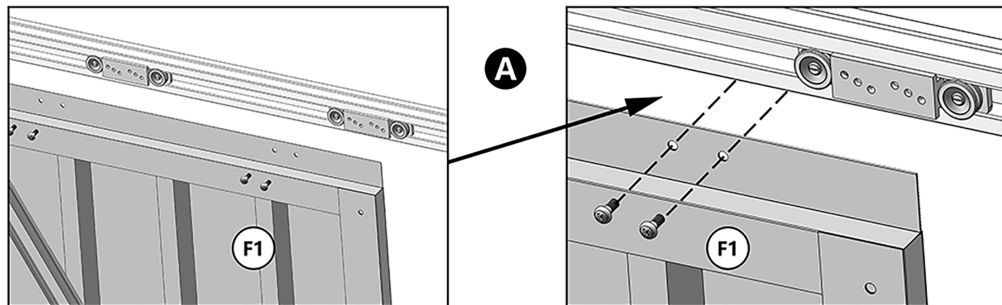

NO.	PART	QTY
W1		4
W4		8
Q6		4

NO.	PART	QTY
W2		8
F9		16

NO.	PART	QTY
W3		8
Q5		4

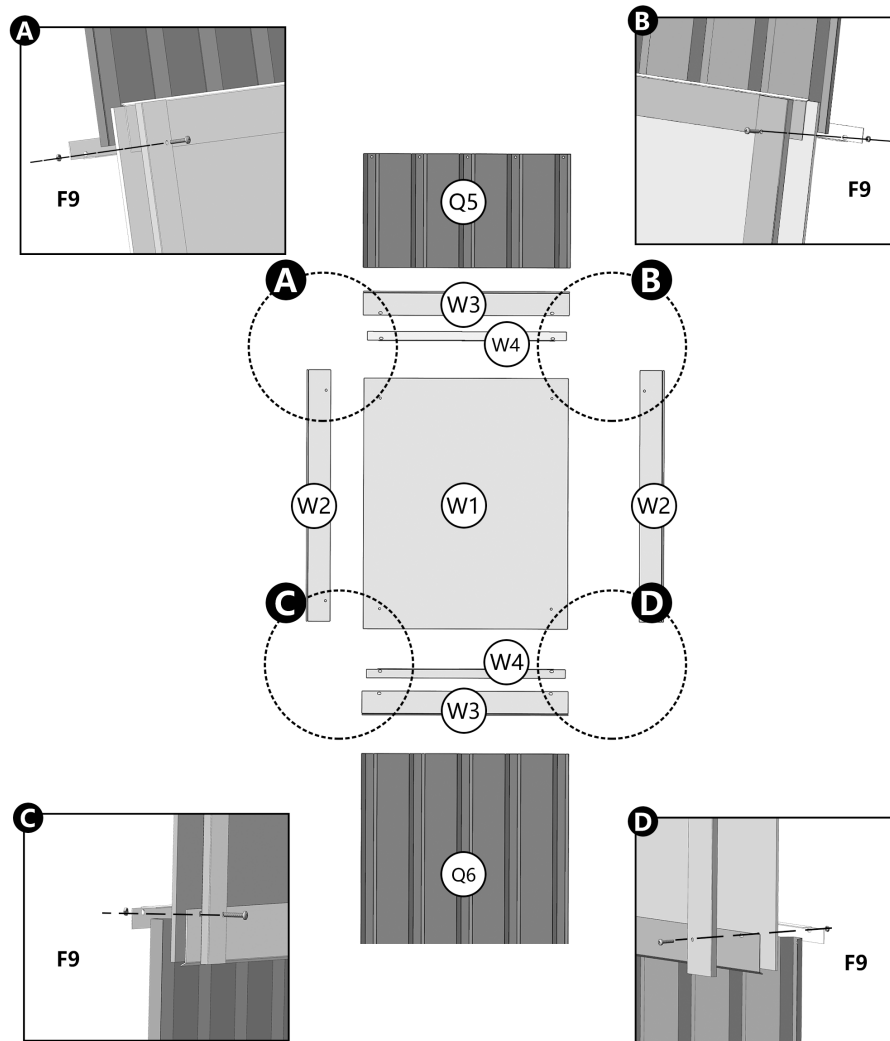


Notice:

Step 1: Fix the 2 groups W2 and W3 with F9 screw rods


Step 2: Install W1 to W2, W3 frame (F9 screw rod through W1)

Step 3: Insert the installed window into the window hole

Step 4: Insert W4 into the screw rod of F9 on the inside and screw on the nut

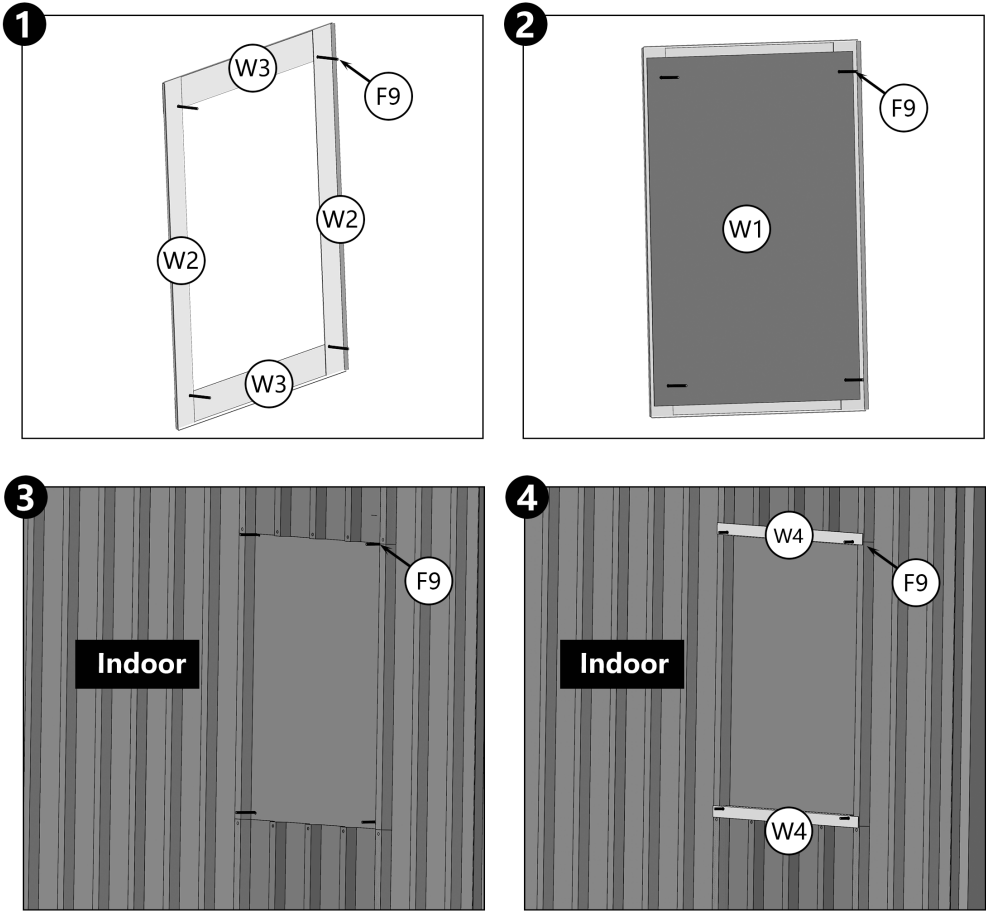

NO.	PART	Qty.
F9		

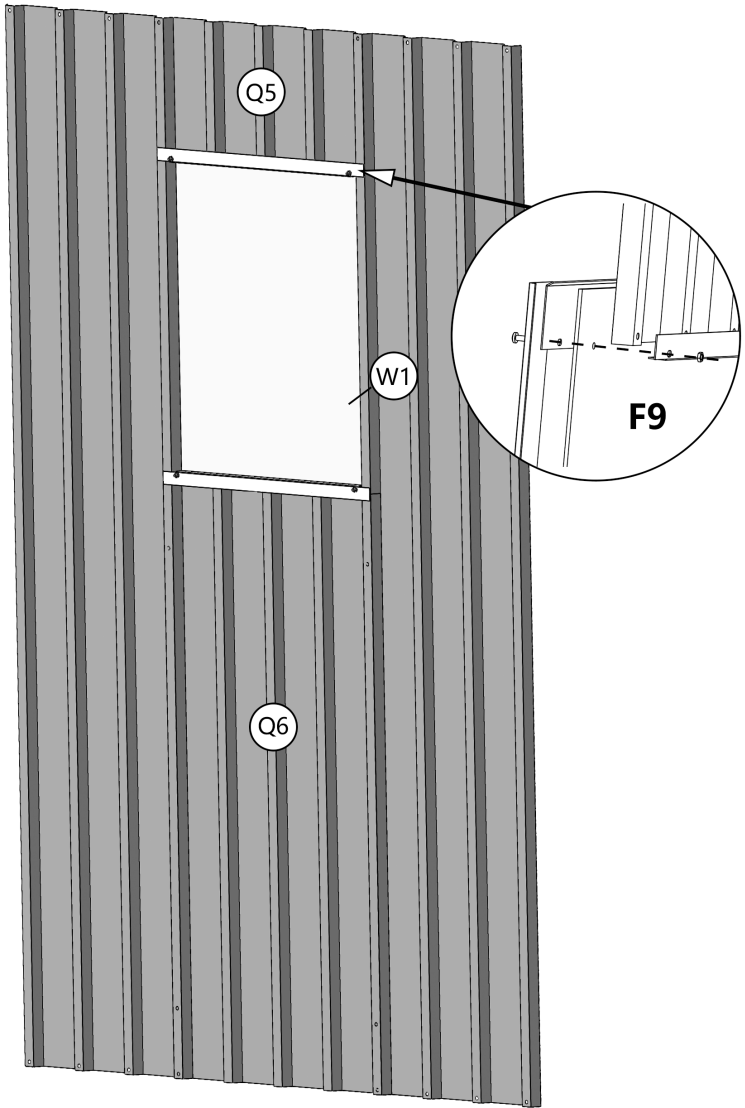

NO.	PART	Qty.
F9		

