

Assembly Instructions



(W x D x H) 1.34m x 0.72m x 2.23m

Pressure Treated products should not be treated with any other products for the first month.

PLEASE KEEP THESE INSTRUCTIONS


Assembly Instructions

Requires 2 person assembly.

Tools required: Corded / Cordless Drill, Pozi-drive Bit / Screwdriver, Tape Measure
3mm Drill Bit required in order for you to drill all screw holes before construction.

Item	Description	Quantity
A	Arch	2
B	Rafter	5
C	Post	4
D	Trellis Panel	2

Fixings		
	60mm Screws	18
	40mm Screws	8

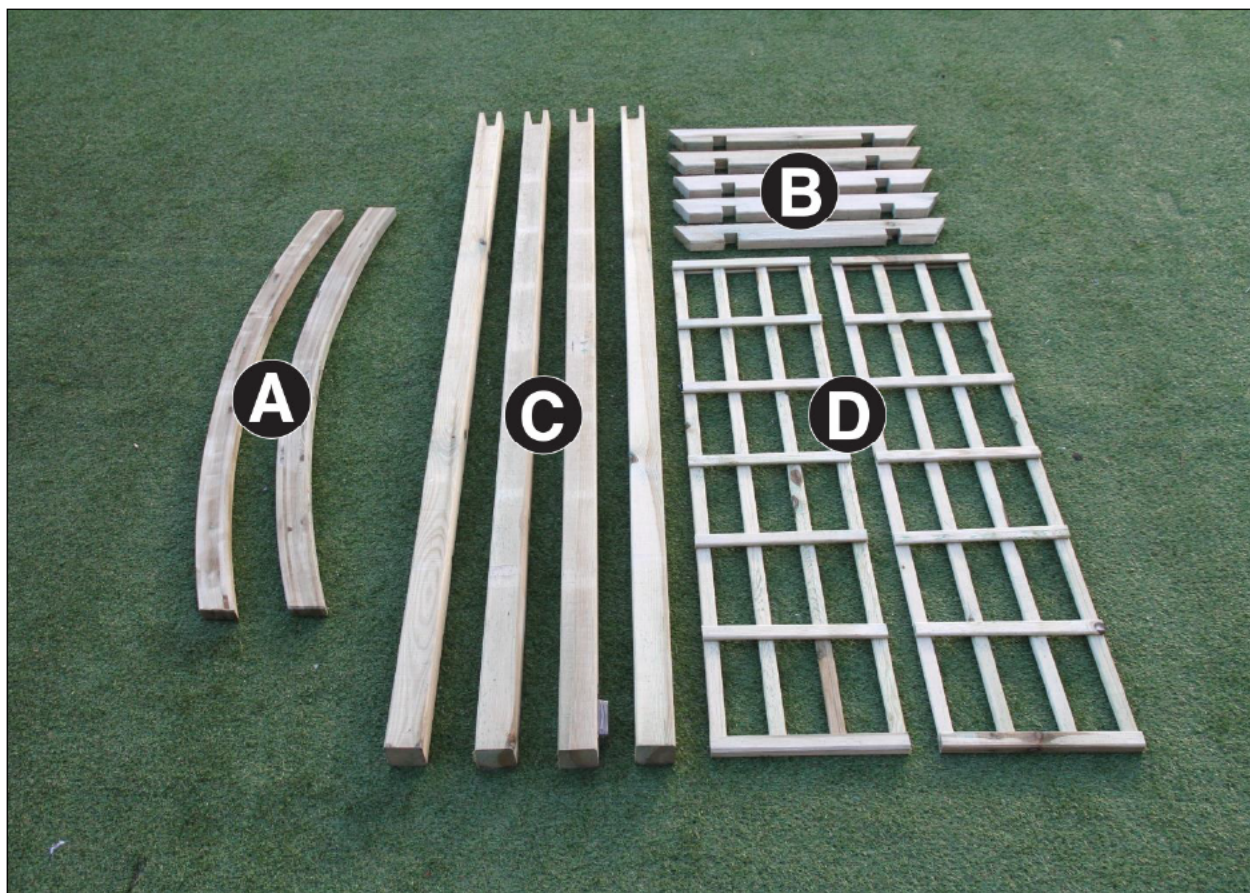

Please take a few moments to check all pack contents listed.

Assembly requires 2 persons.


**Tools required: Corded/Cordless Drill, Pozi-drive Bit/Screwdriver, Tape Measure.
3mm Drill Bit required in order for you to drill all screw holes before
construction.**

1. Position Rafters B at both ends of Arches A and fix using 4no 60mm Screws - 2 per Rafter (Fig.1a). Space out remaining Rafters B equally (Fig.1b) and attach using 6no 60mm Screws.
2. Position Post C onto Arch A as shown in Fig.2a (adjust width to suit). Fix in position using 2no 60mm Screws (Fig.2b).
3. Place Trellis Panel D 400mm from base of Post C and fix in position using 2no 40mm Screws (Fig.3a & 3b).
4. Position second Post C as shown in Fig.4a and fix to Arch A using 2no 60mm Screws.


Fix Trellis Panel D to second Post C using 2no 40mm Screws (Fig.4b)

Repeat stages 1 to 4 for remaining Posts & Trellis Panel on opposite side of arch.


1a

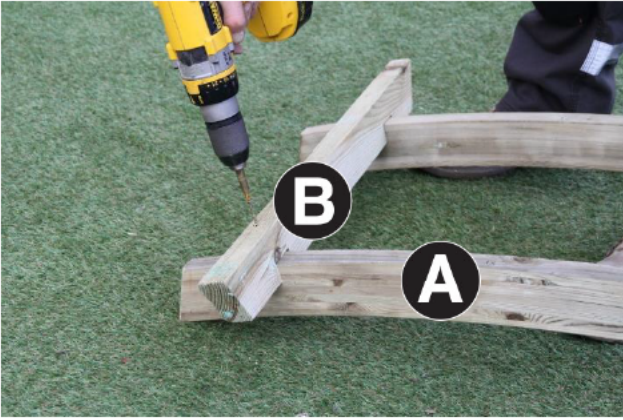


1b

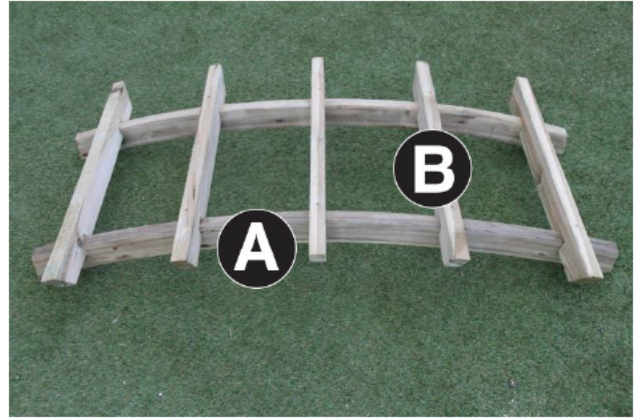


2a

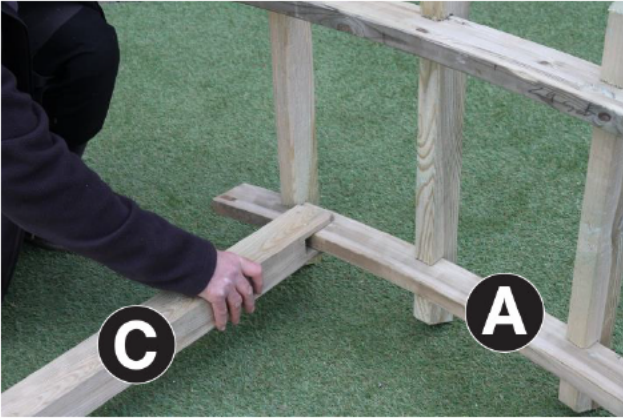


2b

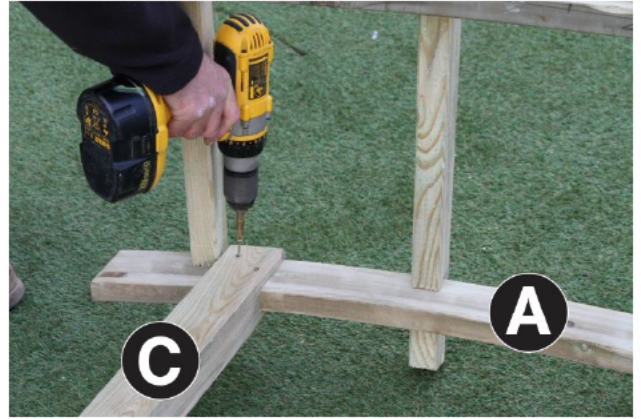


3a

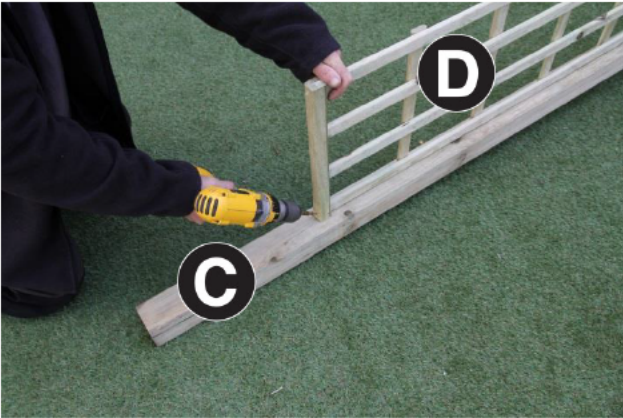

3b

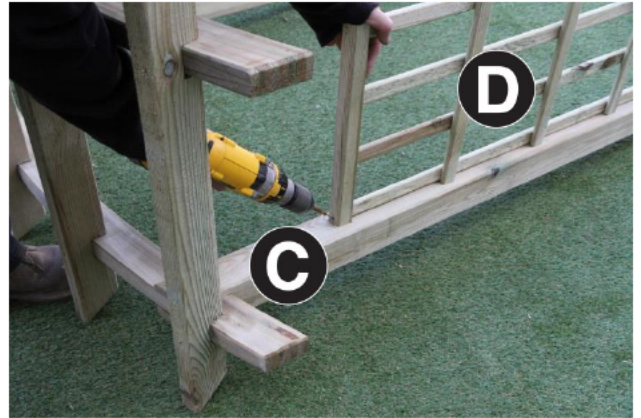

4a

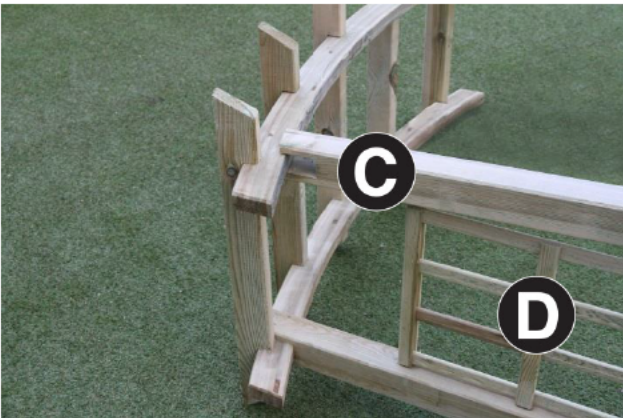

4b

