


Installation Instructions

Method 1: Nail-Free Installation




1. Clean the wall surface with a towel.

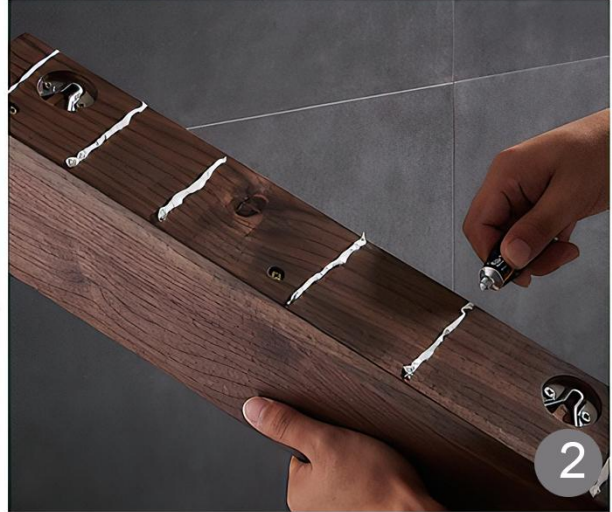

2. Apply a thick layer of glue to the back of the wooden rack.



3. Attach the wooden rack to the wall and secure it with adhesive strips.

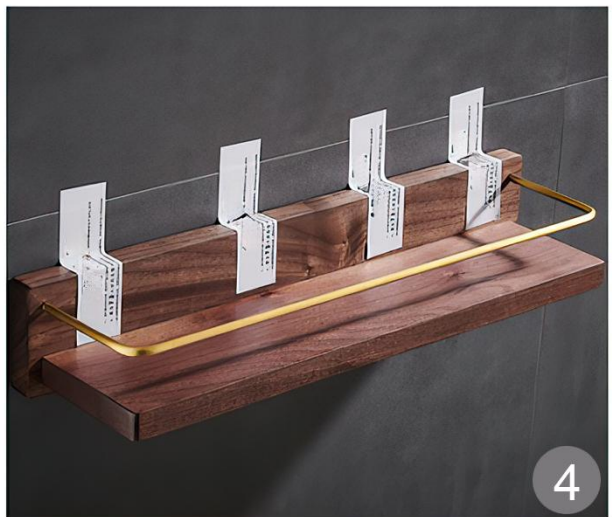

4. Wait patiently for 72 hours before removing the adhesive strips.