



NFN110

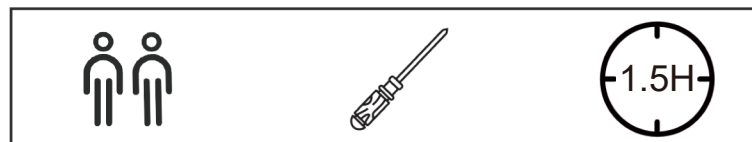













CAUTION:When tightening the screws, tighten sequentially. Do not tighten any screws fully and then towards the next one. When every part is OK, then tighten all the screws.

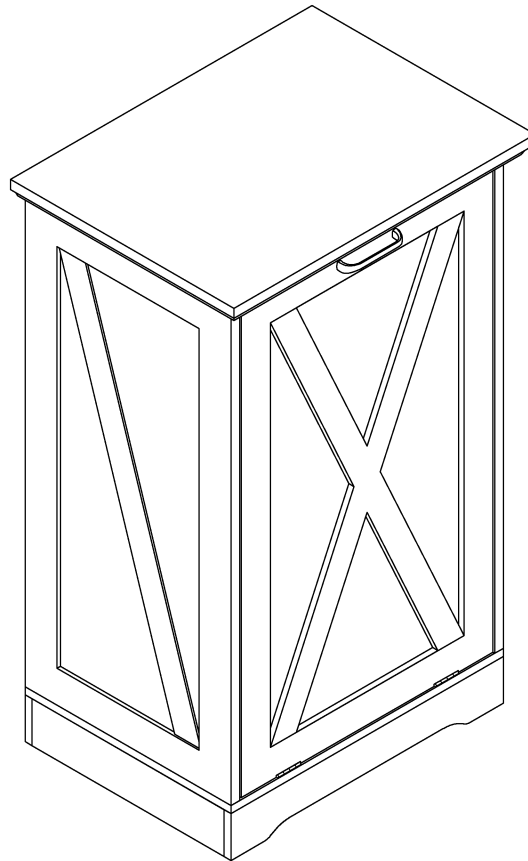


PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

E-mail: service@replycenter.net

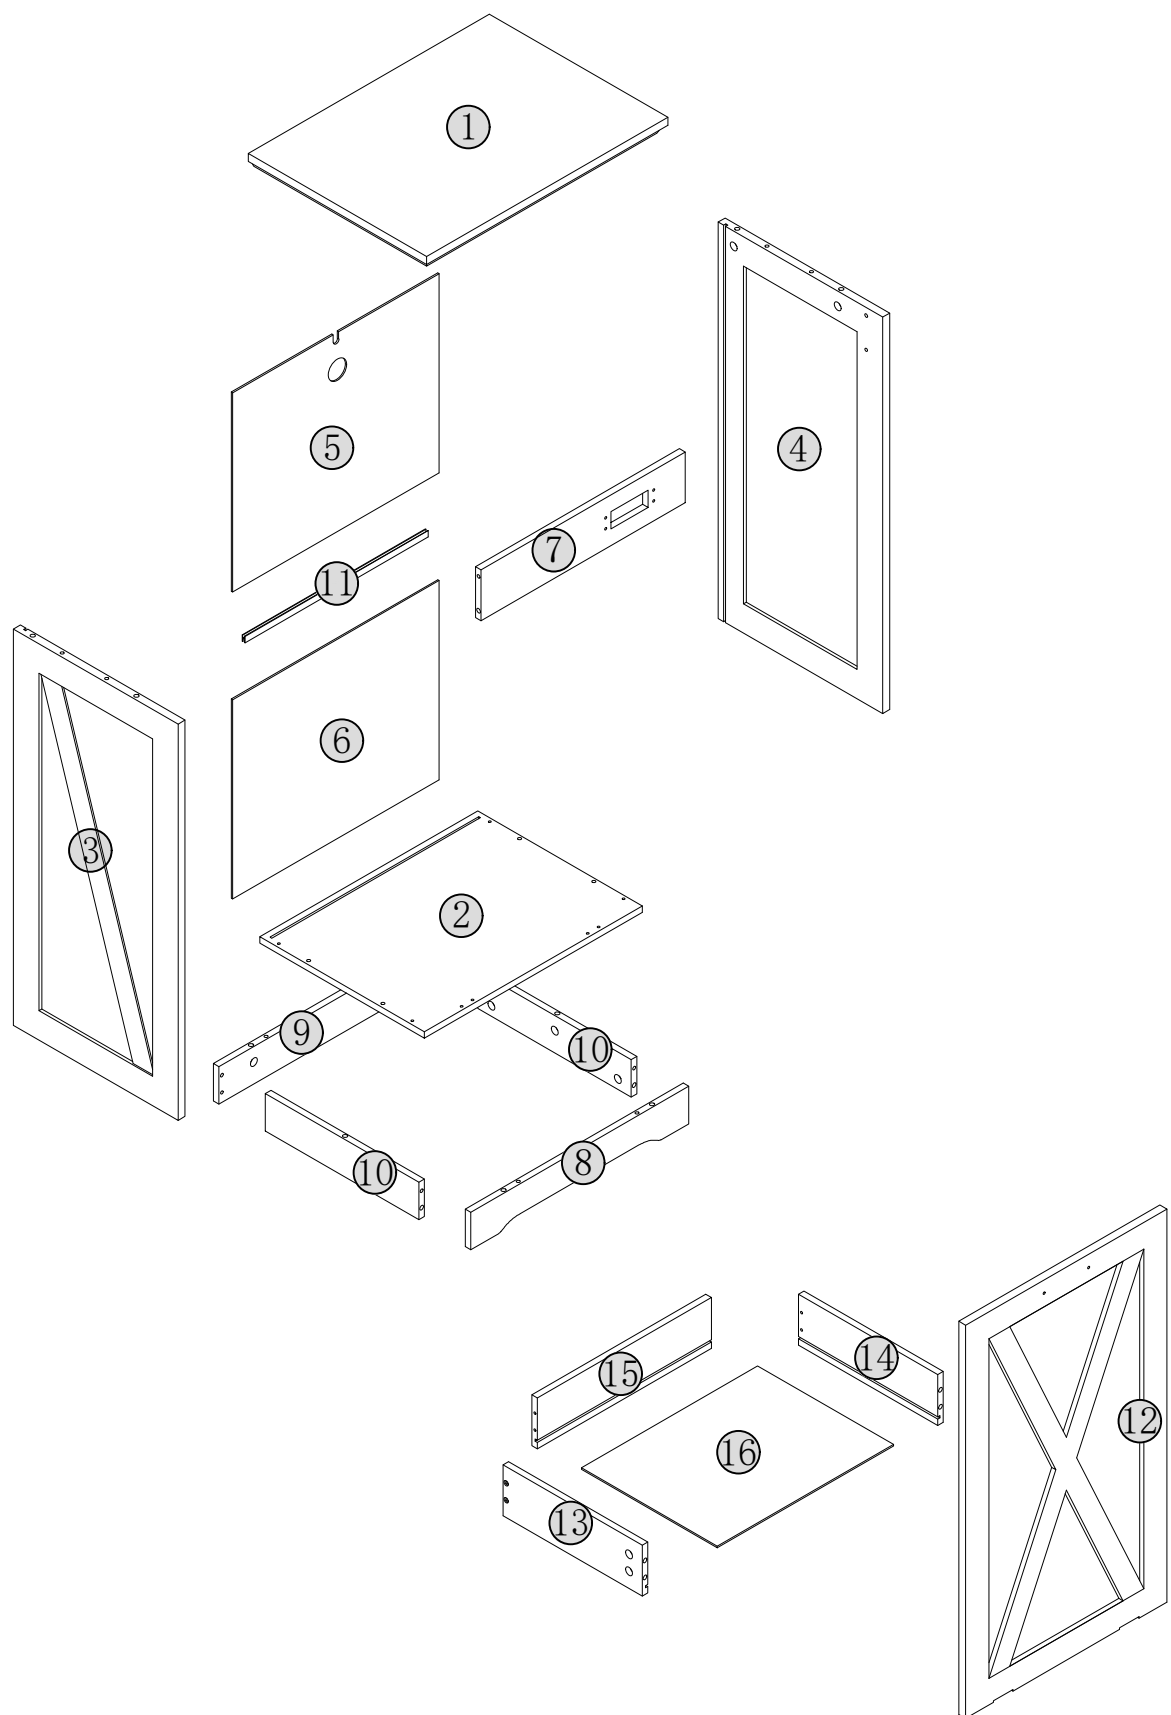

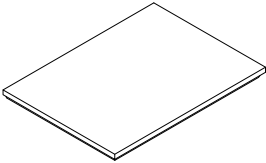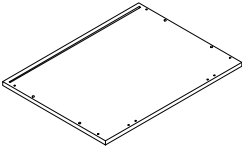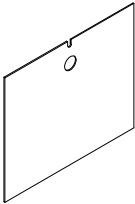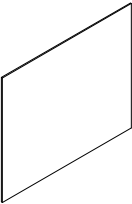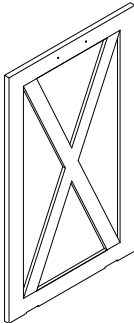①  1PC	②  1PC	③  1PC
④  1PC	⑤  1PC	⑥  1PC
⑦  1PC	⑧  1PC	⑨  1PC
⑩  2PCS	⑪  1PC	⑫  1PC
⑬  1PC	⑭  1PC	⑮  1PC

16

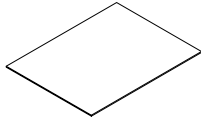

1PC

A×20




φ6×35mm

B×18




φ6×30mm

C×20



φ15×10mm

D×4



φ4×35mm

E×1



F×1



G×6



φ4×14mm

H×1



I×2



J×12



φ3×12mm

K×4



φ4×30mm

L×1




M×2



φ4×18mm

N×1



O×8



P×8



φ3×14mm

Q×1




R×1




φ4×40mm


1

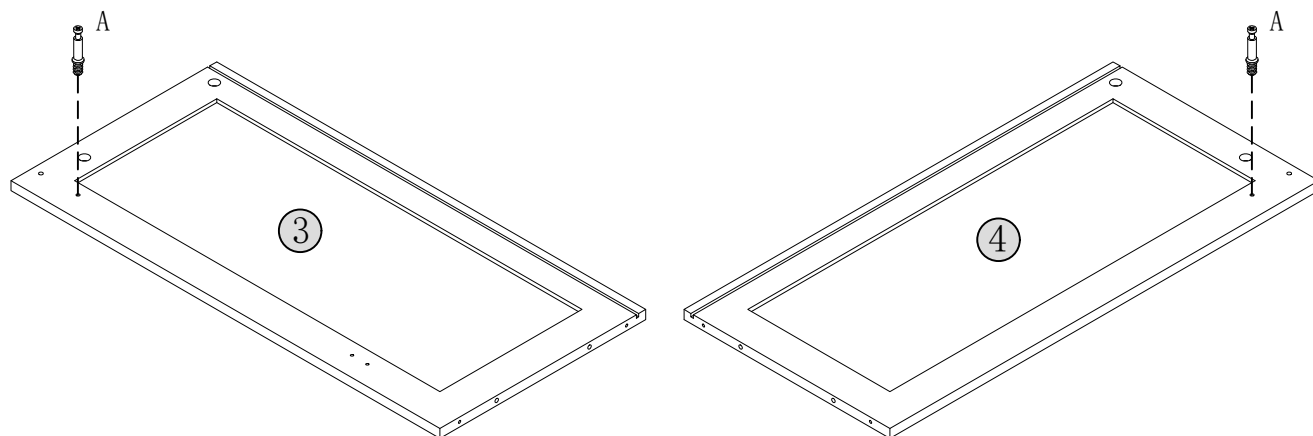 $A \times 2$  $\phi 6 \times 35\text{mm}$

2

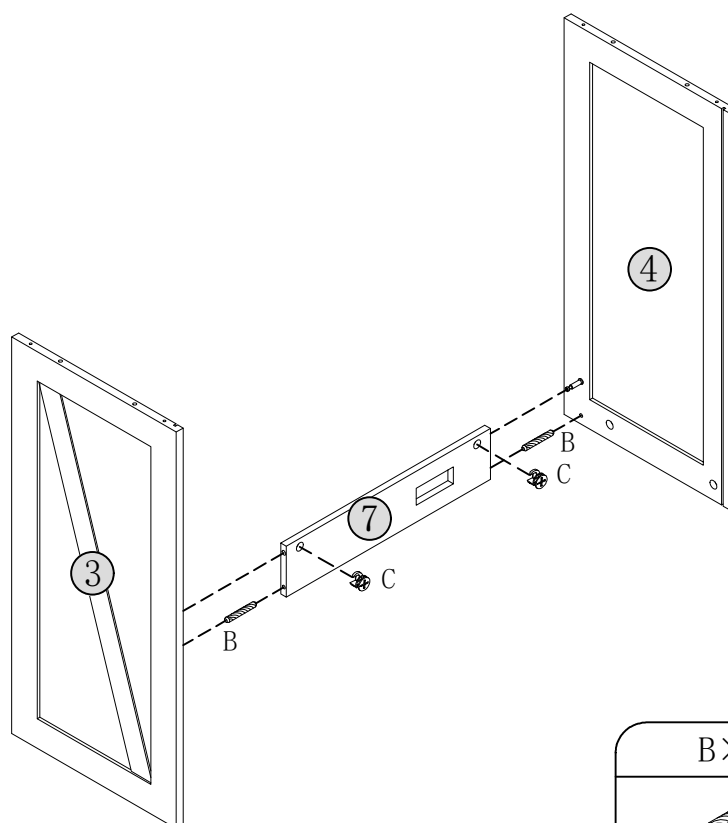 $B \times 2$  $\phi 6 \times 30\text{mm}$ $C \times 2$  $\phi 15 \times 10\text{mm}$


3

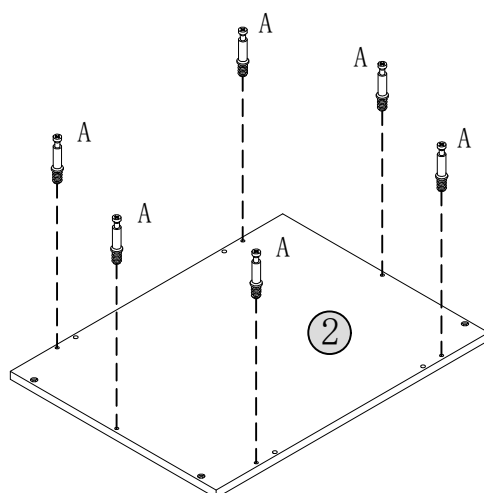

A × 6



4

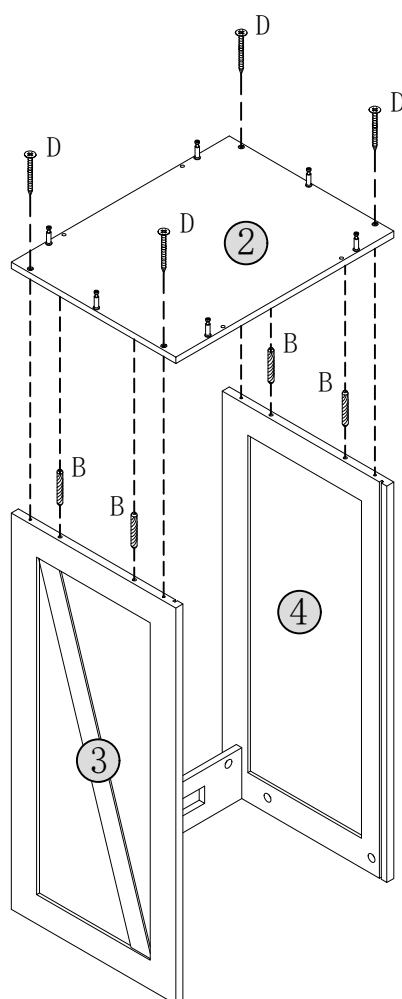


B × 4



D × 4




5

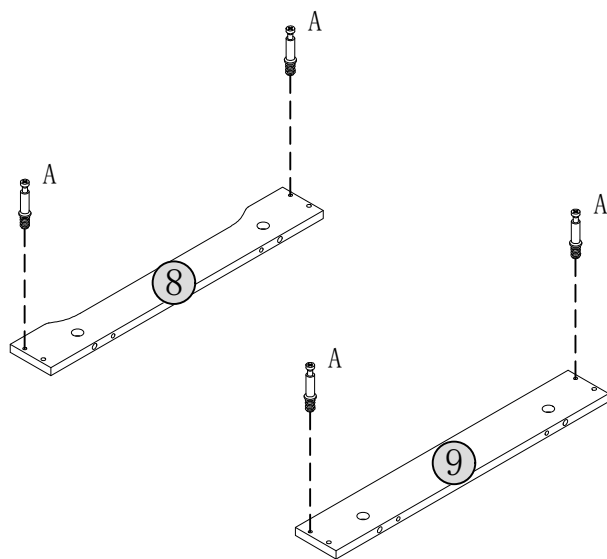

$A \times 4$


$\phi 6 \times 35\text{mm}$

6

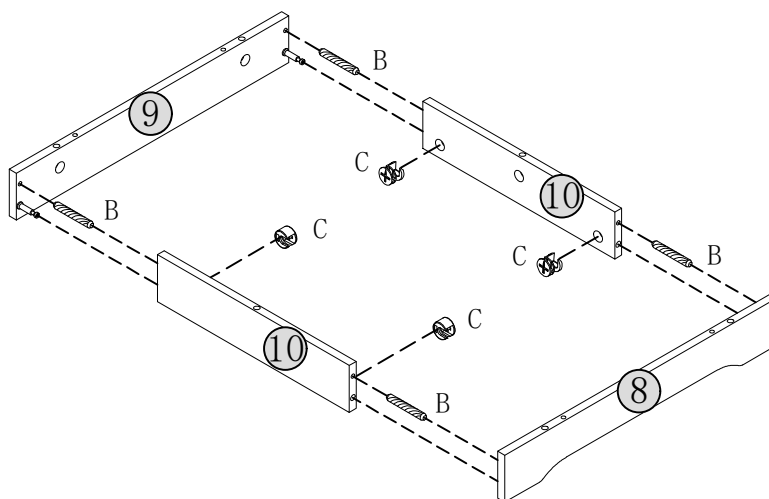



$B \times 4$	$C \times 4$
	
$\phi 6 \times 30\text{mm}$	$\phi 15 \times 10\text{mm}$

7

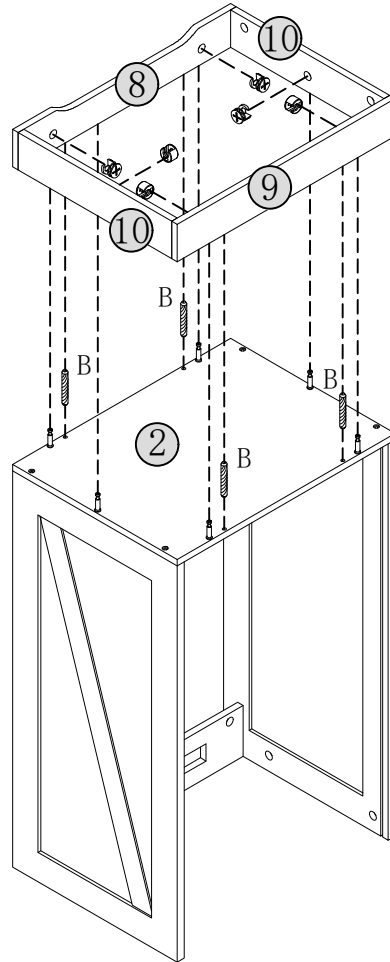



B×4	C×6
	
φ6×30mm	φ15×10mm

8


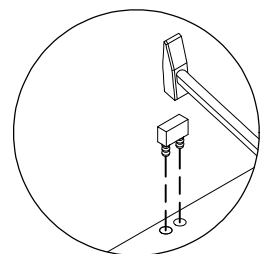
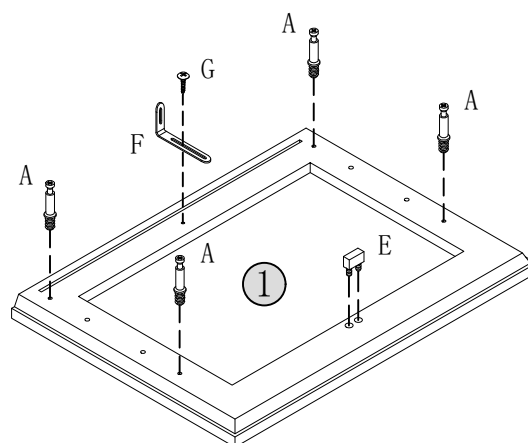


A×4	E×1	F×1	G×1
			
φ6×35mm			φ4×14mm

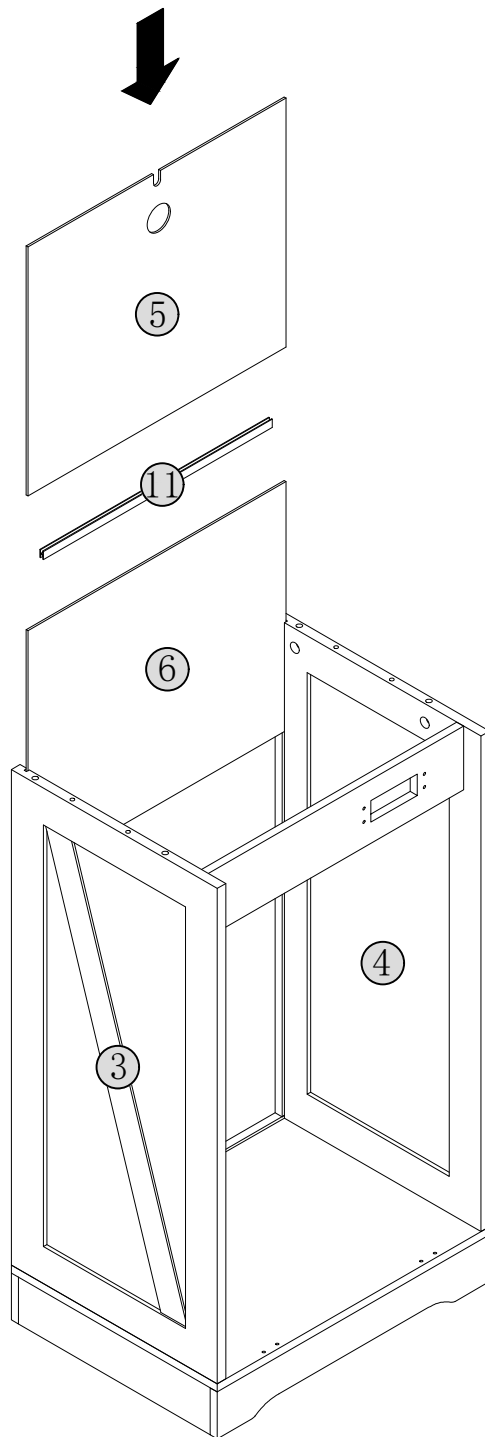



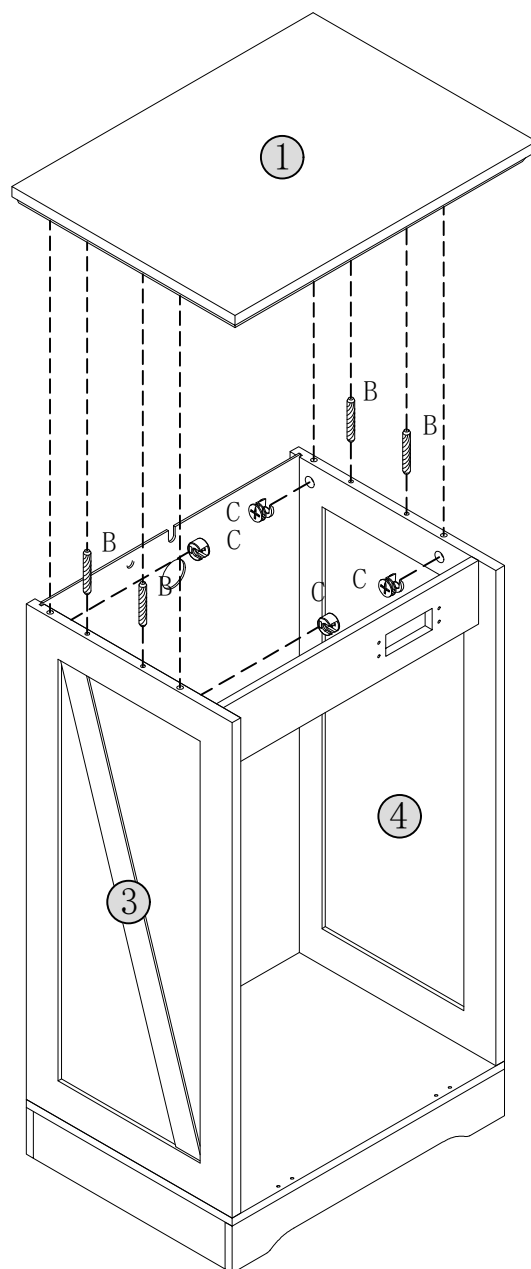
 $B \times 4$  $\phi 6 \times 30\text{mm}$ $C \times 4$  $\phi 15 \times 10\text{mm}$

11

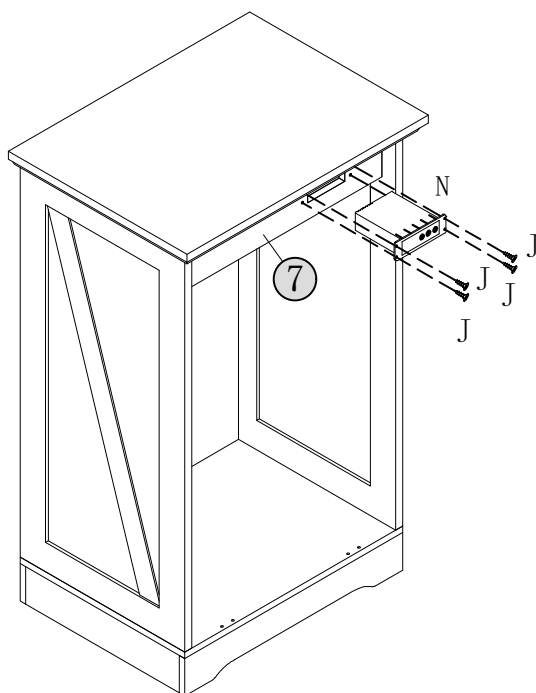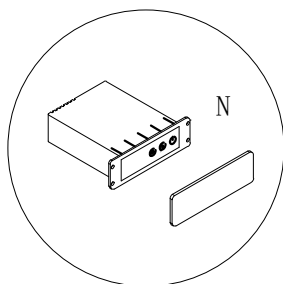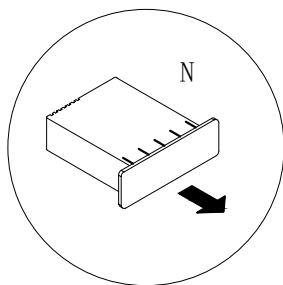


J×4	N×1
 φ3×12mm	  

12

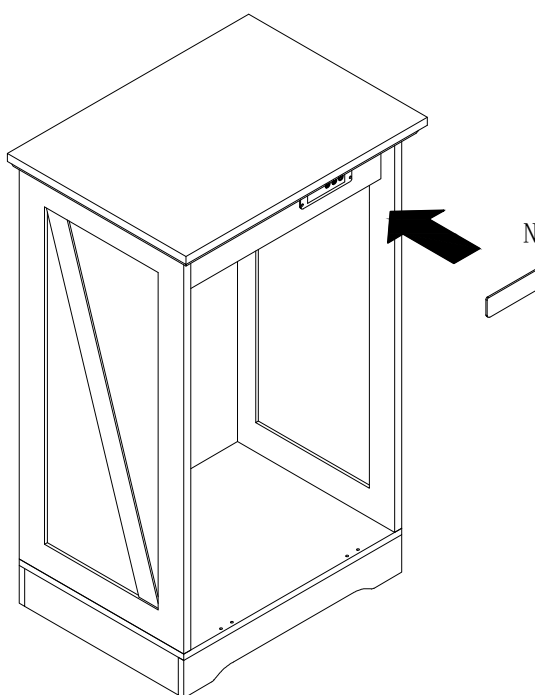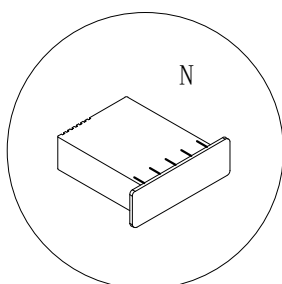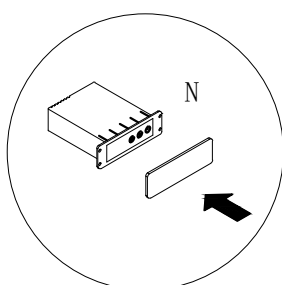


N×1
  

13

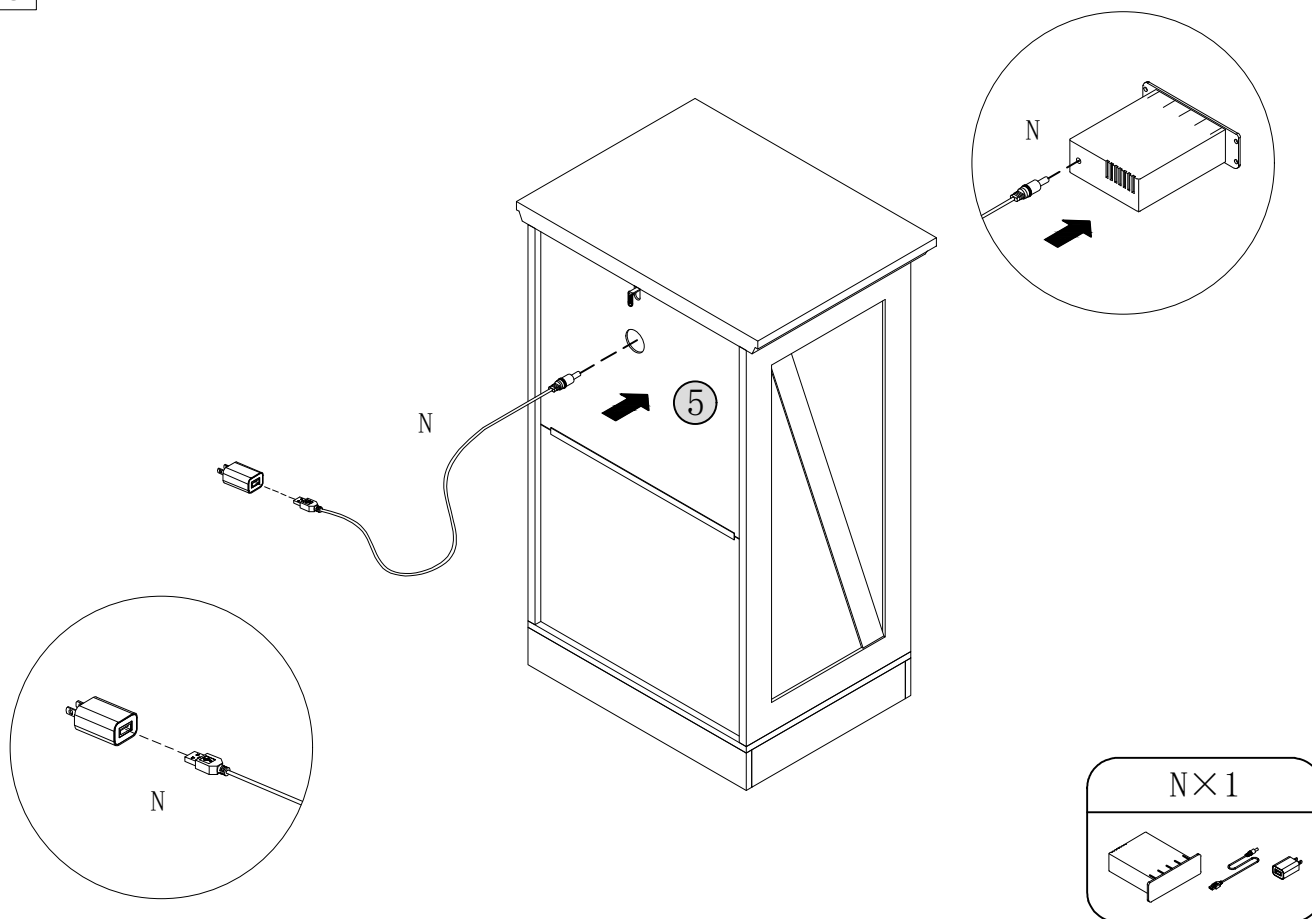


14

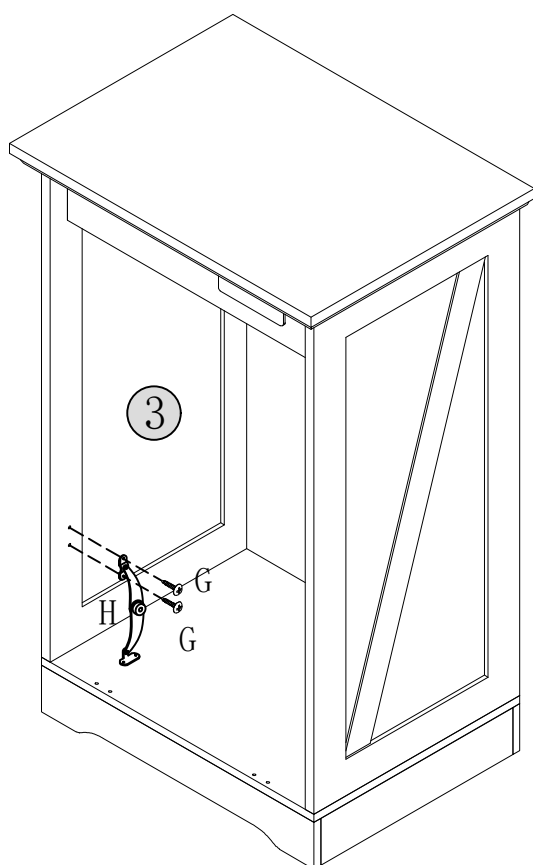


G × 2	H × 1
	
φ4 × 14mm	

15

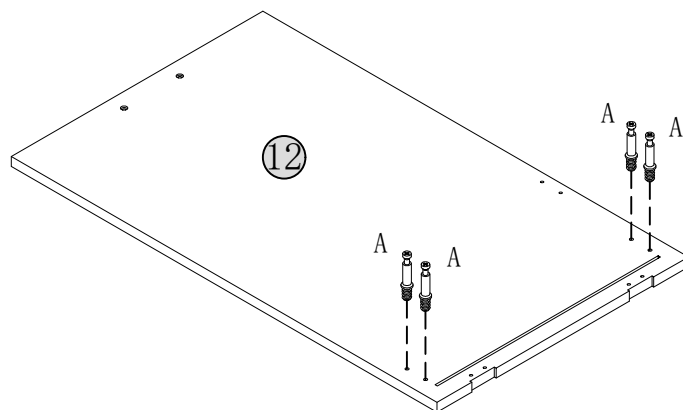



$A \times 4$
 $\phi 6 \times 35\text{mm}$

16

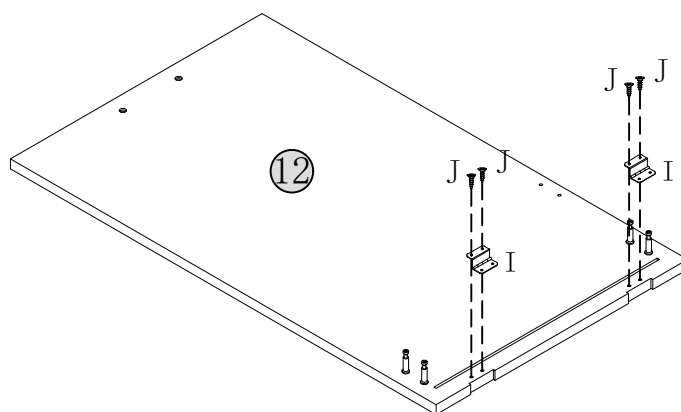


$I \times 2$	$J \times 4$
	 $\phi 3 \times 12\text{mm}$



17

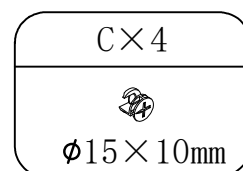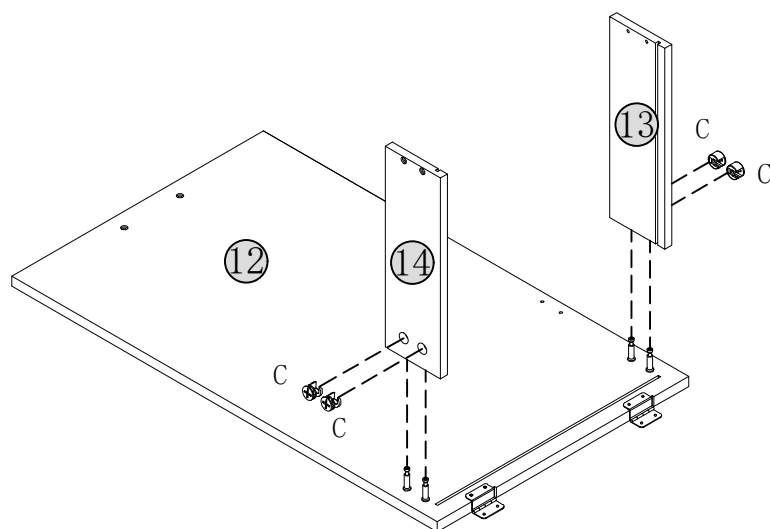


18

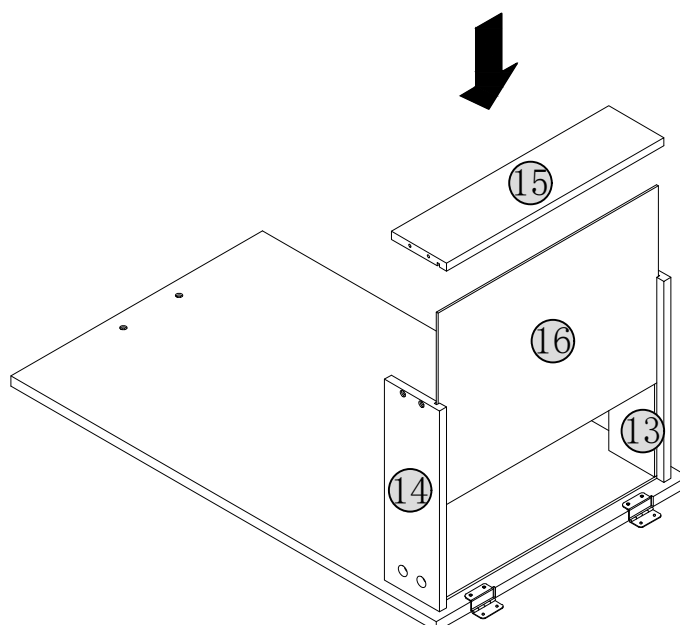


19

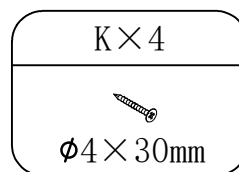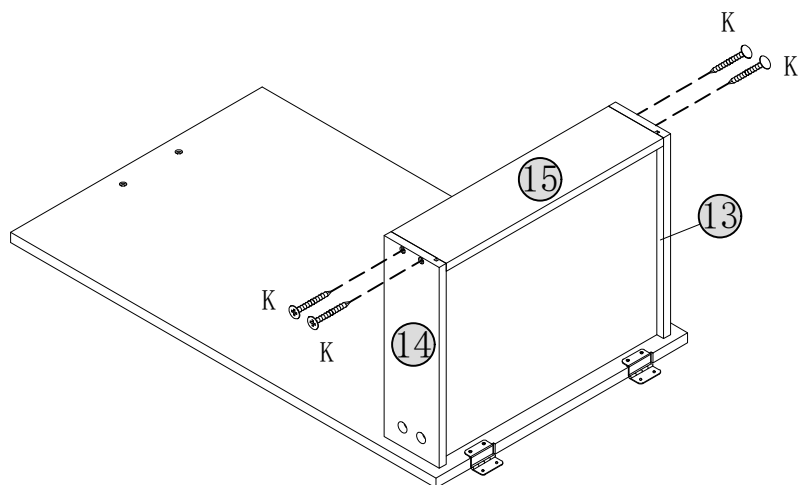



20

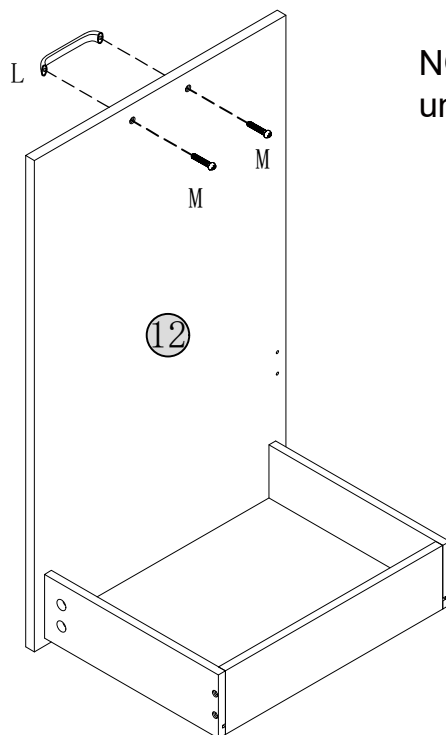



NOTE: Do not tighten the first screw until the handle is installed.

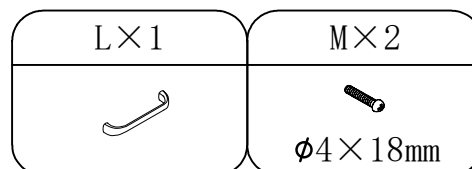






21

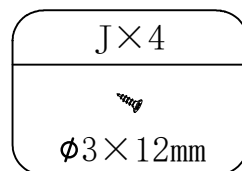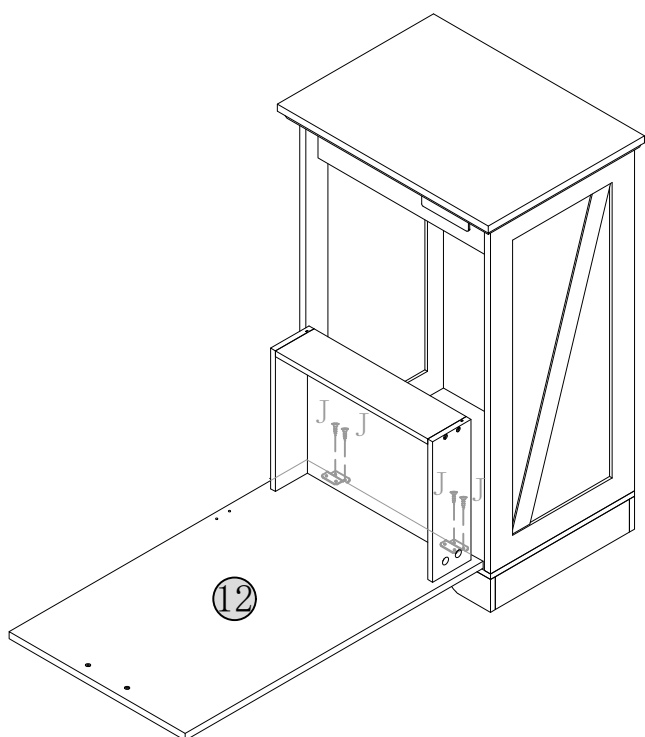

22

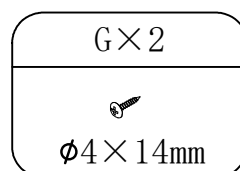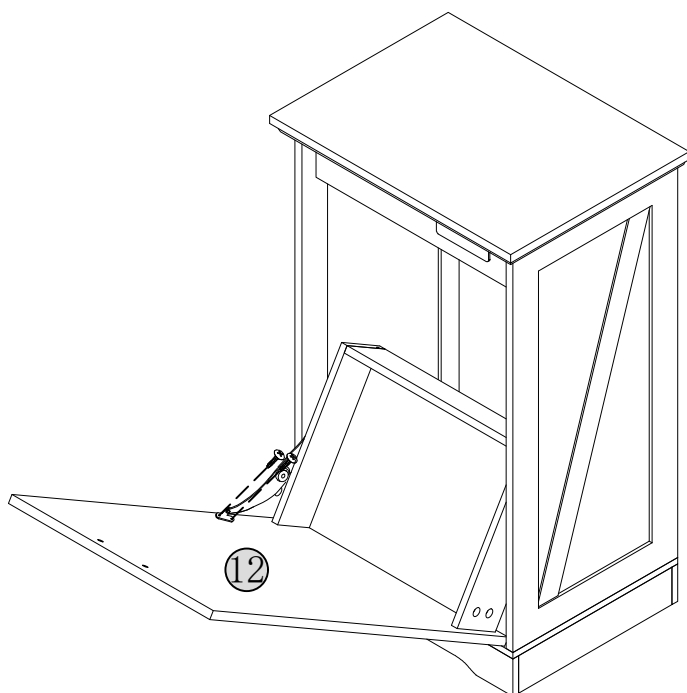

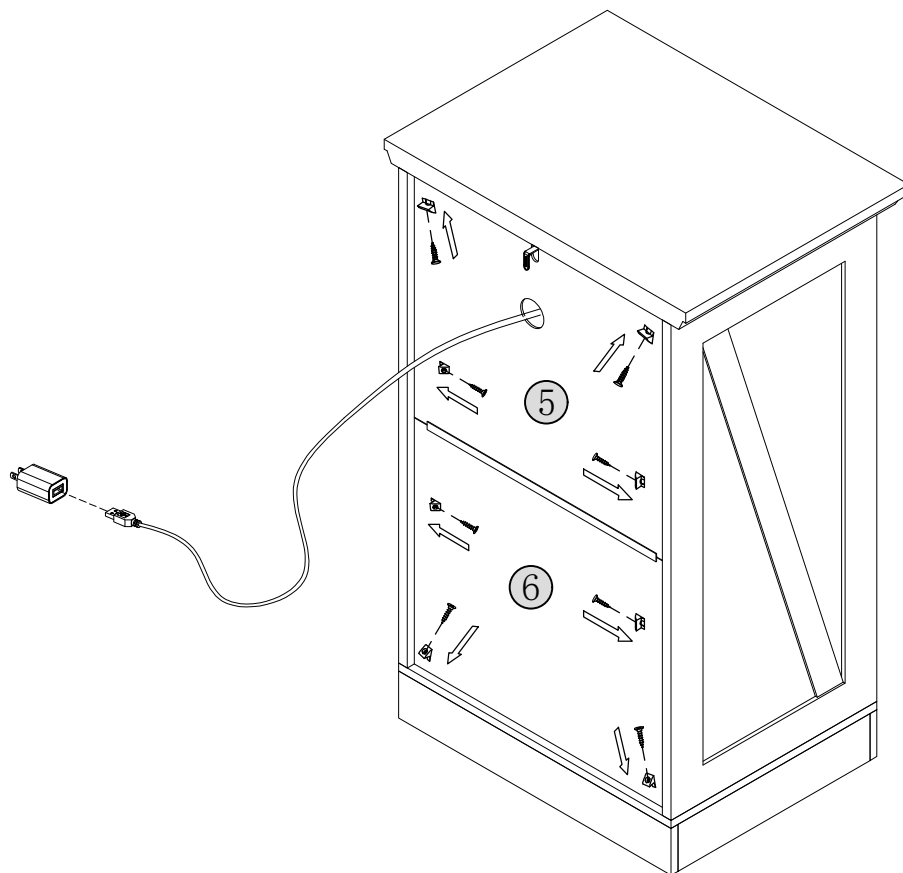 0×8  $P \times 8$  $\phi 3 \times 14\text{mm}$

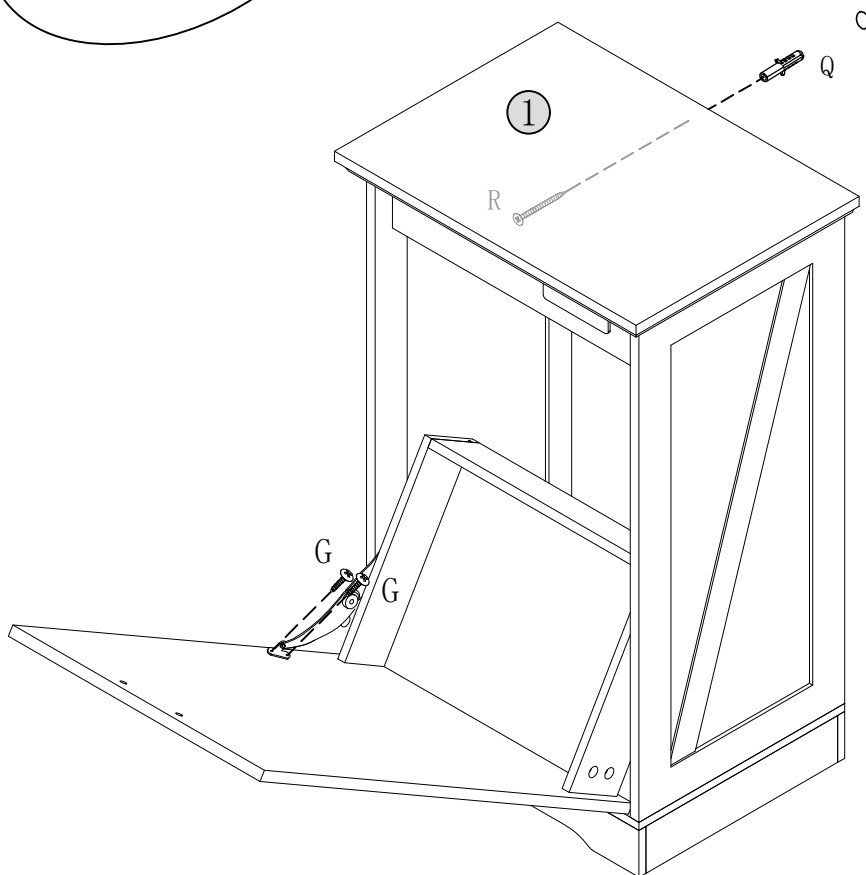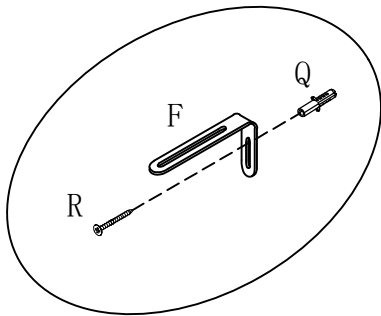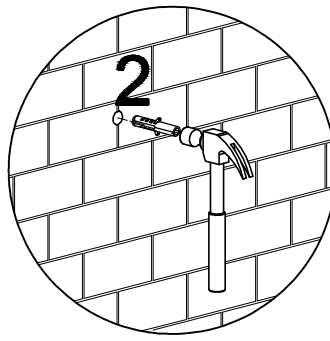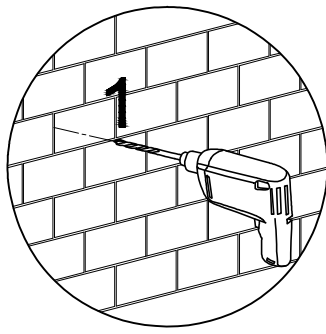

Q×1



R×1



Ø4×40mm