

HW-AM557854
CUSTOMER MANUAL


-V2.0

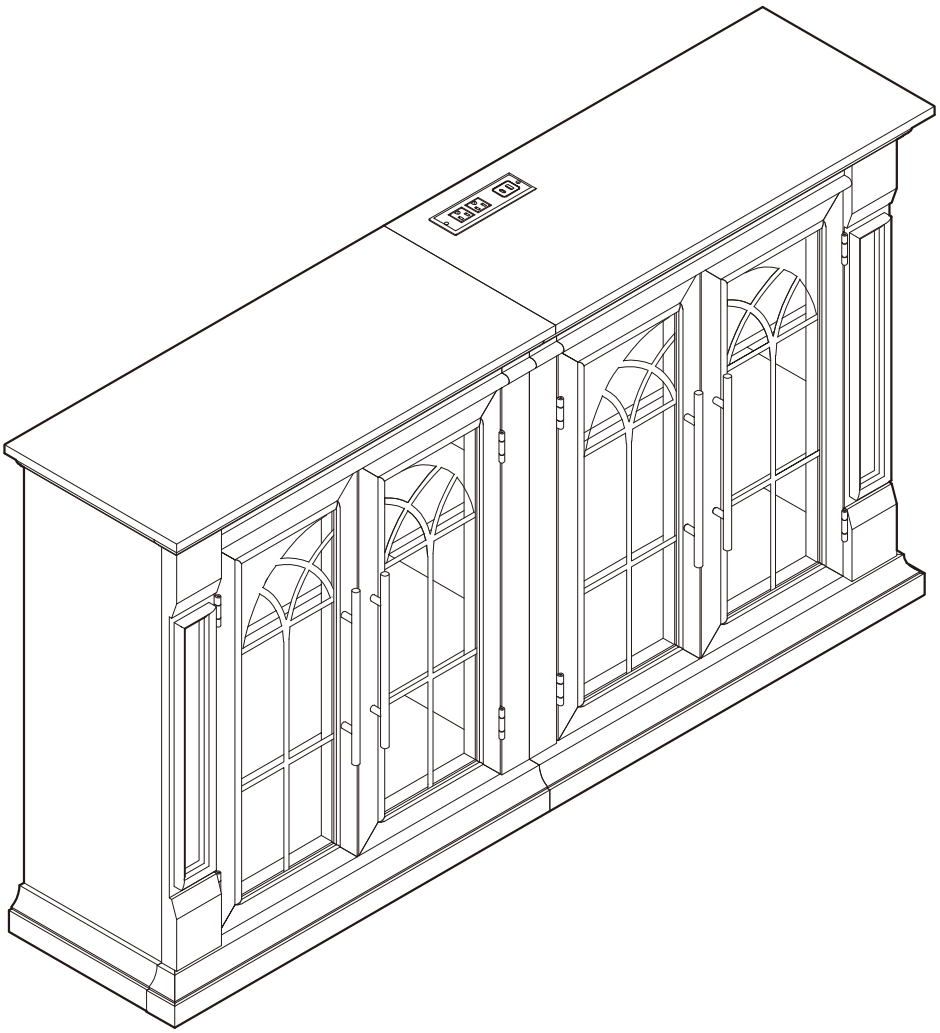

Contact us: Support@lghm.vip

ASSEMBLY STRUCTURE REFERENCE DIAGRAM

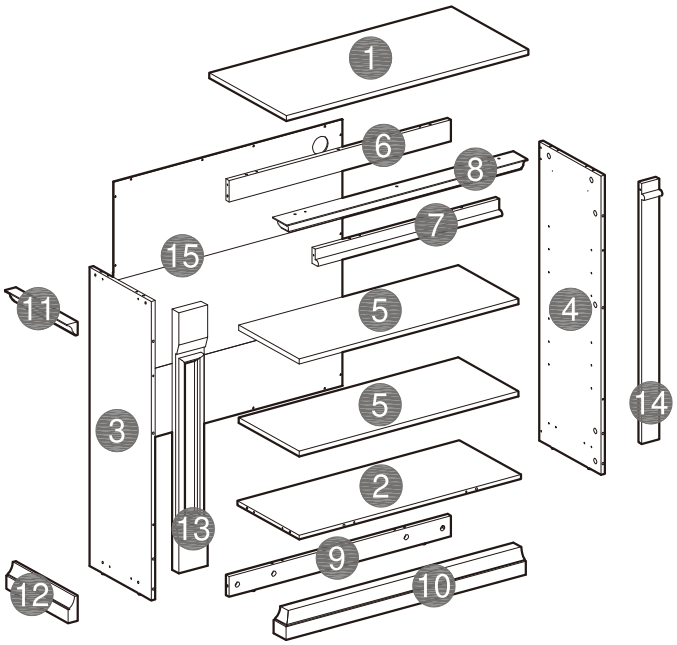

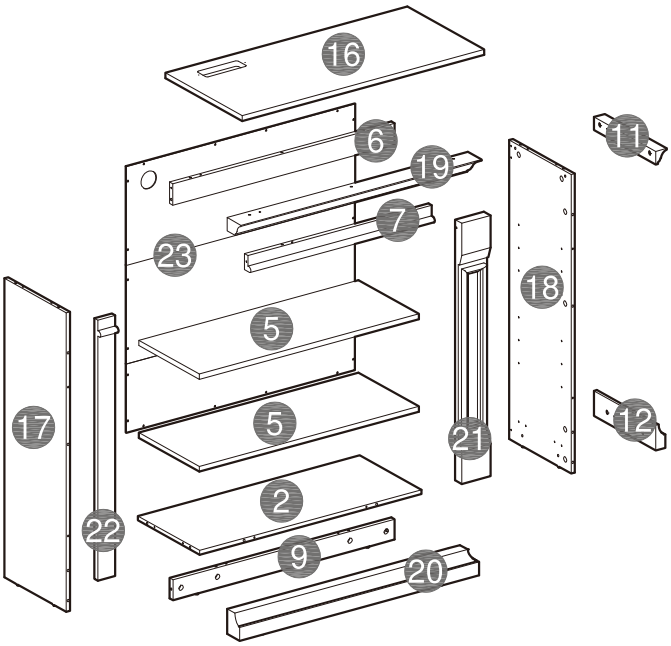











PARTS

1

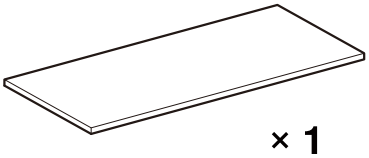


× 1

2

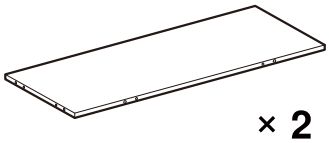

× 2

3




× 1

4




× 1

5

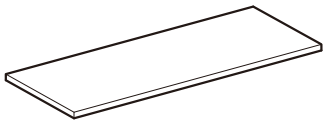

× 4

6




× 2

7




× 2

8




× 1

9




× 2

10

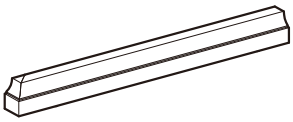


× 1

11

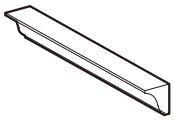

× 2

12

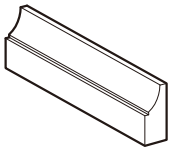

× 2

13




× 1

14



× 1


15

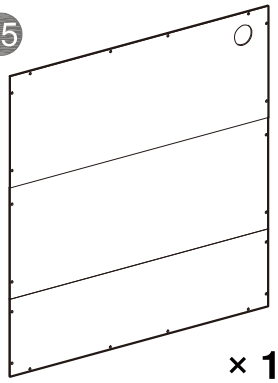

× 1


PARTS

16

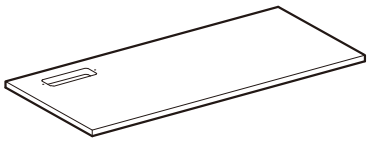

× 1

17




× 1

18




× 1

19



× 1

20



× 1

21




× 1

22




× 1

23

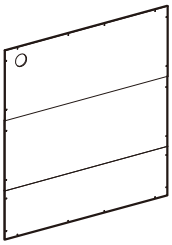


× 1

24



× 2


25



× 2


PARTS

A

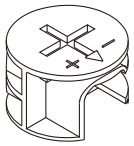

× 58+2

B




× 58+2

C



ø6×30mm
× 56+2

D




ø3×12×6mm
× 22+1

E




× 4

F




ø3×14mm
× 40+2

G




× 8

H




ø3.5*14mm
× 32+2

I



M6*25mm
× 8+1

J



× 2

K




× 4

L



M4×22mm
× 8+1

M




× 16+2

N



ø6×20mm
× 4

O




M6×40mm
× 6

P




× 4

Q




× 4

R




ø4×35mm
× 4

S

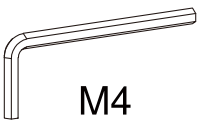


× 1

T




× 1

U



ø3*12*6mm
× 2


W

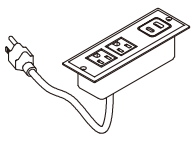


× 1

PARTS


V2

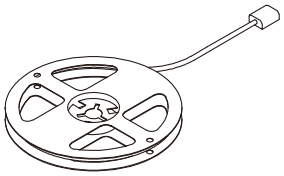

×2

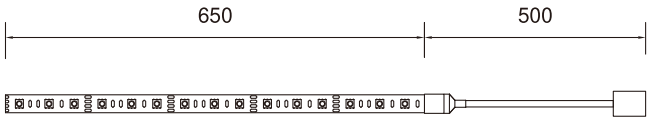


V3

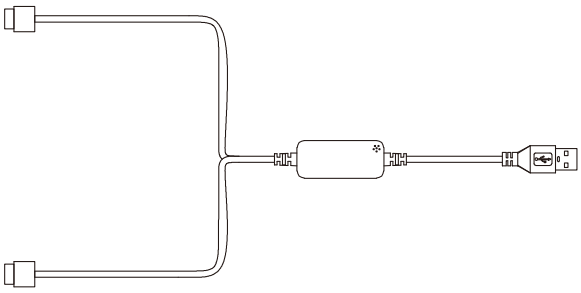


× 1

V4




× 10


V5

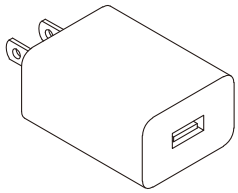



× 1

The hardware quantities listed above are required for proper assembly. Some extra hardware may also have been included.

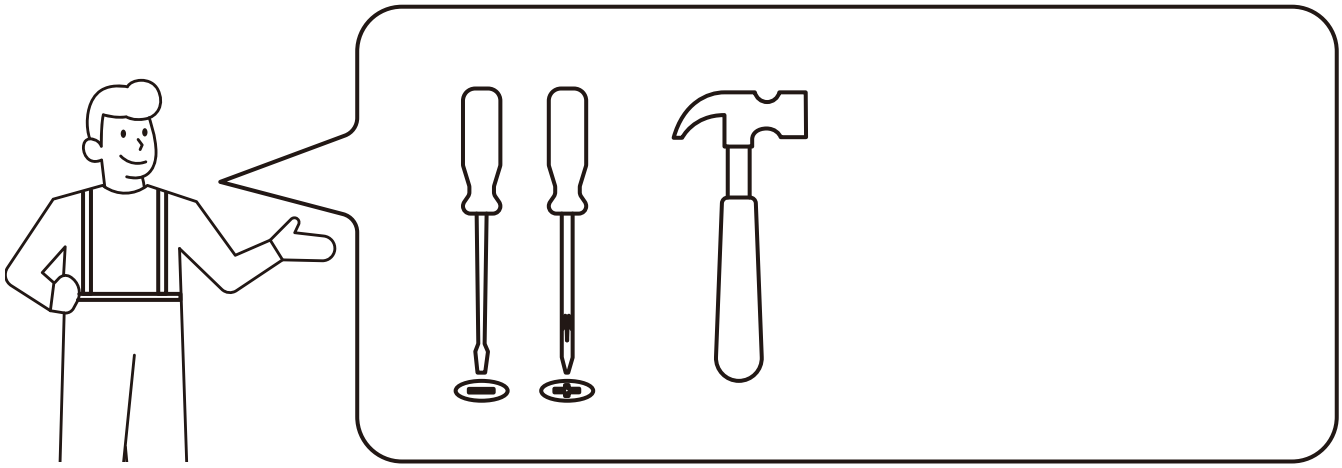


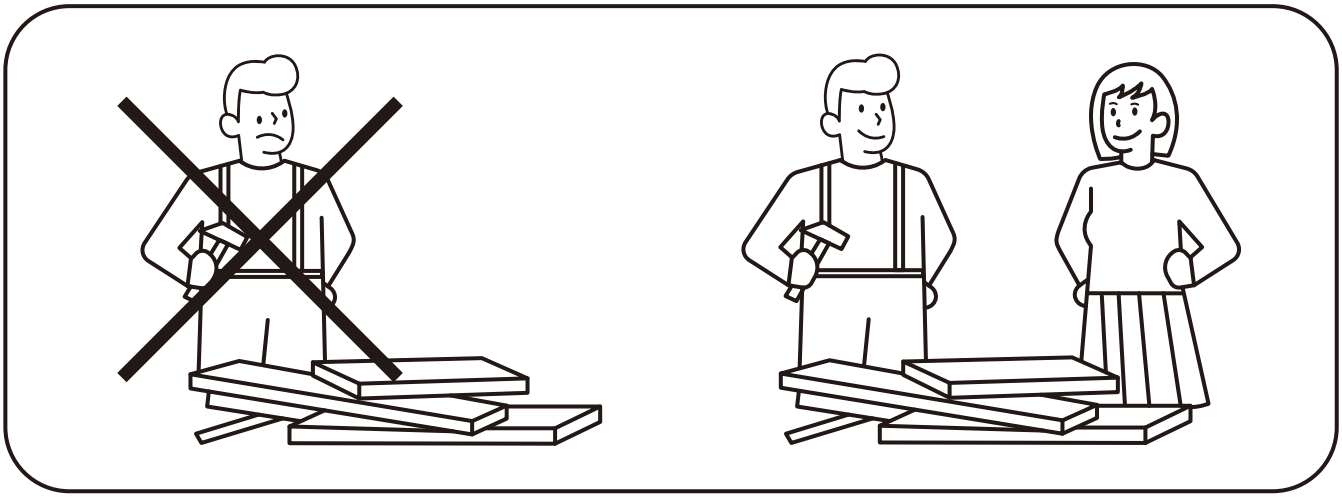

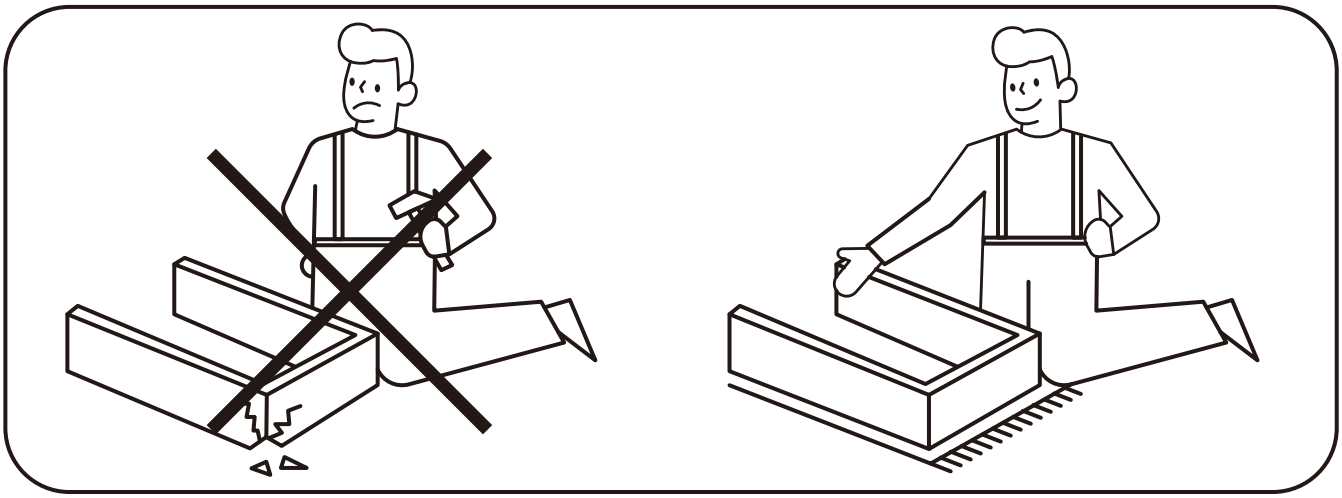

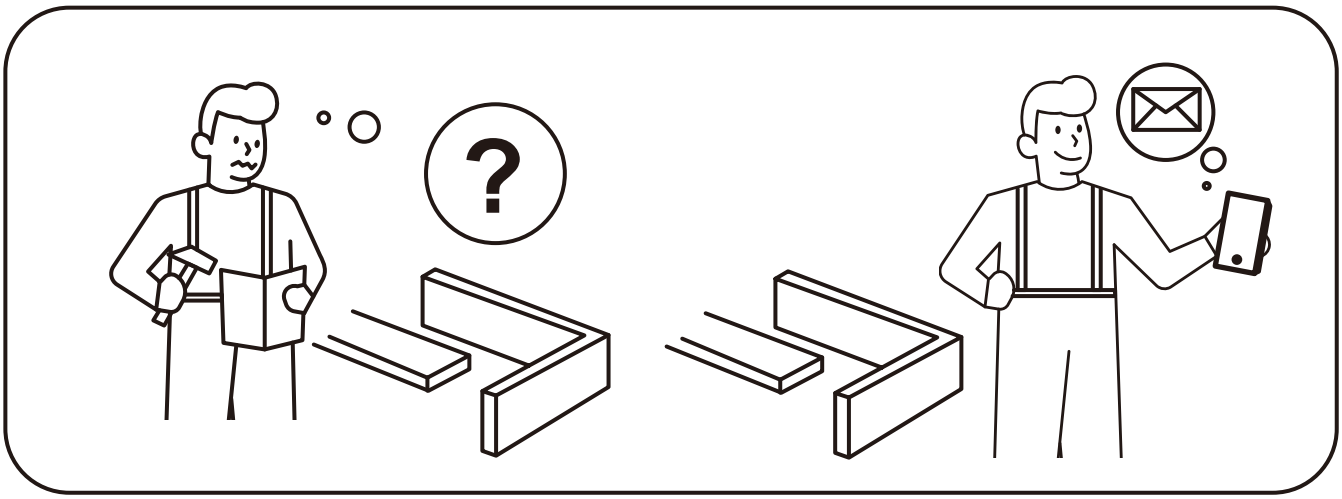


How to work the Knock Down (kd) assembly system

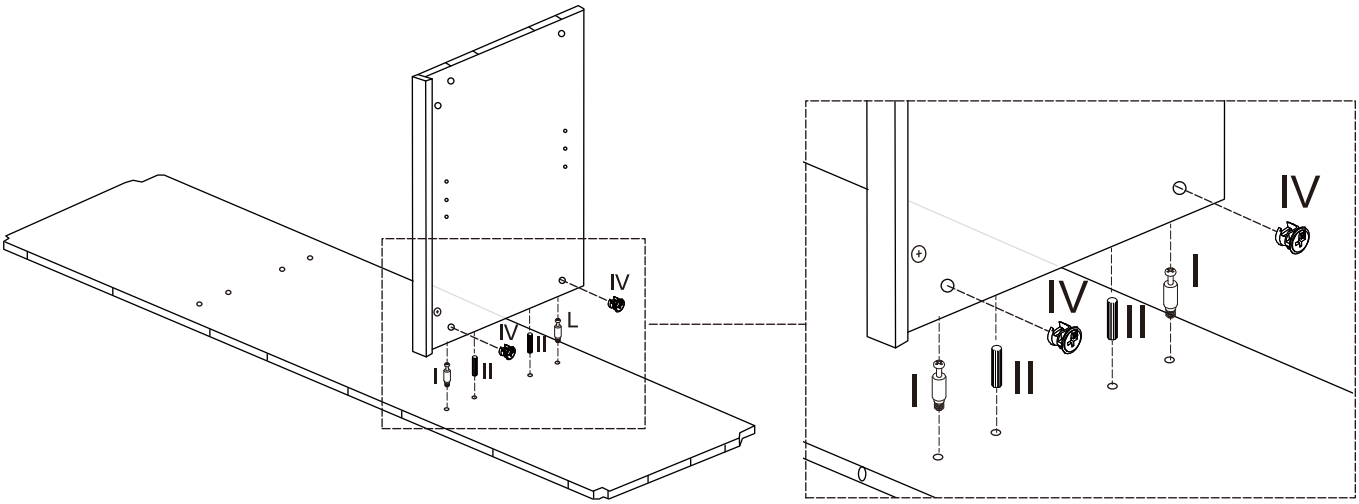


How to install Wood Dowel


Insert the wood dowel [II] at least half way by tapping lightly with a rubber mallet, IF NECESSARY.

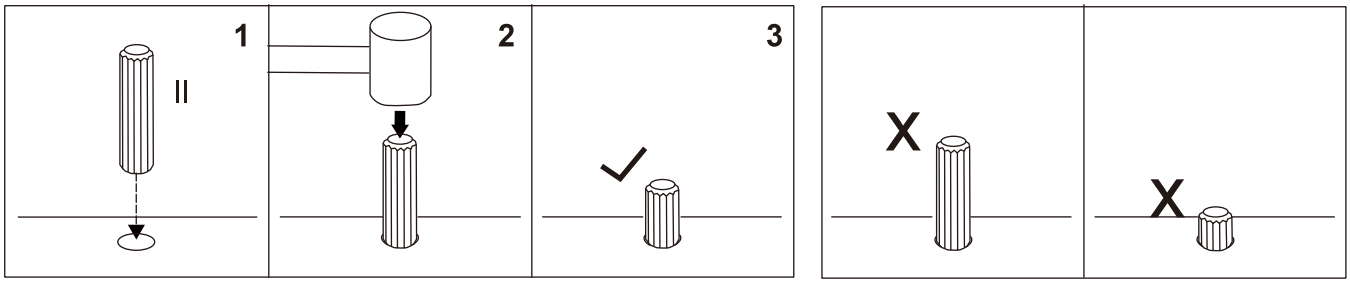

How to use the Cam Lock system

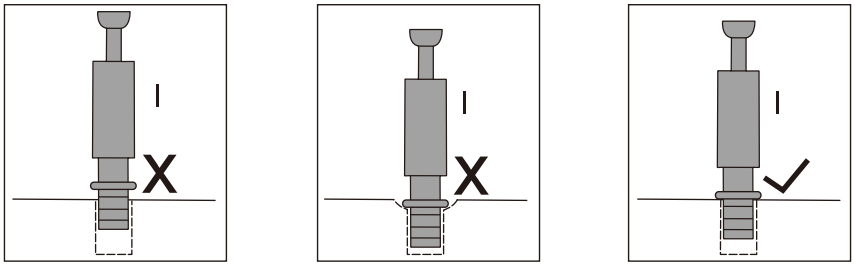


1. Screw the cam bolt [I] into the threaded insert on the panel.
2. Connect both panels together making sure cam bolt [I] goes into the pre-driled large hole on the end of panel for cam lock [IV].
3. Insert the cam lock [IV] into the pre-drilled large hole on the panel. **Make sure the cross slot of cam lock [IV] faces out.**
4. Rotate the cam lock [IV] **clockwise** with a self-supplied philips screwdriver to lock the cam bolt [I] in place.

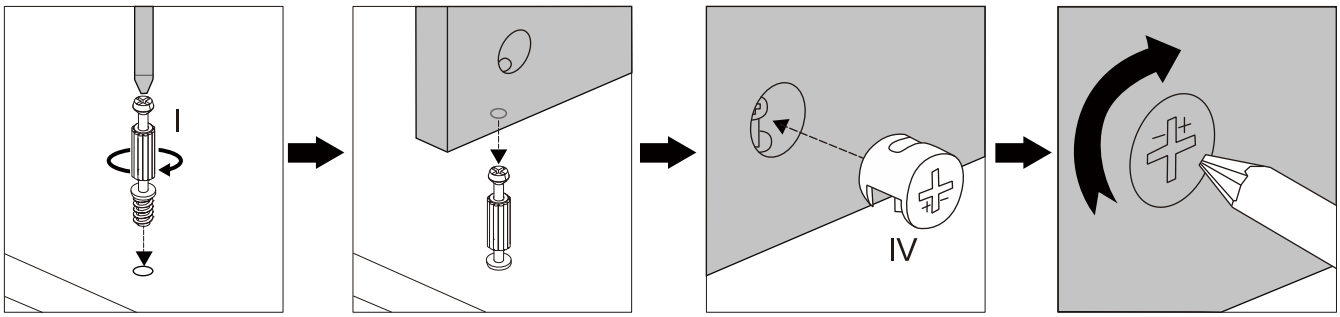


You are now ready to assemble the Glass Door Sideboard (With Light)

It is divided into three parts in total:

1. Install the base part
2. Install the middle part
3. Install the top part

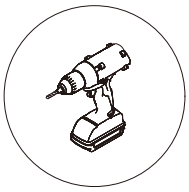


We recommend using a power drill to assemble.

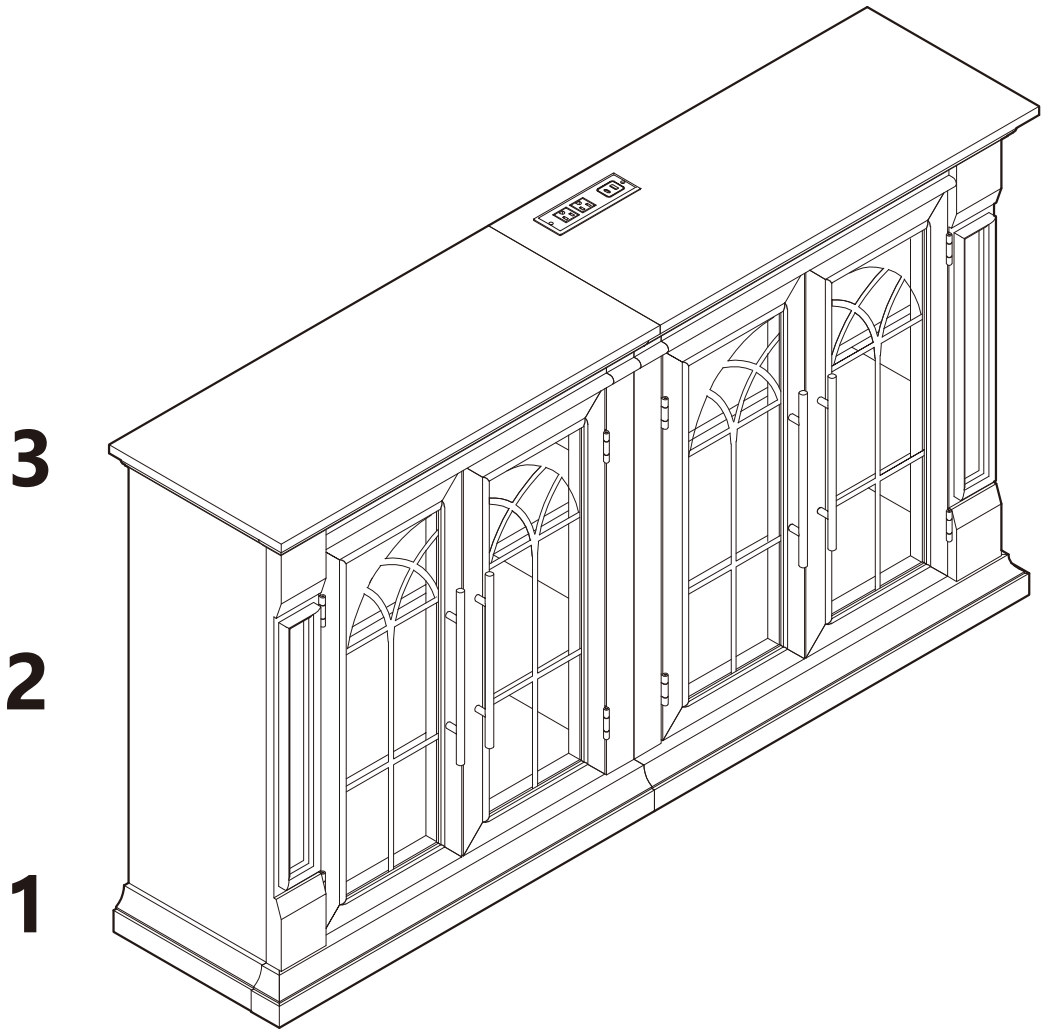


Step 1


Securing Cam Bolt (B) into Board (②).

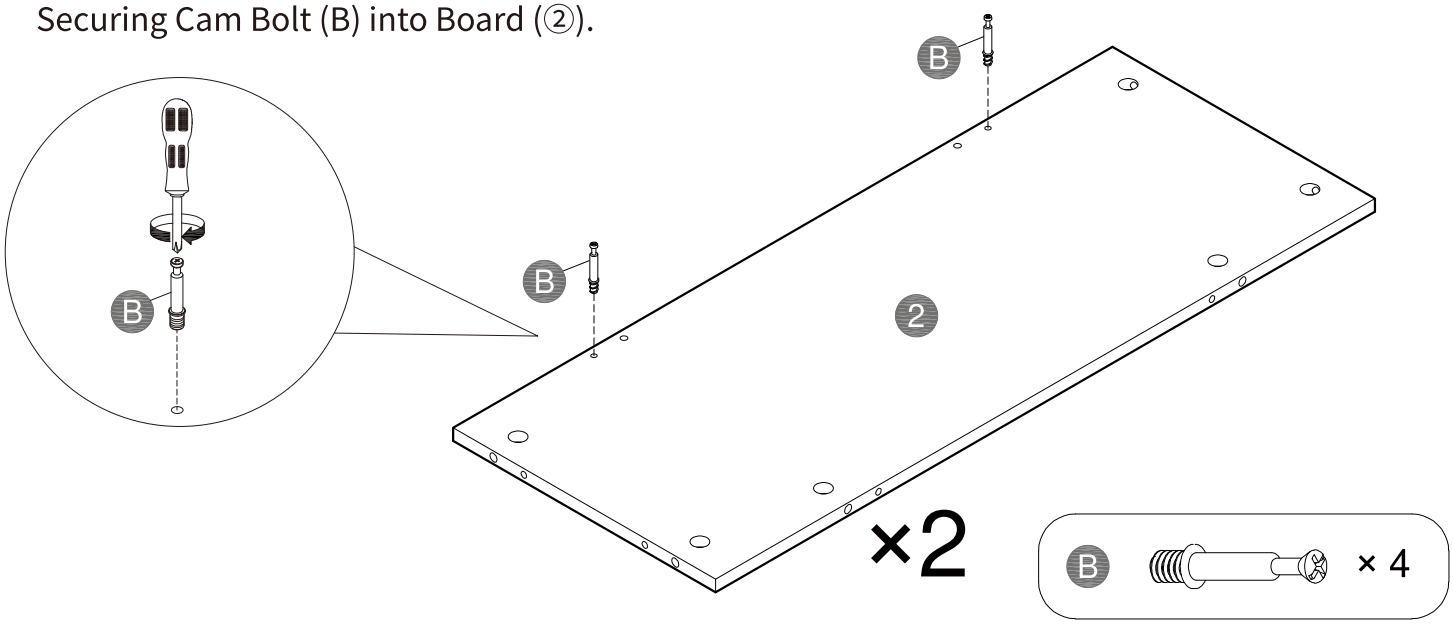

Step 2


Inserting Wooden Dowel (C) into Board (②).
Attach Board (⑨) to Board (②).
Using Cam Lock (A) Secure Board (⑨) to Board (②).

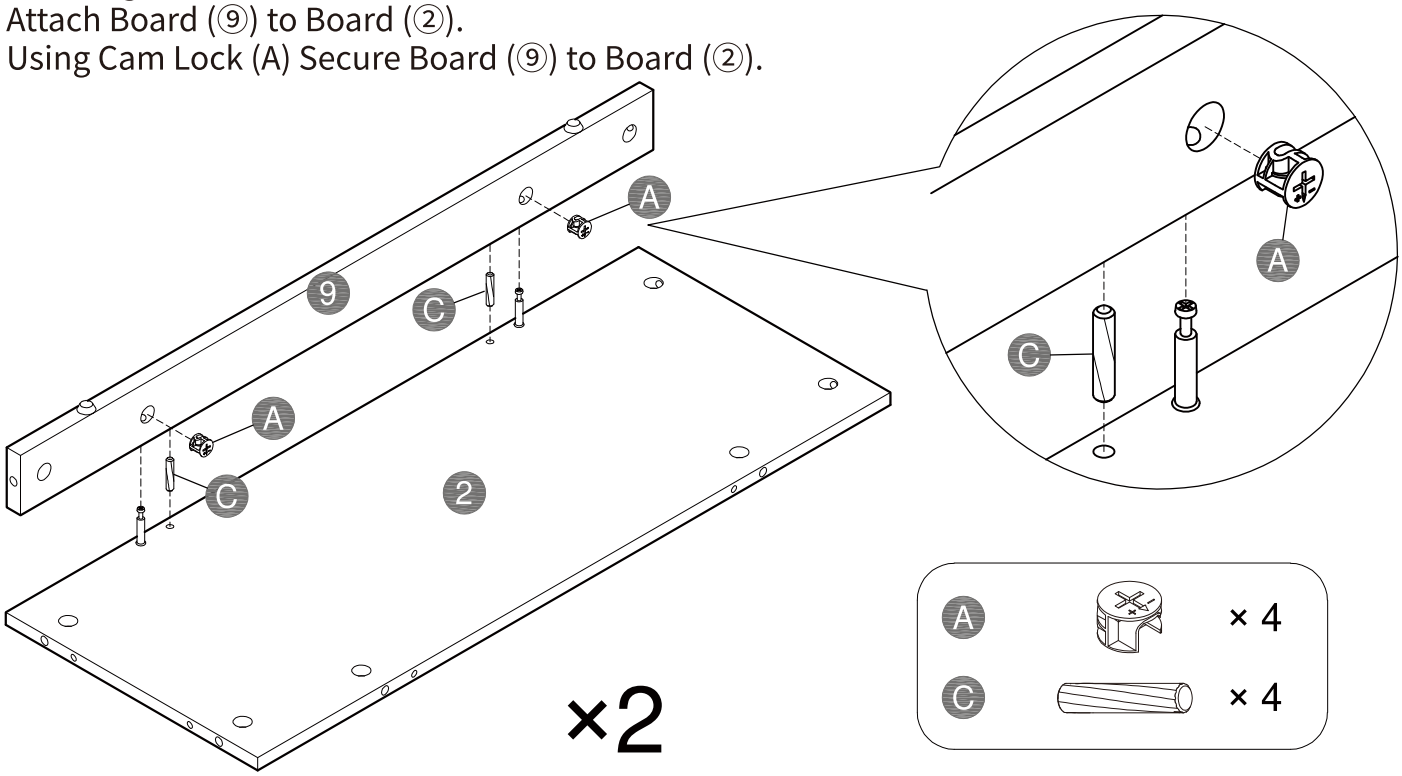

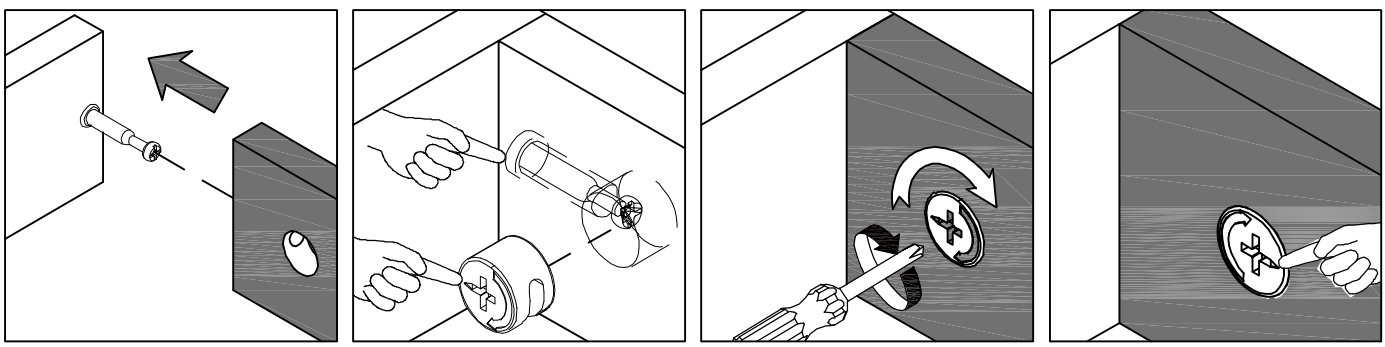


Step 3


Securing Cam Bolt (B) into Board（⑰）.

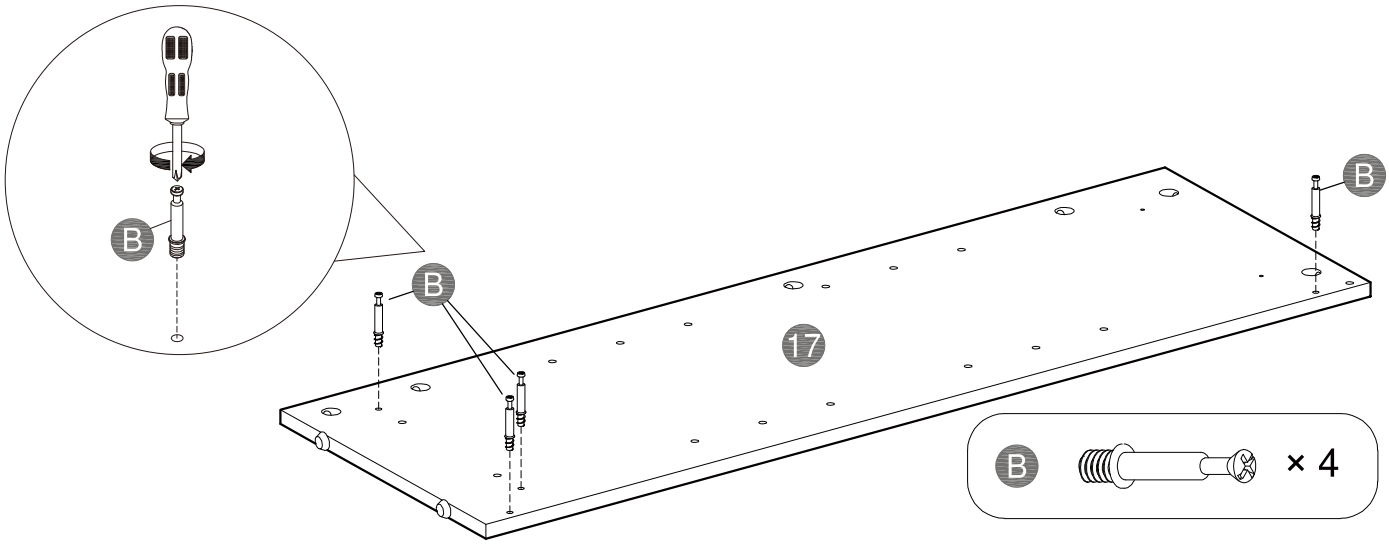

Step 4


Inserting Wooden Dowel (C) into Board (⑰).Attach Board (②⑨) to Board (⑰).
Attach Board (⑥) to Board (⑰).Using Cam Lock (A) secure Board (②⑨⑥) to Board (⑰).

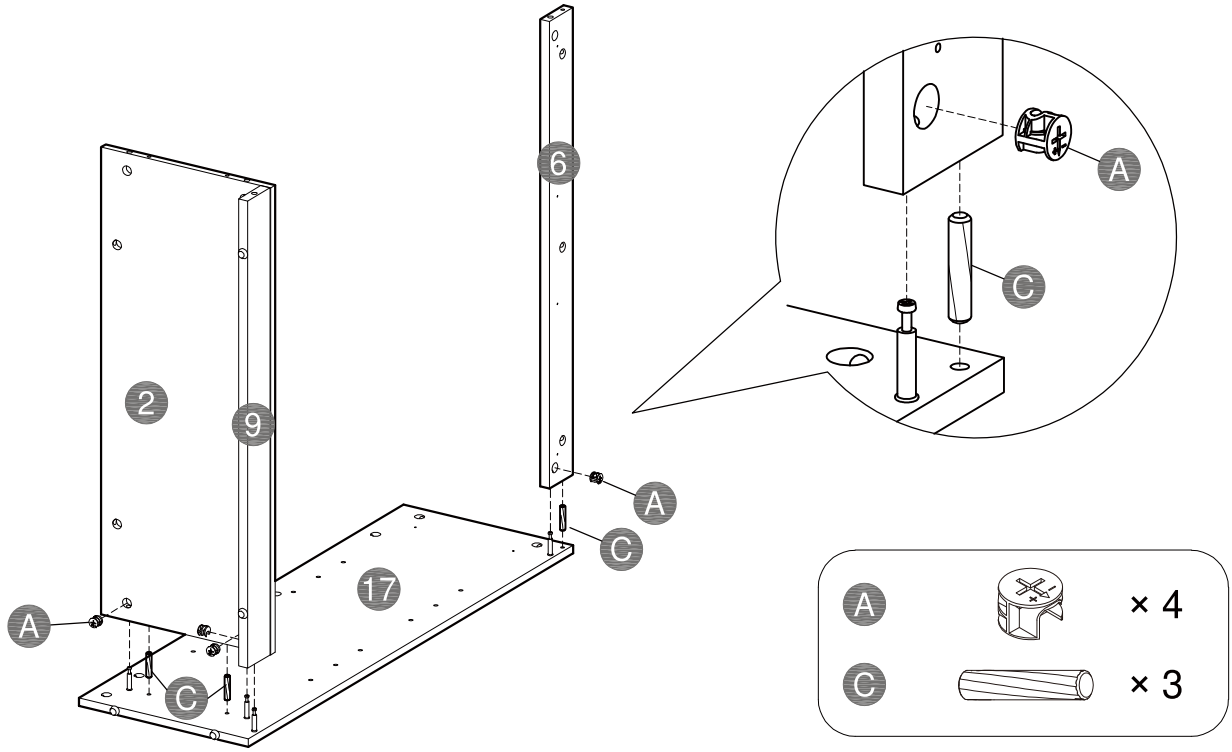

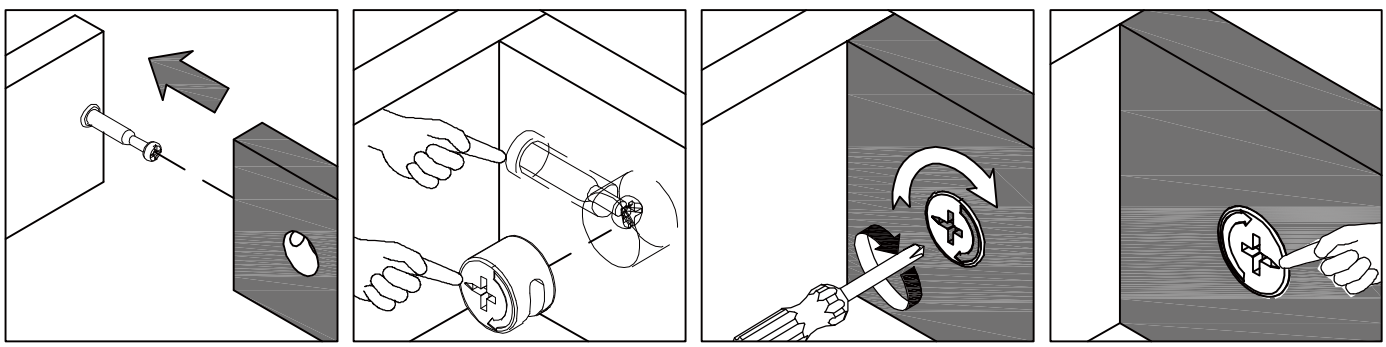


Step 5


Securing Cam Bolt (B) into Board（⑱).

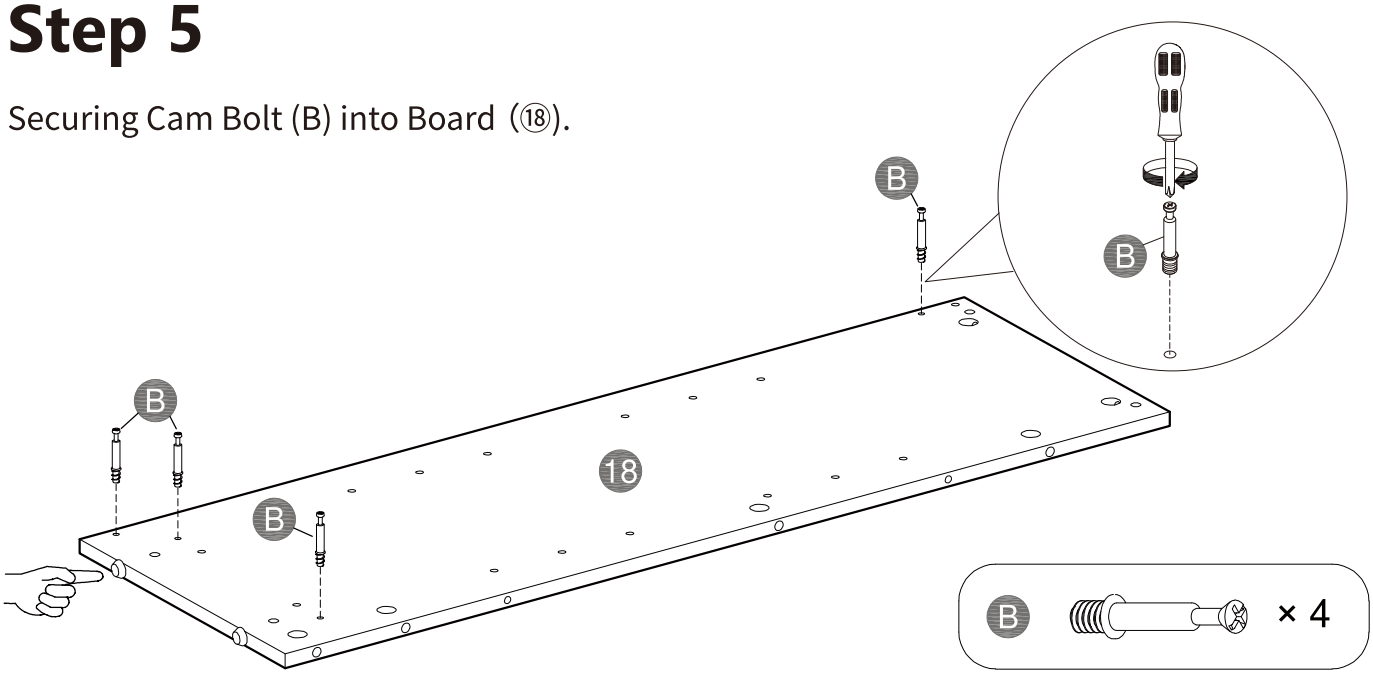

Step 6


Inserting Wooden Dowel (C) into Board (②⑨⑥). Attach Board (⑱) to Board (②⑨⑥).
Using Cam Lock (A) secure Board (⑱) to Board (②⑨⑥).

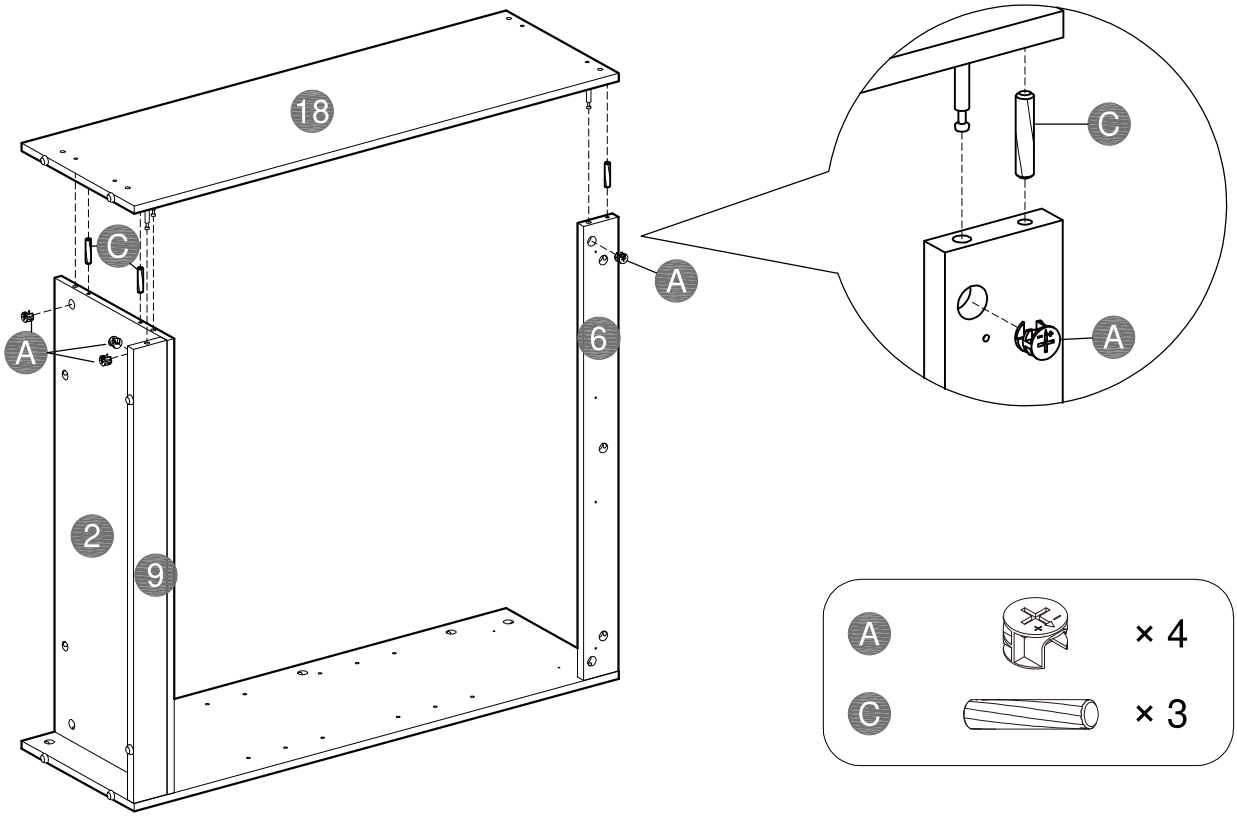

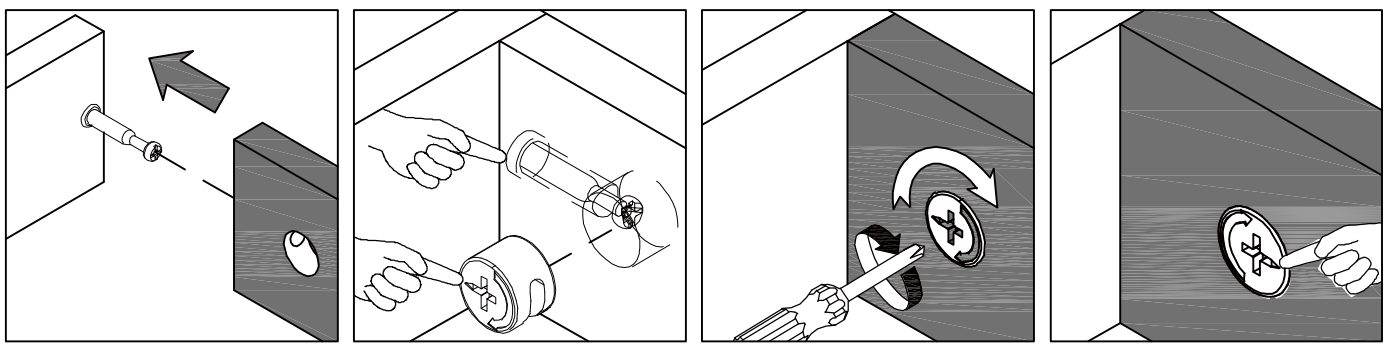


Step 7


Securing Cam Bolt (B) into Board (④).

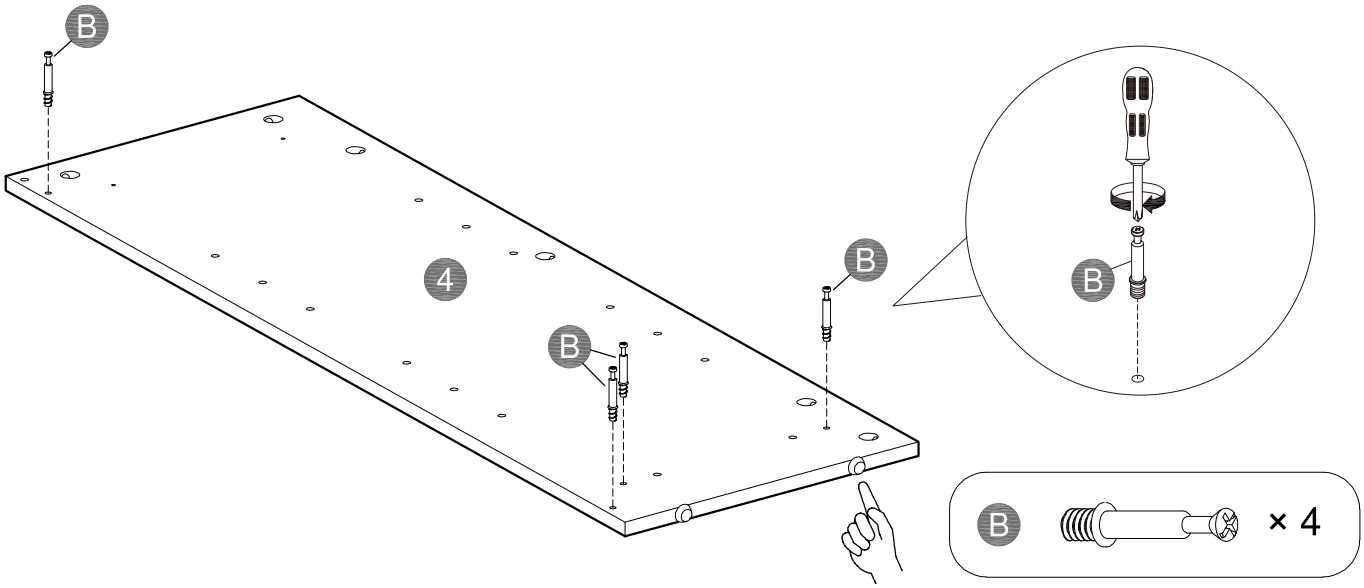

Step 8


Inserting Wooden Dowel (C) into Board (④).Attach Board (②⑨) to Board (④).
Attach Board (⑥) to Board (④). Using Cam Lock (A) secure Board (②⑨⑥) to Board (④)

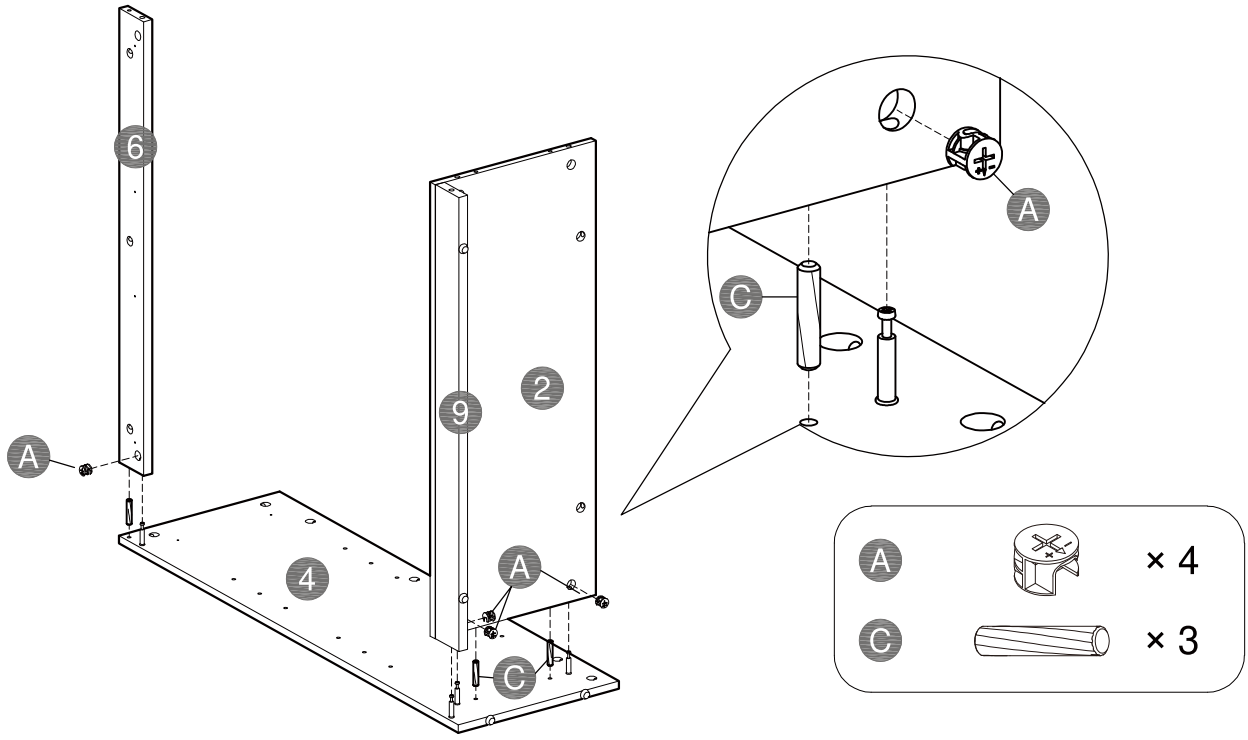

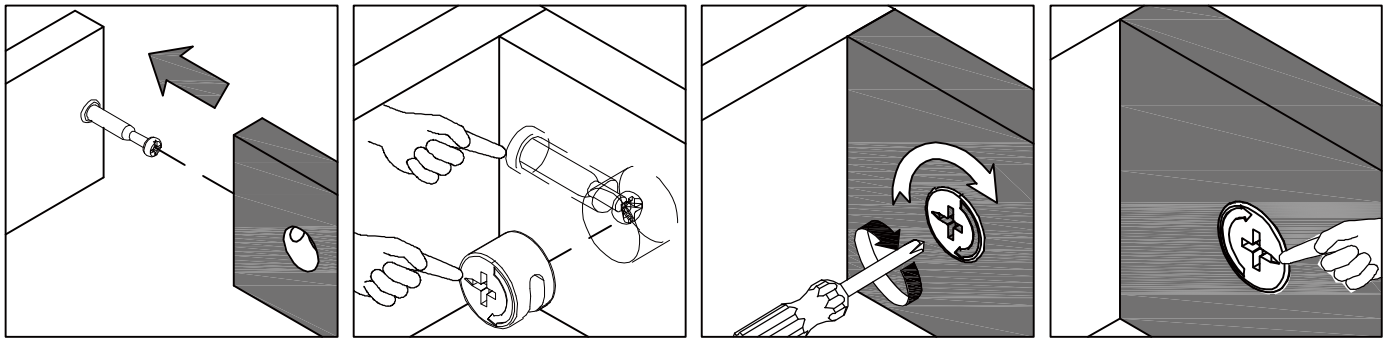


Step 9


Securing Cam Bolt (B) into Board (③).

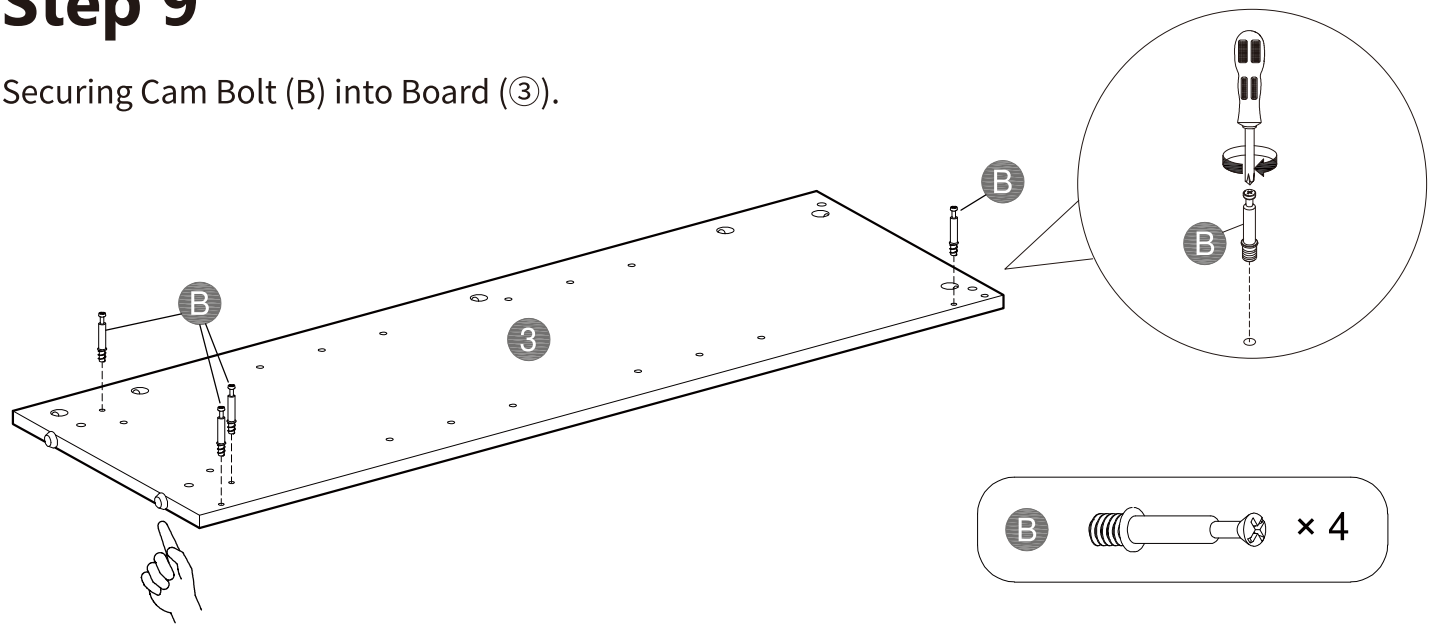

Step 10


Inserting Wooden Dowel (C) into Board (②⑨⑥). Attach Board (③) to Board (②⑨⑥).
Using Cam Lock (A) secure Board (③) to Board (②⑨⑥).

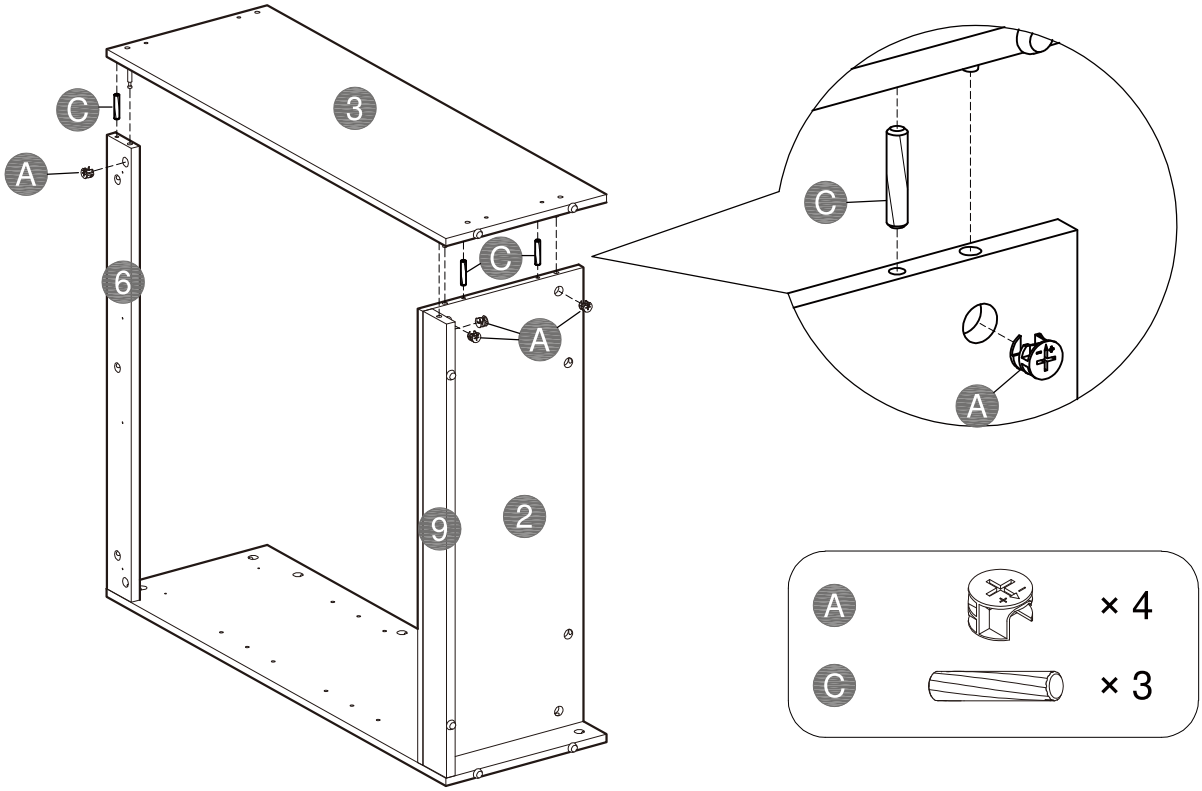

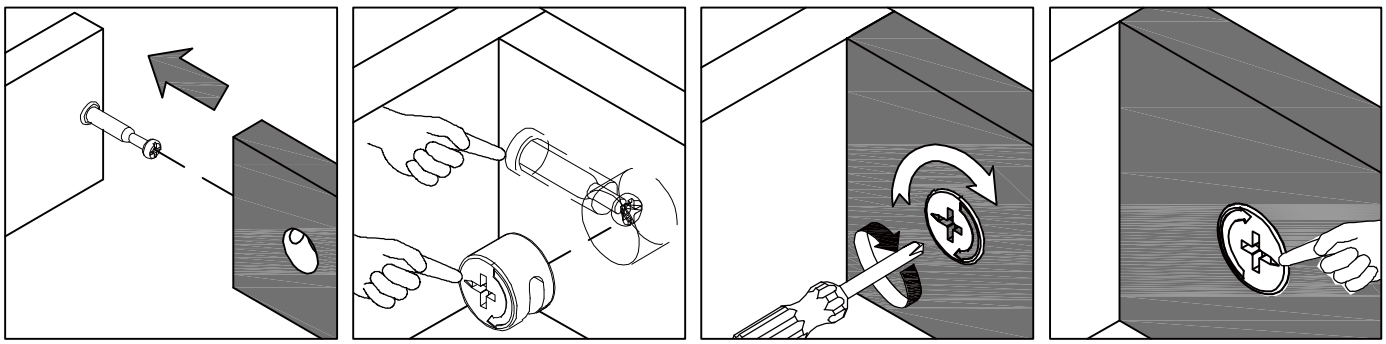


Step 11

Inserting Wooden Dowel (C)(N) into Board (⑱&③).
Using Screws (I) t o assemble Board (⑪ ⑫) to Board (⑱&③).

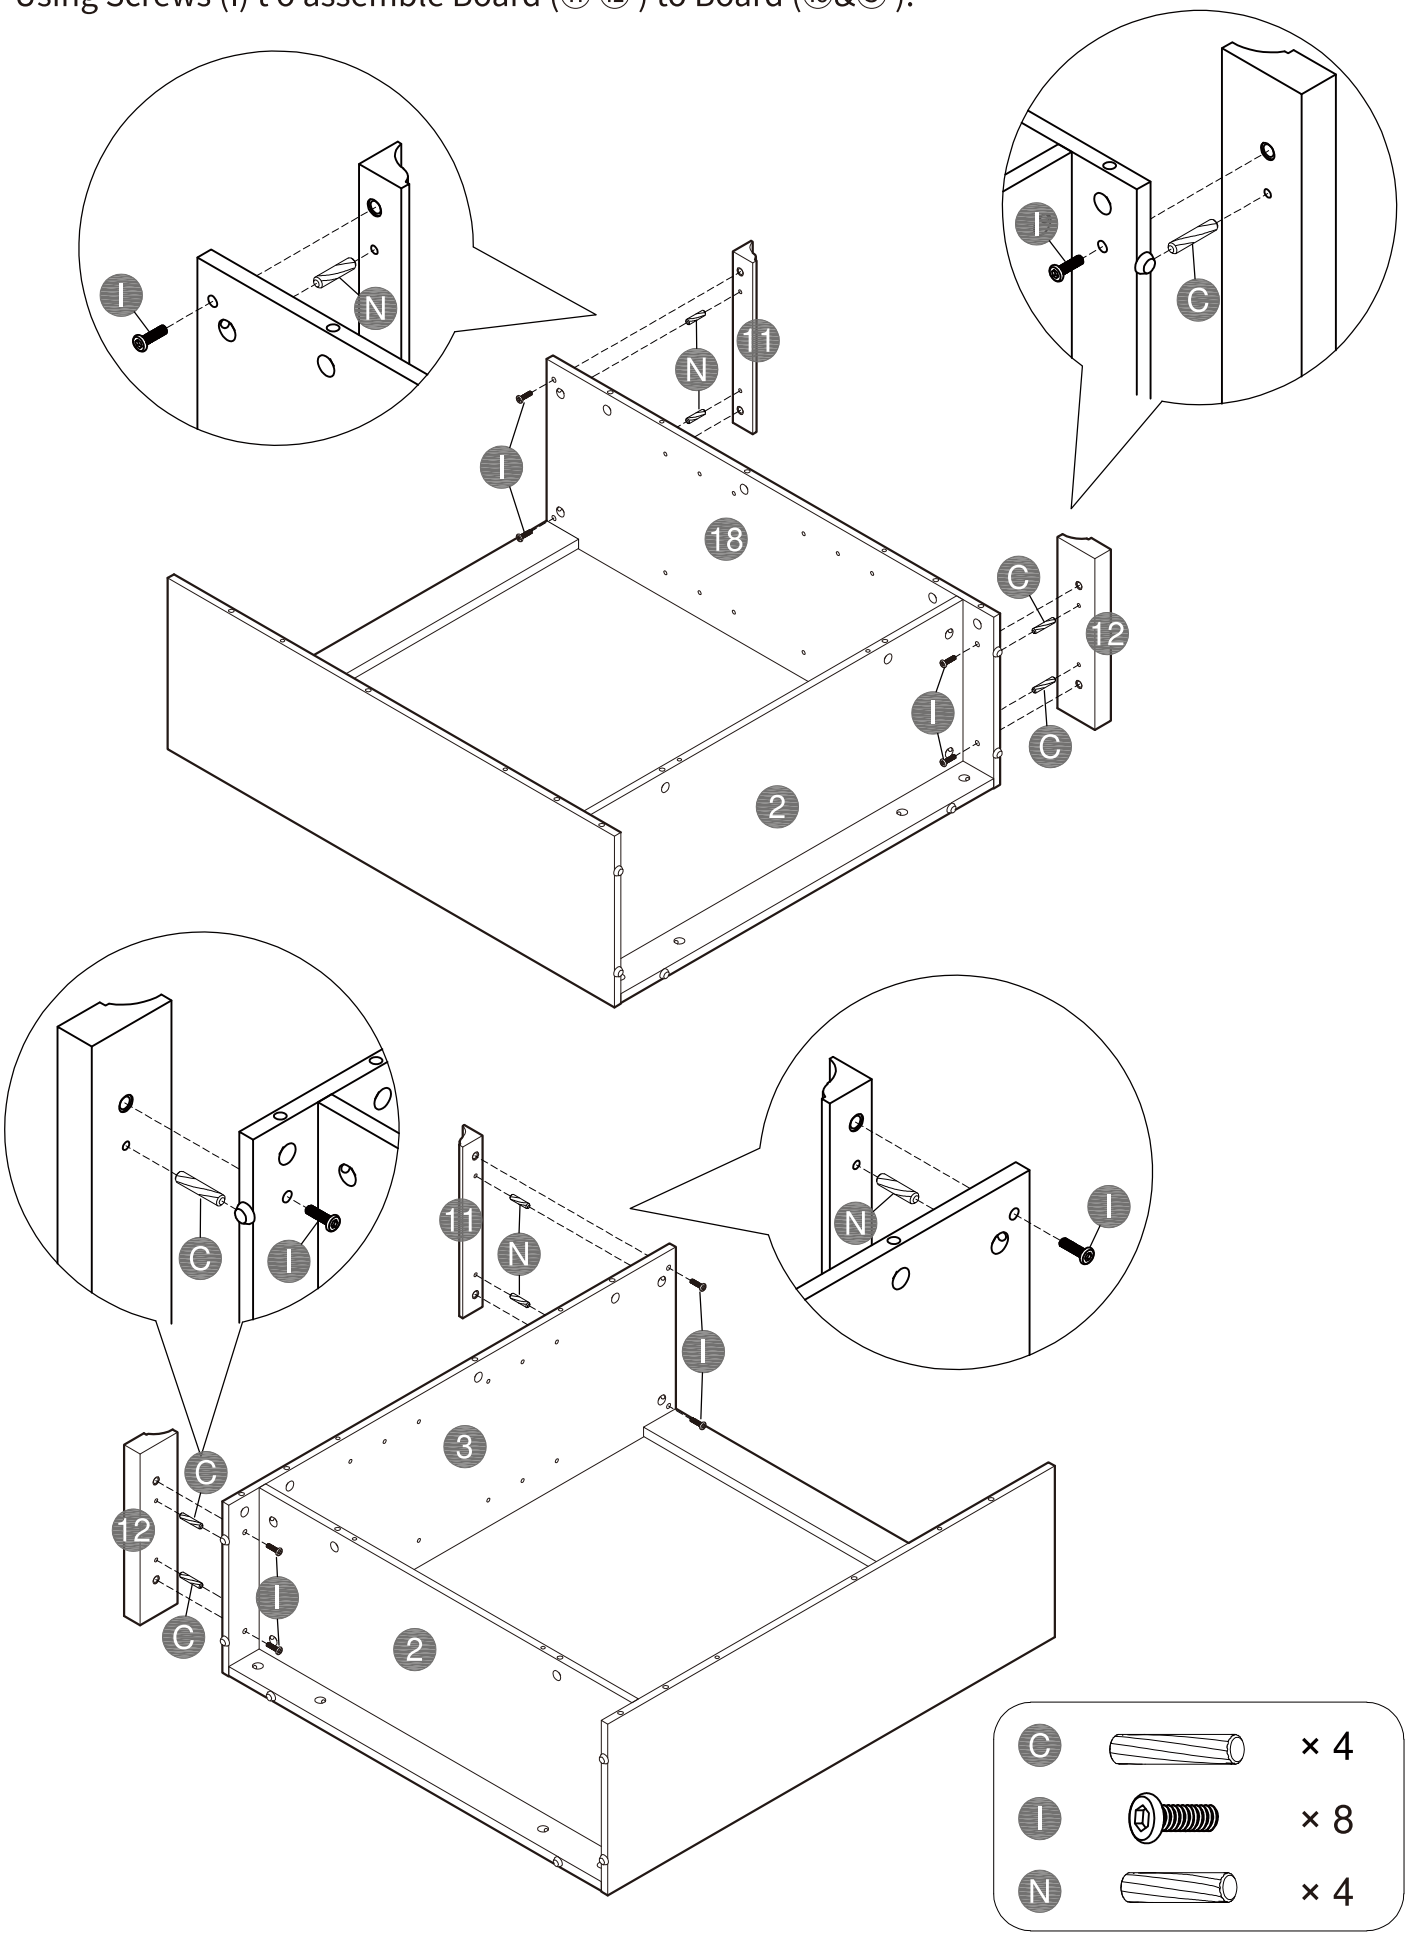


Step 12

Using Screws (D) to secure (J) to Board (⑦).
Tip: Please note the front and back sides, with the smooth side facing up.

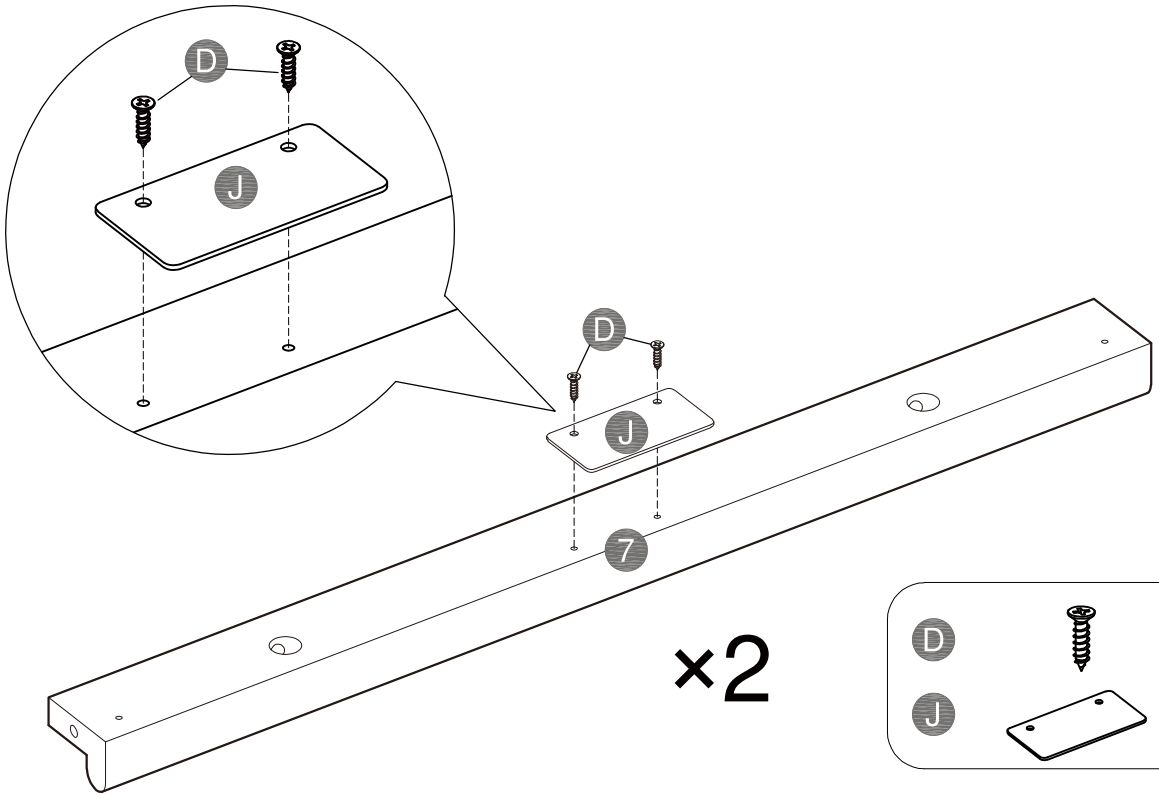


Step 13

Securing Cam Bolt (B) into Board (⑬ ⑭) .

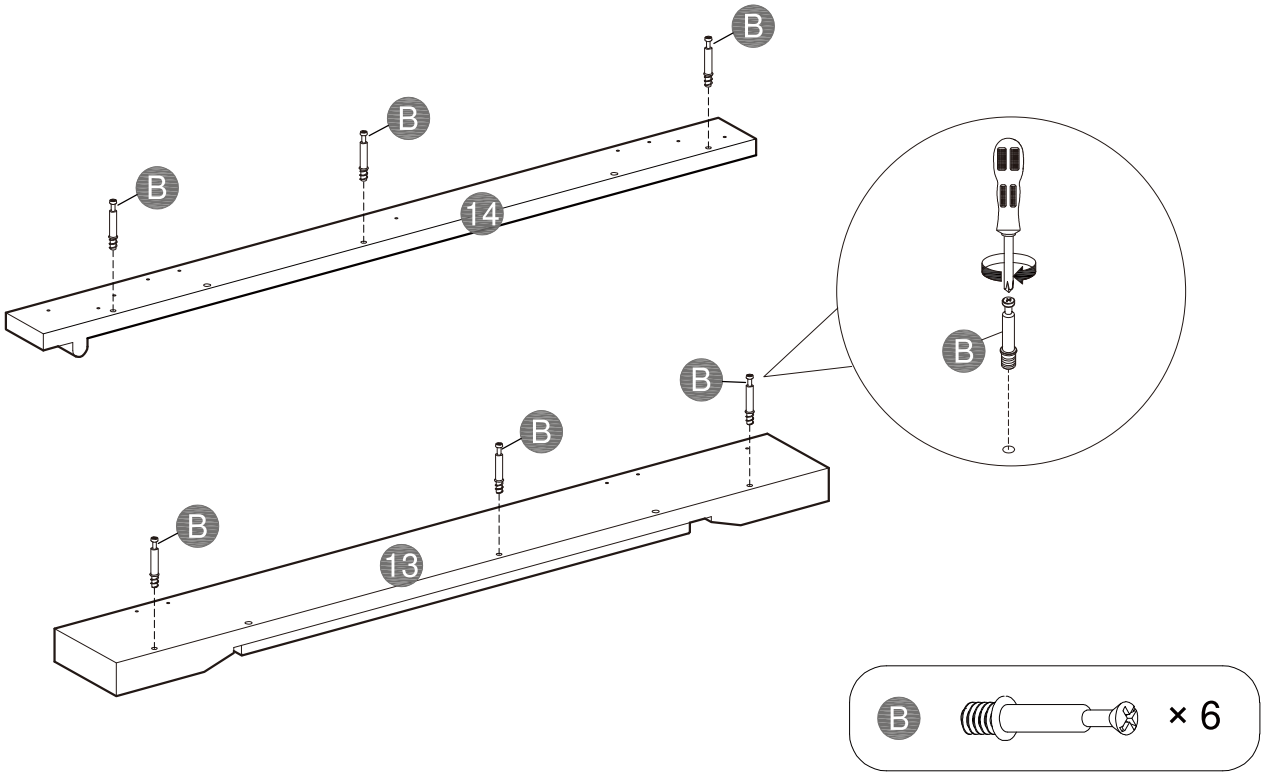


Step 14

Using Screws (H) to secure (G) to Board (⑬ ⑭) .

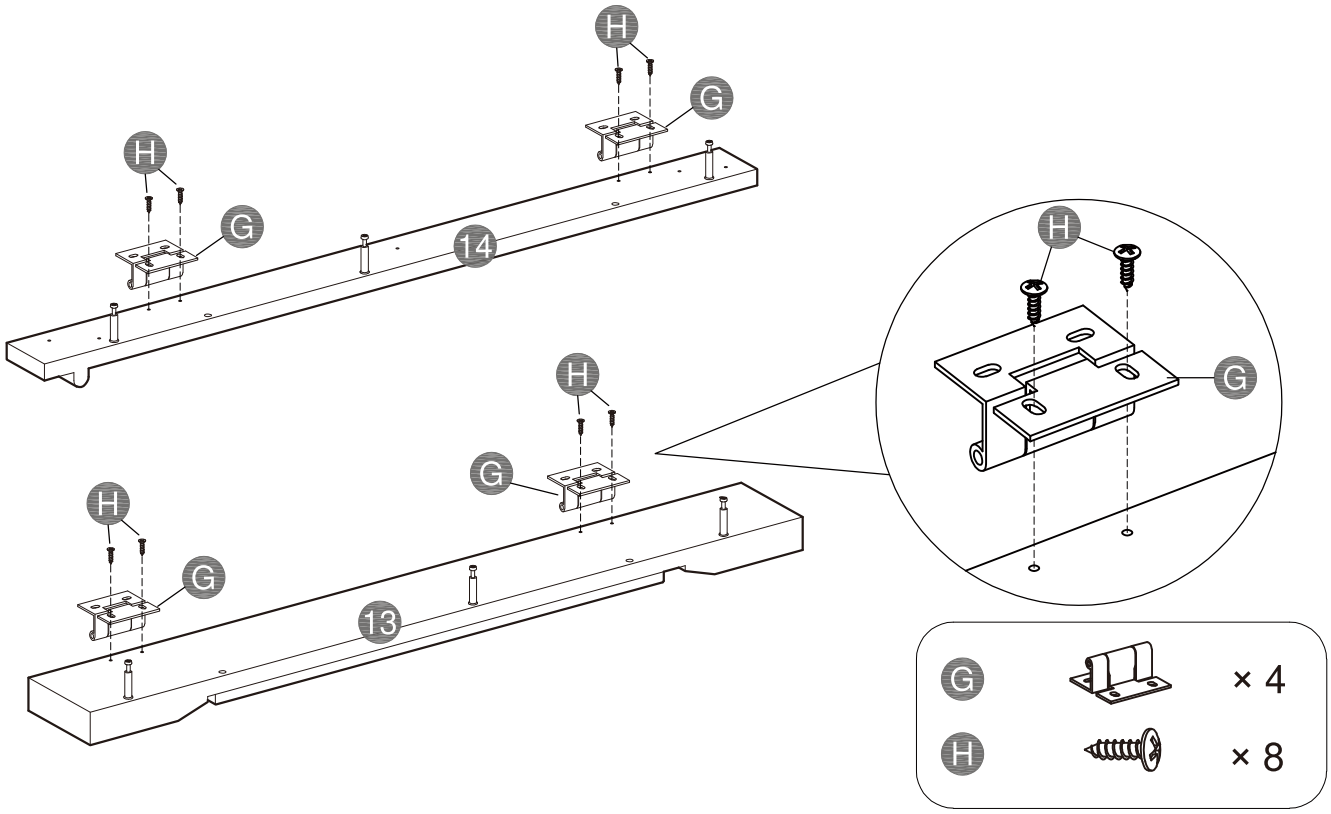


Step 15

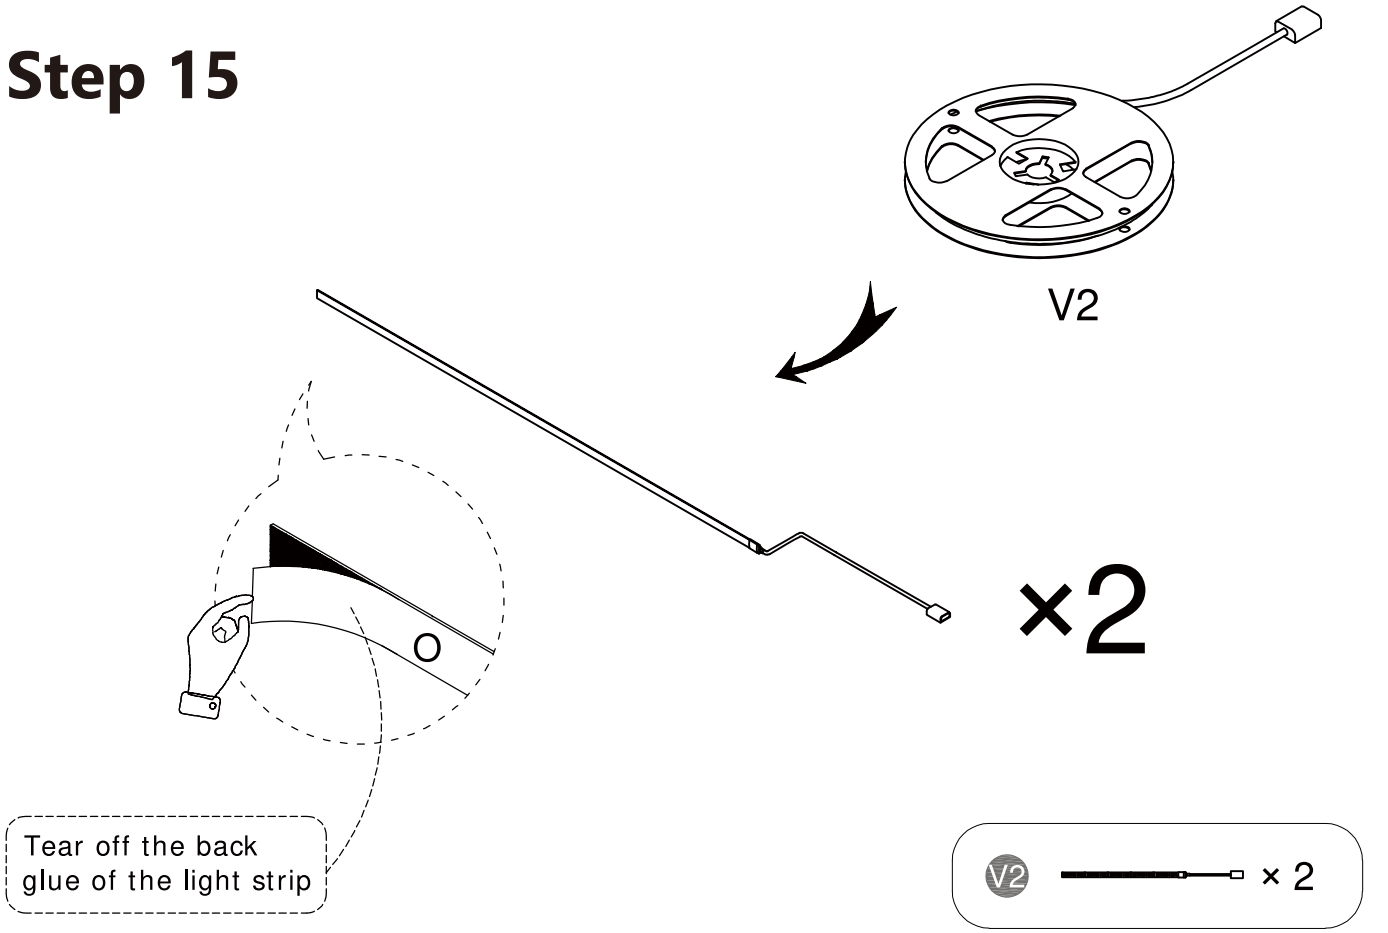

Step 16


Attach the LED Strip Light (V2) to Board (⑭).


Tip: When pasting, please align the corners of the light strip with the center of the 2 guide holes to ensure that the light strip is straight.

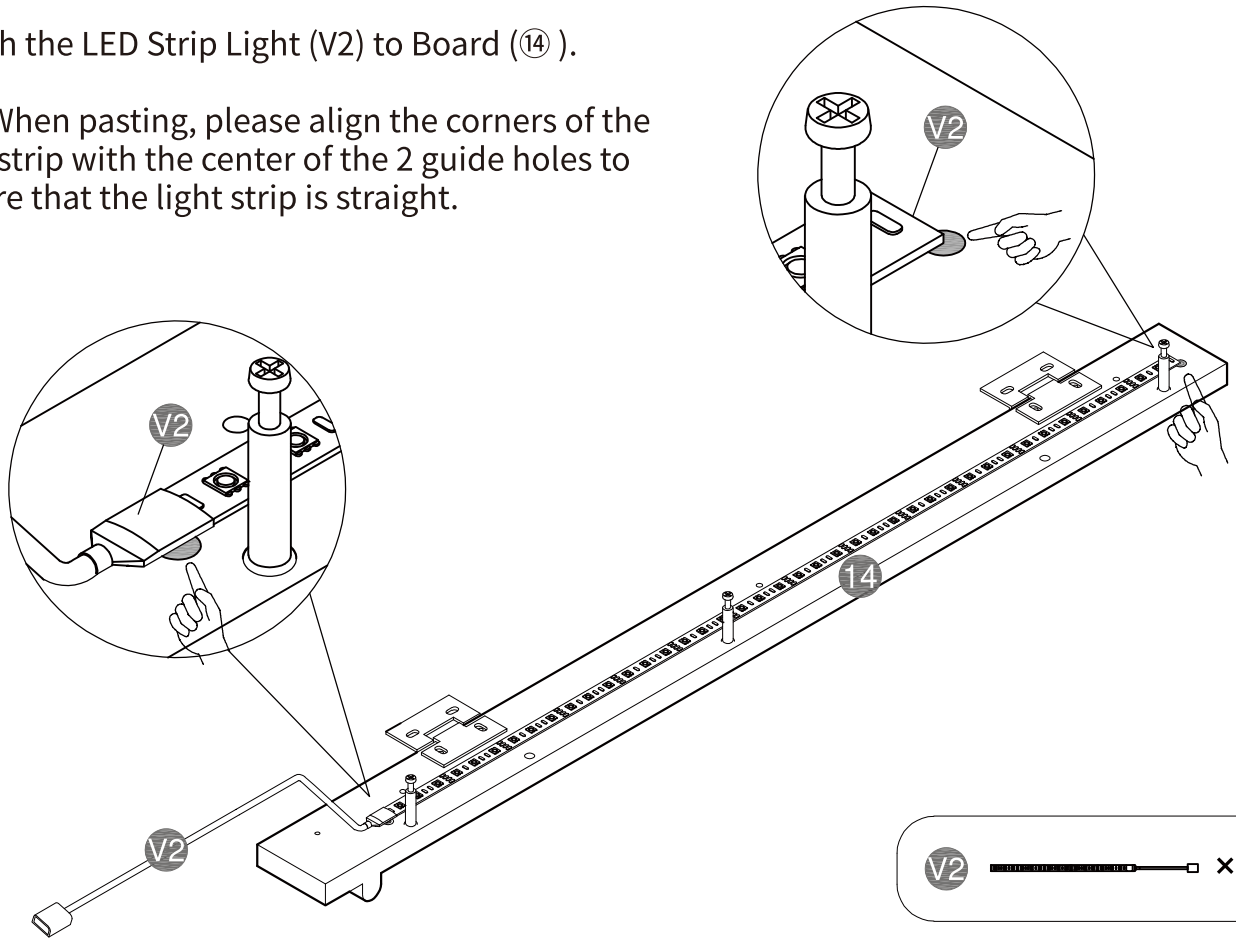

Step 17


Using Screws (D) to secure (V4) to Board (⑭) .

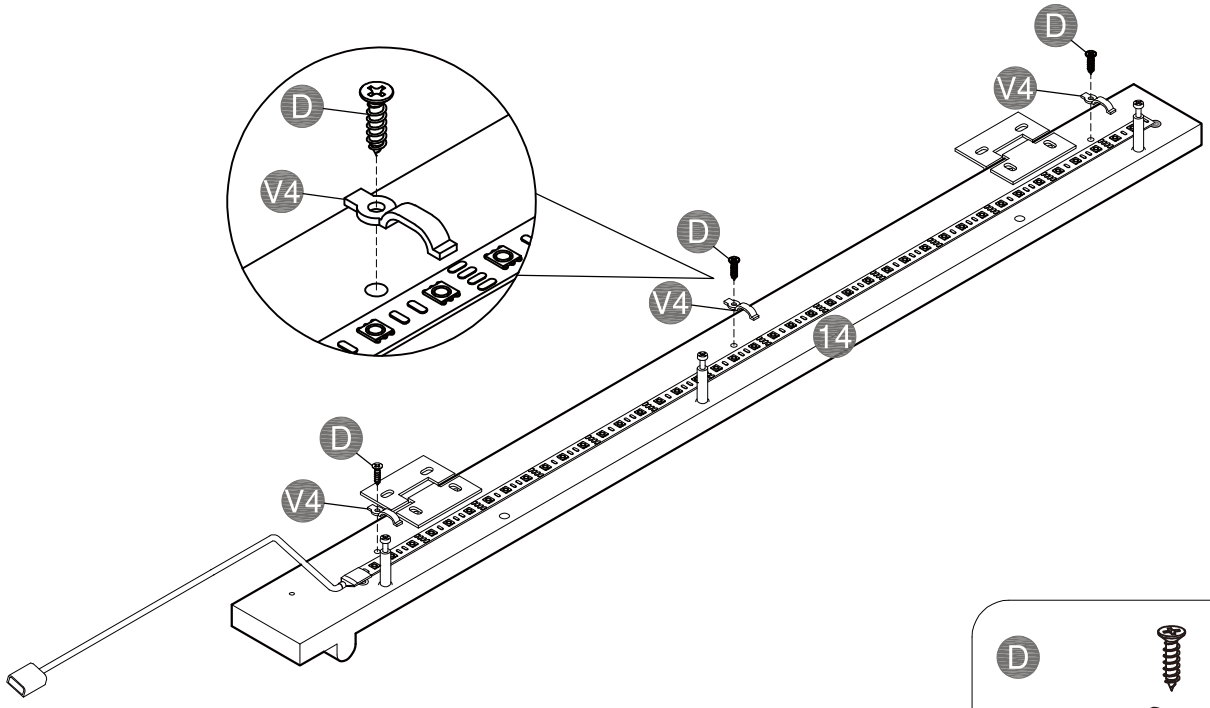


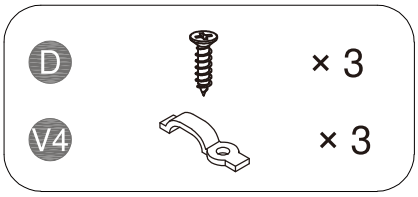

Step 18


Inserting Wooden Dowel (C) into Board (⑦).
Attach Board (⑦)to Board (⑬ ⑭).

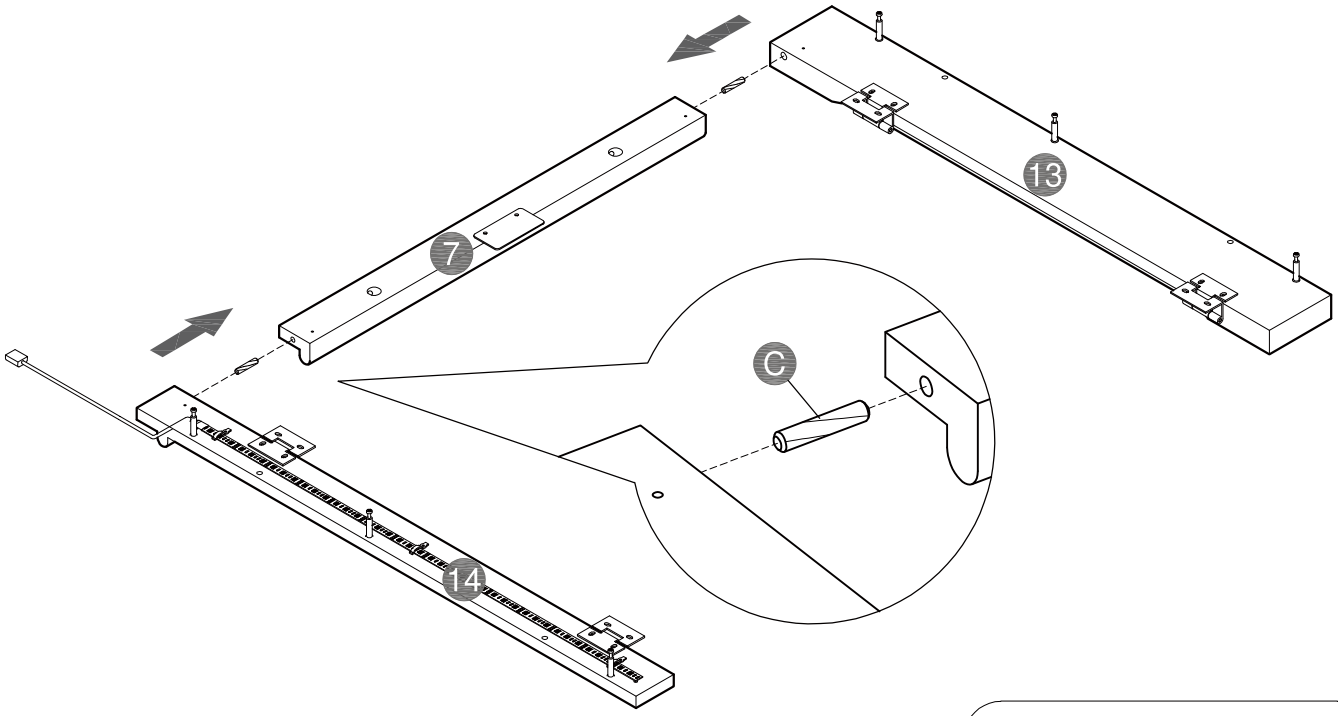





Step 19

Using Screws (D) to secure (E) to
Board (⑦ ⑬ ⑭).

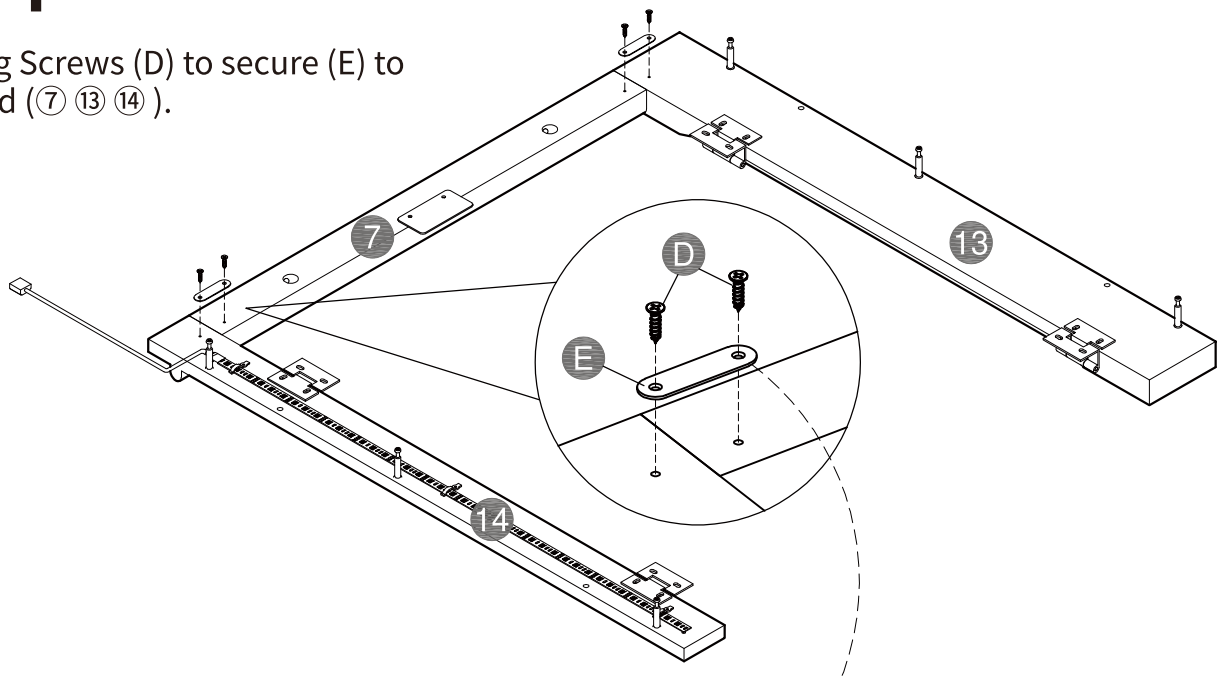


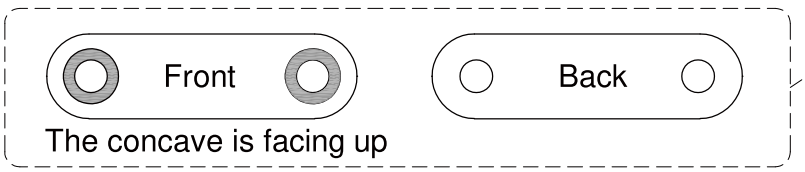


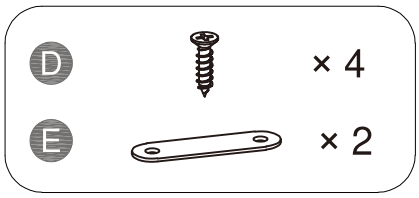


Step 20

Inserting Wooden Dowel (C) into Board (③④).
Attach Board (⑦⑬ ⑭)to Board (③④).
Using Cam Lock (A) secure Board (⑦⑬ ⑭)to Board (③④).

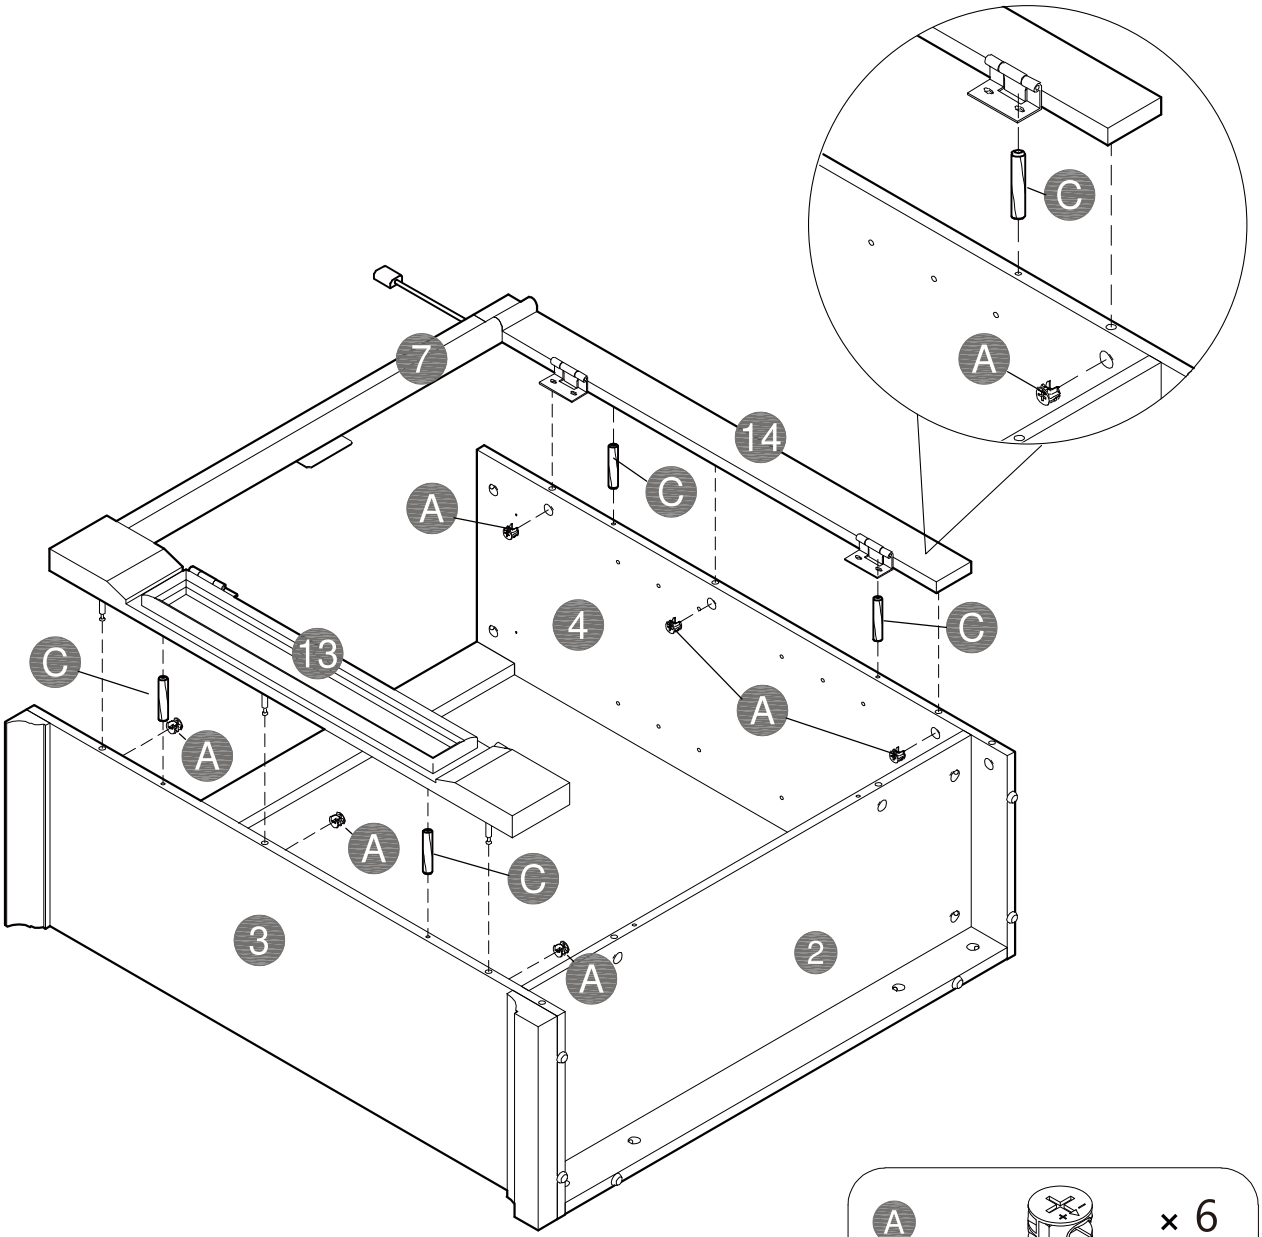


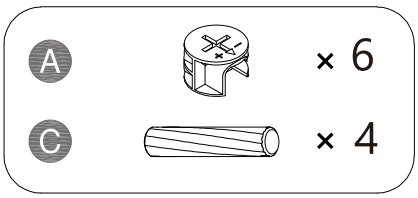

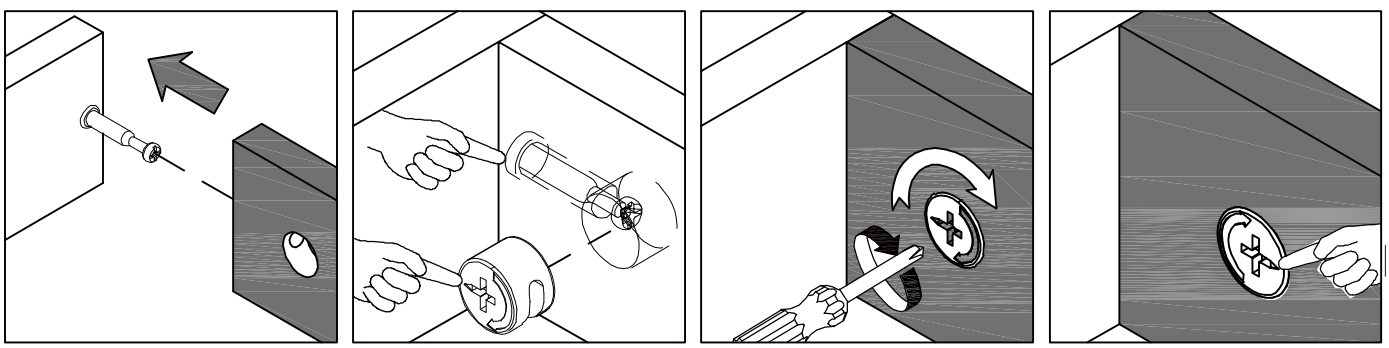


Step 21

Securing Cam Bolt (B) into Board (㉑ ㉒) .

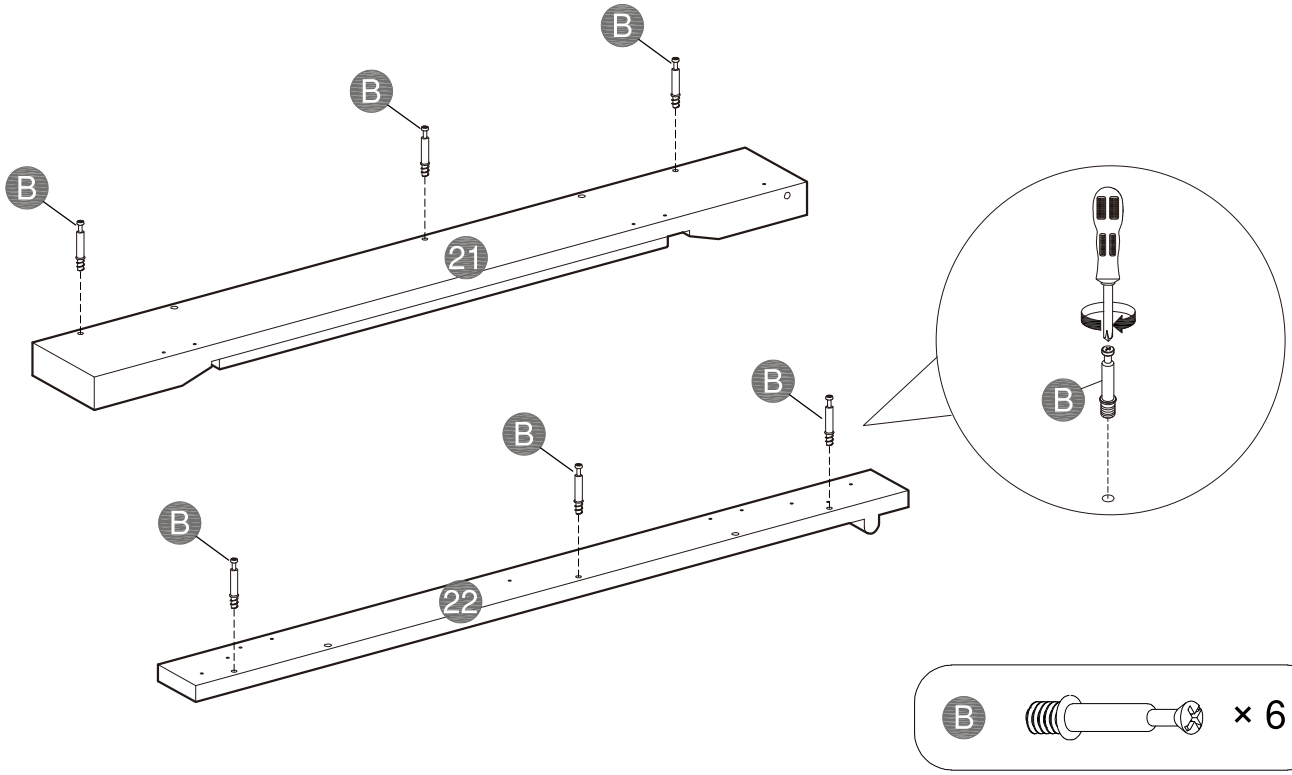

Step 22


Using Screws (H) to secure (G) to Board (㉑ ㉒) .

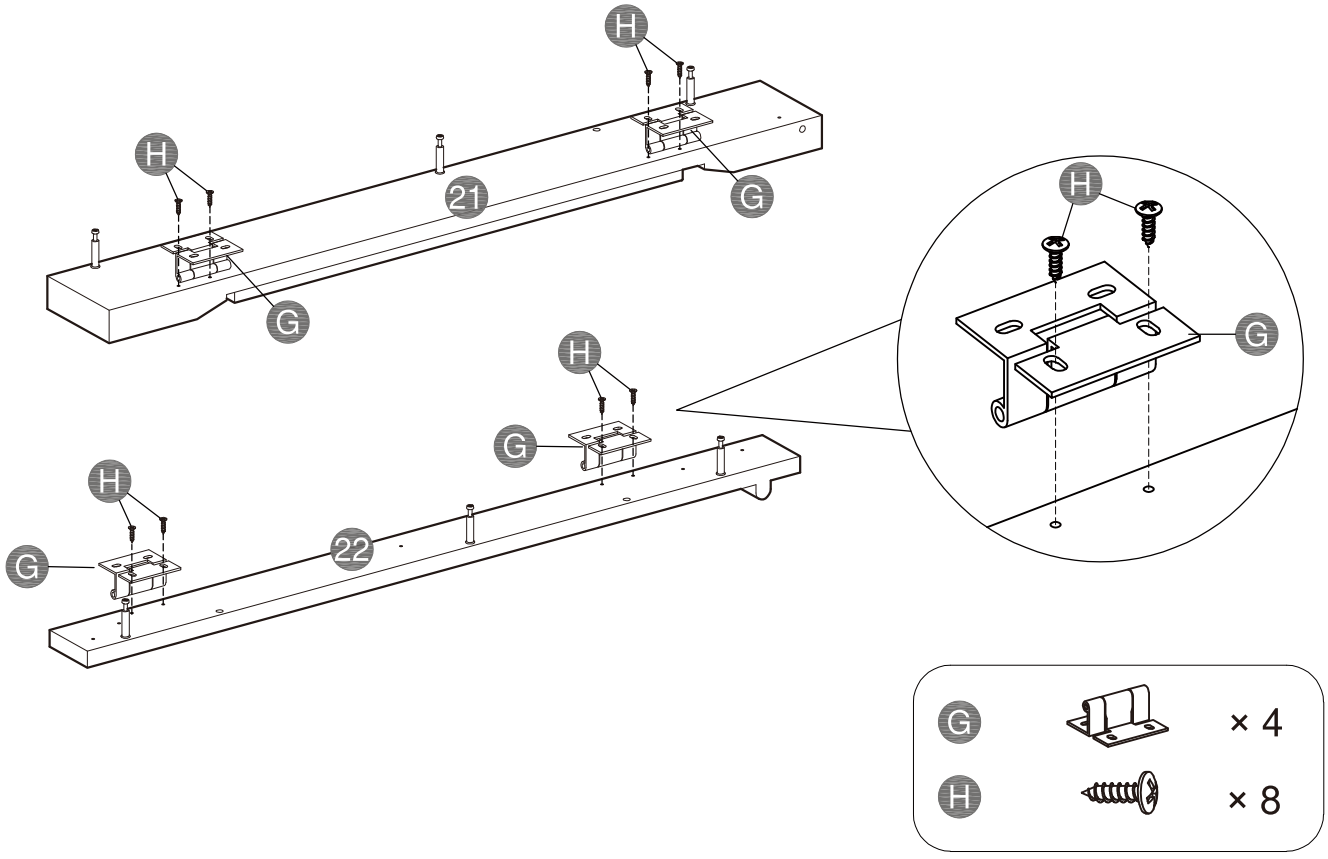

Step 23


Attach the LED Strip Light (V2) to Board (㉒).


Tip: When pasting, please align the corners of the light strip with the center of the 2 guide holes to ensure that the light strip is straight.

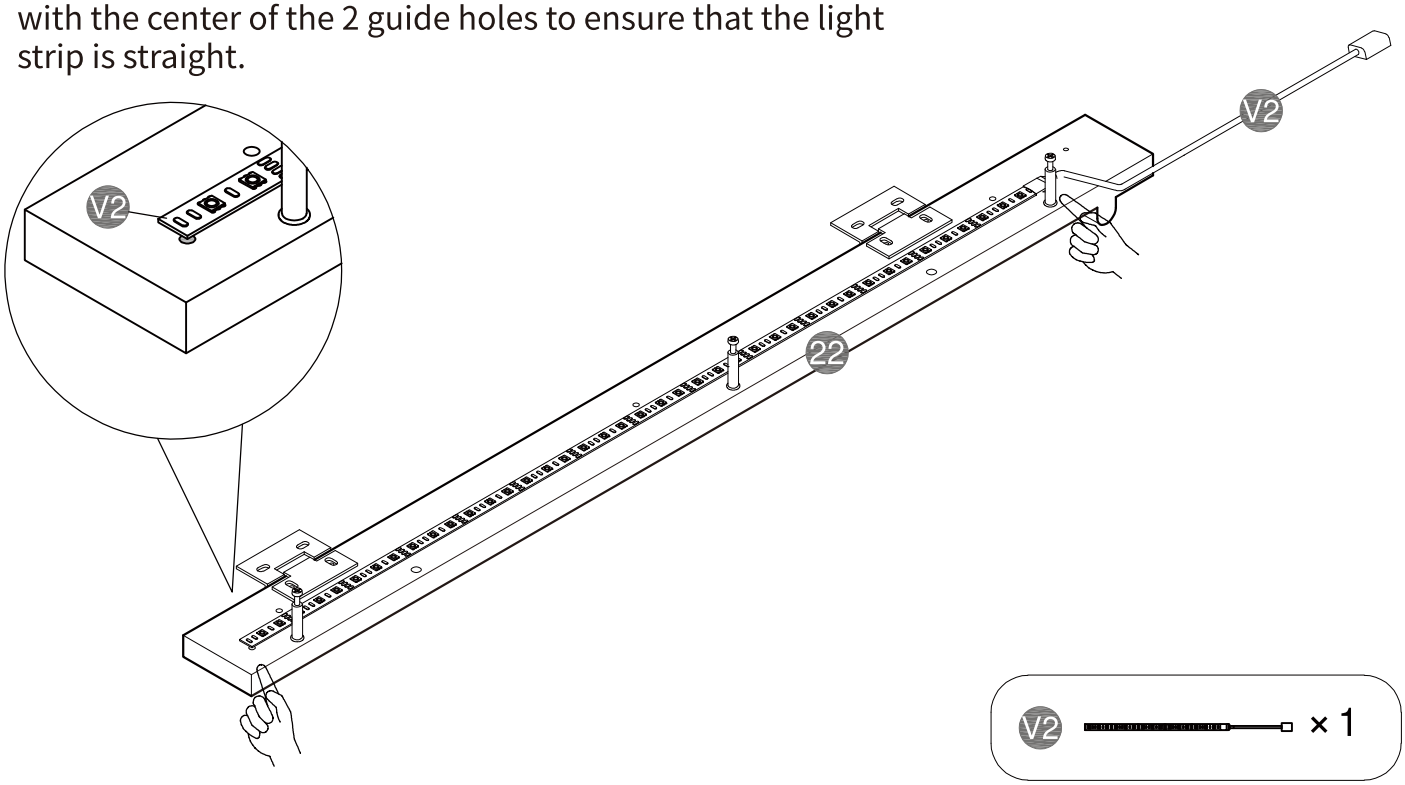

Step 24


Using Screws (D) to secure (V4) to Board (㉒) .

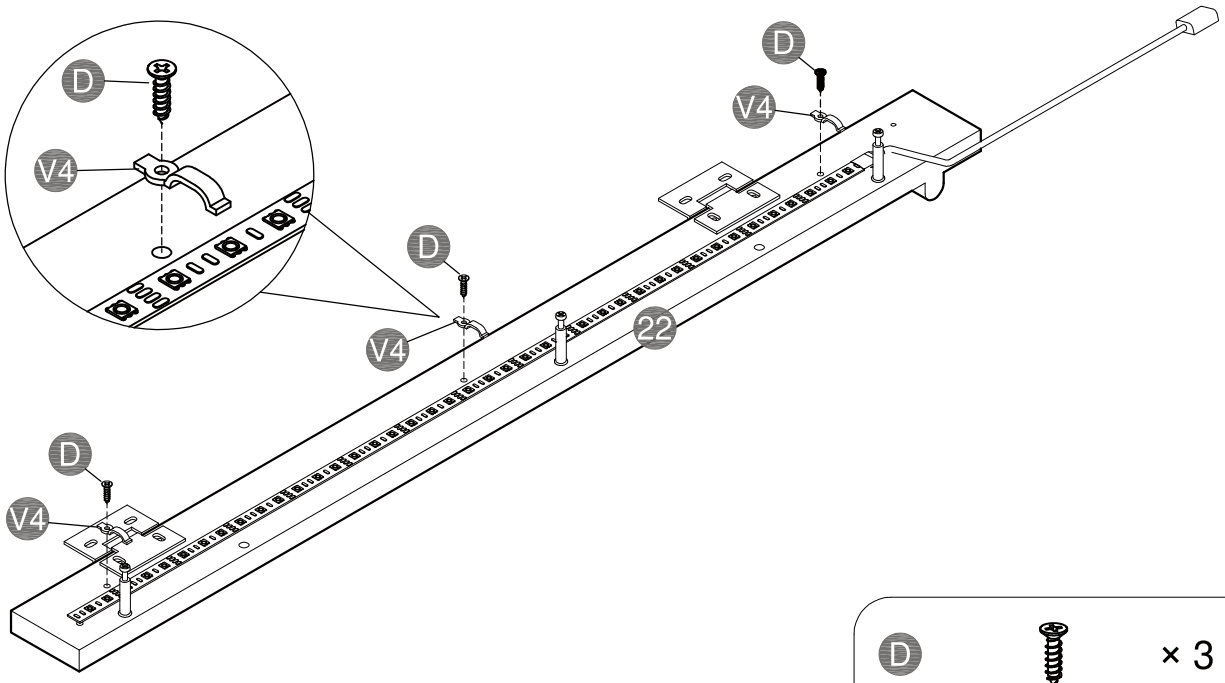

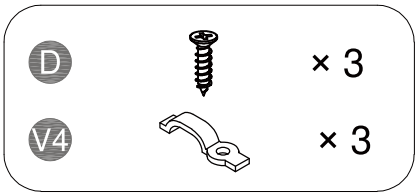


Step 25


Inserting Wooden Dowel (C) into Board (⑦).
Attach Board (⑦)to Board (㉑ ㉒).

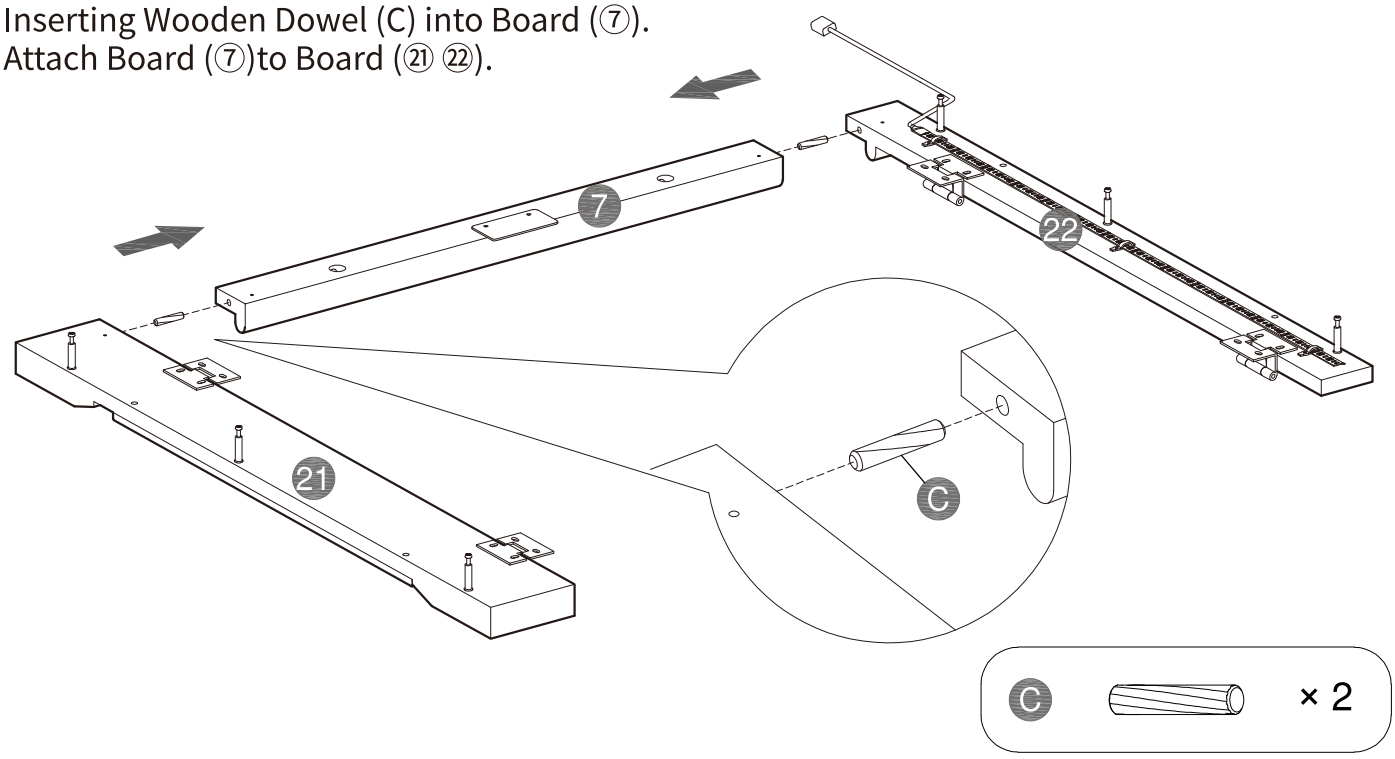


Step 26

Using Screws (D) to secure (E) to Board (⑦㉑㉒).

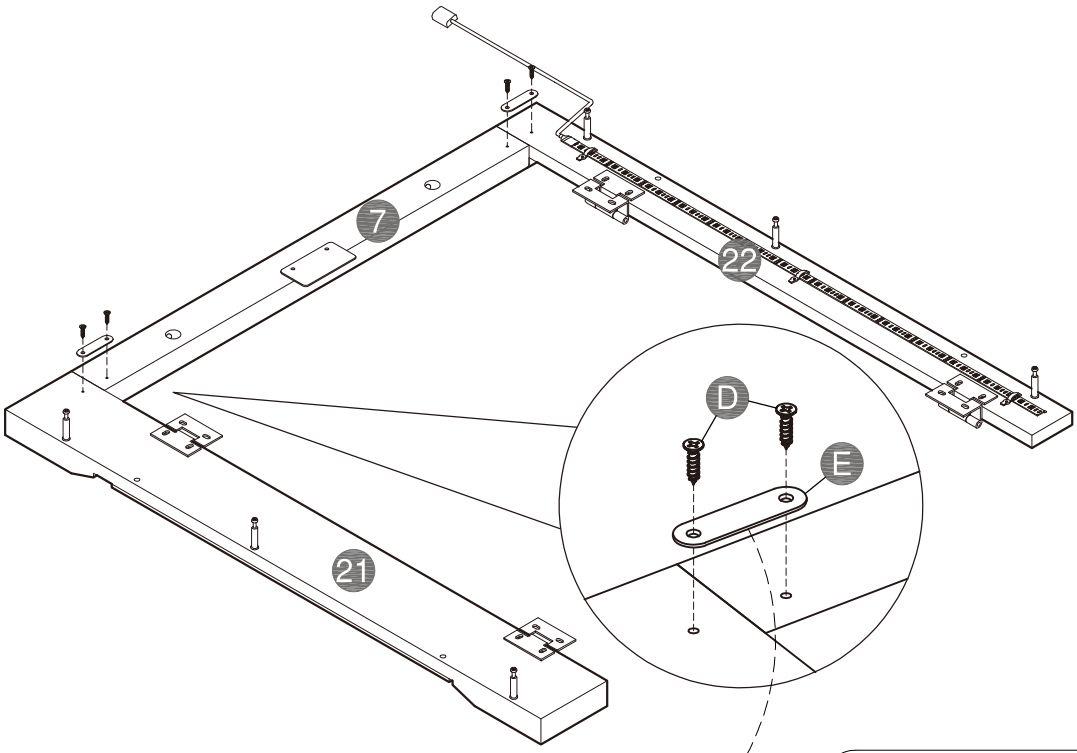


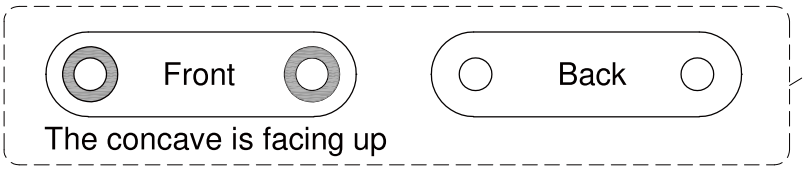


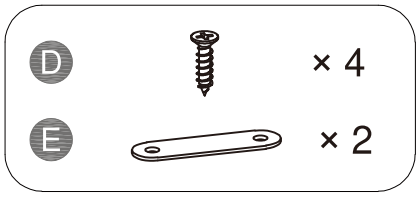


Step 27

Inserting Wooden Dowel (C) into Board (⑰ ⑱).
Attach Board (⑦㉑㉒)to Board (⑰ ⑱).
Using Cam Lock (A) secure Board (⑦㉑㉒)to Board (⑰ ⑱).

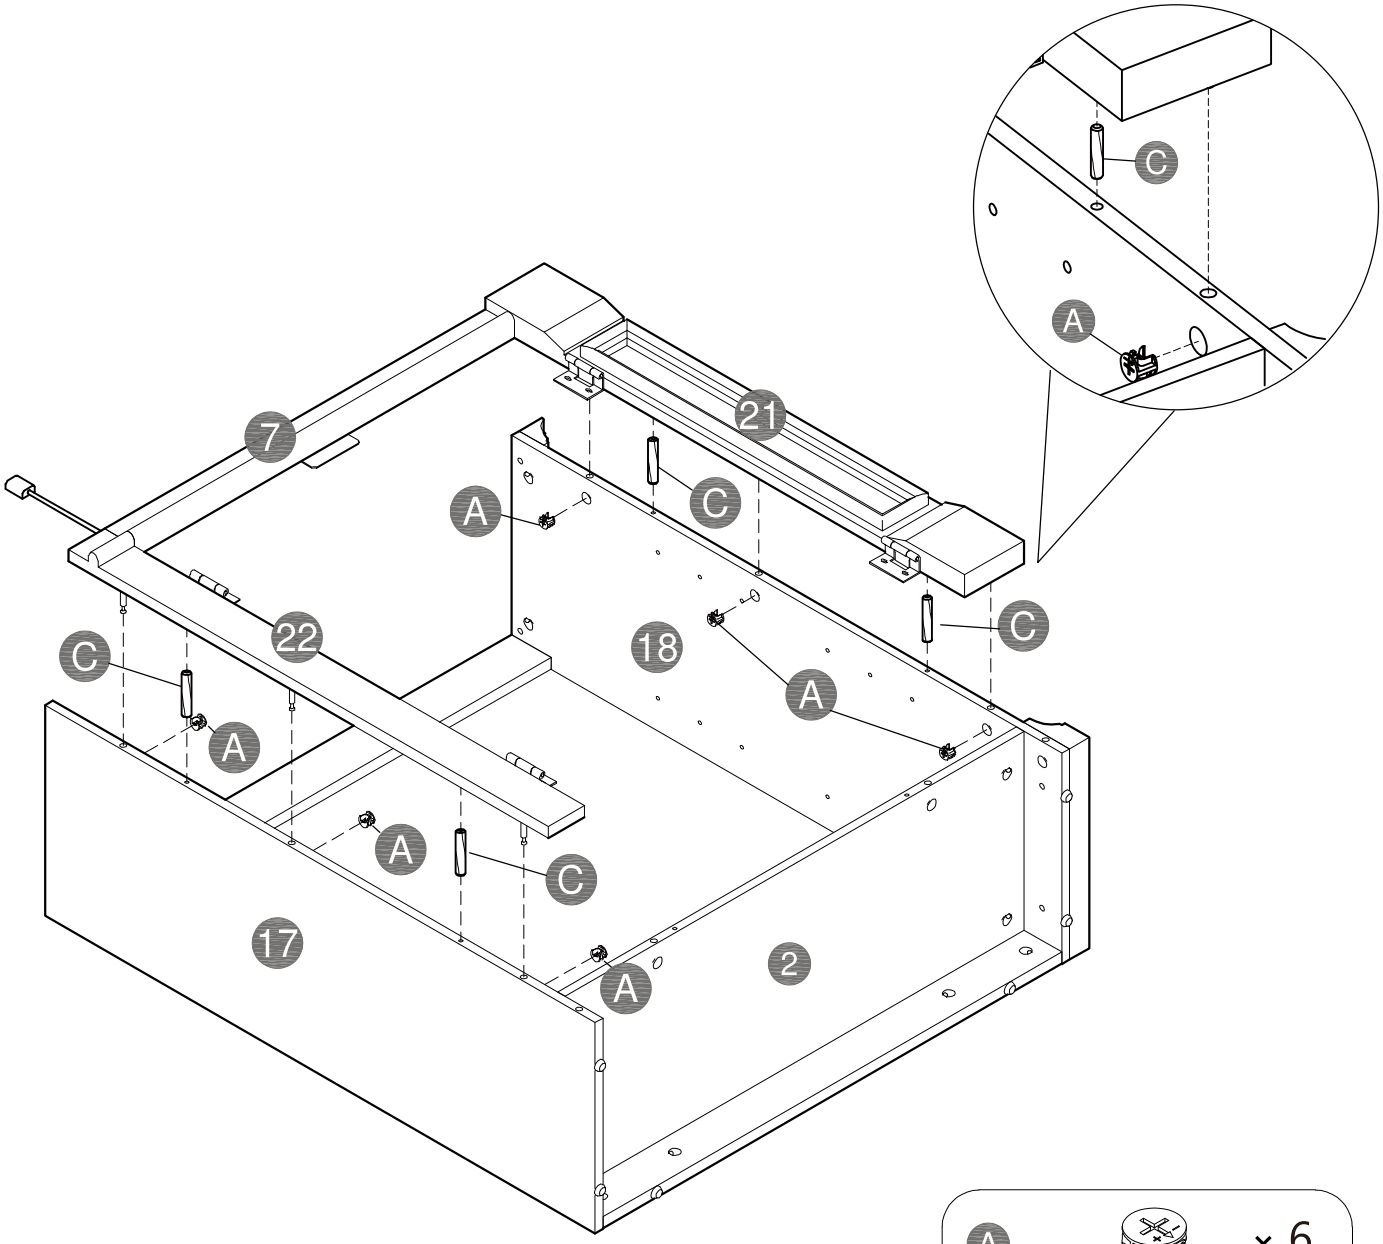


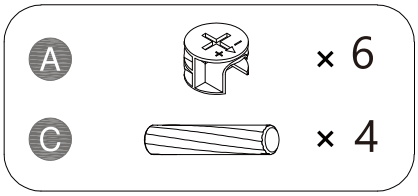


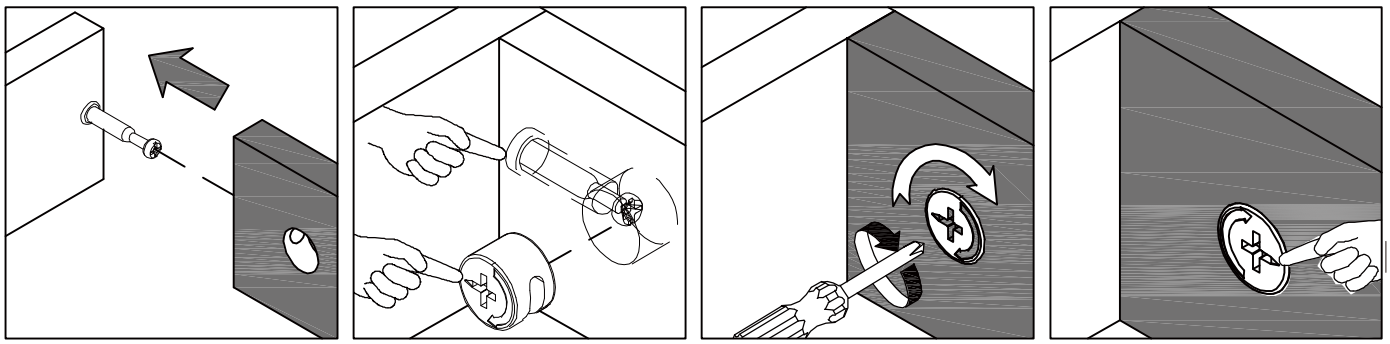


Step 28

Securing Cam Bolt (B) into Board (⑩ ⑳).

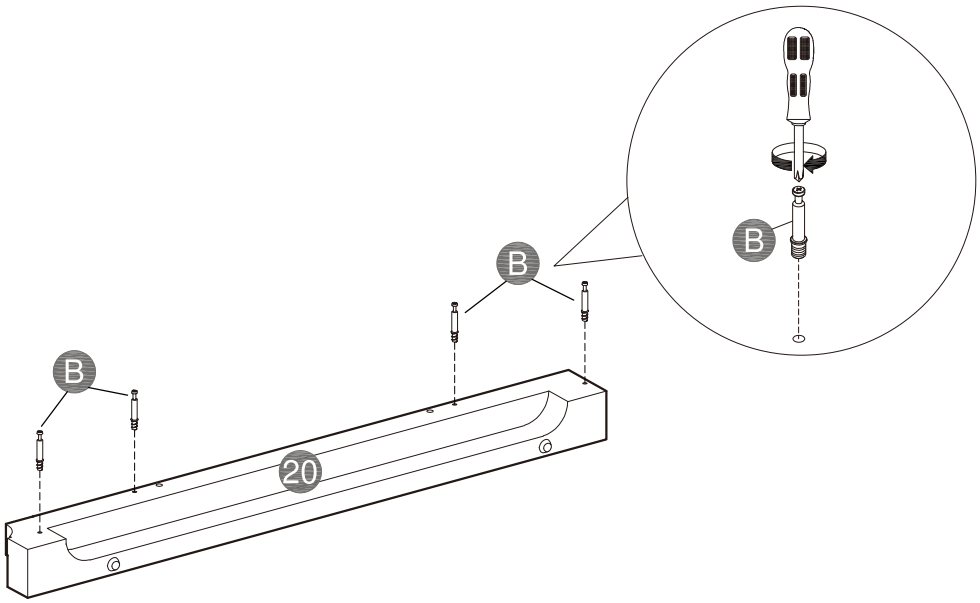


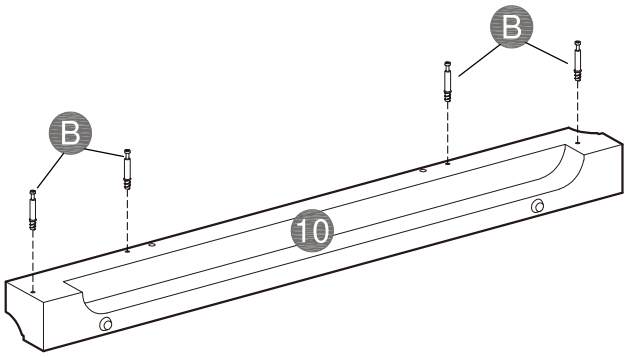




Step 29


Inserting Wooden Dowel (C) into Board (②).
Attach Board (⑩&⑳)to Board (②).
Using Cam Lock (A) secure Board (⑩&⑳) to Board (②).

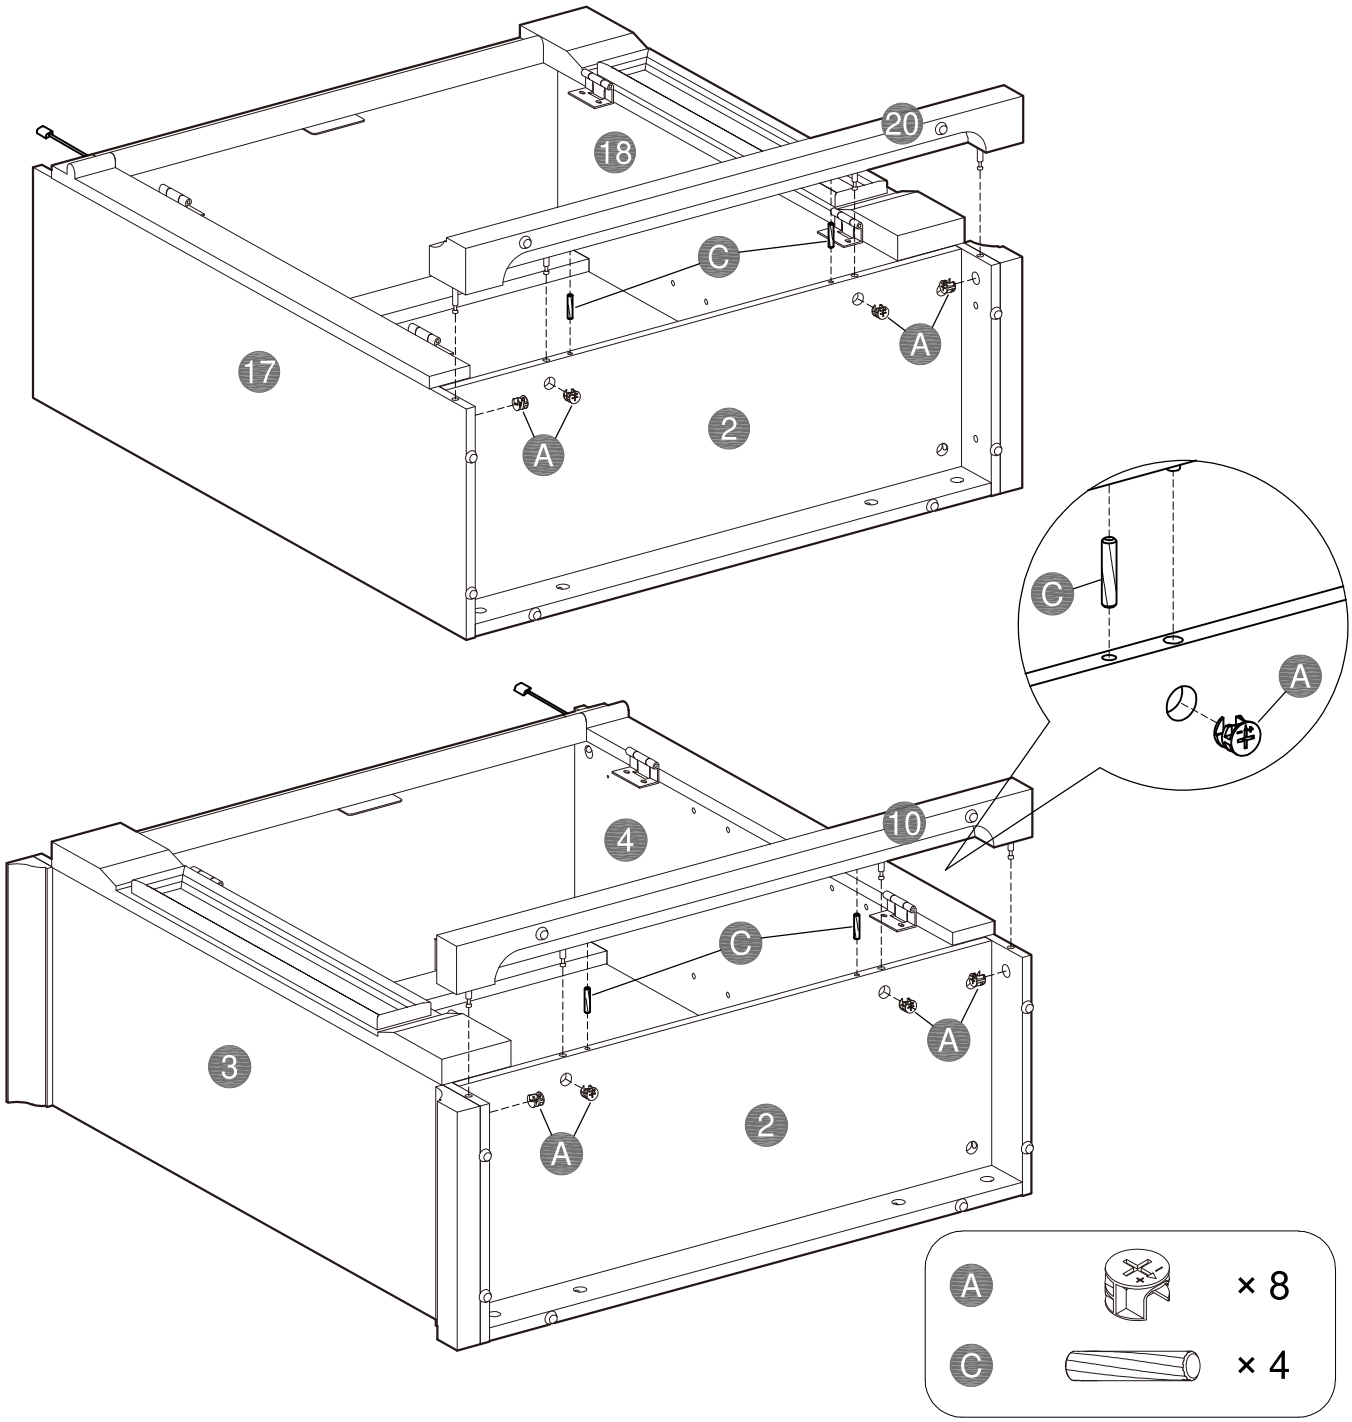

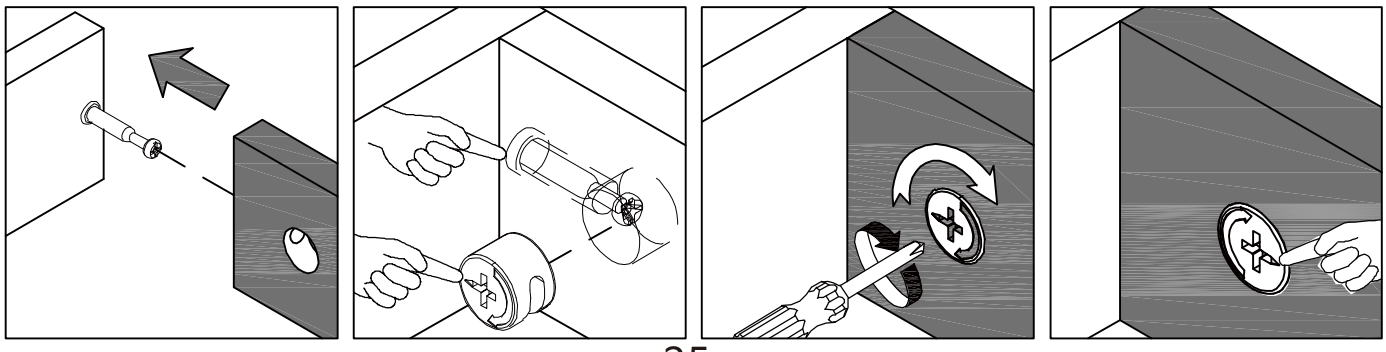


Step 30

Inserting Wooden Dowel (C) into Board (①⑯). Attach Board (⑲)to Board (⑯).
Attach Board (⑧)to Board (①). Using Cam Lock (O) secure Board (⑲) to Board (⑯).
Using Cam Lock (O) secure Board (⑧) to Board (①).

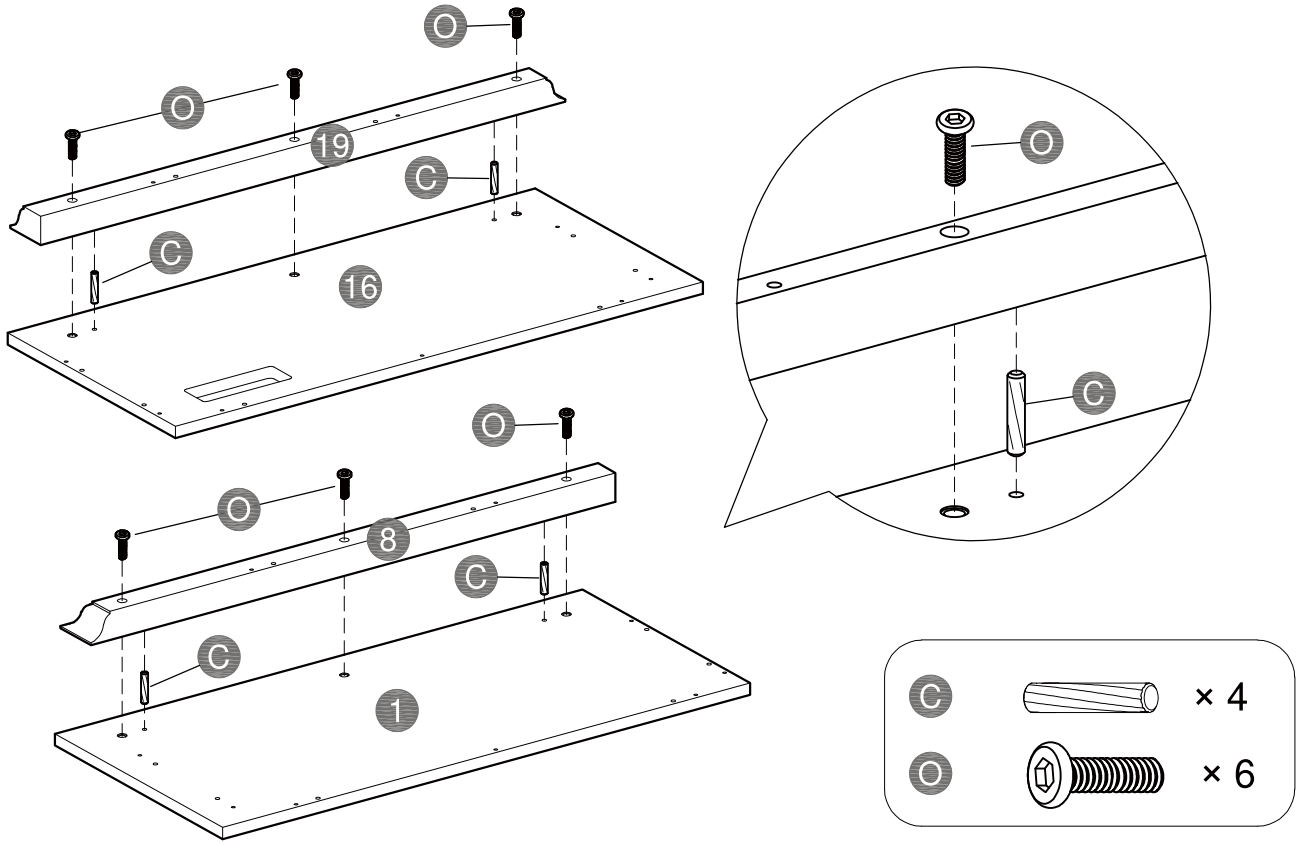


Step 31


Securing Cam Bolt (B) into Board (① ⑯).

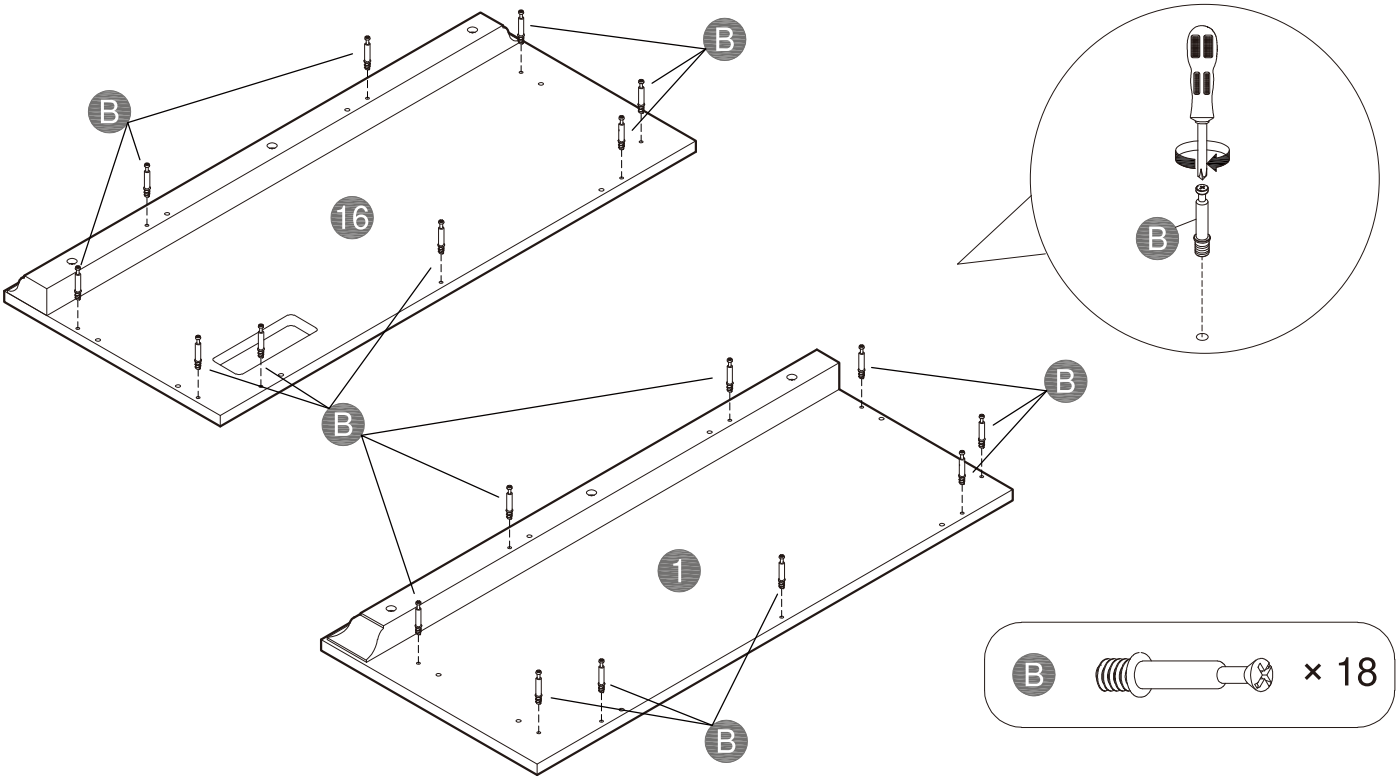

Step 32


Inserting Wooden Dowel (C) into Board (③④⑰ ⑱).
Attach Board (①)to Board (③④⑥⑦).
Attach Board (⑯)to Board (⑰ ⑱ ⑥⑦).
Using Cam Lock (A) secure Board (① ⑯) to Board (③④⑰ ⑱).

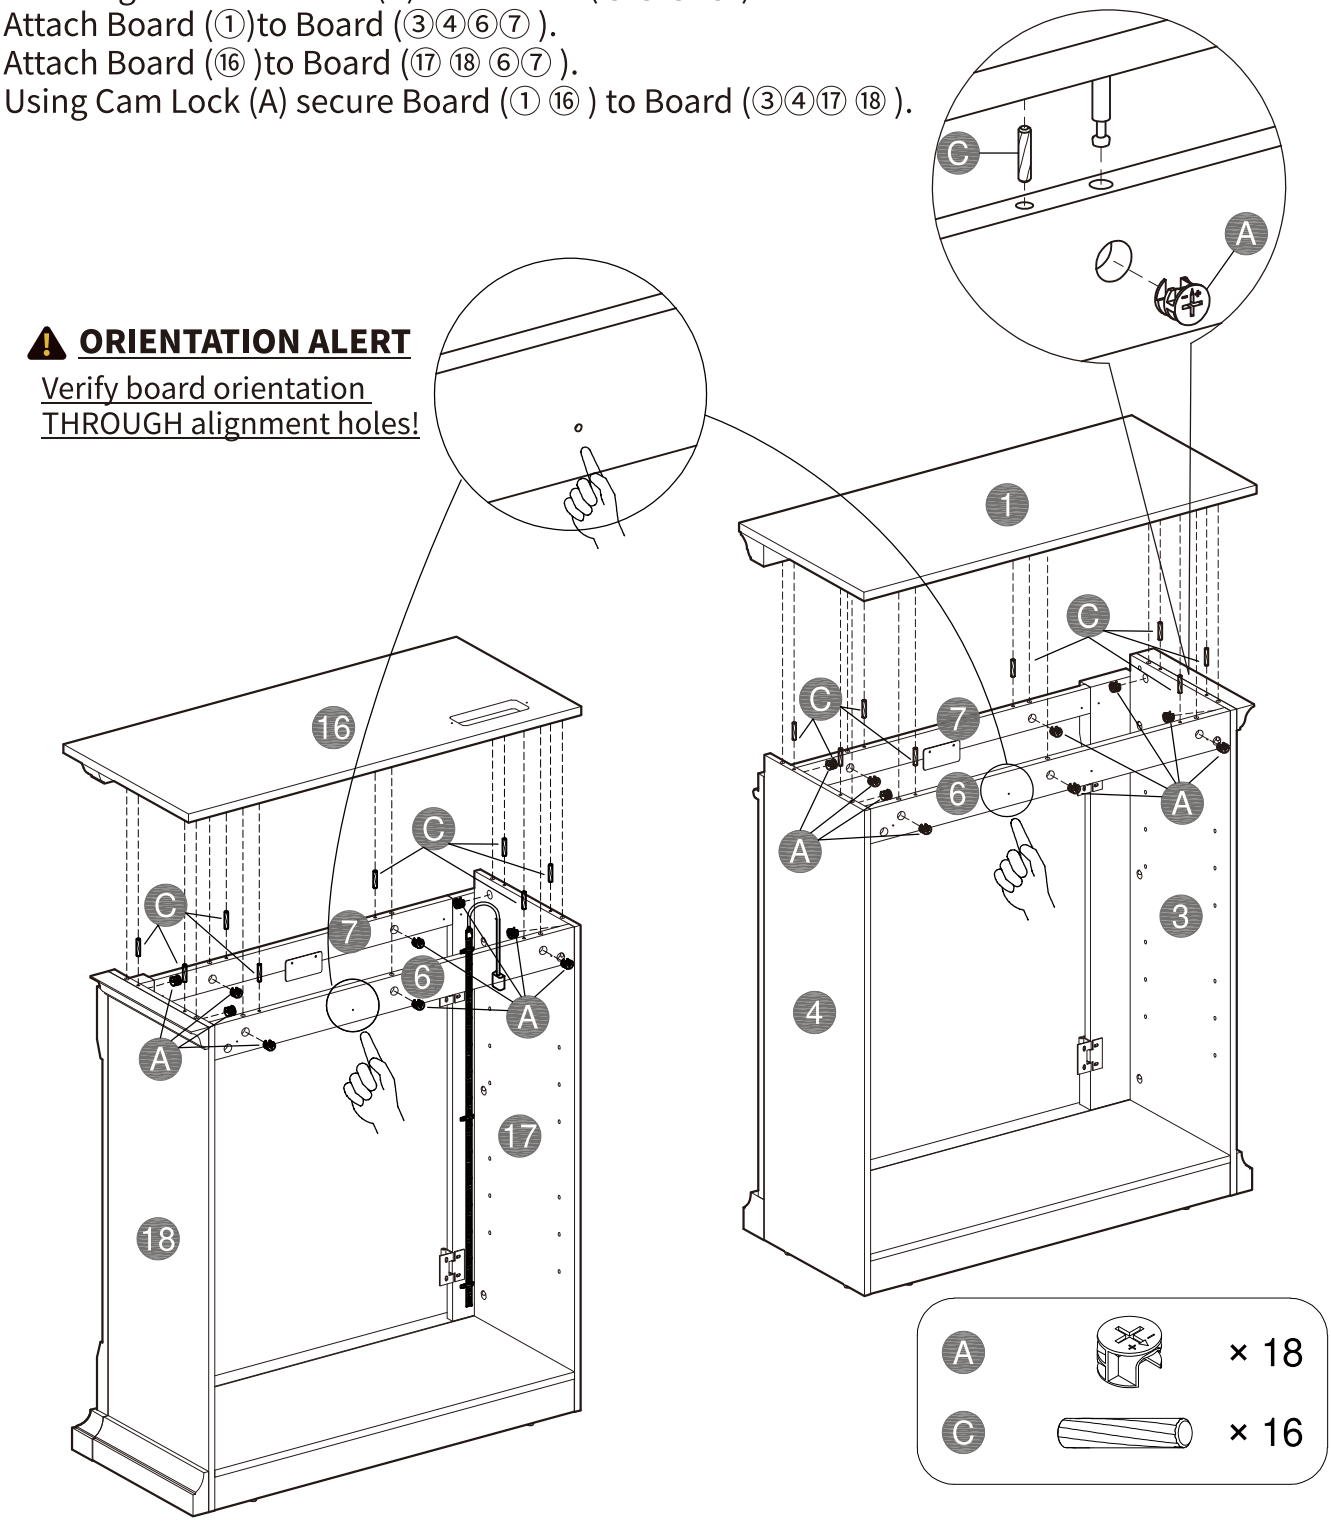


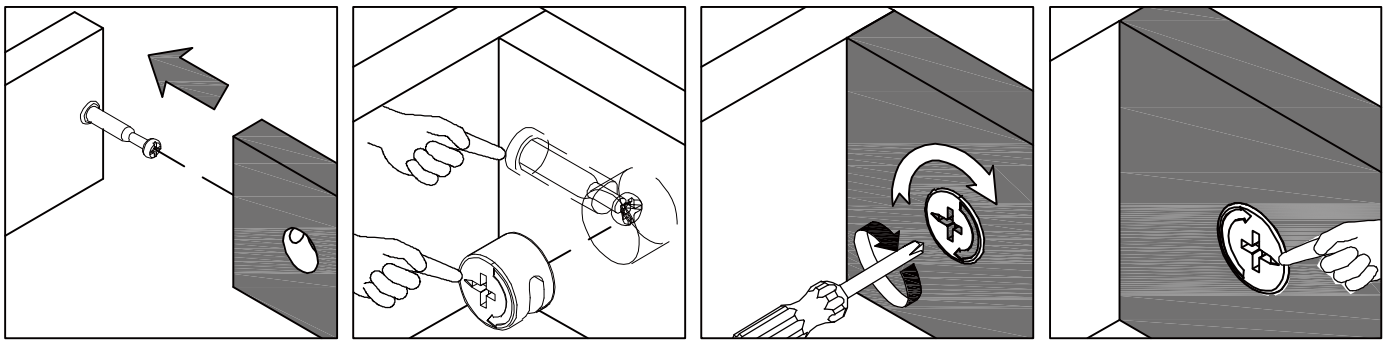

Step 33

Using Screws (D) to secure (V4) to Board (④⑰).

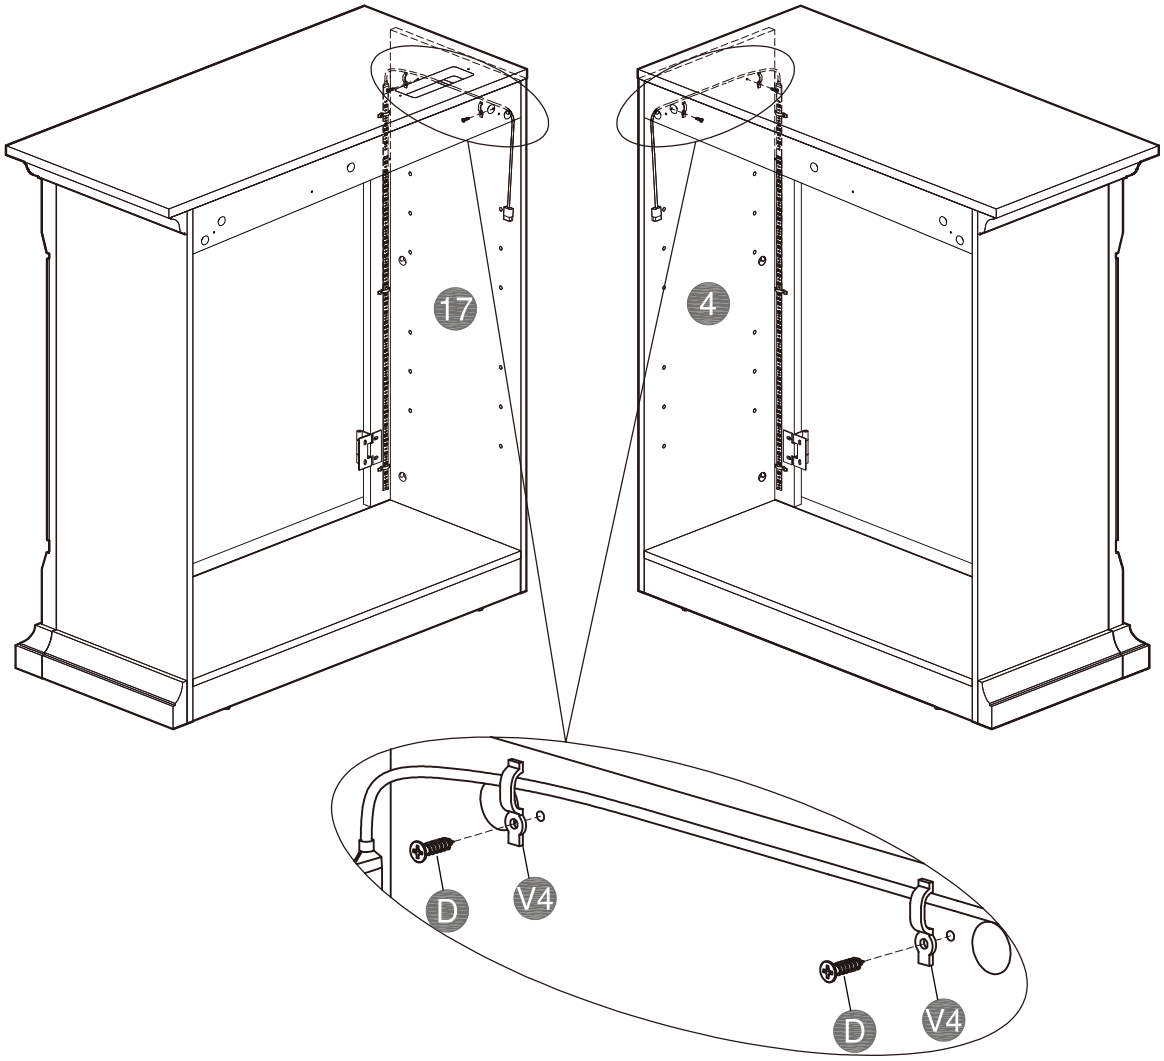


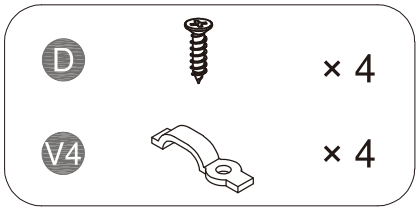

Step 34

Using Screws (H) to assemble Hinges (G) to the Glass Board (㉔ ㉕).

Tip:When installing the glass door, please be careful not to tighten the screws too quickly. Make sure the two cabinets are at the same height before tightening the screws.

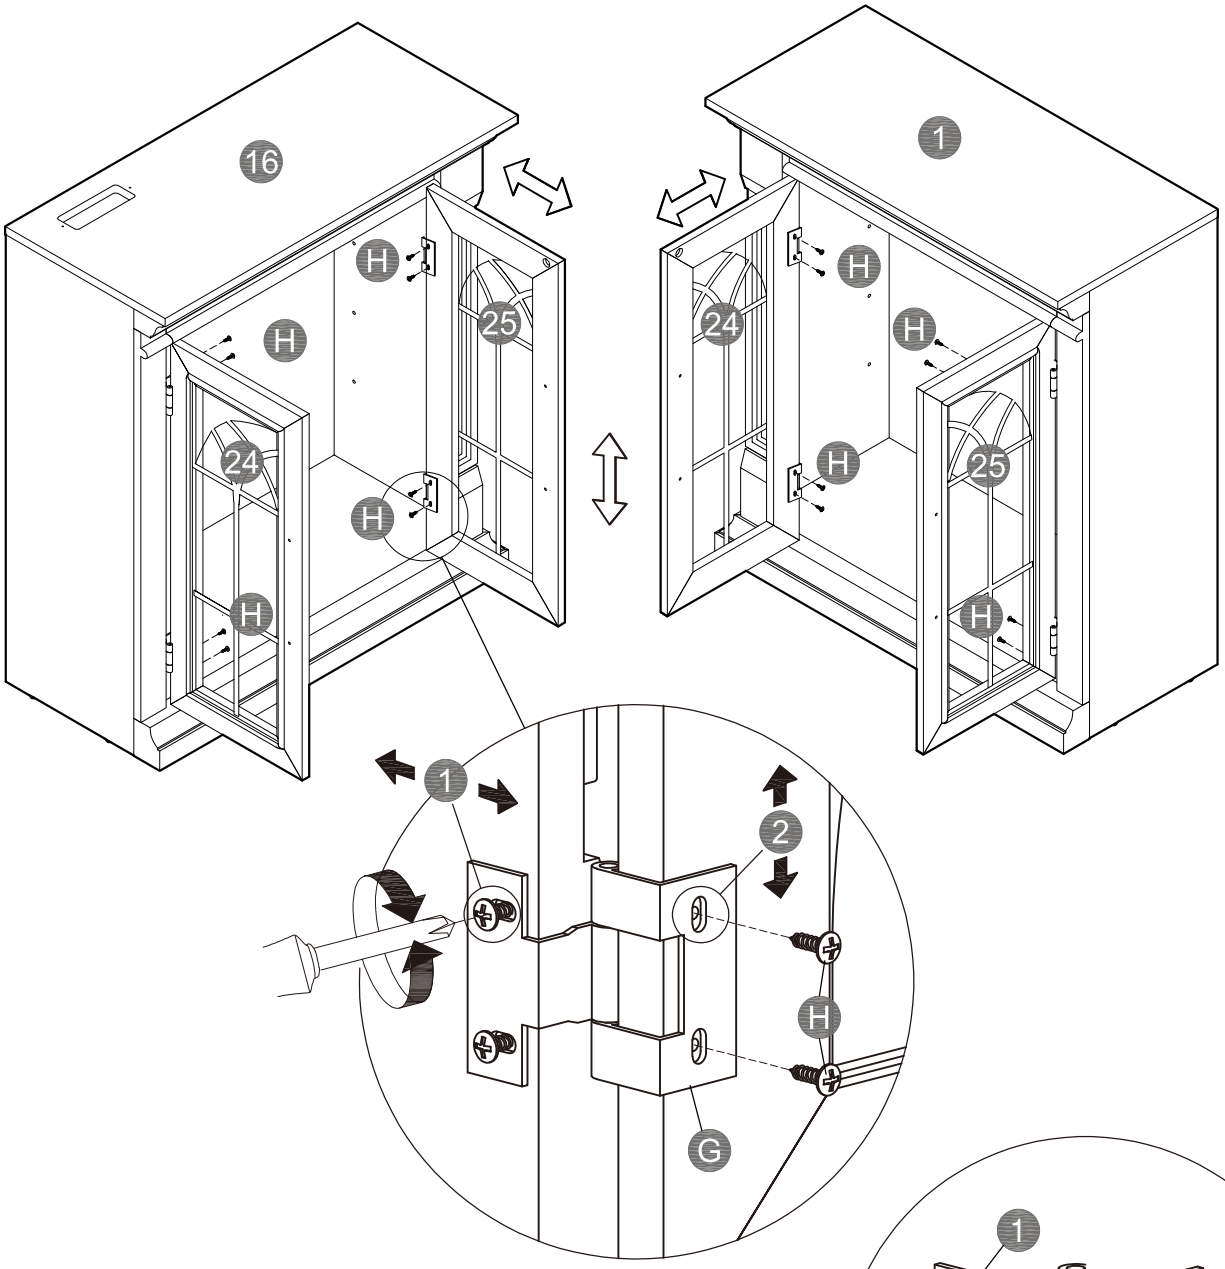


①. TO ADJUST THE DOOR TO RIGHT OR TO LEFT.


②. TO ADJUST THE DOOR UP OR DOWN.

H × 16

Step 35


Attach (K)to Glass Board (㉔㉕).
Using Screws (L) to secure (K) to Board (㉔㉕).

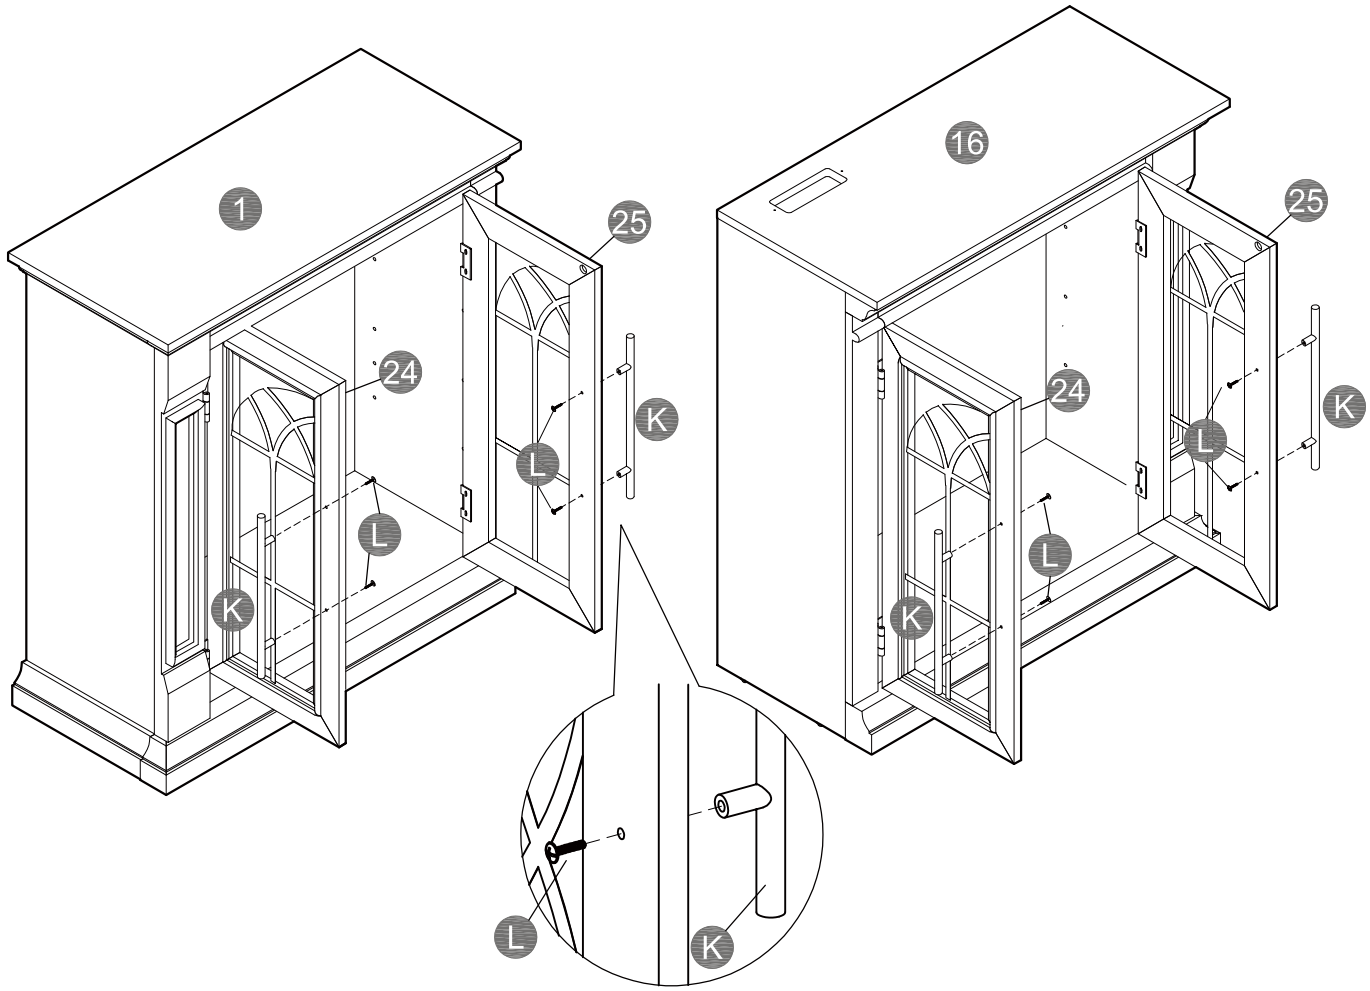


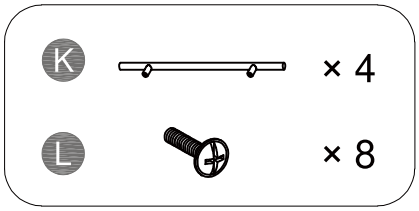

Step 36


Securing Support Accessories (M) into Board (③④⑰ ⑱).
There are three heights can be adjusted.

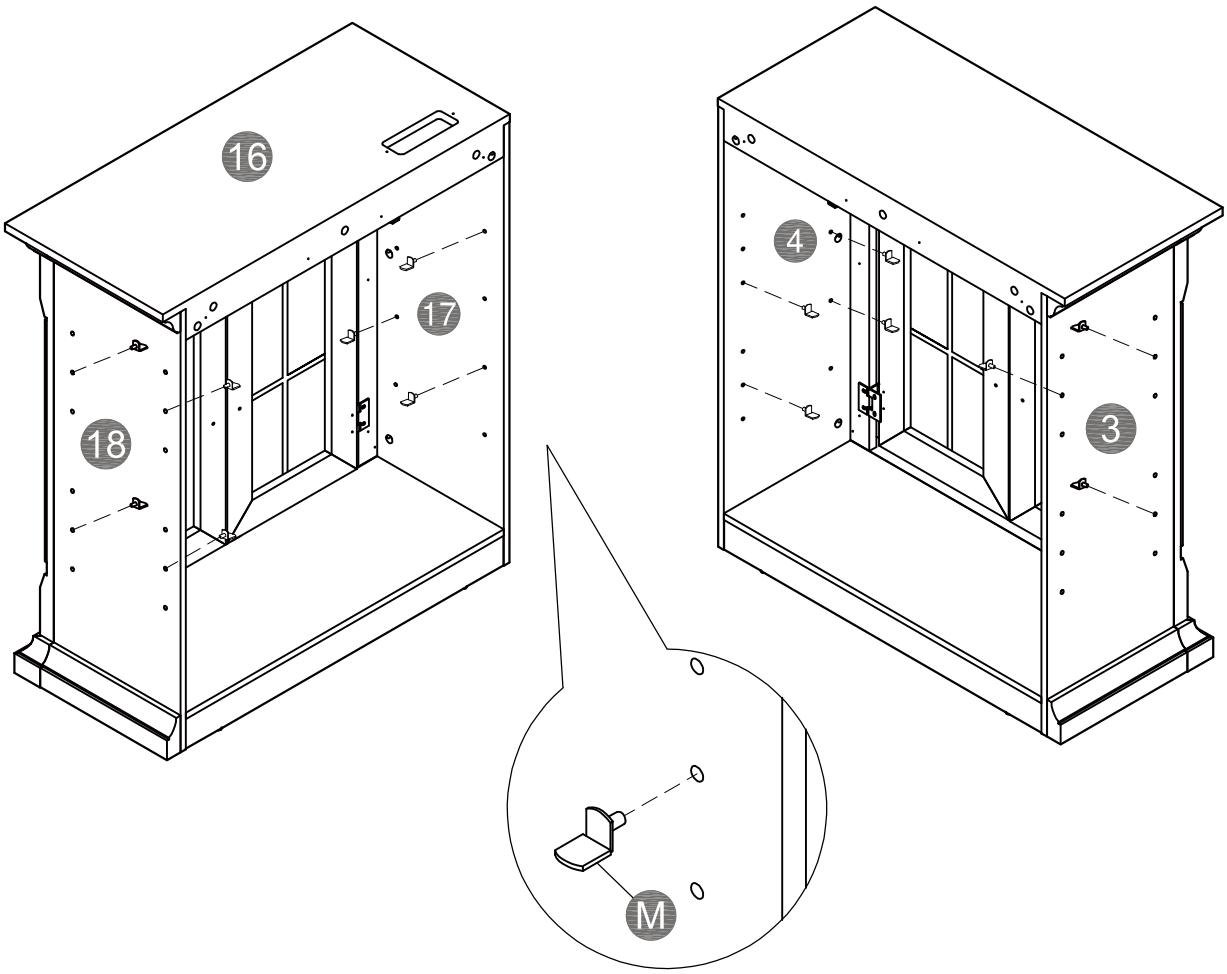




Step 37

Place the Board (⑤) into Board (①⑯).

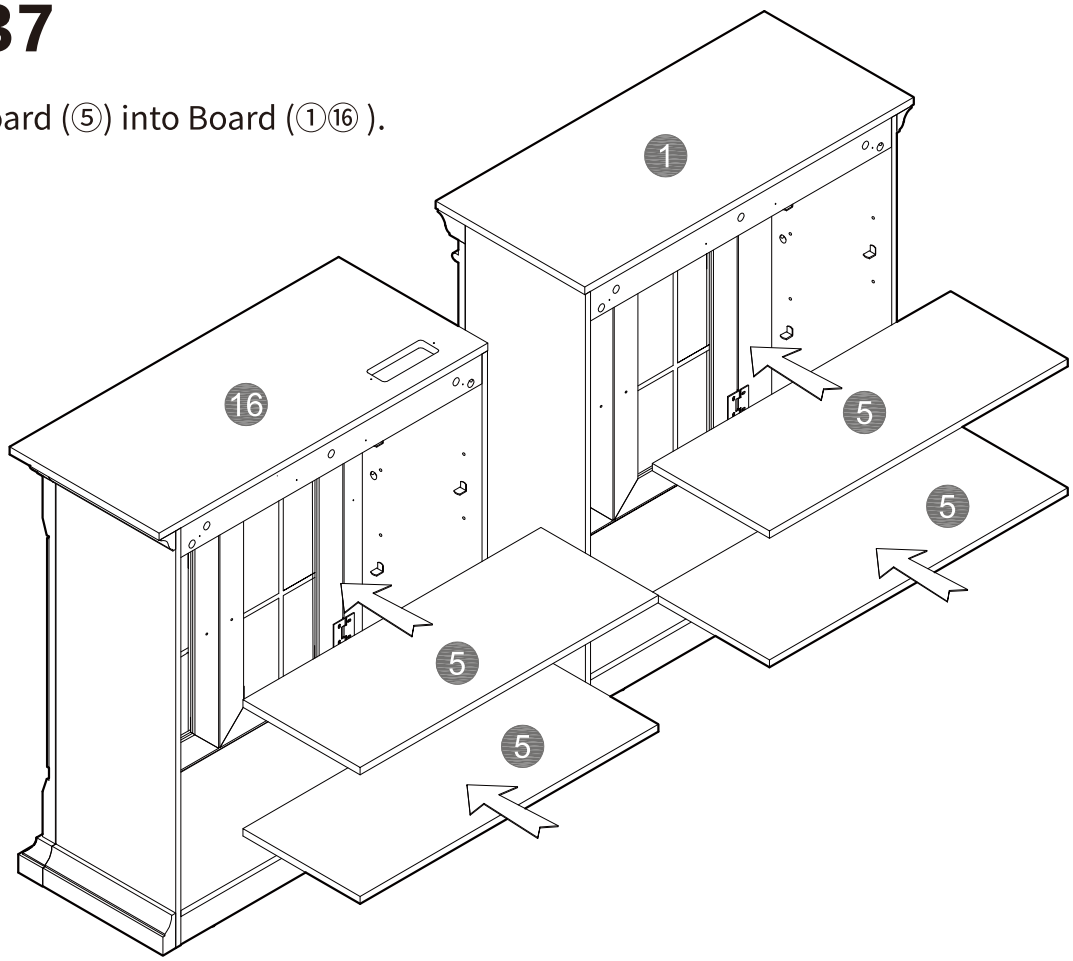

Step 38

Using Screws (U) Attach Circuit Board (W) to Board (⑯).

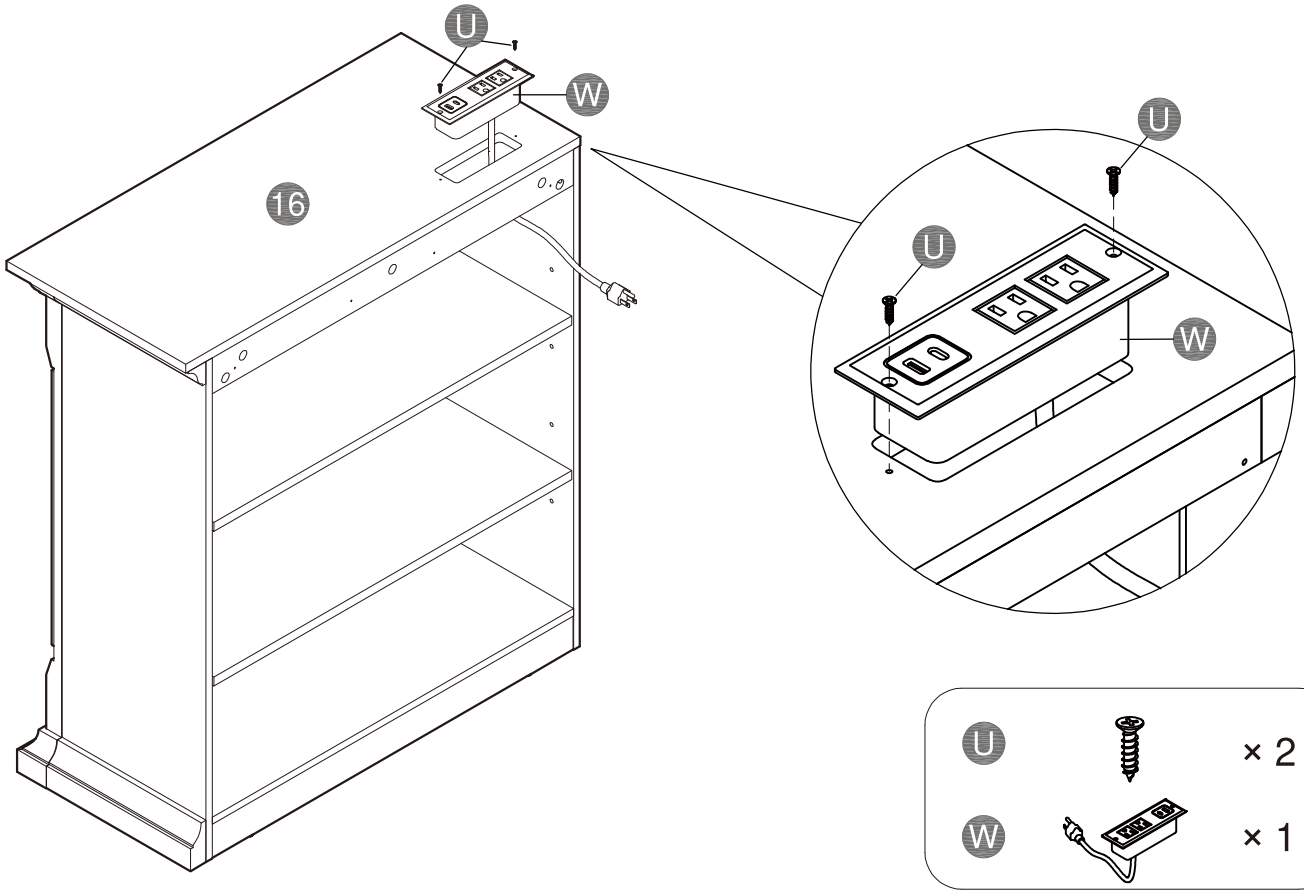



Step 39

Using Screws (F) Through Anti-tipping Belt (P) Assemble Back Panels (⑮) to the main body (①) .

Assemble Back Panels (㉓) to the main body (⑯) .


And Take the Light Strip out of the hole.

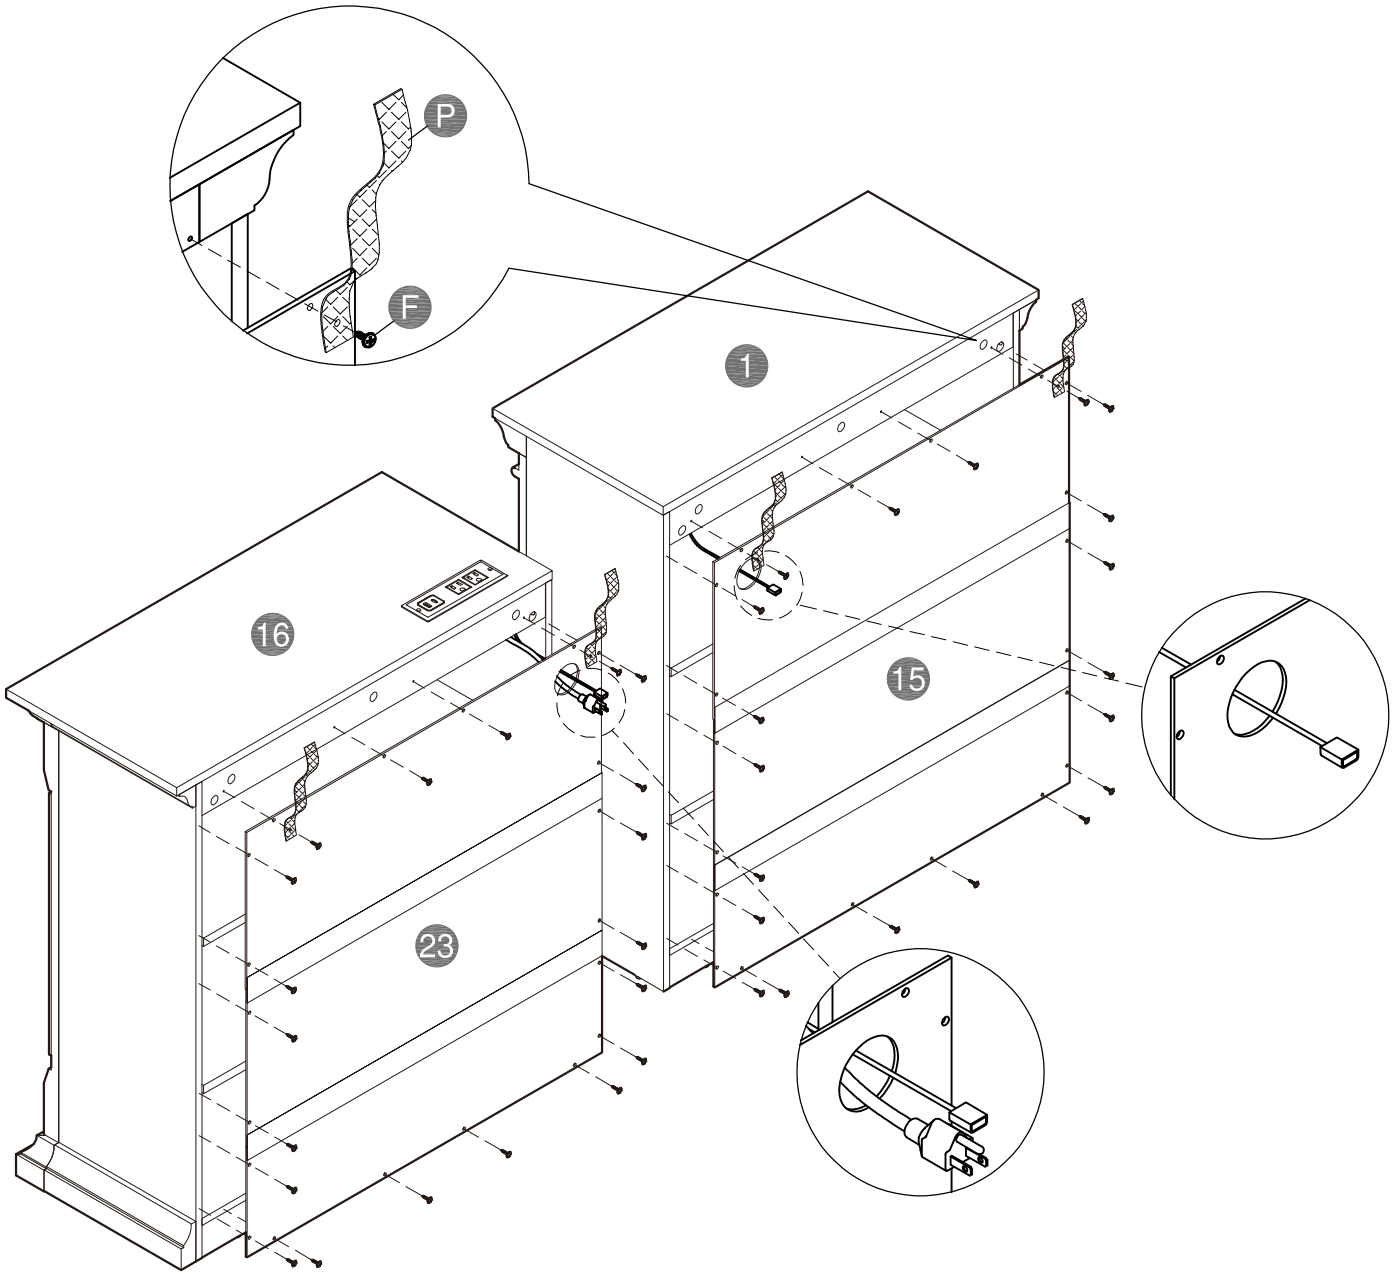


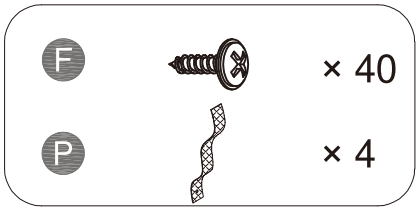

Step 40


Connect Accessories(V3)&(V5) to the 2 Light Strip (V2).

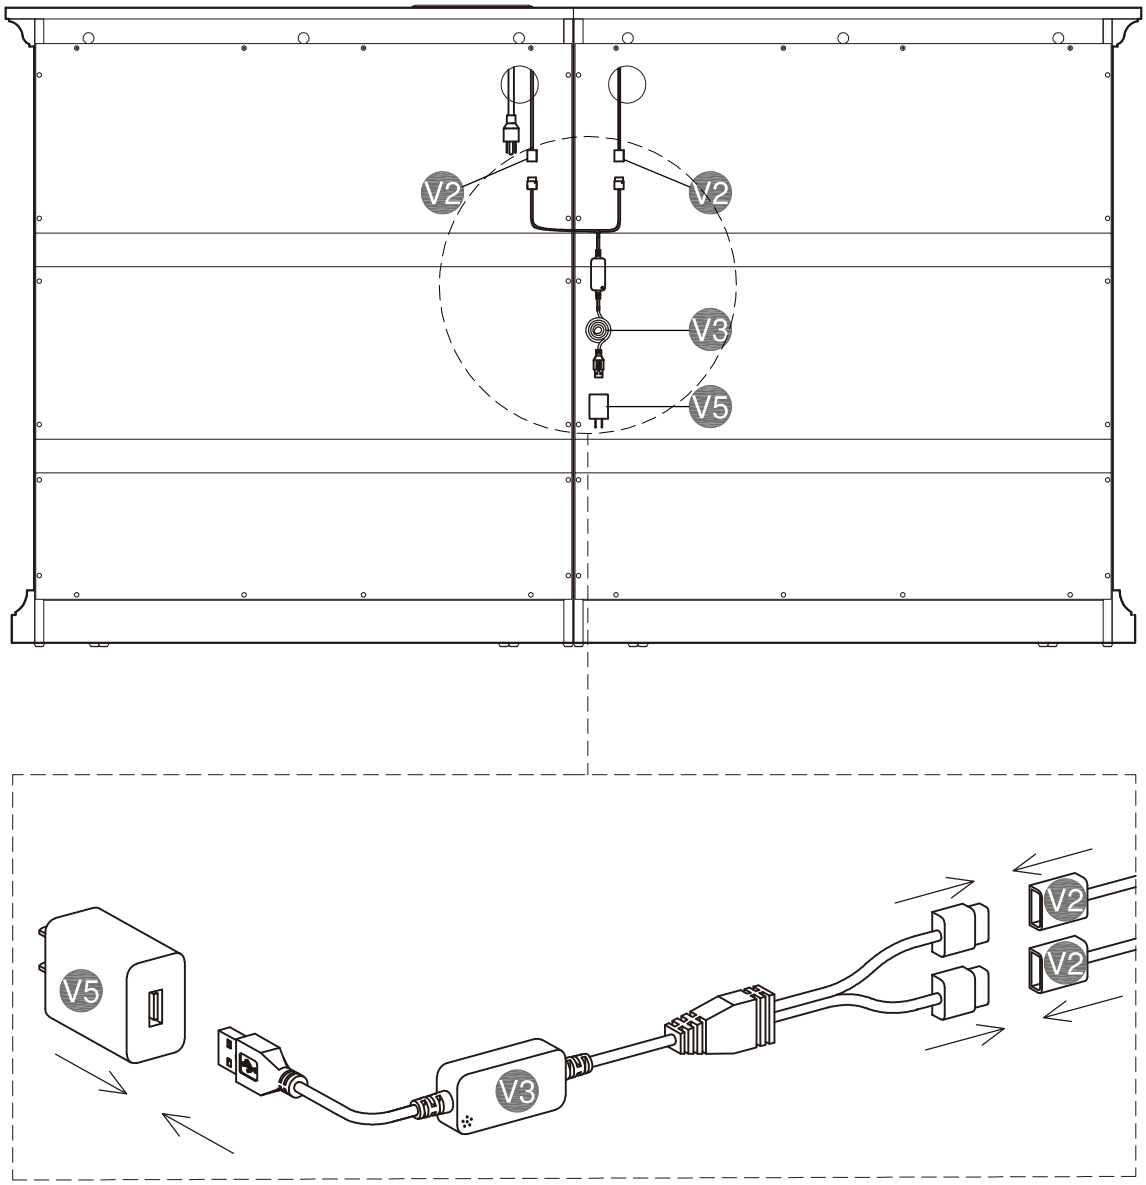

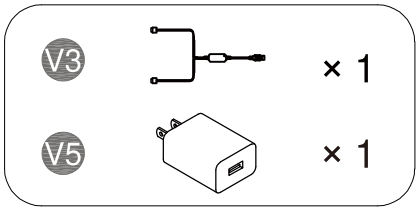

Step 41


Drill 4 holes in the wall and Hammer the (Q) in.

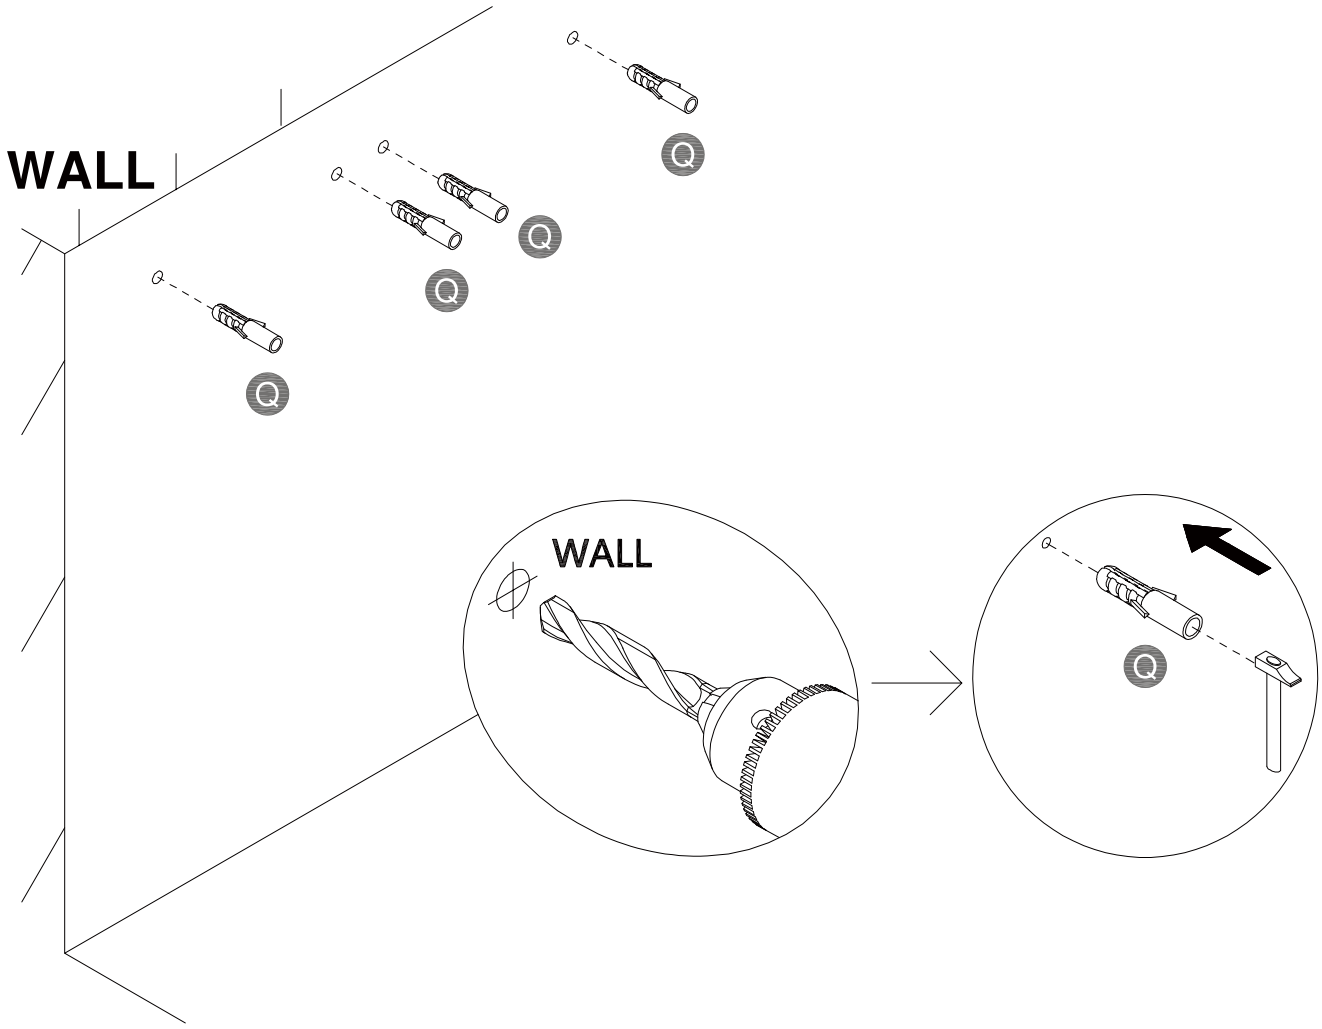

Q × 4

Step 42

Using Screw (R) attach Anti-tipping Belt into the wall.

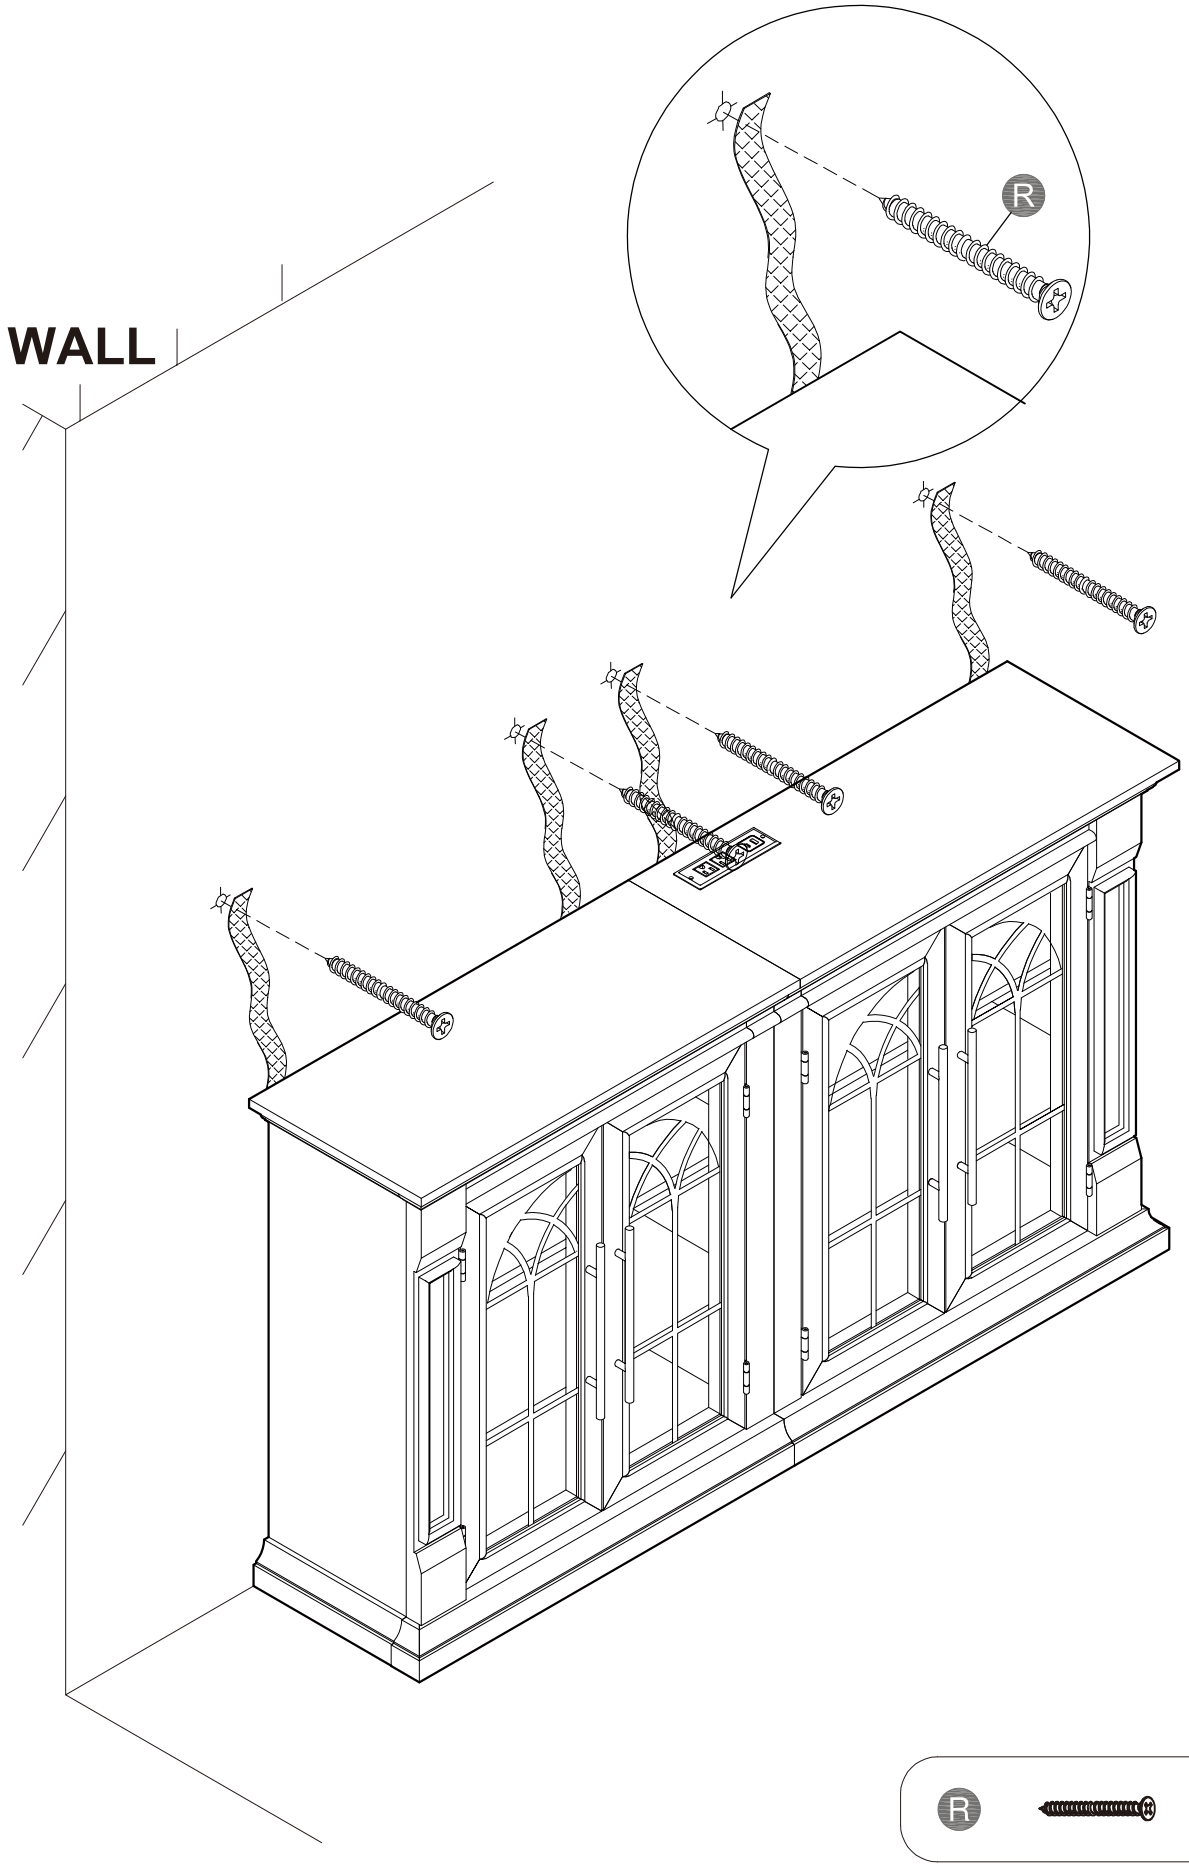

R × 4