

Assembly Instruction

Decorate your home, Brighten wonderful life





























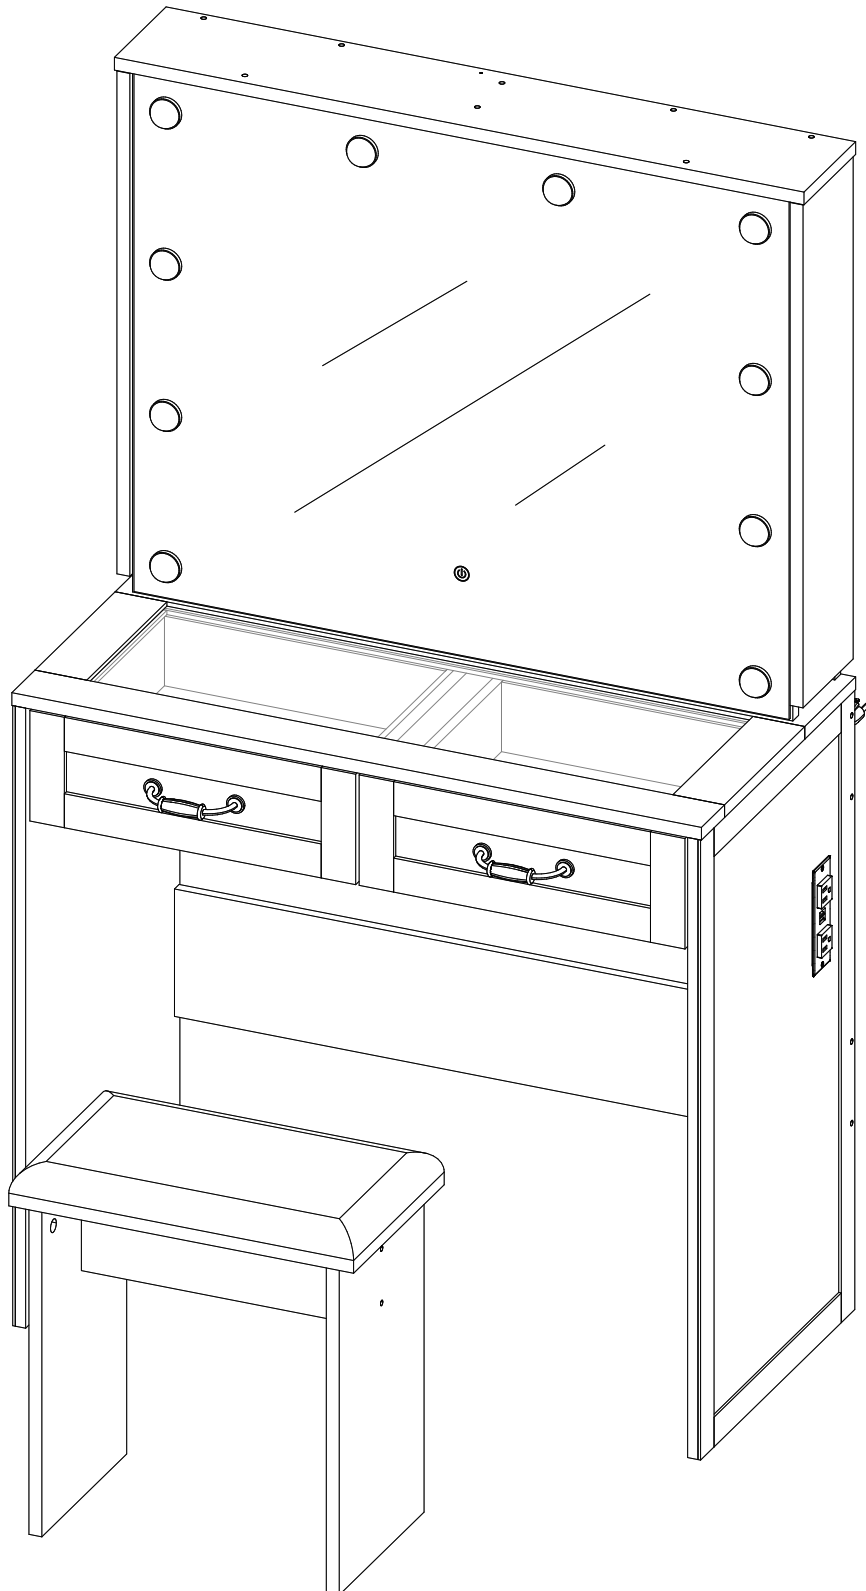


Plate number

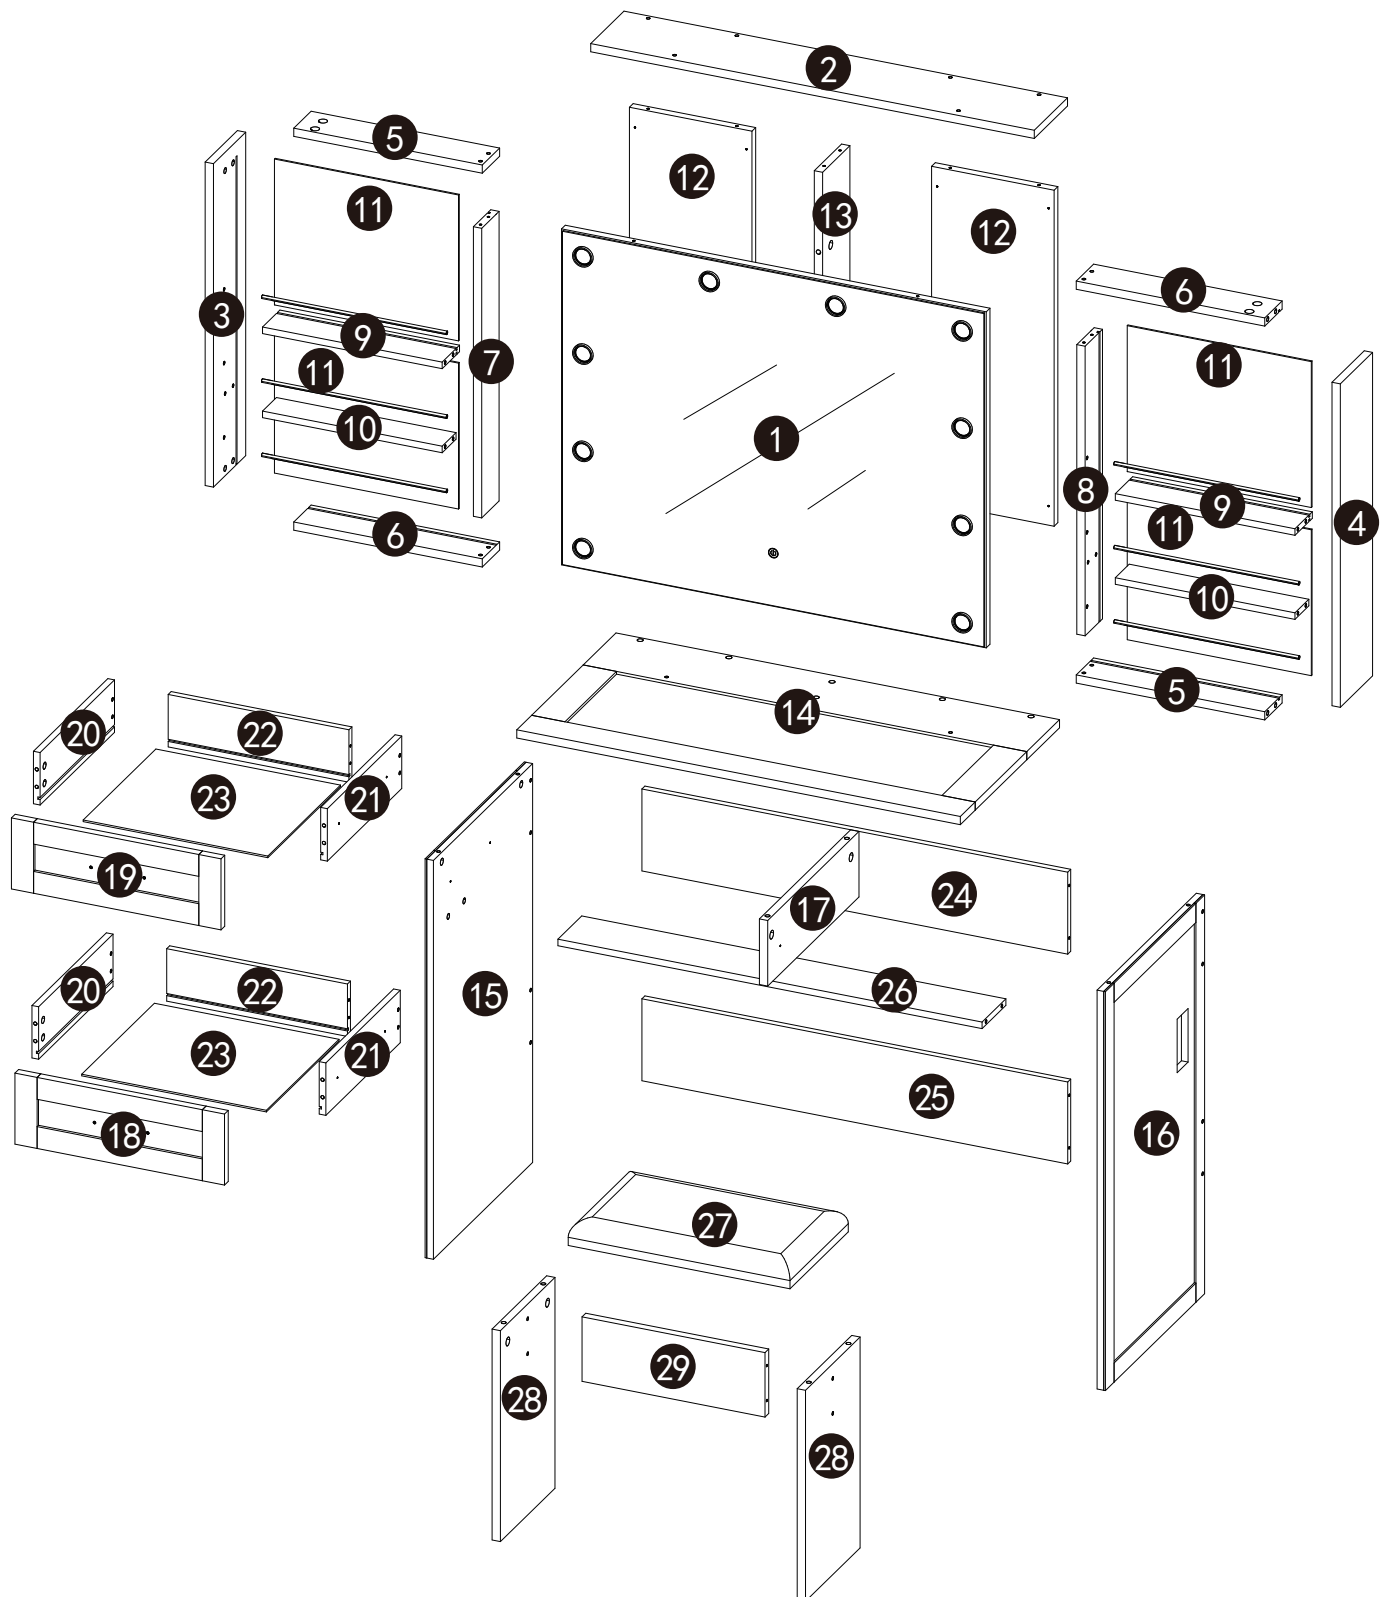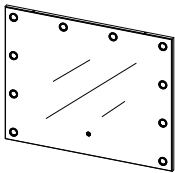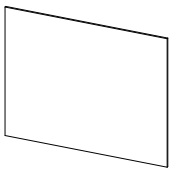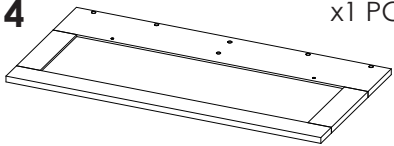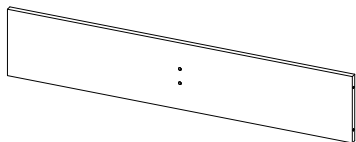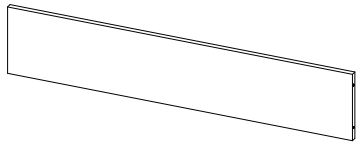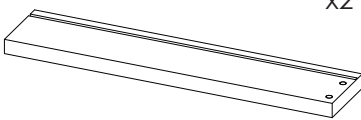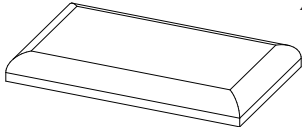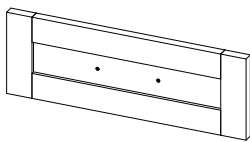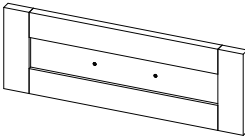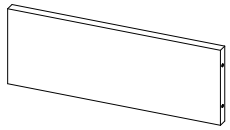

PARTS LIST


Unit: (mm)

1  x1 PC	11  x4 PC	21  x2 PC
2  x1 PC	12  x2 PC	22  x2 PC
3  x1 PC	13  x1 PC	23  x2 PC
4  x1 PC	14  x1 PC	24  x1 PC
5  x2 PC	15  x1 PC	25  x1 PC
6  x2 PC	16  x1 PC	26  x1 PC
7  x1 PC	17  x1 PC	27  x1 PC
8  x1 PC	18  x1 PC	28  x2 PC
9  x2 PC	19  x1 PC	29  x1 PC
10  x2 PC	20  x2 PC	


ACCESSORIES LIST

Unit: (mm)

A 6x40 x12 PC



B 15x11 x12 PC




C 12 inches x4 PC



D 6x40 x12 PC




E M3.5x12 x27 PC



F M5x40/#3 x40 PC/x1 PC




G Ø12x5 x8 PC




H 12 inches x4 PC



J 6x25 x30 PC




K 12x10 x30 PC



L 21mm x36 PC




M M3x14 x8 PC



N x1 PC



O 96/M4x10 x2 PC/x4 PC

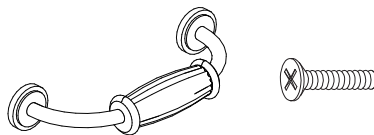

P Ø6x341 x6 PC




Q USB x1 PC






R 33mm x10 PC



S M4x50/8x40 x1 PC



T 320x180x5 x2 PC

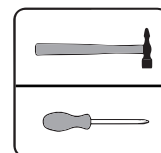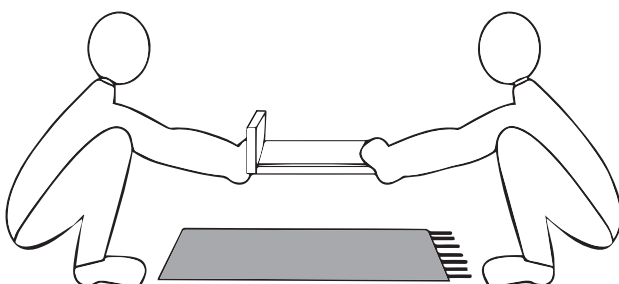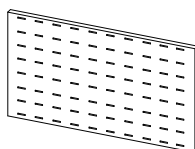


INSTALLATION INSTRUCTION

STEP 1

INSTALLATION STEPS



Press the plastic part in the indicated direction to separate drawer runner **C1** and **C2** before assembling.

REMARK: Please grip the **C1** part while sliding the **C2** part.

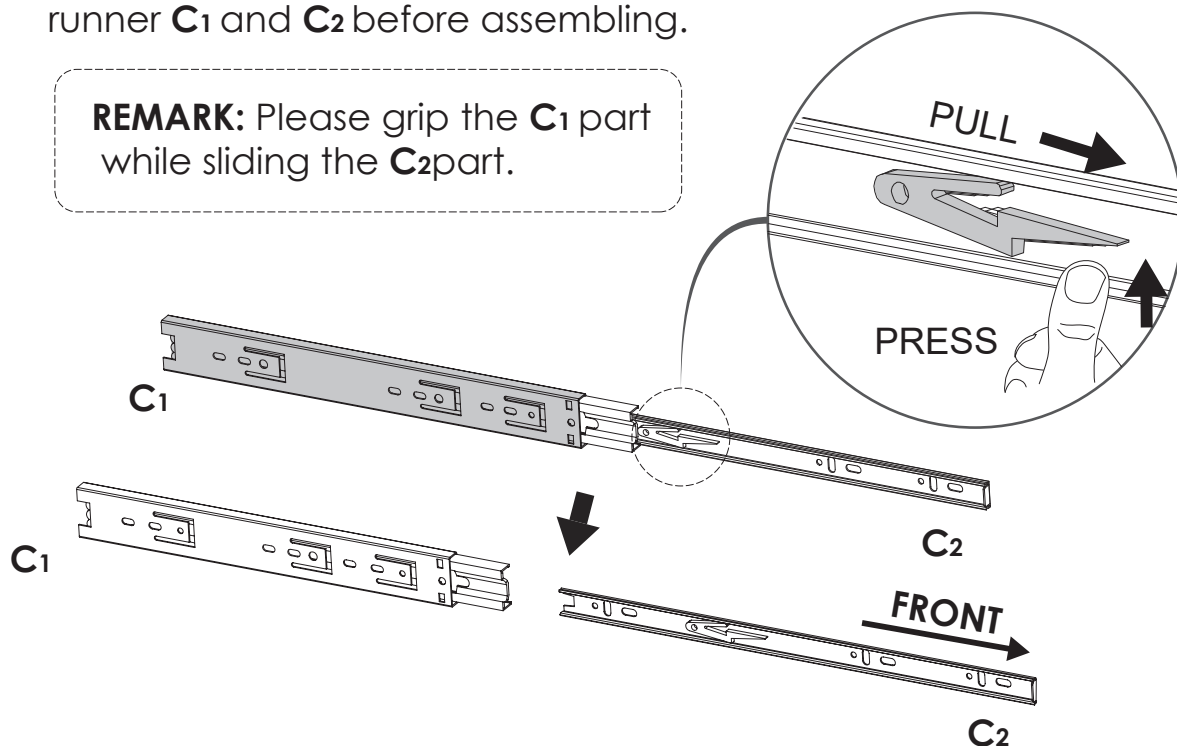


REMARK:

1. Please locate the holes from the back of part **C1**.

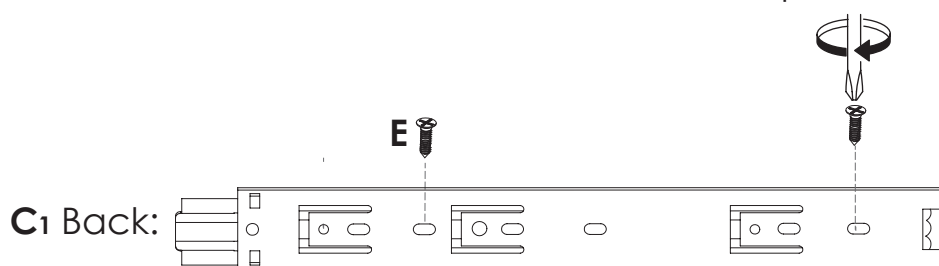


2. But install part **E** from the front of part **C1**.

STEP2



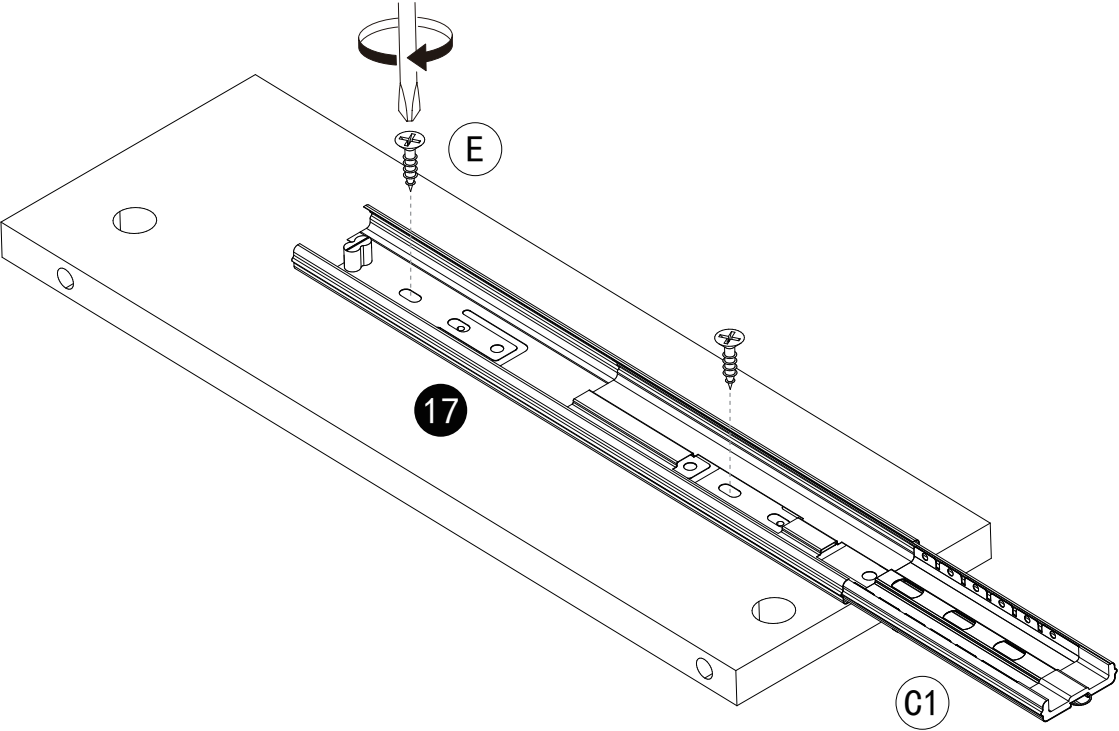


flip over

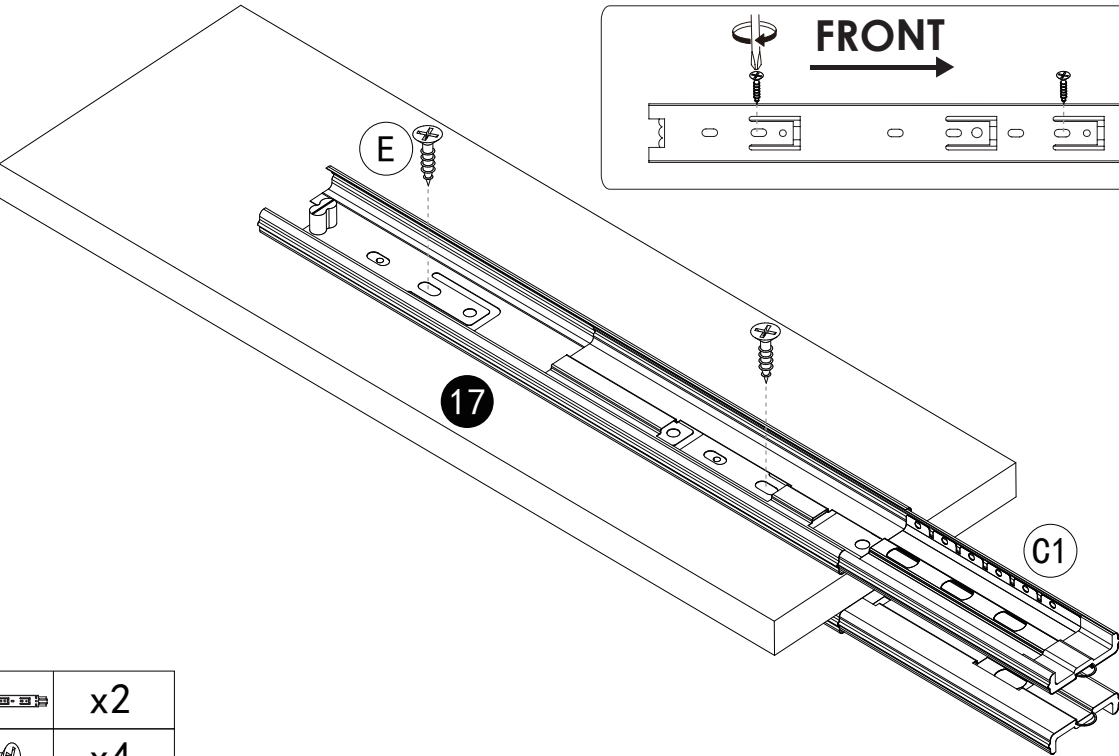

C1		x2
E		x4


STEP3

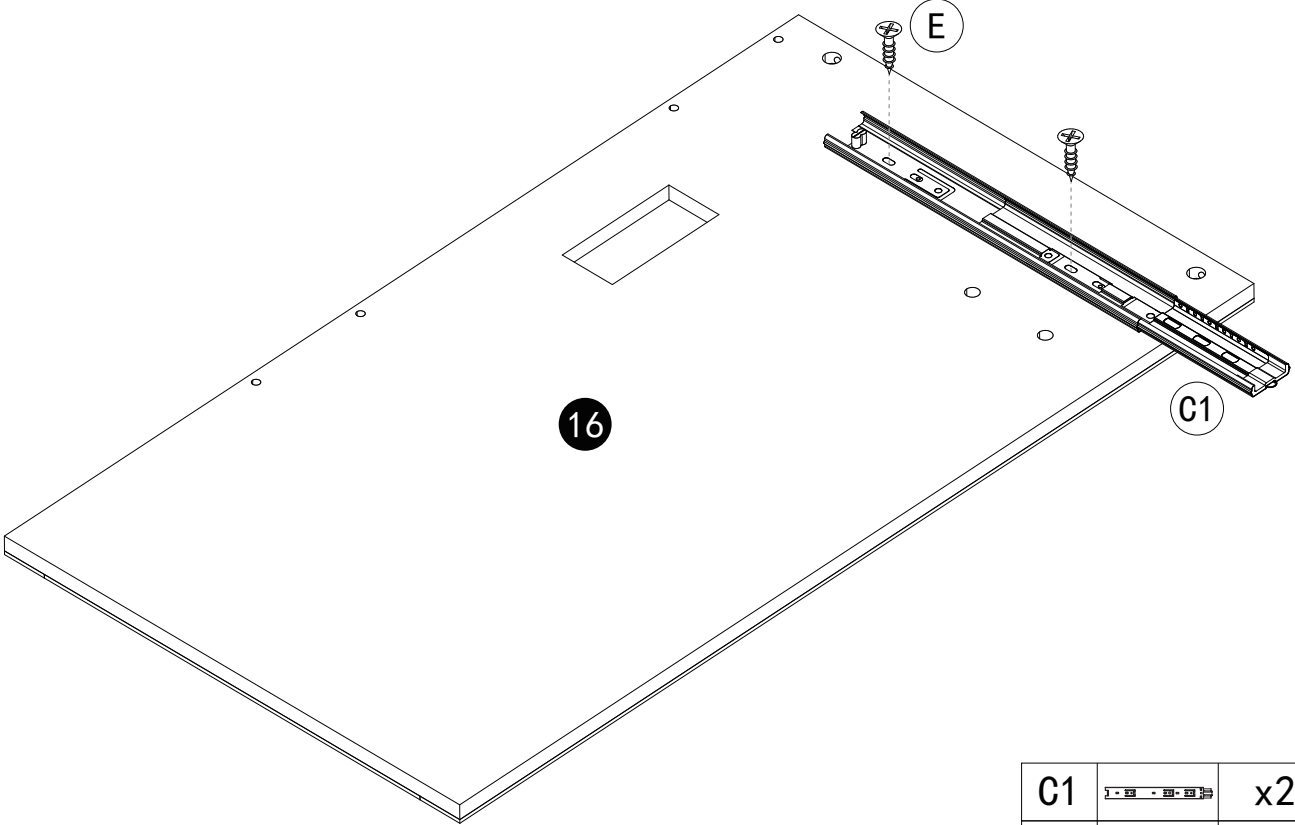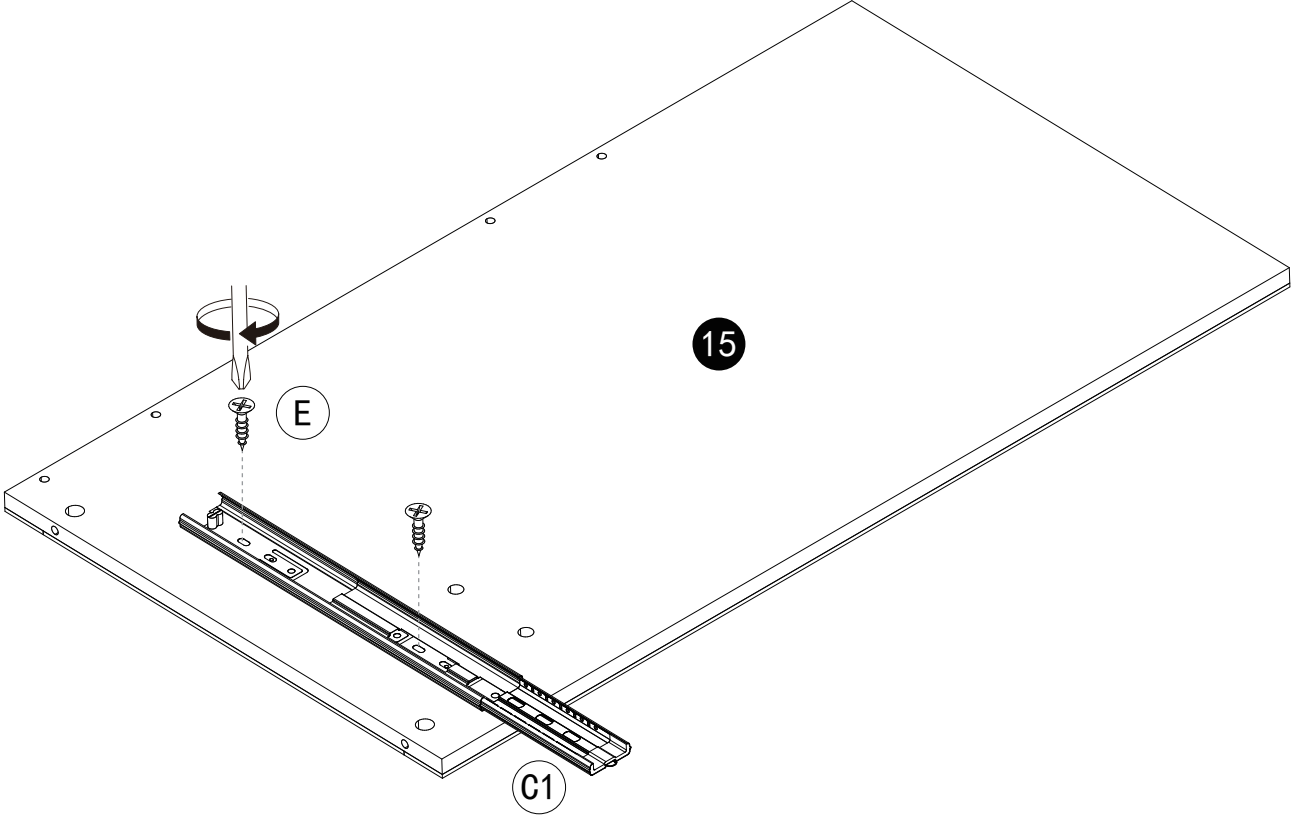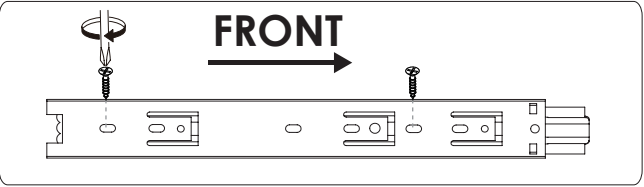


C1		x2
E		x4

STEP 4




1

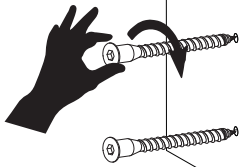

2

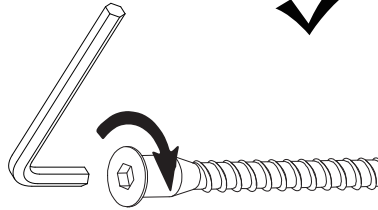






X

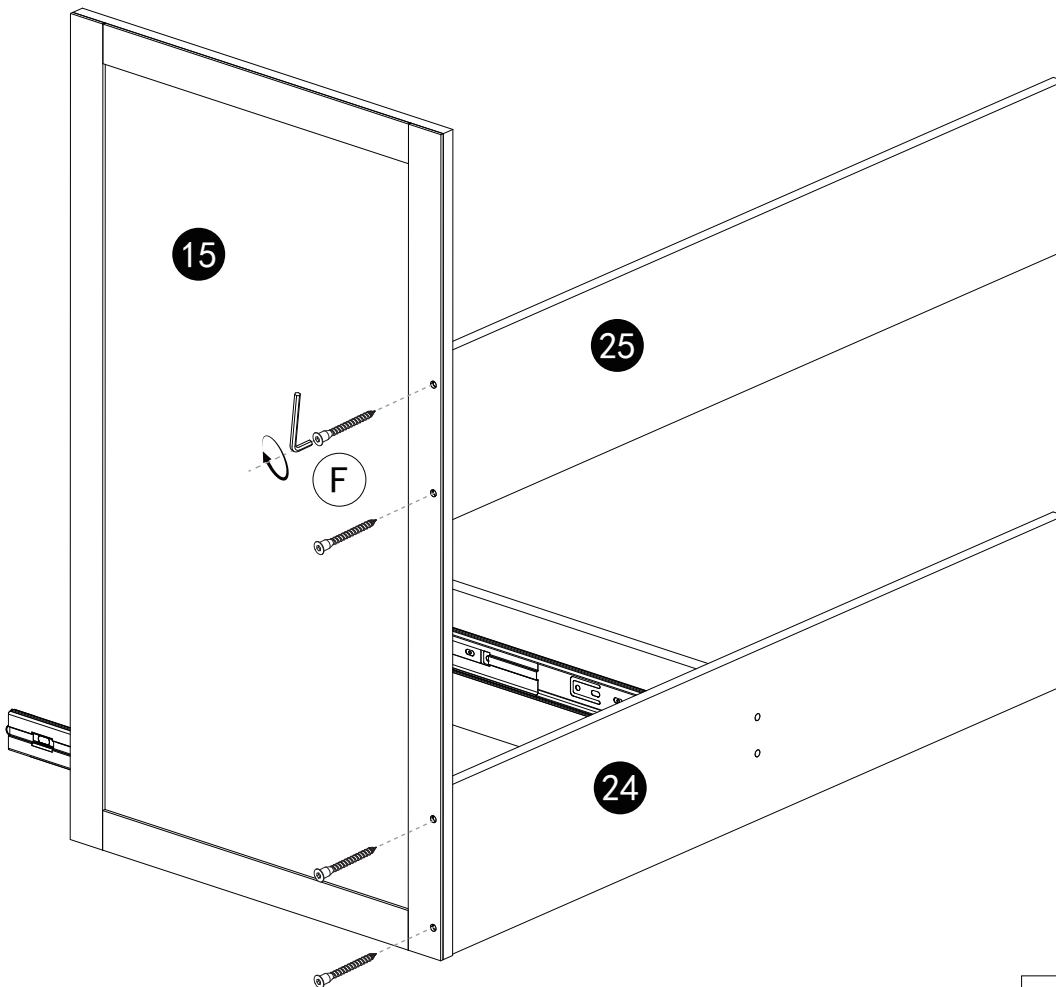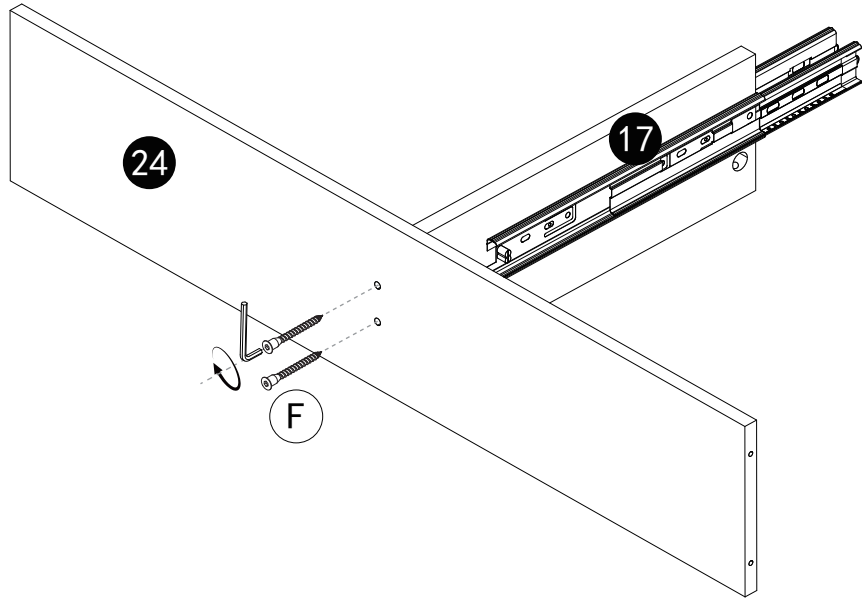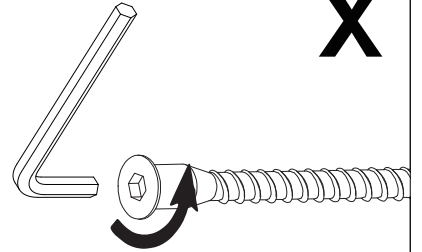

F		x6
---	---	----


STEP5

Installation method of three in one rod and buckle

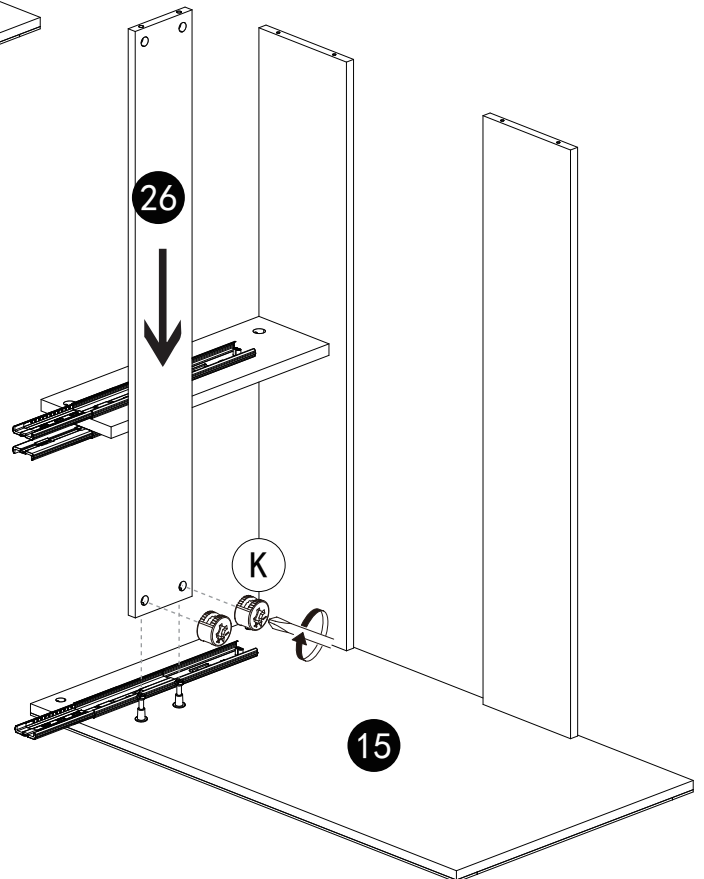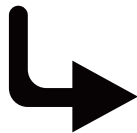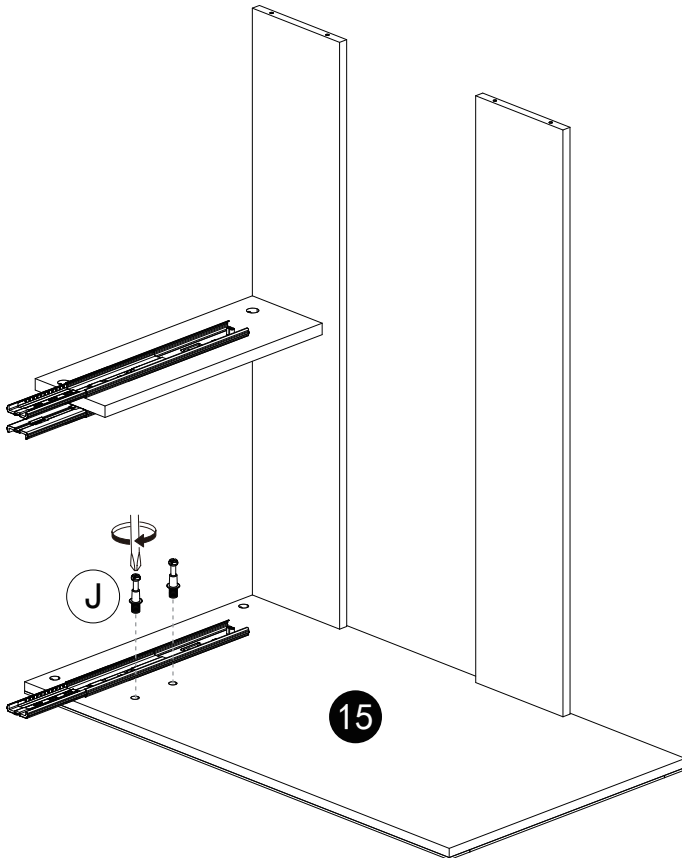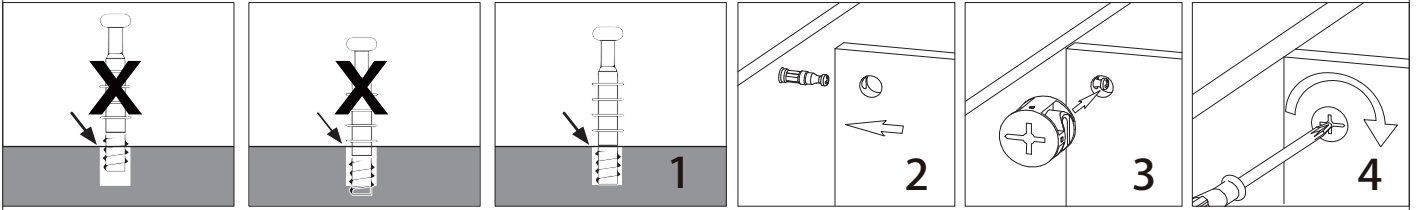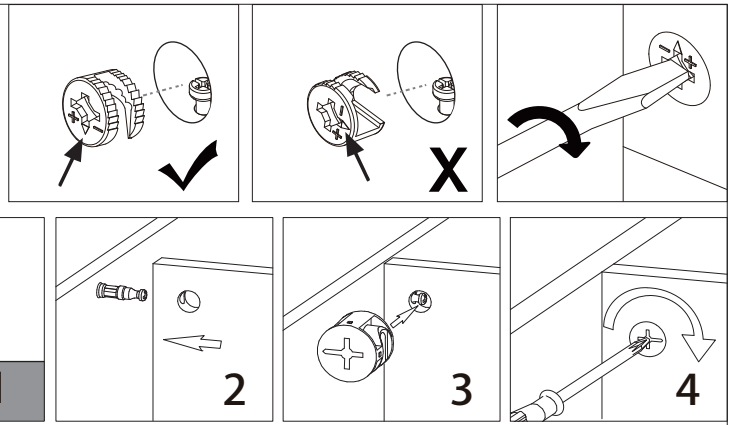



J		x2
K		x2

STEP 6

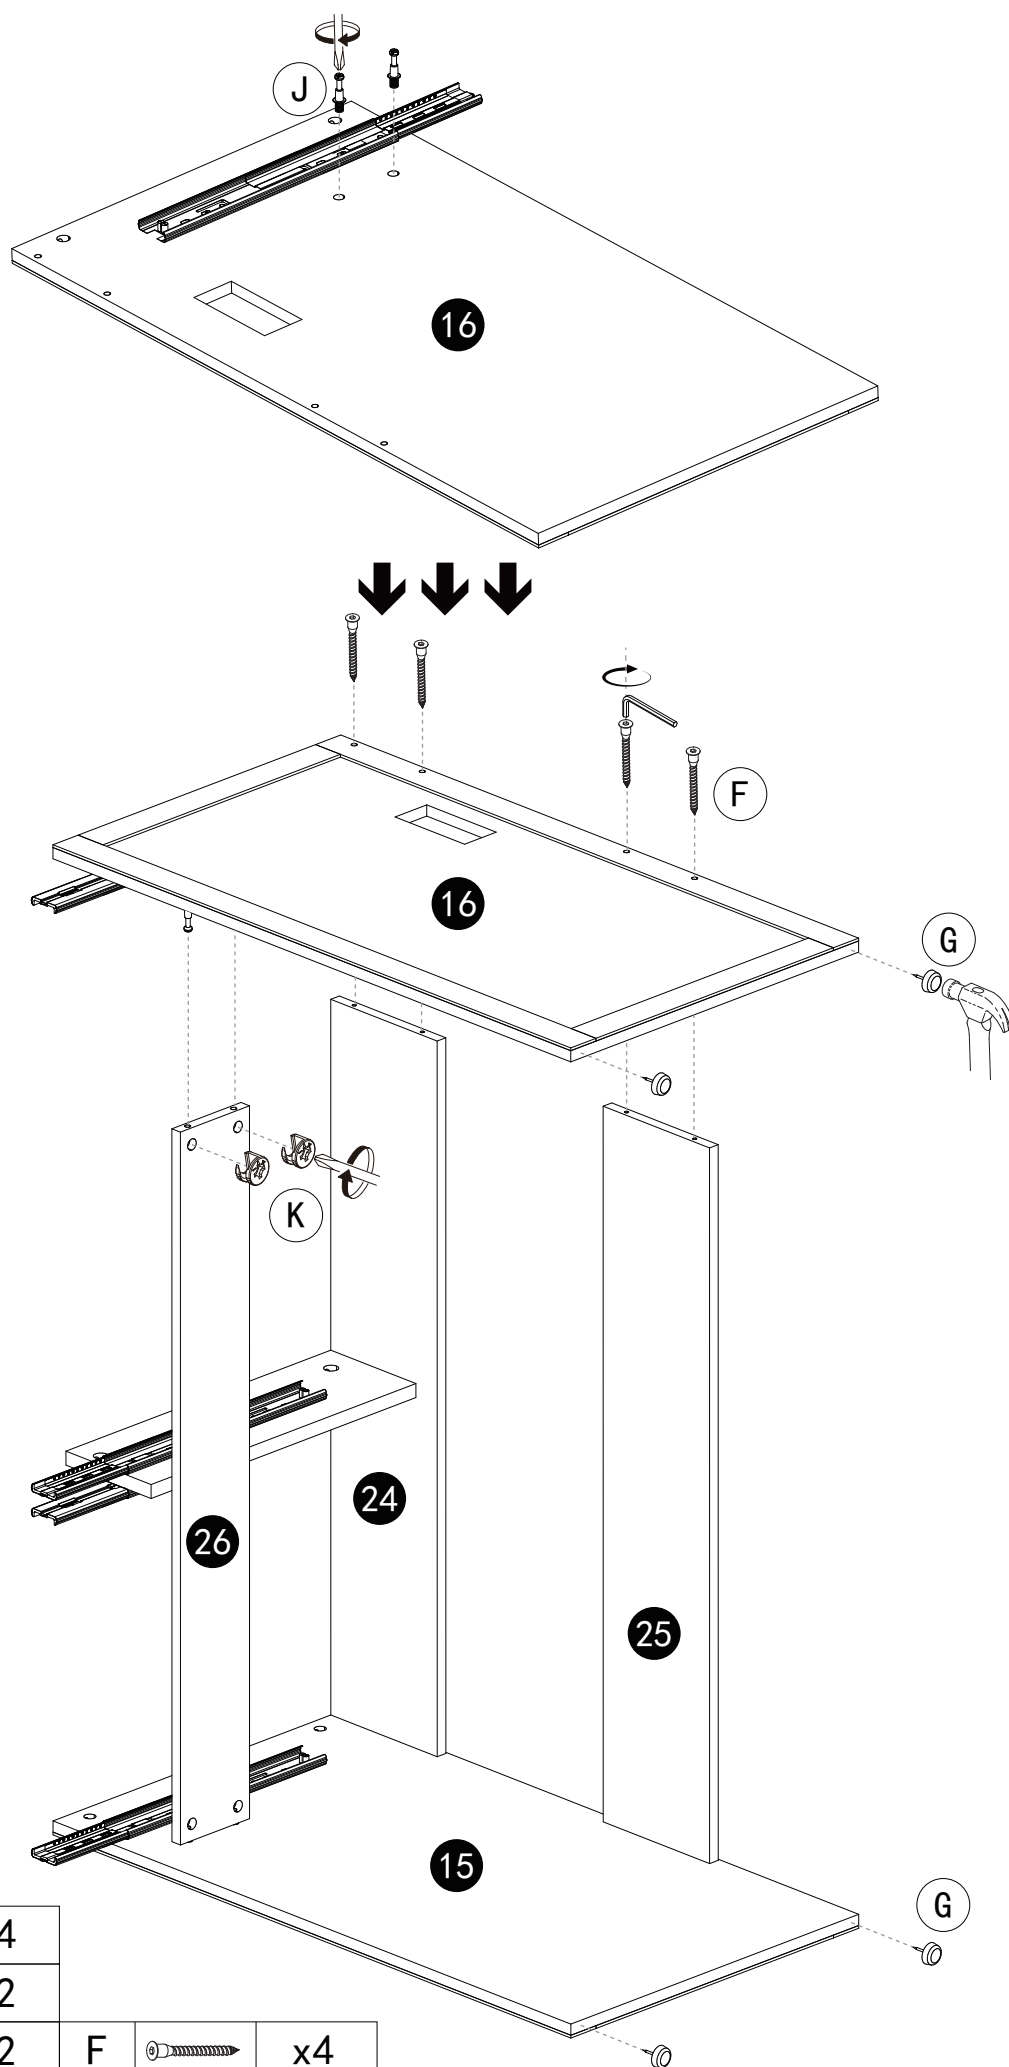

G		x4
J		x2
K		x2
F		x4

STEP 7

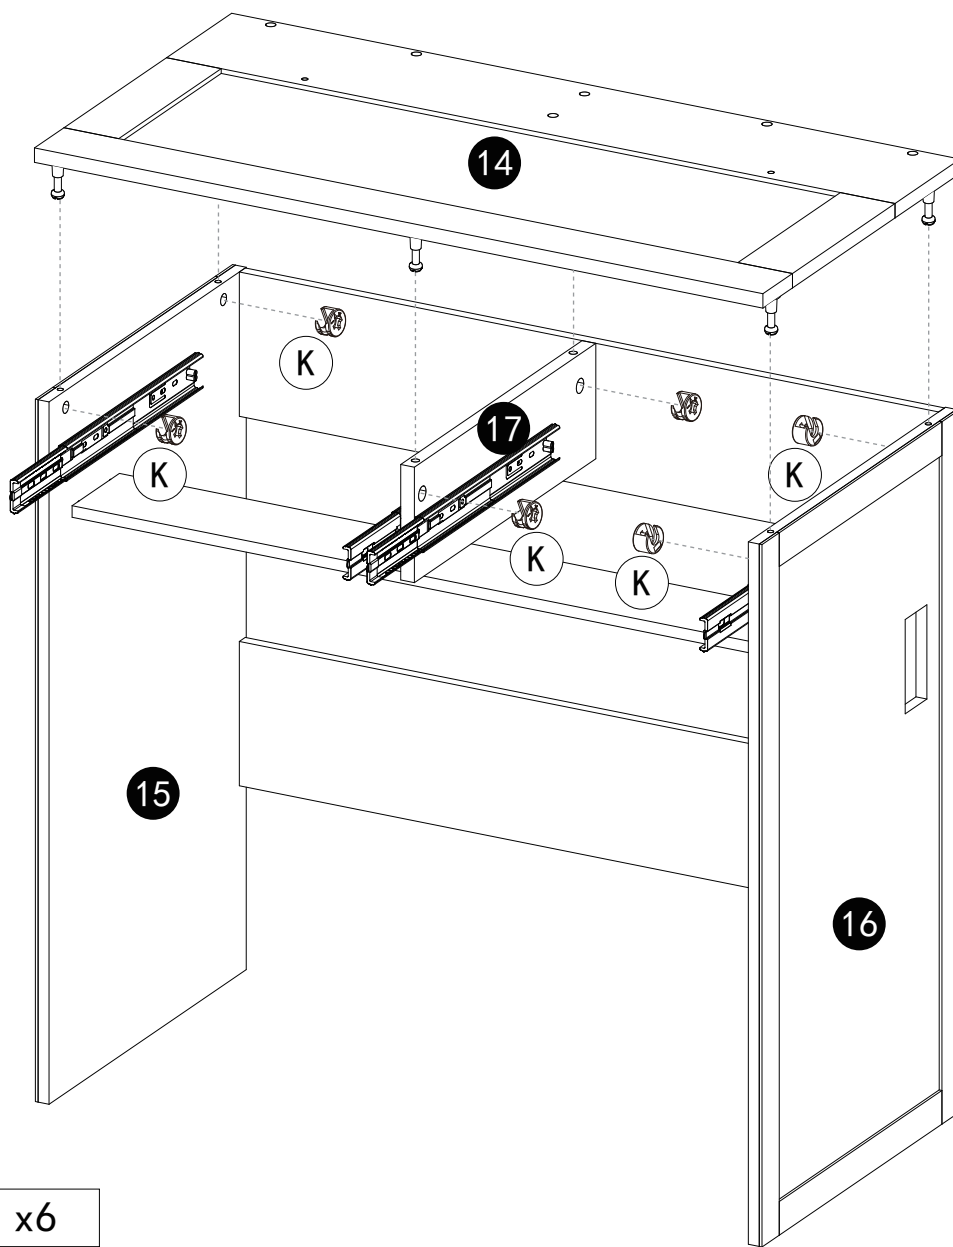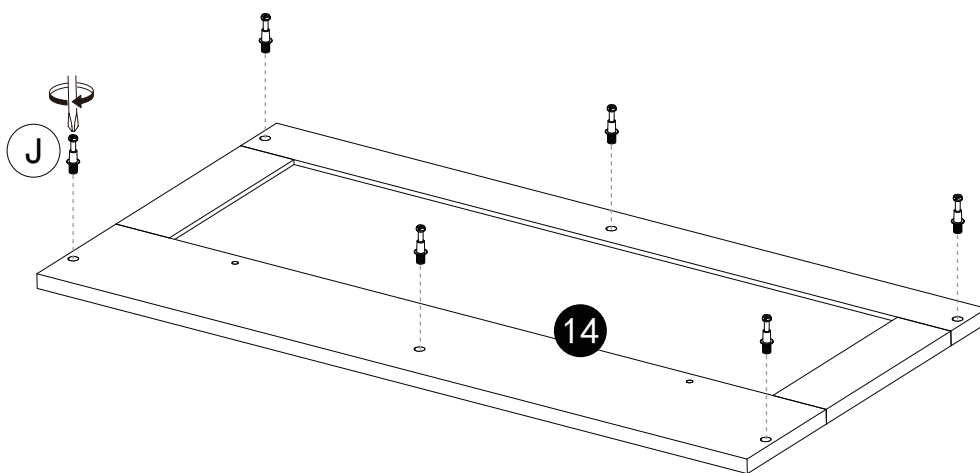


J		x6
K		x6

INSTALLATION STEPS



Press the plastic part in the indicated direction to separate drawer runner **H1** and **H2** before assembling.

REMARK: Please grip the **H1** part while sliding the **H2** part.

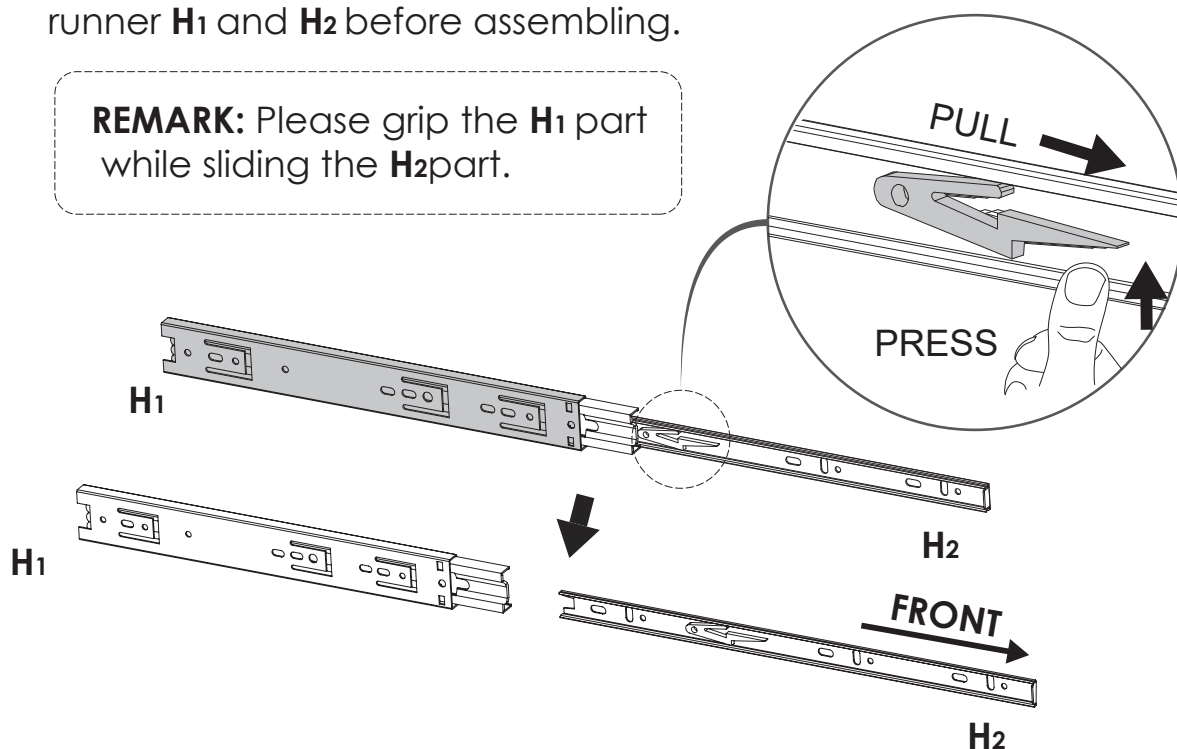




REMARK:

1. Please locate the holes from the back of part **H1**.

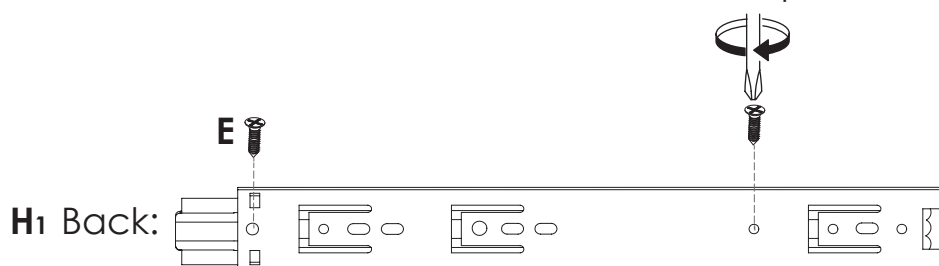


2. But install part **E** from the front of part **H1**.

STEP 9

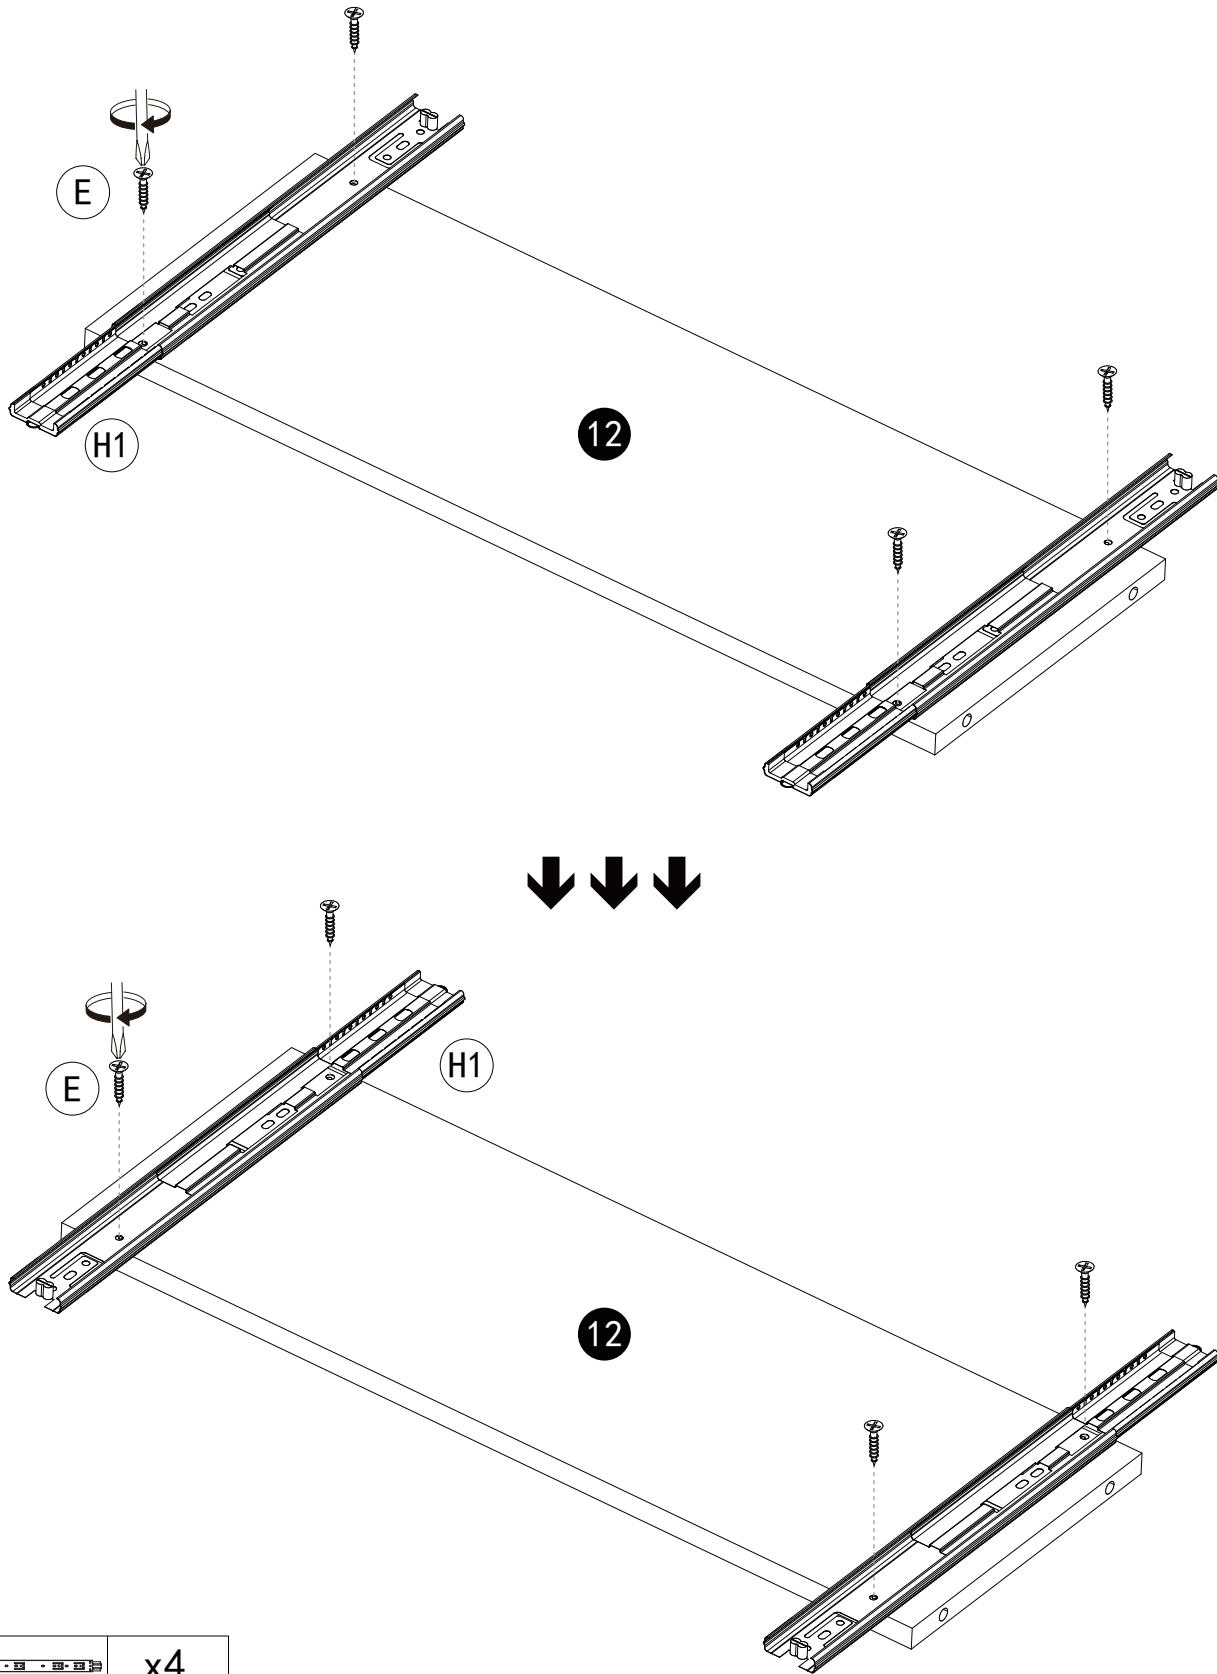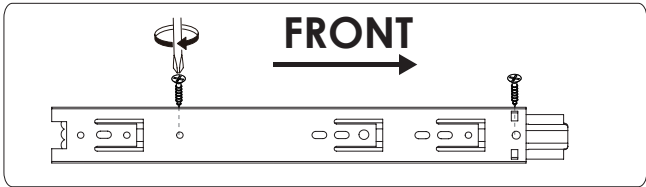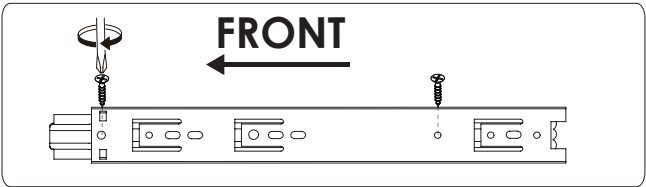



H1		x4
E		x8

STEP 10

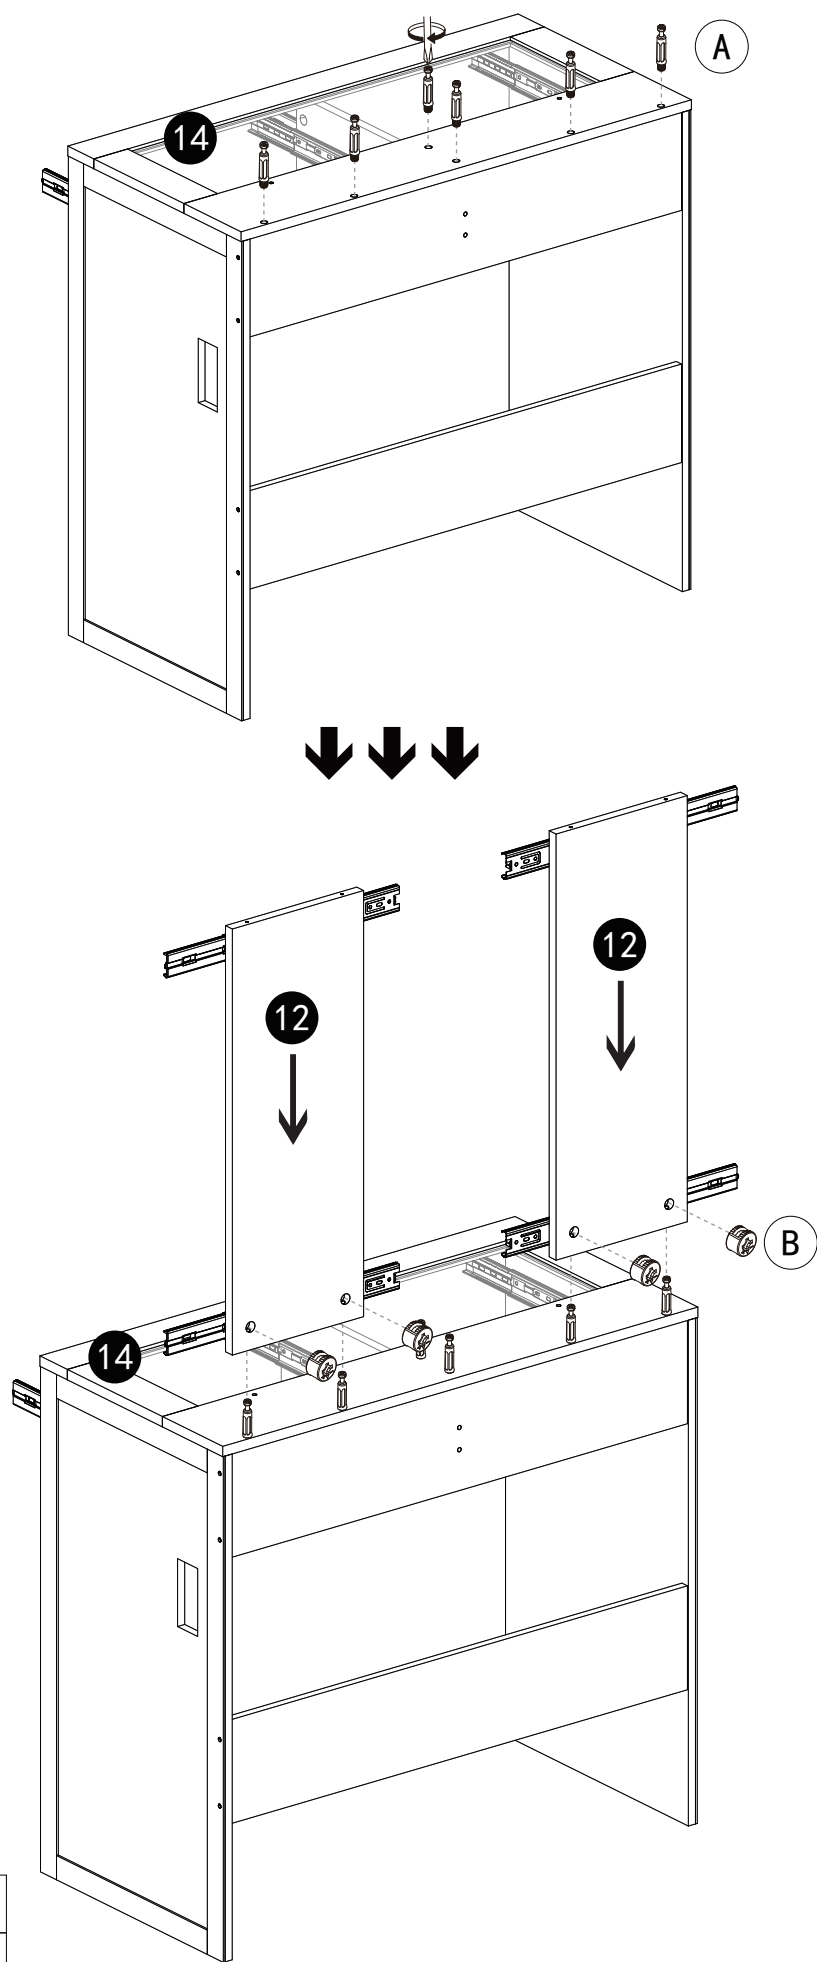


STEP 11

Note: Pay attention to the glass when installing, and put some soft things under the glass before installation.

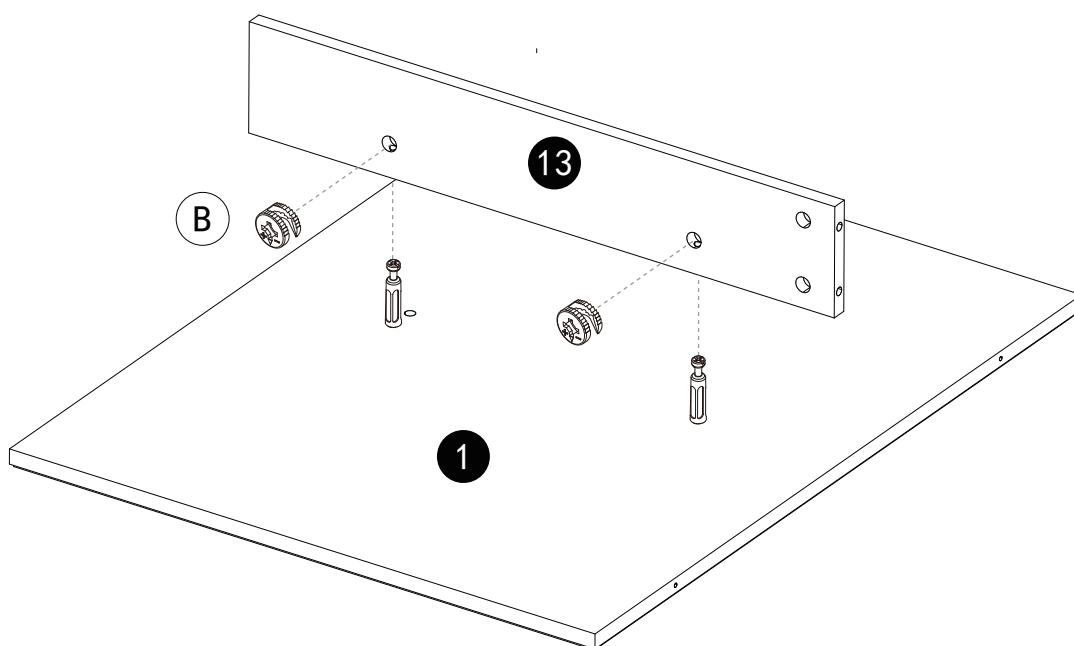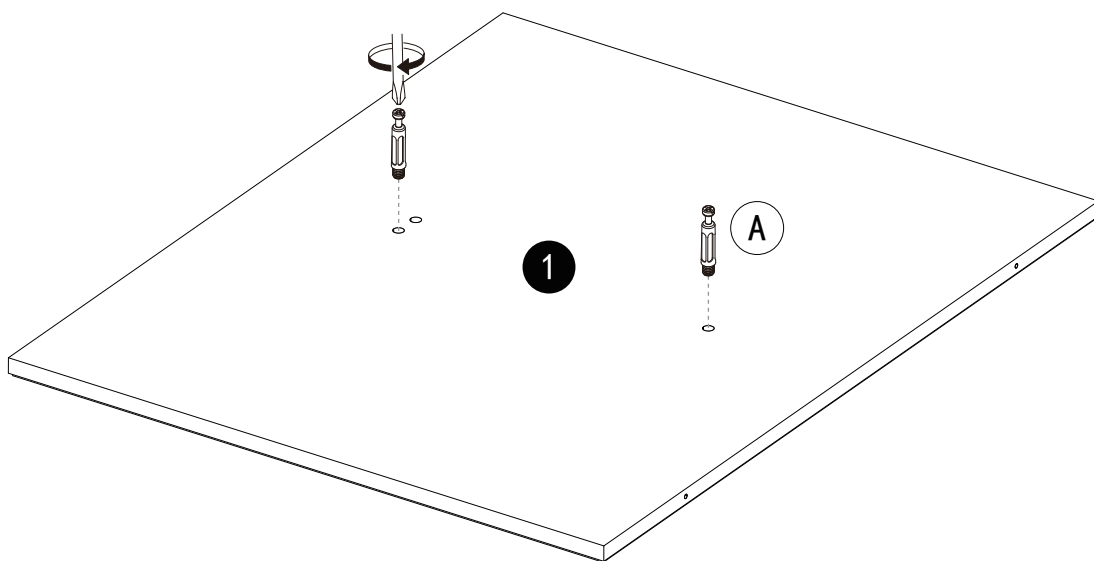

A		x2
B		x2

STEP 12

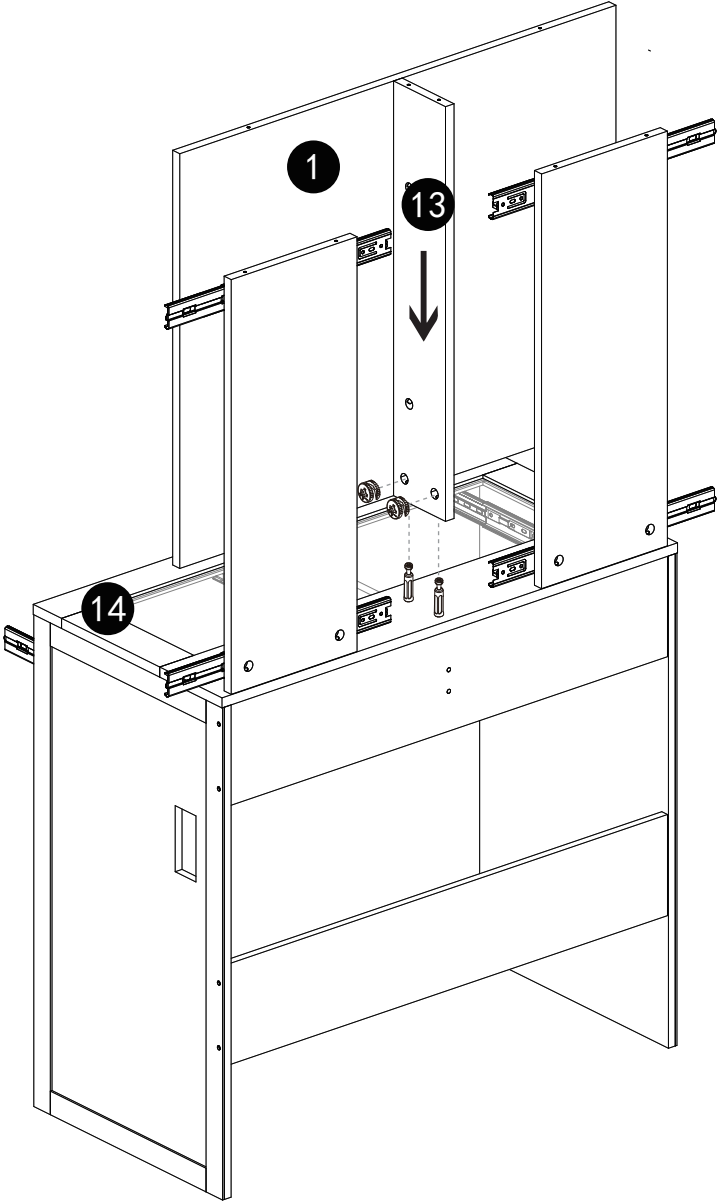

B		x2
F		x2

