
## ASSEMBLY INSTRUCTIONS

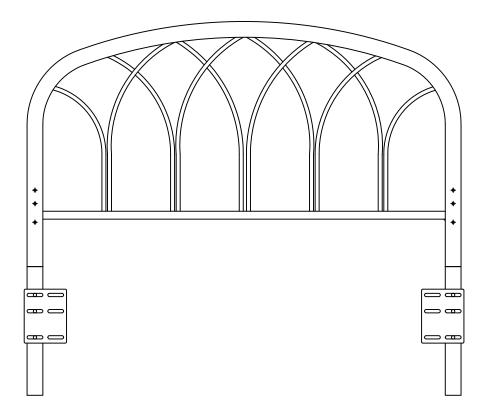

Fine Furniture for every stage of life

Queen & Full Universal
Size Headboard Only

### **ASSEMBLY INSTRUCTIONS**

#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### WARNING


- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment.



ASSEMBLY TIME

20 MINUTE

## PARTS IDENTIFICATION

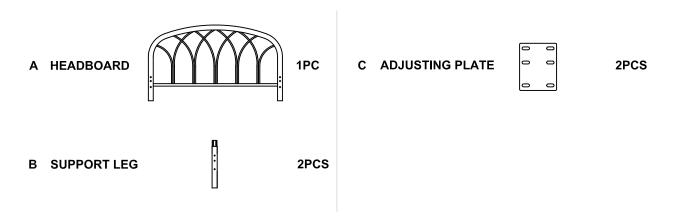

## HARDWARE IDENTIFICATION

1	BOLT (1/4"x2-3/4"" - BLK)		4PCS	5	NUT (ø1/4"x8mm - BLK)		8PCS
2	BOLT (1/4"x7/8" - BLK)		4PCS	6	PLASTIC END CAP (¢1-1/2" - BLK)		2PCS
3	WASHER (∮5/8" - BLK)	0	12PCS	7	ALLEN KEY (4x22X60mm - BLK)		1PC
4	PLASTIC WASHER (Ø1" - BLK)	<b>(</b> 0)	8PCS	8	WRENCH (11.3x12.5X55mm - WH	r <sub>)</sub>	1PC

#### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

## ASSEMBLY INSTRUCTIONS STEP 1:


### **ASSEMBLY**

Do not fully tighten all bolts until assembly is complete. This will help all parts to assemble properly.


### **60" ASSEMBLY INSTRUCTIONS**

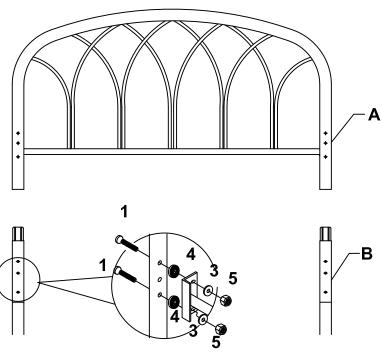


## STEP 2: 54" ASSEMBLY INSTRUCTIONS

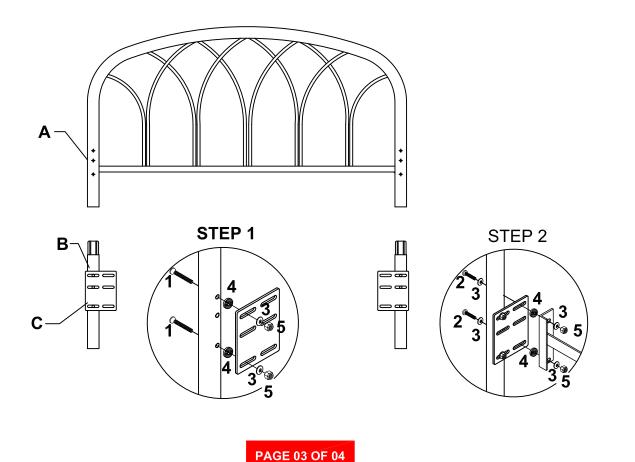

# ASSEMBLY INSTRUCTIONS STEP 3:

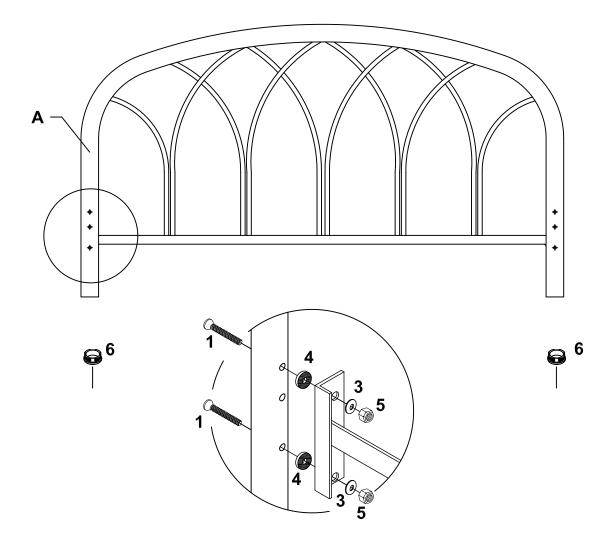

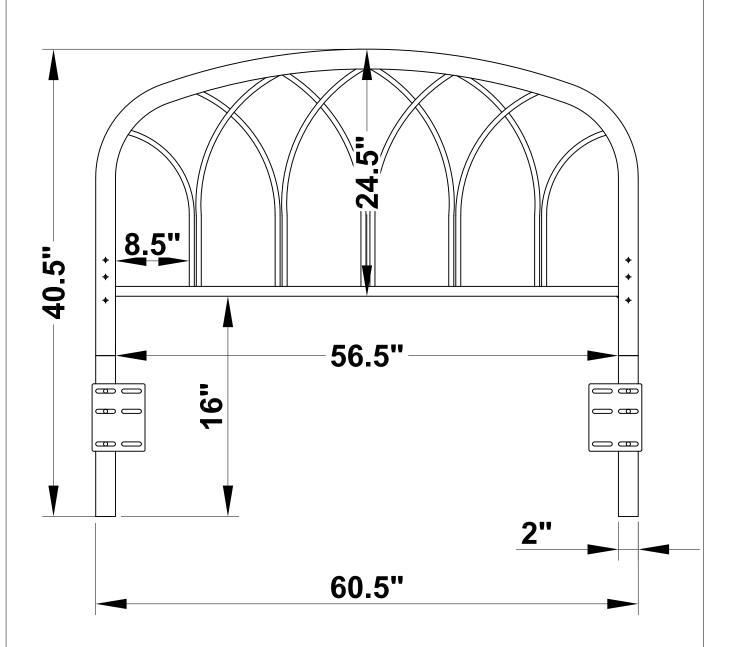

Note: Dimension tolerance ±5%